











# ASSEMBLY INSTRUCTION


No	Hardware	Fig	Q.ty
①	Bolt M6 x 70mm		4
②	Bolt M6 x 35mm		9
③	Insert Nut M6 x 15mm		4
④	Allen Key M4		2




# ASSEMBLY INSTRUCTION

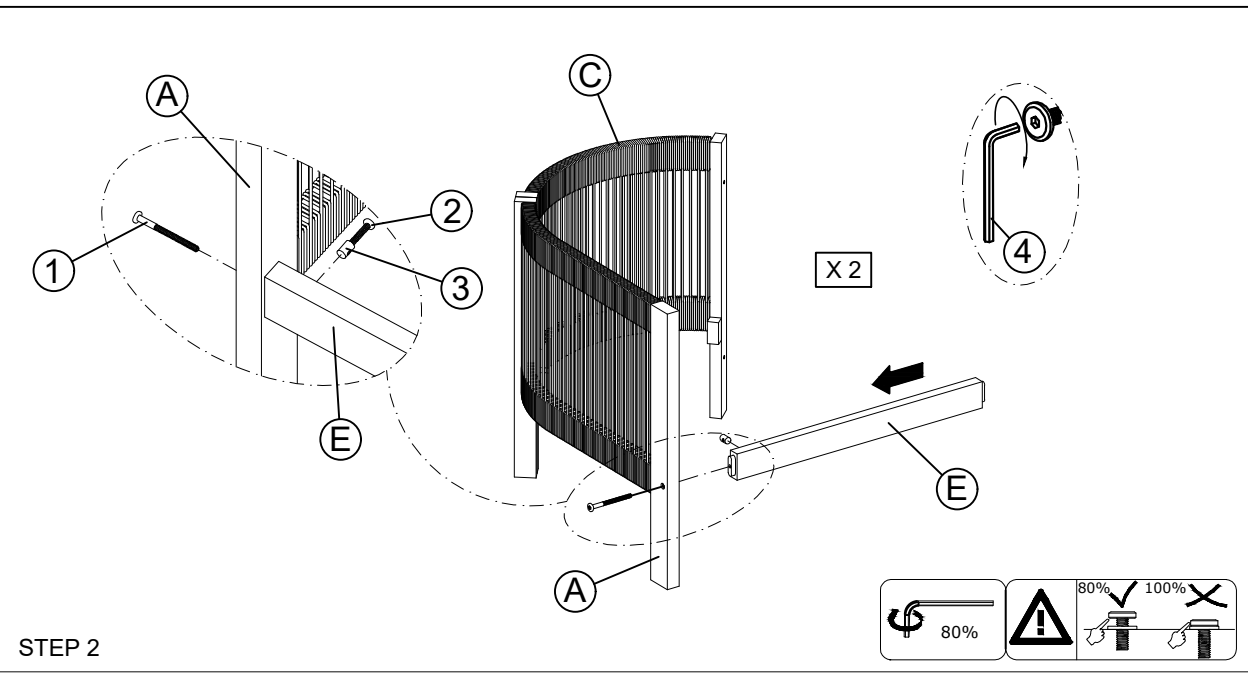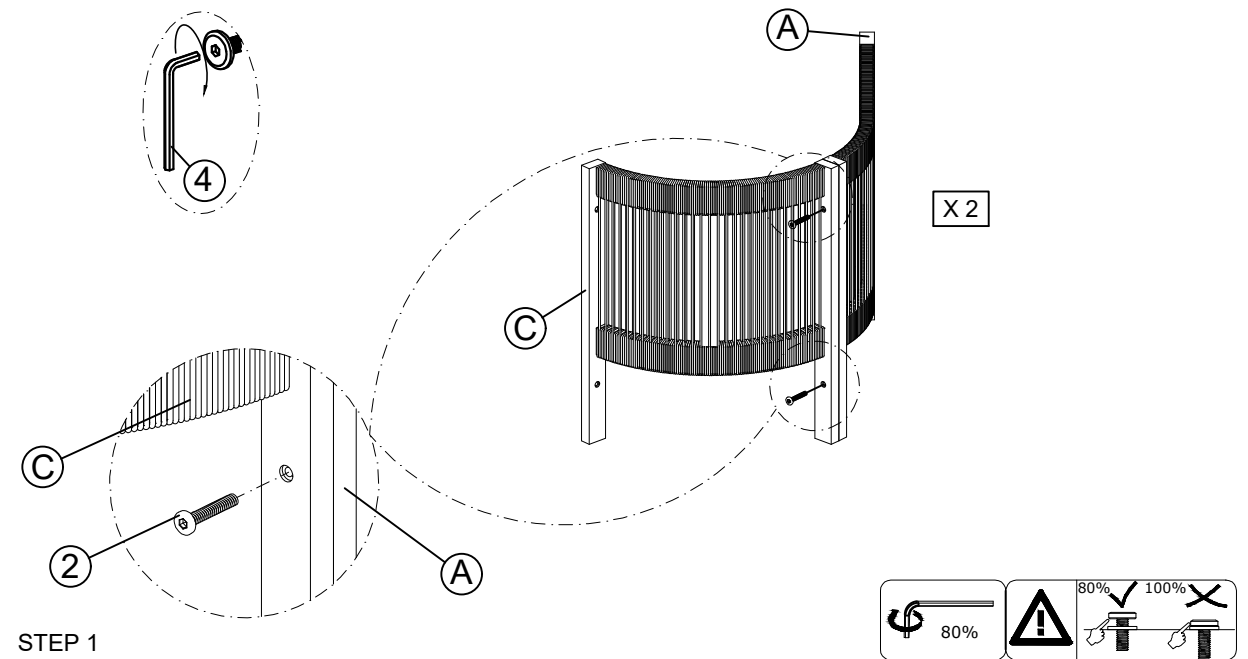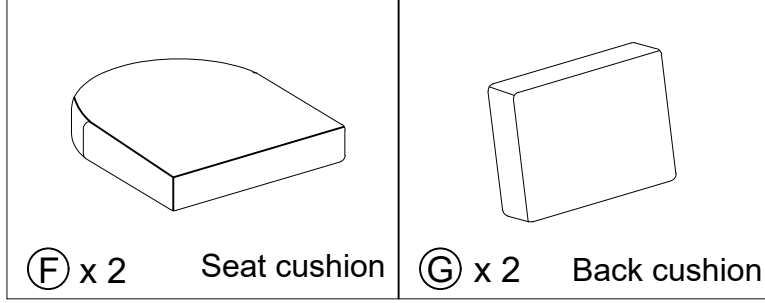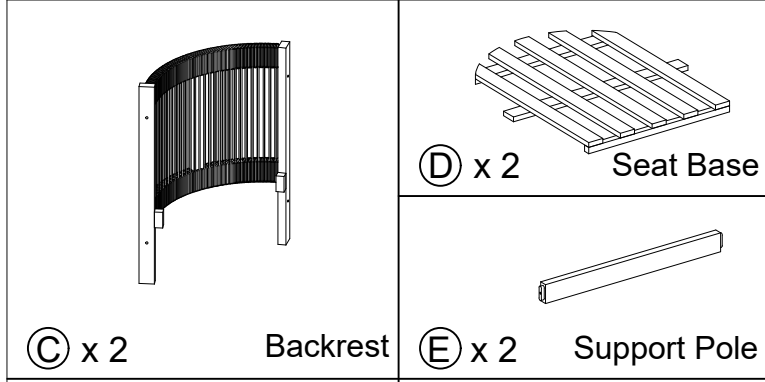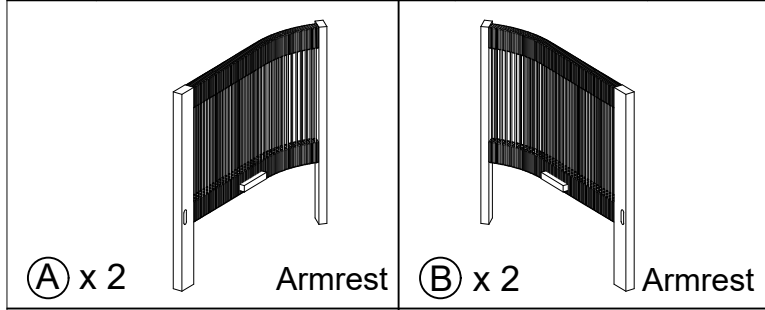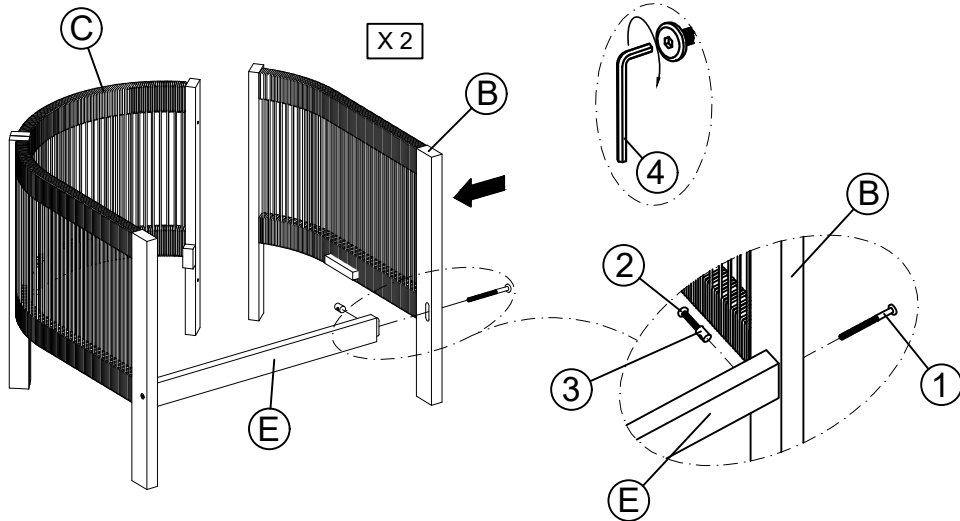


STEP 3

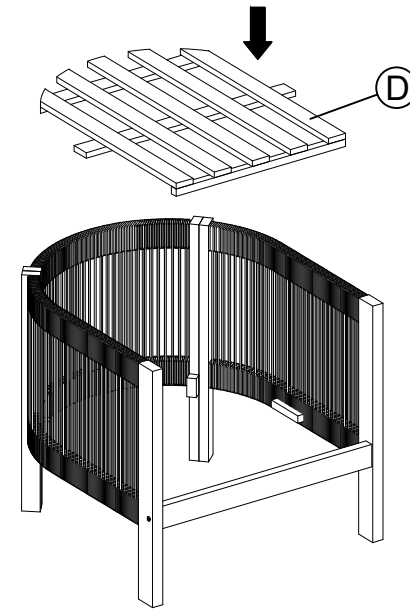

STEP 5

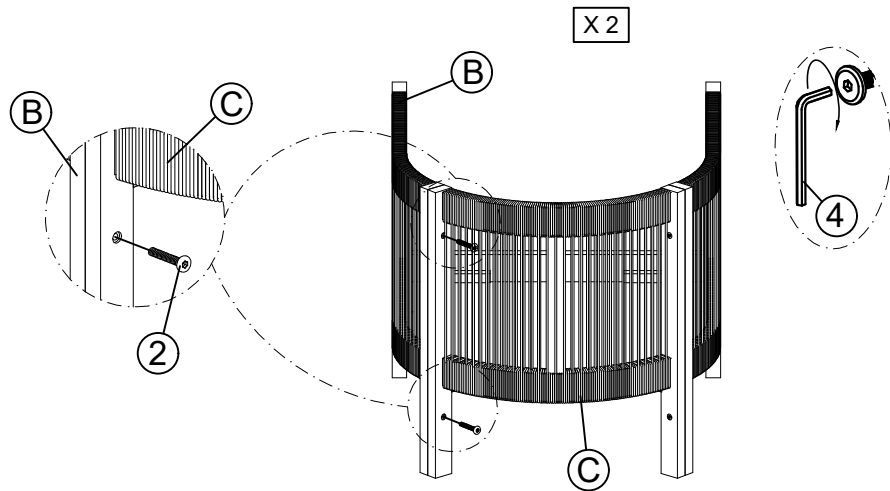


STEP 4

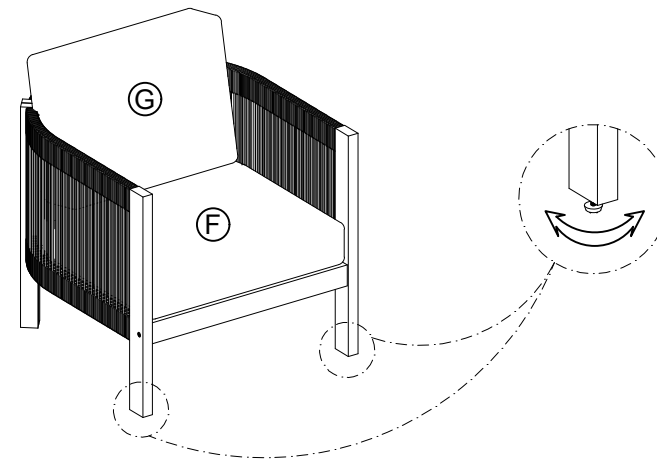

FINISH


# How to Put on the Cushion Cover

1

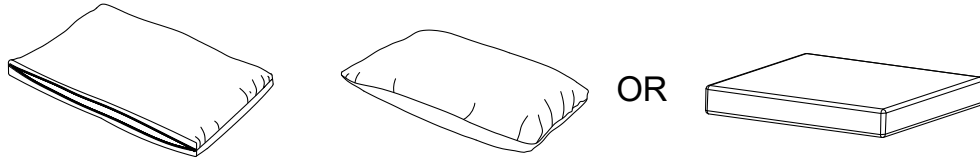


1. Take the cushion covers and inners out of the carton.

2

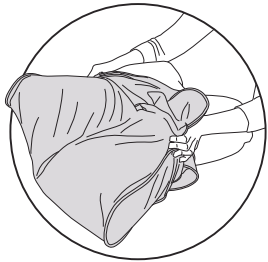


2. Fold the inner in half, pushing the sides together, then begin to slide the cover onto it.

3

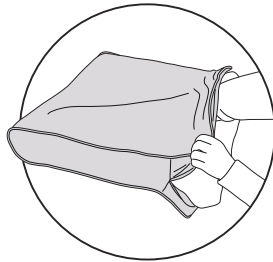


3. Align both far corners, then gently compress insert while fitting cover around it.

4

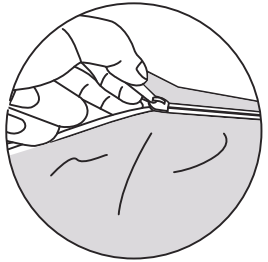

4. To avoid a stuck zipper, please pull the fabric away from the zipper before moving forward.

5

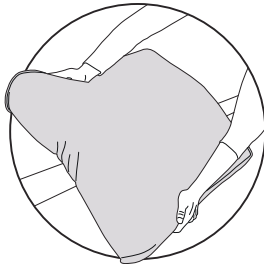

5. When all done, please pat the cushion or give it a little shake to make it more flat.

## Care & Cleaning Guidelines

The covers are machine washable. Before washing, please zip the cover up to avoid catching other clothes. You can clean the dust on the chair / table / footstool with a damp cloth.

## NOTE:

Vacuum compressed cushions,  
Will return to normal shape after 5-7 days use.

