



ASSEMBLY INSTRUCTIONS

Parts:

(2) Sides

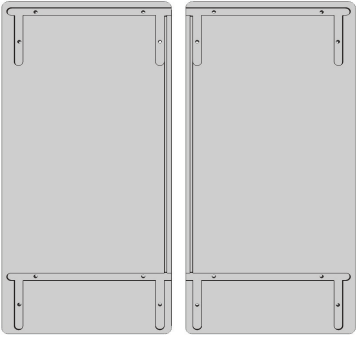


Back



(6) Dividers



Top/Bottom

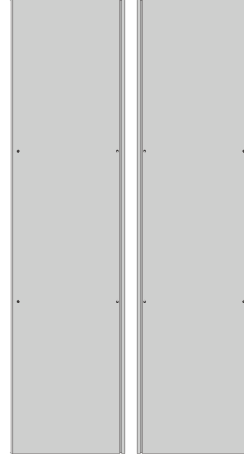

Allen Wrench




(24) Contender Hex Screws



Set of (4) casters with hardware




(4) Rails

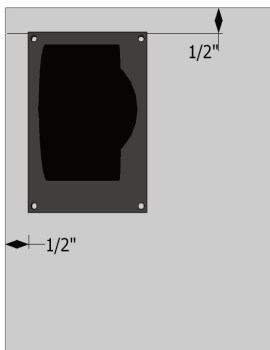


Step 1: Using phillips head screwdriver (not included) and hardware provided, attach (4) casters to **Bottom** piece on side with no dado. See instructions included with casters set. Casters should be placed near the edge as shown.

Step 2: Insert one of the smaller sides of **Bottom** piece into dado of **Side** piece. Be sure that back grooves on both Bottom and side pieces are aligned. Attach Bottom piece to Side piece with (2) hex screws included in the supplied hardware. Tighten down halfway.


Step 3: Insert smaller side of **Top** piece into other dado of **Side** piece. Back groove of Top piece must be facing towards center of Side piece and align with back groove in Side piece. Attach Top piece to Side piece with (2) hex screws included in supplied hardware. Tighten down halfway.

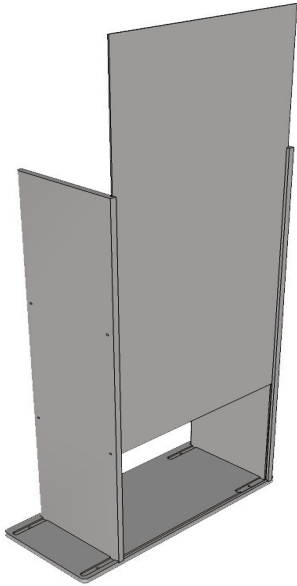


Step 3: Slide **Back** piece into back grooves of Bottom and Top pieces already installed. Guide Back piece down until bottom edge rests in back groove of Side piece.

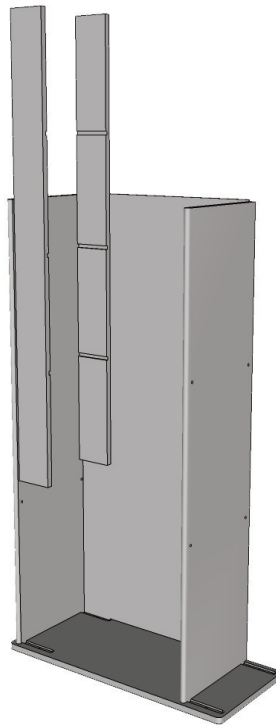


Step 4: Install two **Rails** of mobile bookcase by guiding them into dados above Bottom piece already installed. Screw holes should align with rail from inside Side's dados and with Bottom piece. Dados on rail should face inward towards center of the Bottom piece. Attach with (6) hex screws from the supplied hardware. Tighten down halfway.

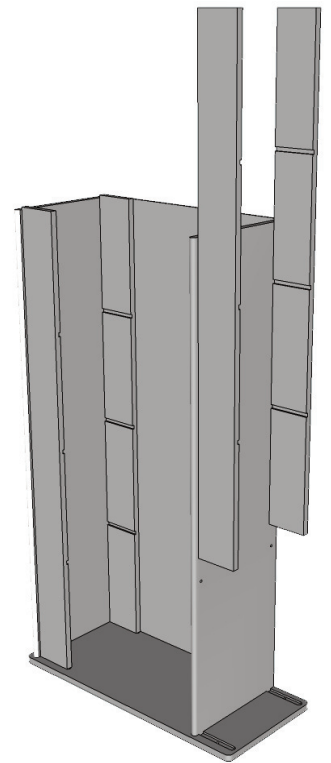


Step 5: Repeat Step 4 with second set of Rails on top of Top piece. Align Rails with dados in Side piece and with holes in Top piece. Attach using (6) hex screws from supplied hardware. Tighten down halfway.

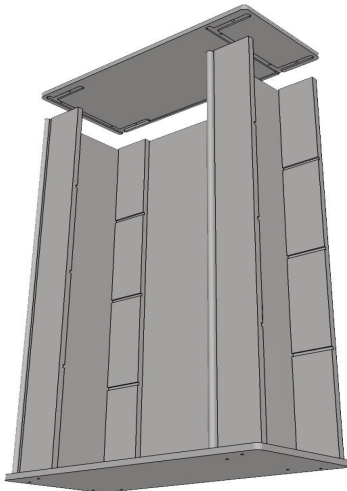

Step 6: Attach second Side piece onto unit. Be sure to align all parts used thus far into their respective grooves on second Side piece. Attach with (8) hex screws from the supplied hardware. Tighten down halfway.

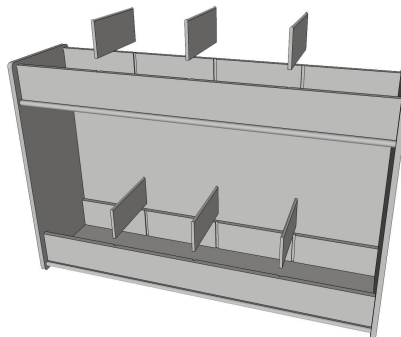

Step 7: Slide in **Dividers** in between rails on Top and Bottom pieces. Dividers are not attached with hardware.

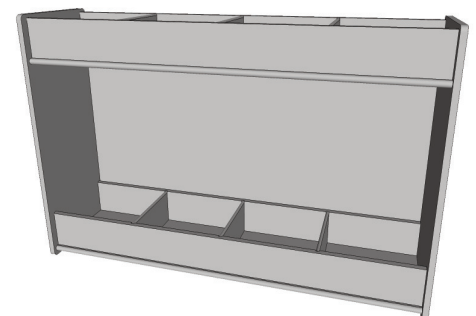

Step 6: Tighten all screws snugly. **DO NOT OVERTIGHTEN. DO NOT DRILL. Assembly is now complete.**