

Full-Length Mirror Installation Diagram




Chain in open state:

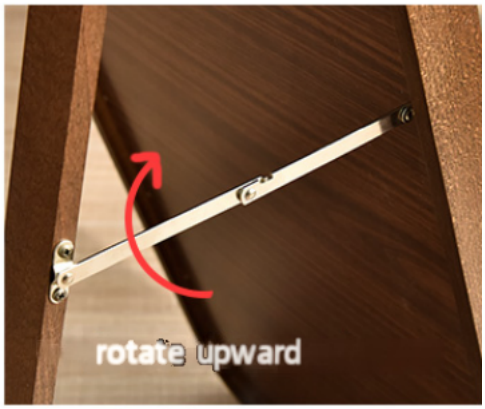

Chain in open state:

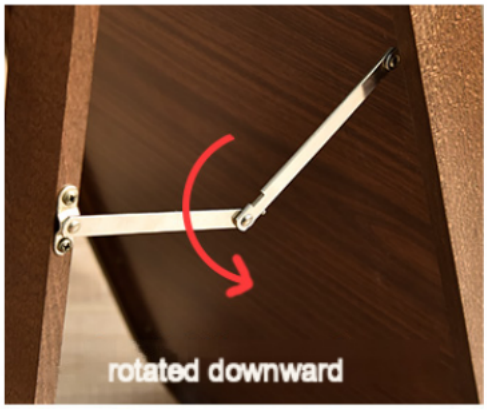

Vanity Mirror *1

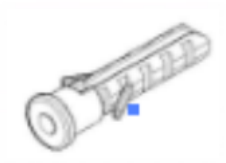

Plastic wall plug
Φ8*40mm=2




Quick-fit nut
Φ5*50mm=2


Hole Spacing 1



Note: When drilling holes on the wall, measure the distance between the two hardware fittings as Hole Spacing 1.

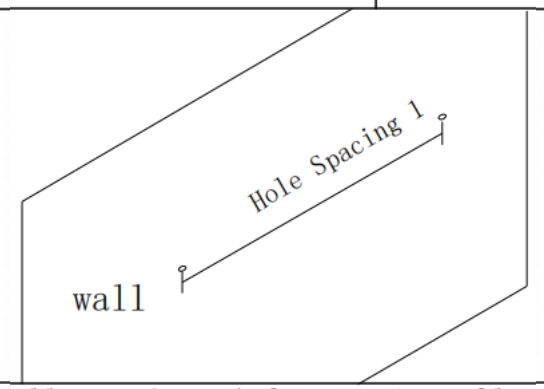

1. Drill two Φ8mm holes in the wall using an electric drill.

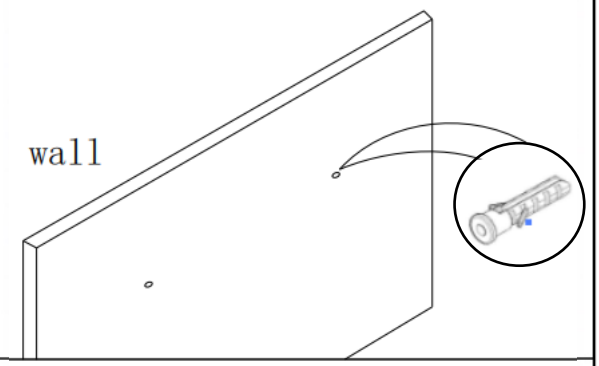

2. Insert the plastic wall anchors into the holes.



3. Insert the quick-fit nut into the expansion anchor, leaving 5 mm exposed; do not tighten it flush.





4: With the mirror facing outward, hang the hardware on the back of the vanity mirror onto the quick-fit nuts. Installation complete.