


Assembly Instructions

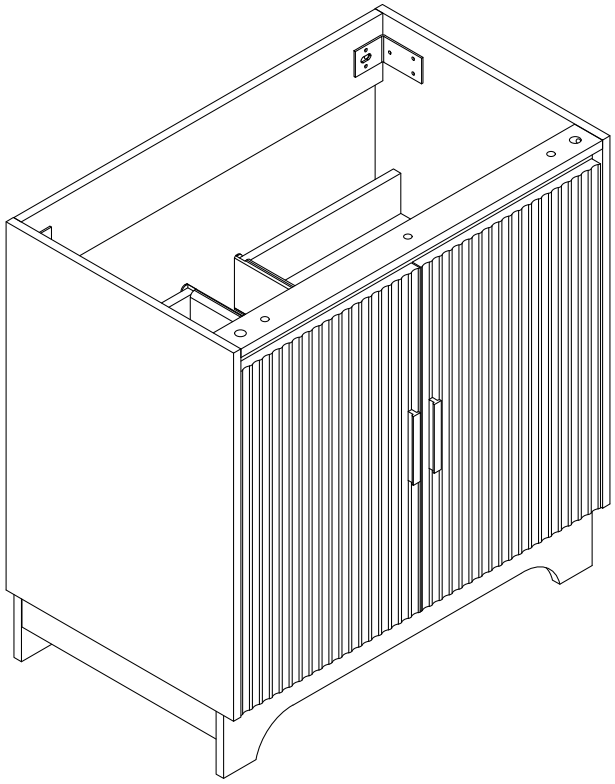


Bathroom cabinet

The beginning of installation may feel confusing and painful,but it will get better.

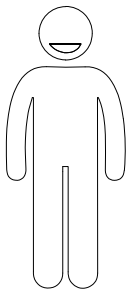


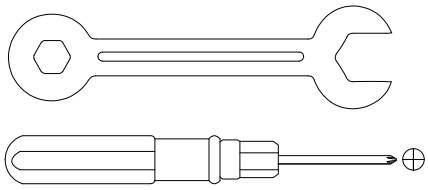


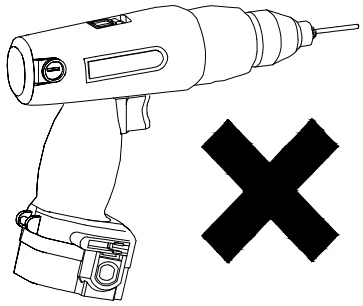

We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

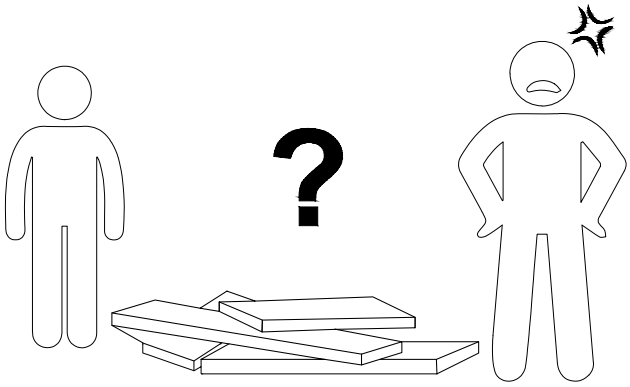


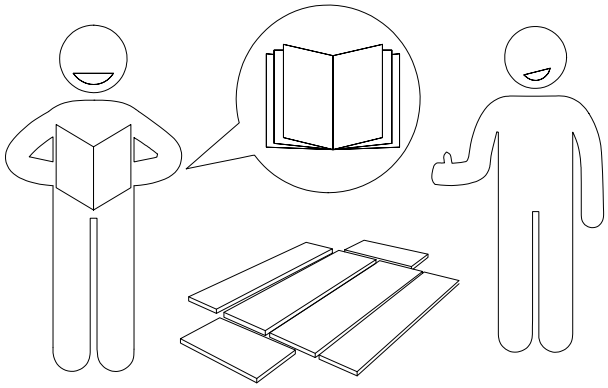


AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

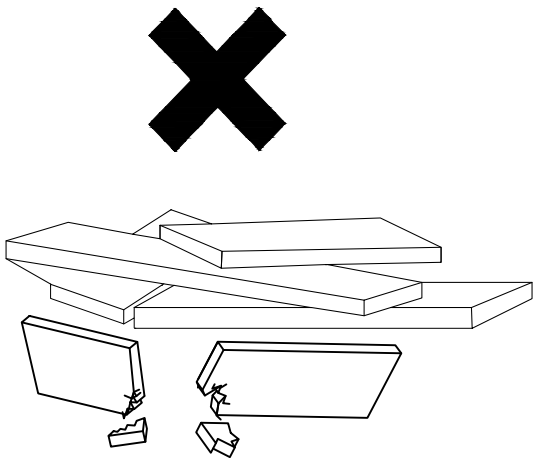













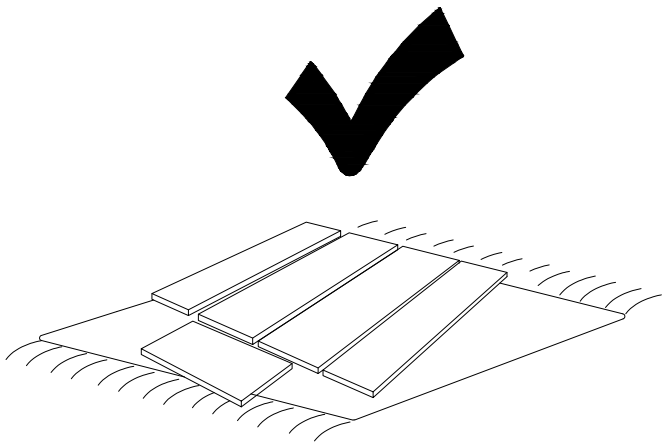


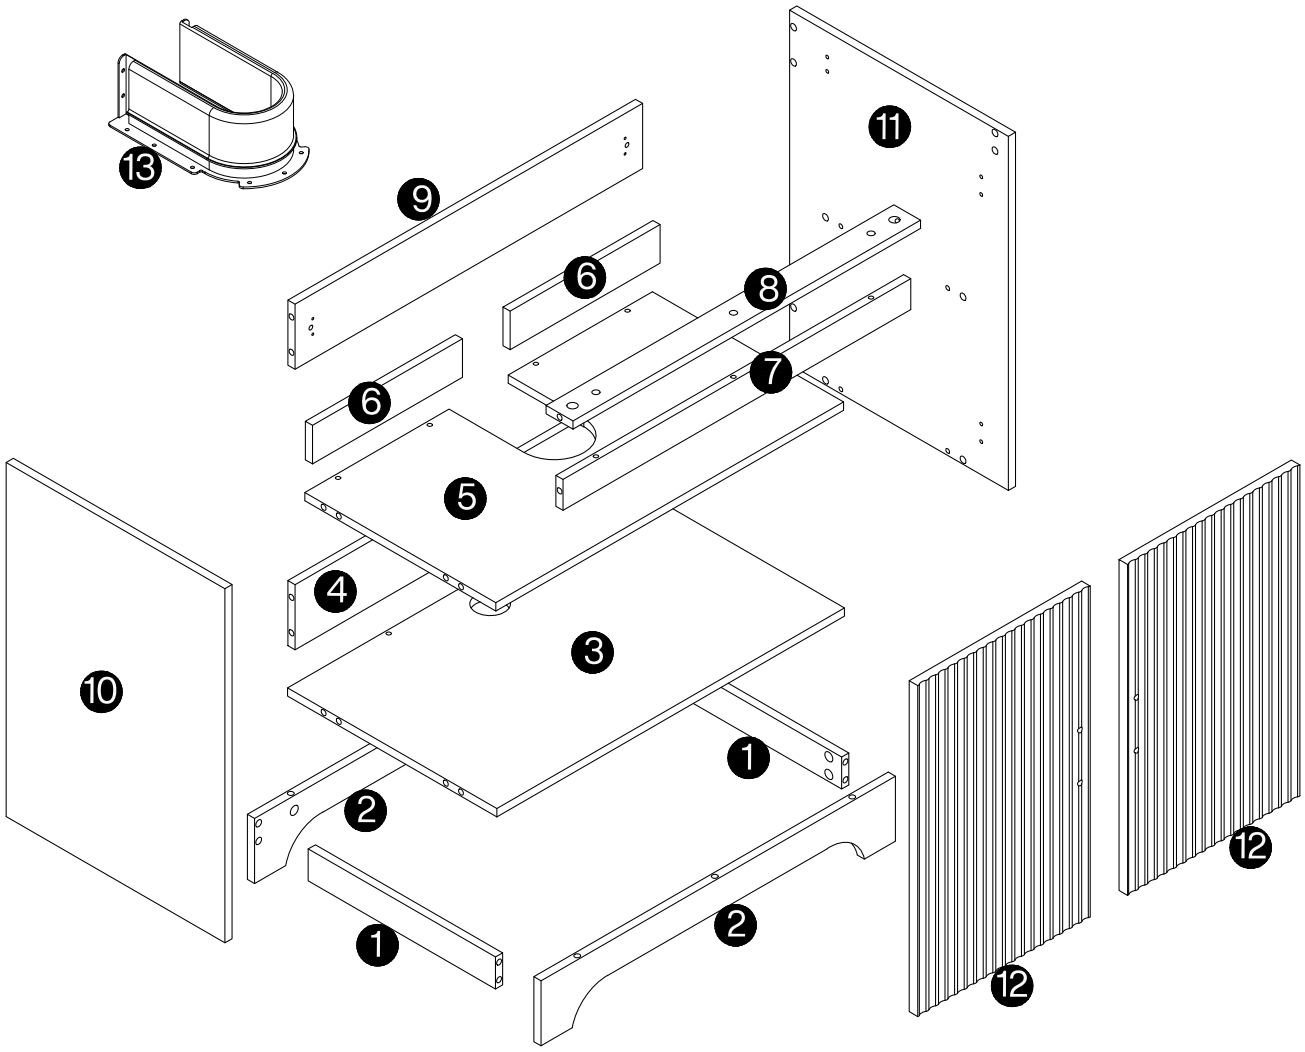







⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

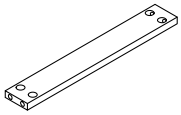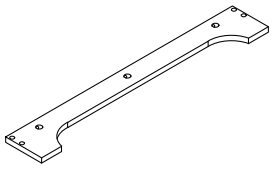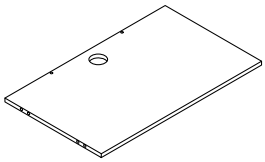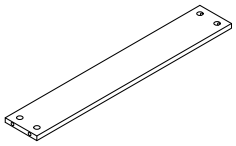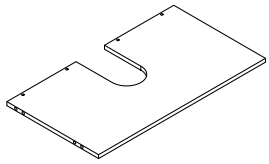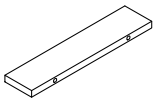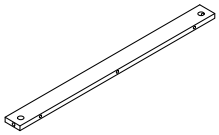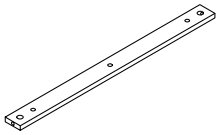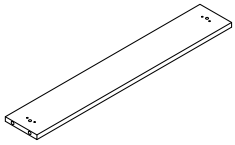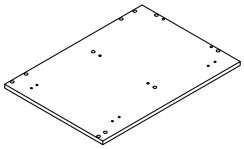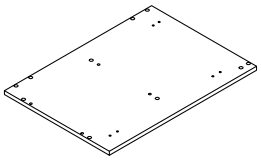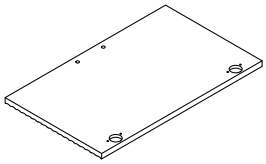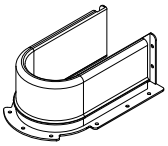❶  2pcs	❷  2pcs	❸  1 pc	❹  1 pc	❺  1 pc
❻  2pcs	❼  1 pc	❽  1 pc	❾  1 pc	❿  1 pc
⓫  1pc	⓬  2pcs	⓭  The accessory co mes in a separate package 1 pc		


Hardware List

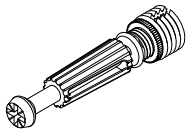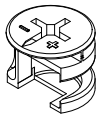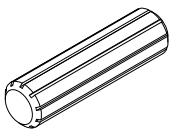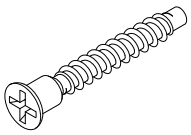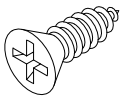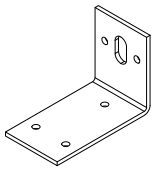A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	Ø8x30mm	Ø7x38mm	Ø3.5x14mm	
34+2 pcs	34+2 pcs	8+2 pcs	9+2 pcs	47+4 pcs	2 pcs

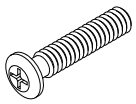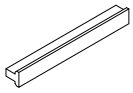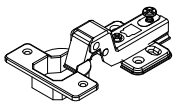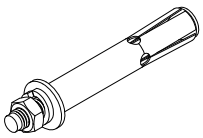
G	H	I	J	K	L
					
Ø4x22mm		Dawan Hinge	M8		M8
4+1pcs	2 pcs	4 pcs	2 pcs	1pc	1pc

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

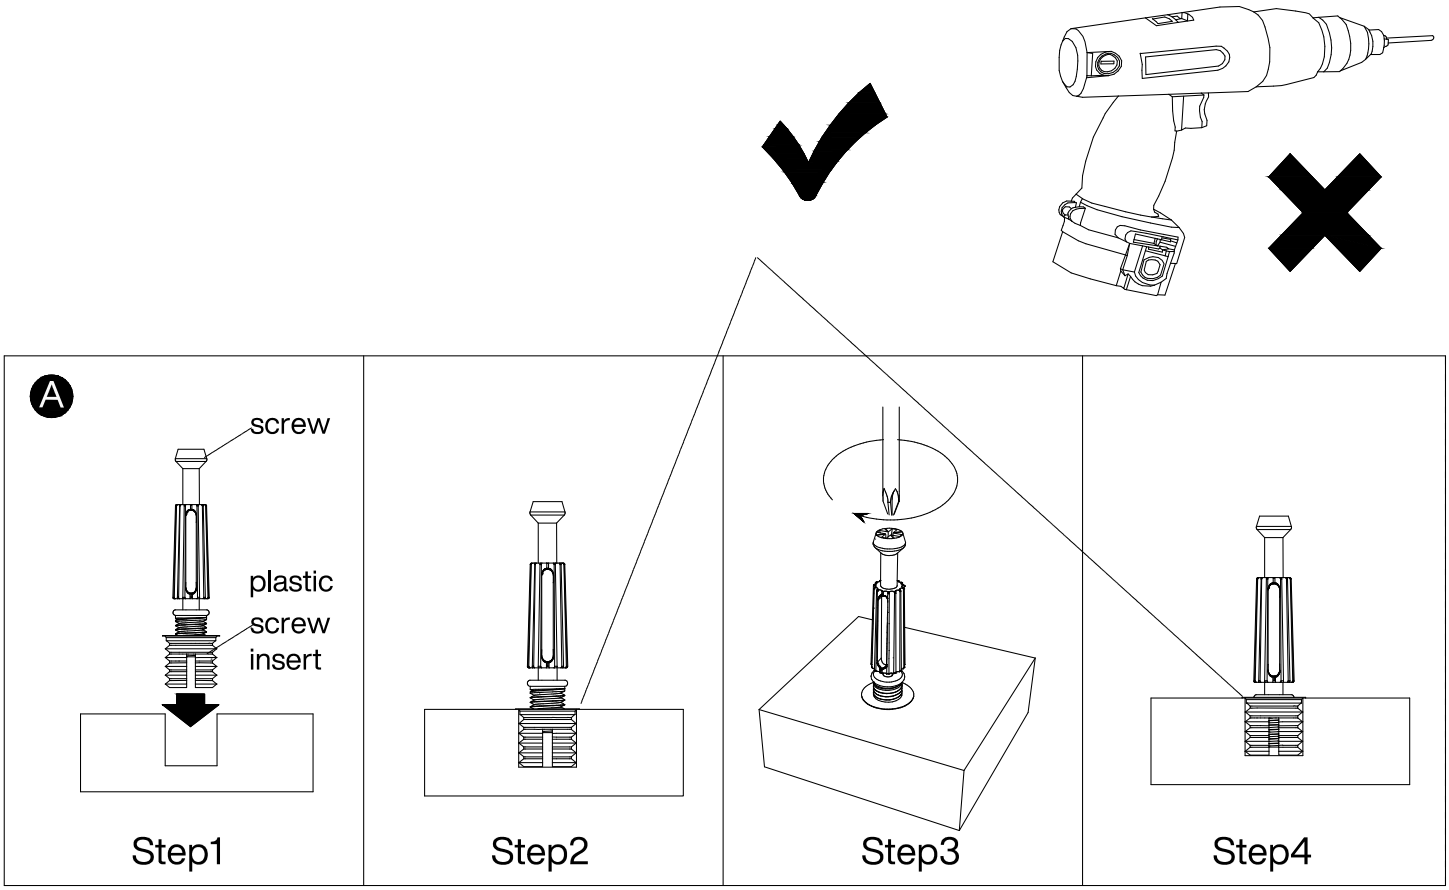


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

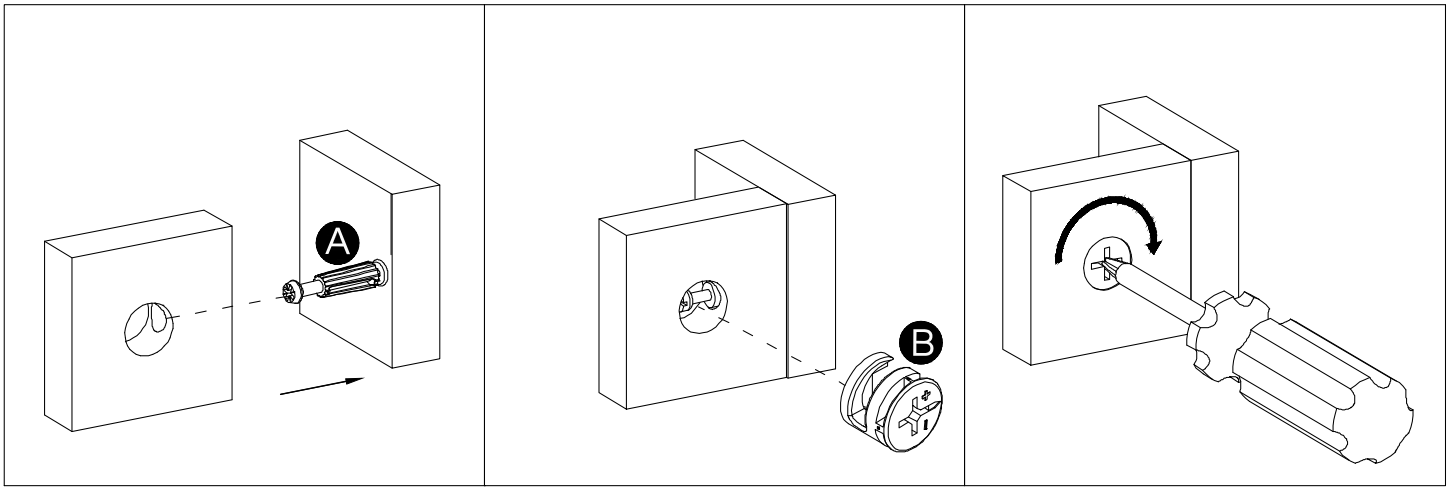


1

A

M6x40mm
10 pcs

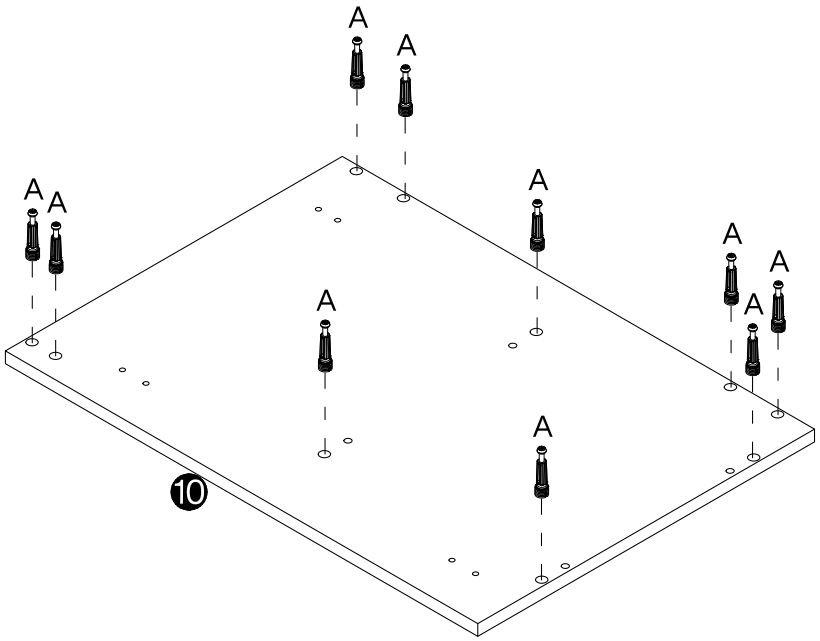


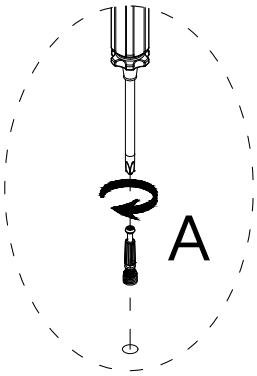


2


A


M6x40mm
10 pcs

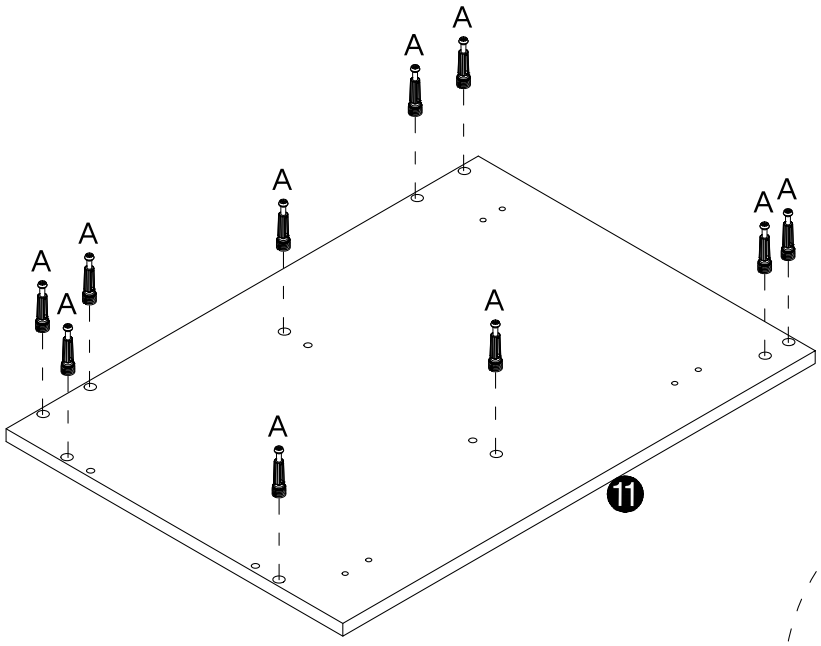


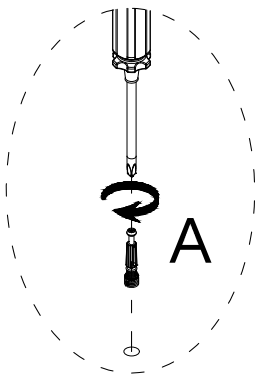

3

D

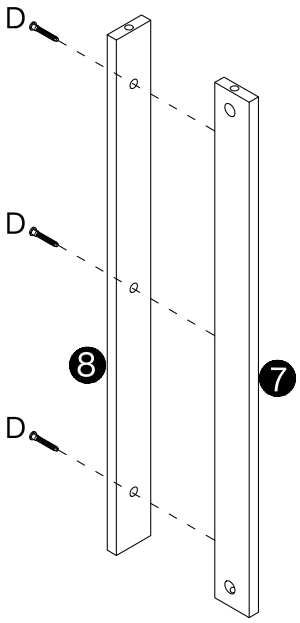Ø7x38mm
3 pcs

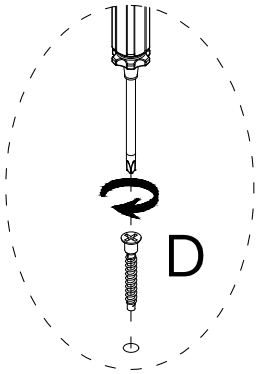





4


B


Ø15X10 mm
4 pcs

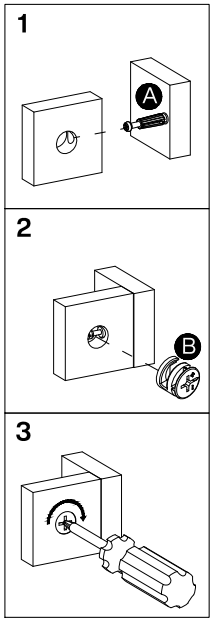

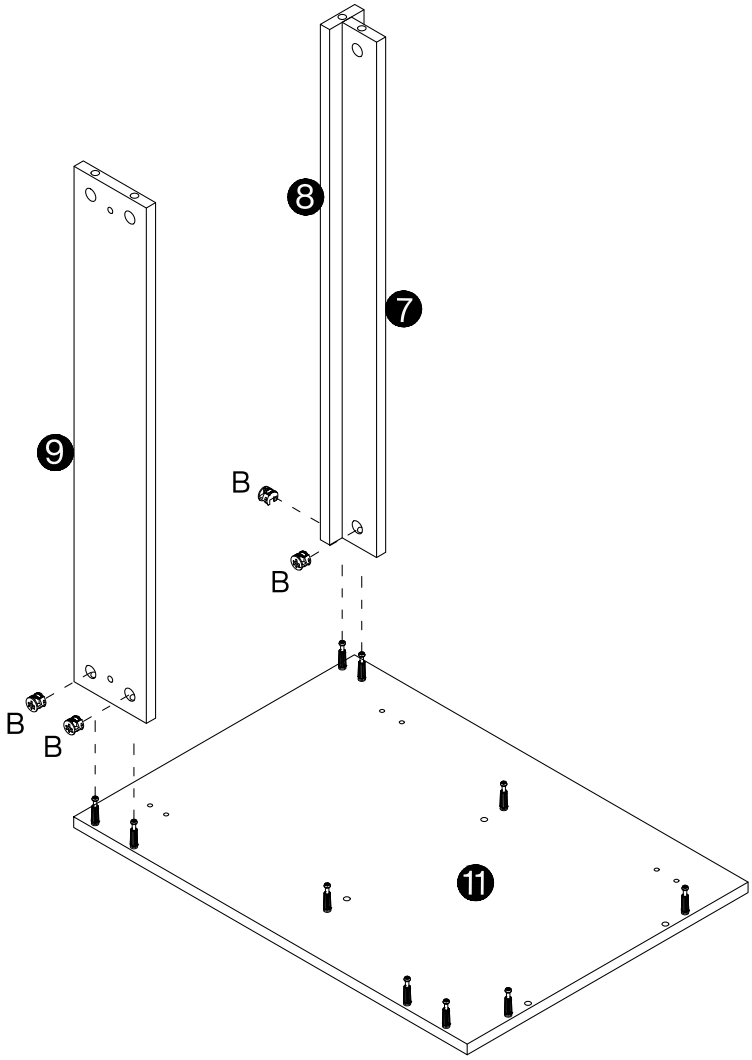


5


C	E
	
Ø8x30mm	Ø3.5x14mm
4 pcs	9 pcs

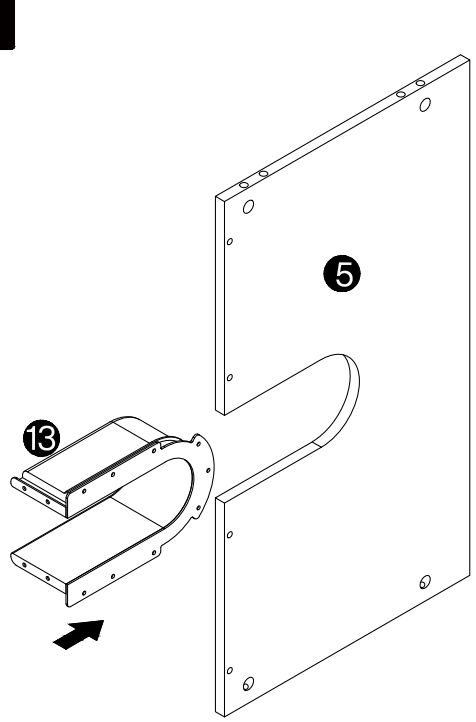


Step1

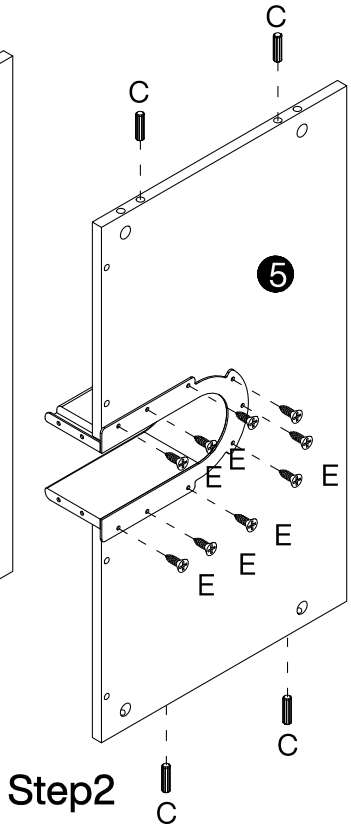



Step2

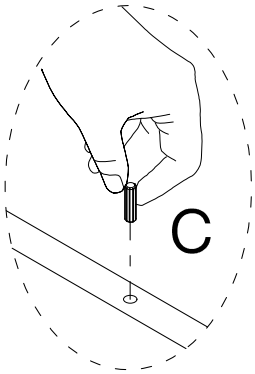


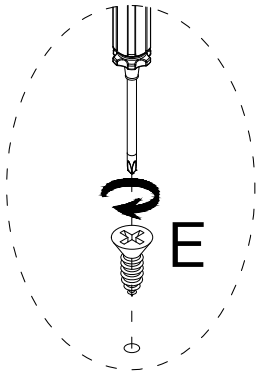


6

E	D
	
Ø3.5x14mm	Ø7x38mm
4 pcs	4pcs

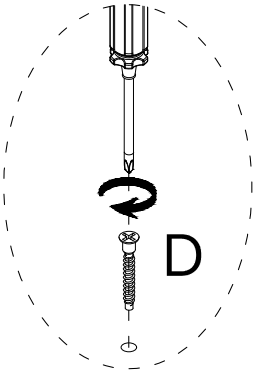


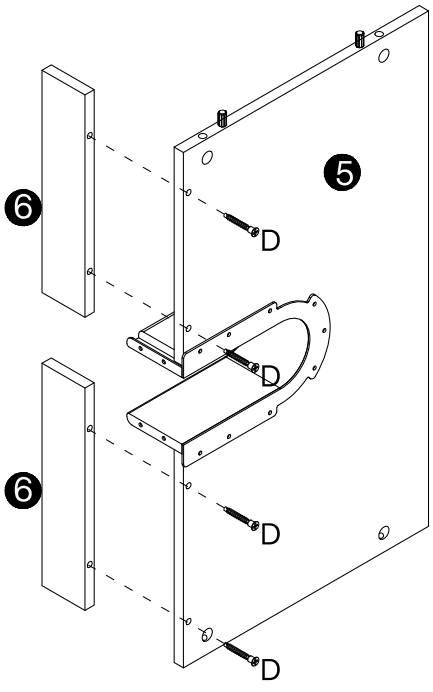

Step1

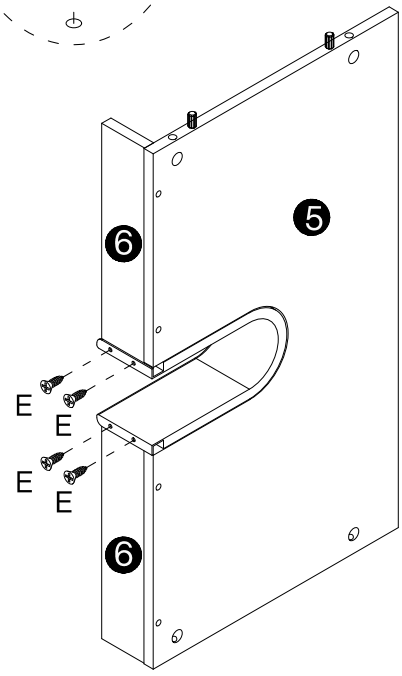


Step2

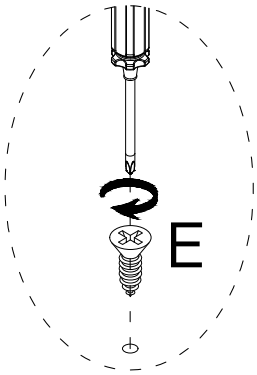


7



B


Ø15X10 mm
2 pcs

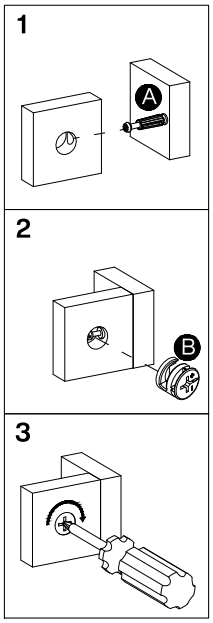


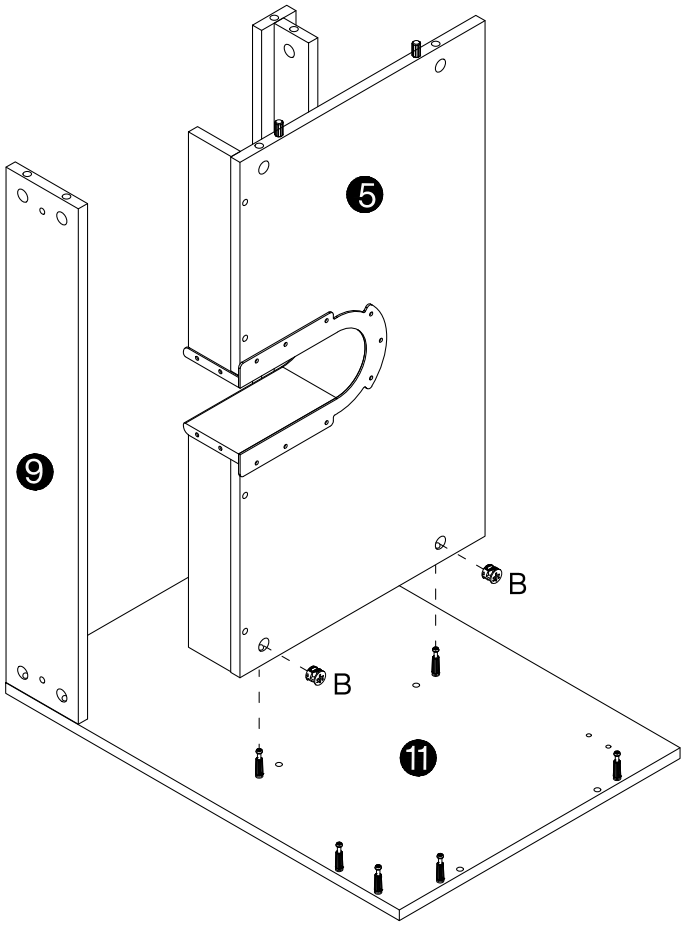


8

D	C
	
Ø7x38mm	Ø8x30mm
2 pcs	4 pcs

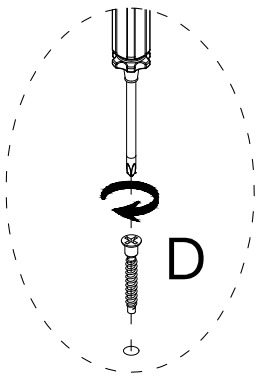

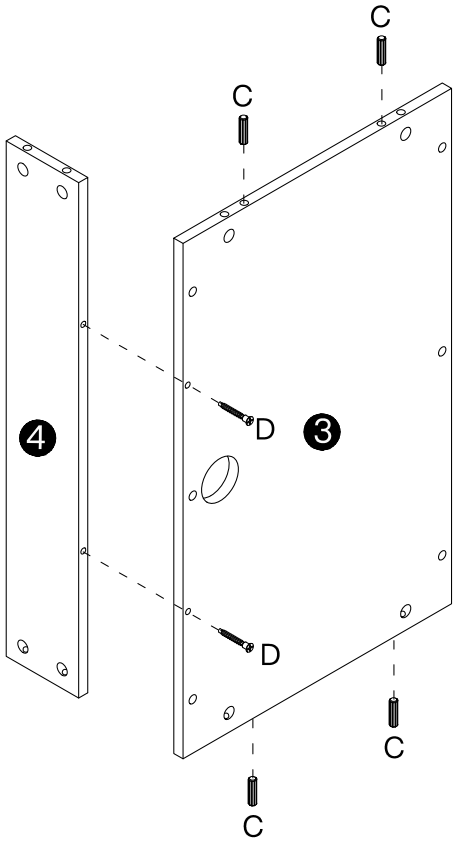


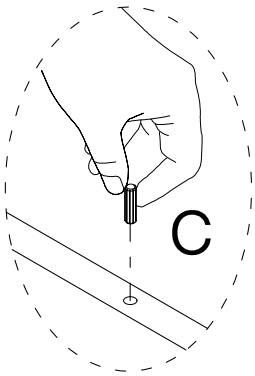


9

B

Ø15X10 mm
4 pcs

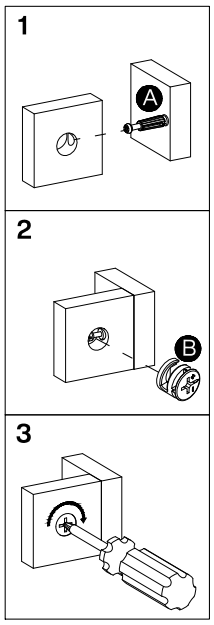


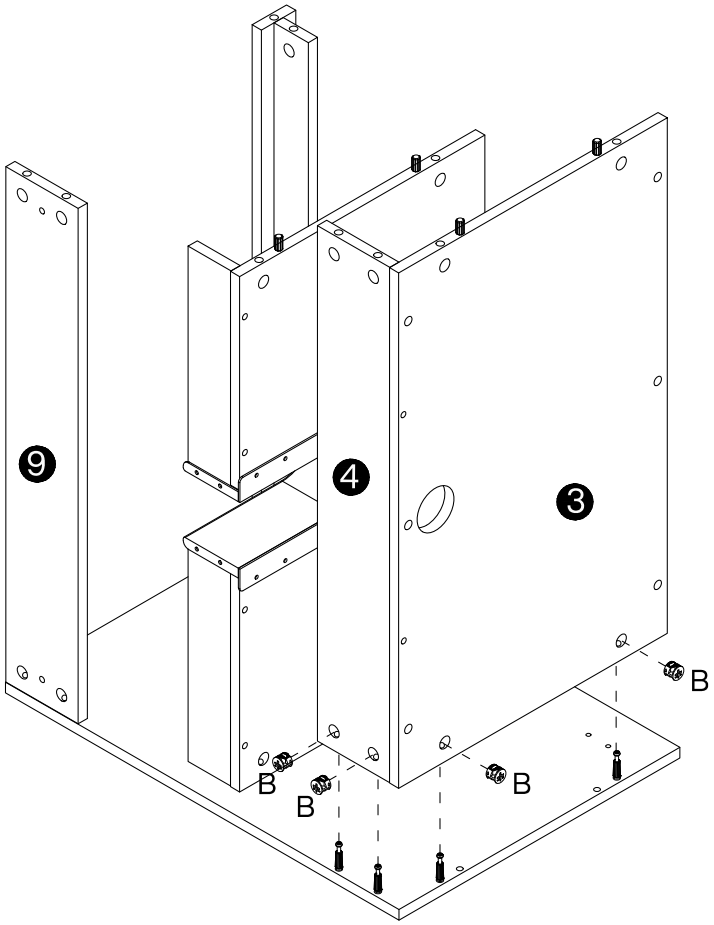


10

B

Ø15X10 mm
10 pcs

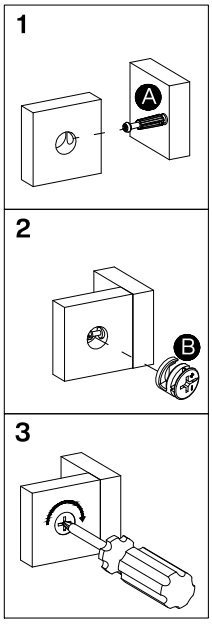


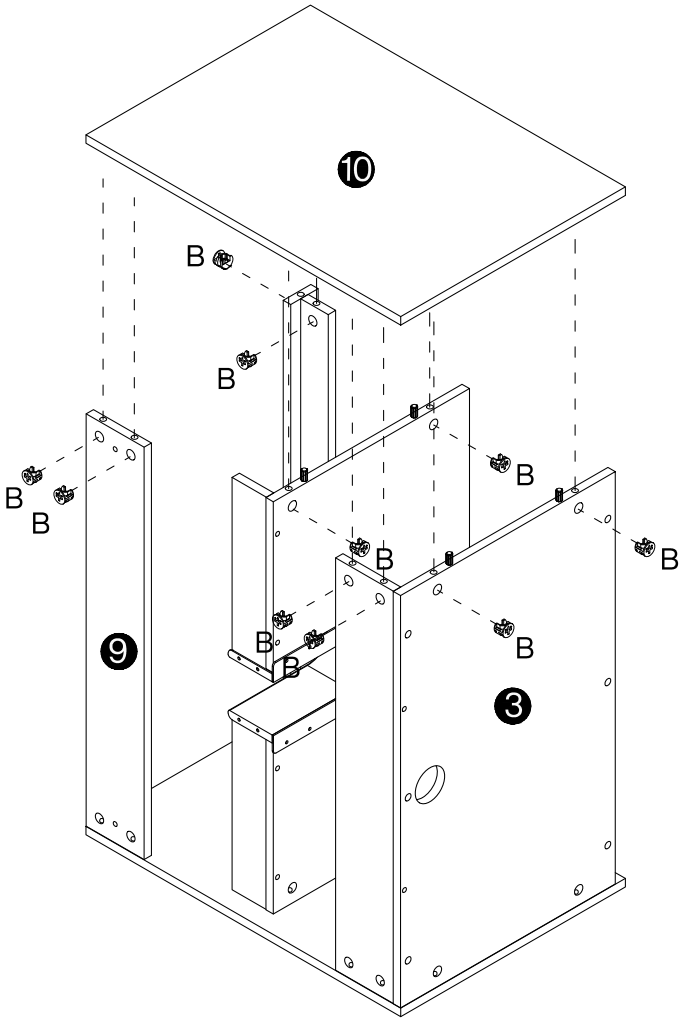


11

A

M6x40mm
8 pcs

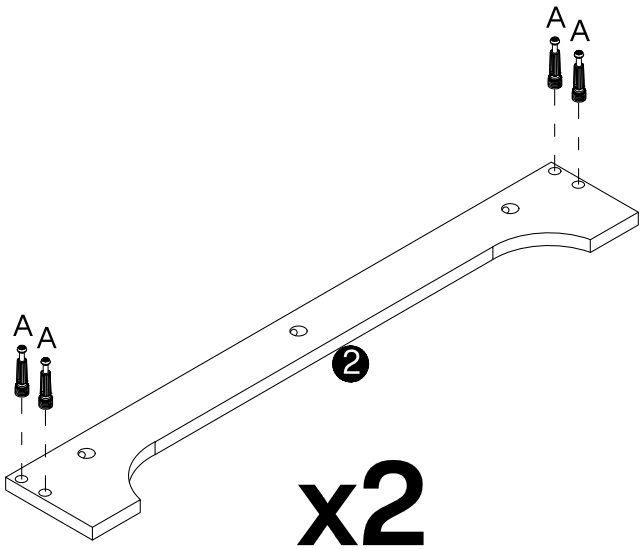


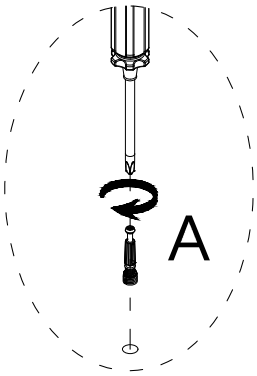


12

B

Ø15X10 mm
8 pcs

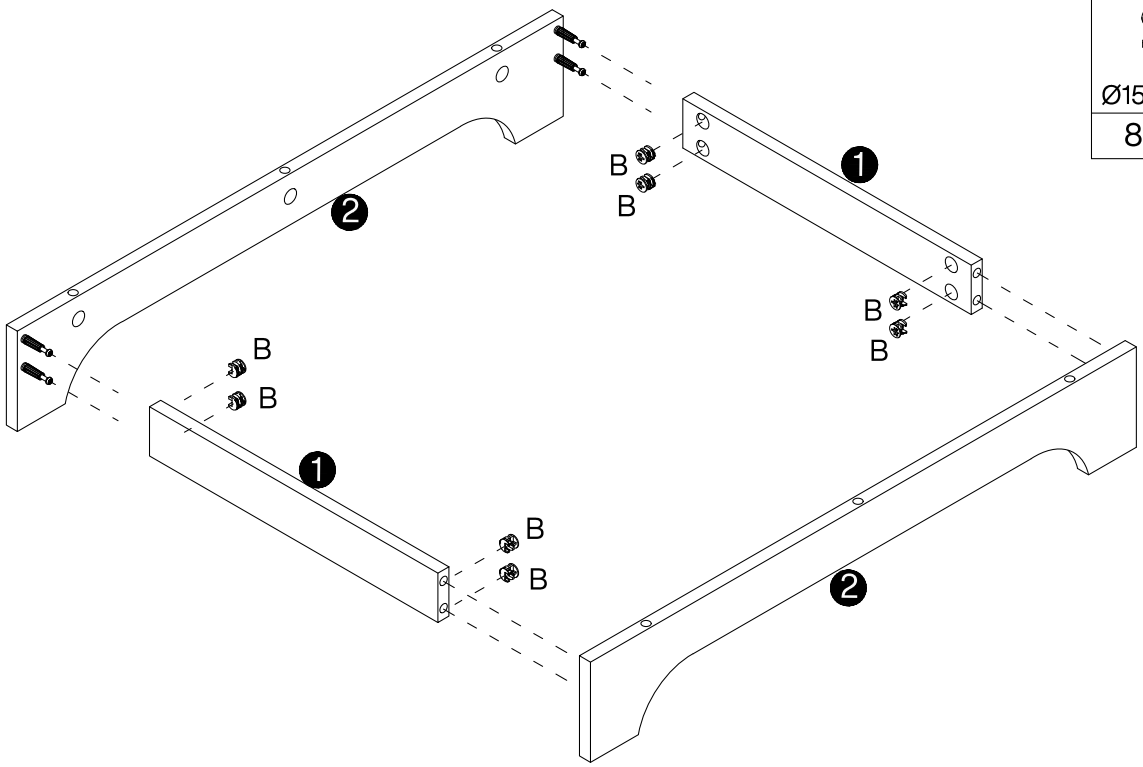


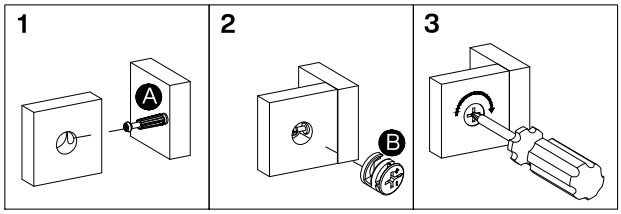


13

A

M6x40mm
6 pcs

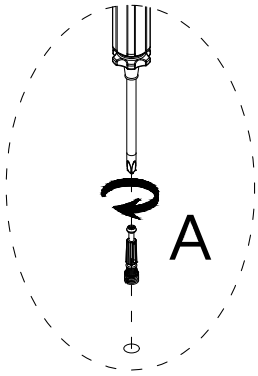


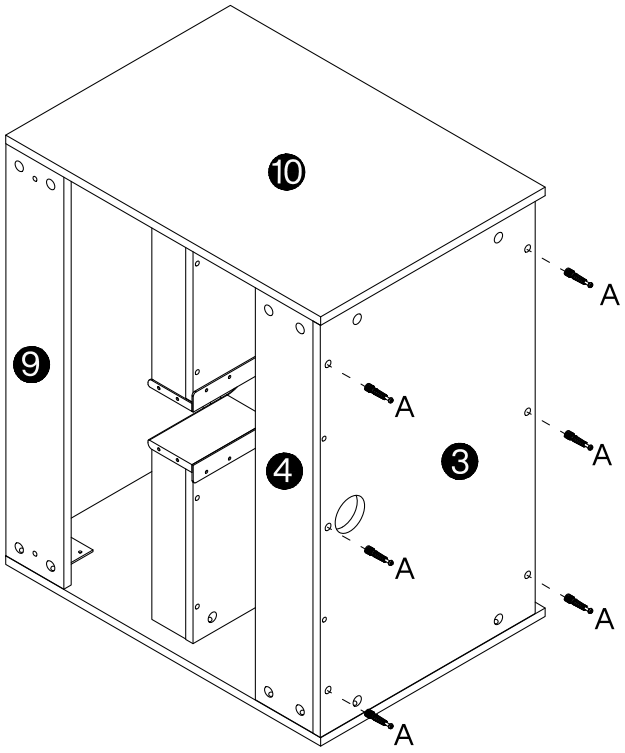


14


B



Ø15X10 mm
6 pcs

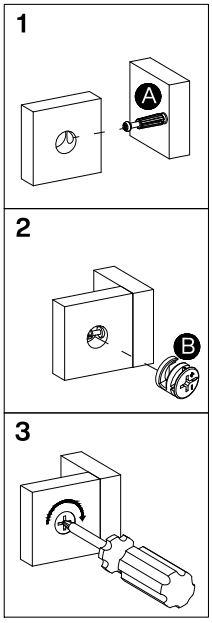


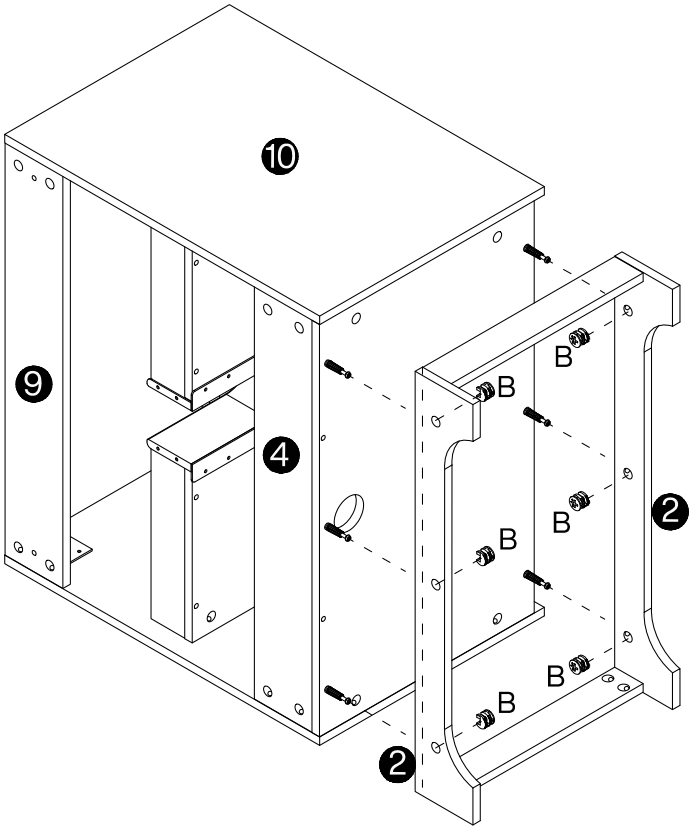



15

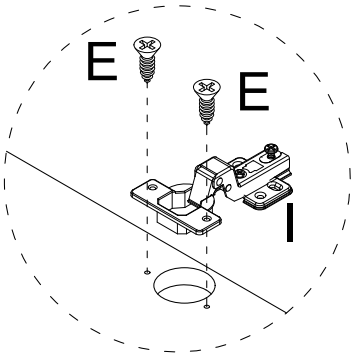

H	I	E
	 Dawan Hinge	 Ø3.5x14mm
2 pcs	4 pcs	8 pcs


G
 Ø4x22mm
4 pcs

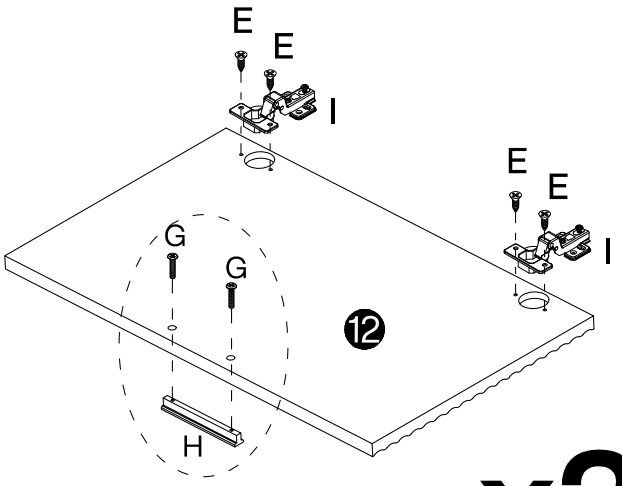


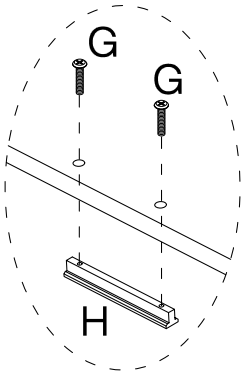



x2

16

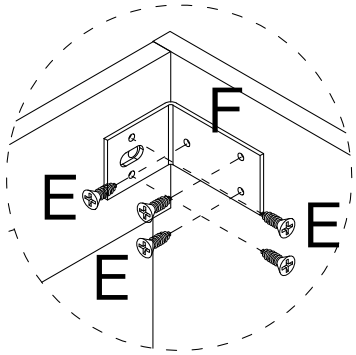


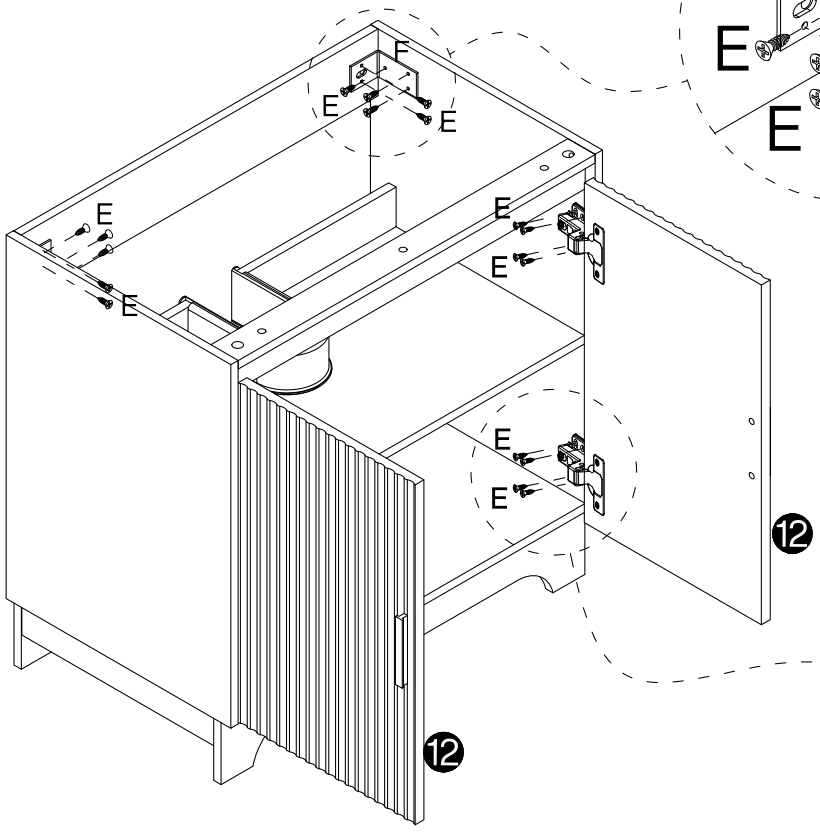



E
 Ø3.5x14mm
26 pcs
F

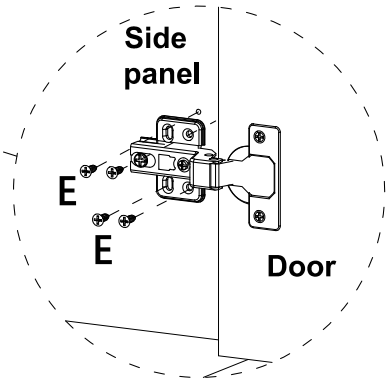2 pcs

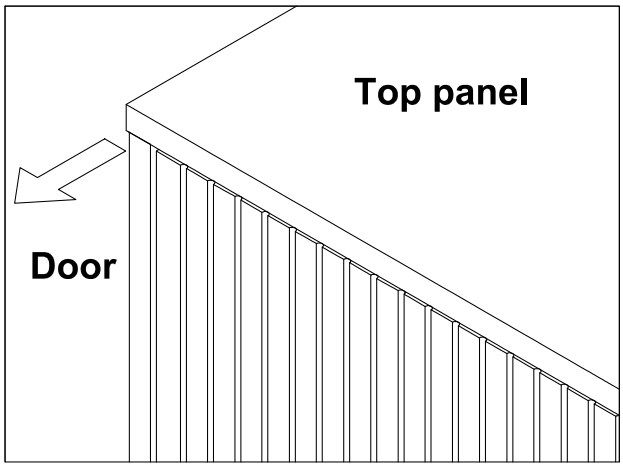


To prevent the door hinge from falling off,please install 4 screws

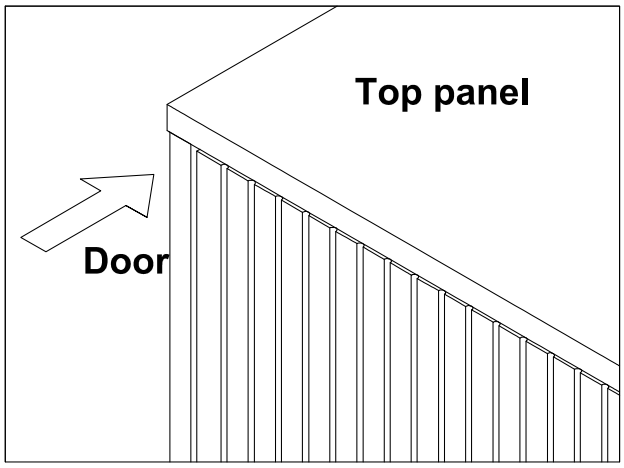

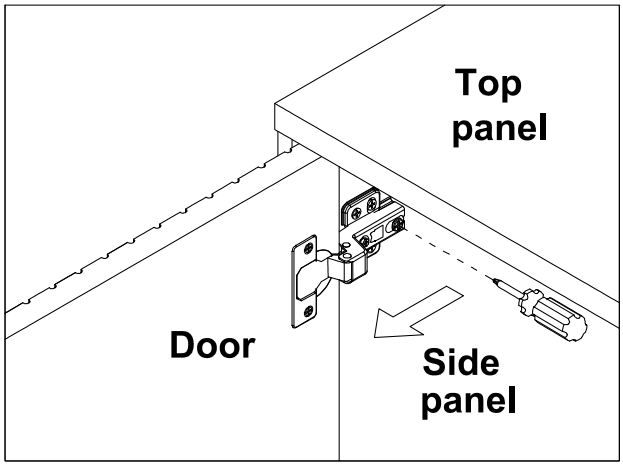






Pull the hinge forward a little.

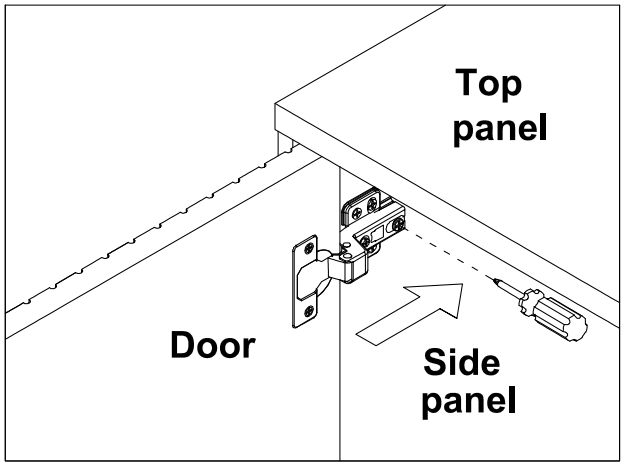


Push the hinge back a little.

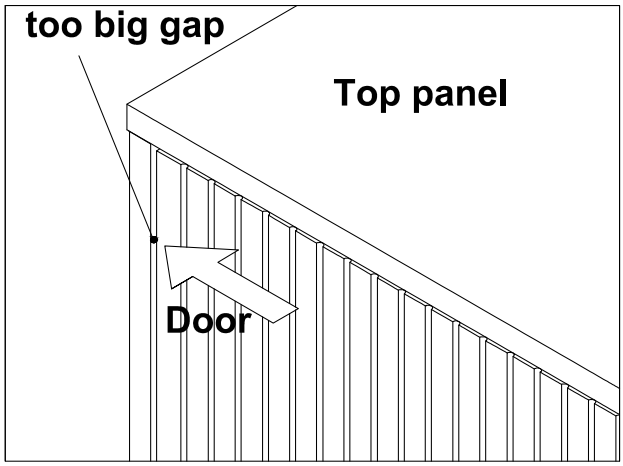

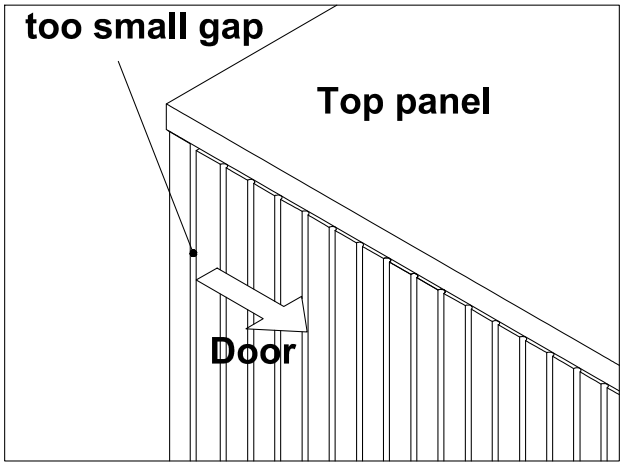

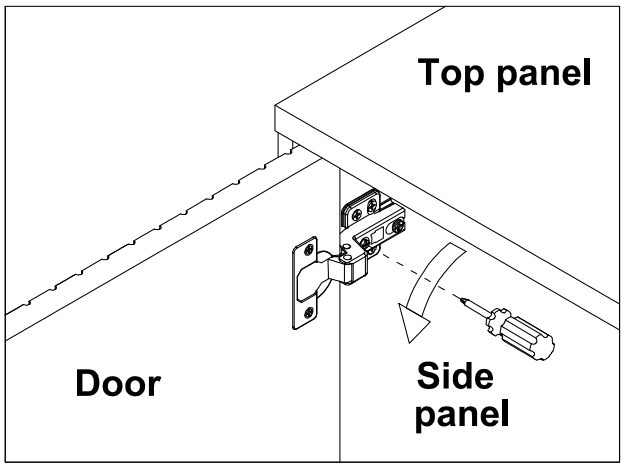


Turn the screw clockwise a little as shown to make the gap smaller

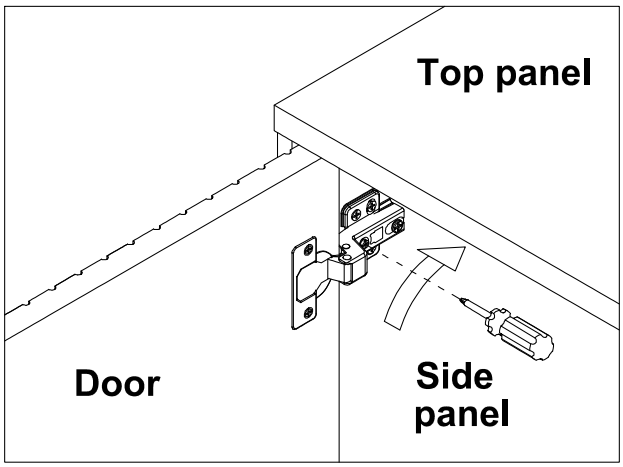



Turn the screw counterclockwise a little as shown to make the gap bigger

17


J

2 pcs

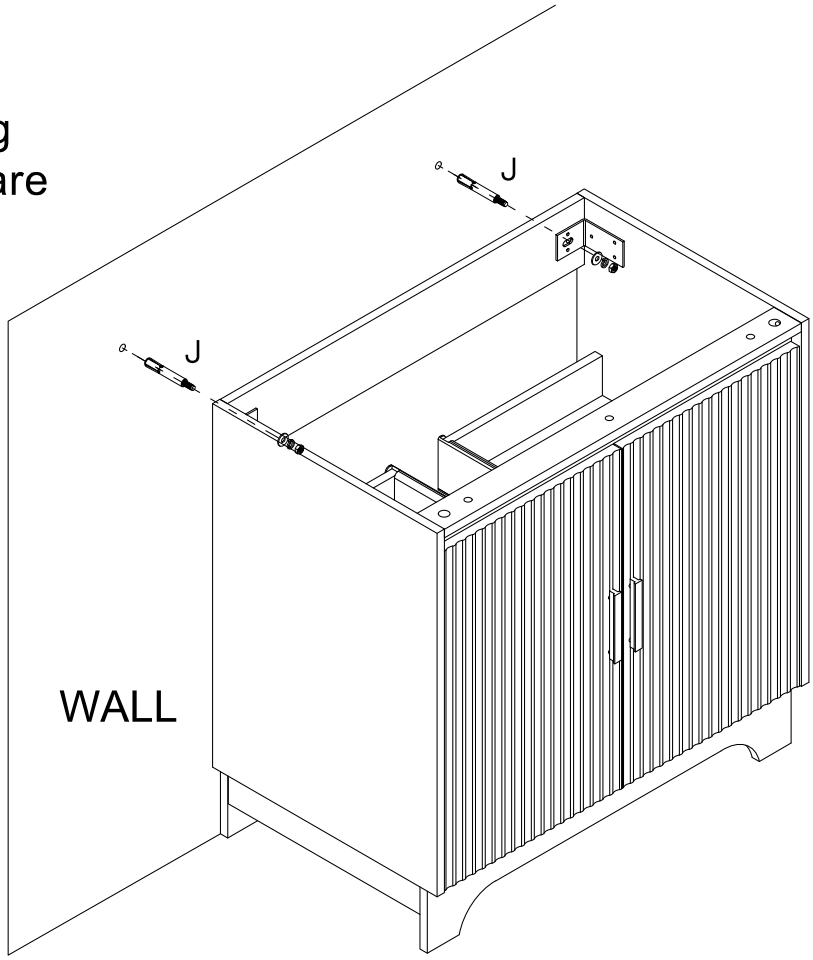Install the tipping restraint hard ware

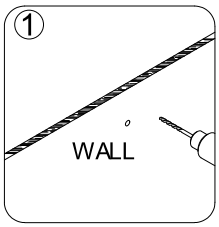


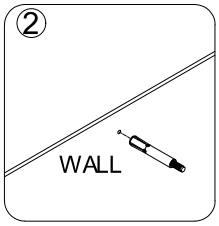

1.Drill two Ø10 holes on the wall



2. Put two anchors in the holes

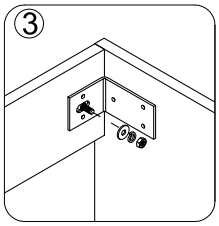

3.Fix the device on the wall by the long screws