

# Installation Manual

*PVC Ideal for storage, new patented product.*


*Good capacity and lighter than common pvc panel.*

*Patent number: US 30013524*

Model:

**ZJPS1001-4\*4ft-BK/GY/WH**

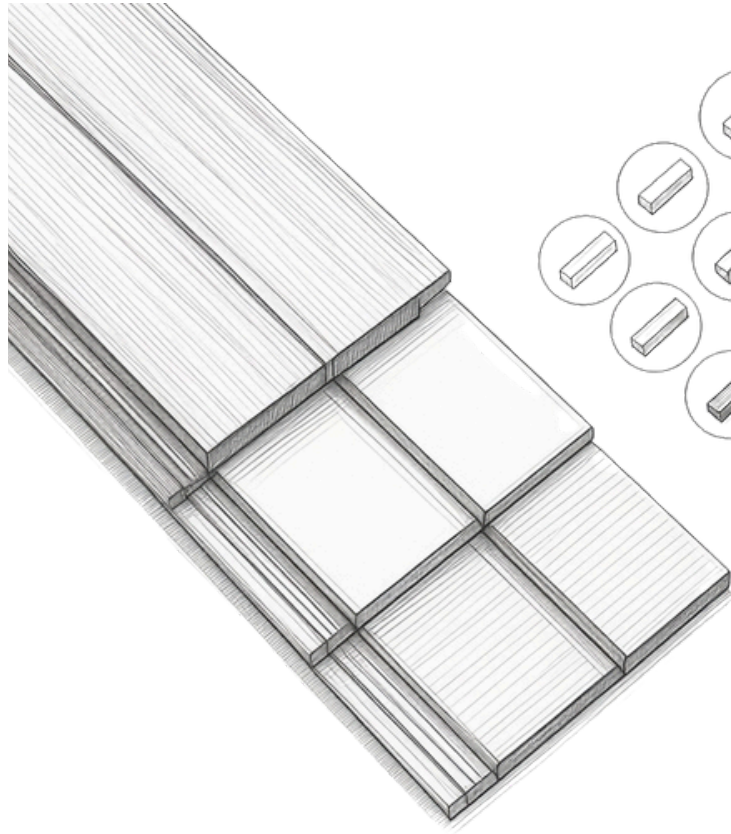**ZJPS1002-4\*8ft-BK/GY/WH**



*New material, thinner and lighter*

*Brand new design, more practical*

*Hidden screws, more aesthetically pleasing*









## **WARNING**

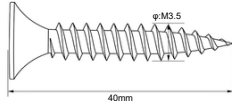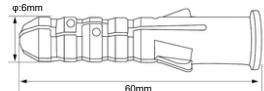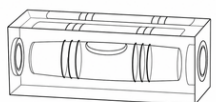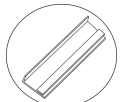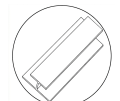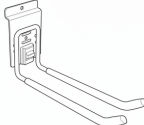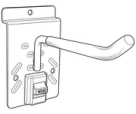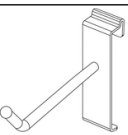This product is newly designed and made of brand-new materials. Read this material before using this product. Failure to do so can result in serious injury.

**SAVE THIS MANUAL.**










# Parts list 1/2

**Model:ZJPS1001-4\*4ft-BK/GY/WH**

| Supplier Item No.    | Description             | Product Picture                                                                                                                                                       | PCS IN SETS |
|----------------------|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| PVC (4ft)            | PVC PANEL               |                                                                                     | 8           |
| screw+plastic anchor | SCREWS+plastic anchor   |   | 45          |
|                      | Gradienter              |                                                                                     | 1           |
| Trim-J               | J-Trim                  |                                                                                   | 2+1         |
| Trim-F               | F-Trim                  |                                                                                   | 1           |
| Trim-H               | H-Trim                  |                                                                                   | 0           |
| HOOK1                | 8" standard double hook |                                                                                   | 1           |
| HOOK2                | Bike Hook               |                                                                                   | 1           |
| HOOK3                | Double J hook           |                                                                                   | 2           |
| HOOK4                | 4" Lux single hook      |                                                                                   | 2           |
| HOOK5                | 4" single hook          |                                                                                   | 6           |

# Parts list 2/2
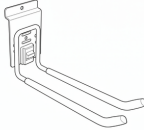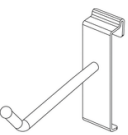
## Model:ZJPS1002-4\*8ft-BK/GY/WH

| Supplier Item No.    | Description             | Product Picture                                                                                                                                                       | PCS IN SETS |
|----------------------|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| PVC (4ft)            | PVC PANEL               |                                                                                     | 16          |
| screw+plastic anchor | SCREWS+plastic anchor   |   | 90          |
|                      | Gradienter              |                                                                                     | 1           |
| Trim-J               | J-Trim                  |                                                                                   | 4+2         |
| Trim-F               | F-Trim                  |                                                                                   | 2           |
| Trim-H               | H-Trim                  |                                                                                   | 1           |
| HOOK1                | 8" standard double hook |                                                                                   | 2           |
| HOOK2                | Bike Hook               |                                                                                   | 2           |
| HOOK3                | Double J hook           |                                                                                   | 4           |
| HOOK4                | 4" Lux single hook      |                                                                                   | 4           |
| HOOK5                | 4" single hook          |                                                                                   | 12          |

## Tools Required

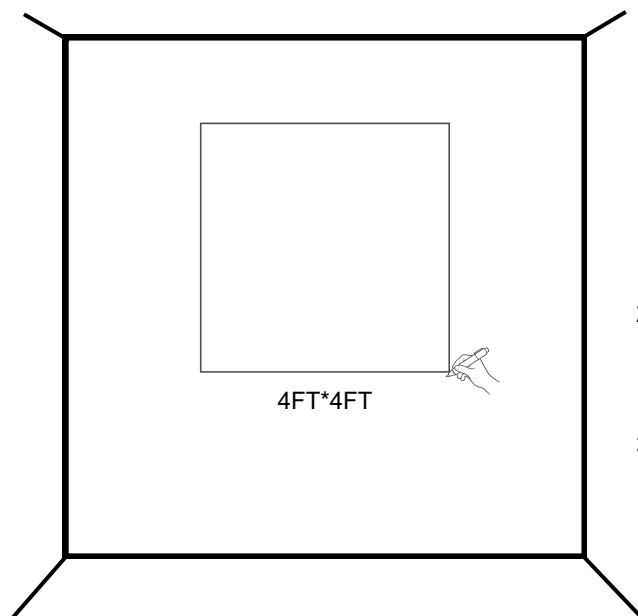
- Drill with drill bit
- Screwdriver or drill/driver
- Stud finder
- Tape measure
- Level (included in the package)
- Pencil or painter's tape (for marking stud locations)
- Safety glasses

## Before You Begin

- Slatwall panels must be securely mounted to wall studs to ensure safe load-bearing performance.
- Install the product from bottom to top.
- Confirm all spacing before installation, especially the clearance above the top panel.
- Each slatwall panel should be anchored to at least three studs. For maximum load capacity, install one screw into each stud at every groove.

# Installation steps and precautions


## Step 1 — Locate and Mark Wall Studs



1. This product is suitable for installation on walls, wooden panel walls, slat walls, and similar surfaces. We do not recommend installing it on drywall/plasterboard walls.
2. Use measuring tools, a marker, or the slat panel itself to determine the installation area, and draw simple guideline outlines.
3. Make sure to leave enough space at the top for at least one panel gap.

**Note:** For wall installation, expansion anchors are included. Both the anchors and screws are 4 cm long.


## Step 2 — Install Edge Trims

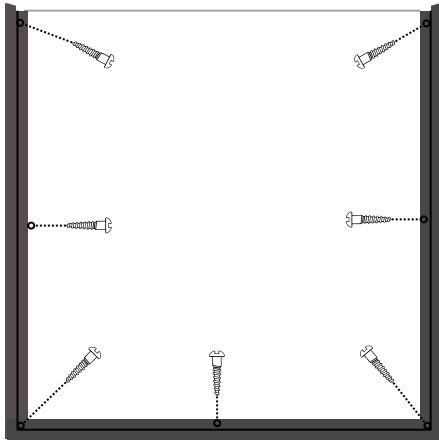

1. Install the bottom edge trim and the two side edge trims in the selected area, then secure them with screws.
2. The edge trims on both sides are 1.24 m in length and correspond to the longer **F** trim. Be sure to keep them vertically aligned.
3. Install the **F** edge trim at the bottom. Use a level to ensure it is installed horizontally.
4. For the 4' × 8' product, install the **H** edge trim on one side.

- Note:**
1. Install edging first. If experienced, install slatwall directly.
  2. Screws should be snug but not so tight as to crush the slatwall surface.

## Step 3 — Fasten the Slatwall to the Wall

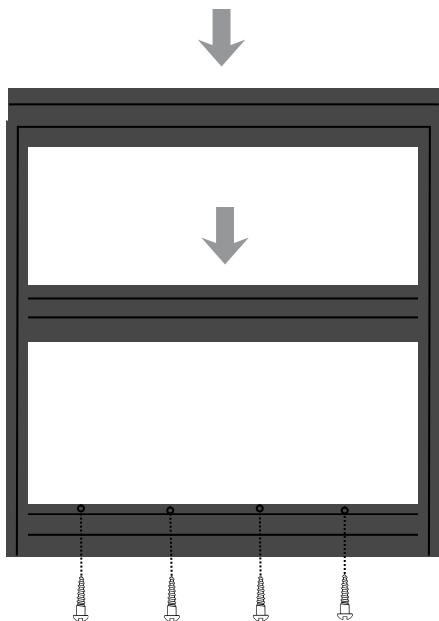

1. Install slatwall from bottom to top. Ensure the grooved side faces outward. Use a level to keep the panel perfectly horizontal (level provided).
2. After installing each panel, secure it with screws (3–4 screws recommended).
3. Insert the slatwall panel from the top and slide it downward along the edge trims. Ensure the panels are tightly joined and flush against the wall.
4. After installing all slatwall panels, attach the top **J** edge trim.
5. For 4' × 8' products, additional edge trims may be installed as needed to complete the slatwall layout.

**Safety Reminder:** A second person is strongly recommended for this step to prevent the panel from shifting while aligning the holes.

## Step 4 — Installation Complete



Installation Complete.

## After Installation

- Make sure the trim sits flush against the wall for a clean, professional appearance.
- Test a few lightweight hooks or accessories to confirm the panel is securely fastened.
- Ensure all screws are fully tightened and that the panel does not flex under gentle pressure.
- Your slatwall is now ready for hooks, bins, baskets, and other compatible storage accessories.

**Questions, problems, missing parts?**  
**Before returning to the store, Please contact your sales platform!**