

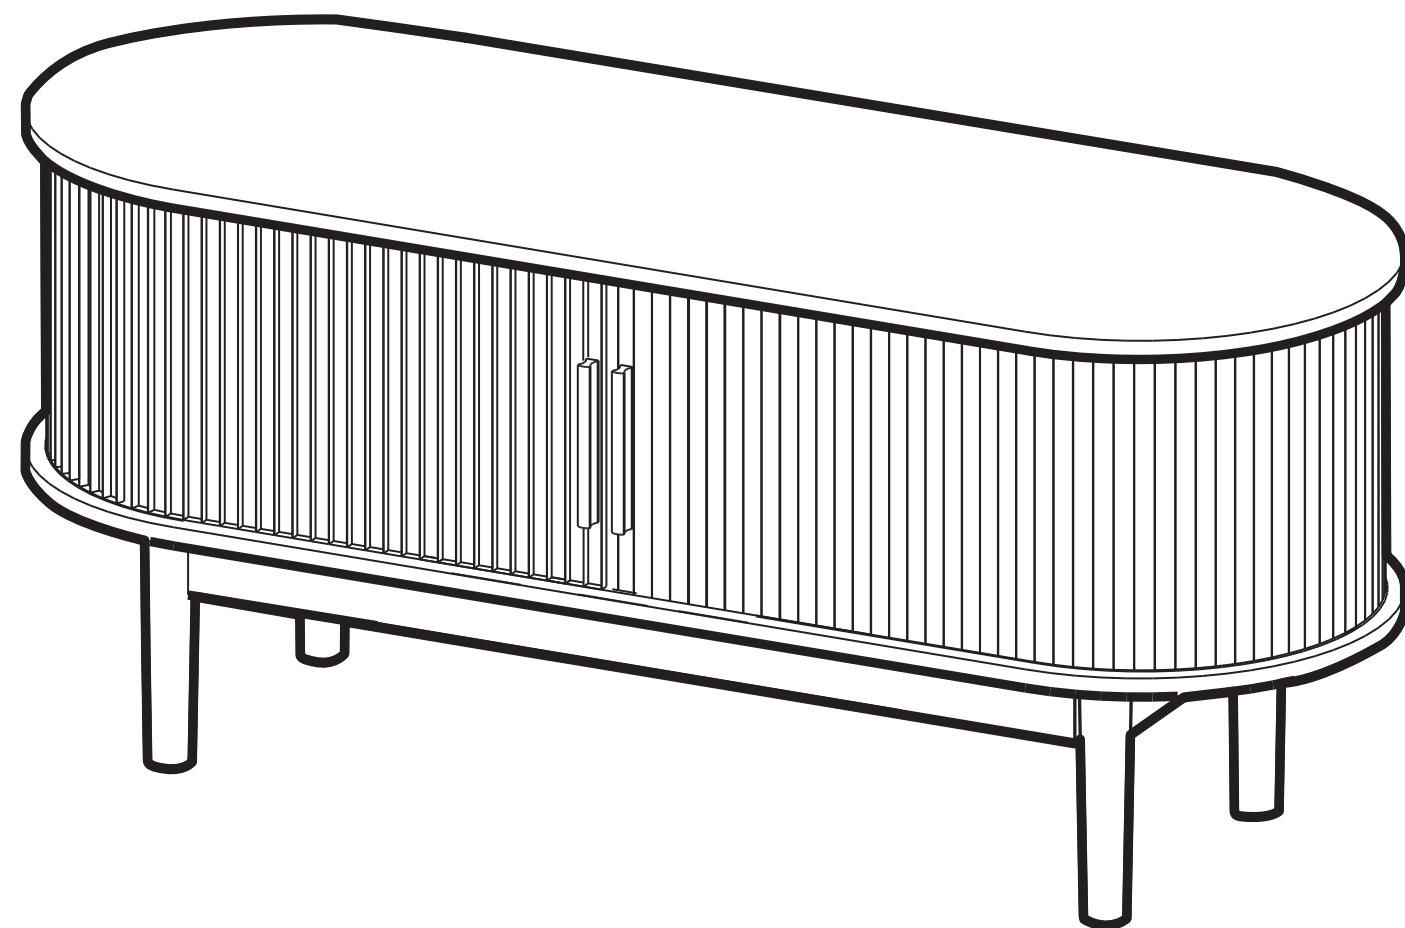




Get in
Touch?

ASSEMBLY
INSTRUCTIONS


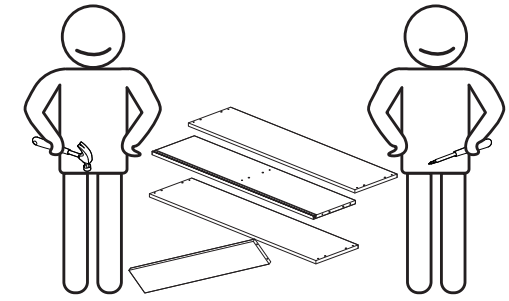


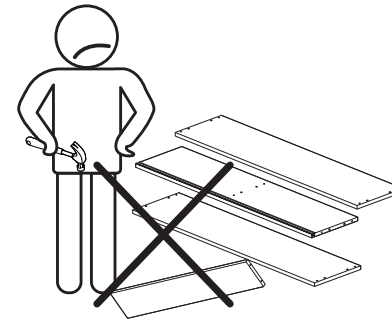

We recommend at least 2 people for the assembly.

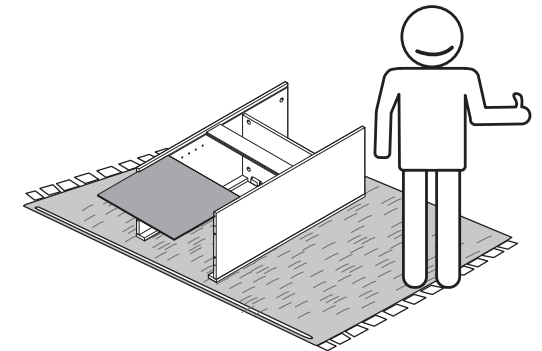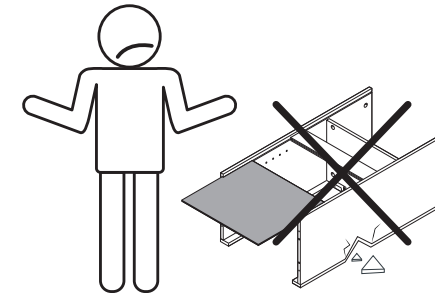


To prevent any damage during assembly, place a mat under the pieces.

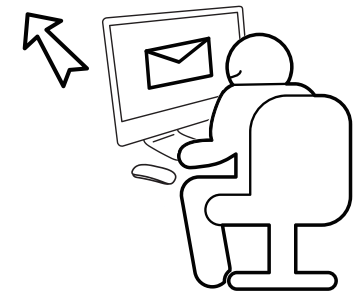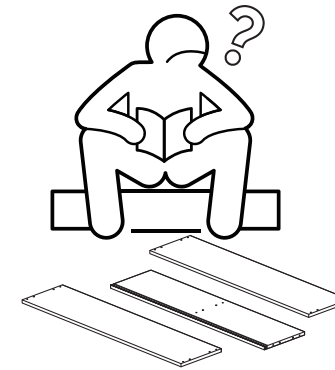


PARTS DIAGRAM



Check if all parts and hardware are included. Contact us via email: support@servicetimely.com if there is any part missing or damaged.

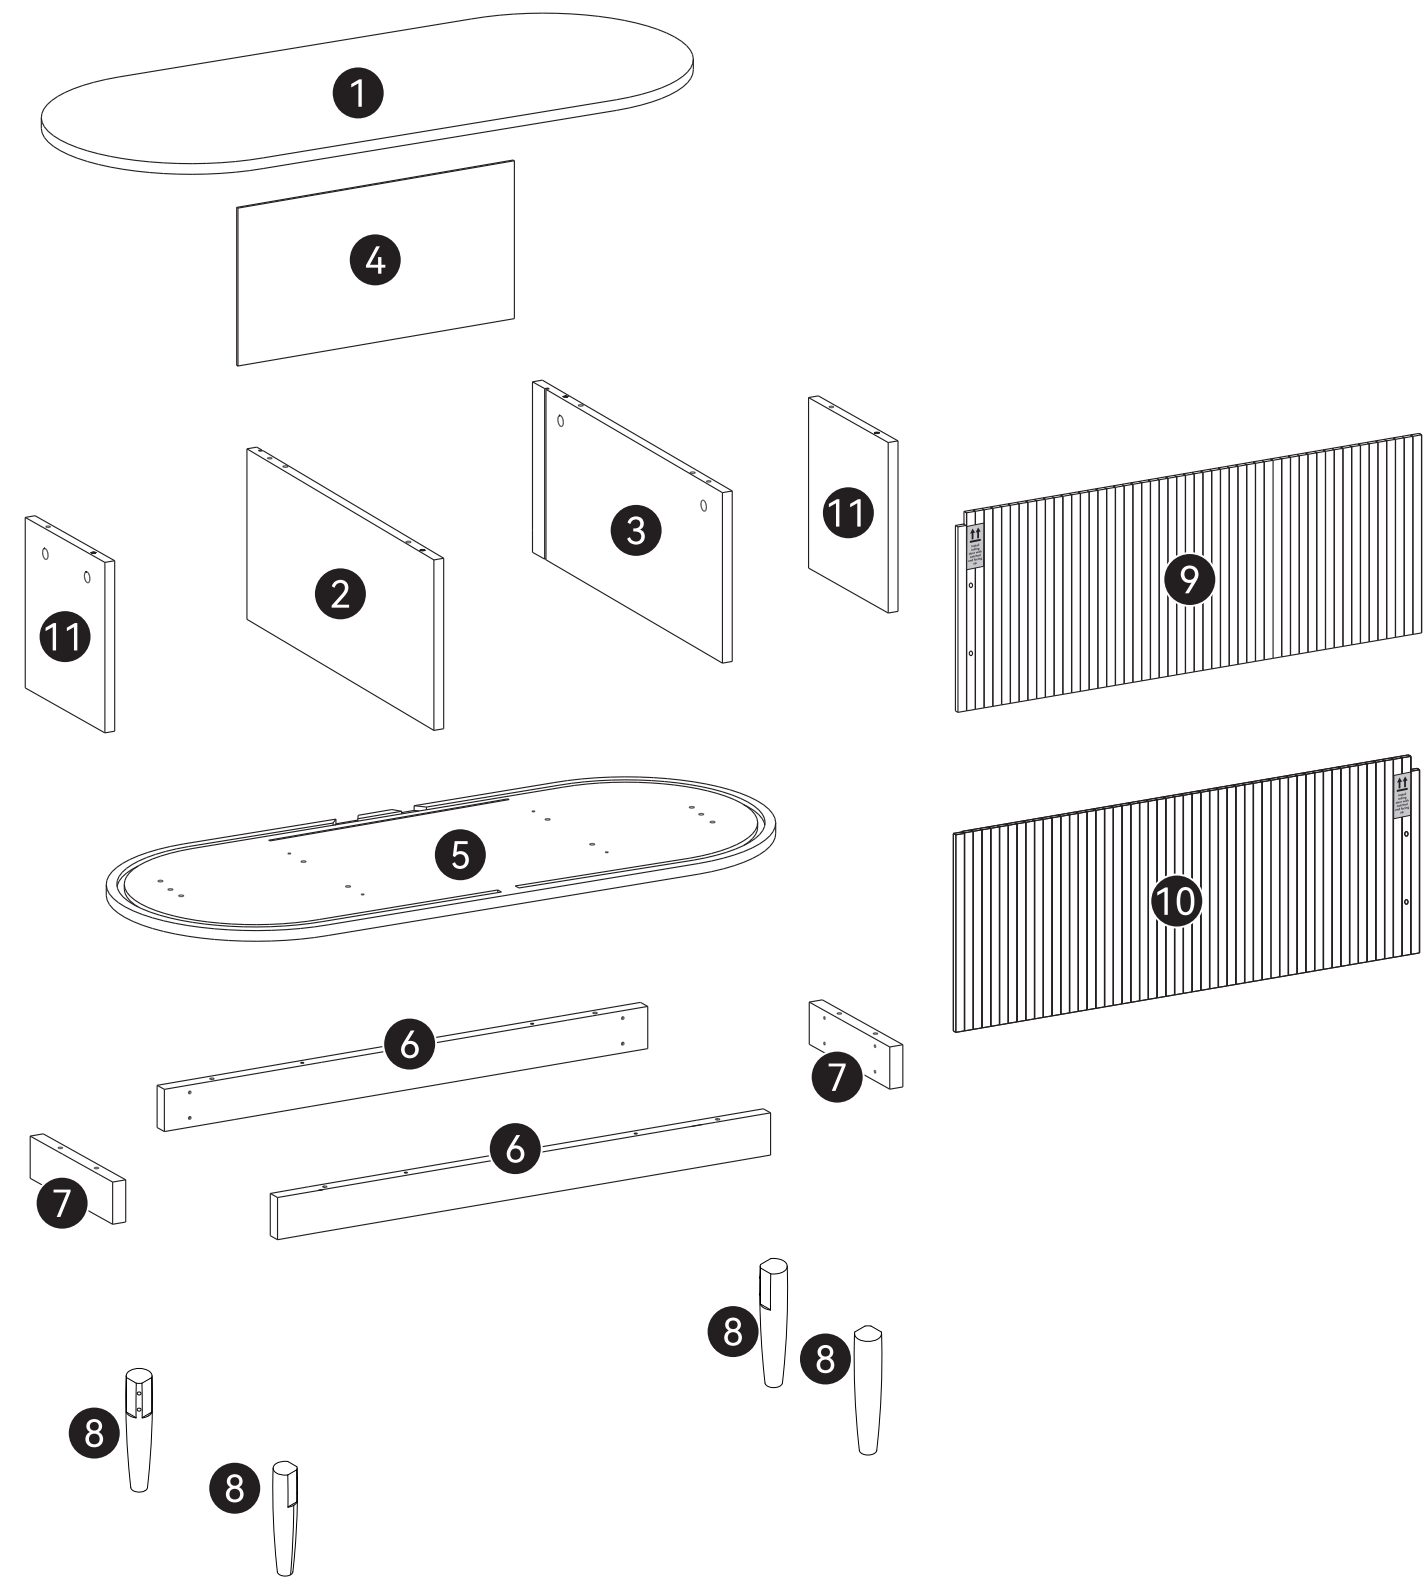

PARTS LIST

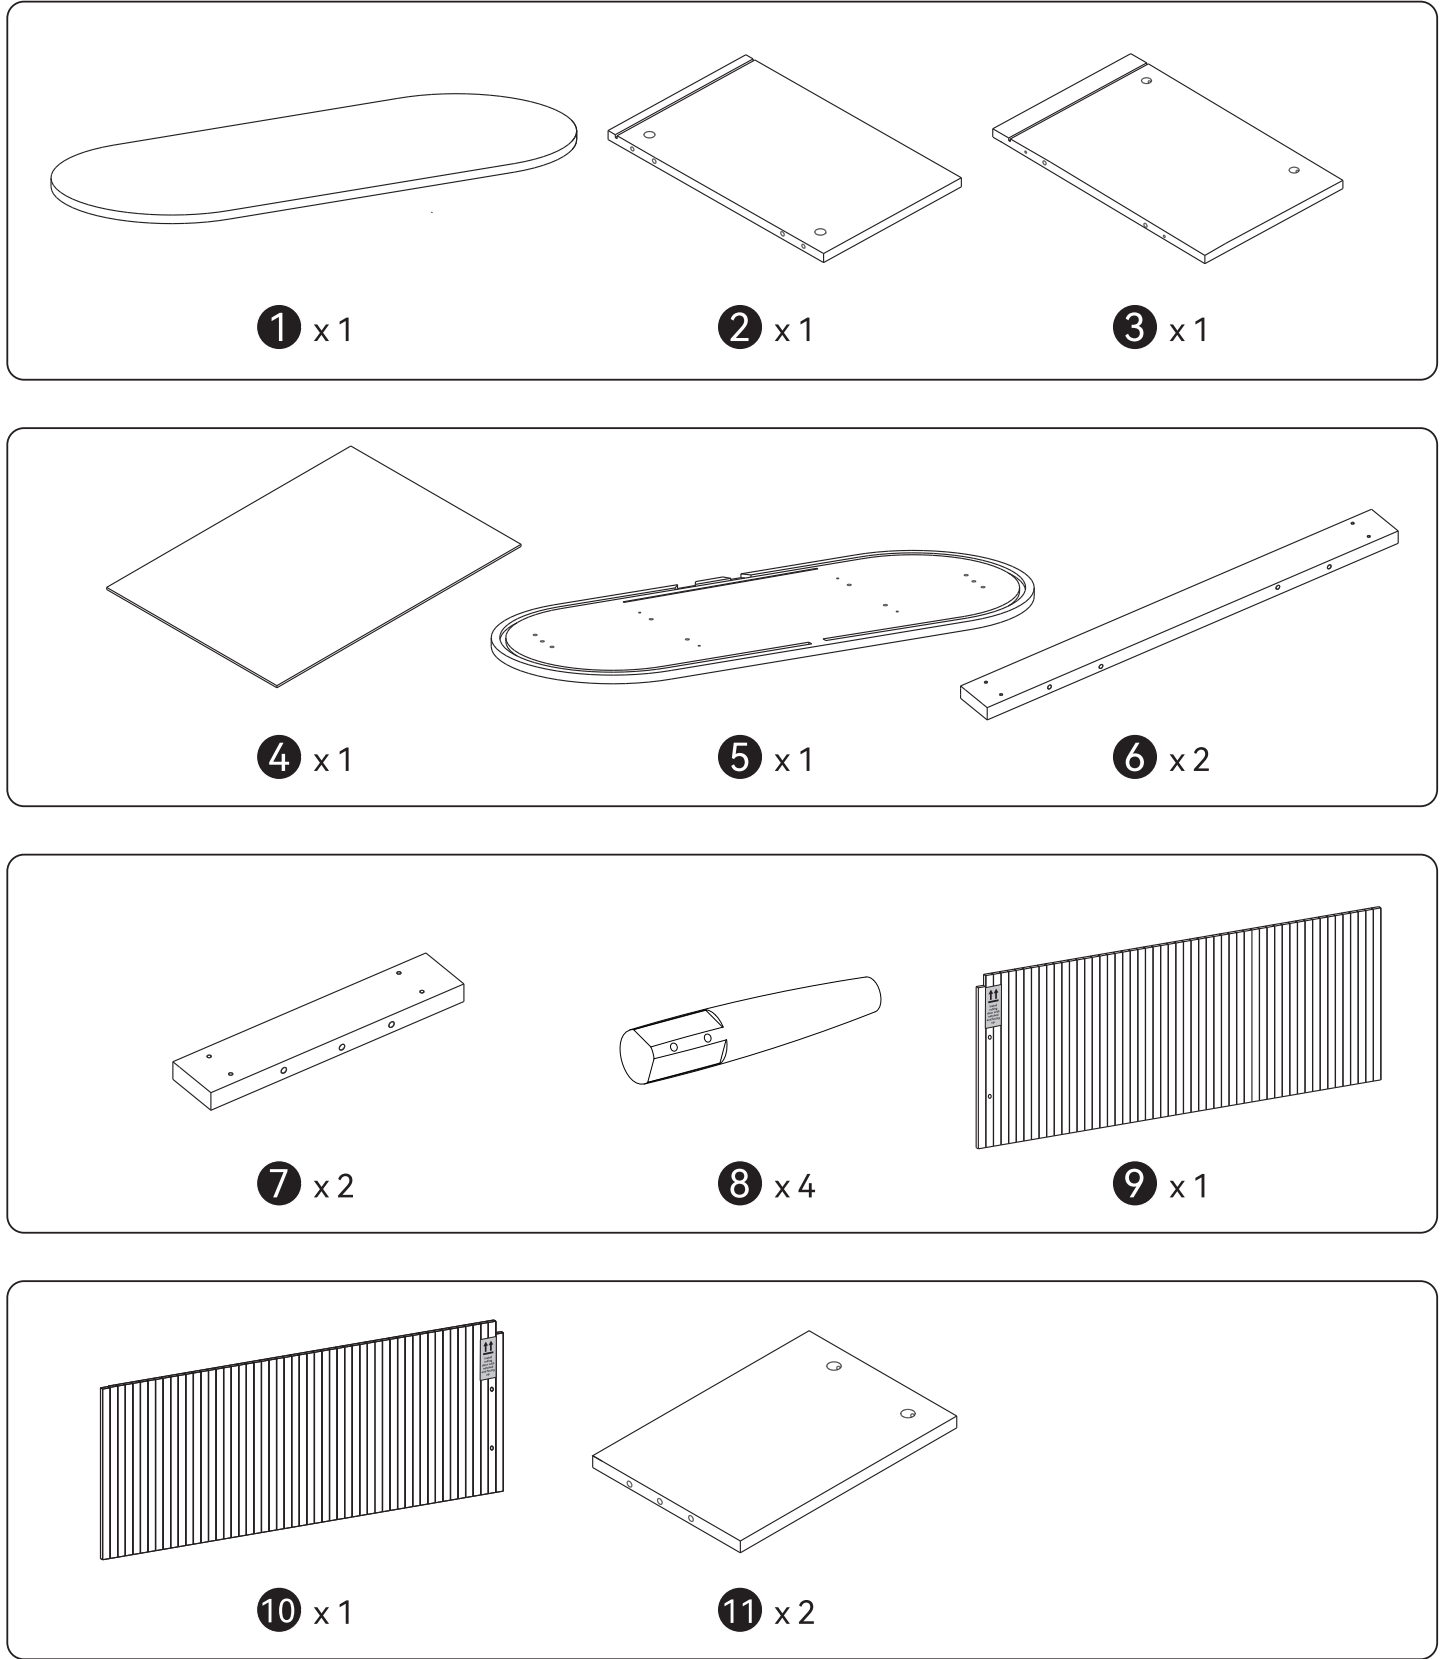


HARDWARES

SPARE PARTS




The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

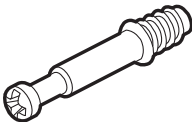


M6x35mm
A x 8



M15x10mm
B x 8

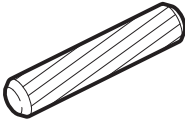


Ø6x30mm
C x 16



M4x35mm
D x 8




M4x14mm
E x 4

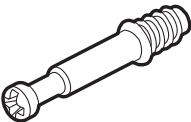


M6x35mm
A x 1



M15x10mm
B x 1

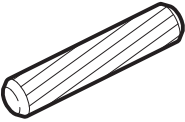

Ø6x30mm
C x 1




M4x35mm
D x 1



M3x14mm
F x 4



M4x50mm
G x 8




M6x35mm
H x 8



I x 8



J x 8

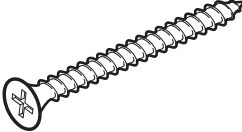


M4x50mm
G x 1




M4x14mm
P x 1




K x 4



L x 2

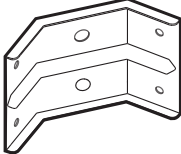

M x 4

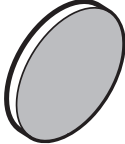


Ø25x3mm
N x 4



O x 8



M4x14mm
P x 16

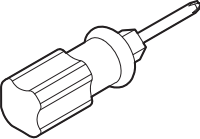

x 1










M4
x 1





CAM LOCK FASTEN SYSTEM

ASSEMBLY


 Insert the cam bolt into the hole, then insert the cam lock and tighten.

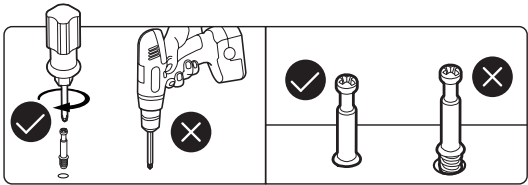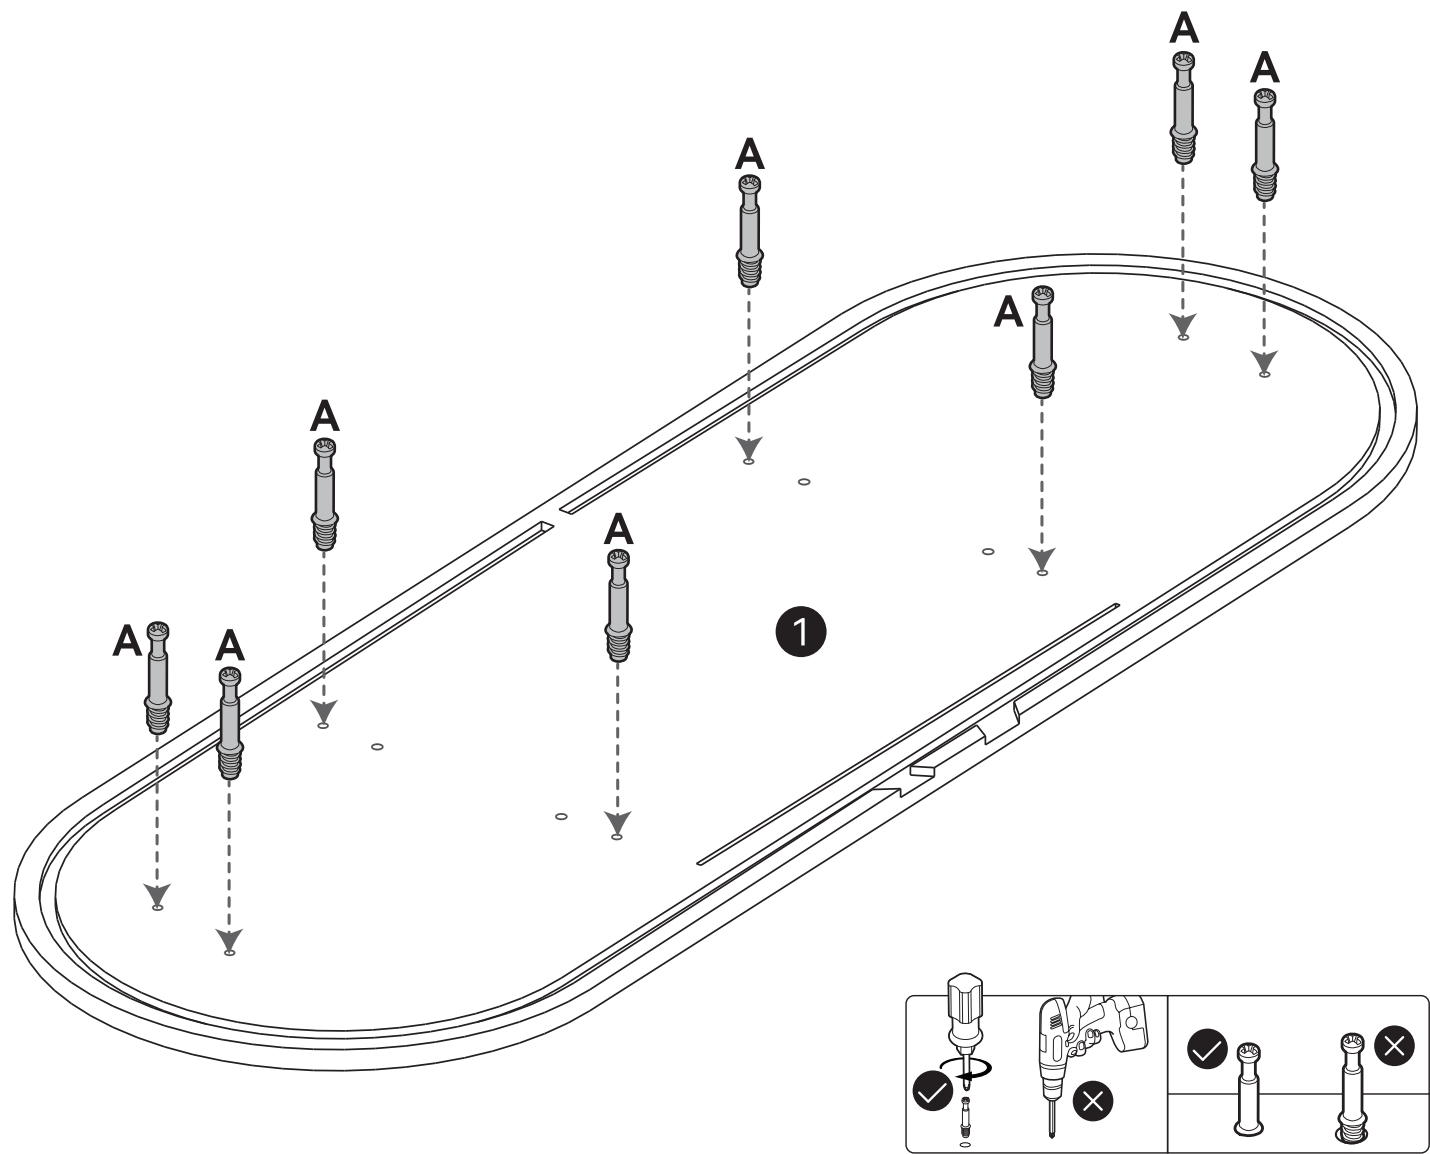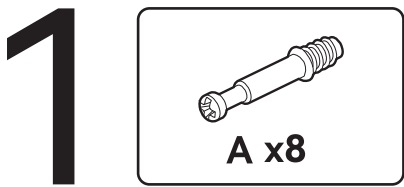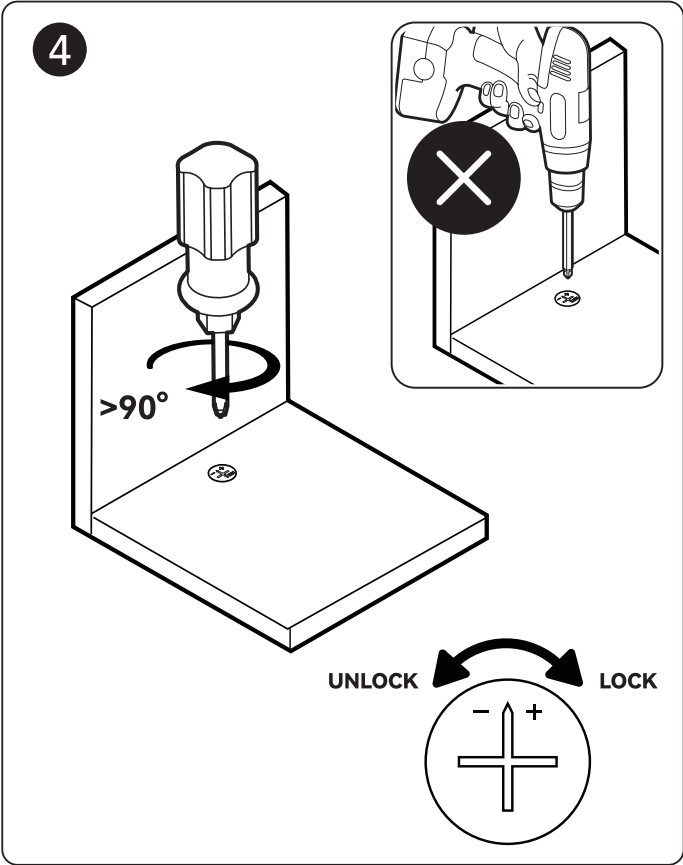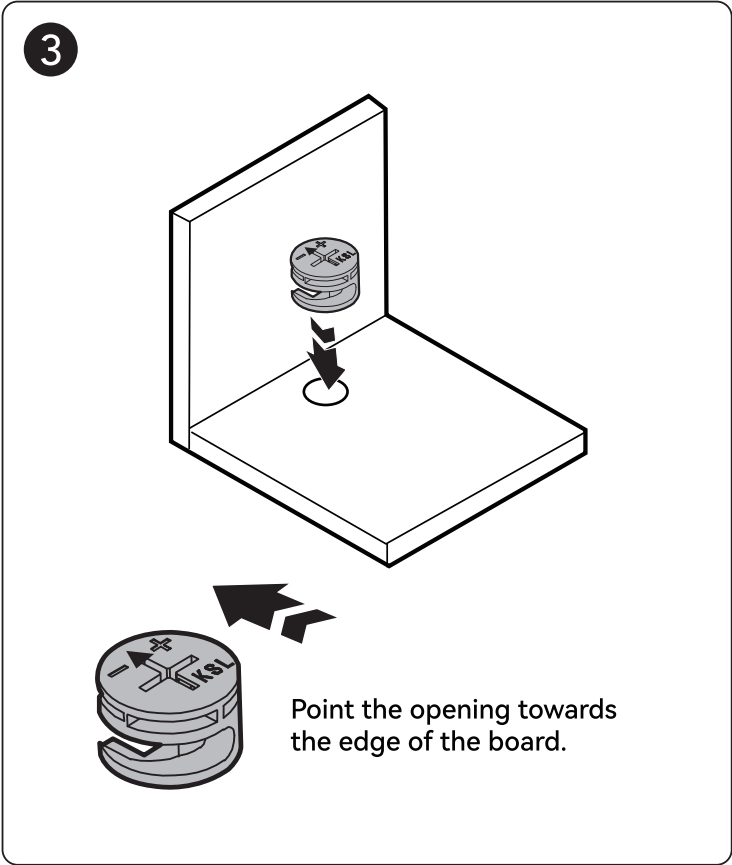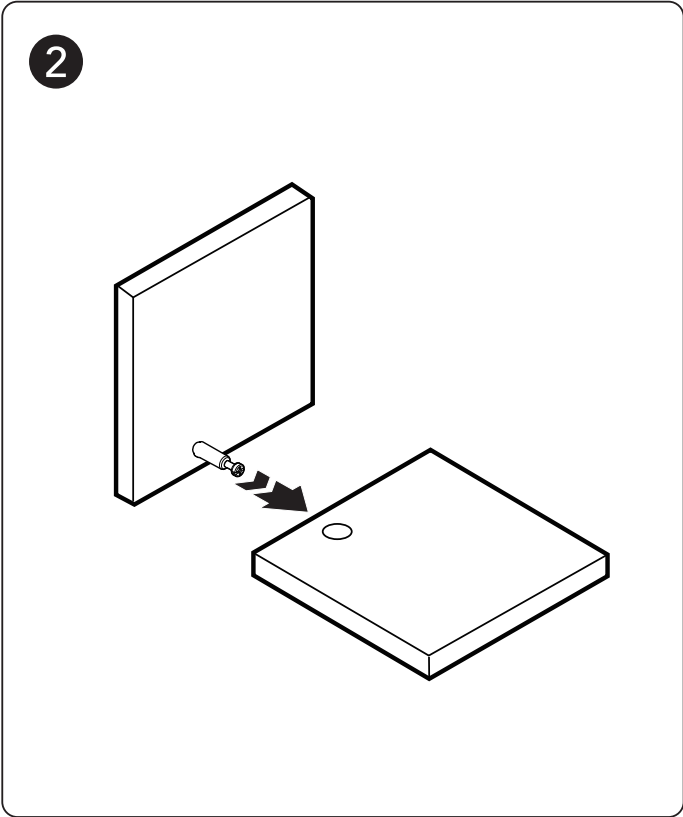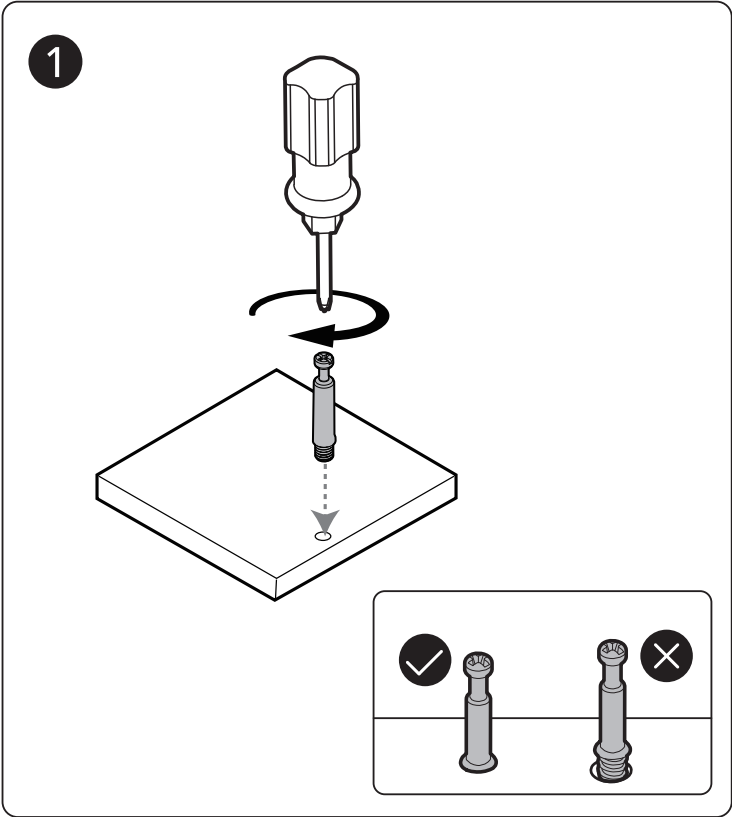




2

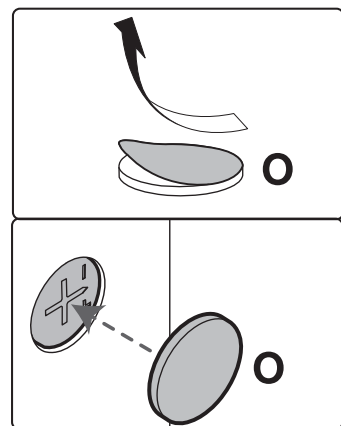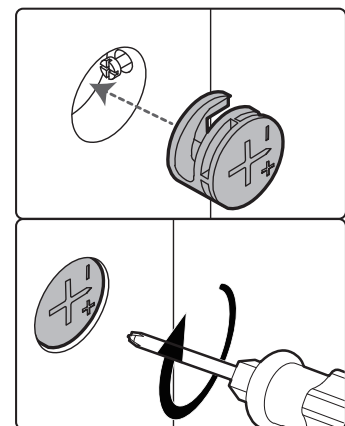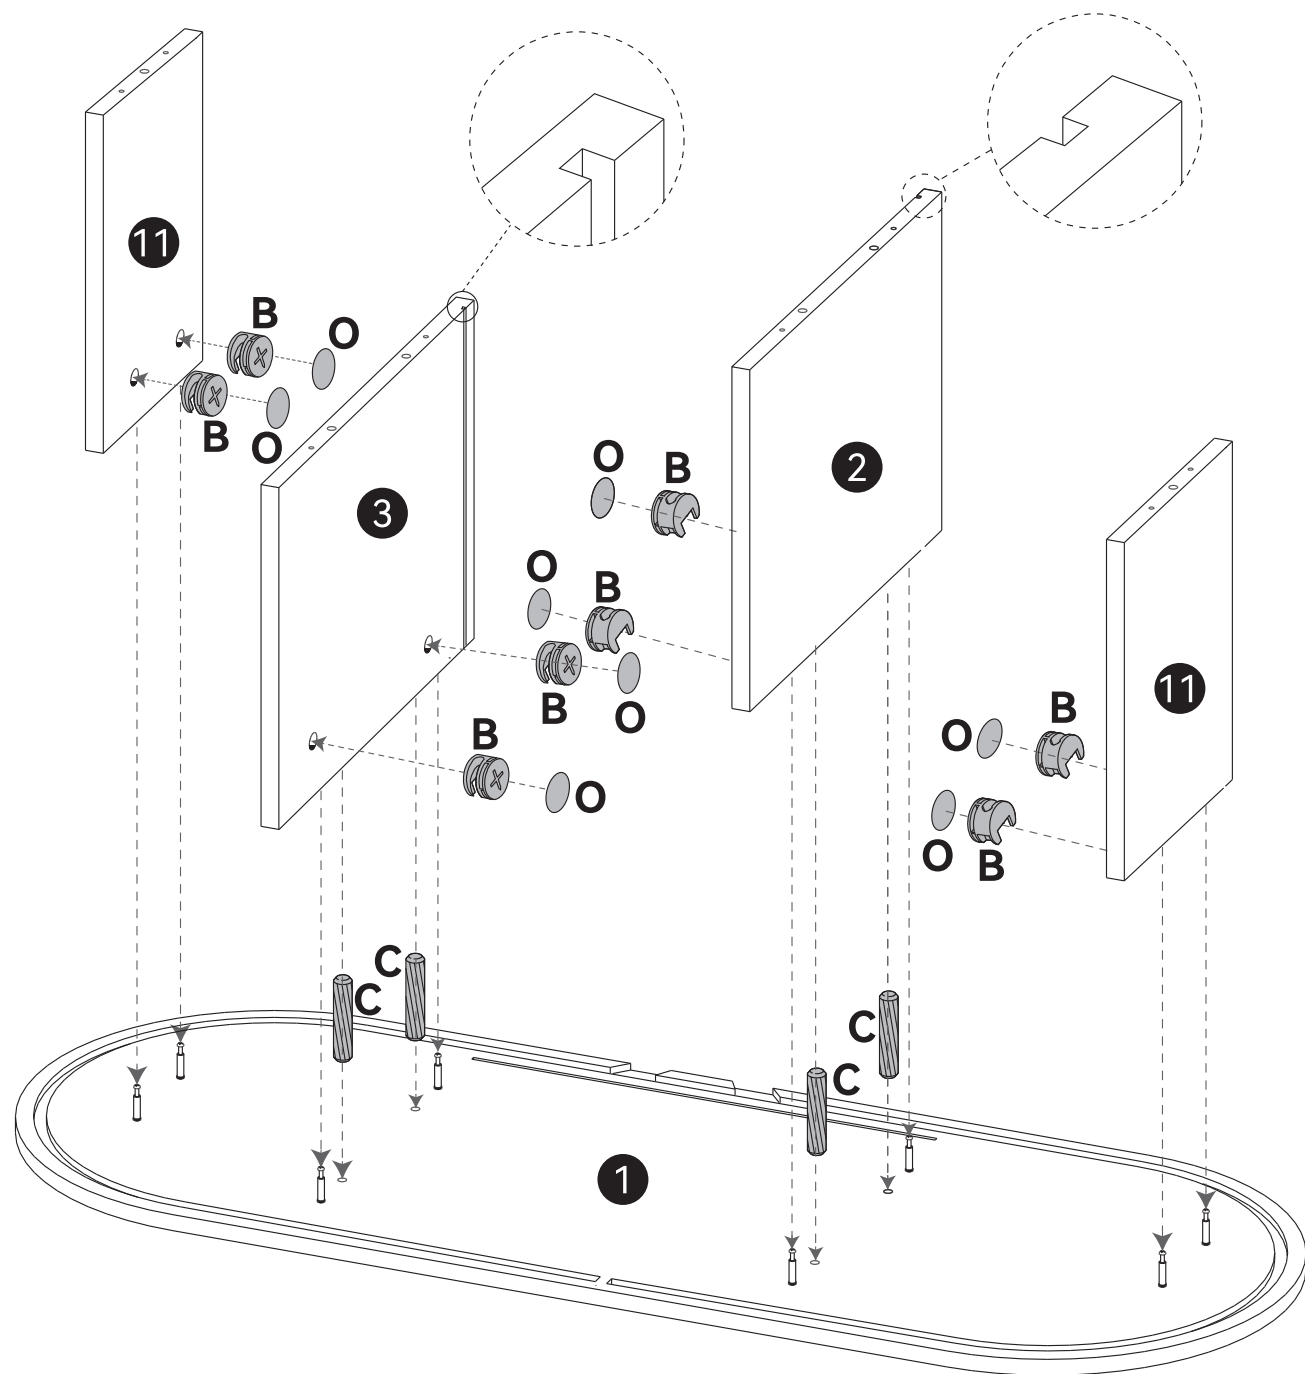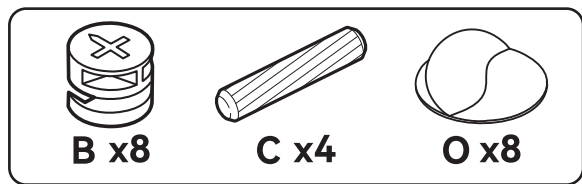



3

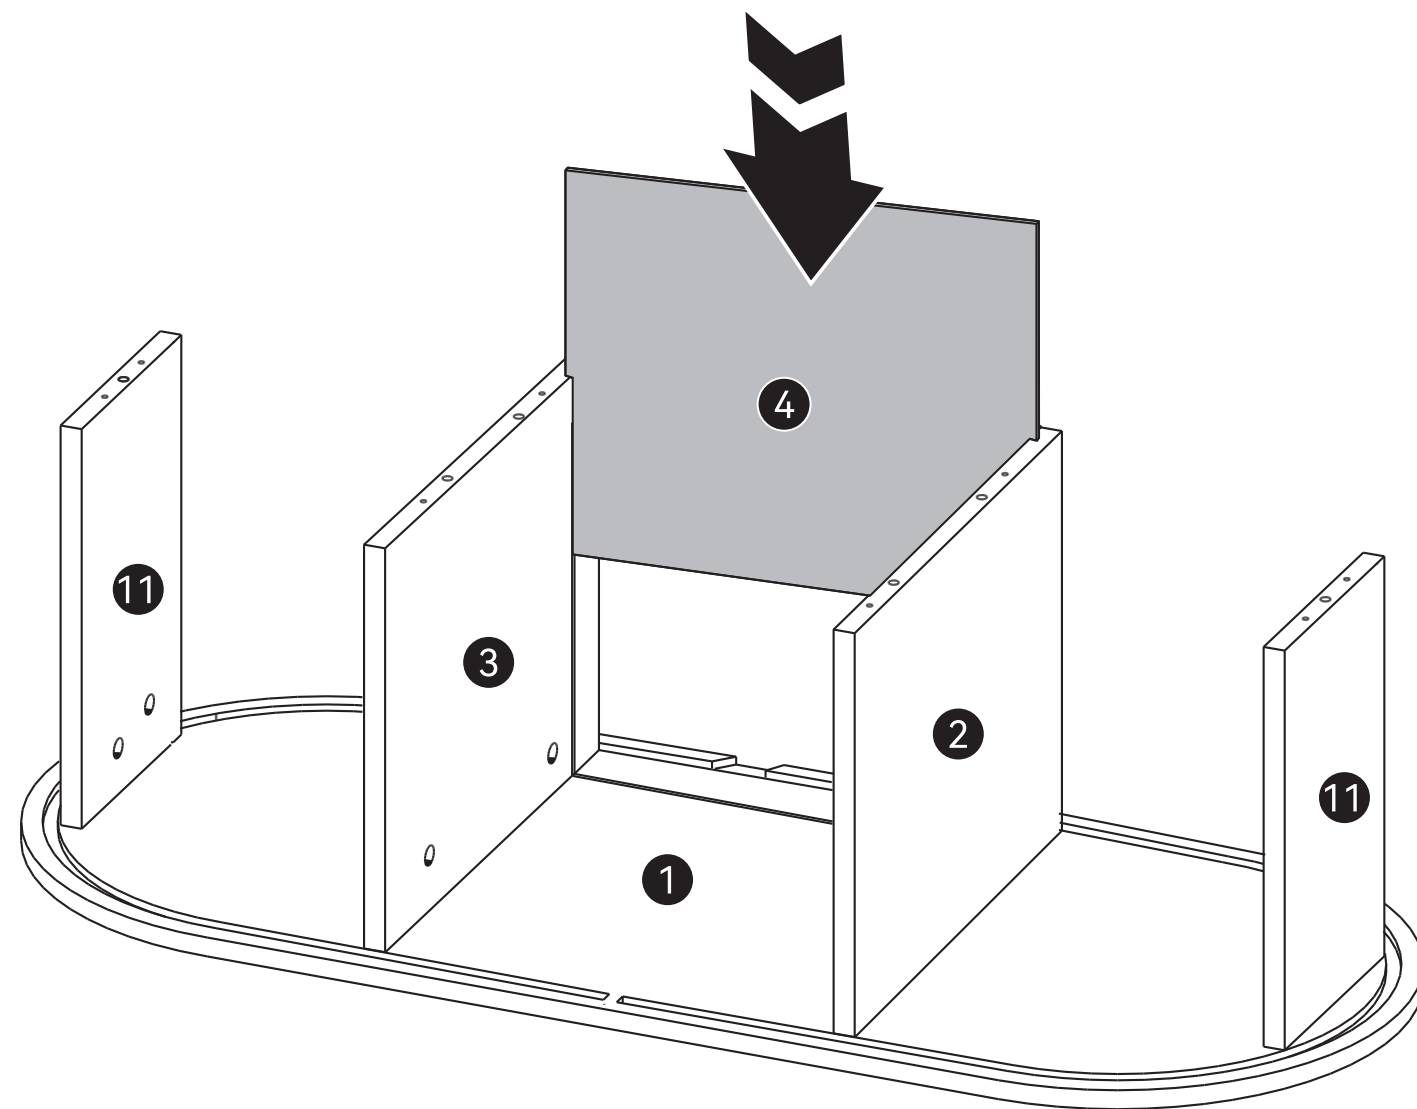




4

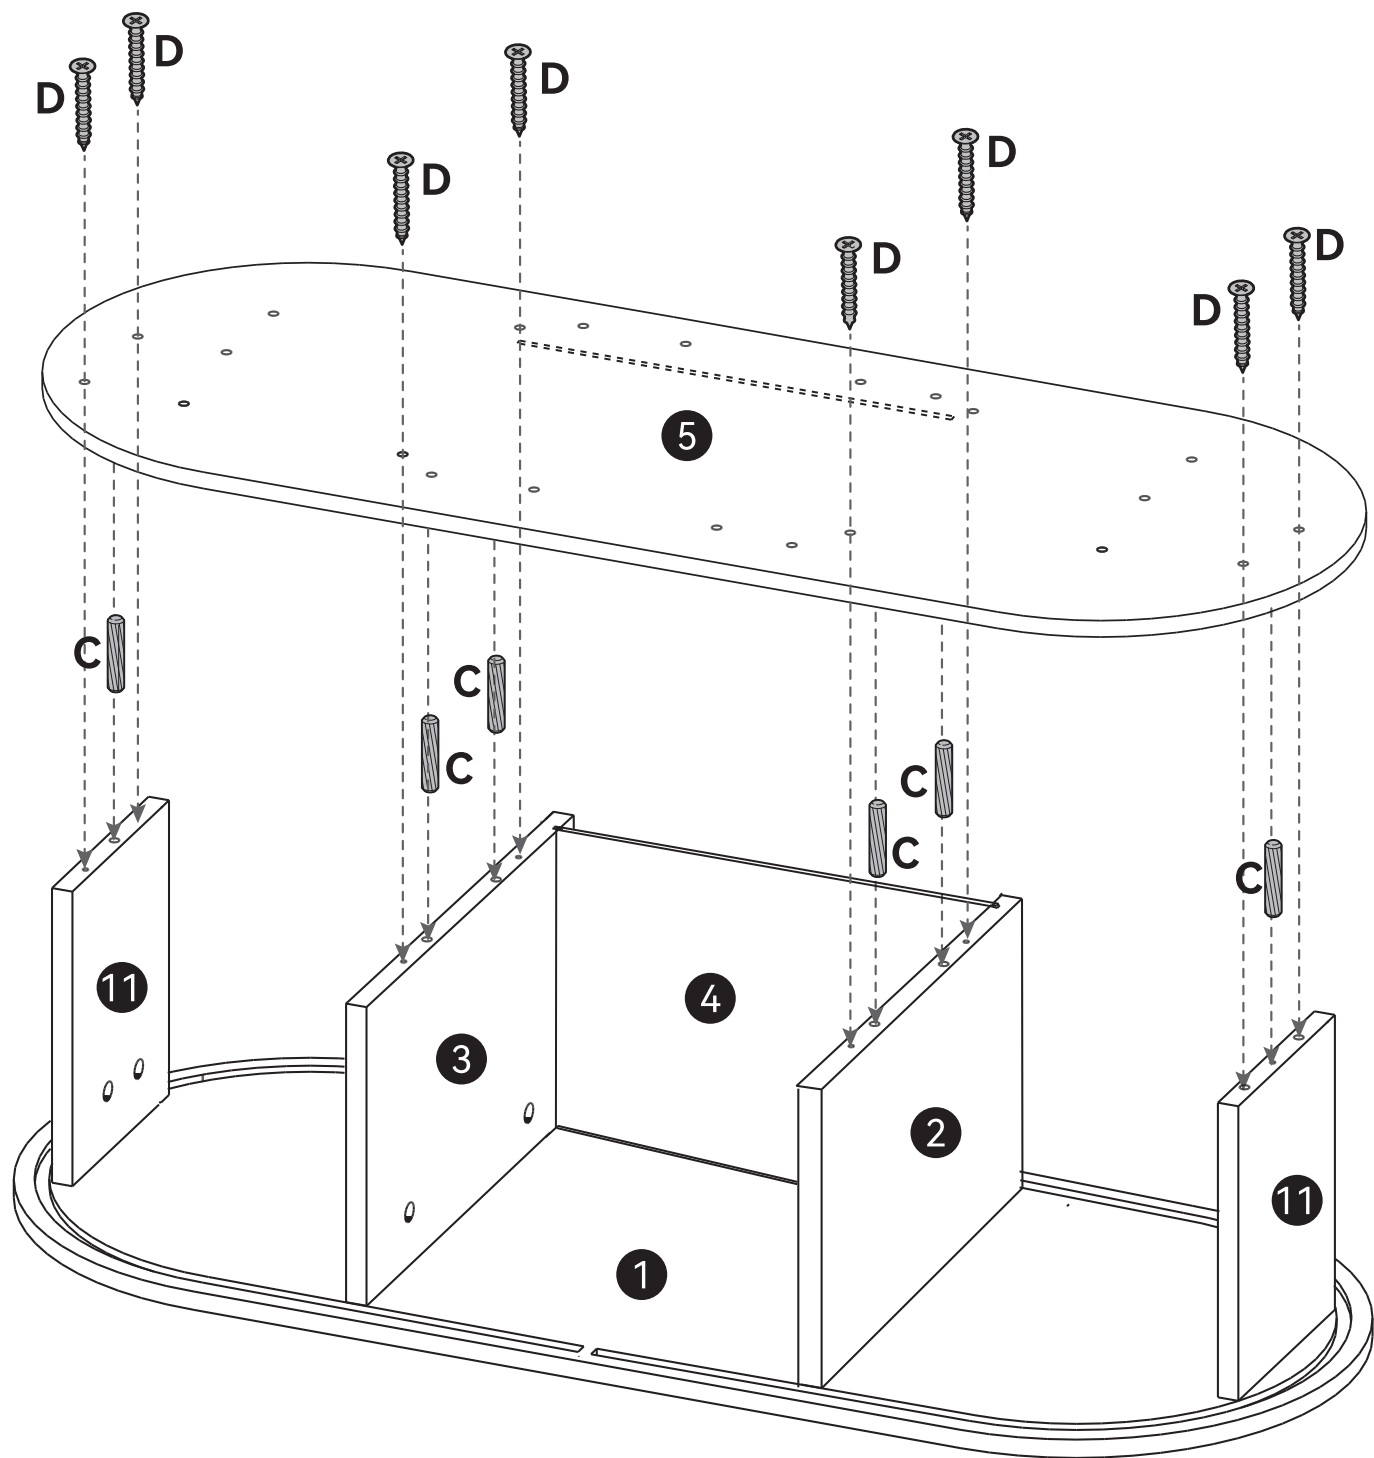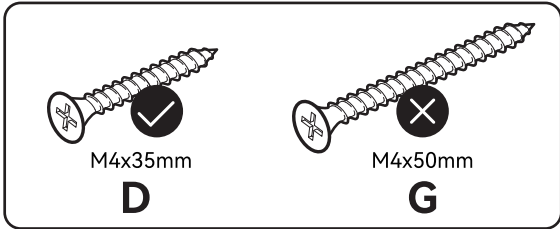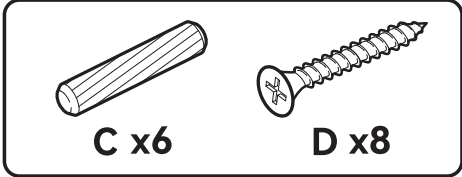




5

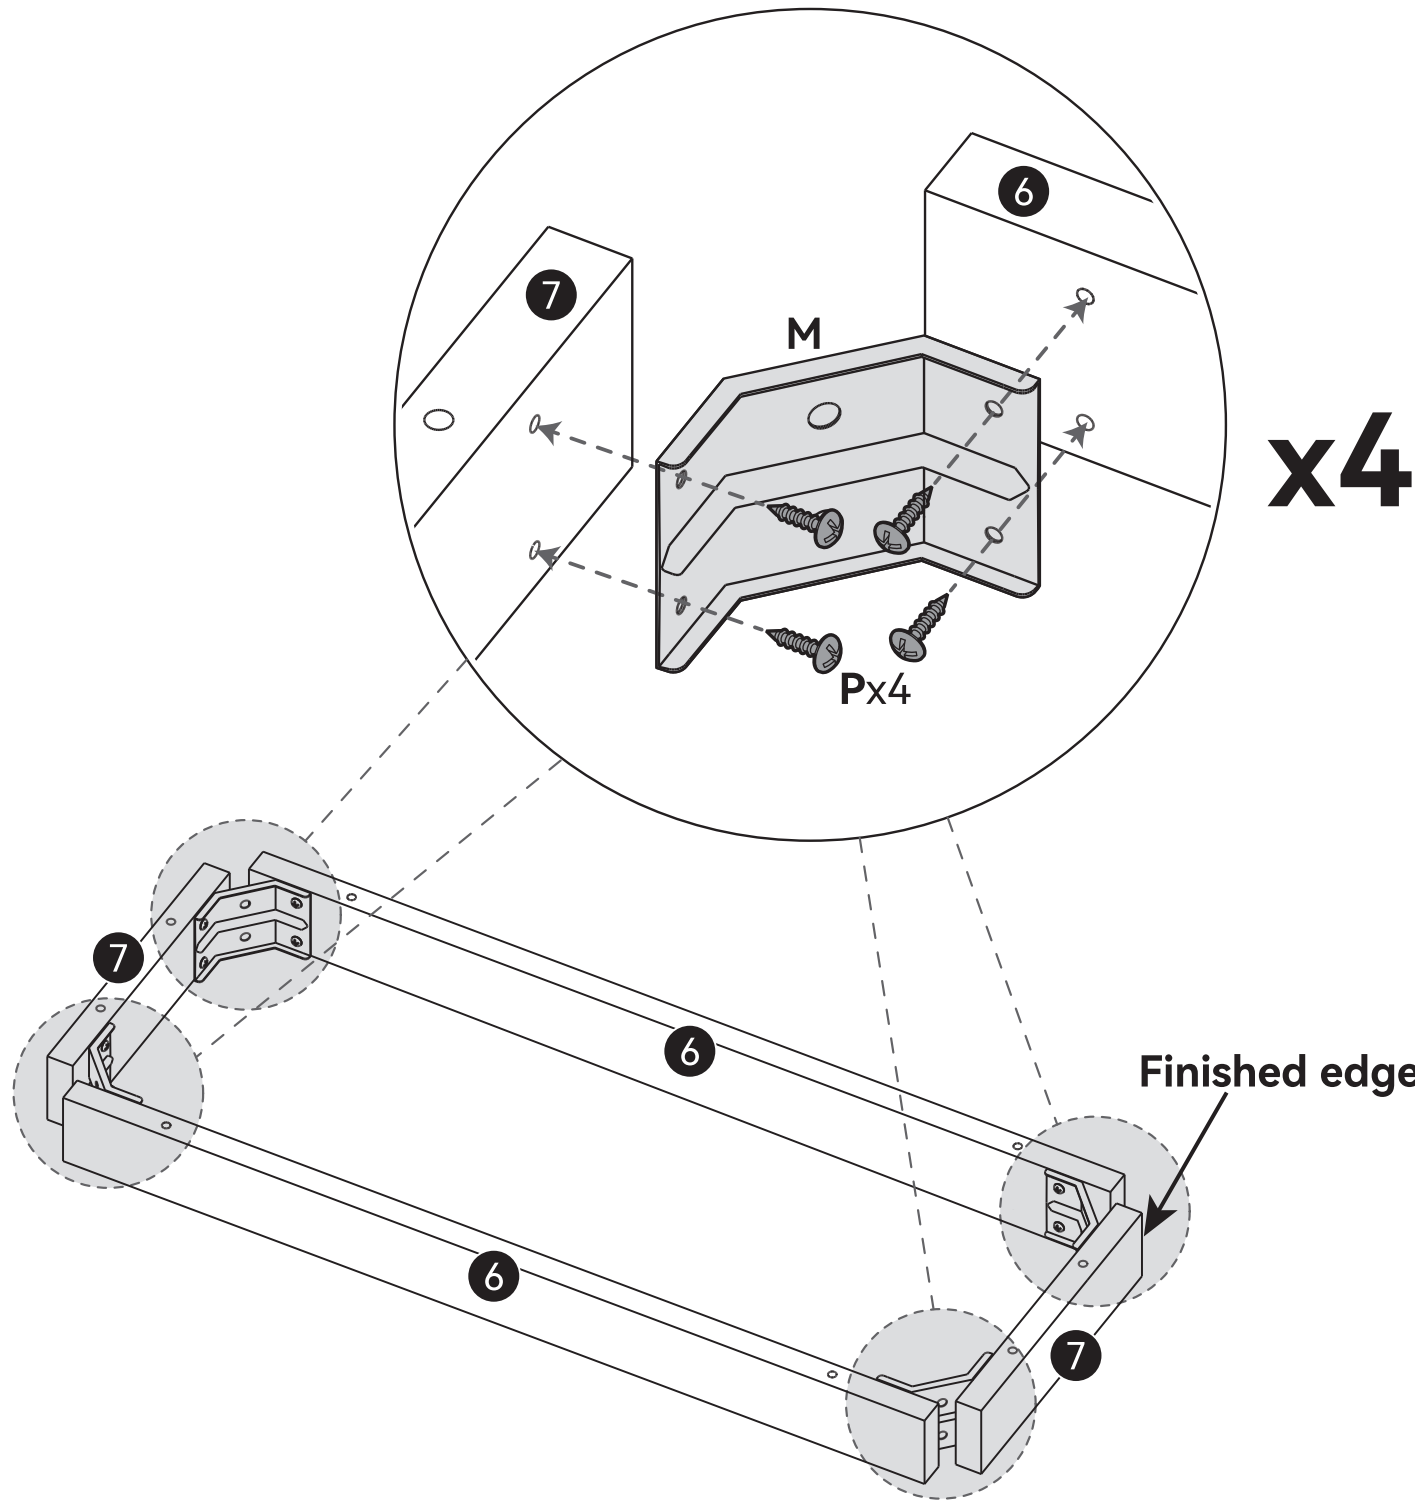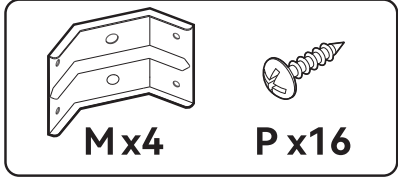


6

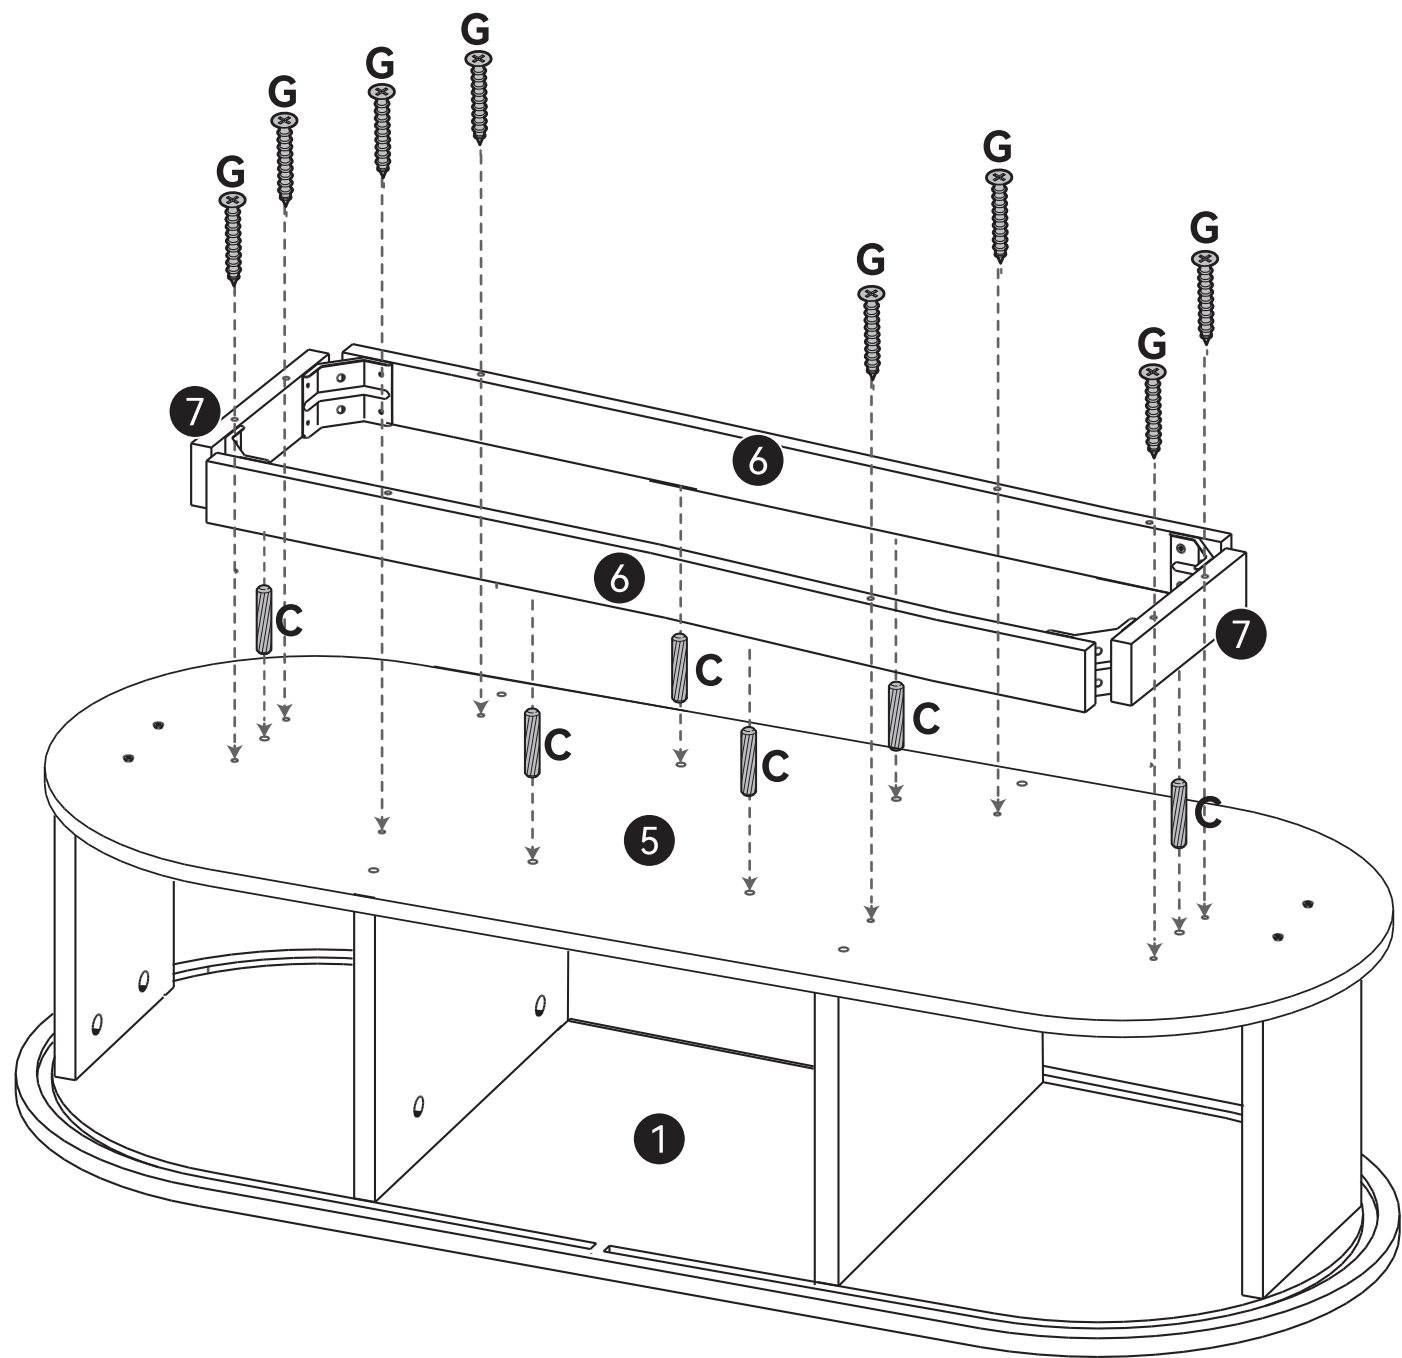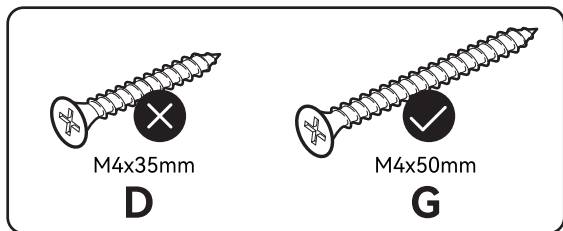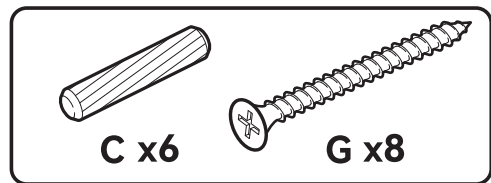




7

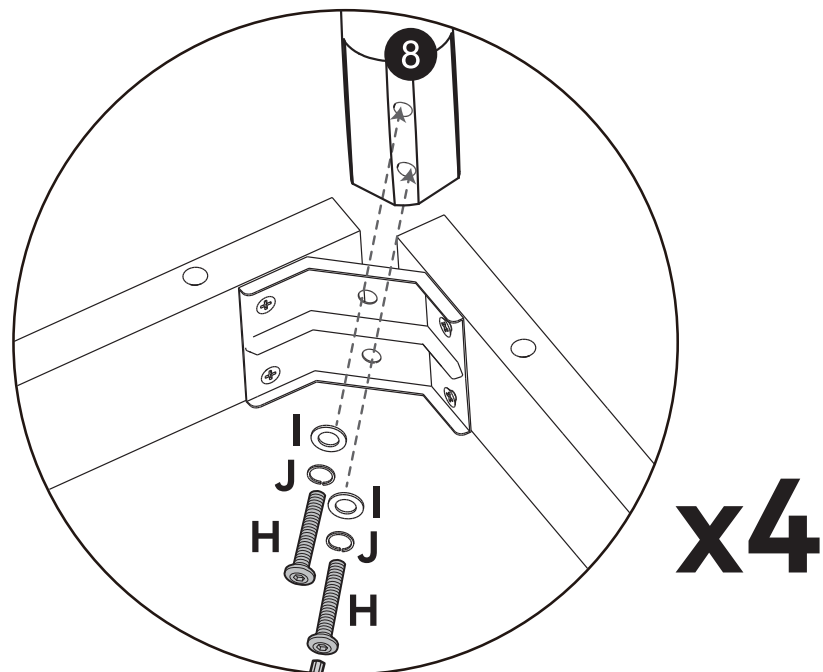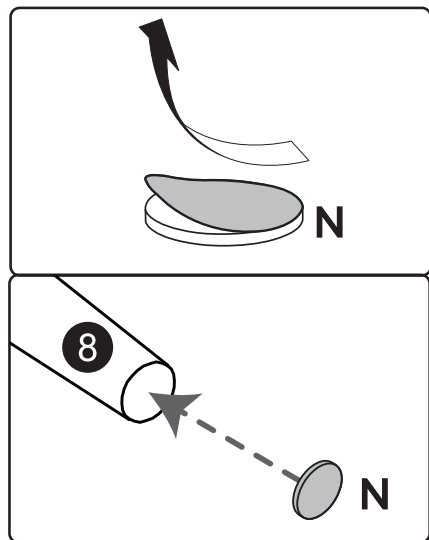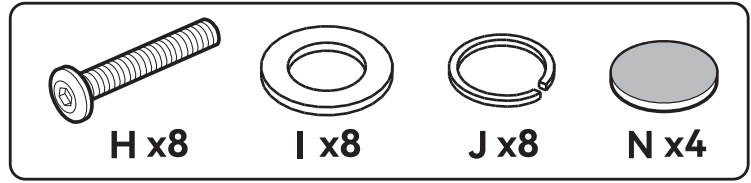

x4

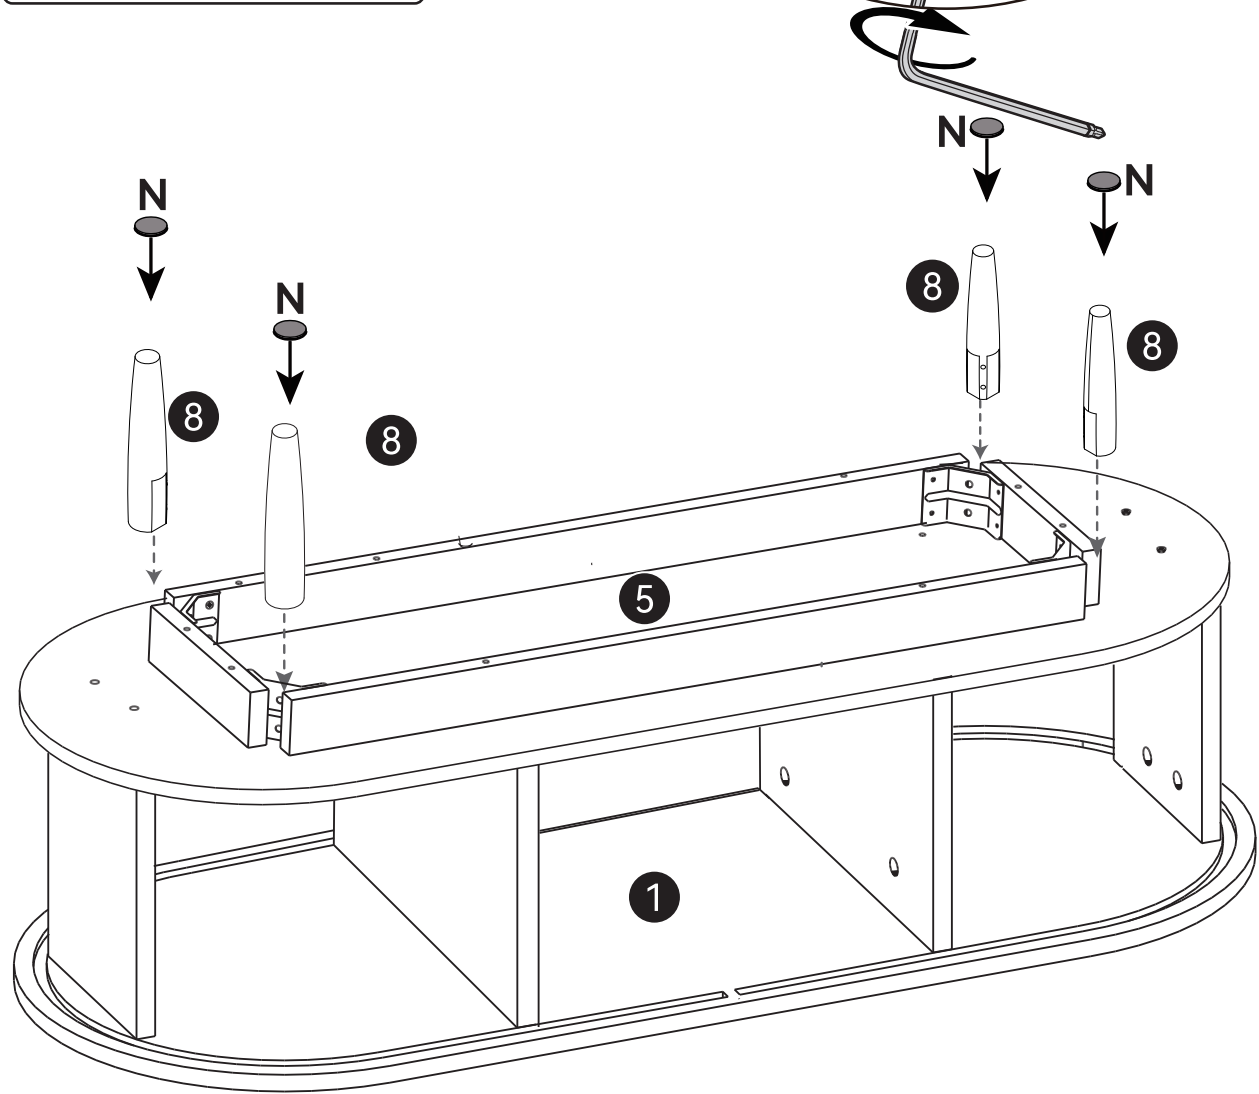



8

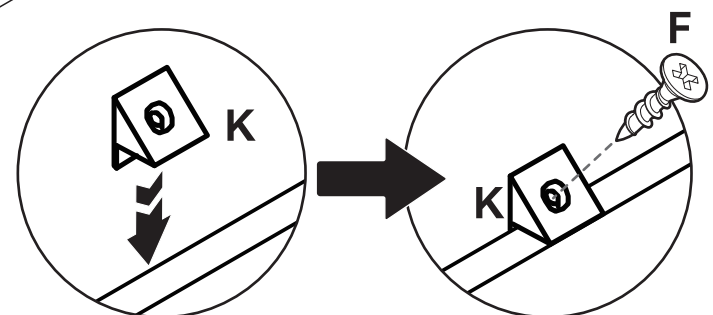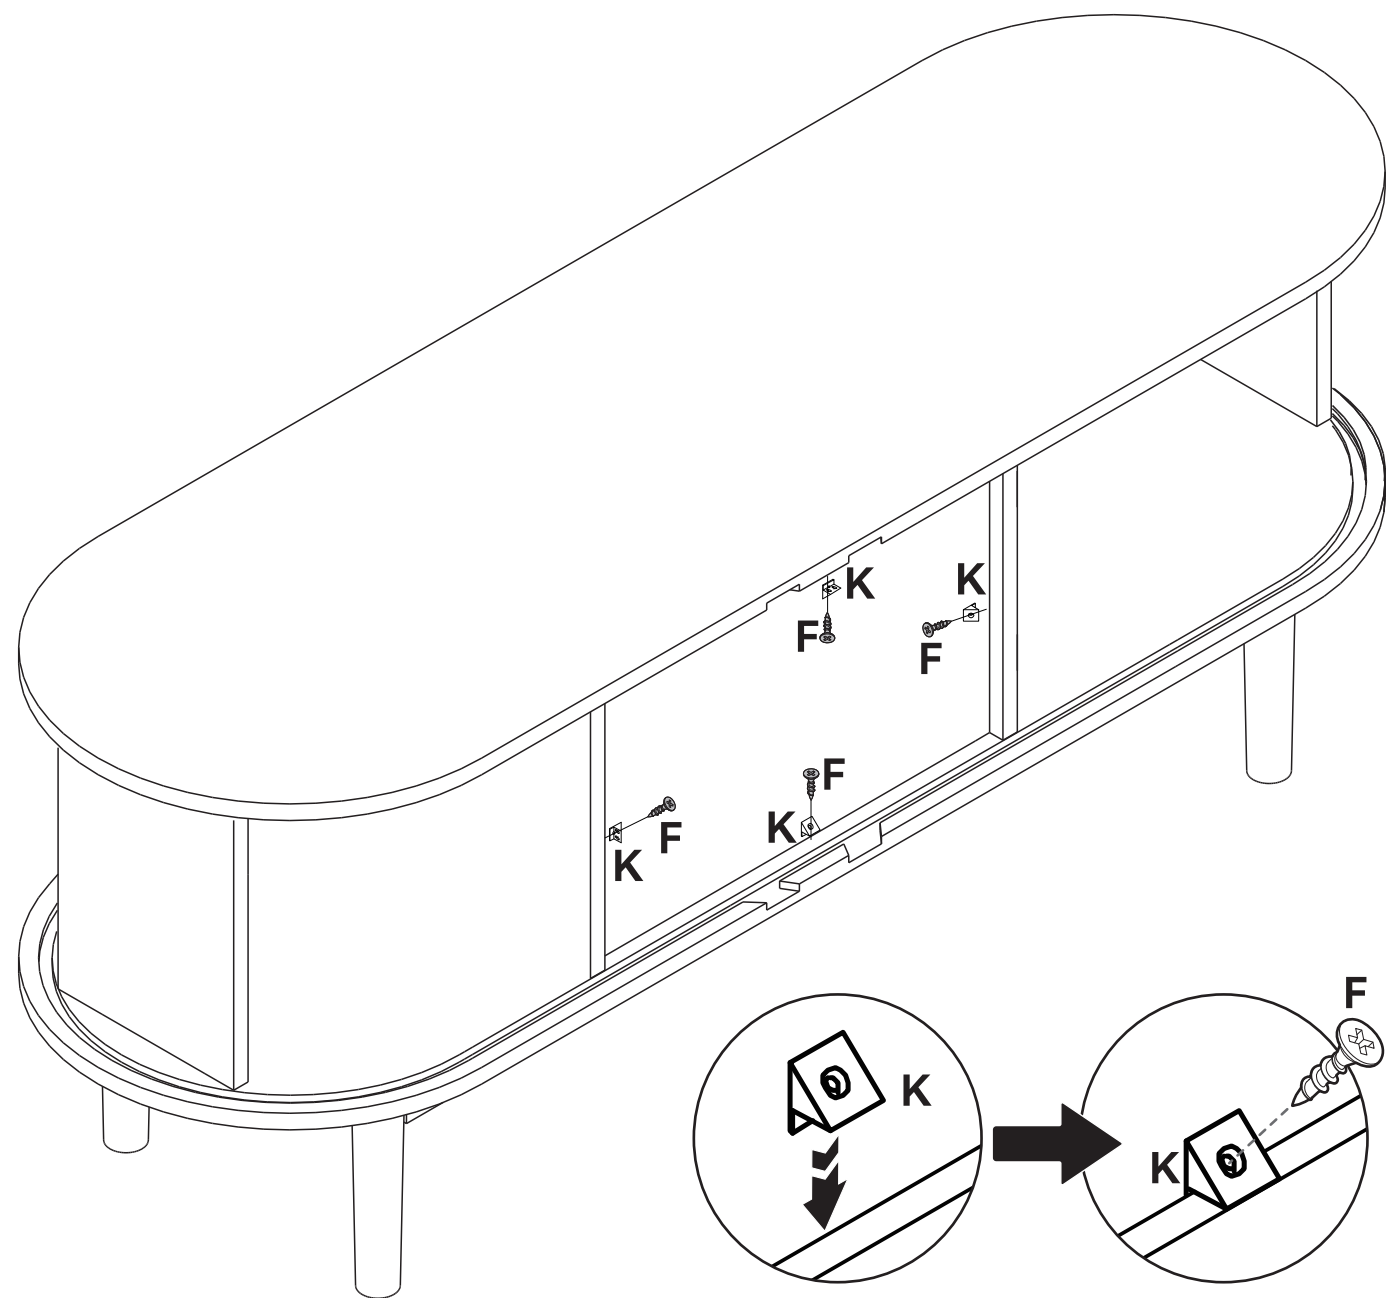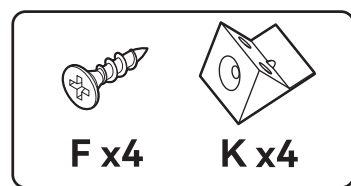

Insert back panel clip into gap.


Secure with screw.

9

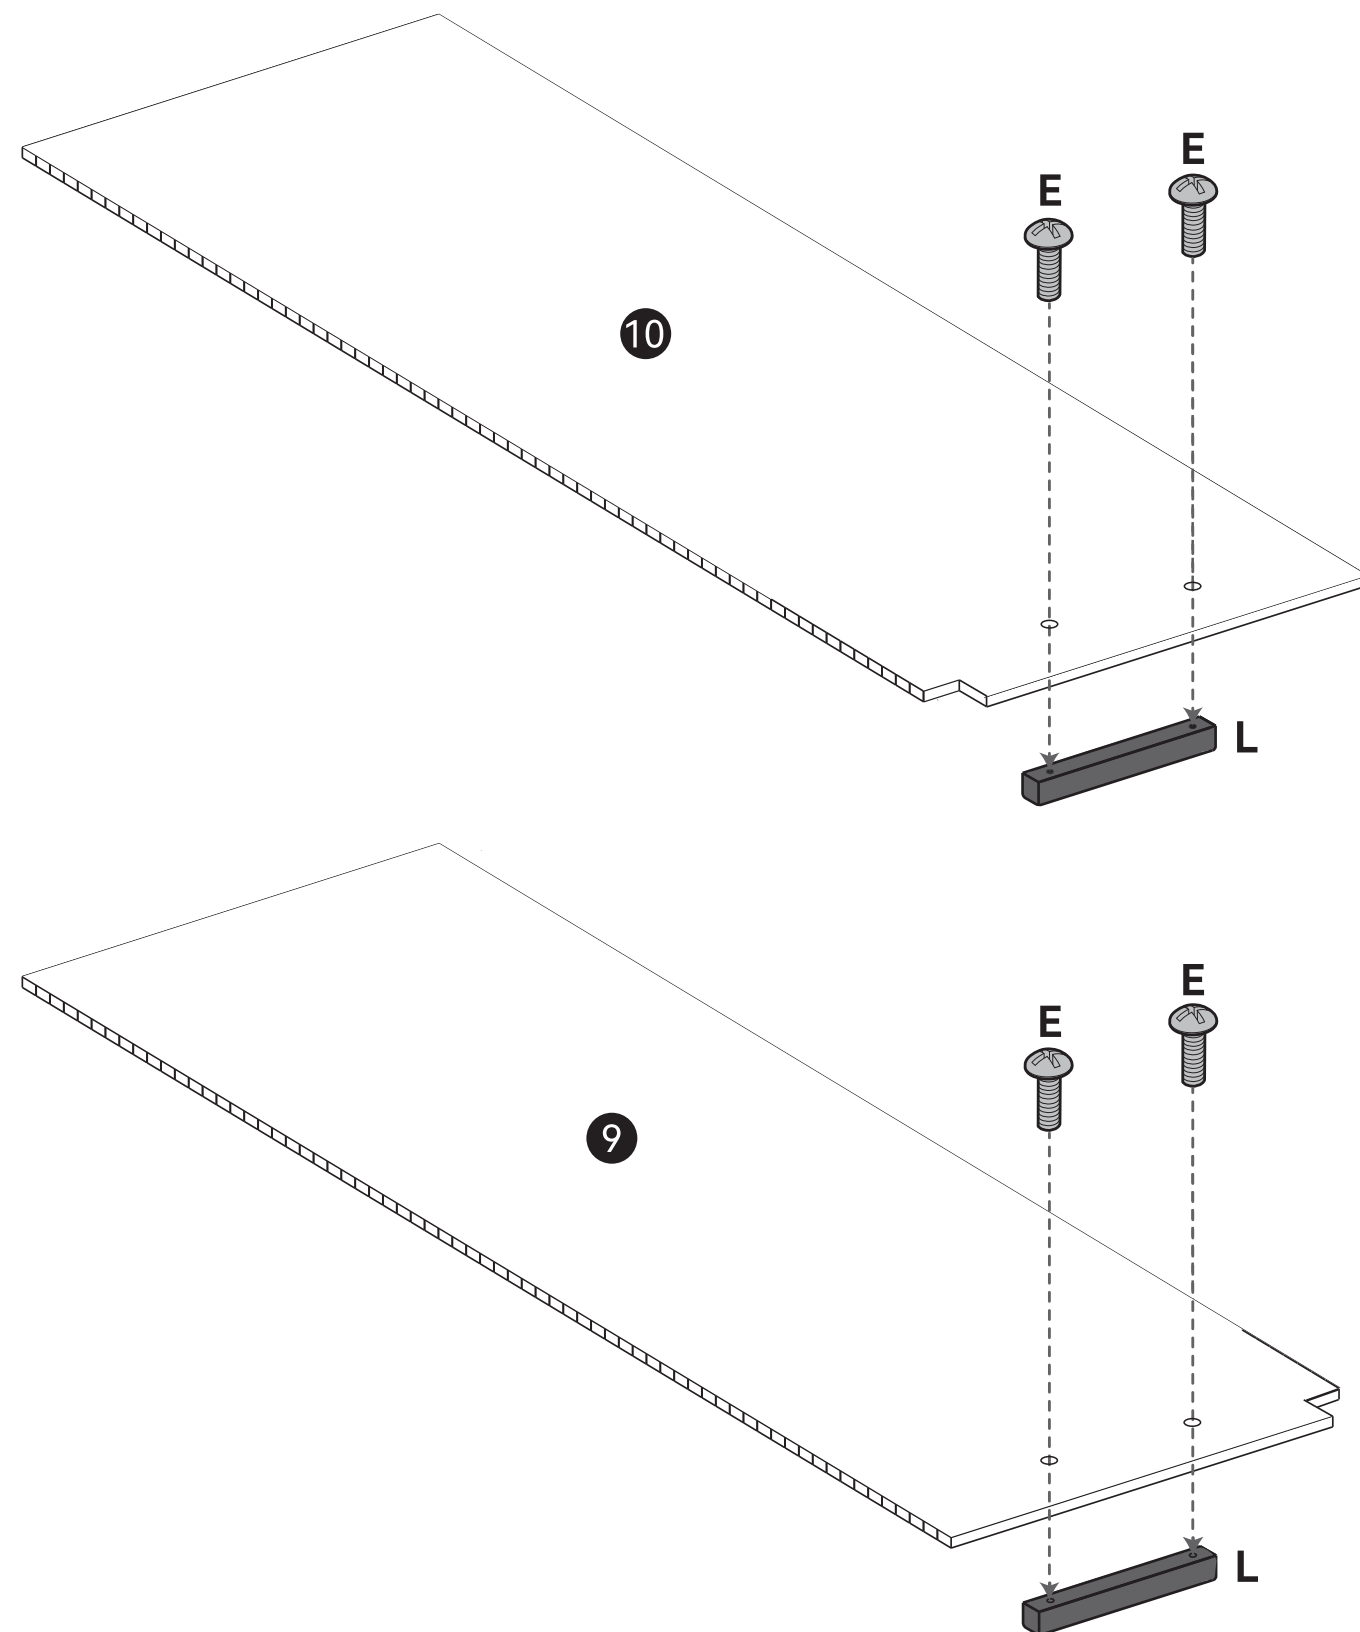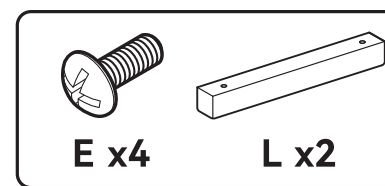

10

Install the rolling door with the notched end facing up.

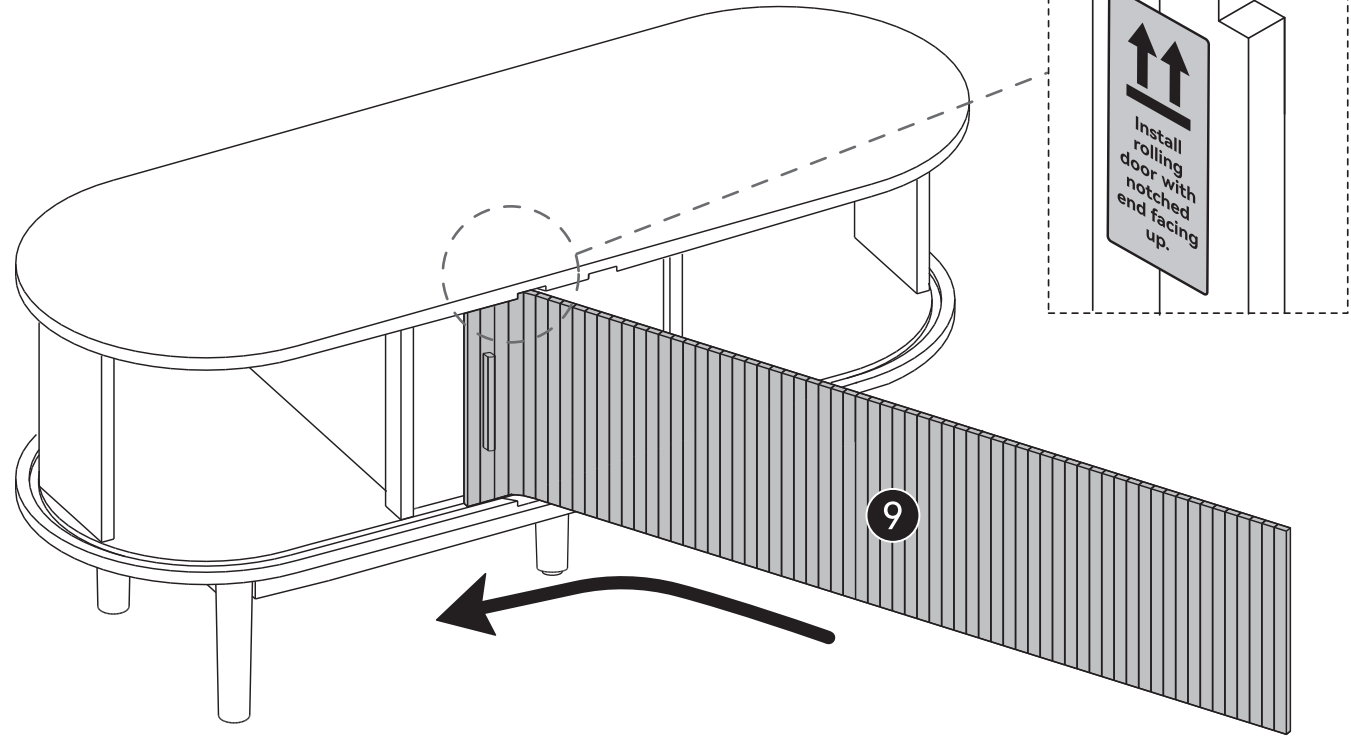

11

Install the rolling door with the notched end facing up.

