



## **PLANNING GUIDE**

## **Trim Kit Dimensions**

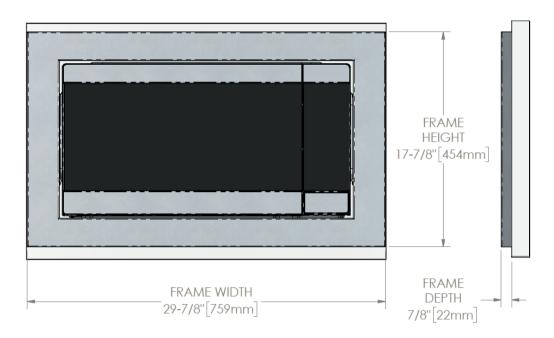

## **Cabinet Dimension Requirements**

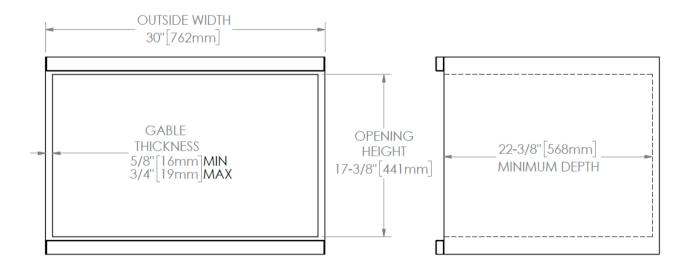

<sup>\*</sup>For surface mount, opening should be a minimum of 1/8" smaller than frame width and height