


60"


BATHROOM VANITY SET

Colors/Finishes: White, Light Blue
Nominal Dimension:60W*22D*35H inches

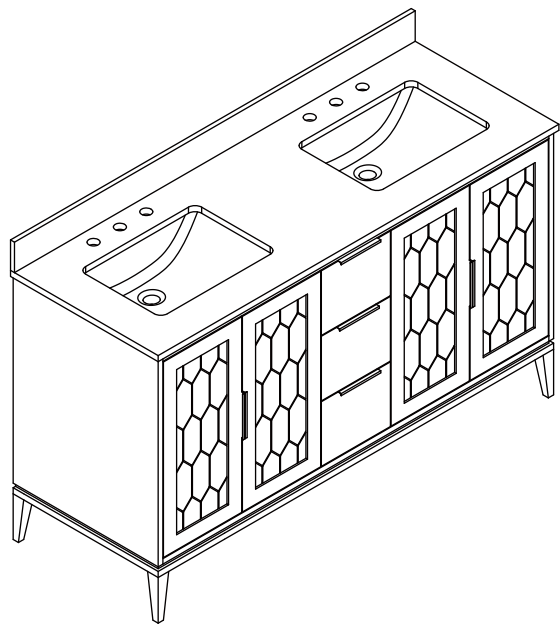

Contents

60"Vanity.....	PAGE2
60"Vanity Top.....	PAGE3
Vanity Installation.....	PAGE4

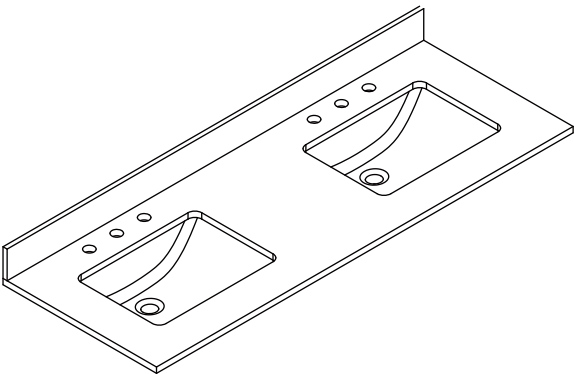

VANITY FEATURES:

- 1.Material: Solid popular wood frame, high-quality veneer plywood.
- 2.Doors: 4 soft-close doors, Austria BLUM Soft-close hinges system.
- 3.Drawers: 3 soft-close drawers, DTC concealed soft-close sliders.
- 4.Hardware: Metal alloy
- 5.Installation Type: Freestanding
- 6.Built-in Adjusters: Adjustable height levelers
- 7.Vanity Top: High-quality quartz/marble with single undermount sink
- 8.Assemble required: No
- 9.Vanity top Included: Yes
- 10.Mirror Included: Optional
- 11.Medicine Cabinet Included: Optional

VANITY TOP FEATURES:

- 1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz,or natural Italian Carrera white marble.
- 2.Top Color: Carrera white
- 3.Sink: 2*20"undermount rectangle sink
- 4.Faucet Hole s: Top pre-drilled for 8"widespread faucet holes
- 5.Sink Certified: CUPC certified
- 6.Backsplash: 4"backsplash included
- 7.Faucet Included: No
- 8.Nominal Dimension(W*D*H): 60W*22D*0.79H inches

N 60''


BATHROOM VANITY SET

COMPONENTS:


Vanity
Vanity Top
Wall Mirror
Medicine Cabinet

PRODUCT DIAGRAMS:


Front

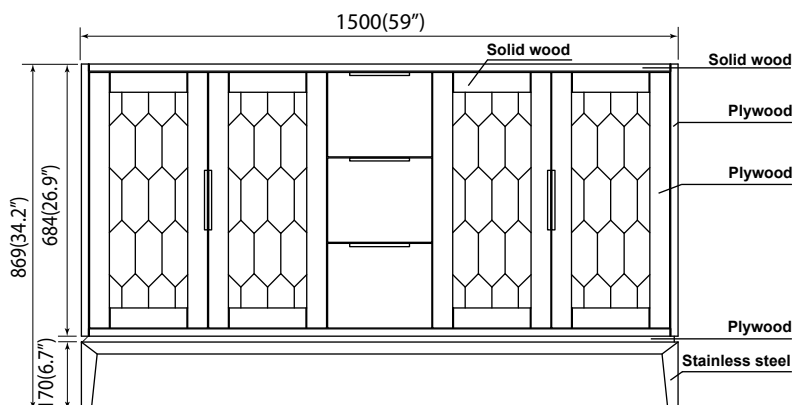


[Back](#)

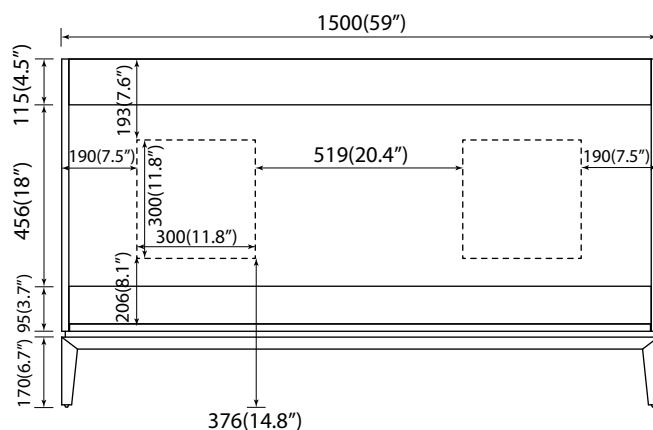

Top

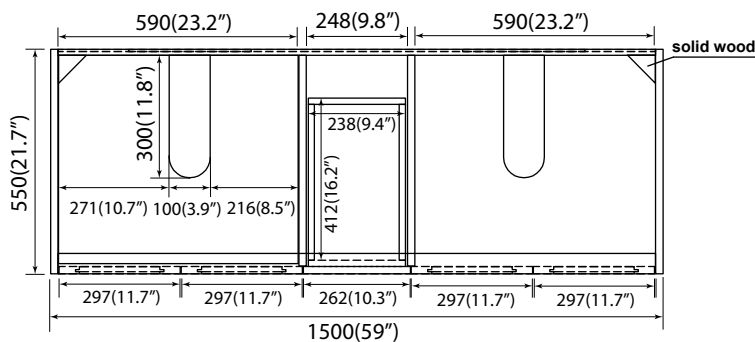


Side

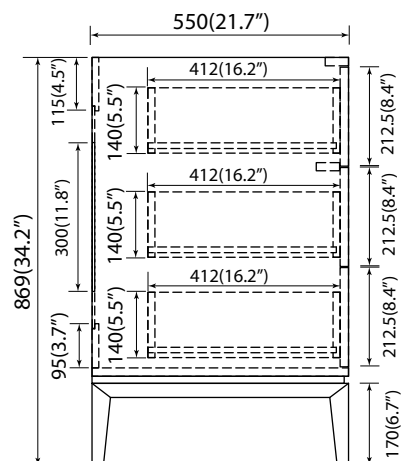


60"

VANITY TOP

With rectangular undermount sink

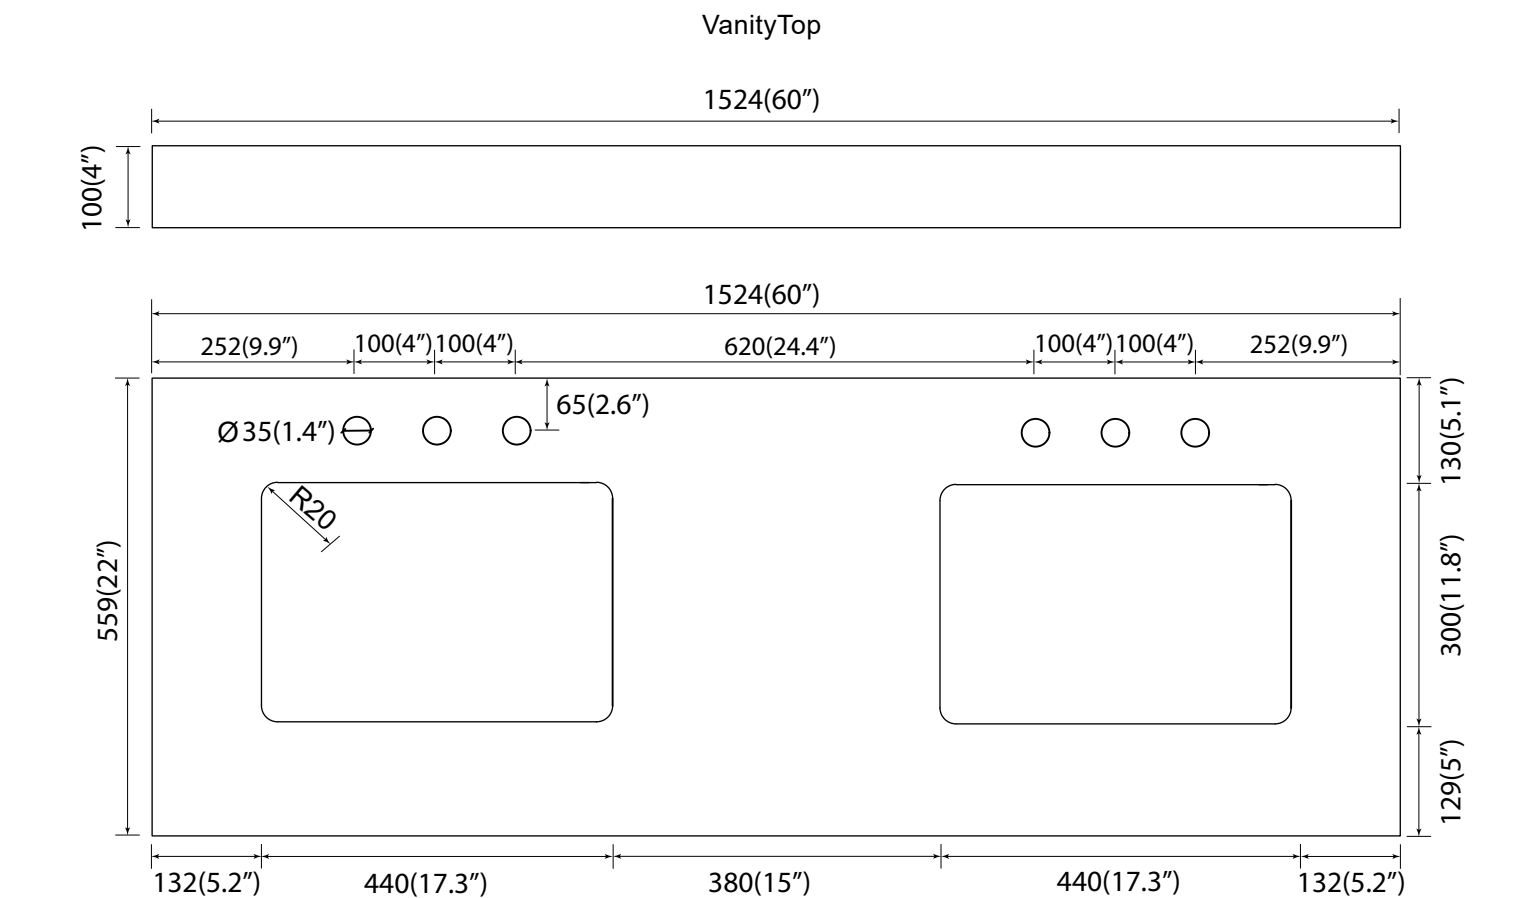


Undermount Sink

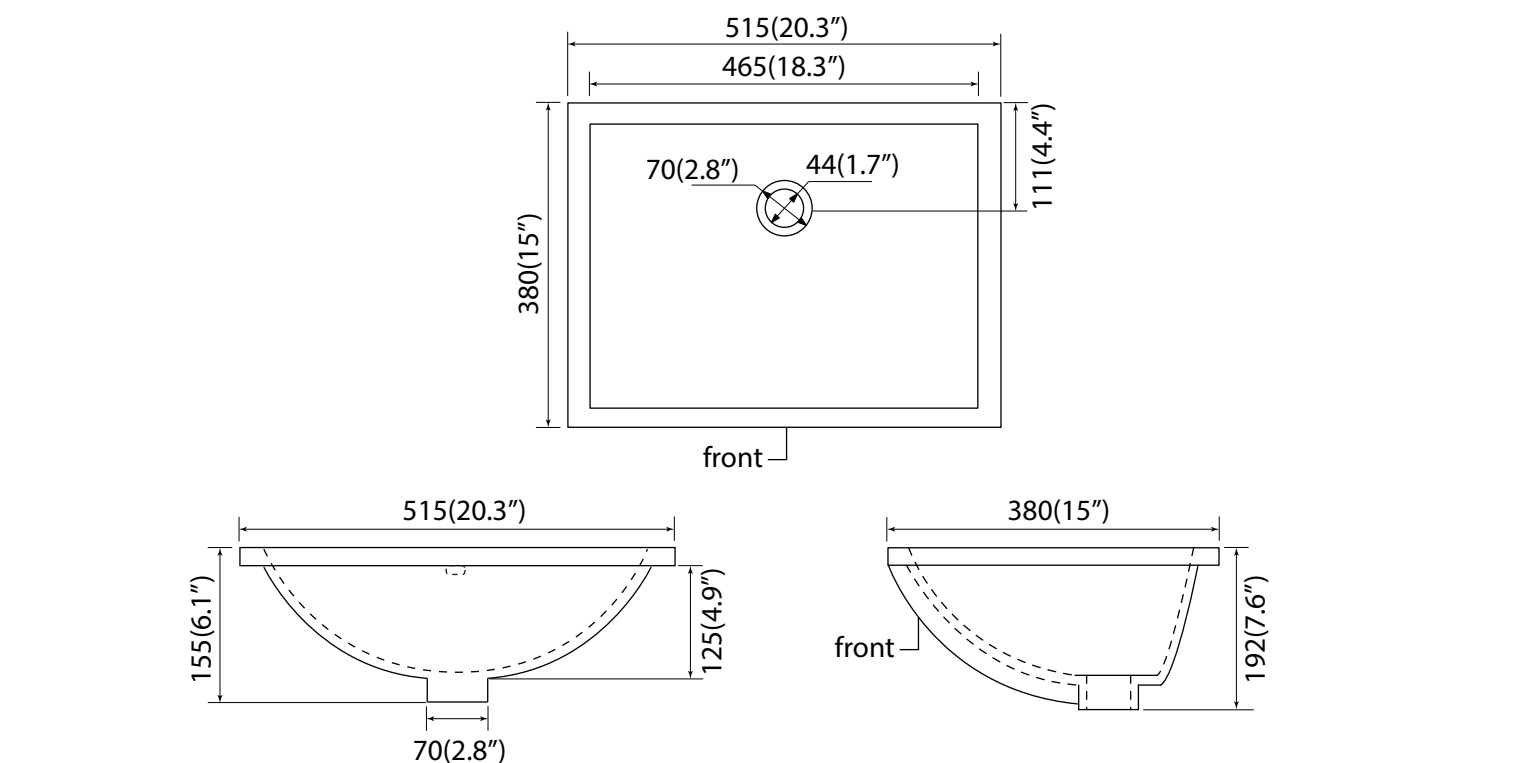

All dimensions and specifications are nominal and may vary. Use actual products for accuracy in critical situations.

Vanity Installation

SUGGESTED TOOLS AND MATERIALS:



Sealant



Measuring tape



Safety glasses



Rag




Level

INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing, vanity cabinet,sink,countertop,or personal injury during installation.

1

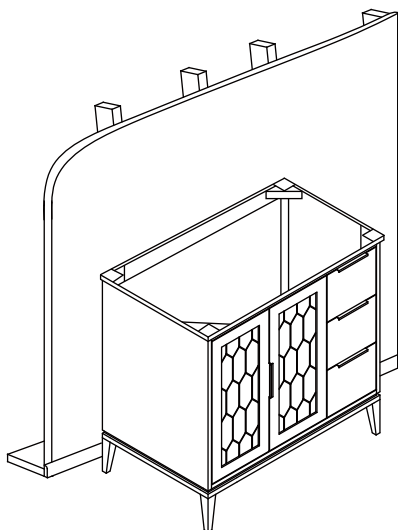


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

2

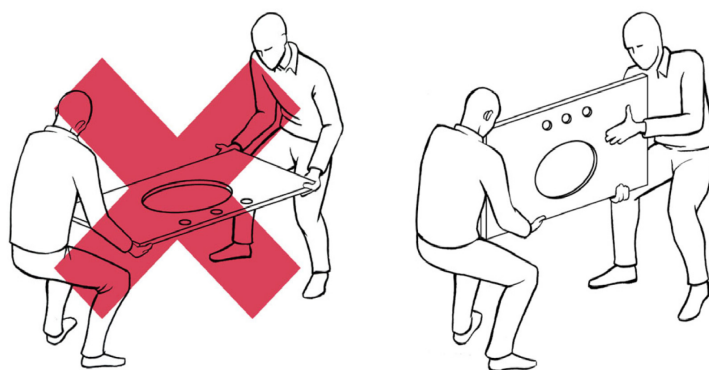


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

3

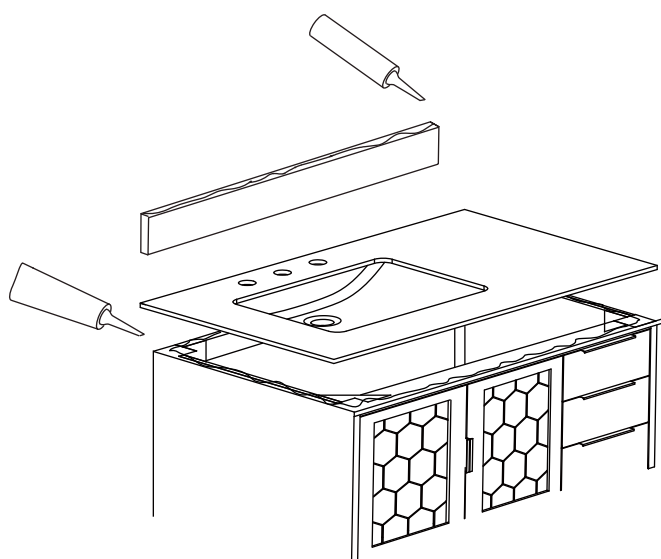

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

4

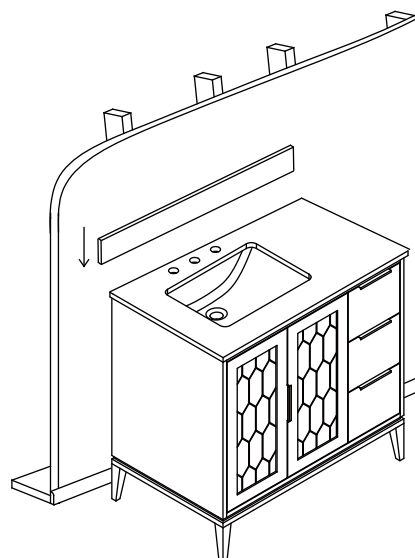

Finally,place the bottom side of back splash with sealant onto the countertop and check alignment of back splash.