

ASSEMBLY INSTRUCTIONS



PF035



WARNING !

PF035


MAXIMUM LOAD
220 lb/ 100kg

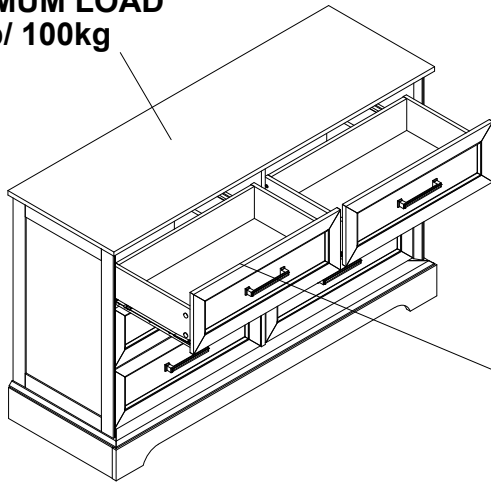


Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

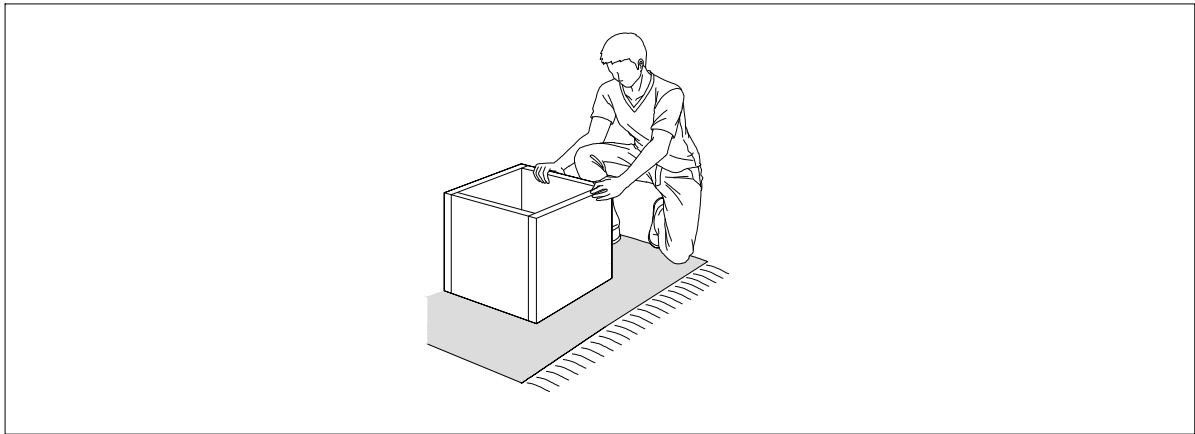

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

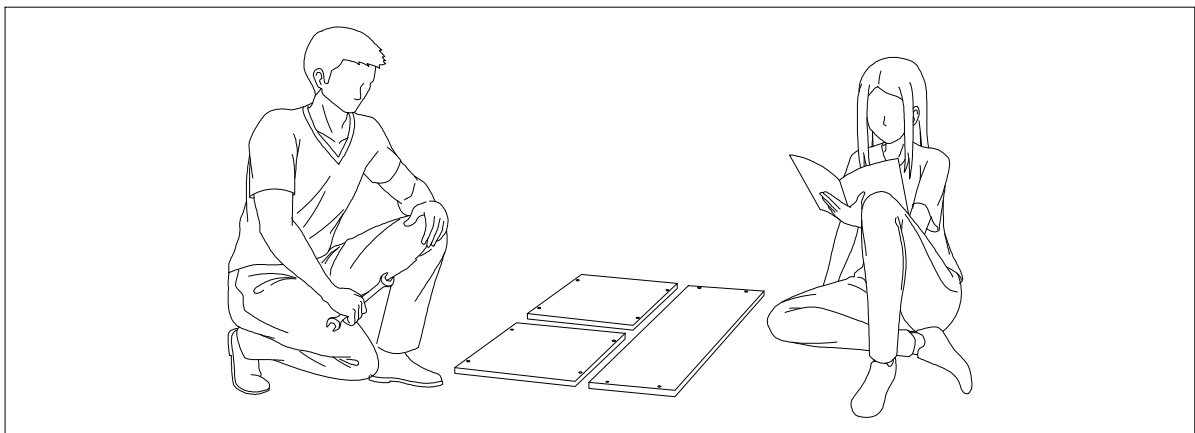


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

Board Identification

PF035


Not actual size

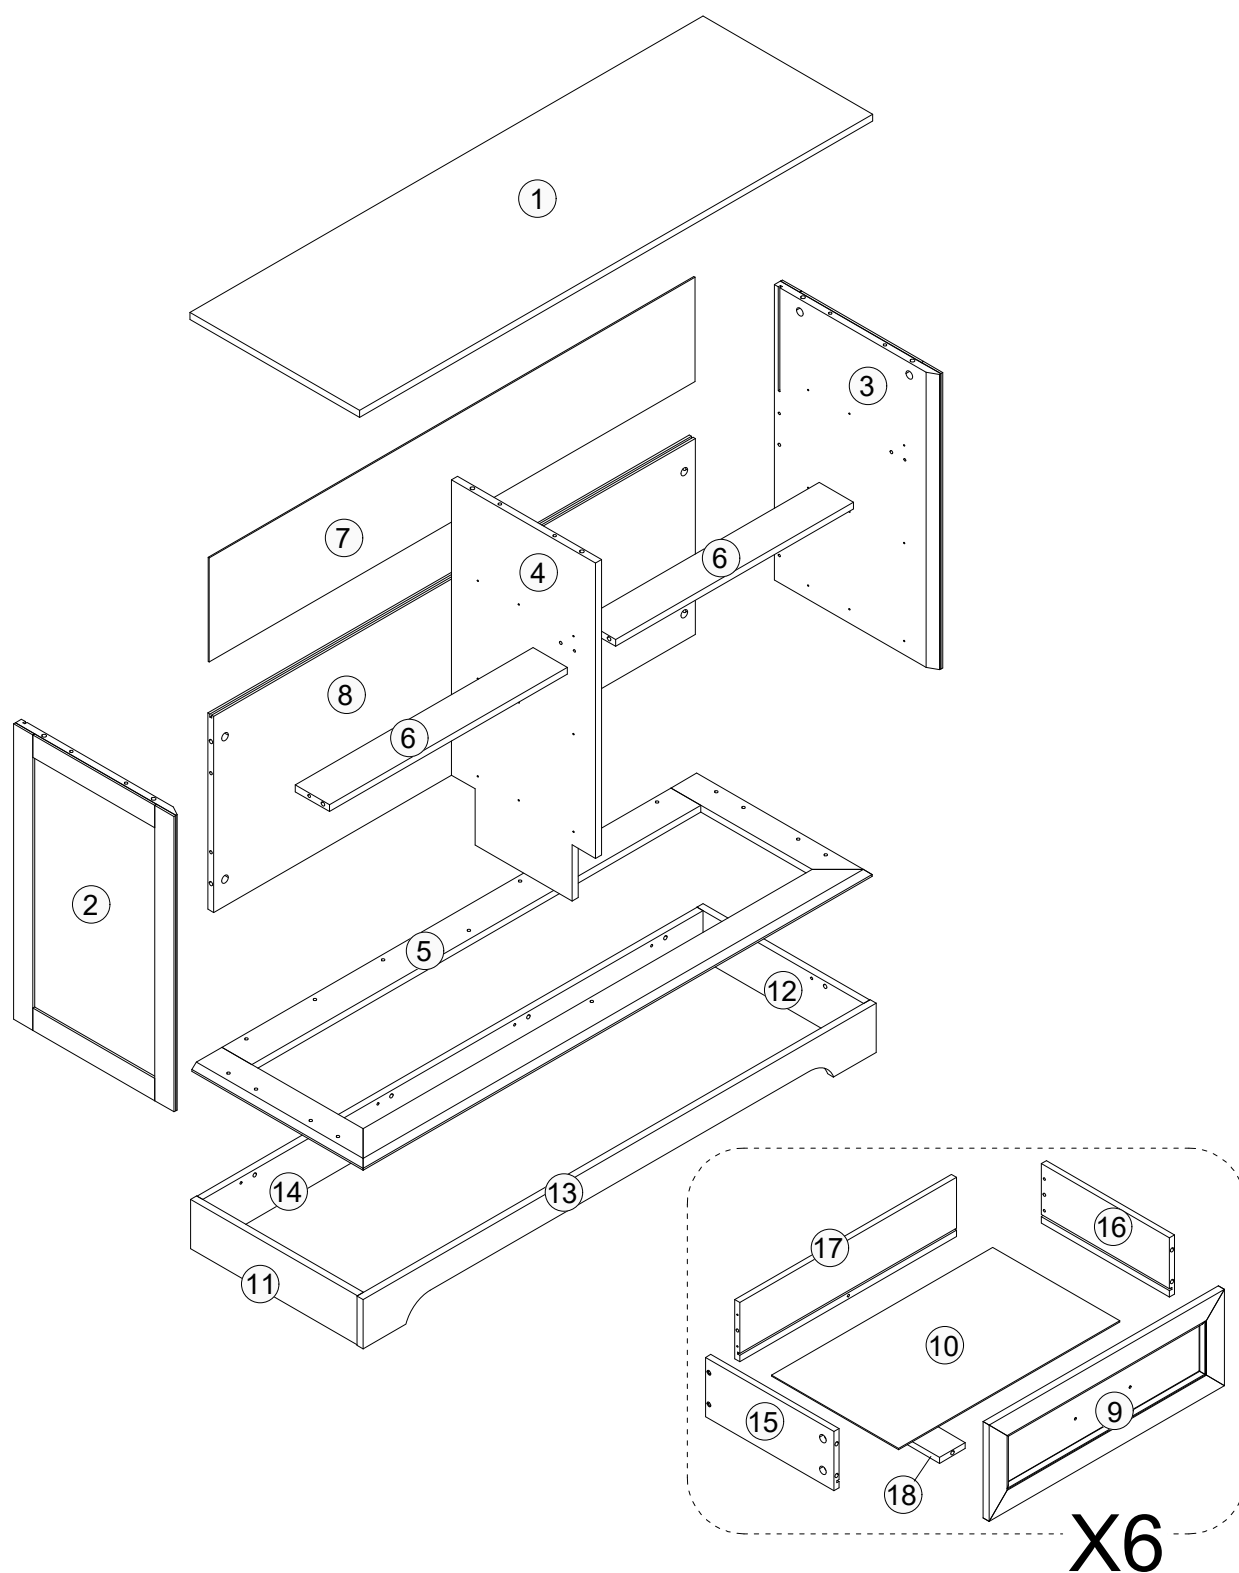


BOARD IDENTIFICATION

PF035


Not actual size

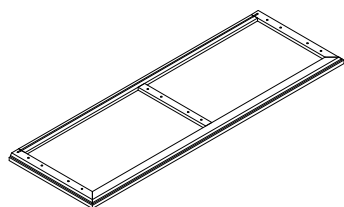


① x1

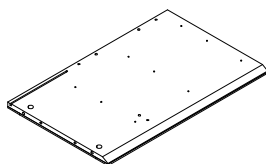


② x1

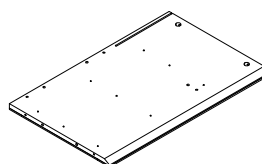


③ x1

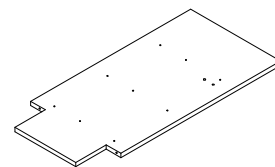


④ x1

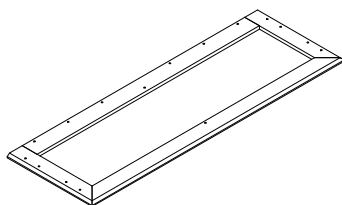


⑤ x1

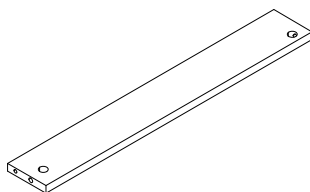


⑥ x2

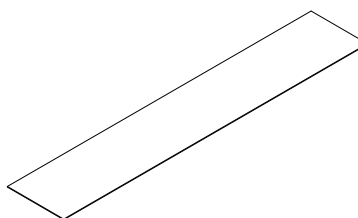


⑦ x1

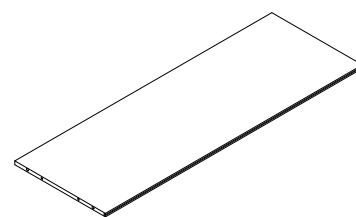


⑧ x1

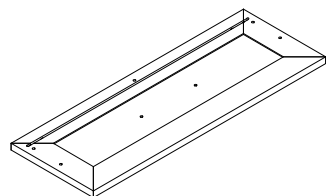


⑨ x6

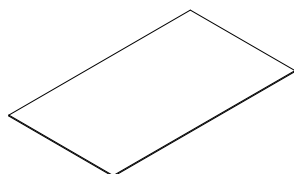


⑩ x6

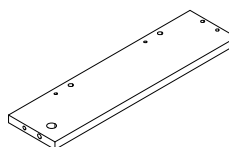


⑪ x1

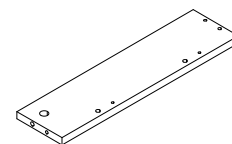


⑫ x1

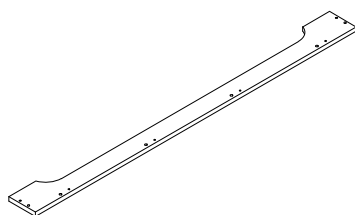


⑬ x1

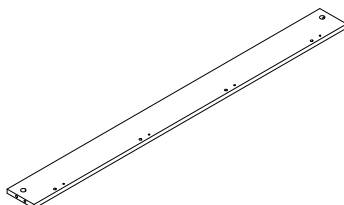


⑭ x1

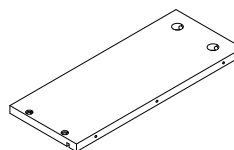


⑮ x6

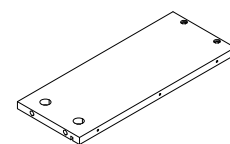

⑯ x6

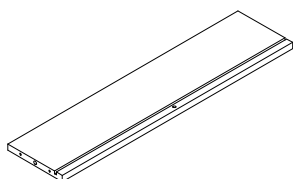









⑰ x6



⑱ x6


HARDWARE LIST

PF035

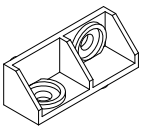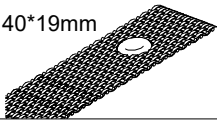



 $\varnothing 6 \times 33.5 \text{mm}$ A x50+5	 $\varnothing 15 \times 9.5 \text{mm}$ B x50+5	 $\varnothing 6 \times 30 \text{mm}$ C x38+3	 $\varnothing 5 \times 38 \text{mm}$ D x10+1
 $\varnothing 3.5 \times 12 \text{mm}$ E x69+6	 F x12	 $\varnothing 6 \times 12 \text{mm}$ G x24+2	 $\varnothing 3 \times 15$ H x4+1
 $M4 \times 8 \text{mm}$ I x12	 J x2+3	 K x6	 $\varnothing 4 \times 38 \text{mm}$ L x30+3
$M1 \times 2$ $140 \times 19 \text{mm}$  $M2 \times 4$ $\varnothing 16 \times \varnothing 6.5 \times 1 \text{mm}$  $M3 \times 2$ $\varnothing 4 \times 16 \text{mm}$ 			$N1 \times 2$ $\varnothing 6 \times 30$  $N2 \times 2$ $\varnothing 4 \times 35$ 
M			 O x1
 CL x6	 CR x6	 DR x6	 DL x6

Cam Lock Fastening System




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

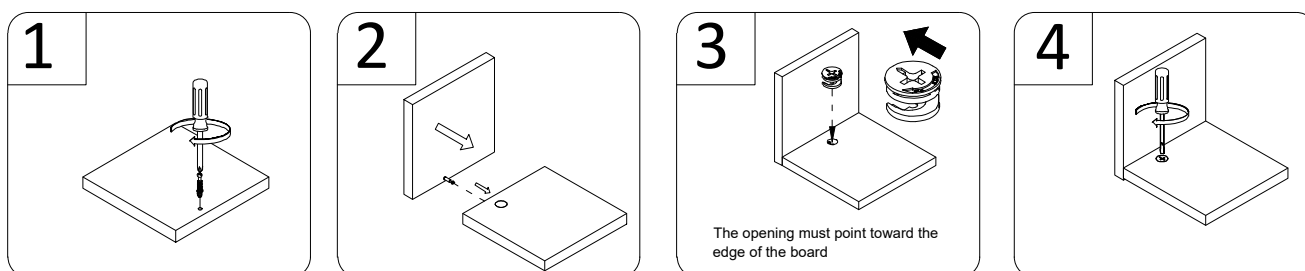

STEP 1

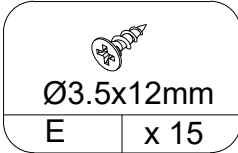
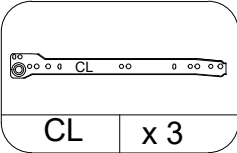
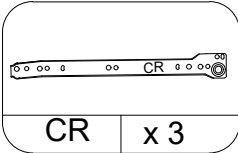
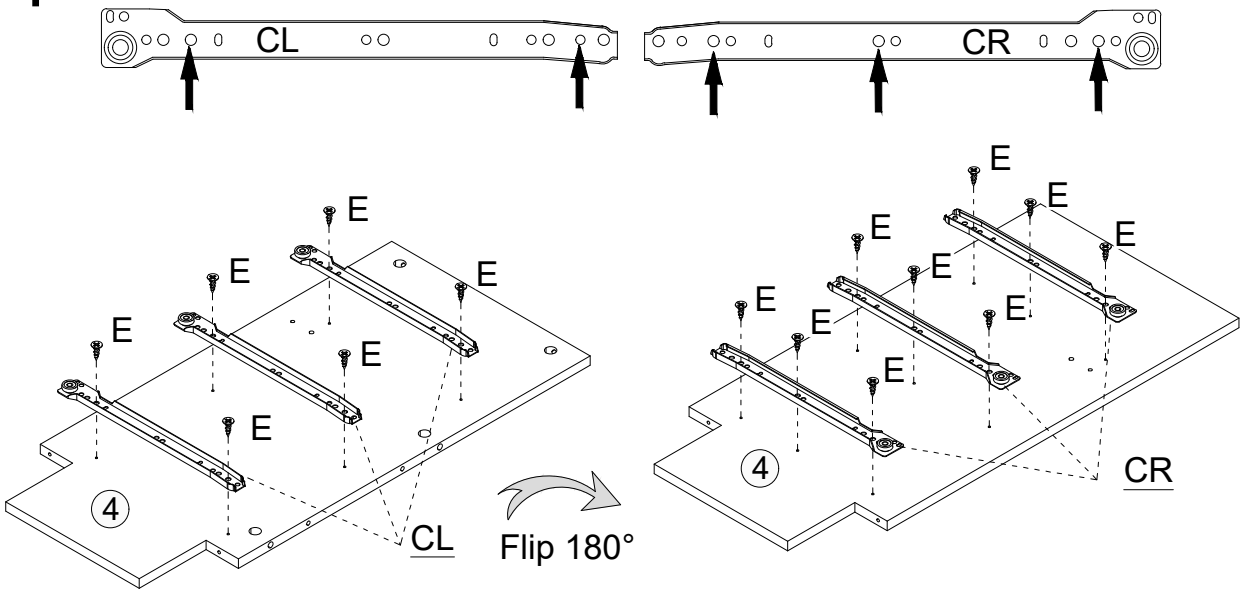


STEP 2


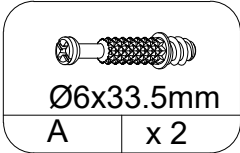
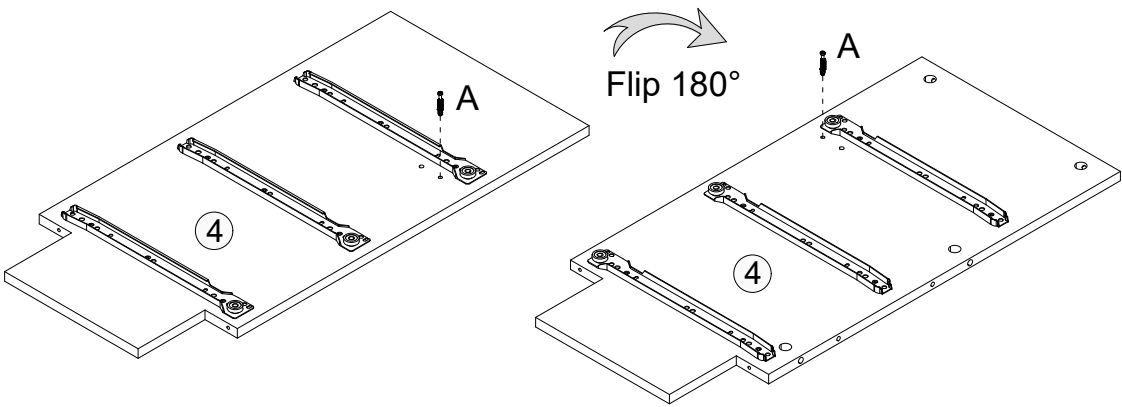
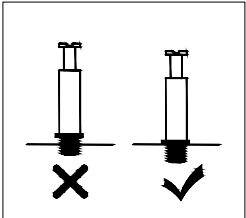


STEP 3

PF035

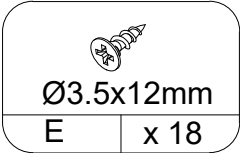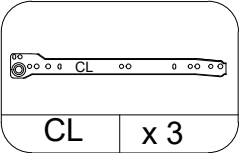
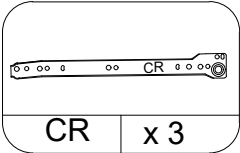
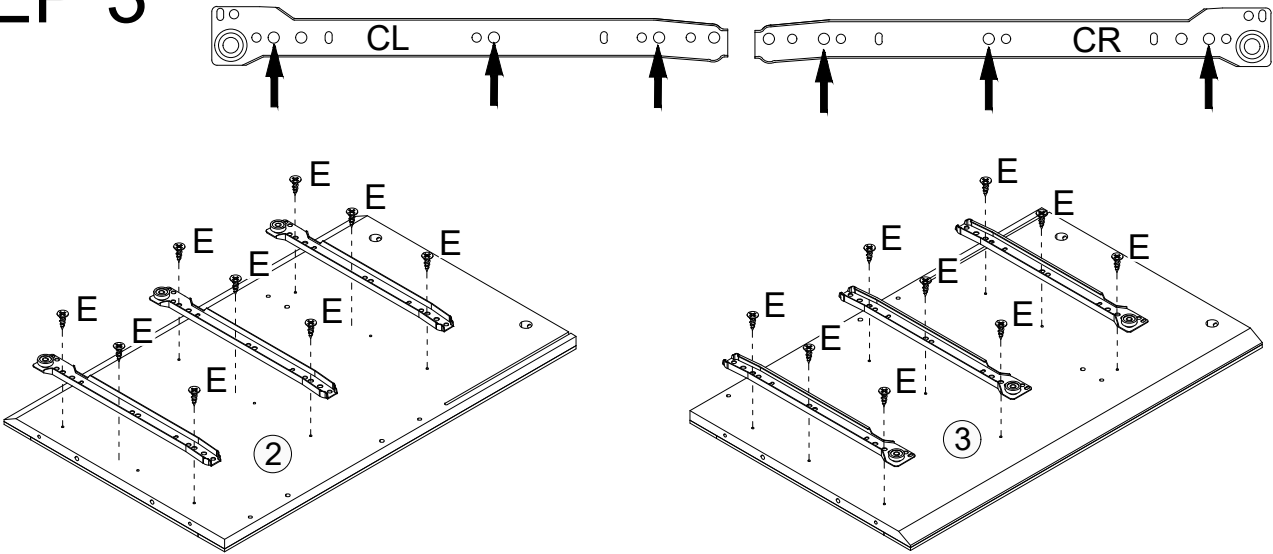


STEP 4

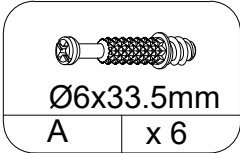
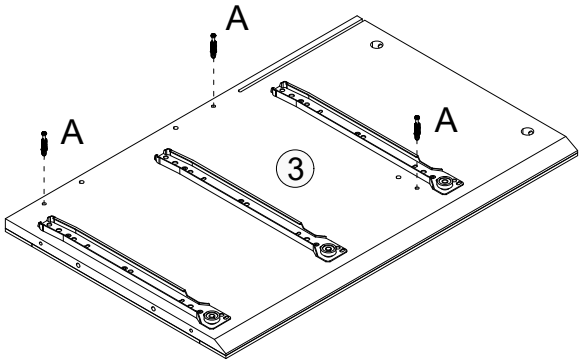
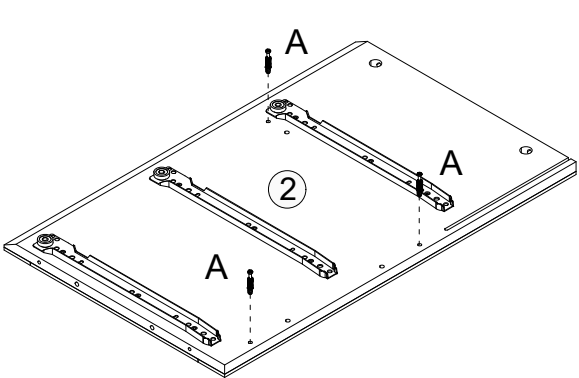
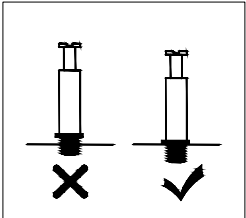


STEP 5


PF035

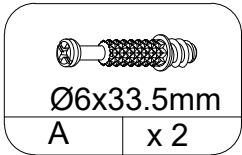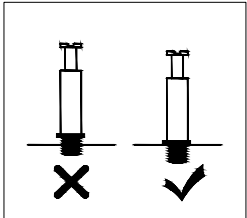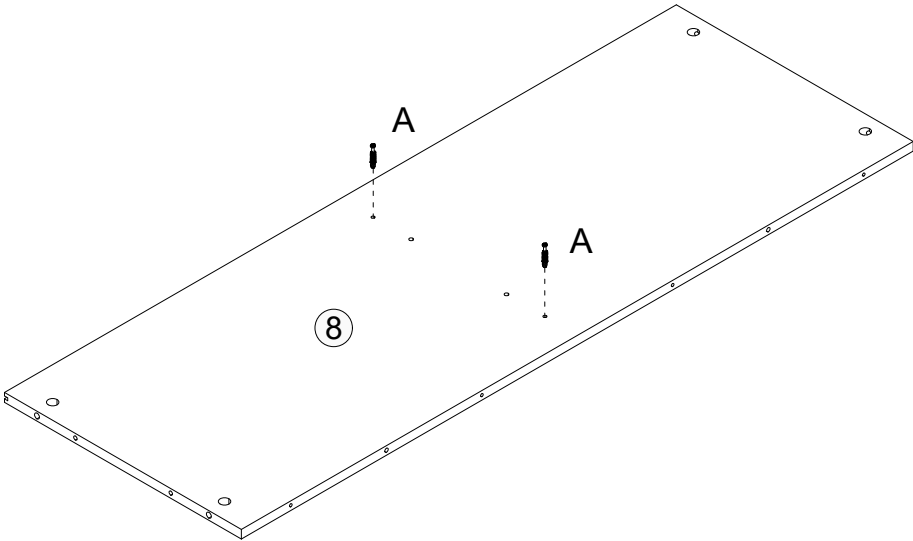



STEP 6

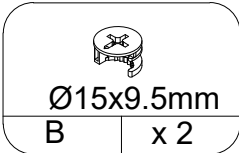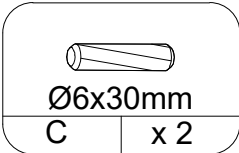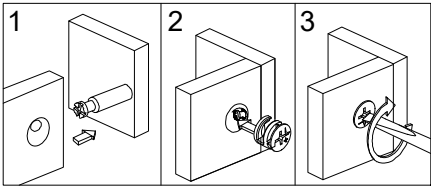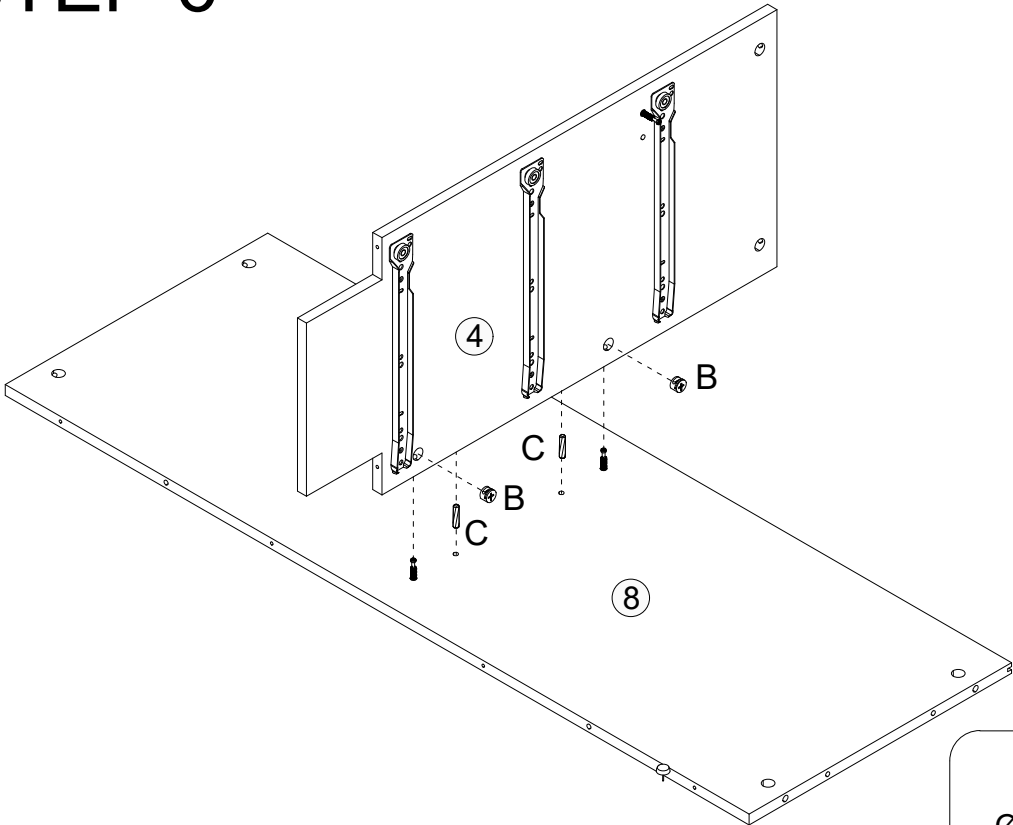

STEP 7

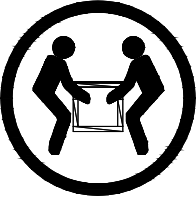

CAUTION: Heavy! You may need assistance with this step

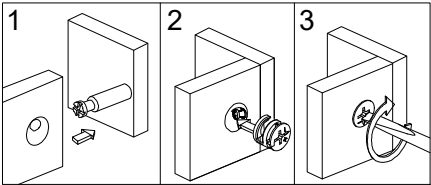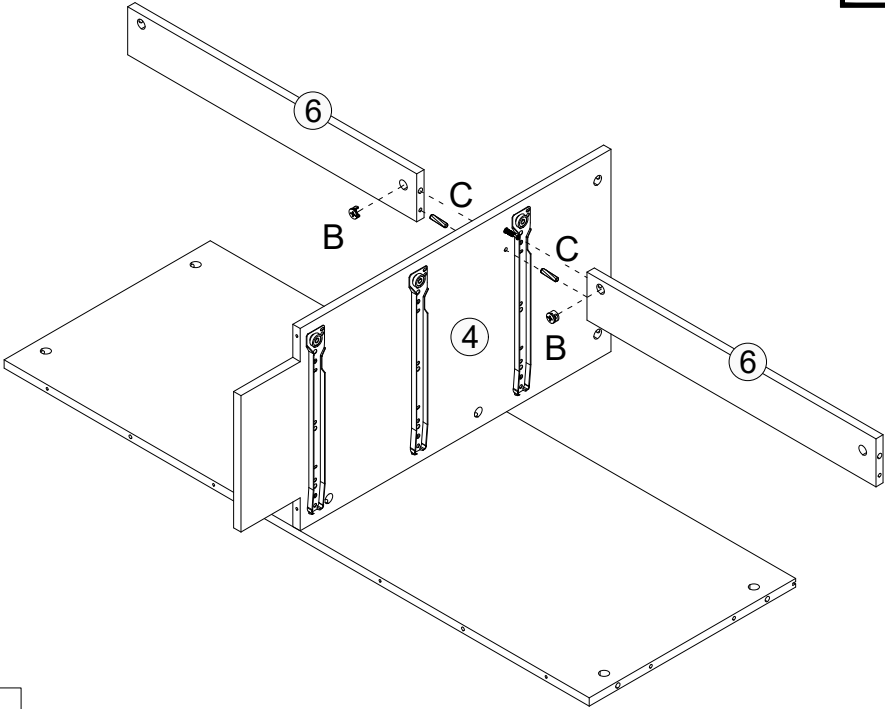





Ø6x30mm
C x 2



Ø15x9.5mm
B x 2

STEP 8

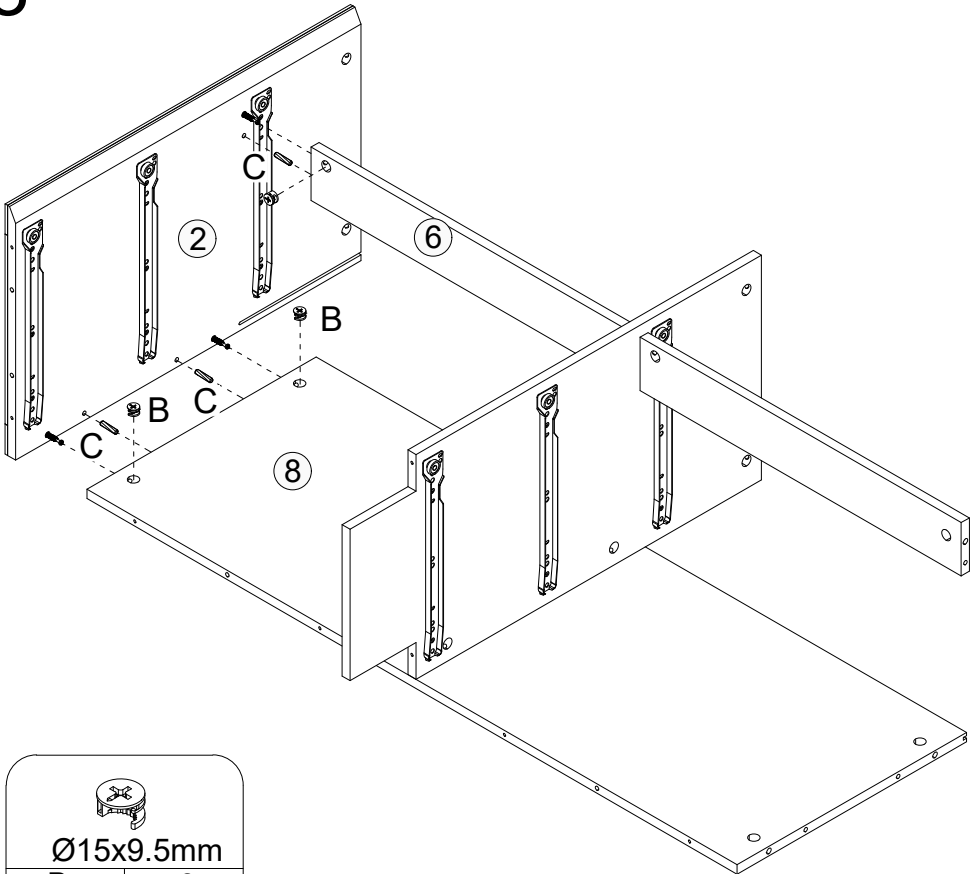




Ø6x30mm
C x 3




Ø15x9.5mm
B x 3

STEP 9

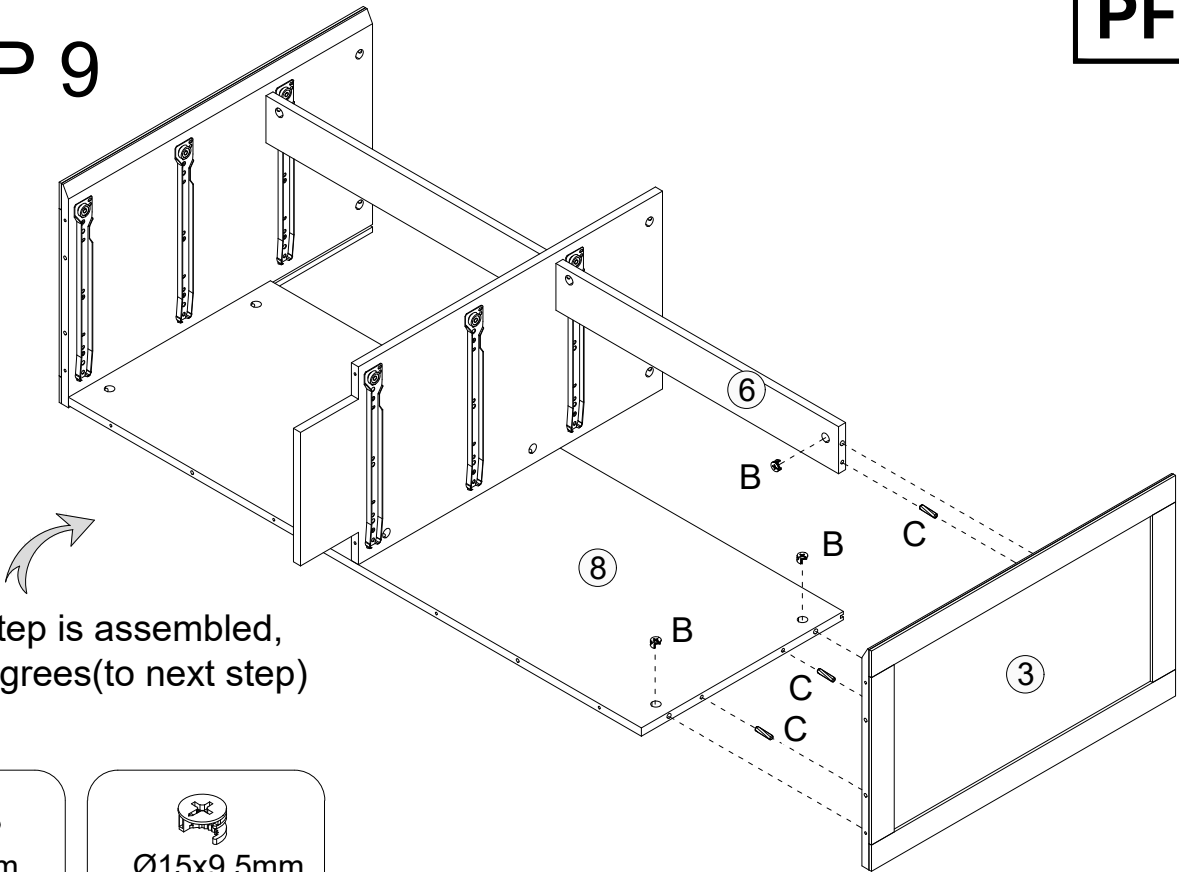

After this step is assembled,
flip it 90 degrees(to next step)



Ø6x30mm


C x 3




Ø15x9.5mm

B x 3


STEP10

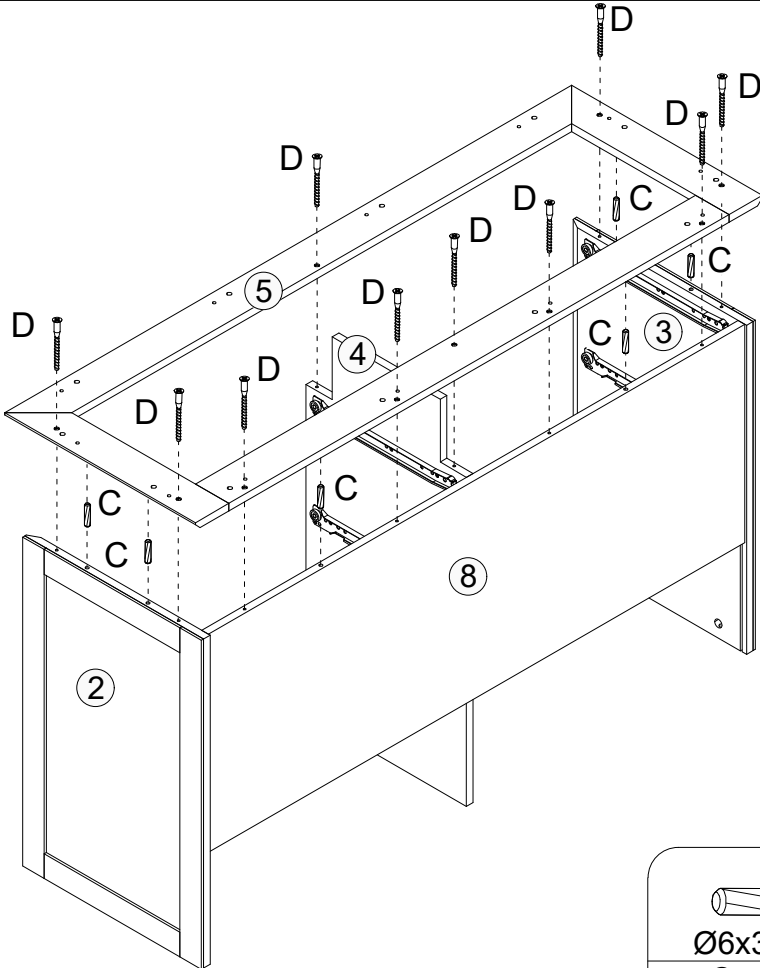



Ø6x30mm

C x 6




Ø5x38mm



D x 10

STEP 11





PF035

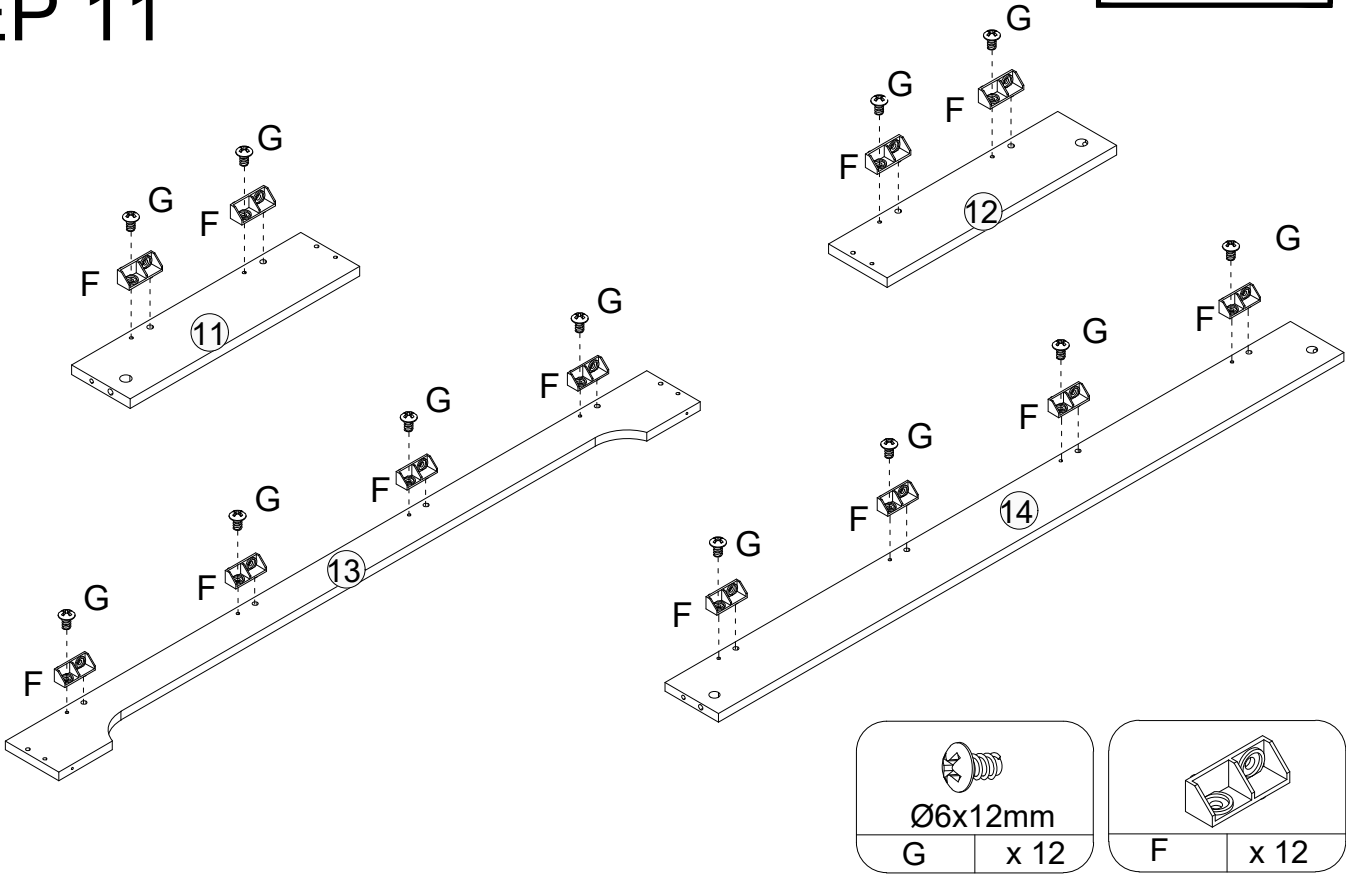





STEP12

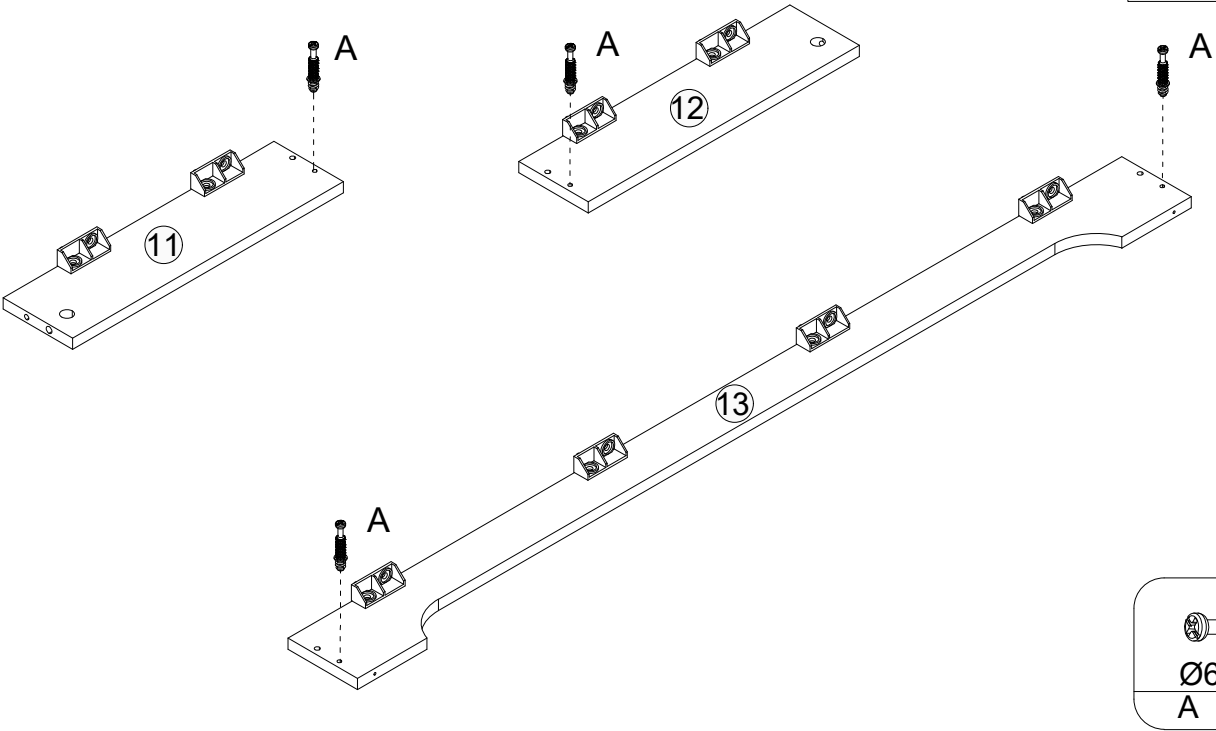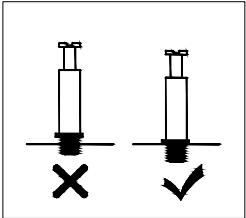

STEP 13

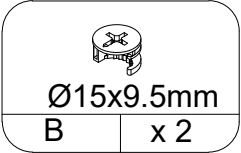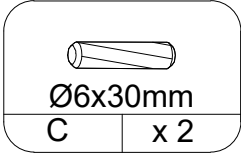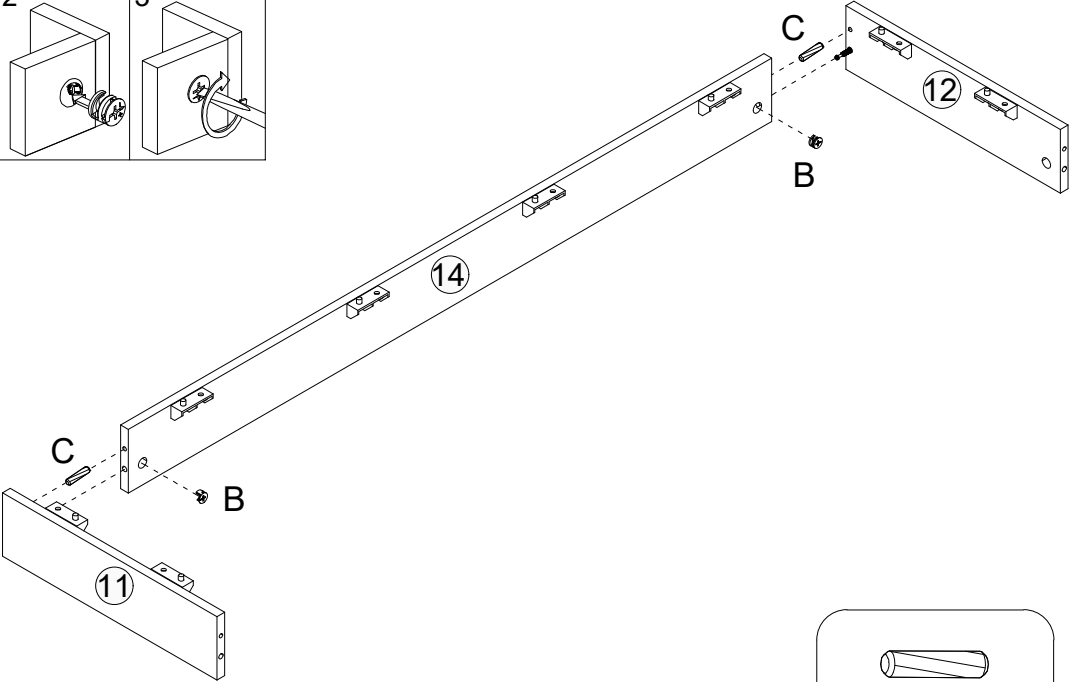
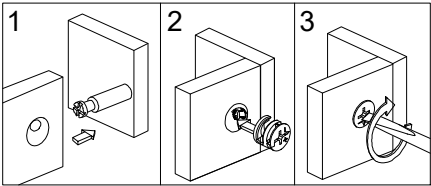


STEP14

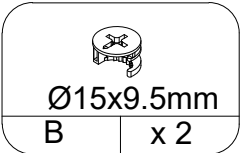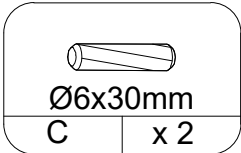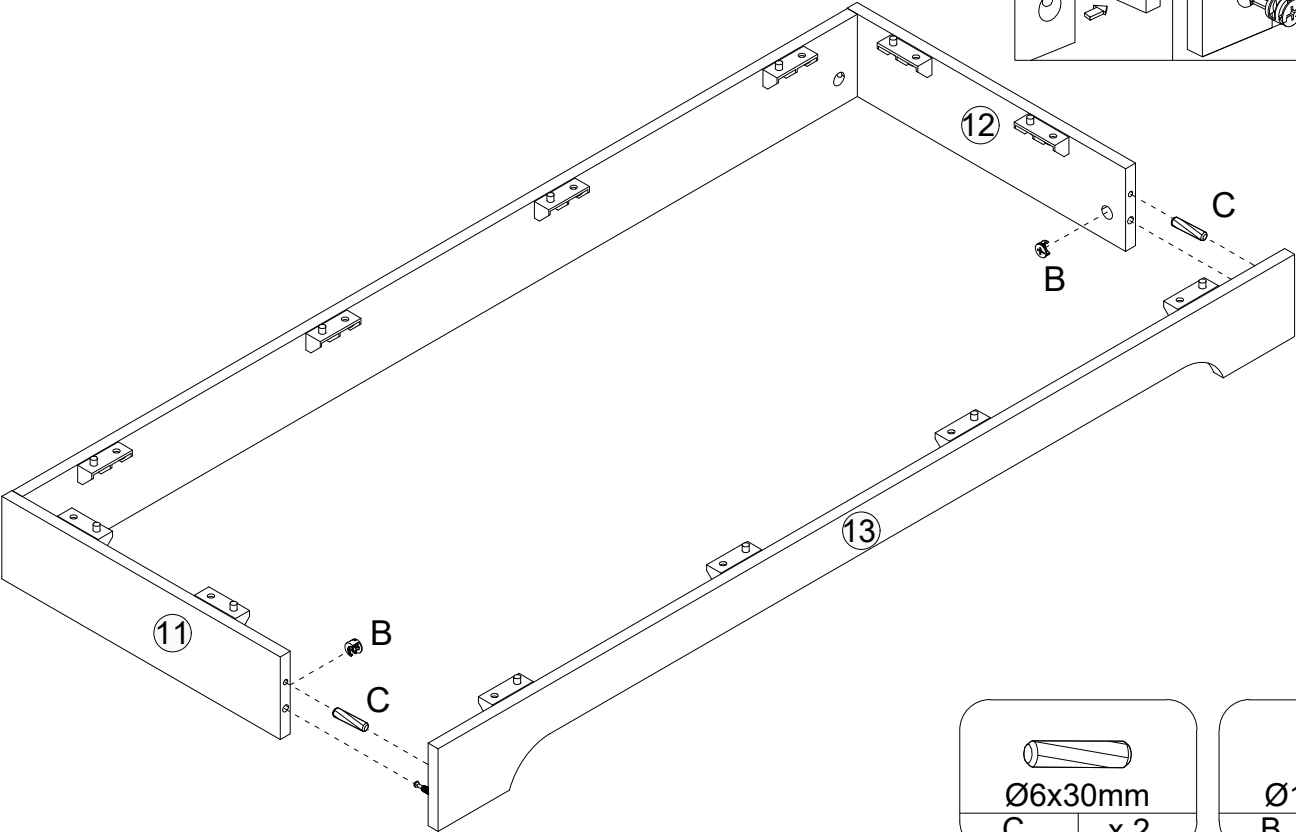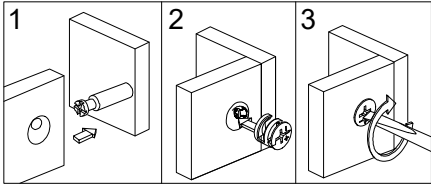


STEP 15


PF035

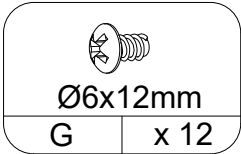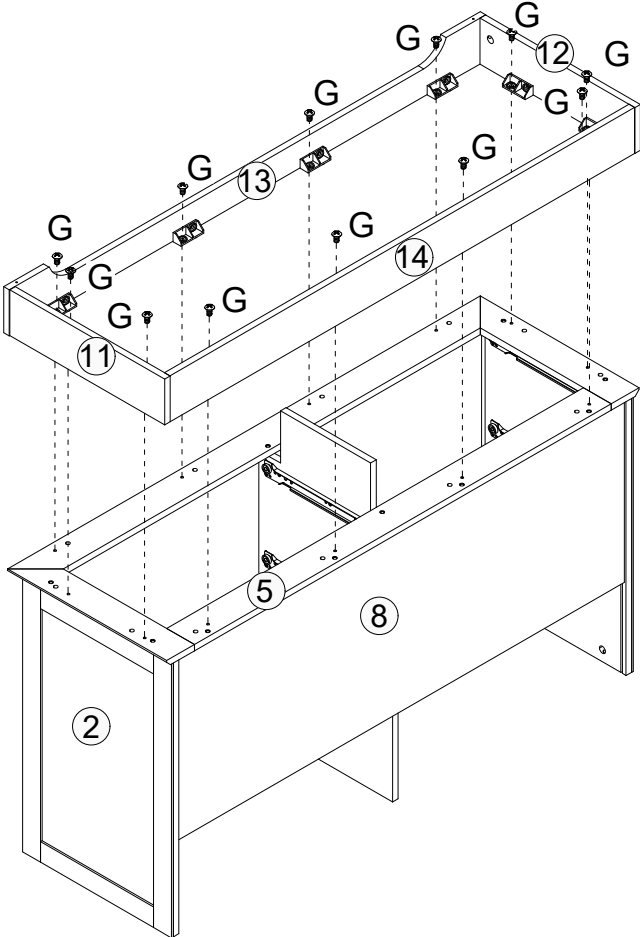

STEP16

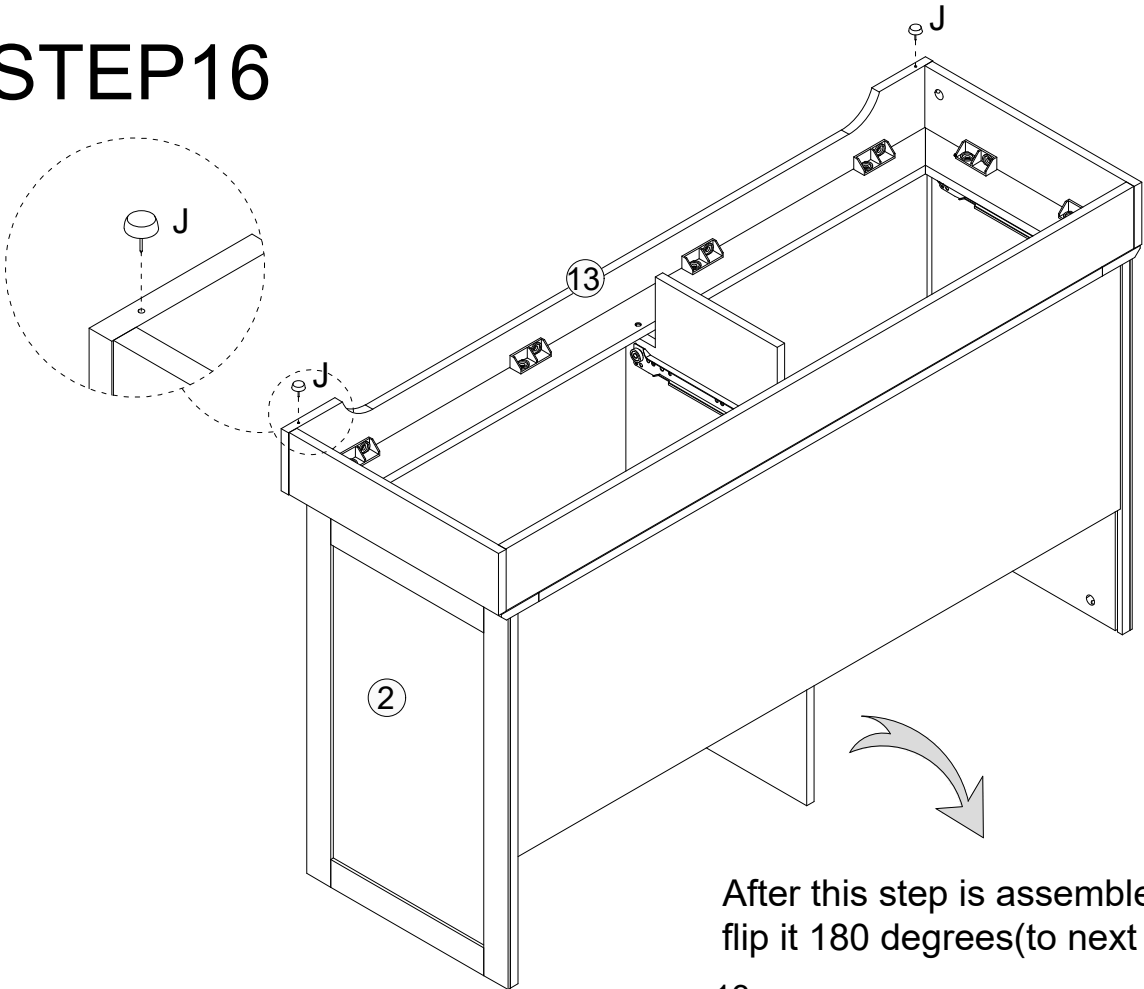


After this step is assembled,
flip it 180 degrees(to next step)



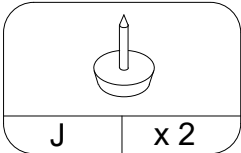


STEP 17

PF035

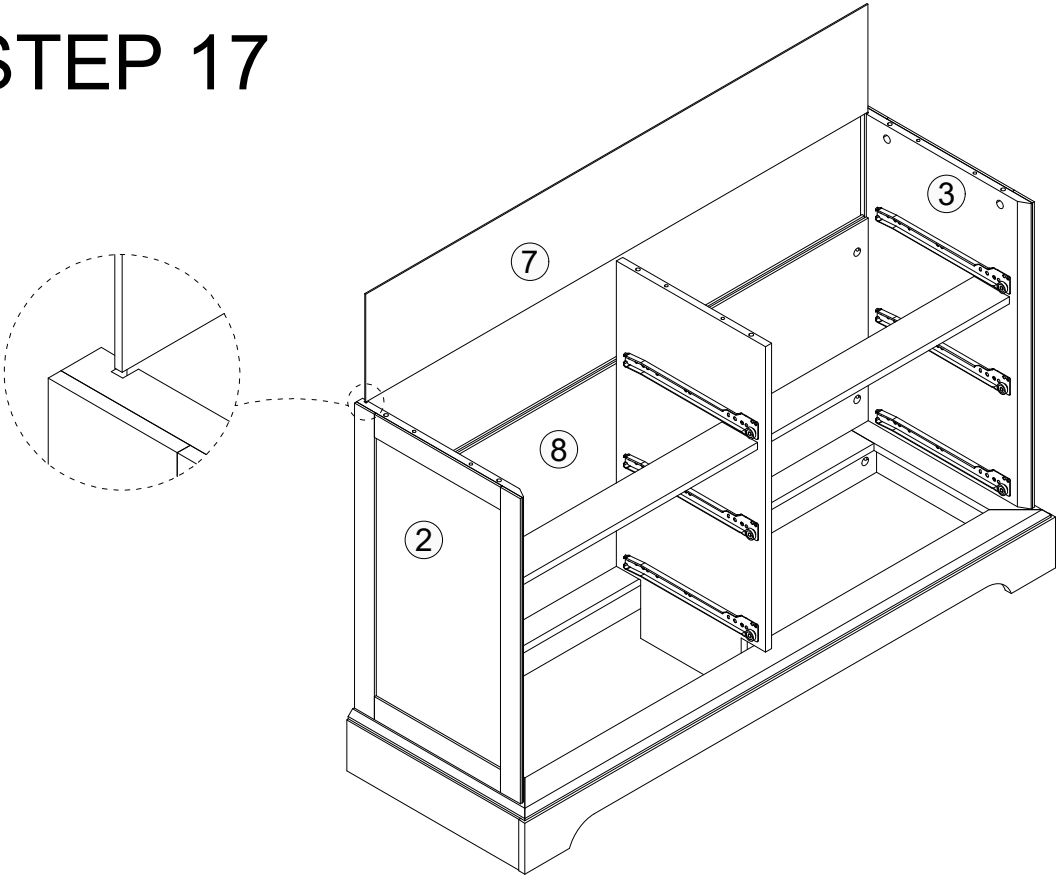





STEP18

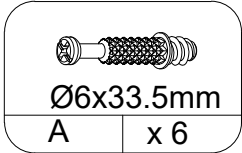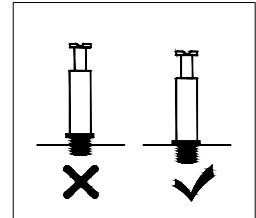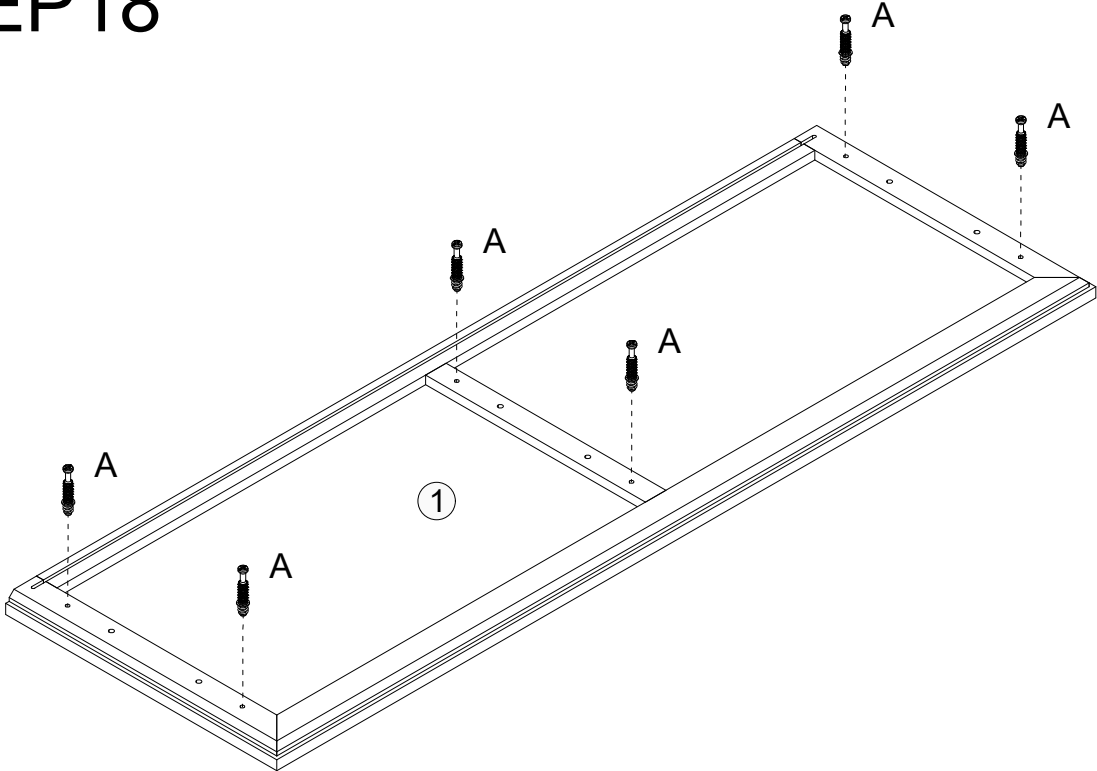




STEP 19

PF035

Back panel groove

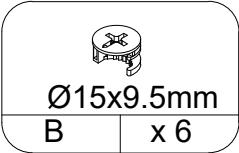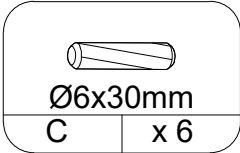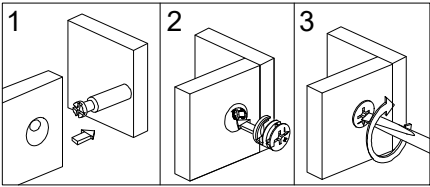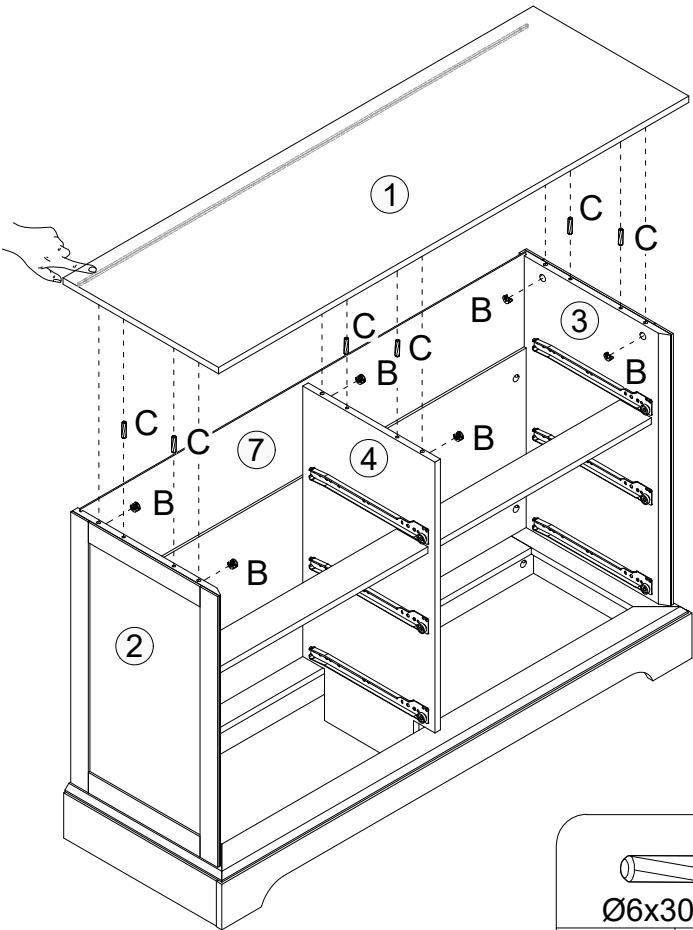


STEP 20

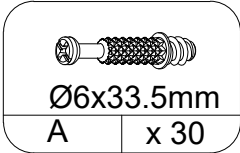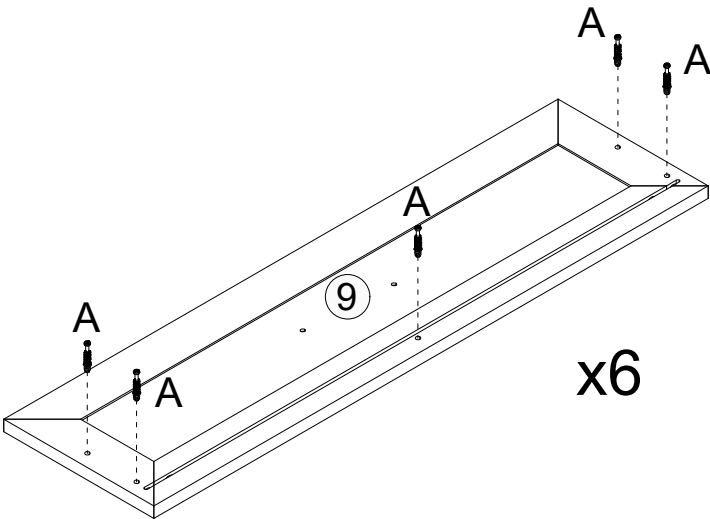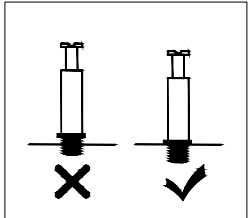


STEP 21

PF035

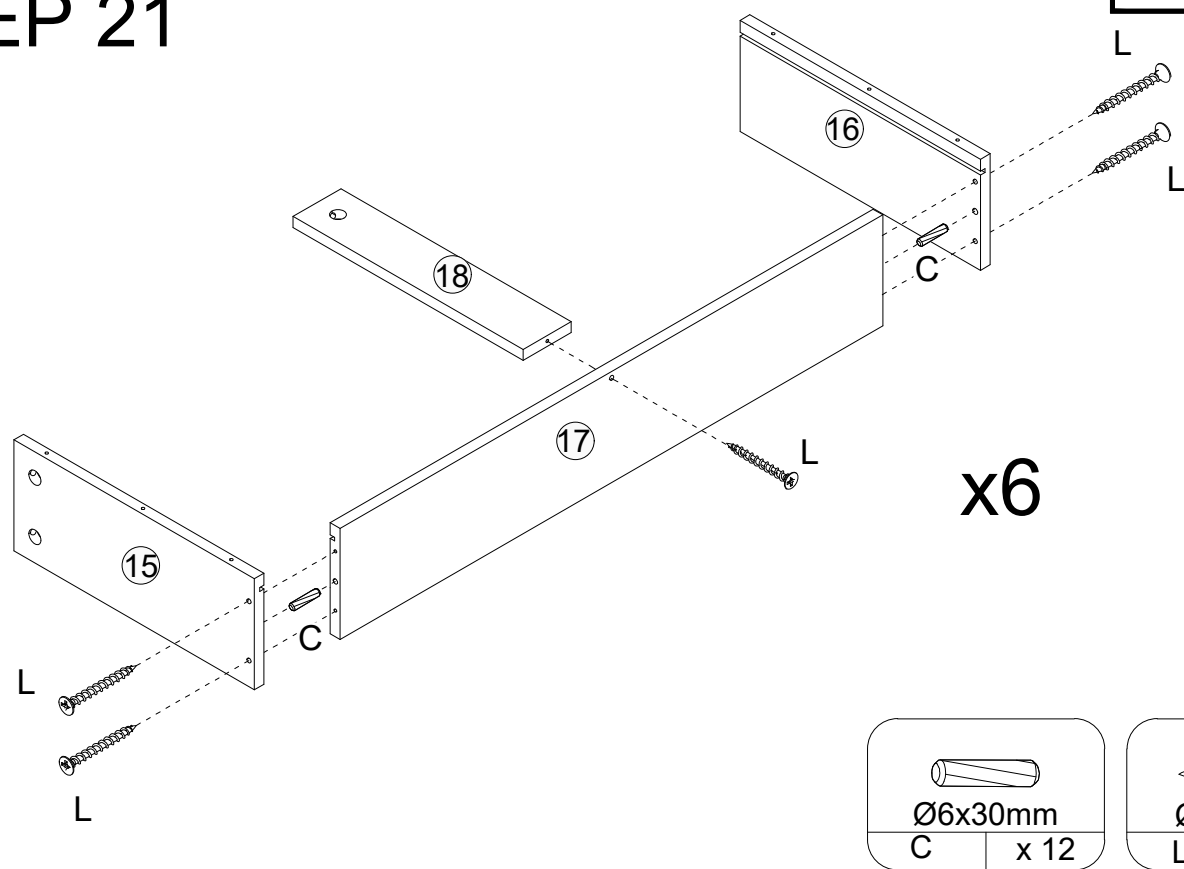


STEP 22

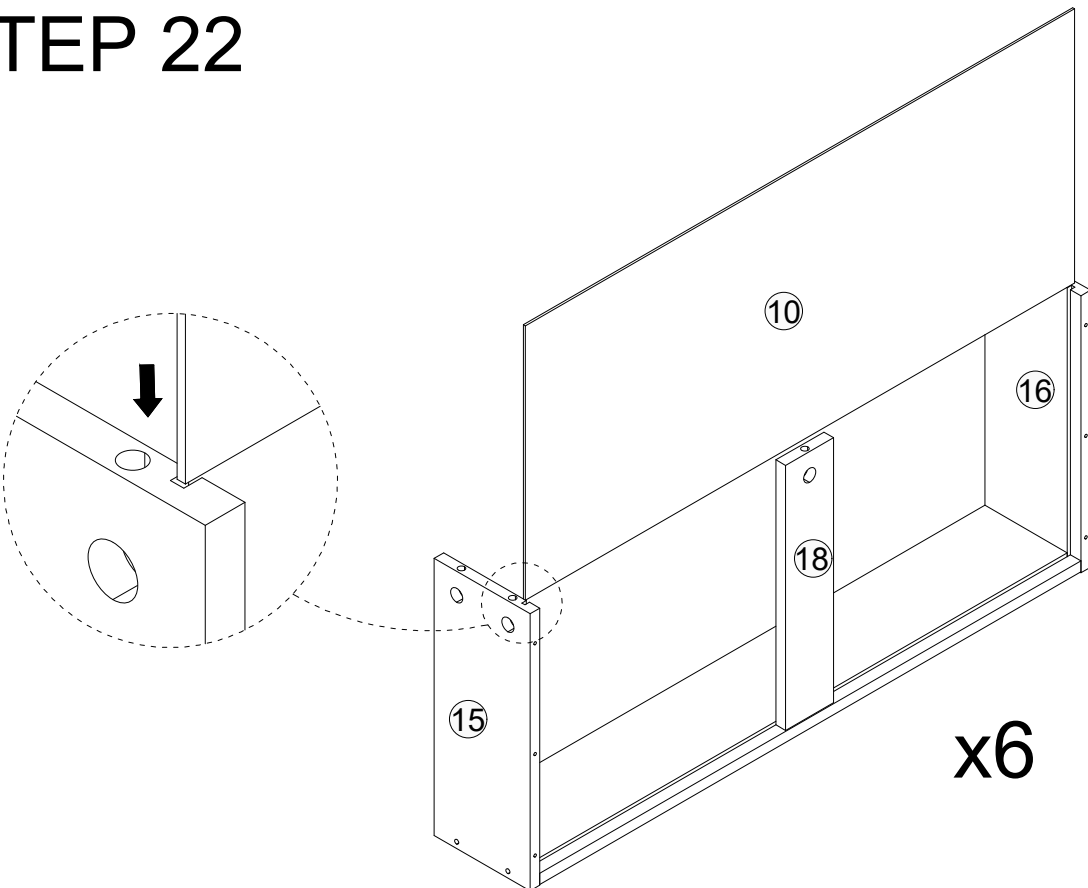


STEP 23

PF035



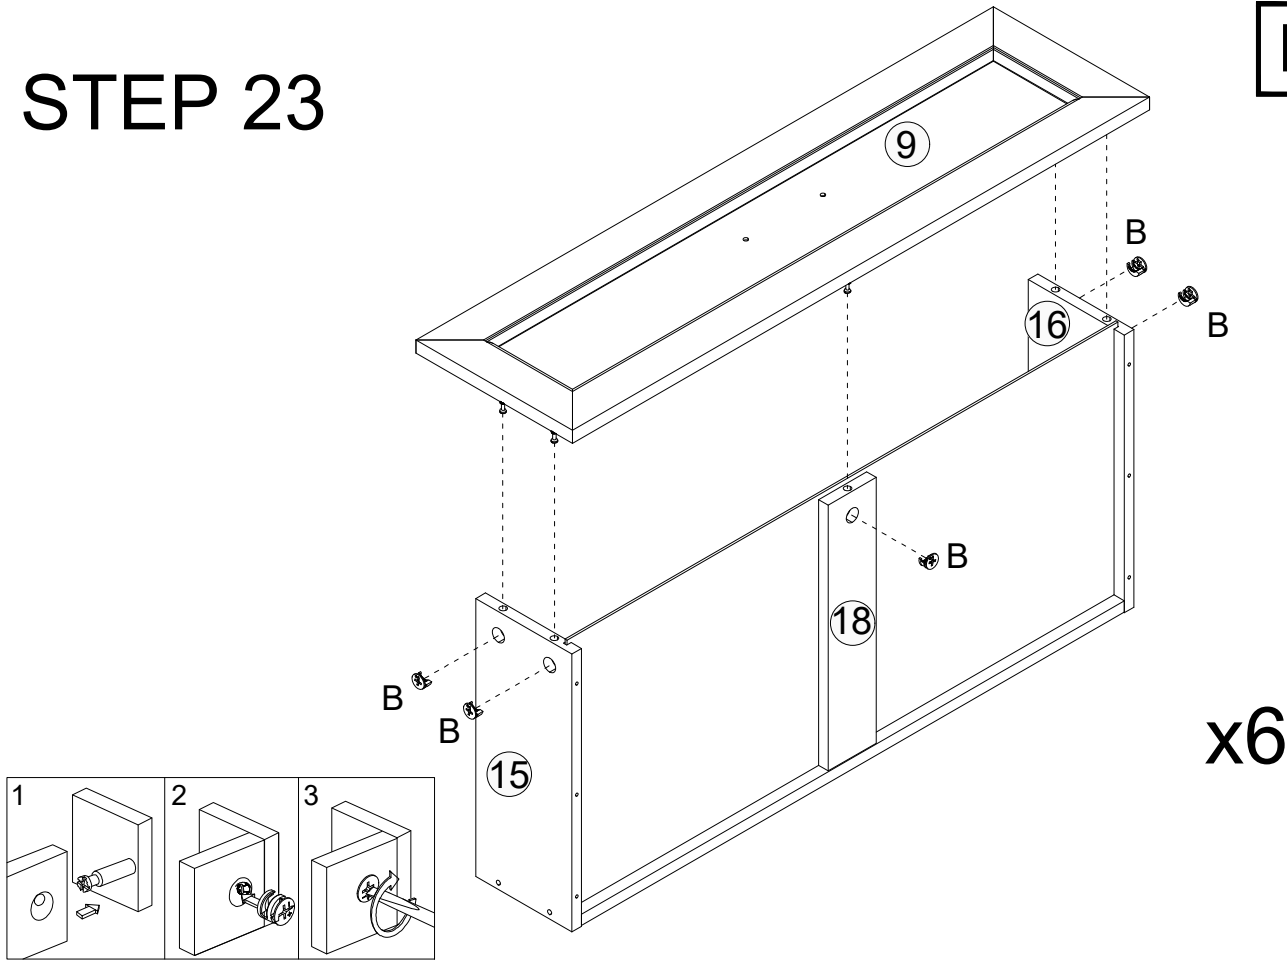


STEP 24


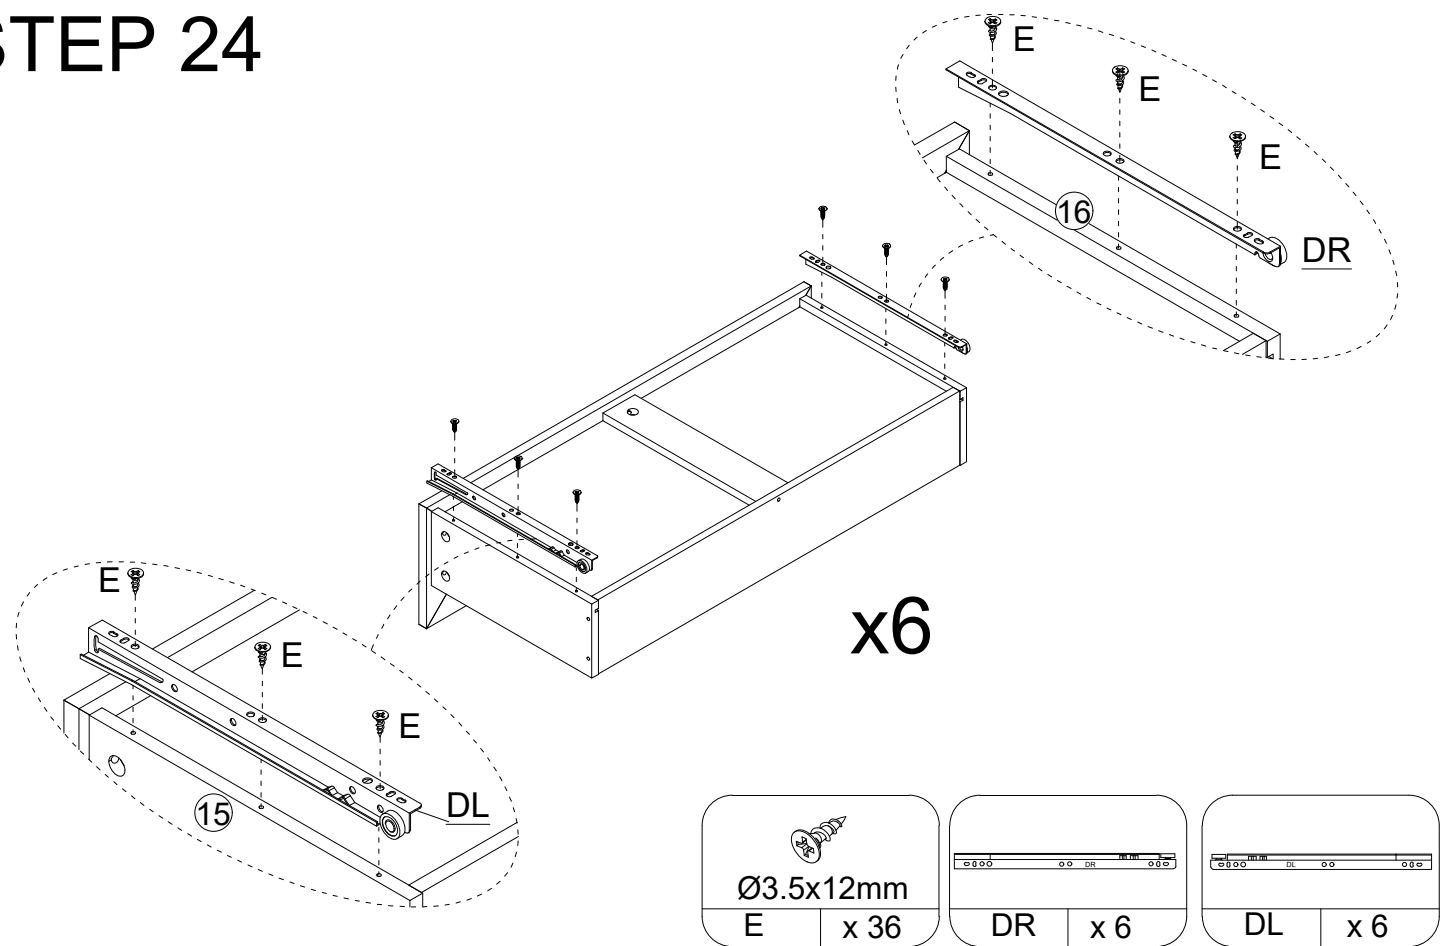


STEP 25

PF035

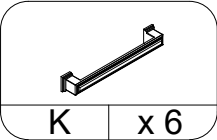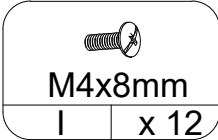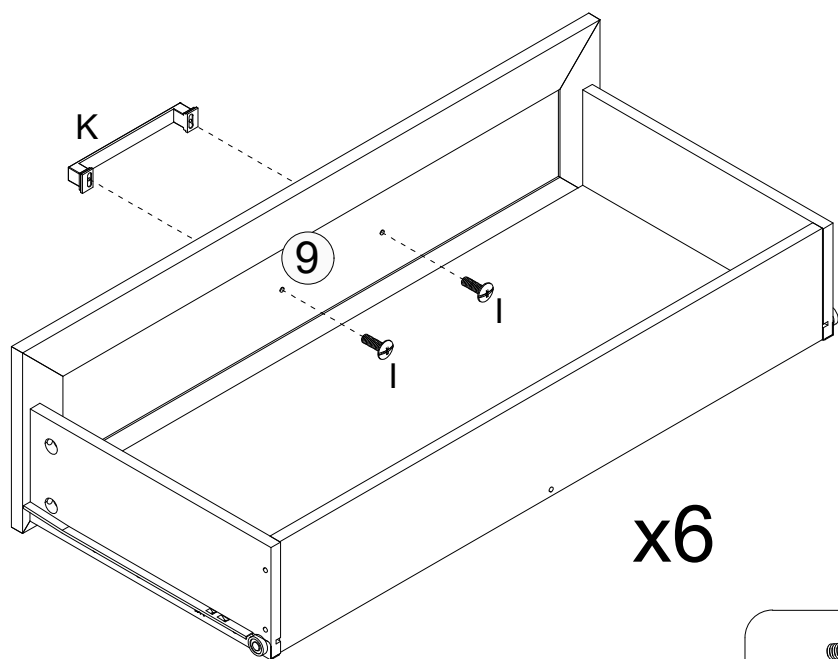


STEP 26

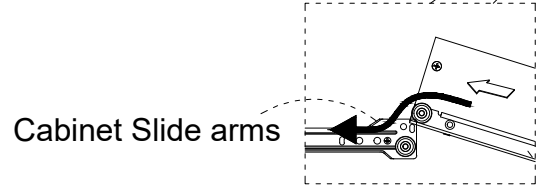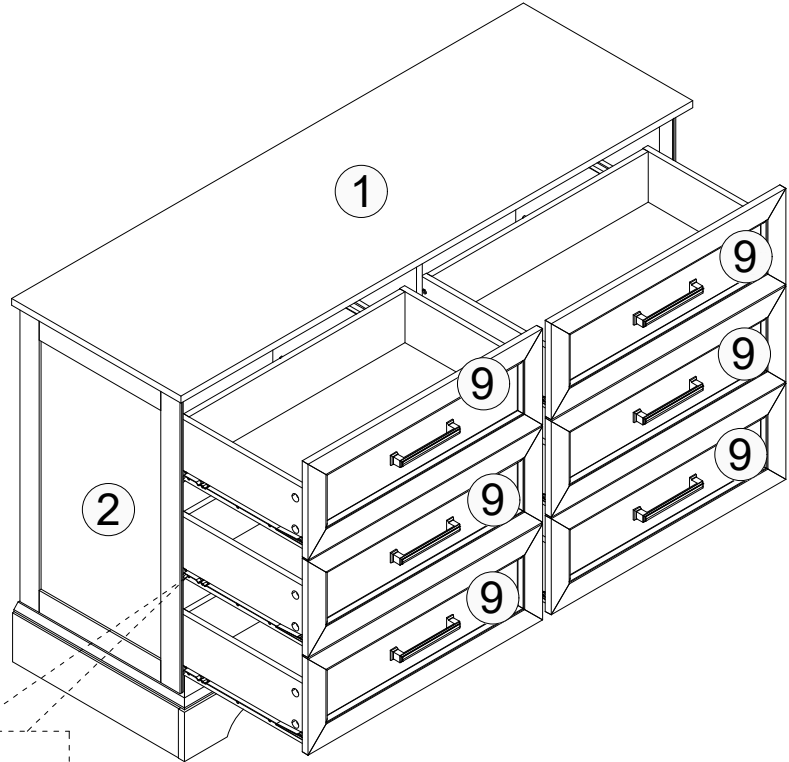


STEP 27

PF035

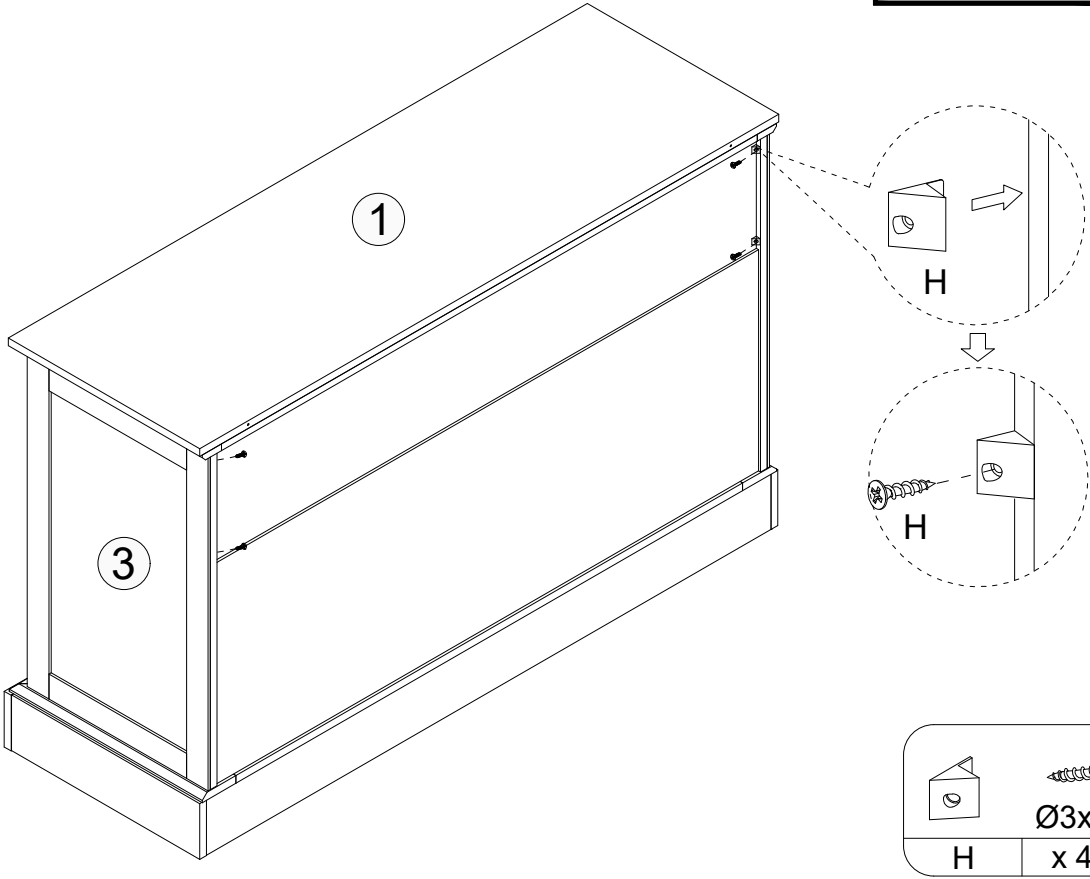


STEP 28

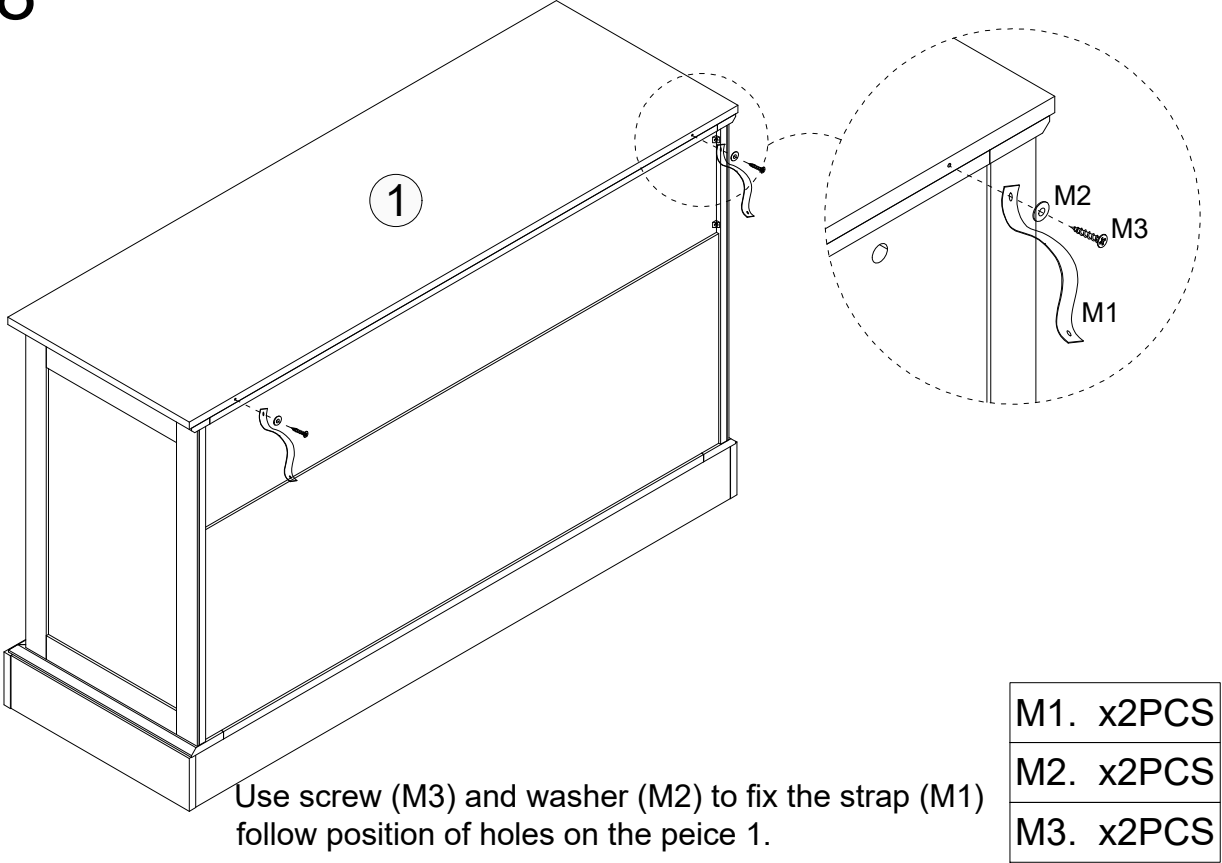


STEP 29


PF035

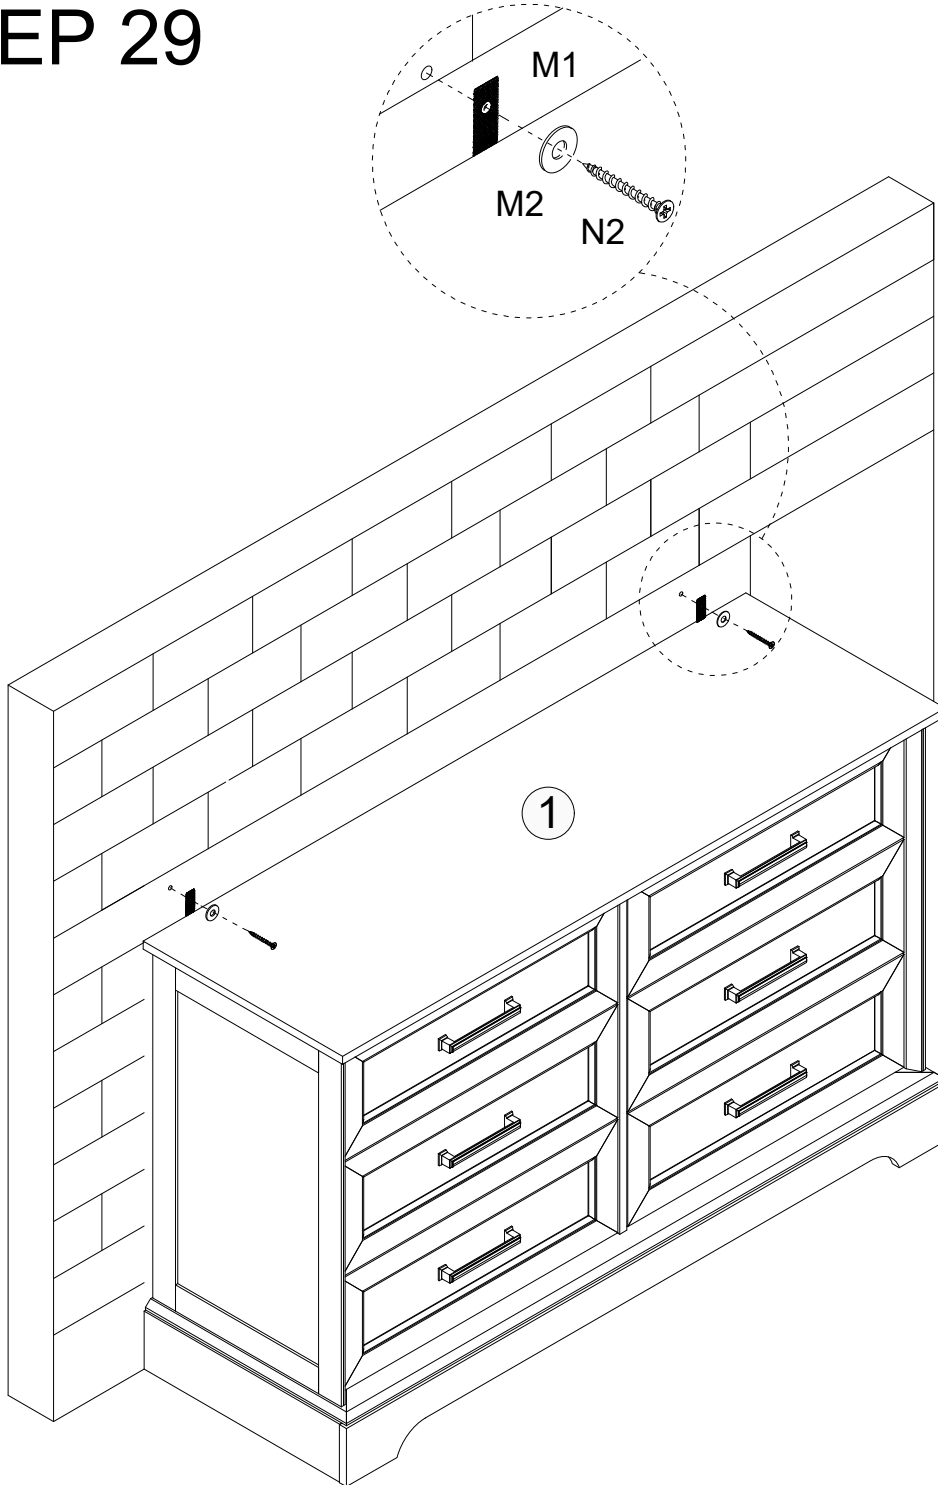


WALL

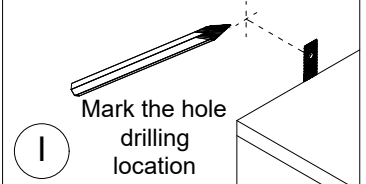

WALL

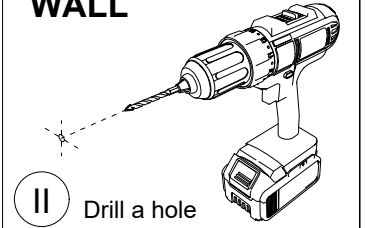

WALL

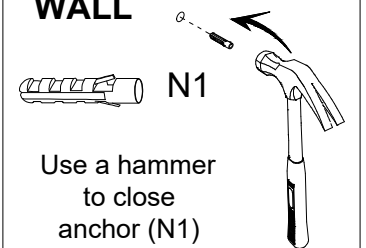

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (N1) on the wall.

Step 3: use screw (N2) to fix the strap (M1), (M2) on the wall .

N1. x2PCS

N2. x2PCS

M2. x2PCS

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning