



BED FRAME

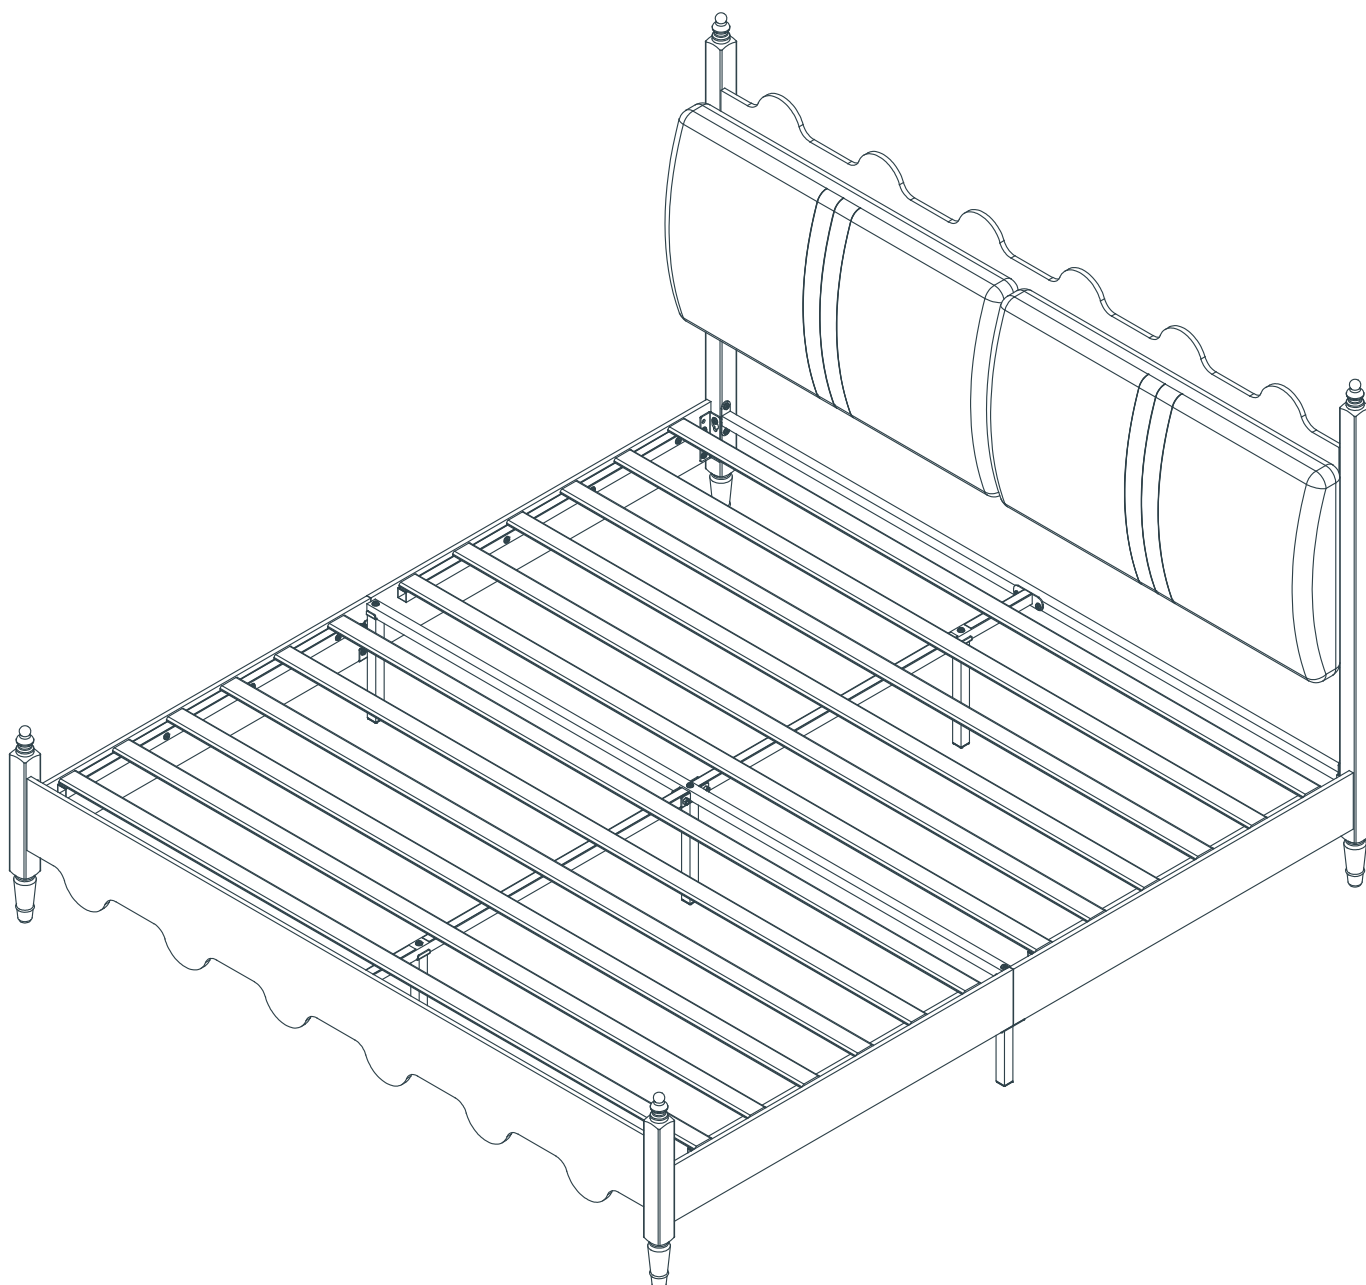

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

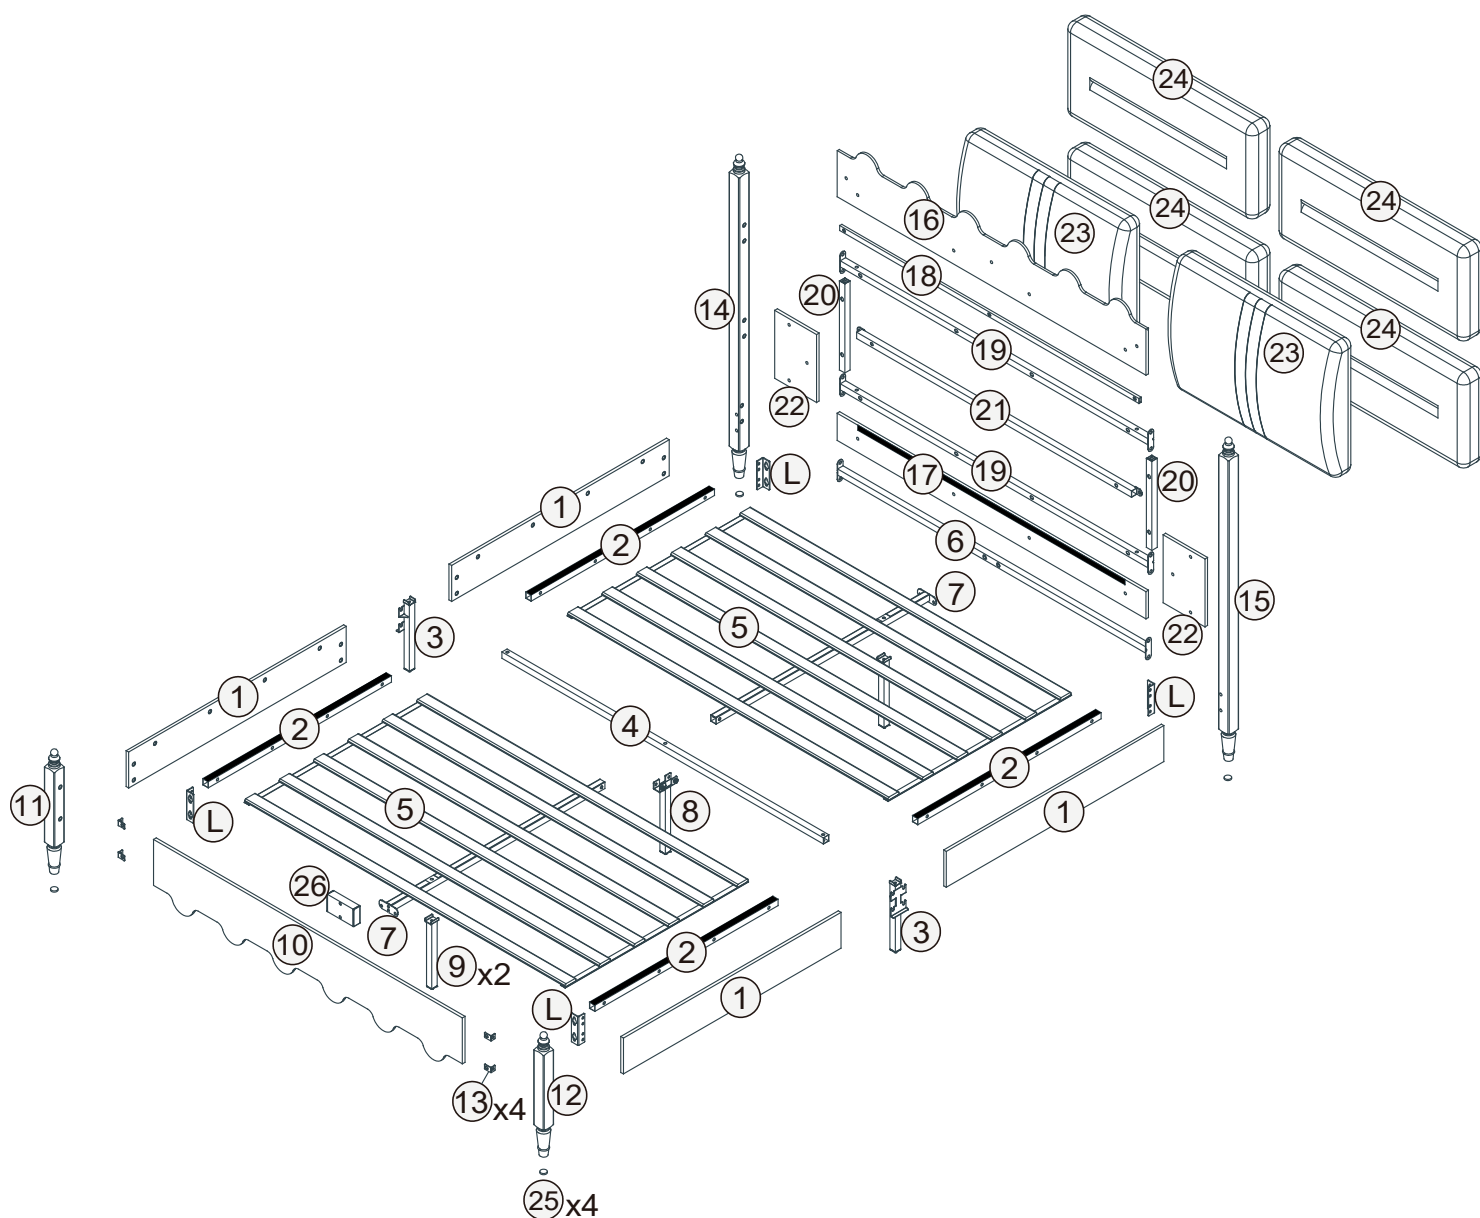


B651-K

Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

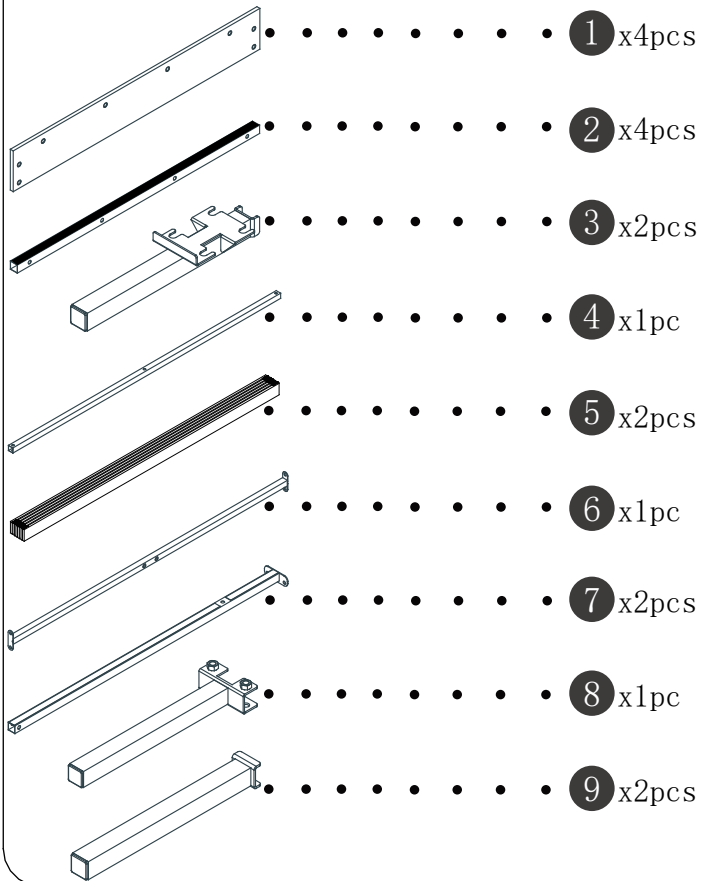

1 x4pcs

2 x4pcs

3 x2pcs

4 x1pc


5 x2pcs

6 x1pc

7 x2pcs

8 x1pc

9 x2pcs

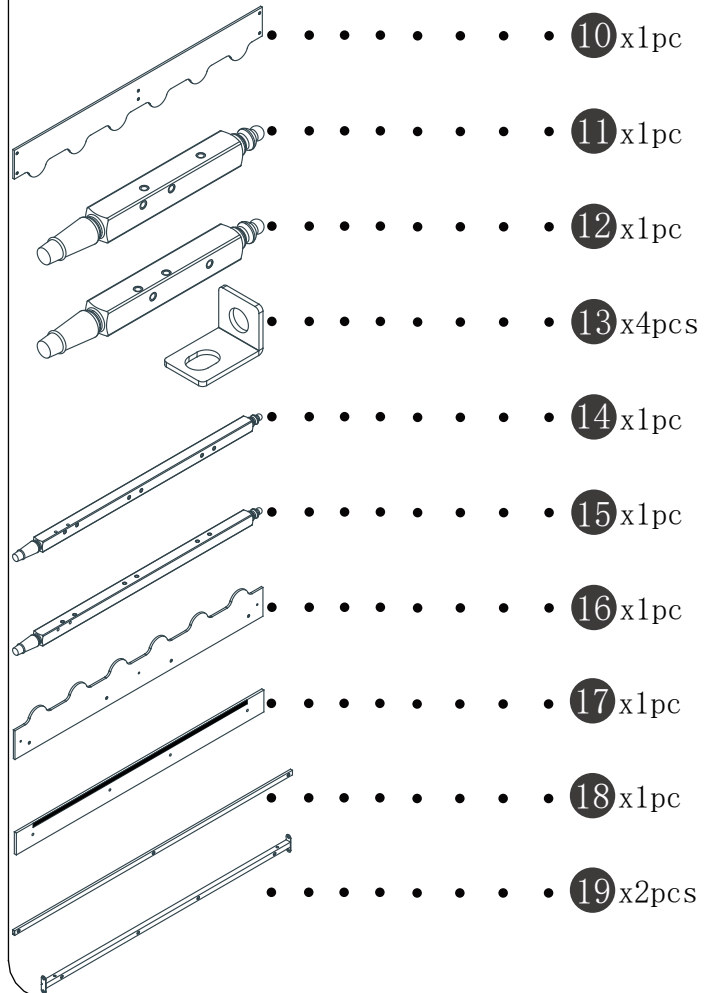

10 x1pc

11 x1pc

12 x1pc

13 x4pcs

14 x1pc


15 x1pc

16 x1pc

17 x1pc

18 x1pc

19 x2pcs

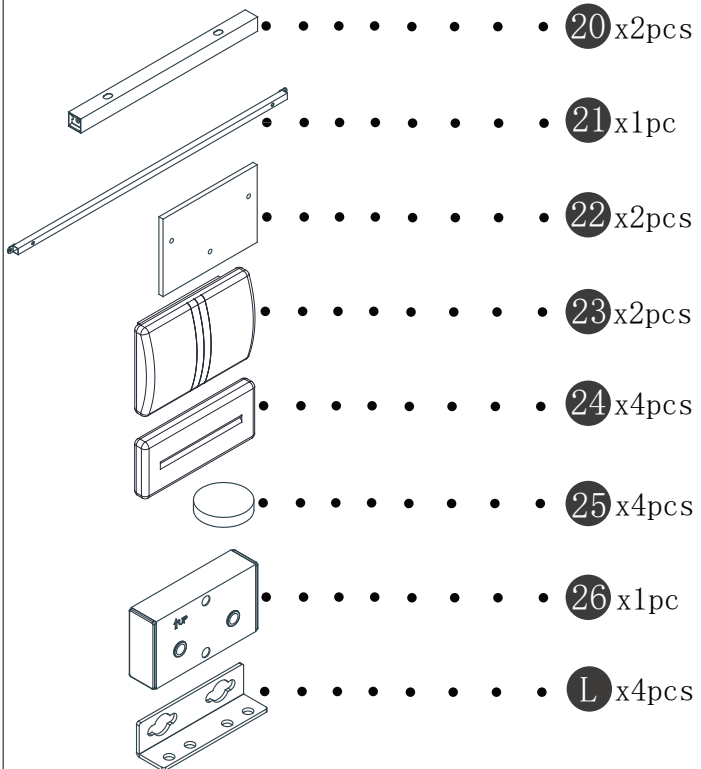

20 x2pcs

21 x1pc

22 x2pcs


23 x2pcs

24 x4pcs

25 x4pcs

26 x1pc

L x4pcs

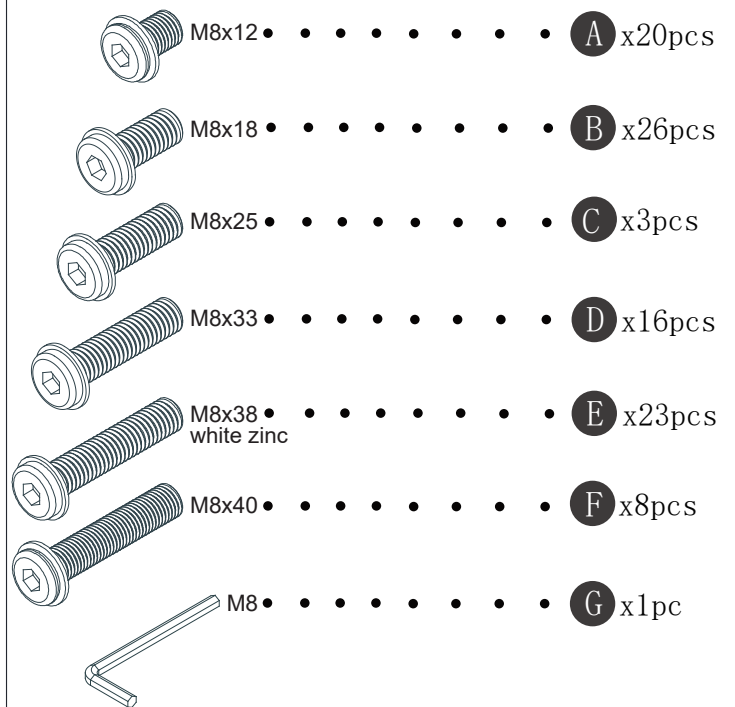

A x20pcs

B x26pcs

C x3pcs

D x16pcs


E x23pcs

F x8pcs

G x1pc

1


⚠ Do not fully tighten the screws yet.

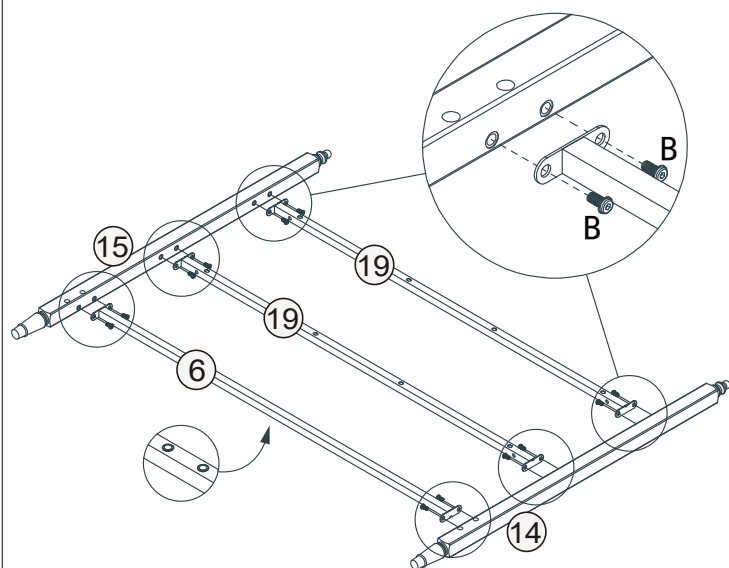

B		12pcs
M8x18		


2

⚠ Do not fully tighten the screws yet.

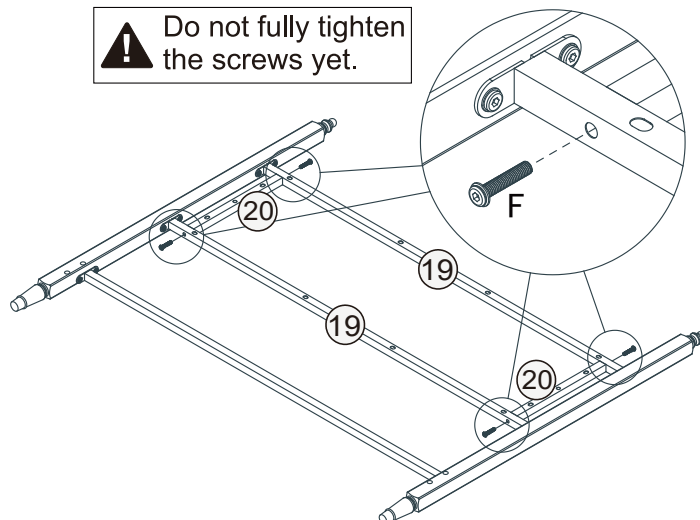


F		4pcs
M8x40		

3

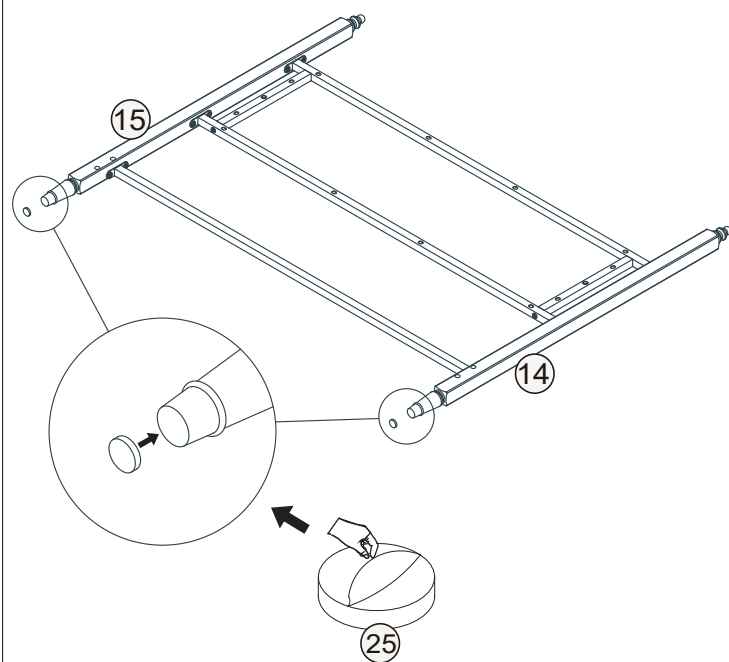


4

⚠ Do not fully tighten the screws yet.

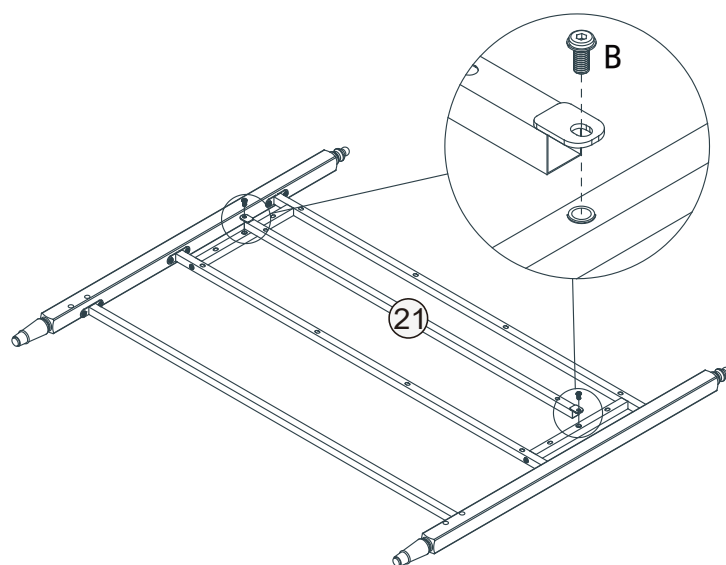


B		2pcs
M8x18		

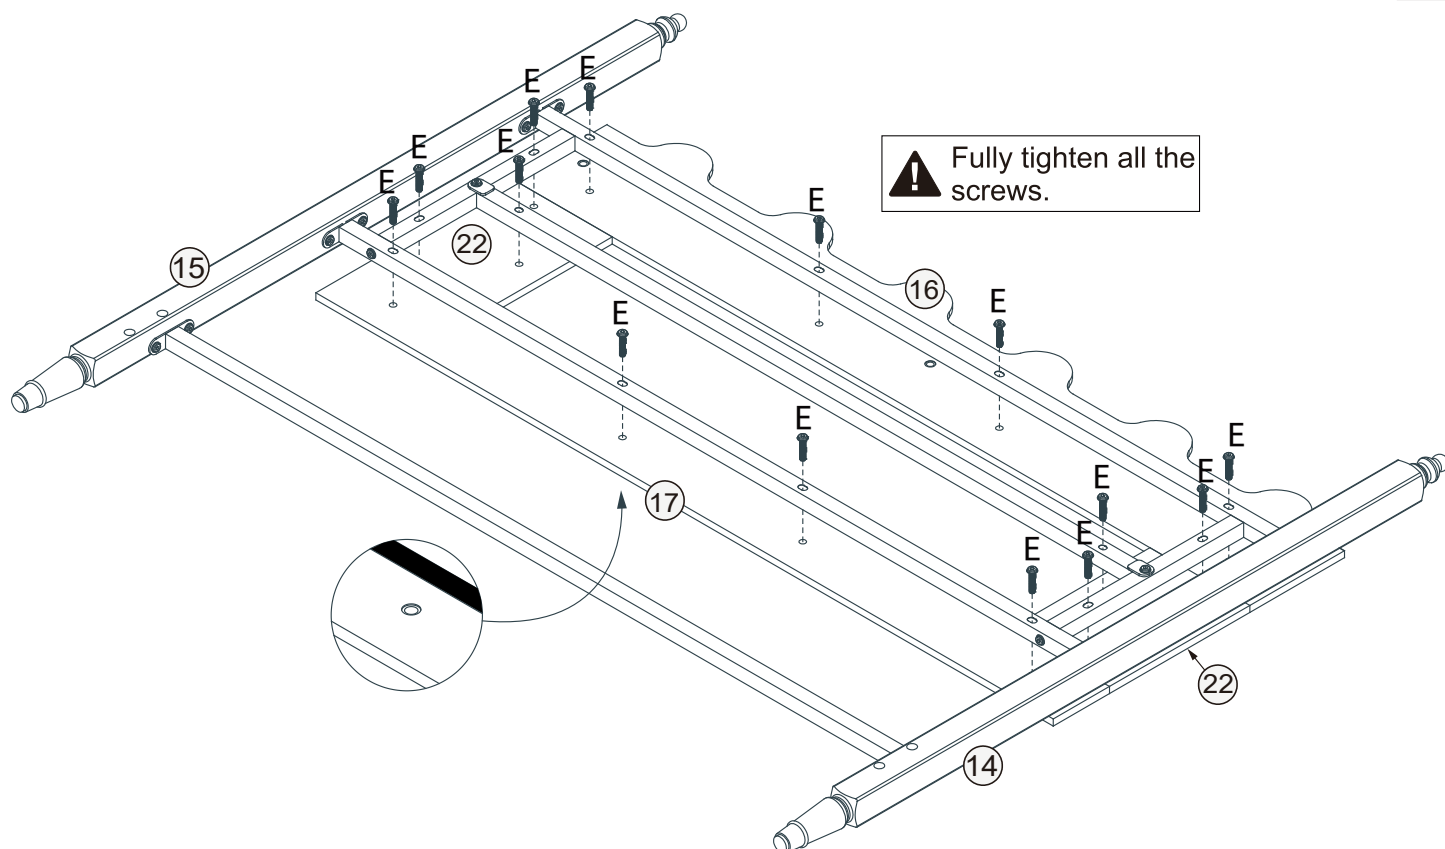


E		14pcs	white zinc
M8x38			


x2

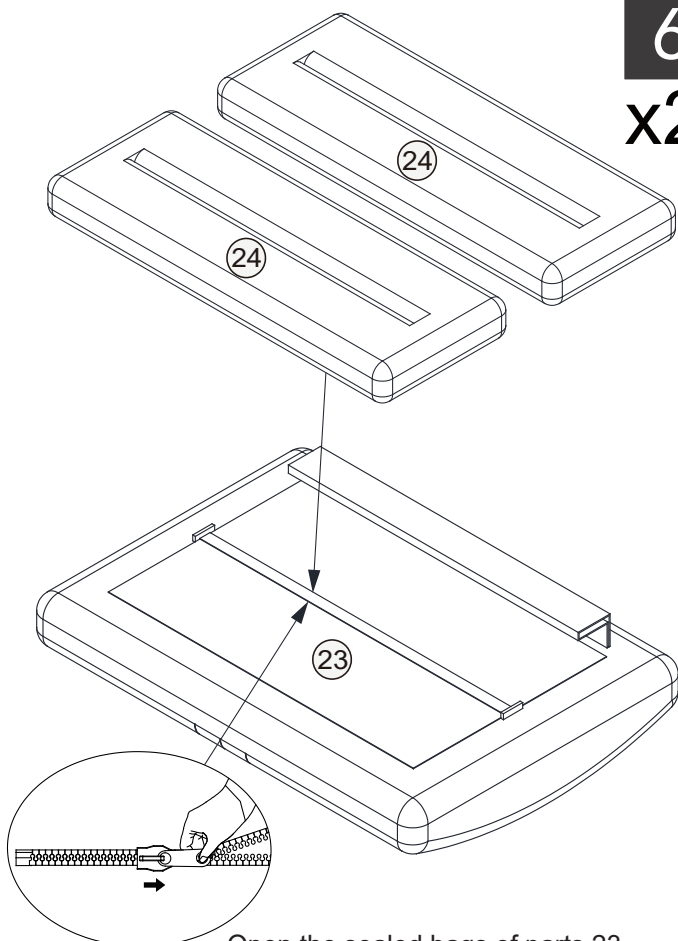

Open the sealed bags of parts 23, put parts 24 in turn into parts 23, and finally tighten the zipper.

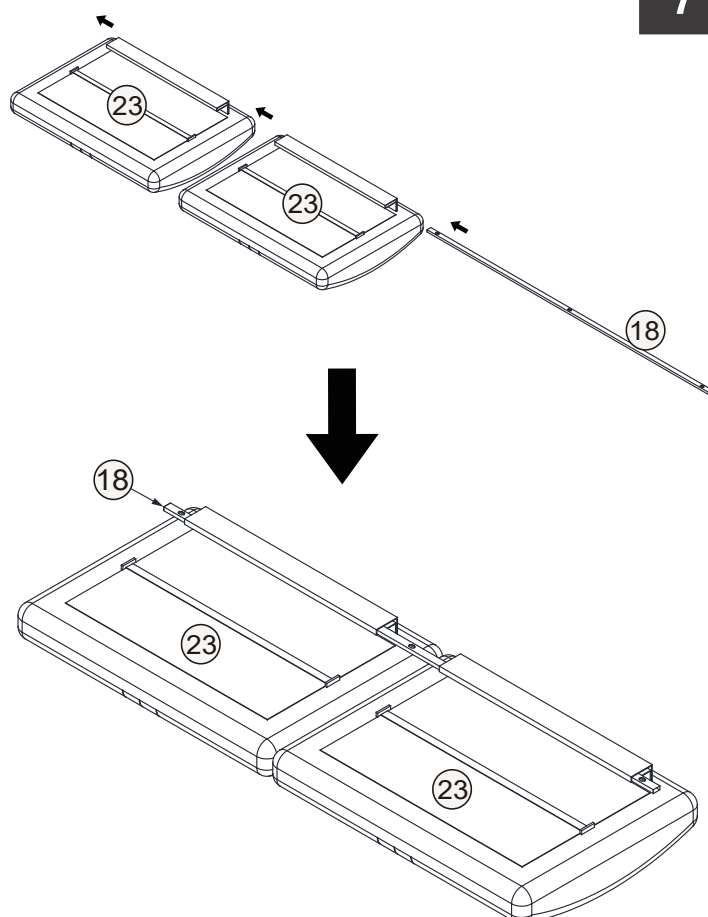


8

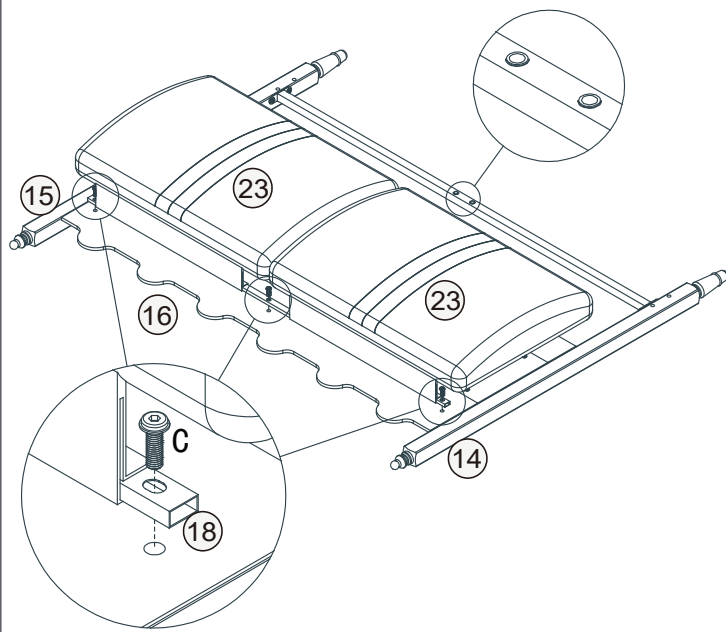


C		3pcs
M8x25		

9

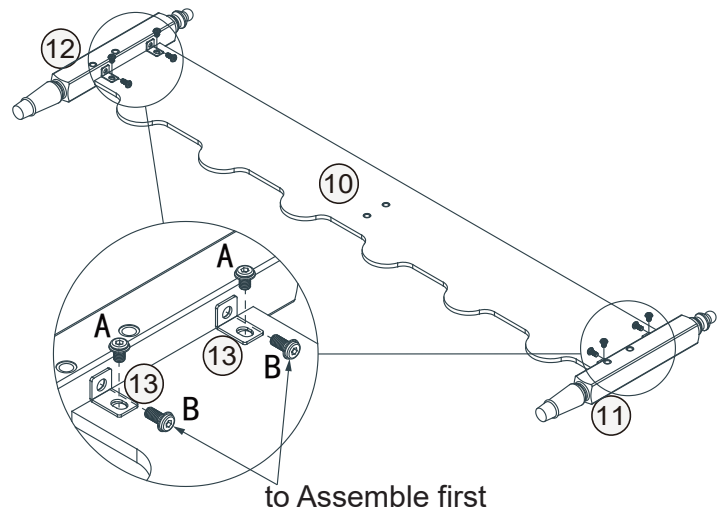

A		4pcs
M8x12		
B		4pcs
M8x18		


10

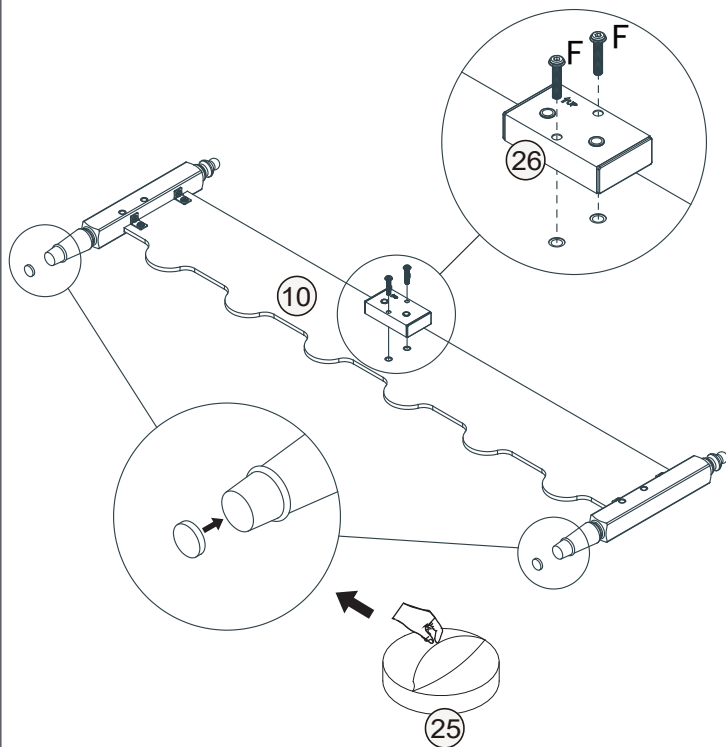

F		2pcs
M8x40		

11


x2

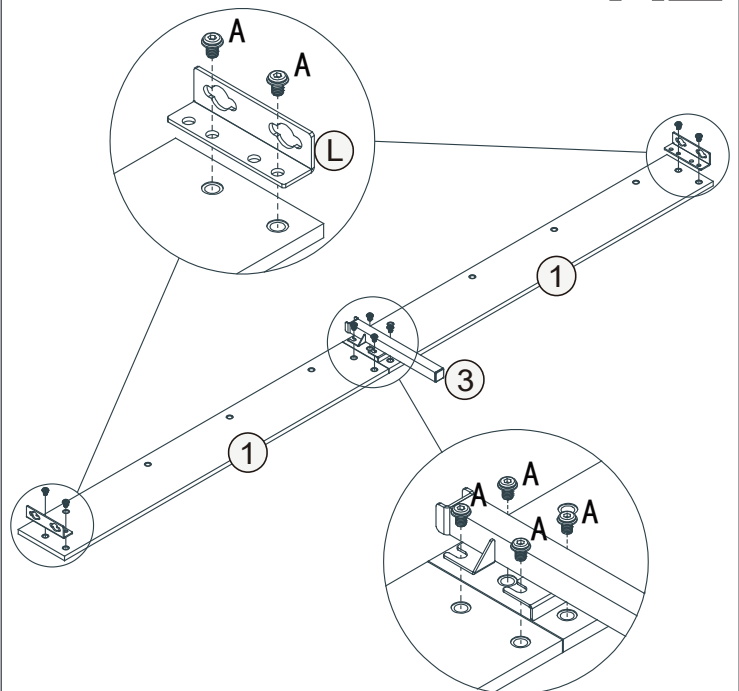

A		16pcs
M8x12		


12

x2

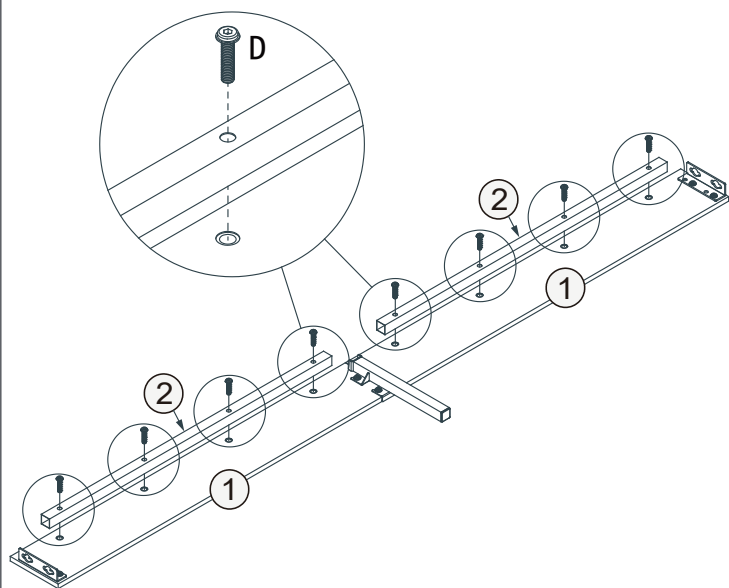

D		16pcs
M8x33		


13

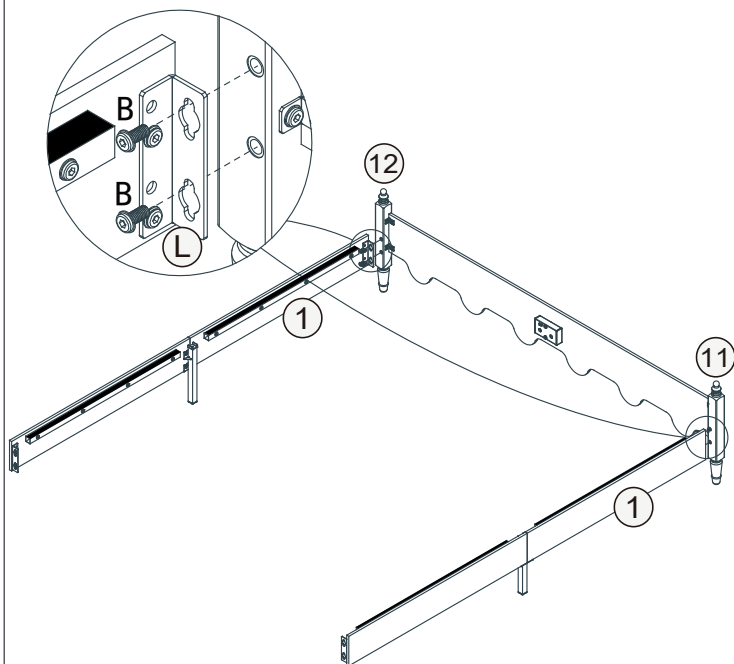

B		4pcs
M8x18		


2 PERSON
ASSEMBLE

14

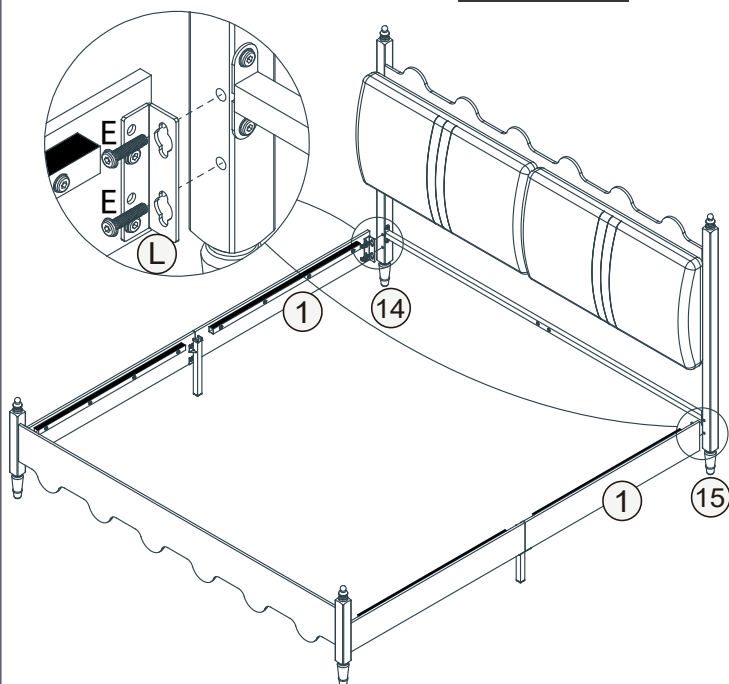


E		4pcs	white zinc
M8x38			

15

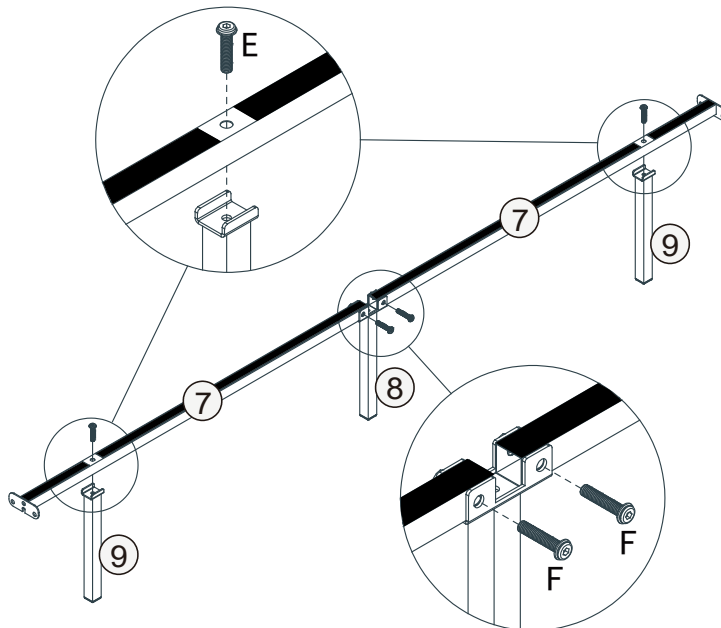

E		2pcs	white zinc
M8x38			
F		2pcs	
M8x40			

16

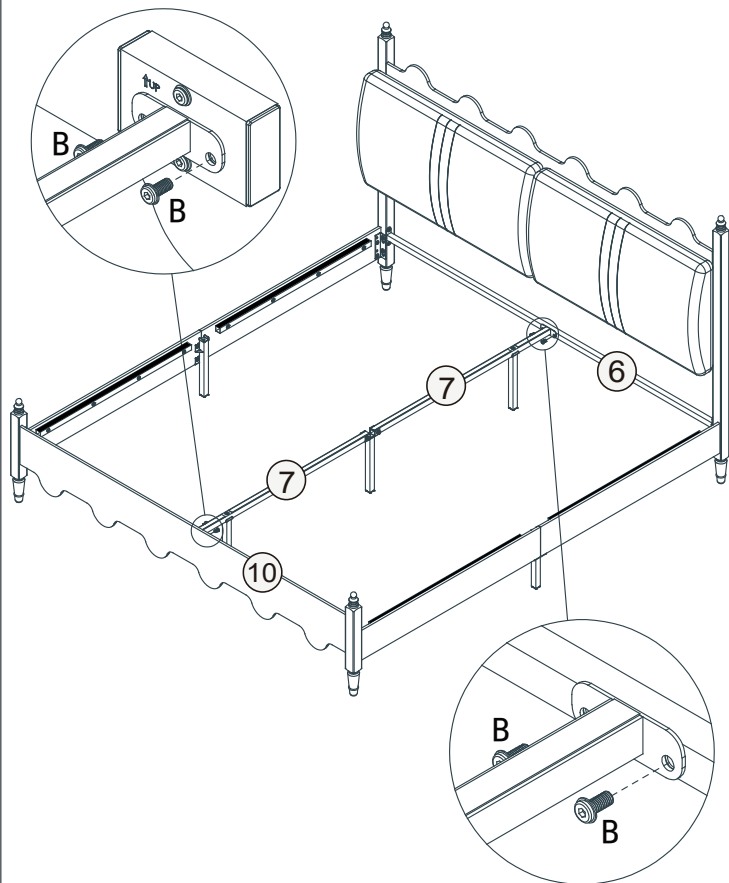


B

M8x18

4pcs

17

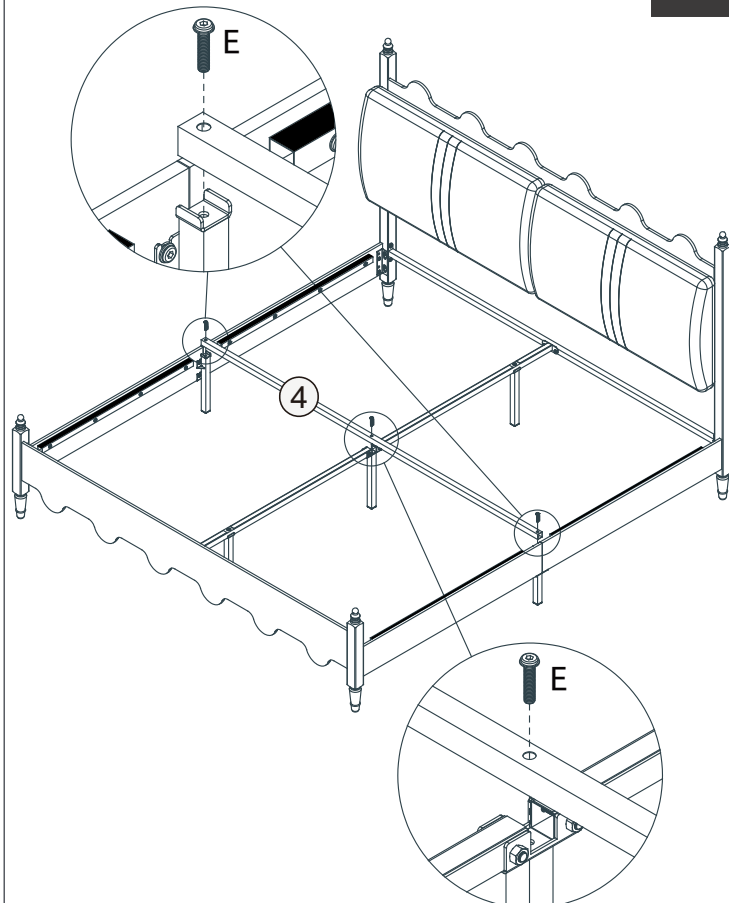


E

M8x38

3pcs

white zinc


18

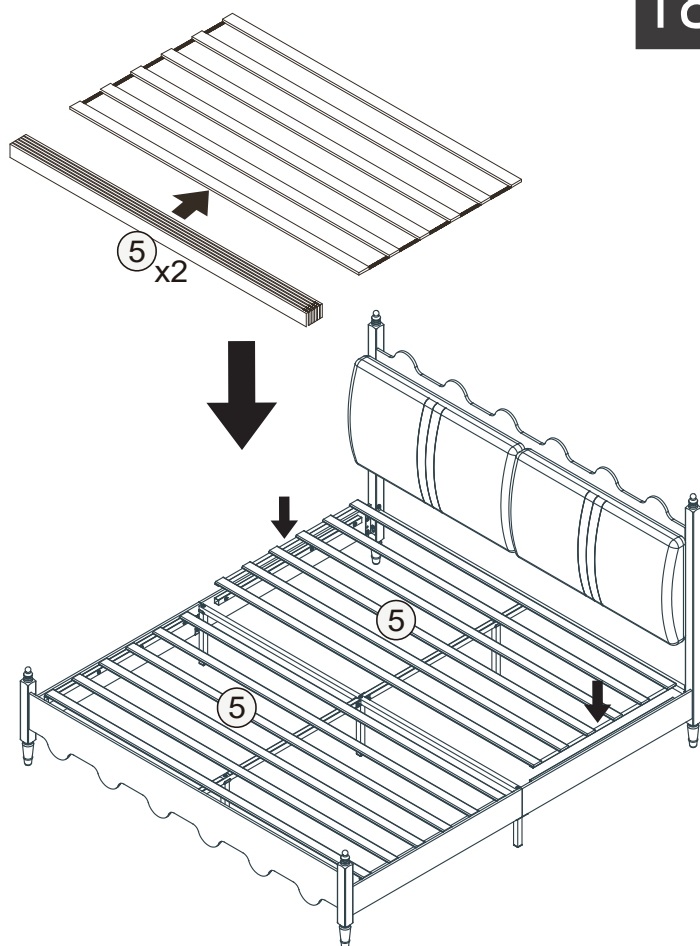

5 x2

19

Note: Now you can tighten all the bolts.

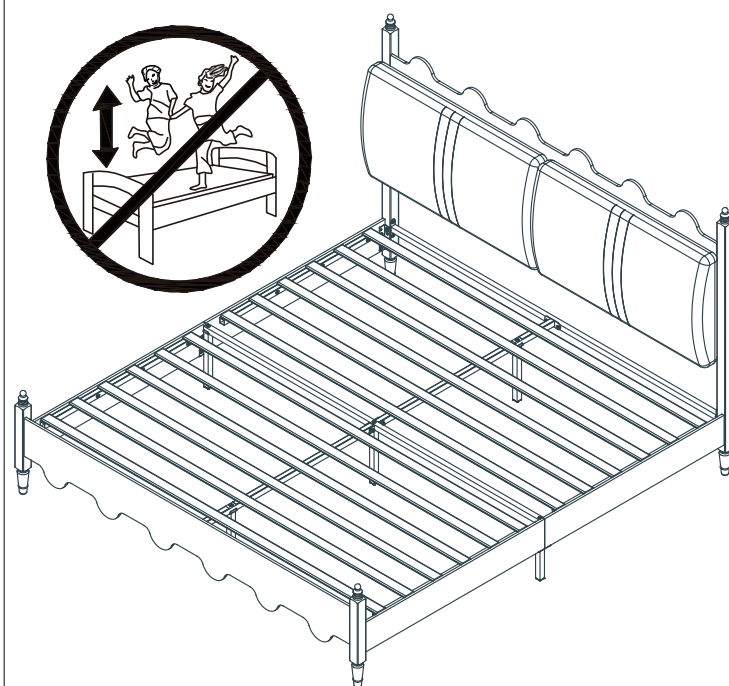

Finish