






ASSEMBLY GUIDE

COSMO 4-DOOR WARDROBE


SKU 7301D / 7301M - White

SKU 7305D / 7305M - Gray

SKU 7307D / 7307M - Black

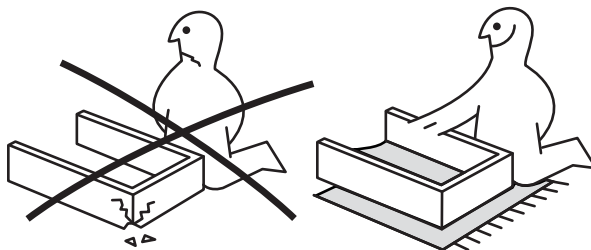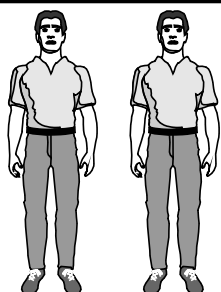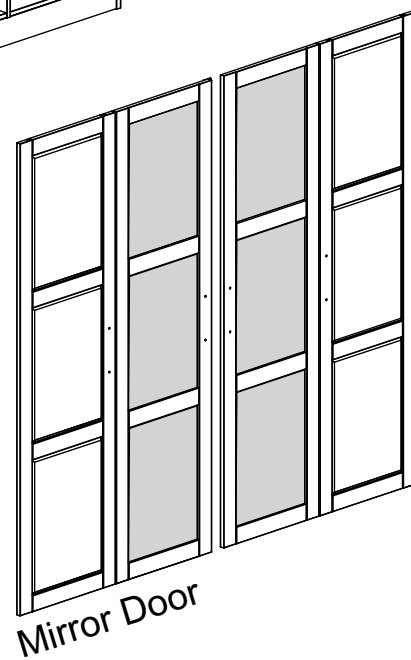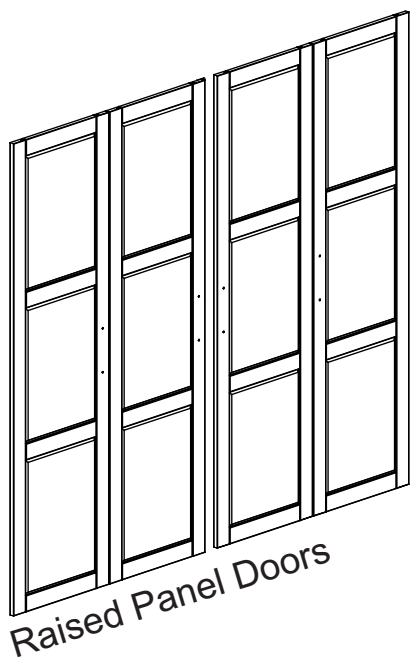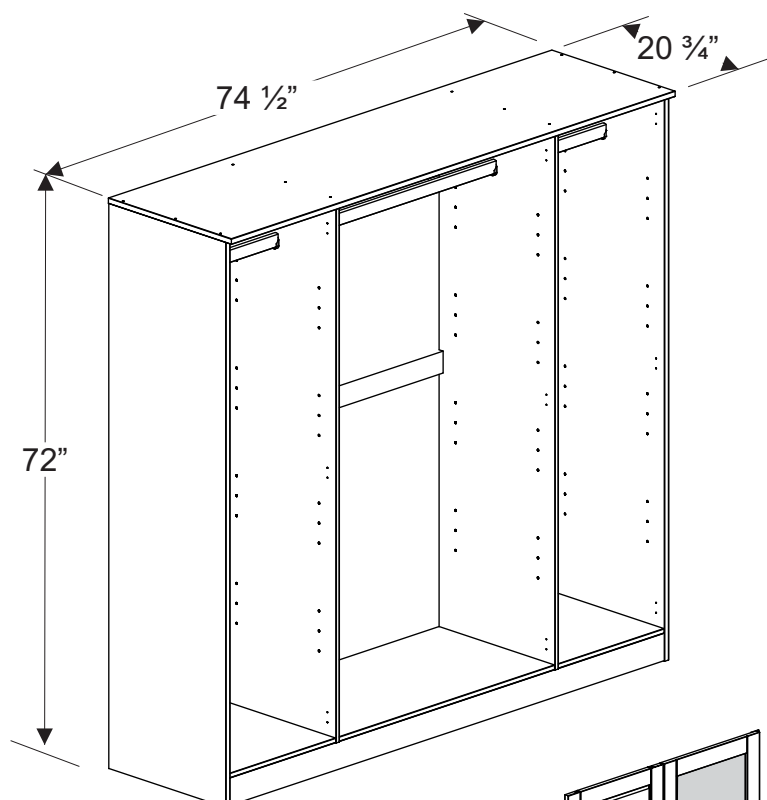

REV - 03/2023



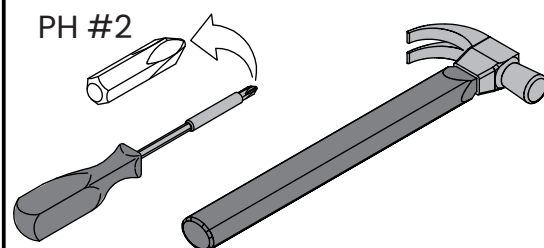


page 2/17










PRE-ASSEMBLY PREPARATION


- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsInc.com
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

PARTS DIAGRAM

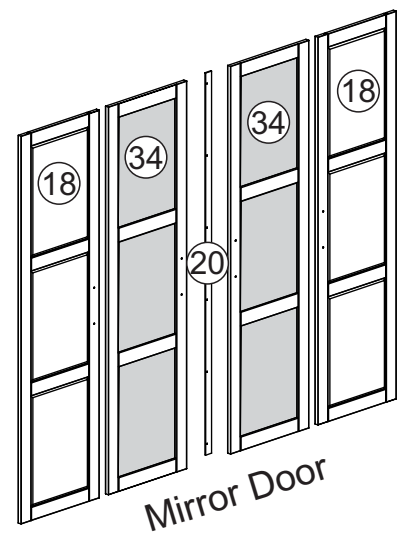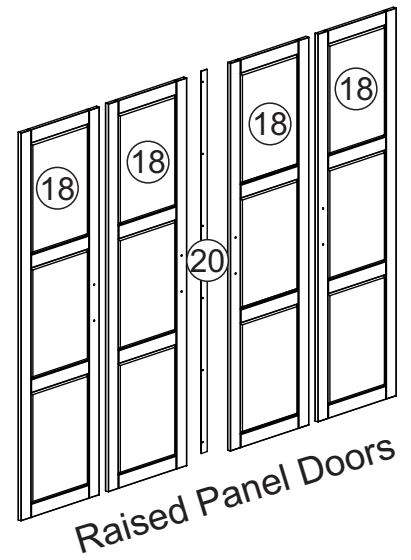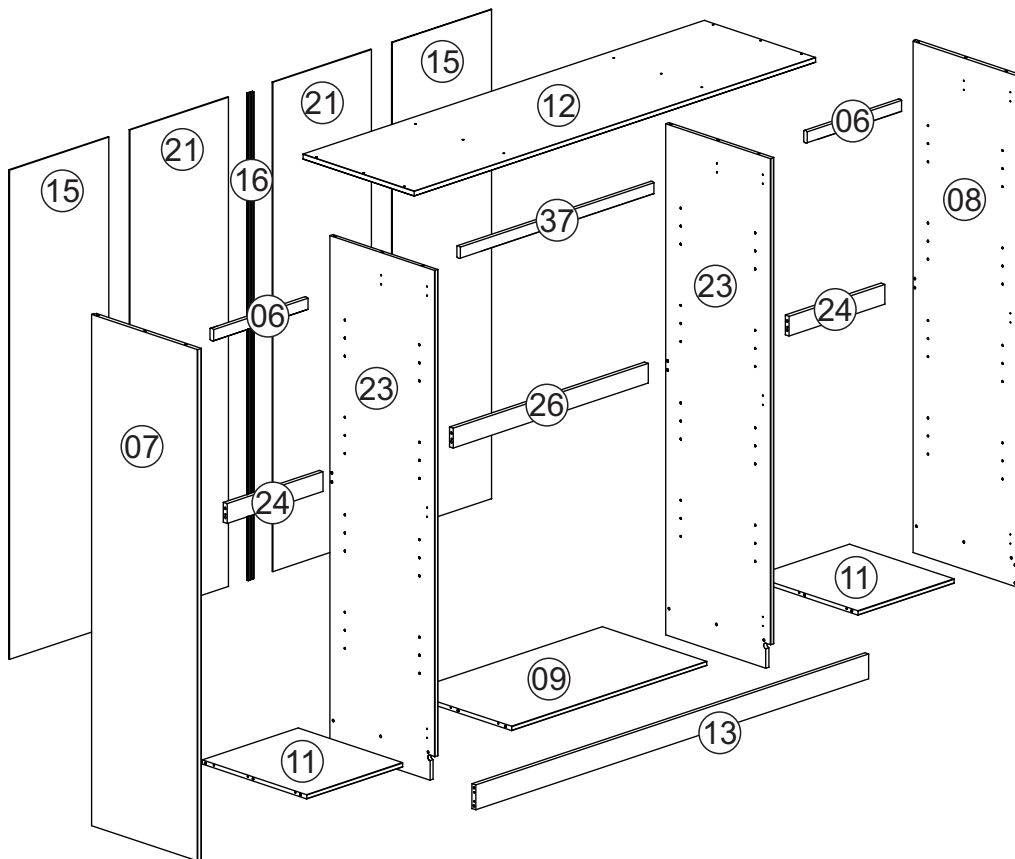

SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	28+2
A16	 4,0x40	12+1
A25	 M4x25	08+1
A42	 4,0x14	12+1
A44	 3,5x14	68+3
C2	 8,0x25	46+3
D3		01
D10		06
D16		02
D27		10+1
F10		12
G1	 10x10	70
H12		04


FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01

WARNING:
CHOKING HAZARD
Small Parts.
Adult Supervision Required.
Not for children under 3 years old.

WARNING:
**FURNITURE TIPOVER CAN RESULT
IN SERIOUS INJURY OR DEATH**






This wardrobe includes tipover-
prevention hardware that
MUST BE ATTACHED TO THE WALL
per the assembly instructions.

01)

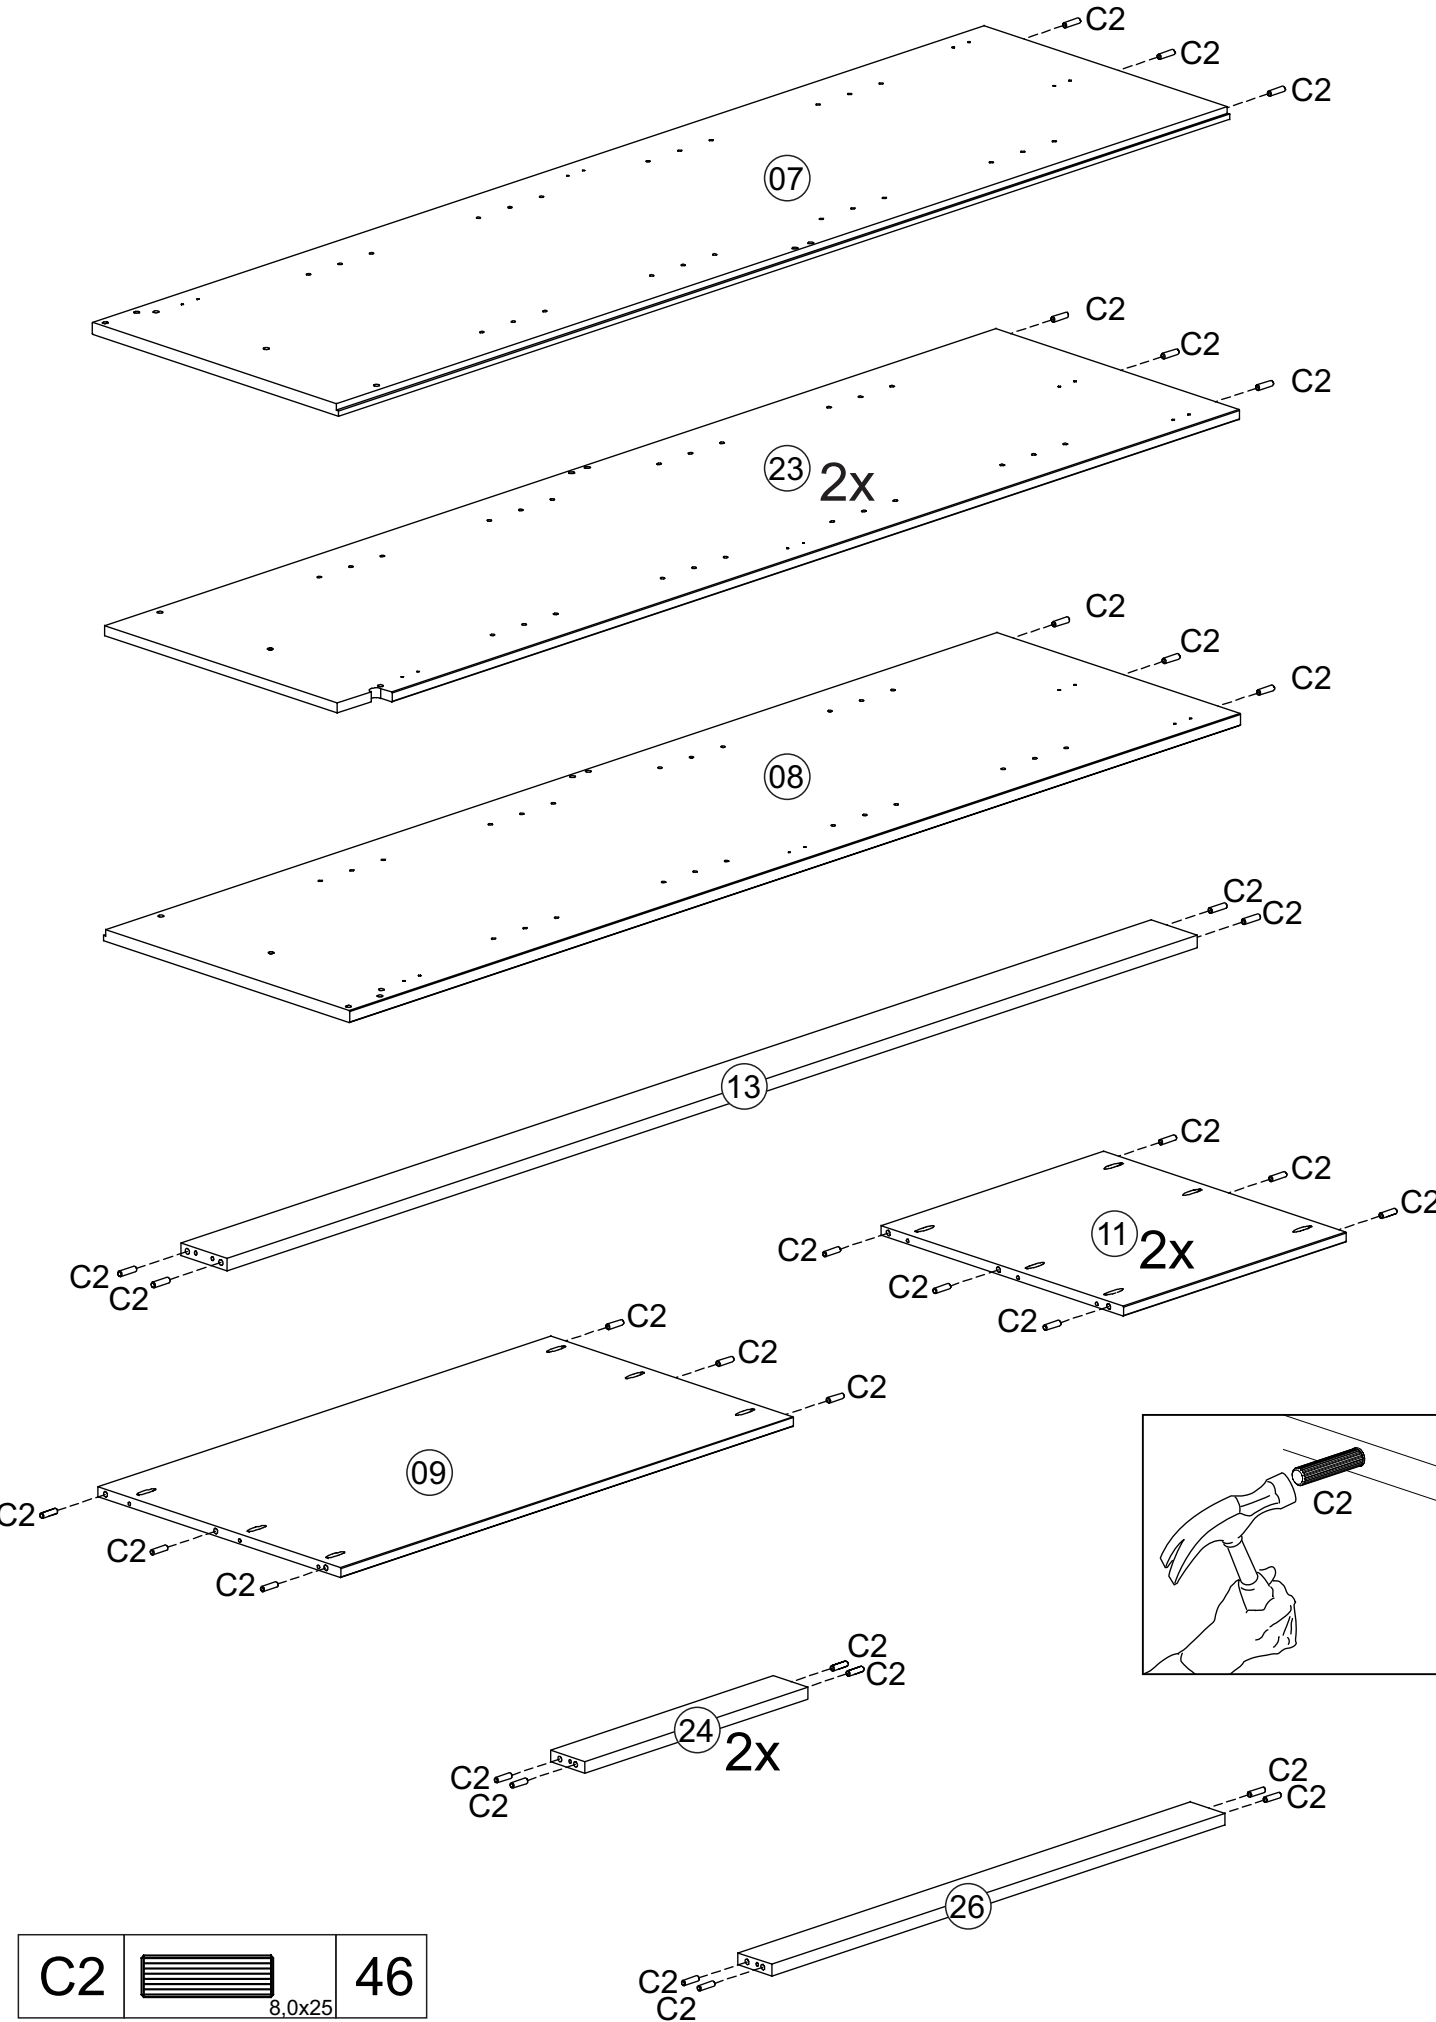



C2		46
8,0x25		

02)

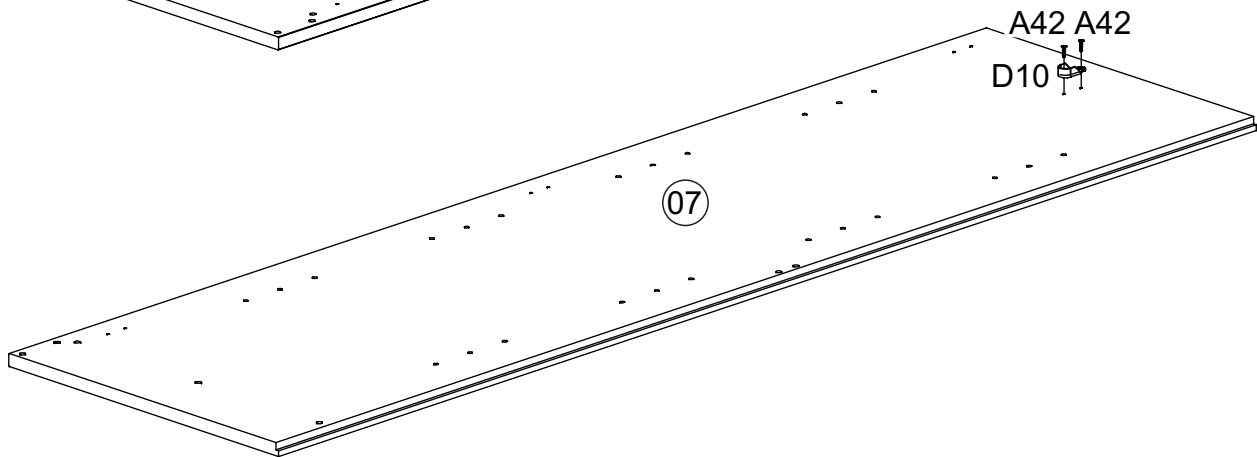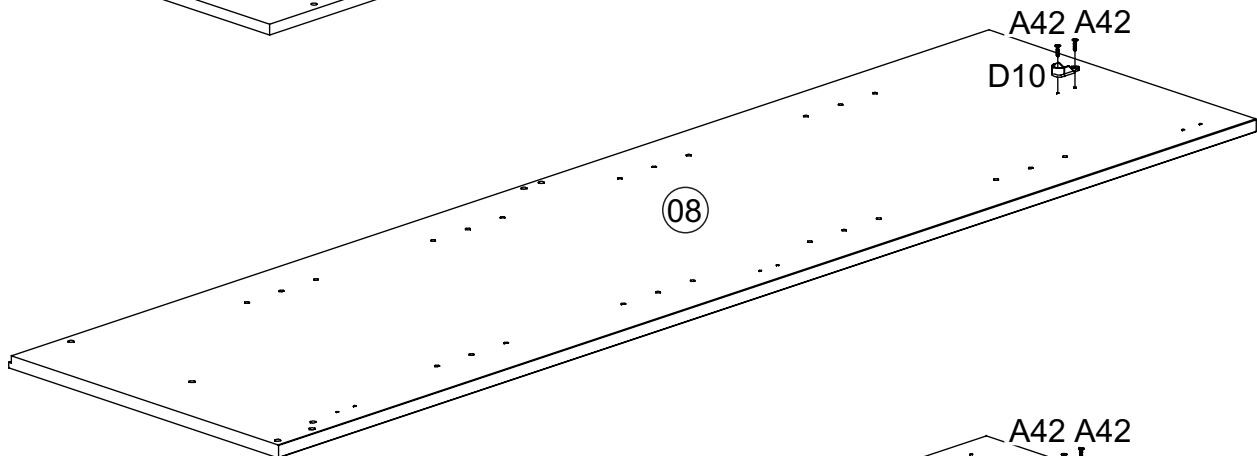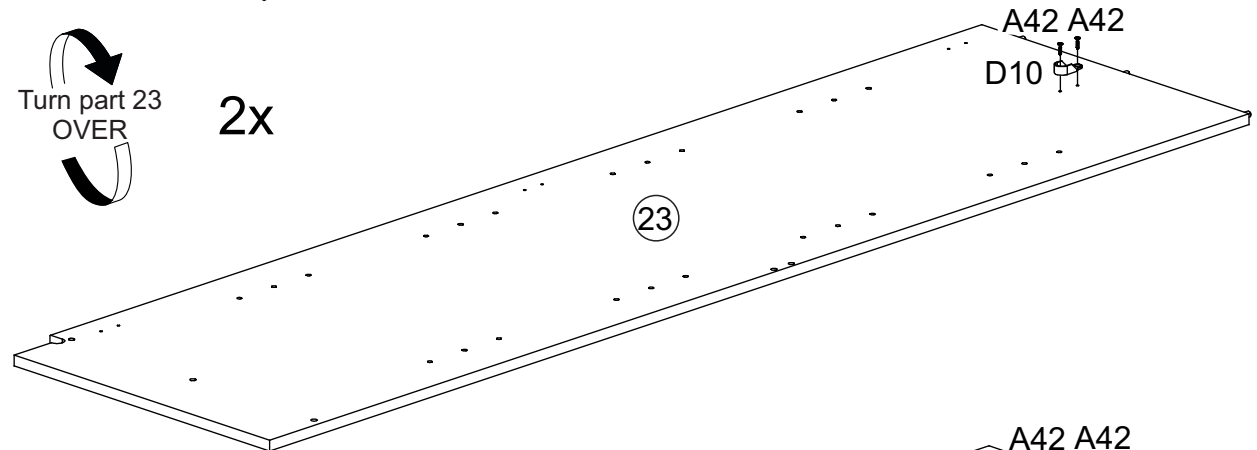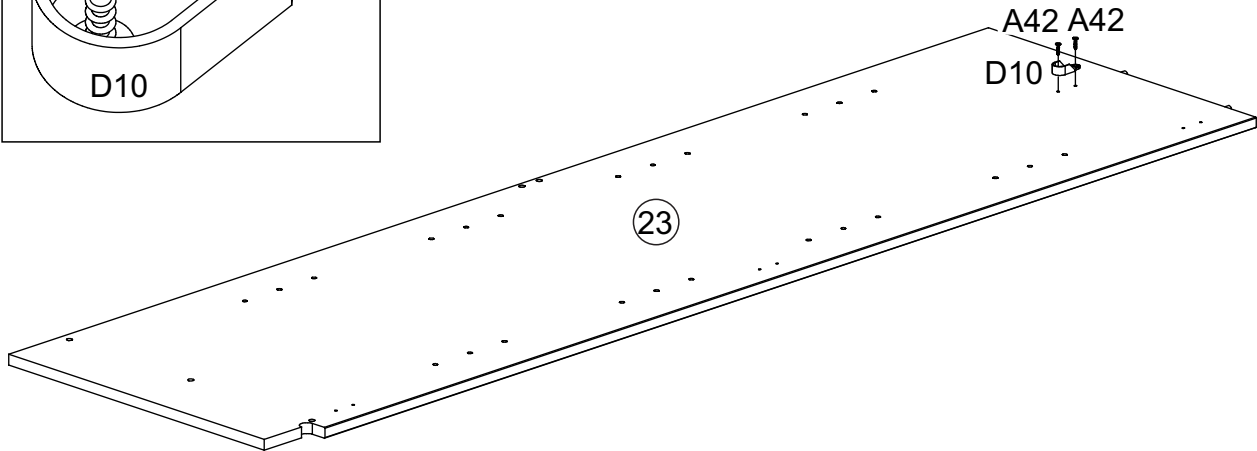
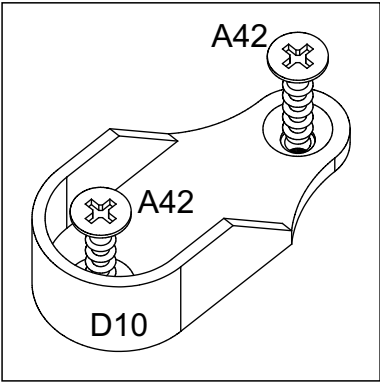


A42		12	D10		06
		4,0x14			



03)

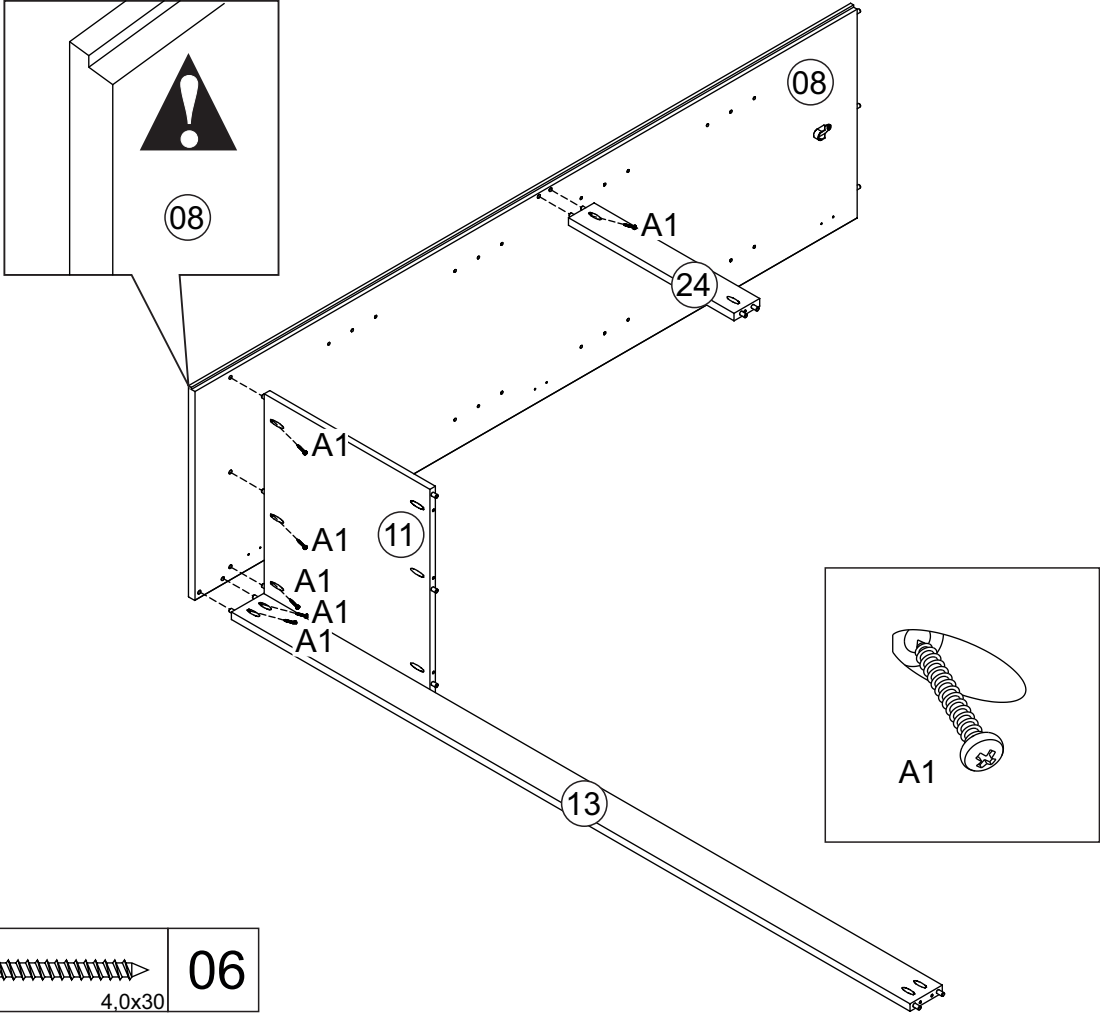

04)


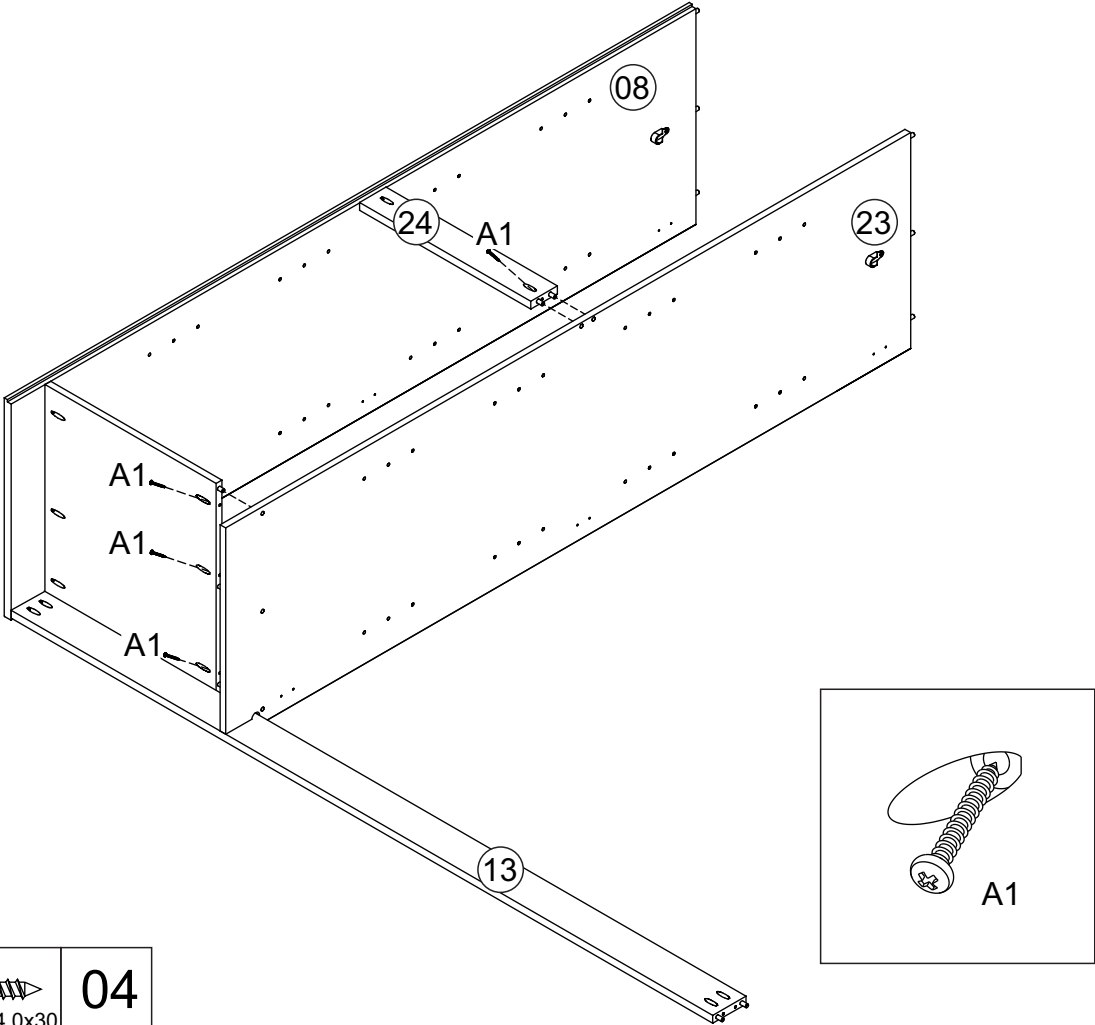



05)

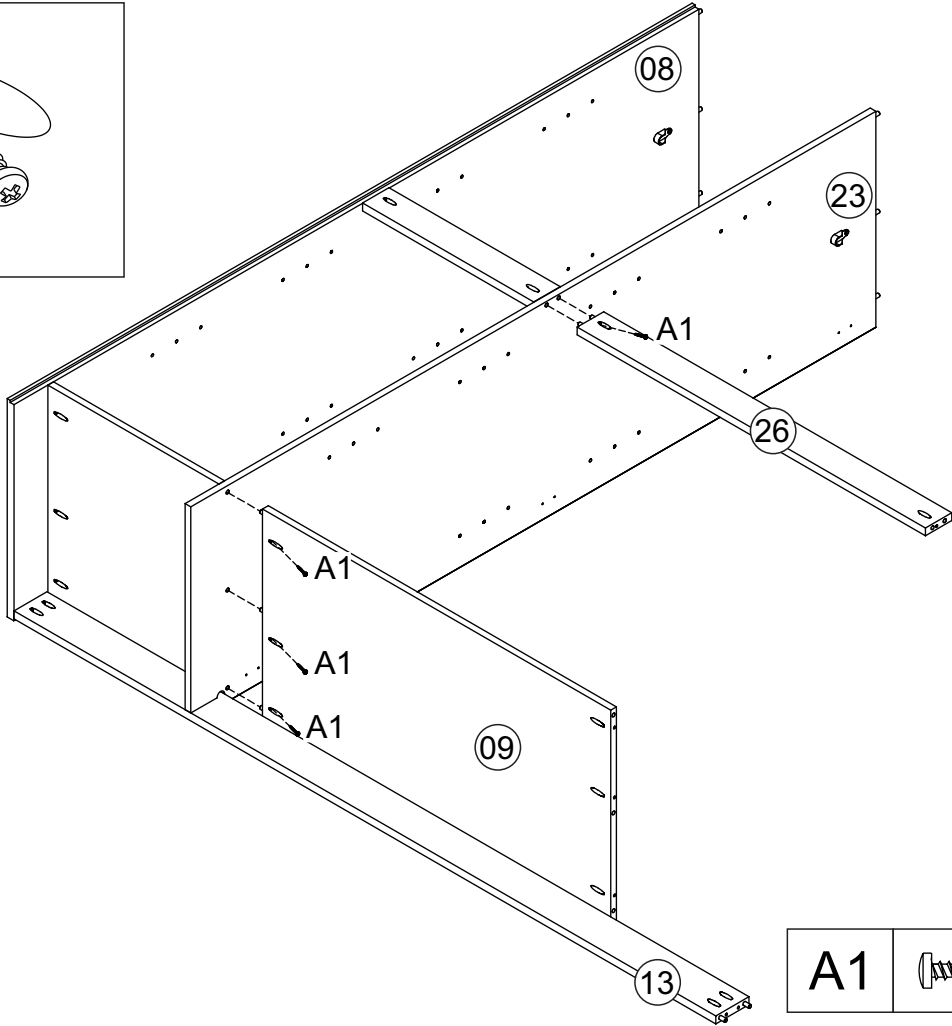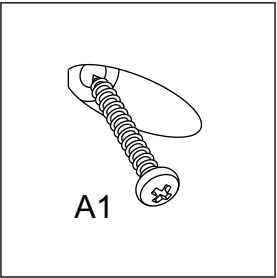




A1	 4,0x30	04
----	---	----

06)


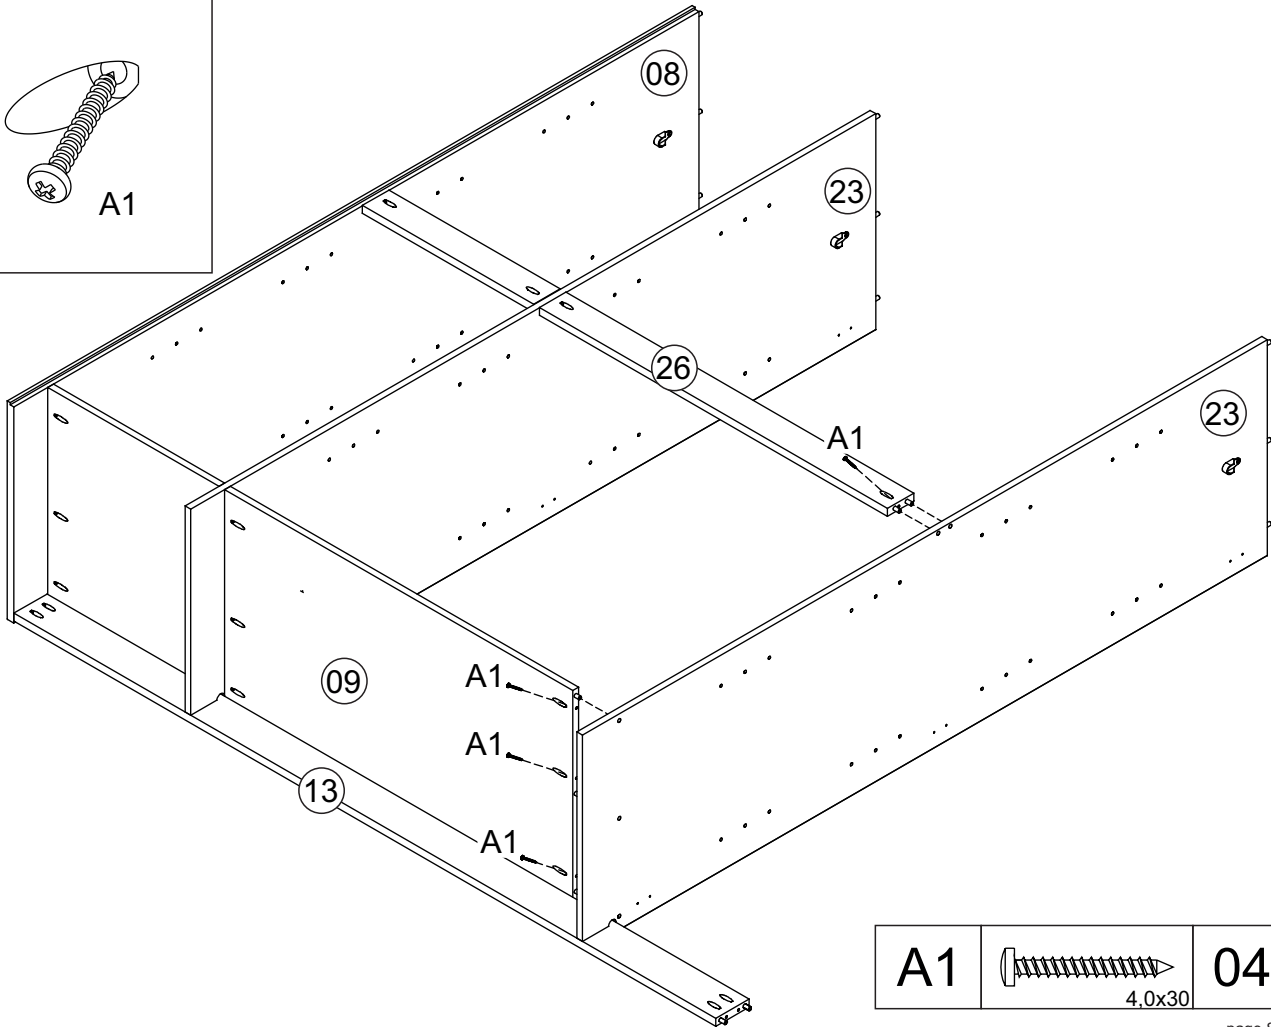
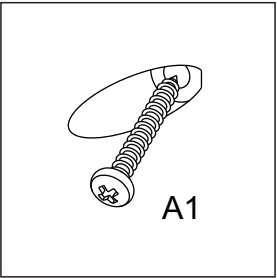


A1	 4,0x30	04
----	---	----


07)

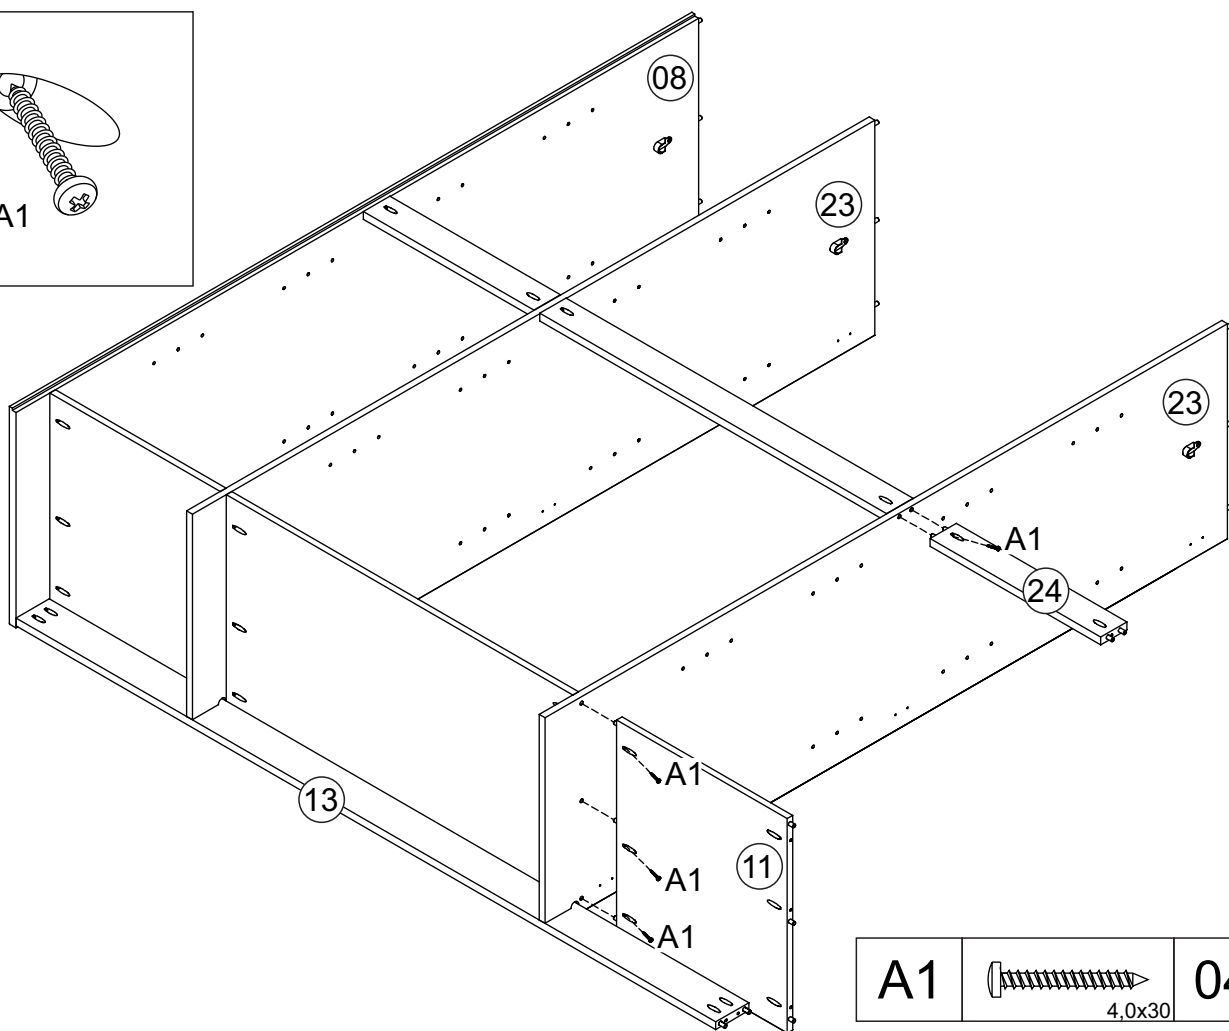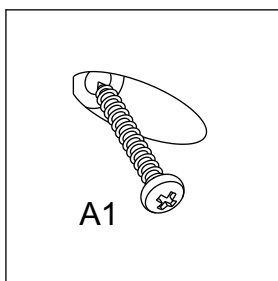


08)



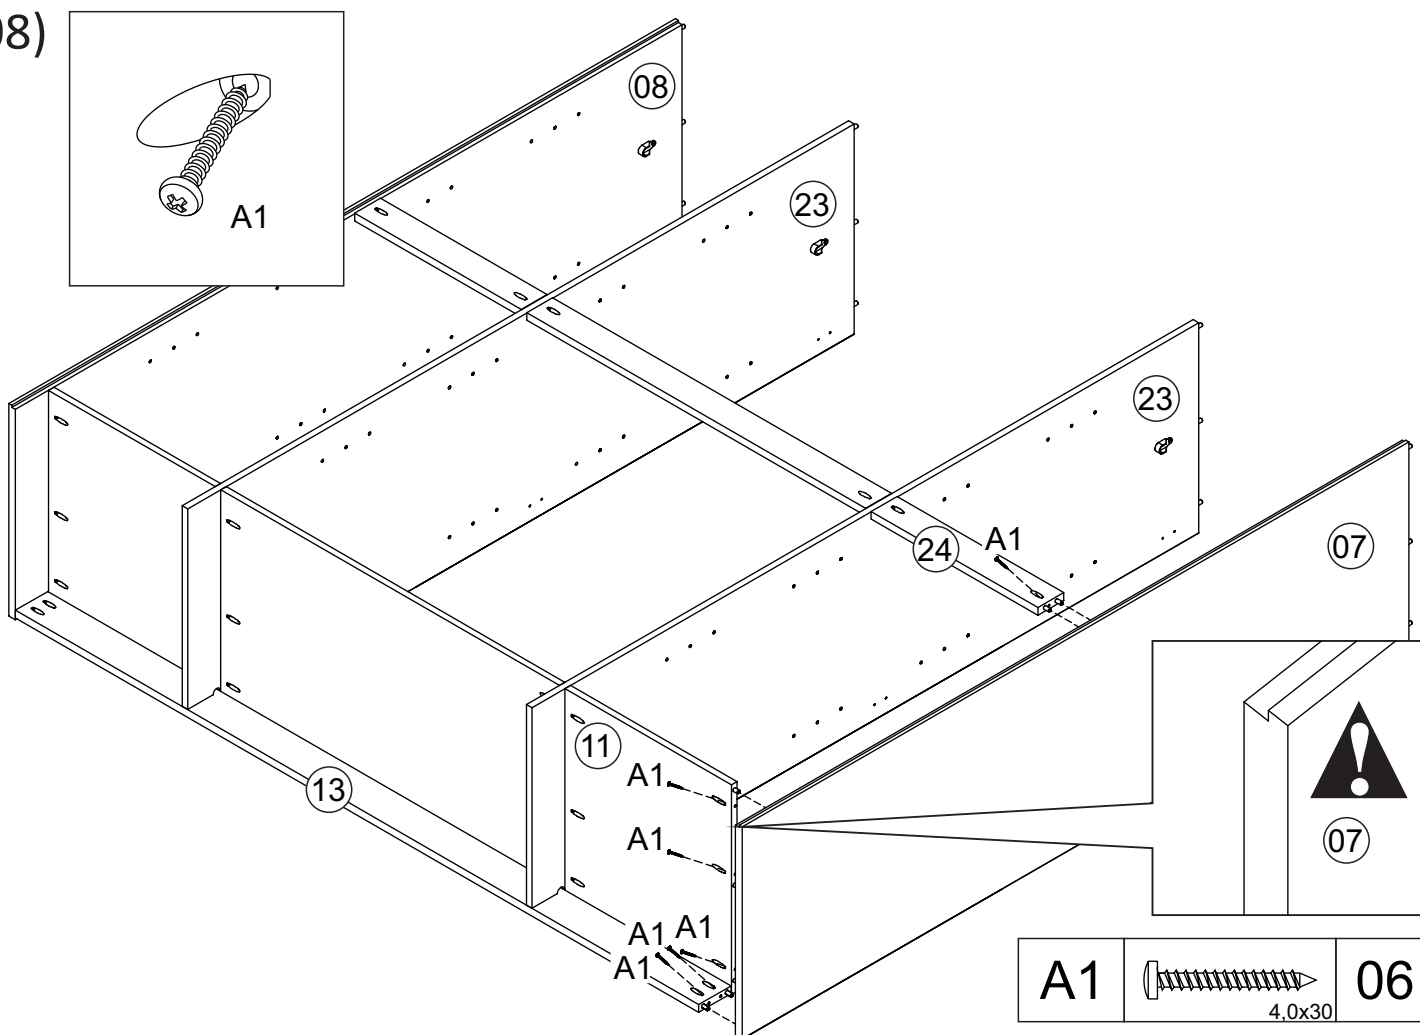
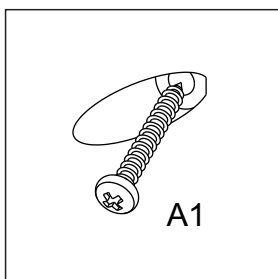



09)

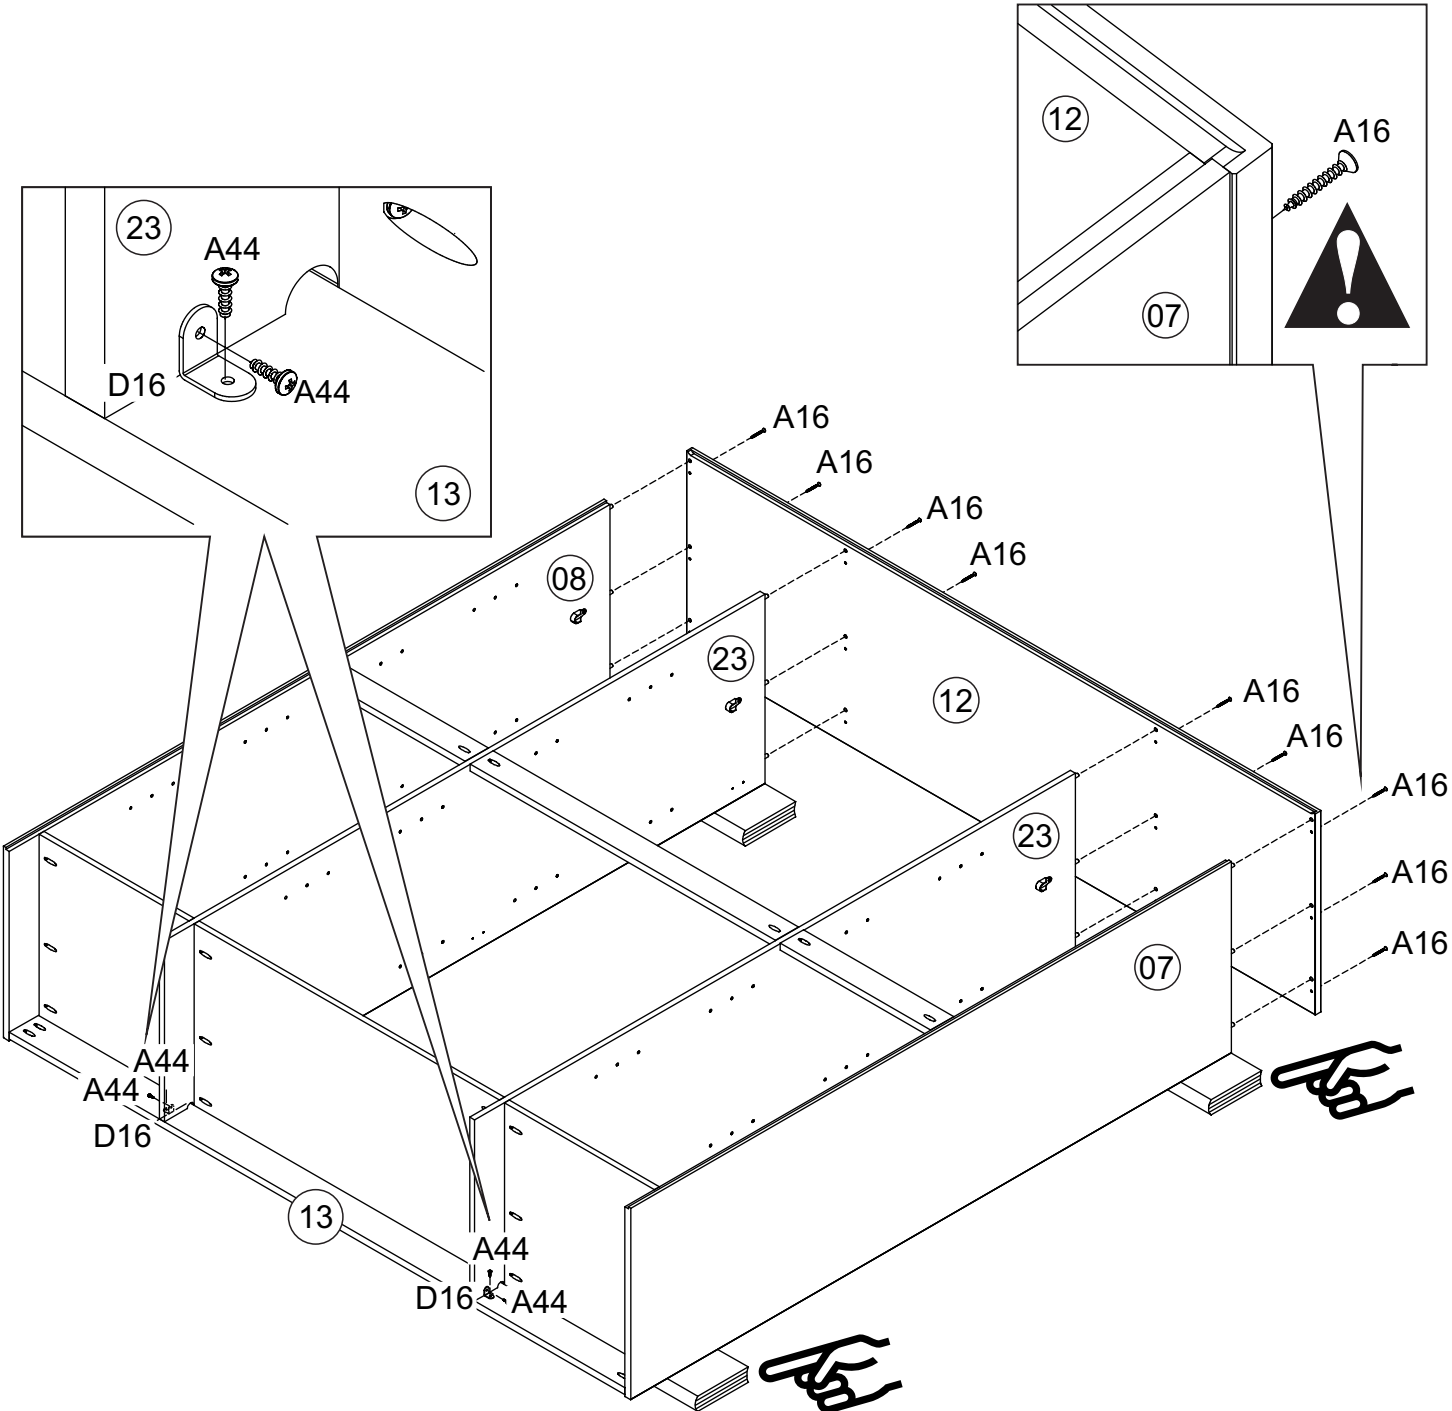

A16	 4,0x40	12
A44	 3,5x14	04
D16		02


10)

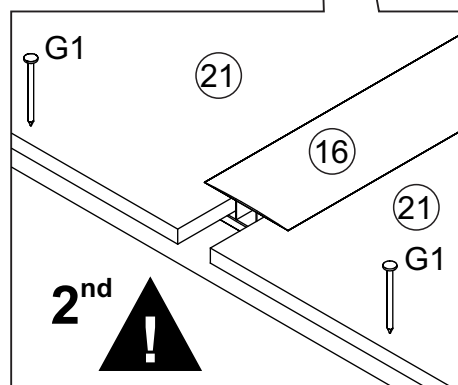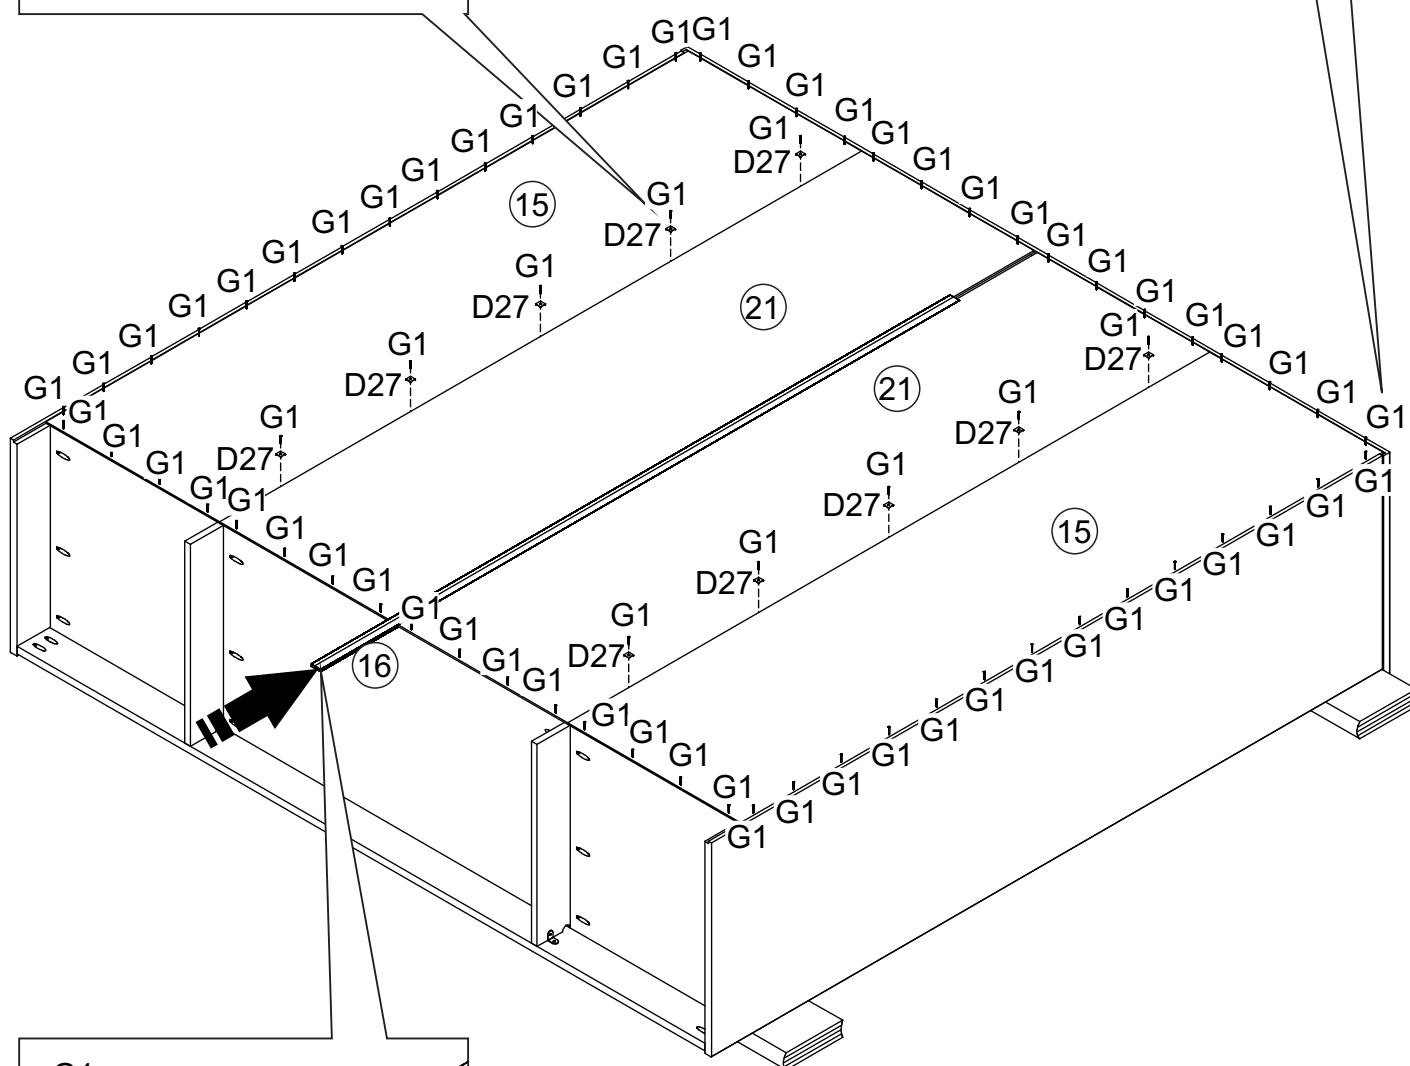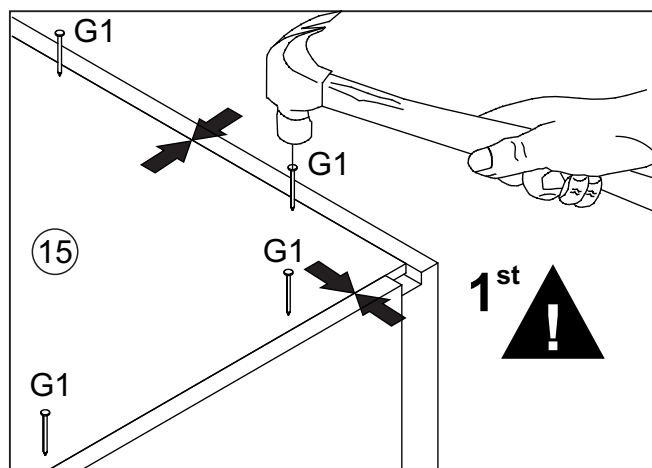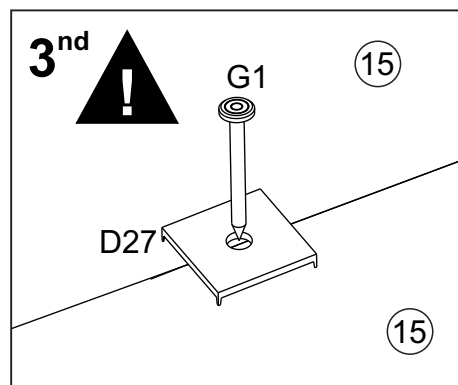


D27		10	G1		70
-----	---	----	----	---	----


10x10



11)

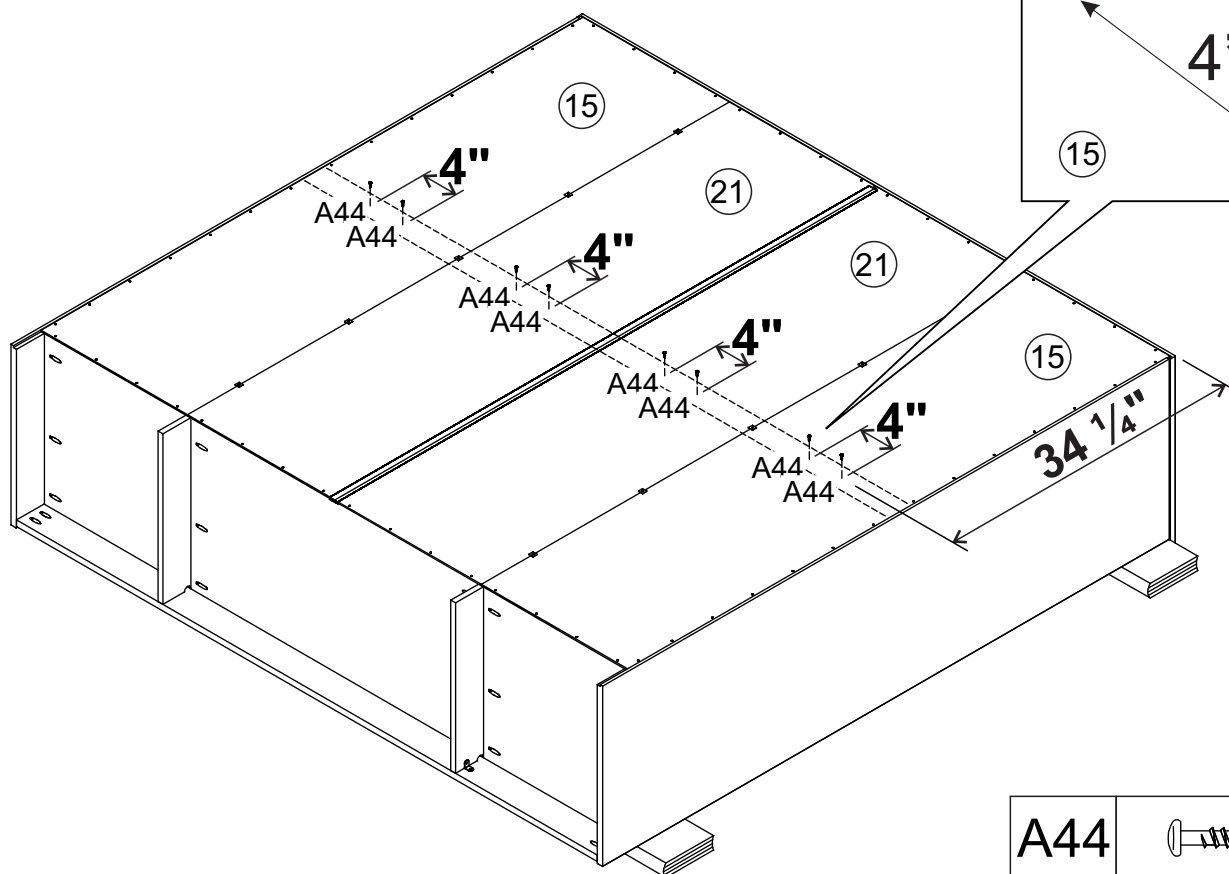

A44		08
	3.5x14	

12)

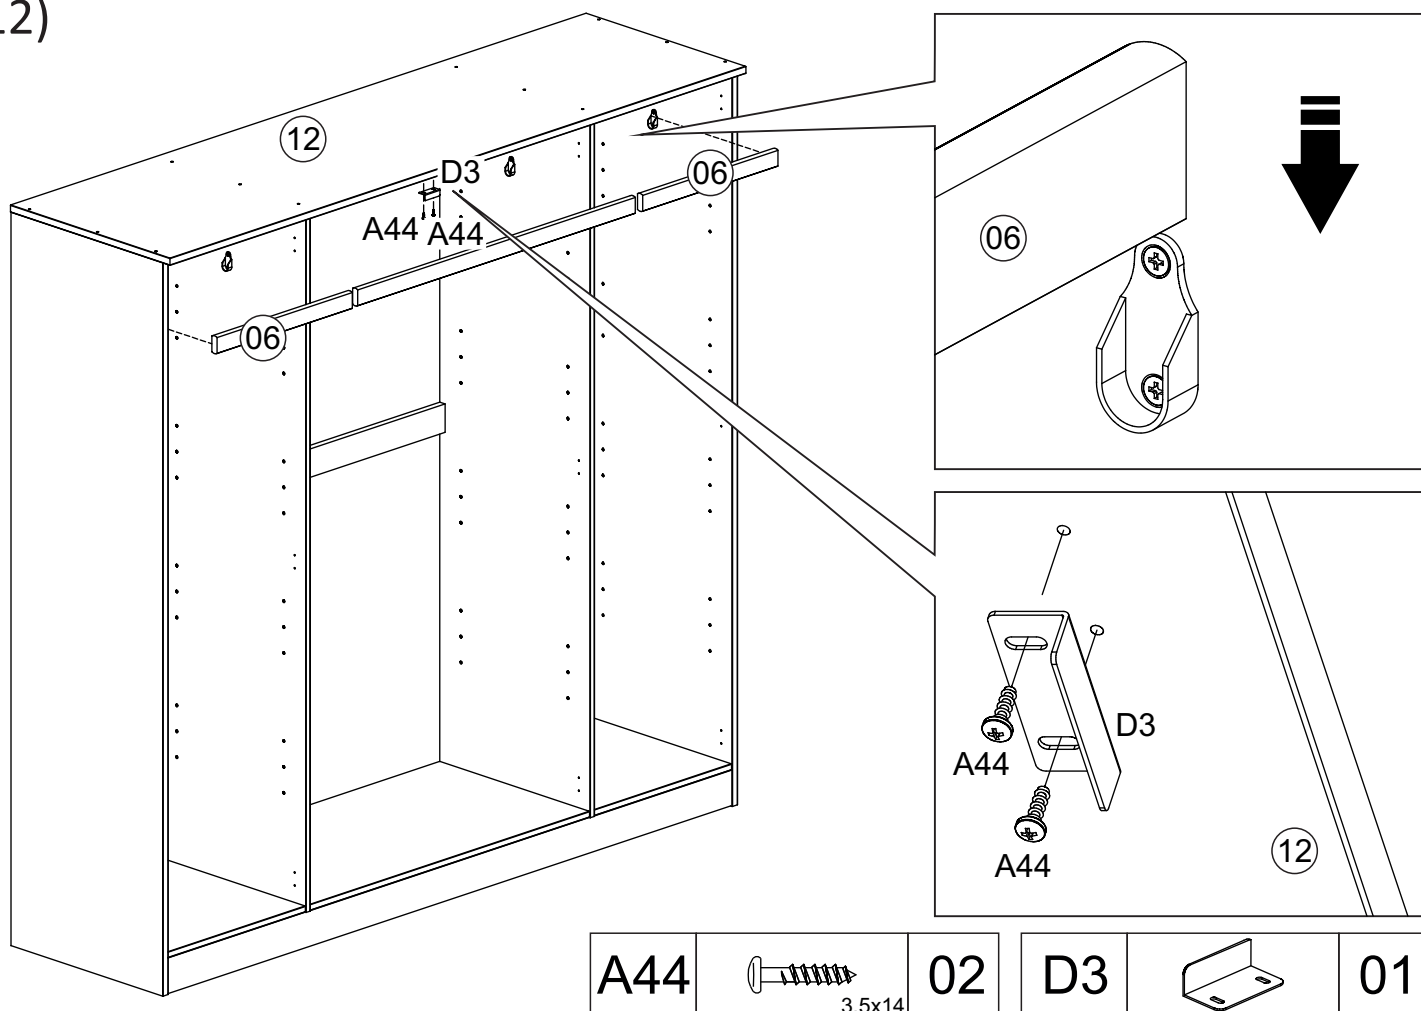


A44		02	D3		01
	3.5x14				



13)

Attach hinge (F10) to hinge plate if it comes separated.


Push hinge against plate until it clicks.

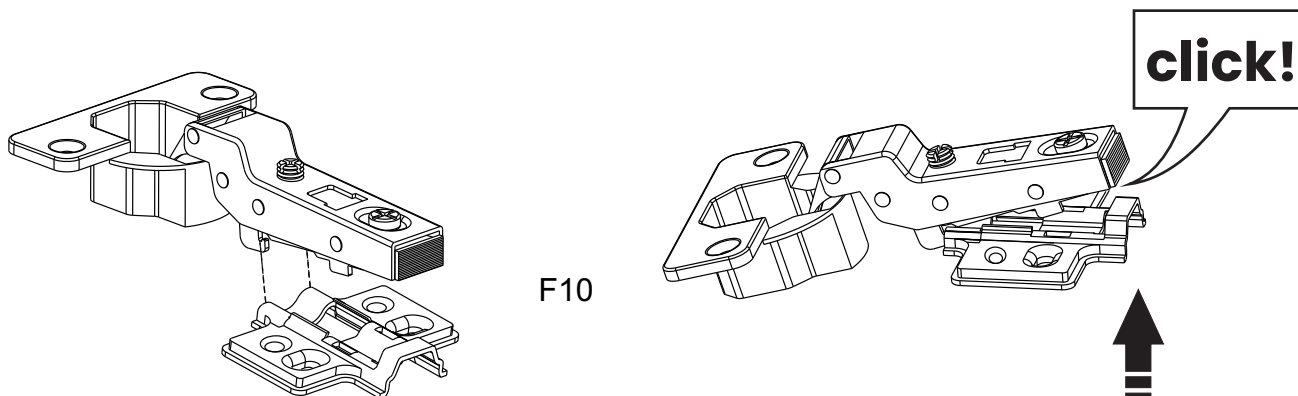

14)

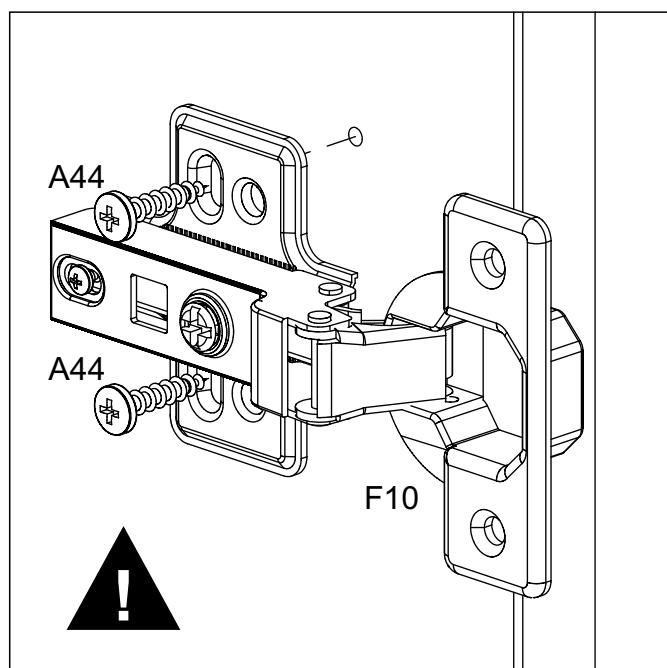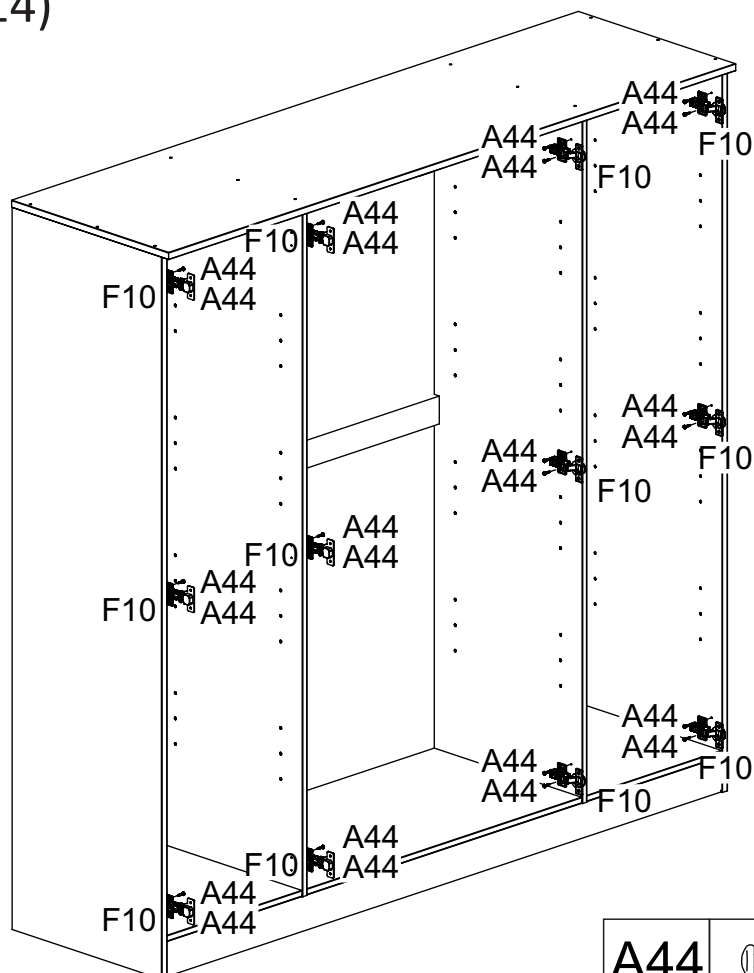

A44



3,5x14





24

F10





12

15)

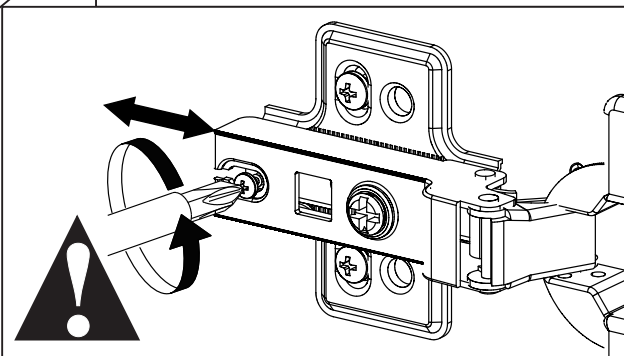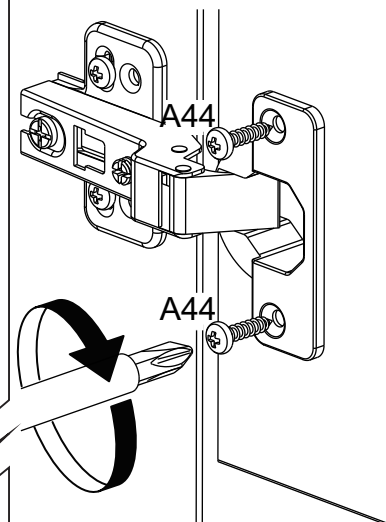
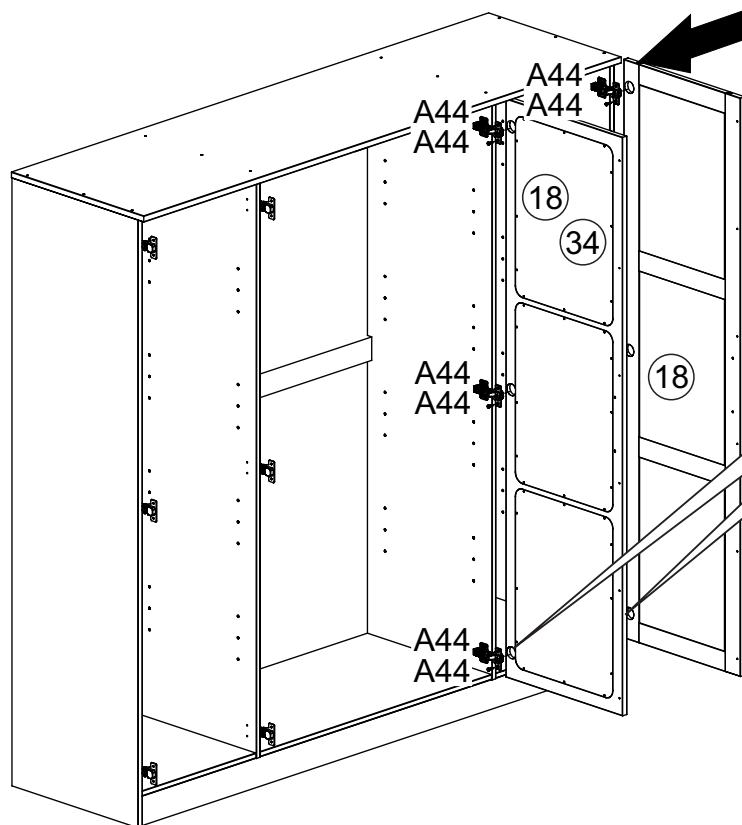


It might be necessary to adjust the hinges (F10) before hanging the doors.


16)

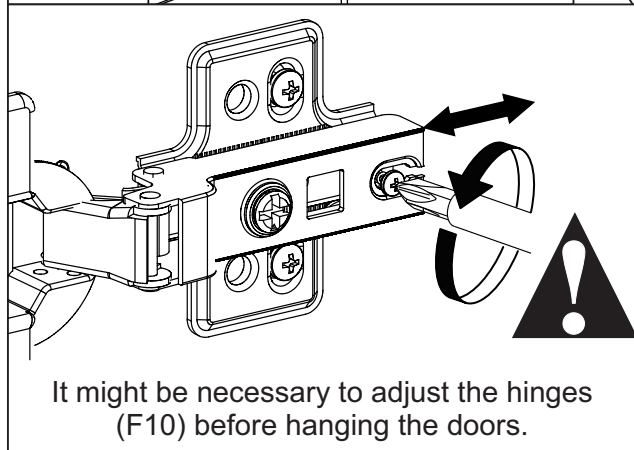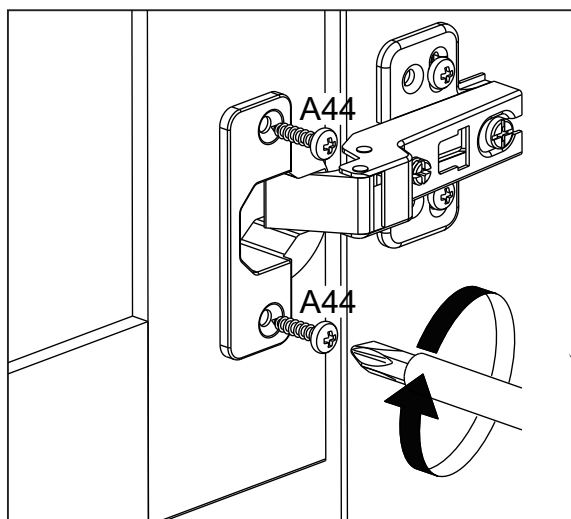


It might be necessary to adjust the hinges (F10) before hanging the doors.

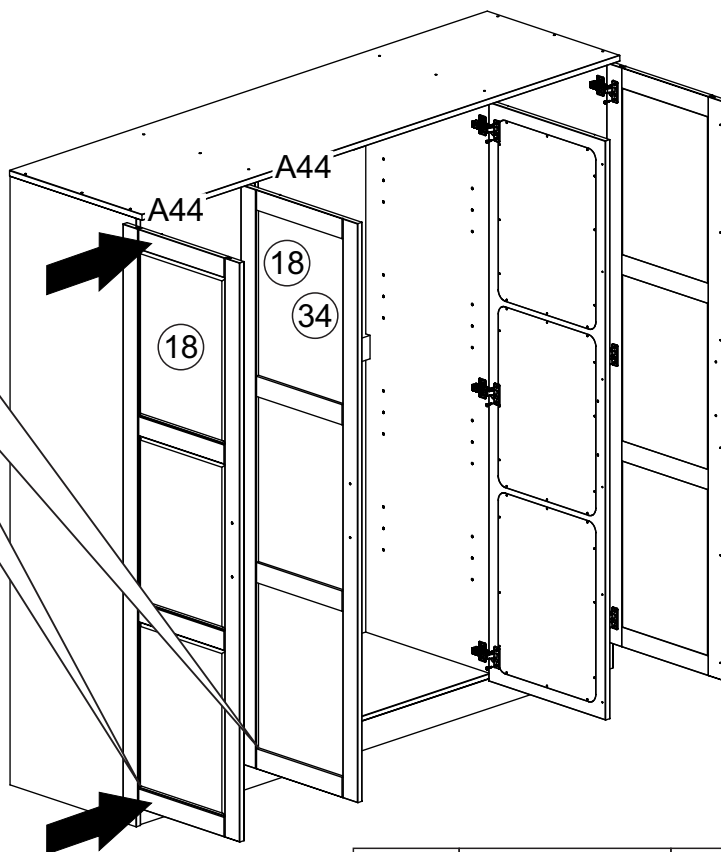



17)

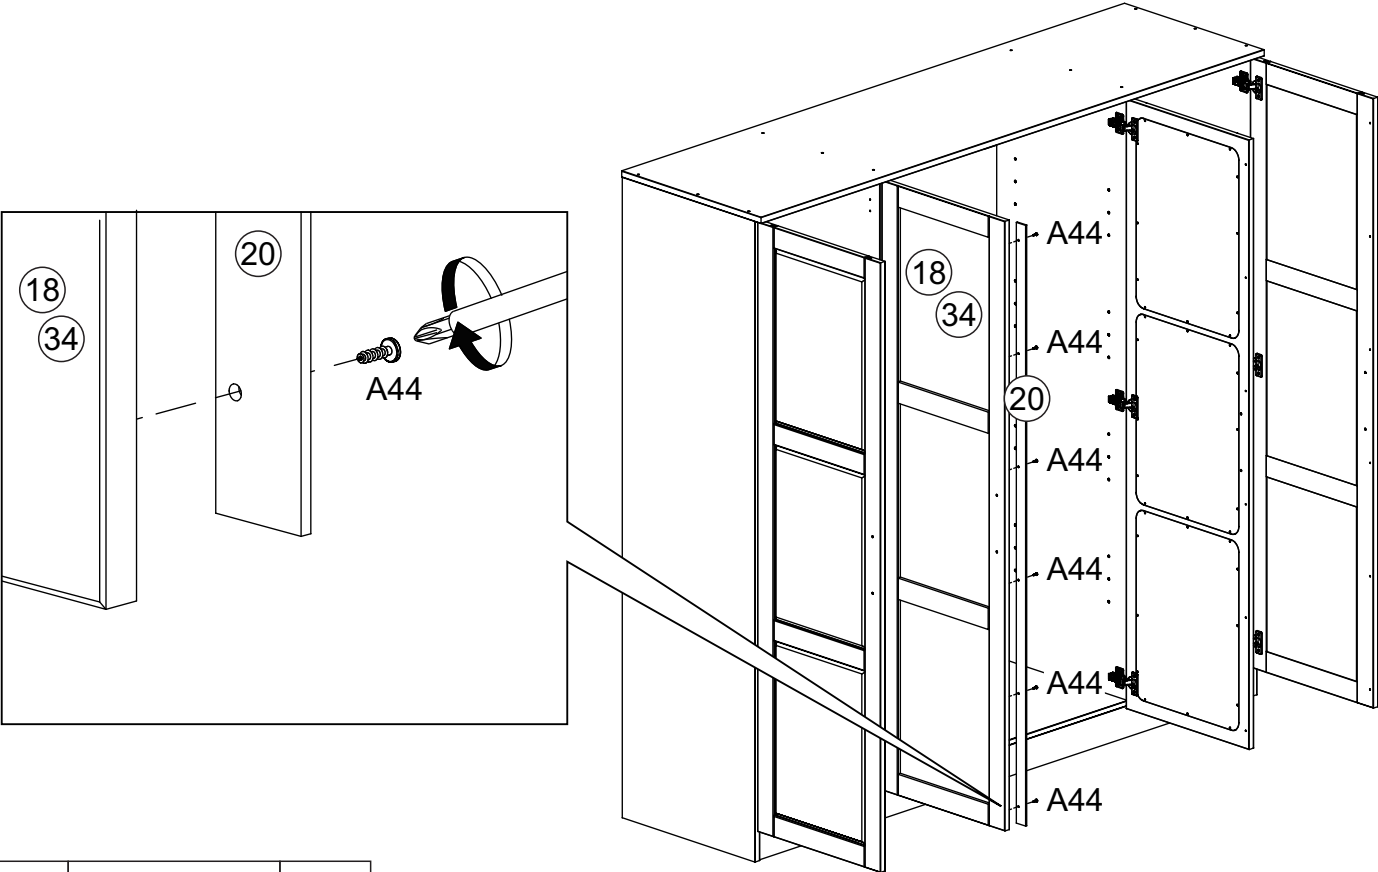

A44		06
3,5x14		

18)

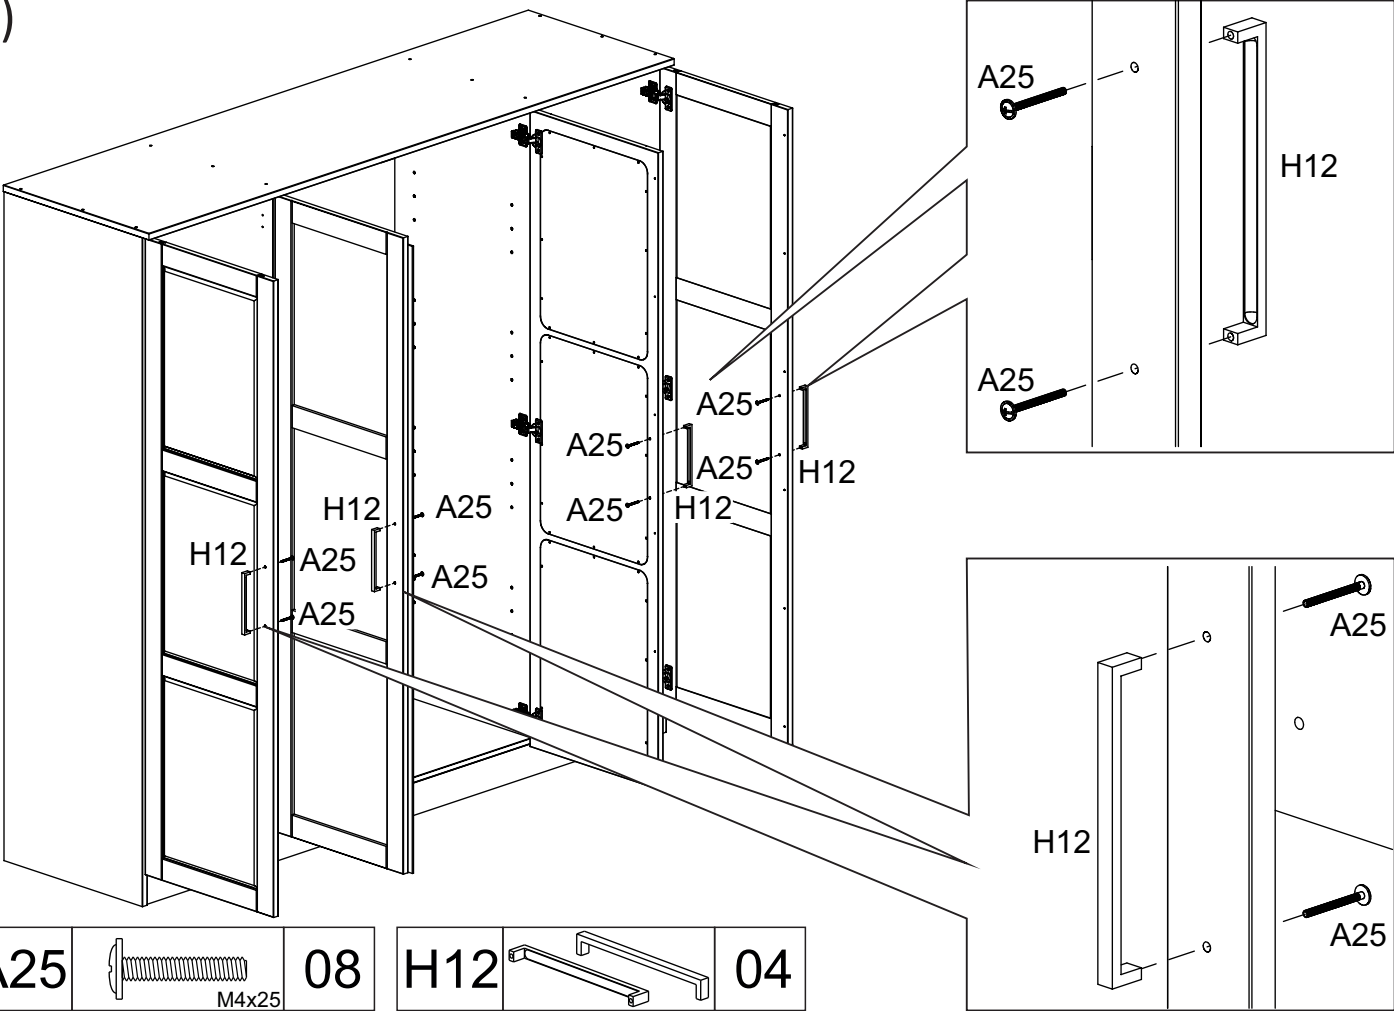

A25		08	H12		04
M4x25					

19) HINGE ADJUSTMENT GUIDE.

