


Assembly Instructions

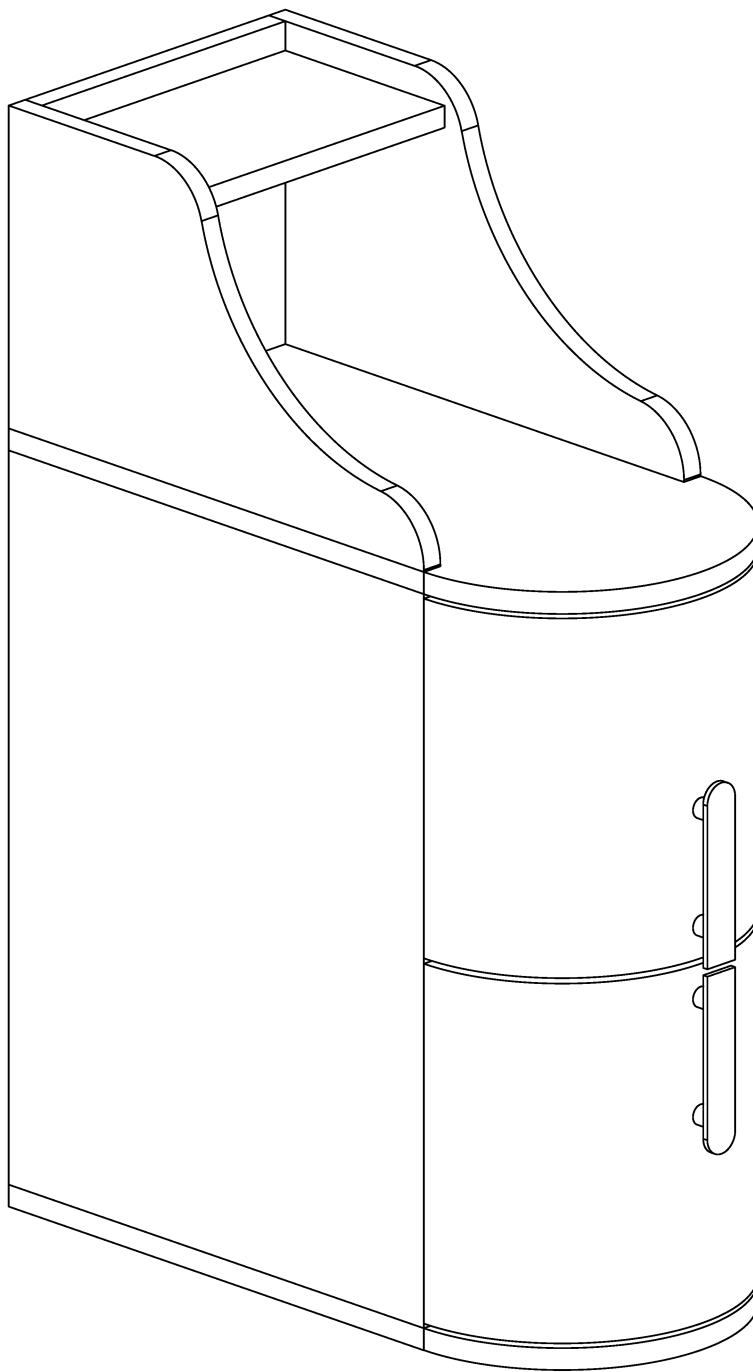


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

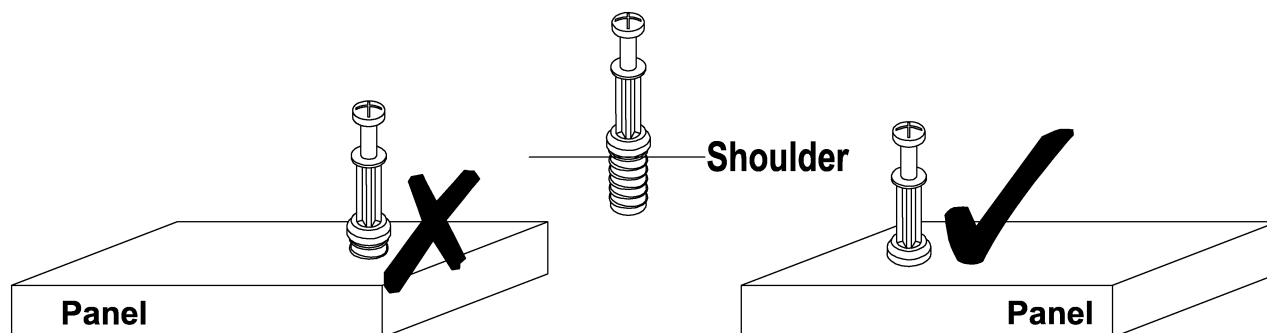

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

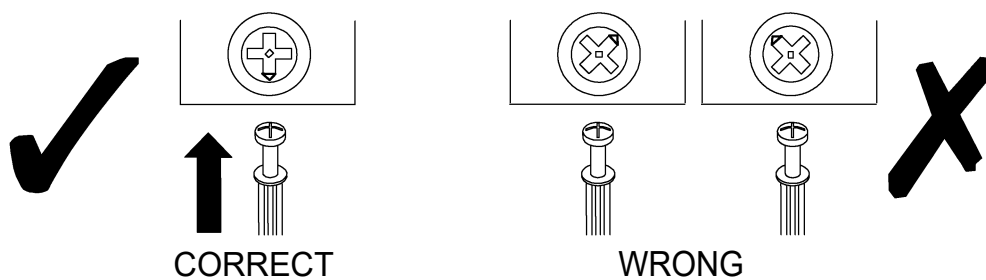

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT









Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.


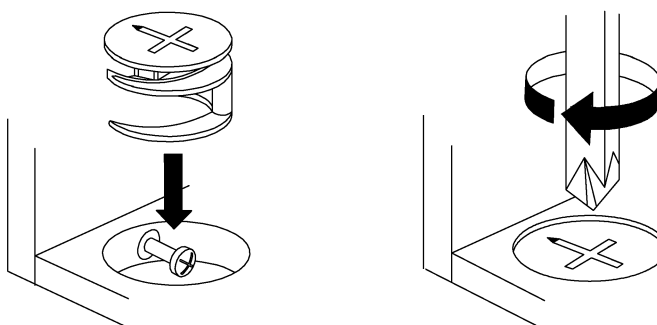


Turn cam lock clockwise to tighten.




Part List

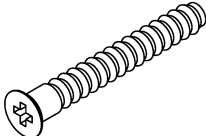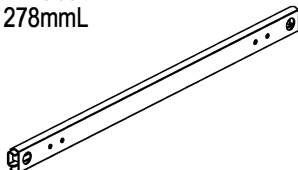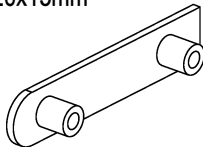No. A Quantity: 26+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 26+1 PCS Cam ø15x9.5mm 	No. C Quantity: 26+2 PCS Sticker ø20mm 	No. D Quantity: 24+2 PCS Dowel ø6x30mm 
No. E Quantity: 12+1 PCS Screw ø3.5x12mm 	No. F Quantity: 4+1 PCS Bolt M4x10mm 	No. G Quantity: 4+1 PCS Bolt M6x18mm 	No. H Quantity: 8+1 PCS Screw ø4x30mm 
No. I Quantity: 12+1 PCS Screw ø5x38mm 	No. J Quantity: 1 PCS Hex Key 4mm 	No. K Quantity: 4 PCS Slide Rail 278mmL 	No. L Quantity: 5+1 PCS Foot Pad 35x35mm 
No. M Quantity: 2 PCS Handle 99x20x15mm 			


Product structure

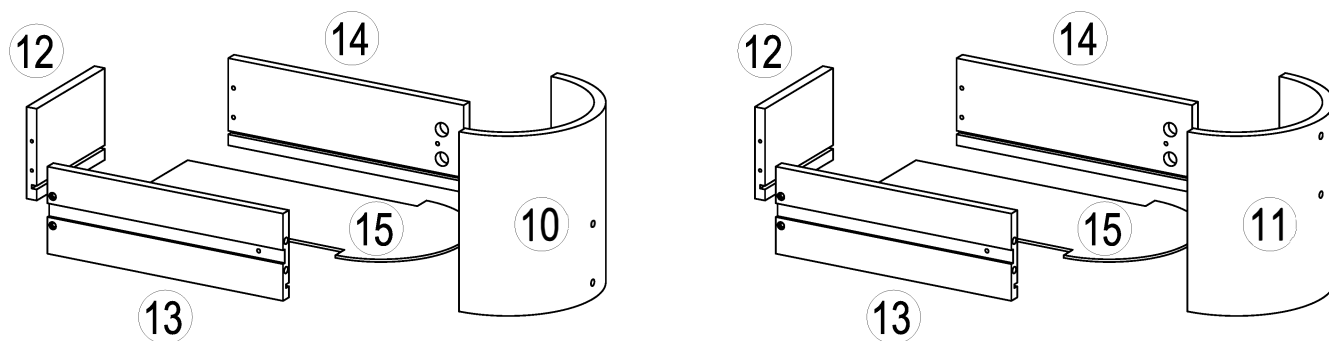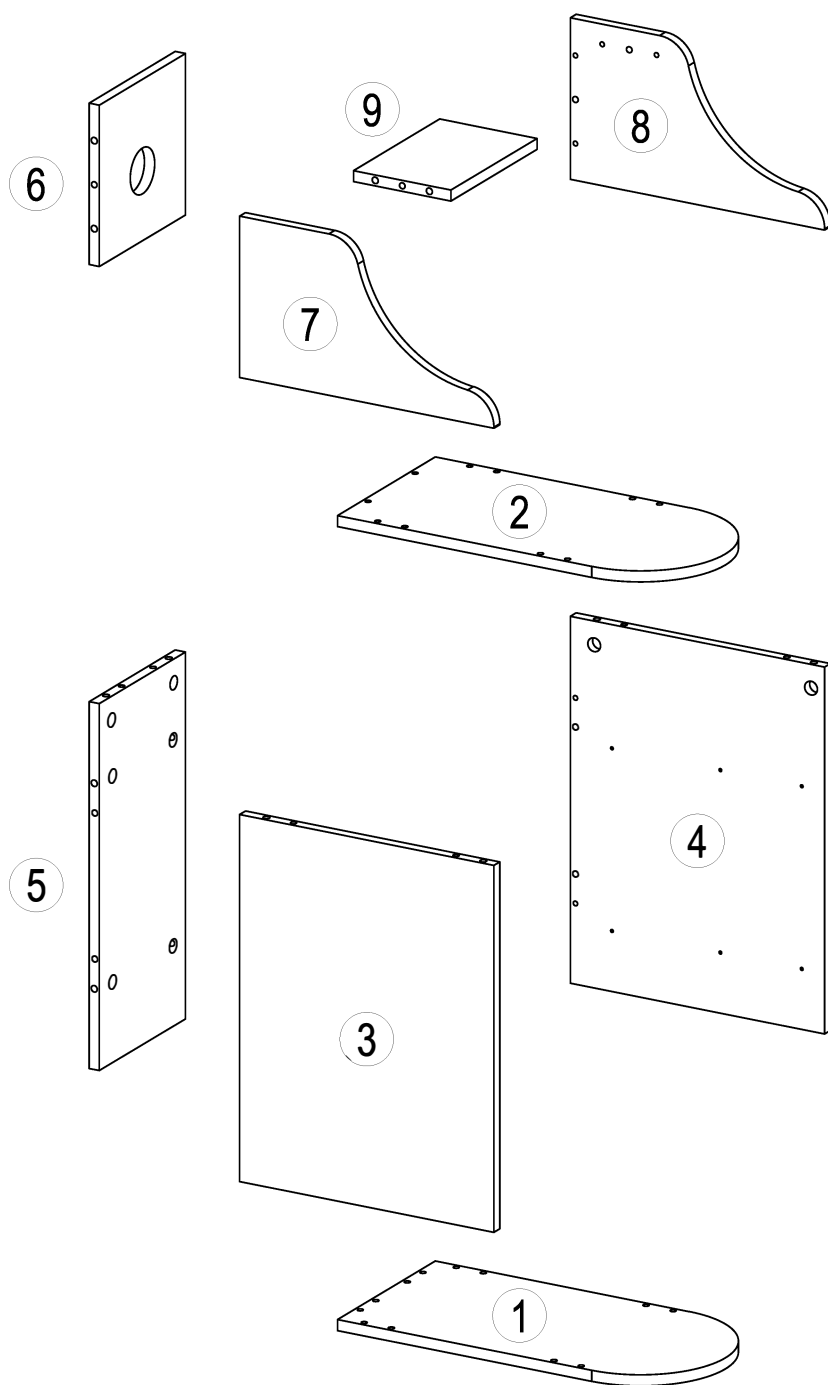

STEP 1

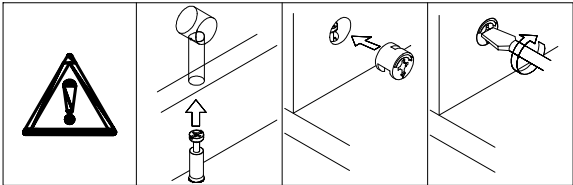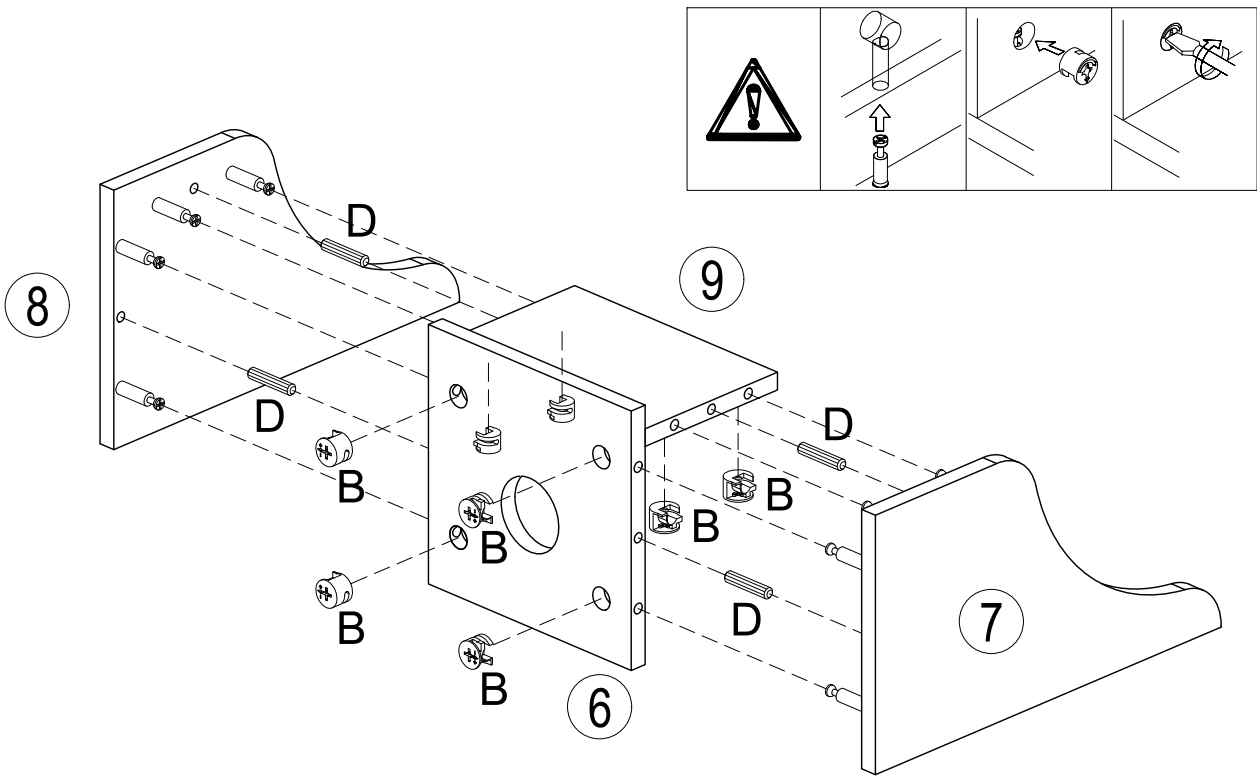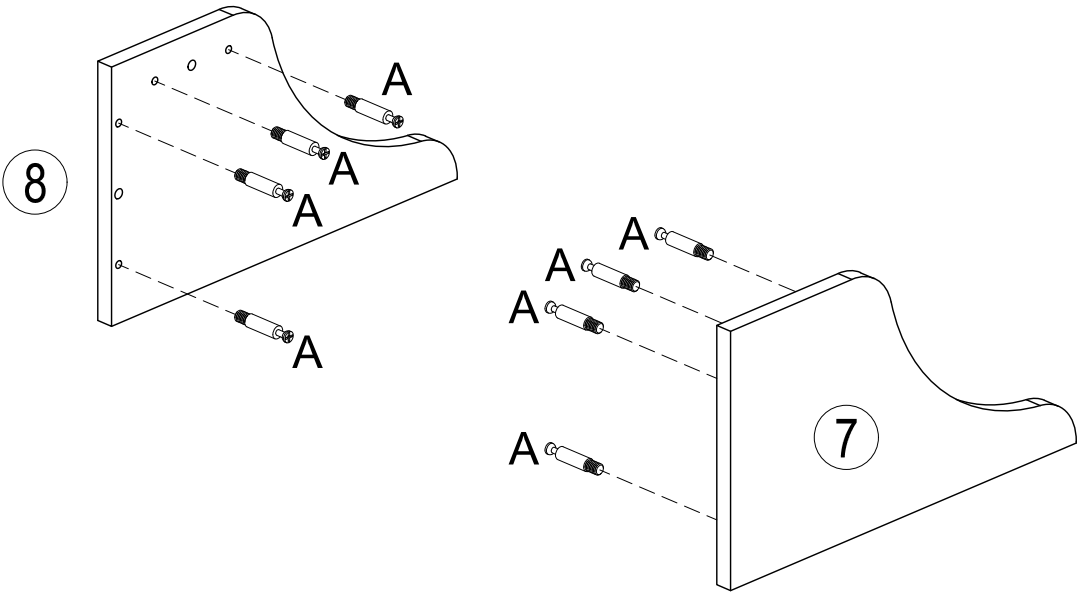


No. A
Quantity: 8 PCS
Cam Bolt
ø6x33.5mm





No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STEP 2

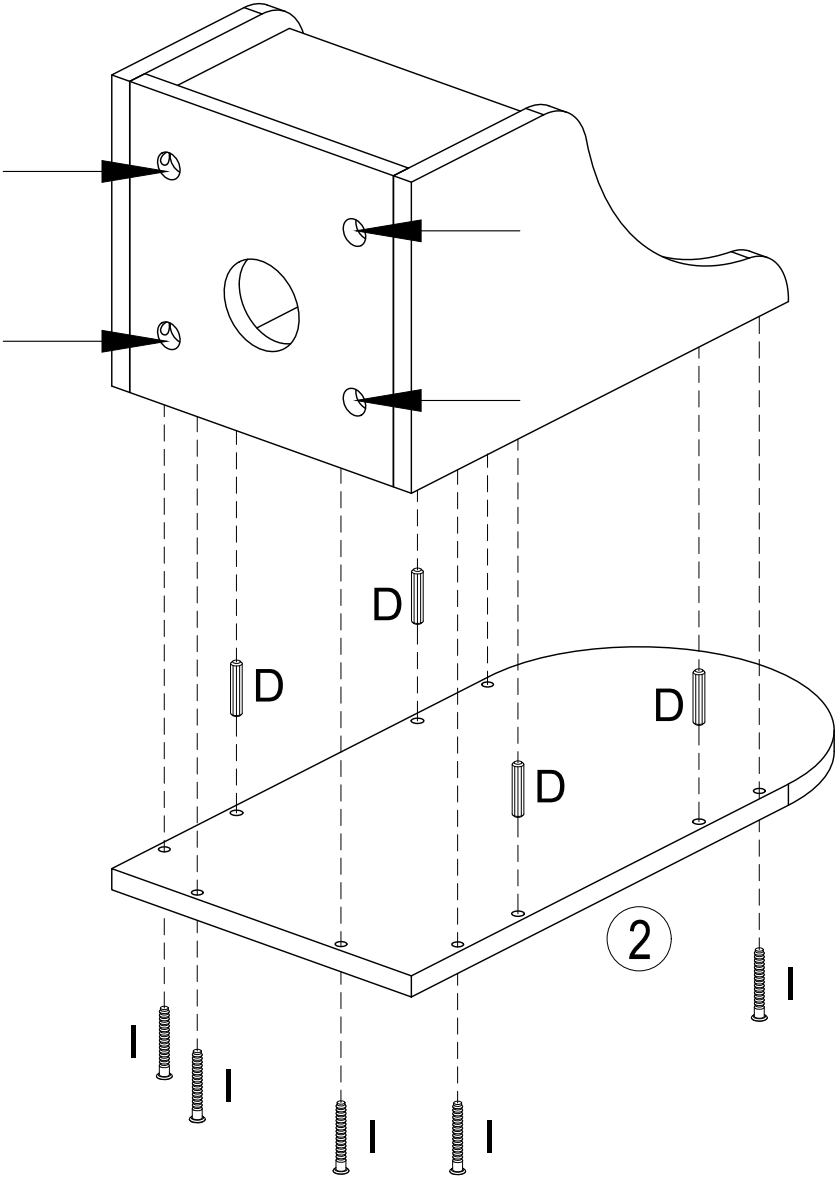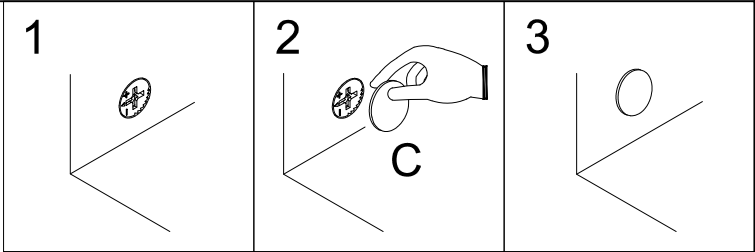

No. D
Quantity: 4 PCS
Dowel
ø6x30mm





No. I
Quantity: 6 PCS
Screw
ø5x38mm



No. C
Quantity: 8 PCS
Sticker
ø20mm




STEP 3

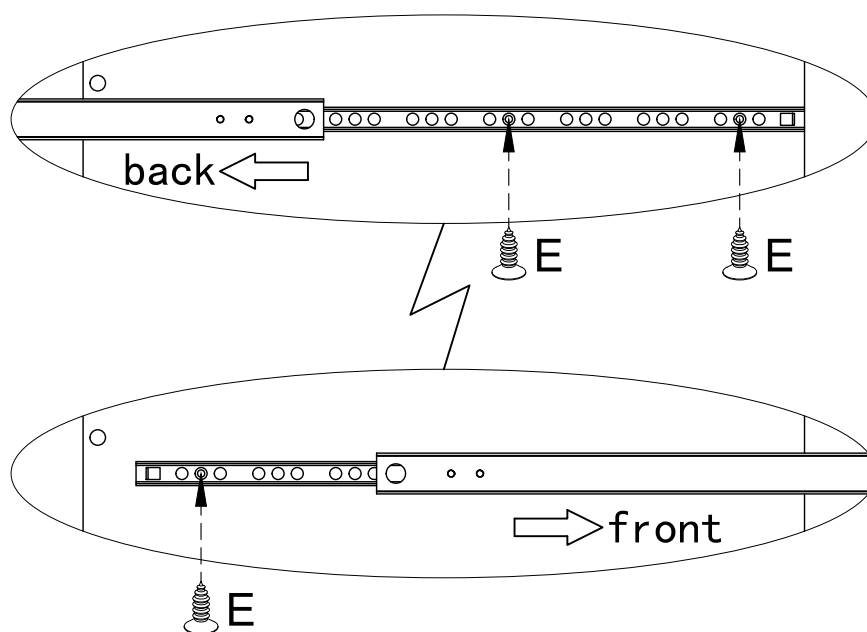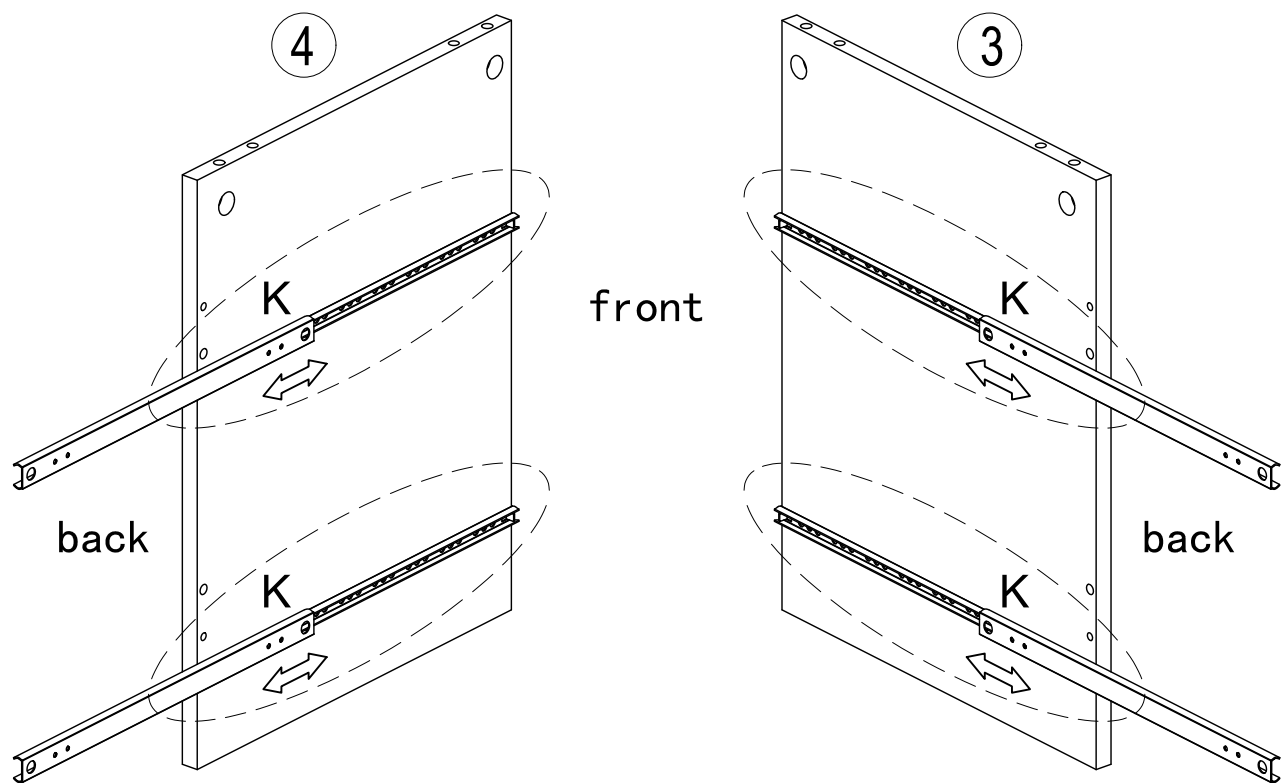



No. E
Quantity: 12 PCS
Screw
ø3.5x12mm




No. K
Quantity: 4 PCS
Slide Rail
278mmL

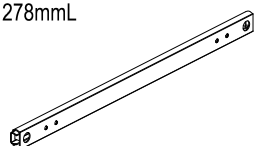



STEP 4

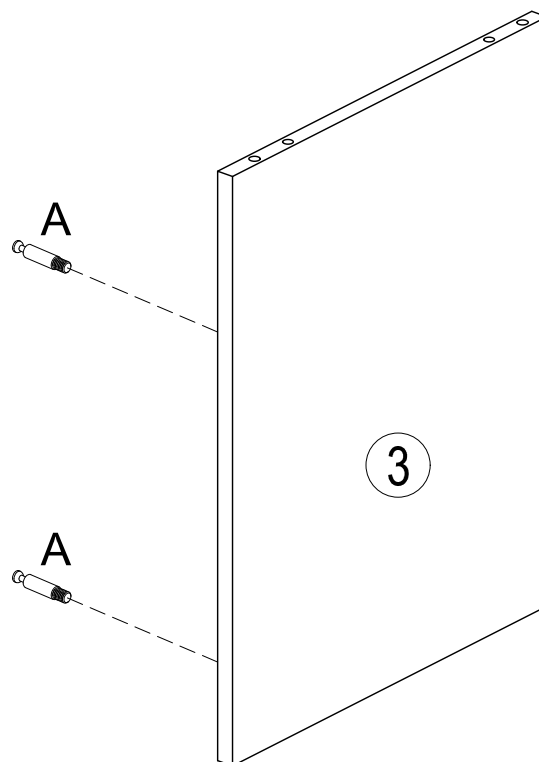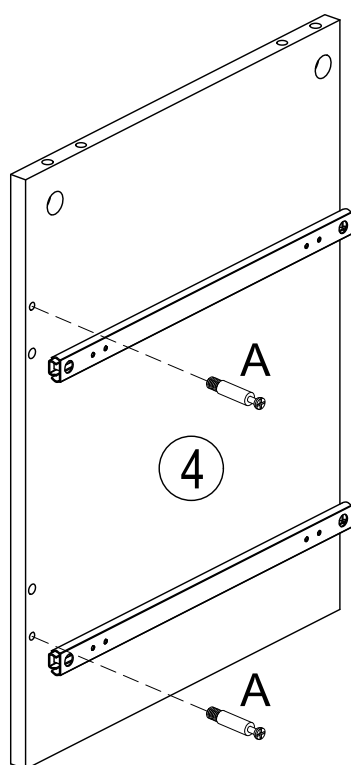

No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm



STEP 5

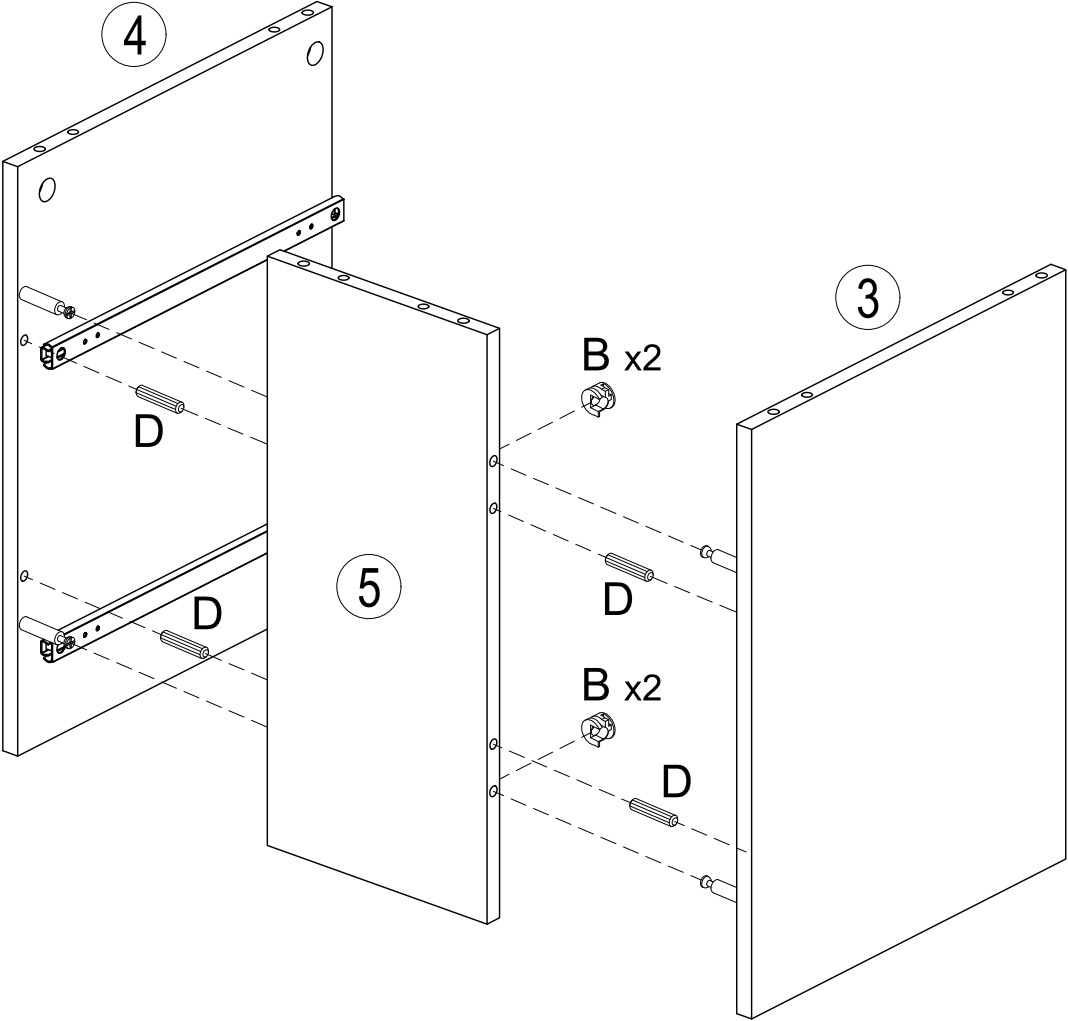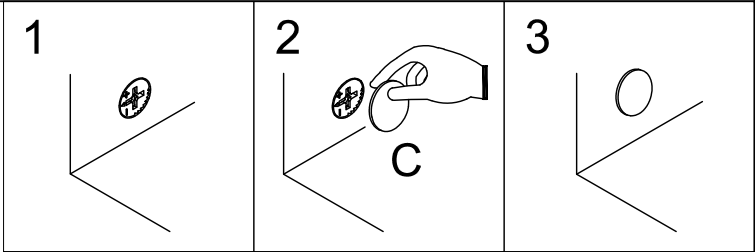

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm





No. D


Quantity: 4 PCS
Dowel
ø6x30mm



STEP 6

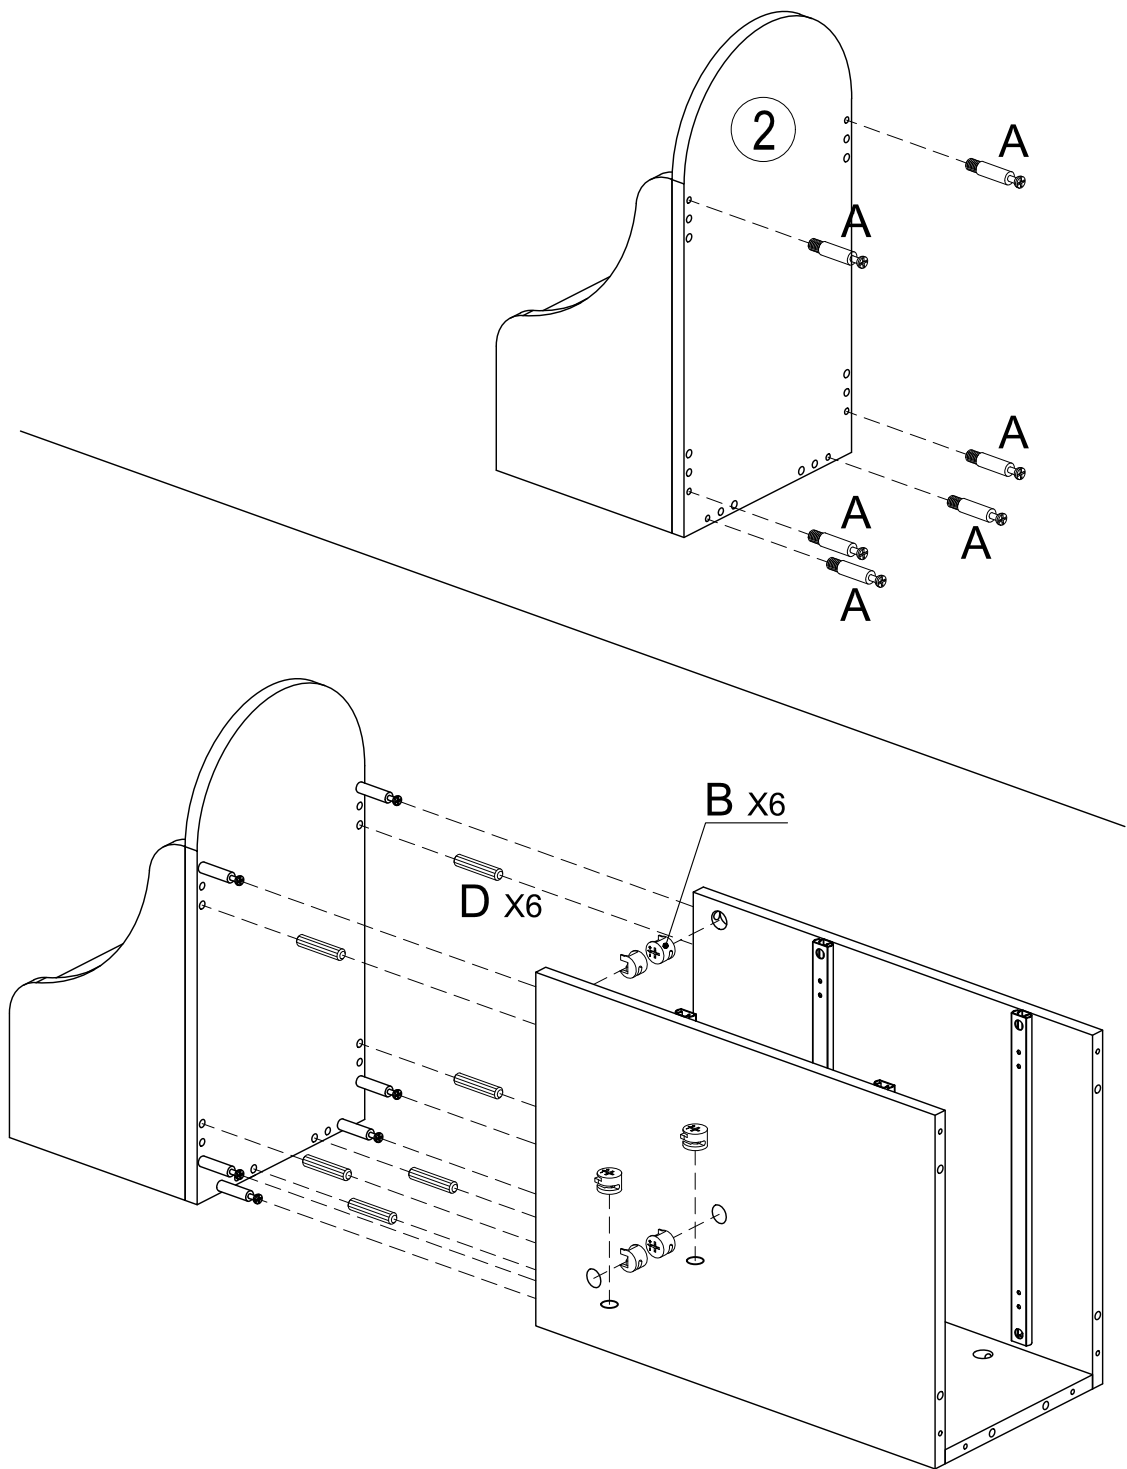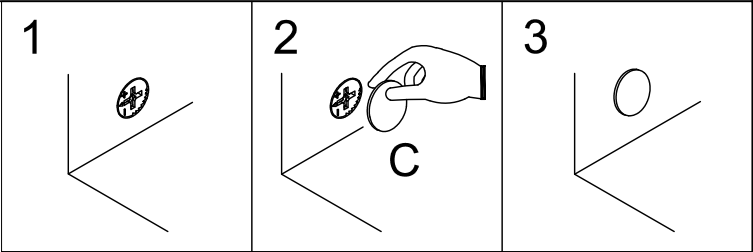

No. A
Quantity: 6 PCS
Cam Bolt
ø6x33.5mm




No. B
Quantity: 6 PCS
Cam
ø15x9.5mm




No. C
Quantity: 6 PCS
Sticker
ø20mm



No. D
Quantity: 6 PCS
Dowel
ø6x30mm




STEP 7

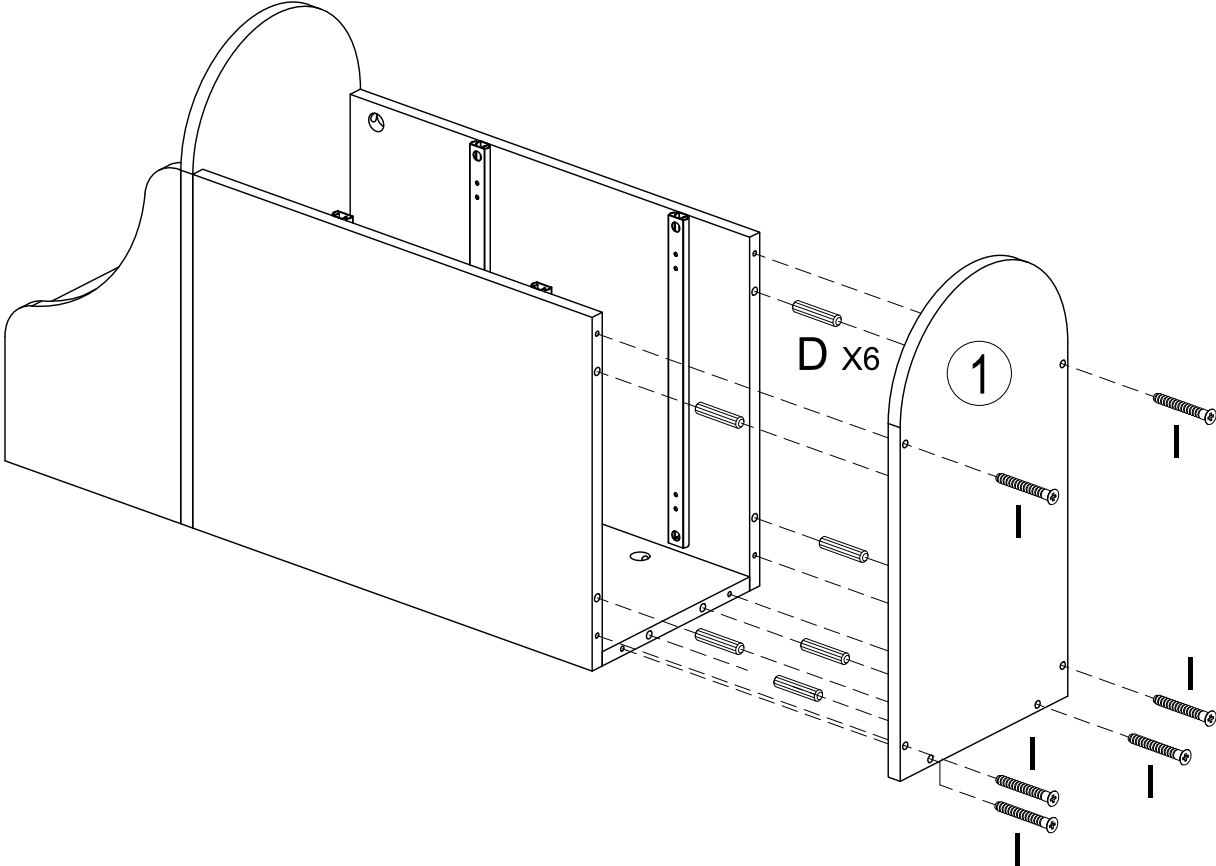


No. D

Quantity: 6 PCS
Dowel
ø6x30mm




No. I

Quantity: 6 PCS
Screw
ø5x38mm




STEP 8

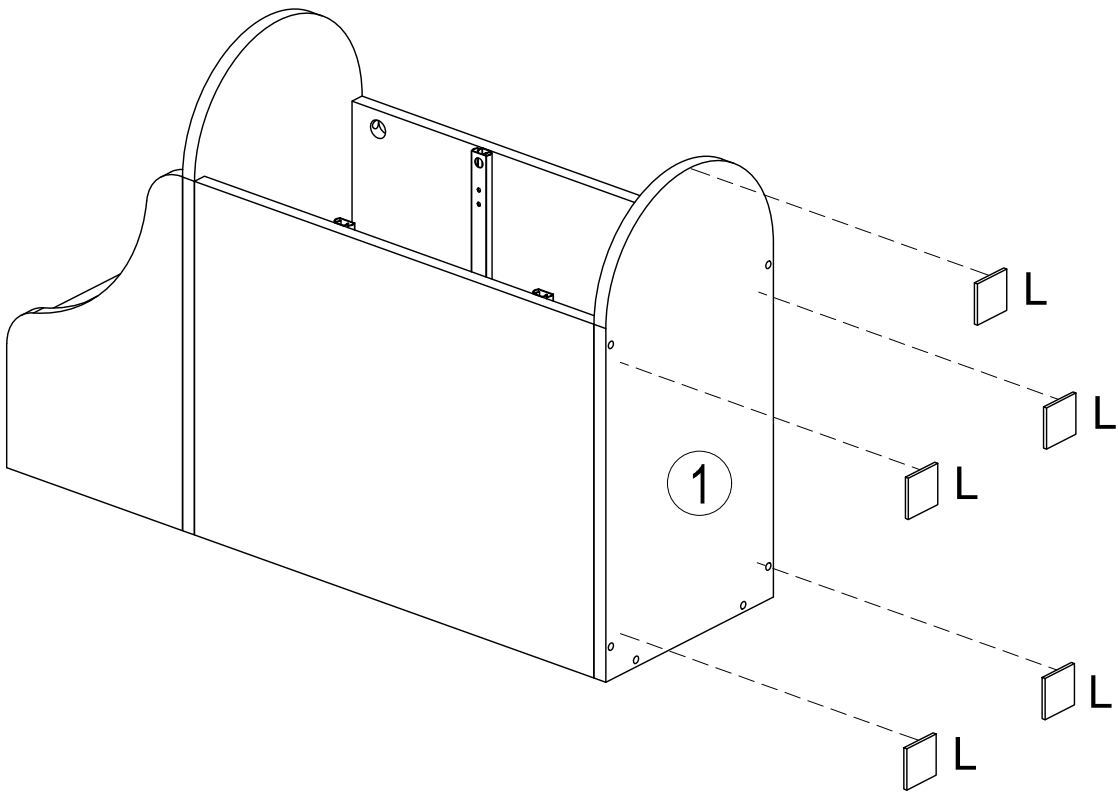



No. L

Quantity: 5 PCS


foot pad
35*35*3mm




STEP 9

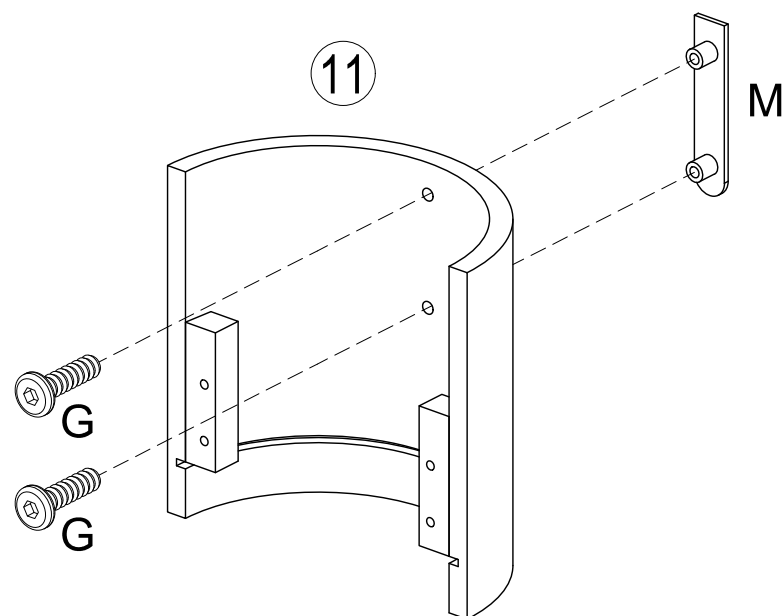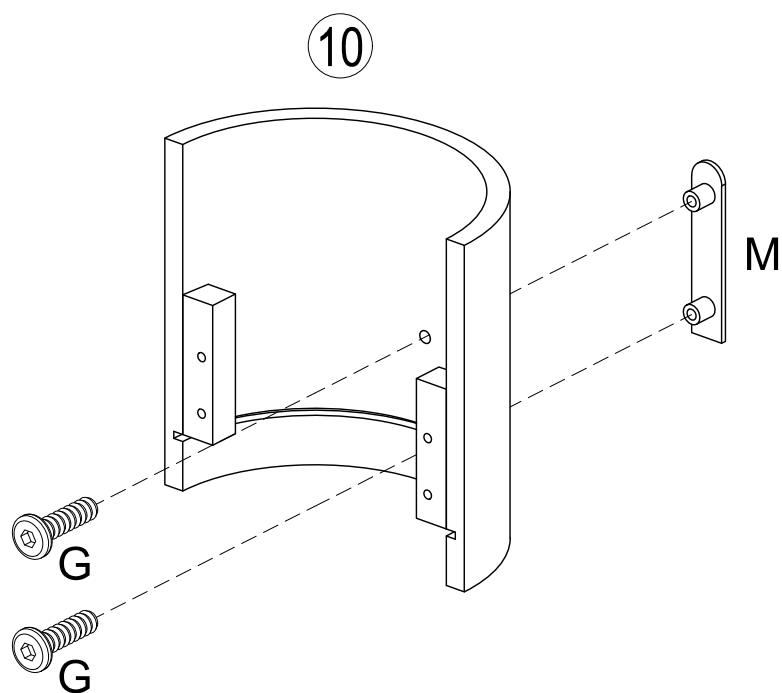



No. G
Quantity: 4 PCS
Bolt
M6x18mm




No. M
Quantity: 2 PCS
Handle
99x20x15mm

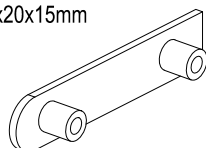



STEP 10

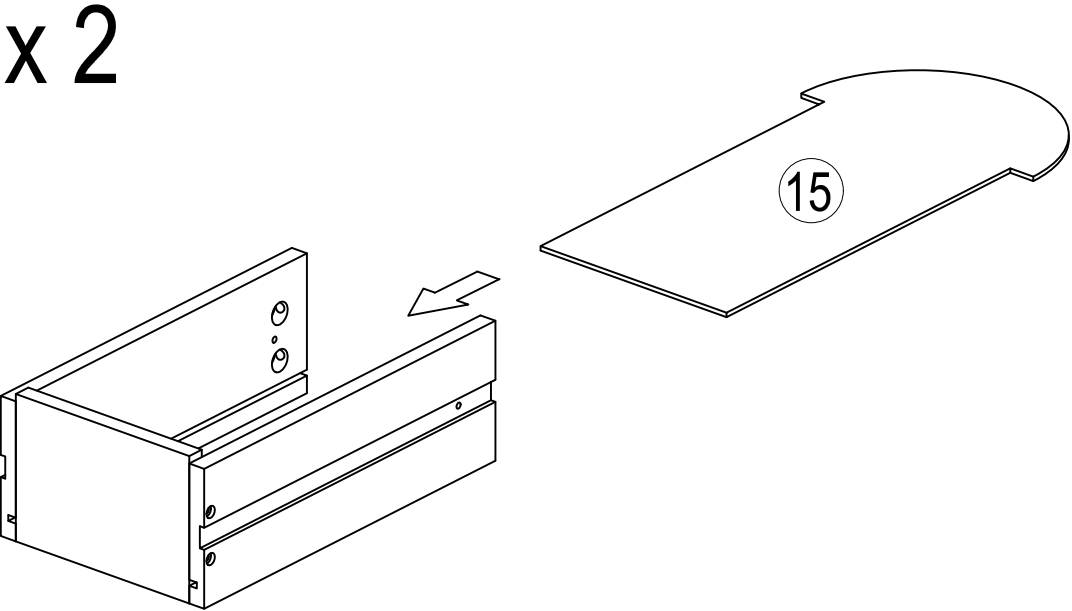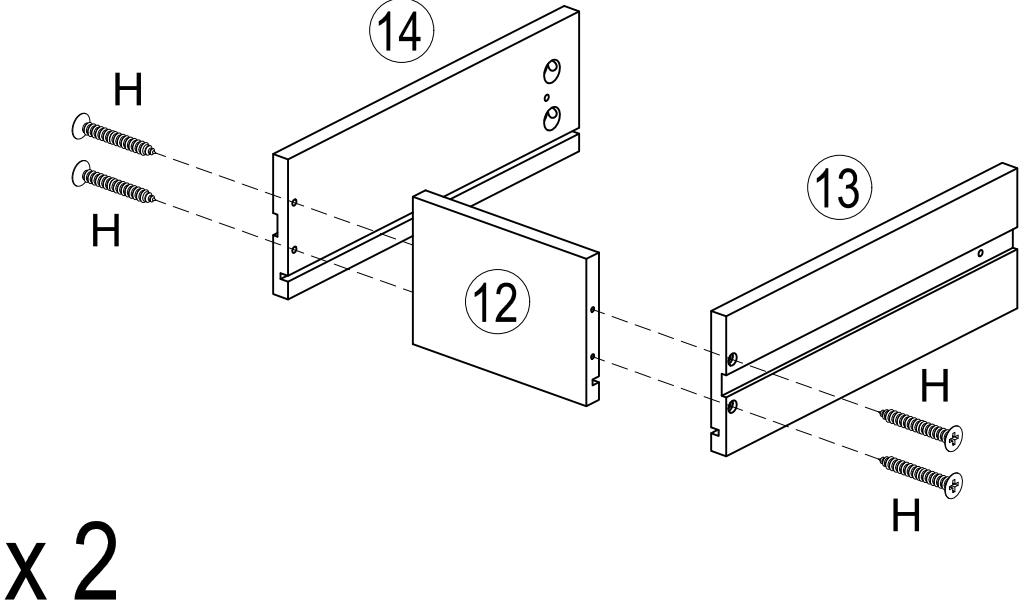


No. H
Quantity: 8 PCS
Screw
ø4x30mm





STEP 11

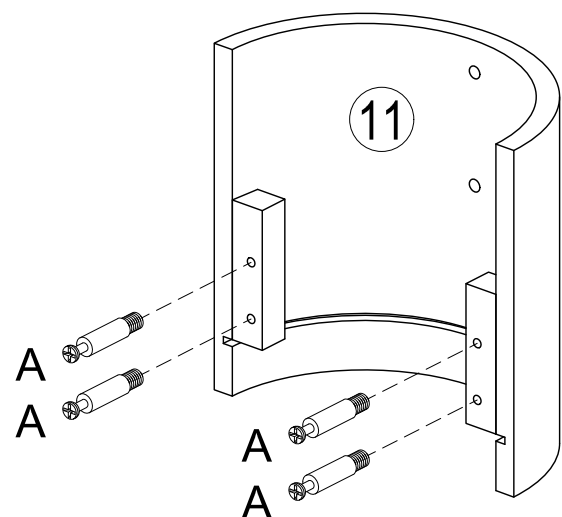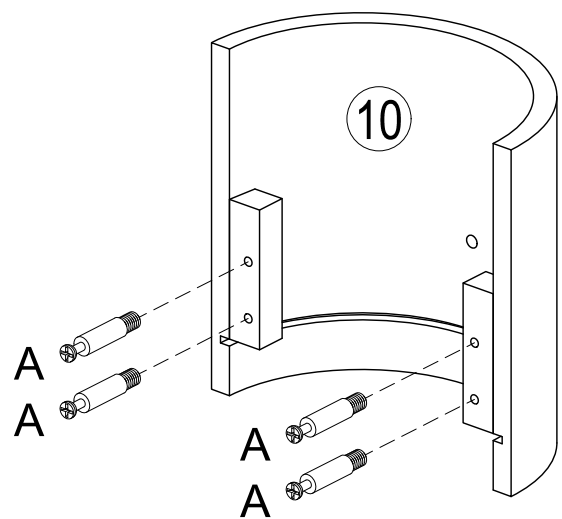

No. A
Quantity: 8 PCS
Cam Bolt
ø6x33.5mm



STEP 12

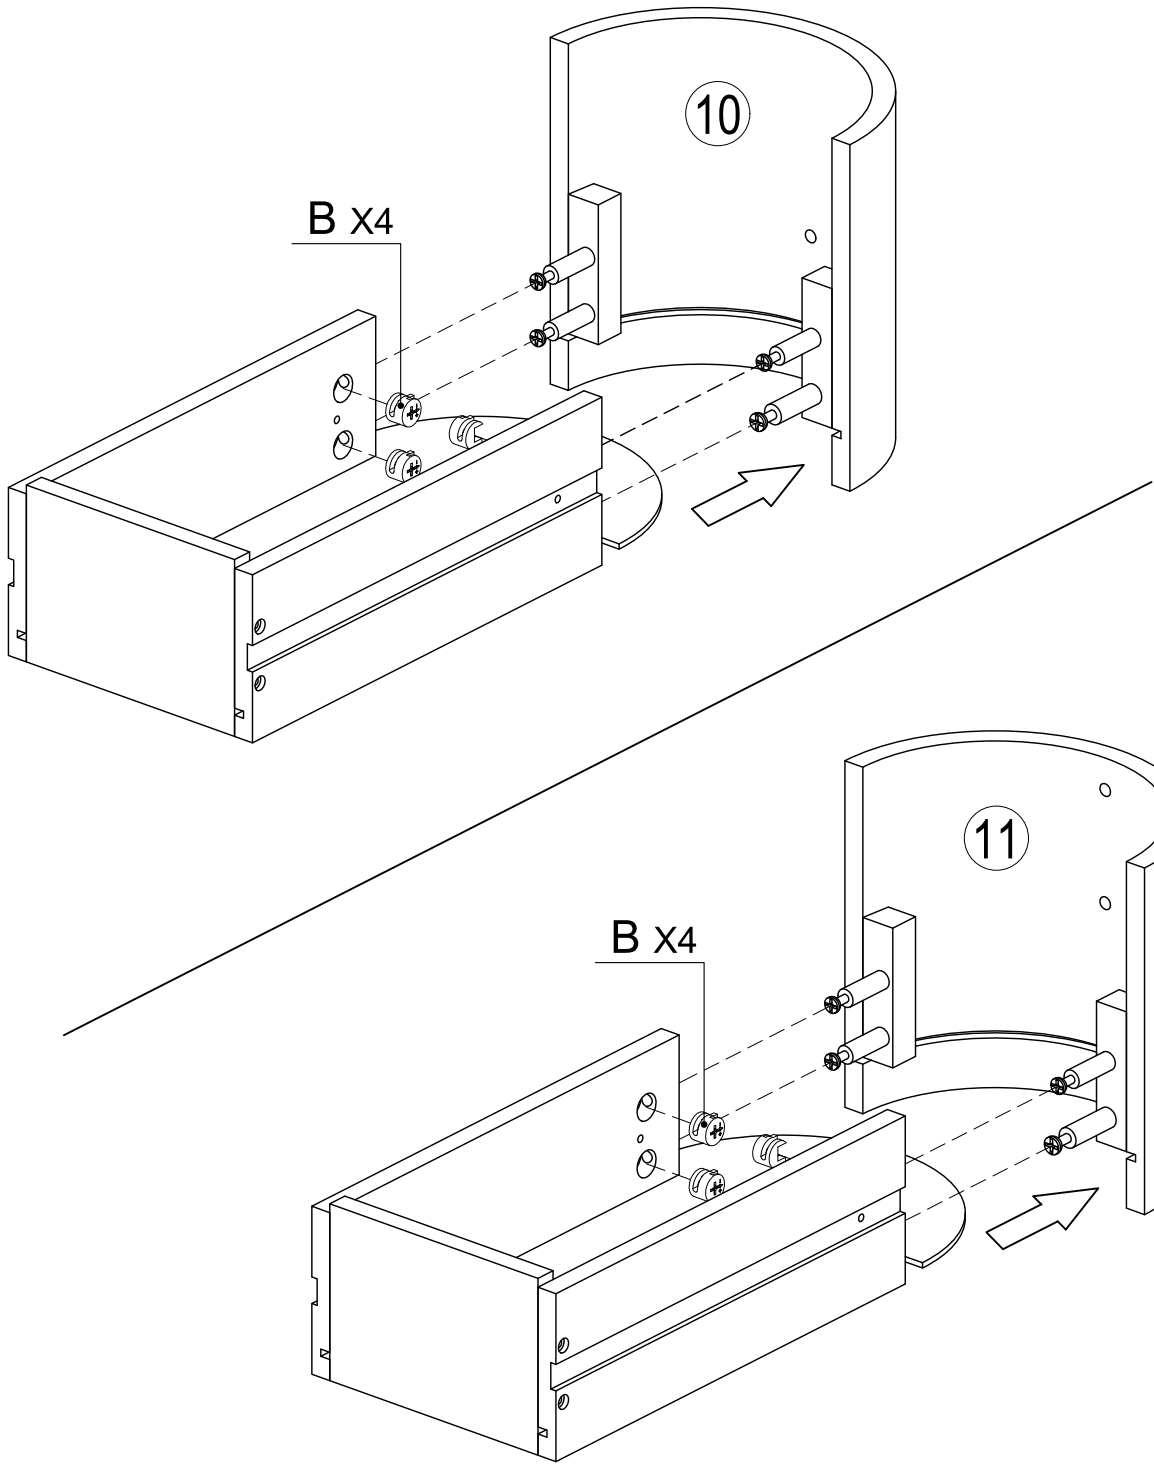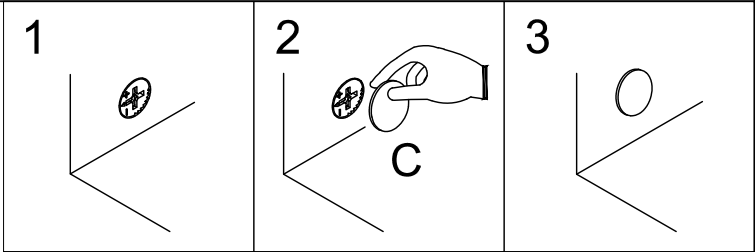

No. B

Quantity: 8 PCS
Cam
ø15x9.5mm




No. C


Quantity: 8 PCS
Sticker
ø20mm



STEP 13

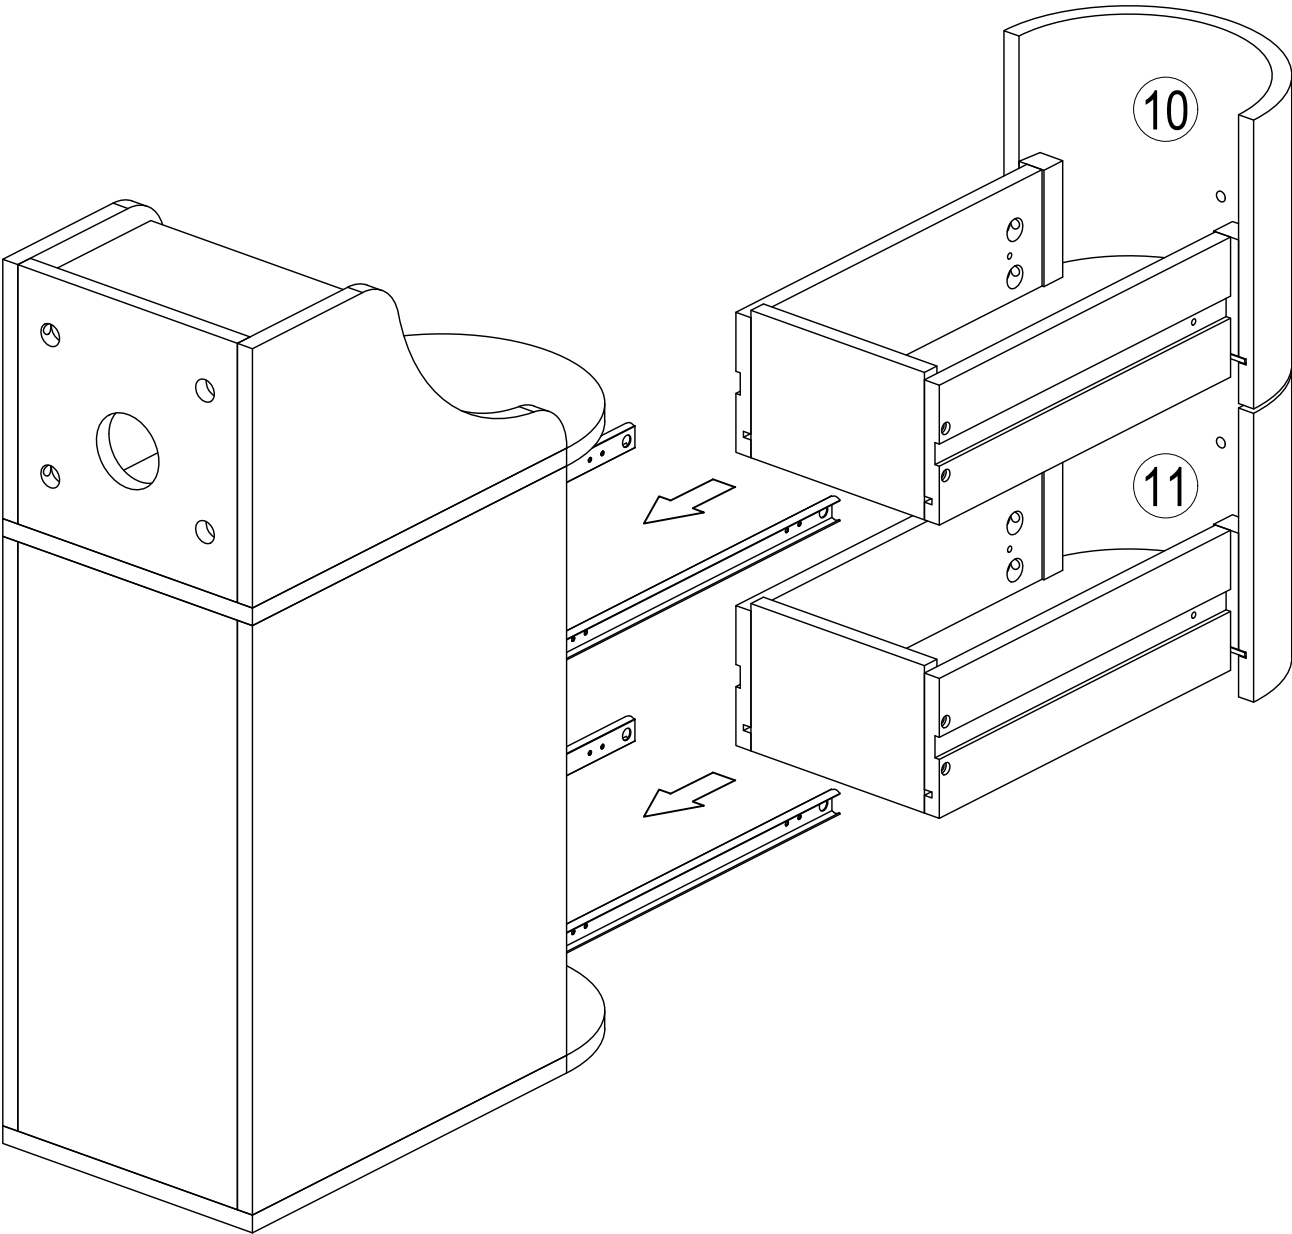

STEP 14

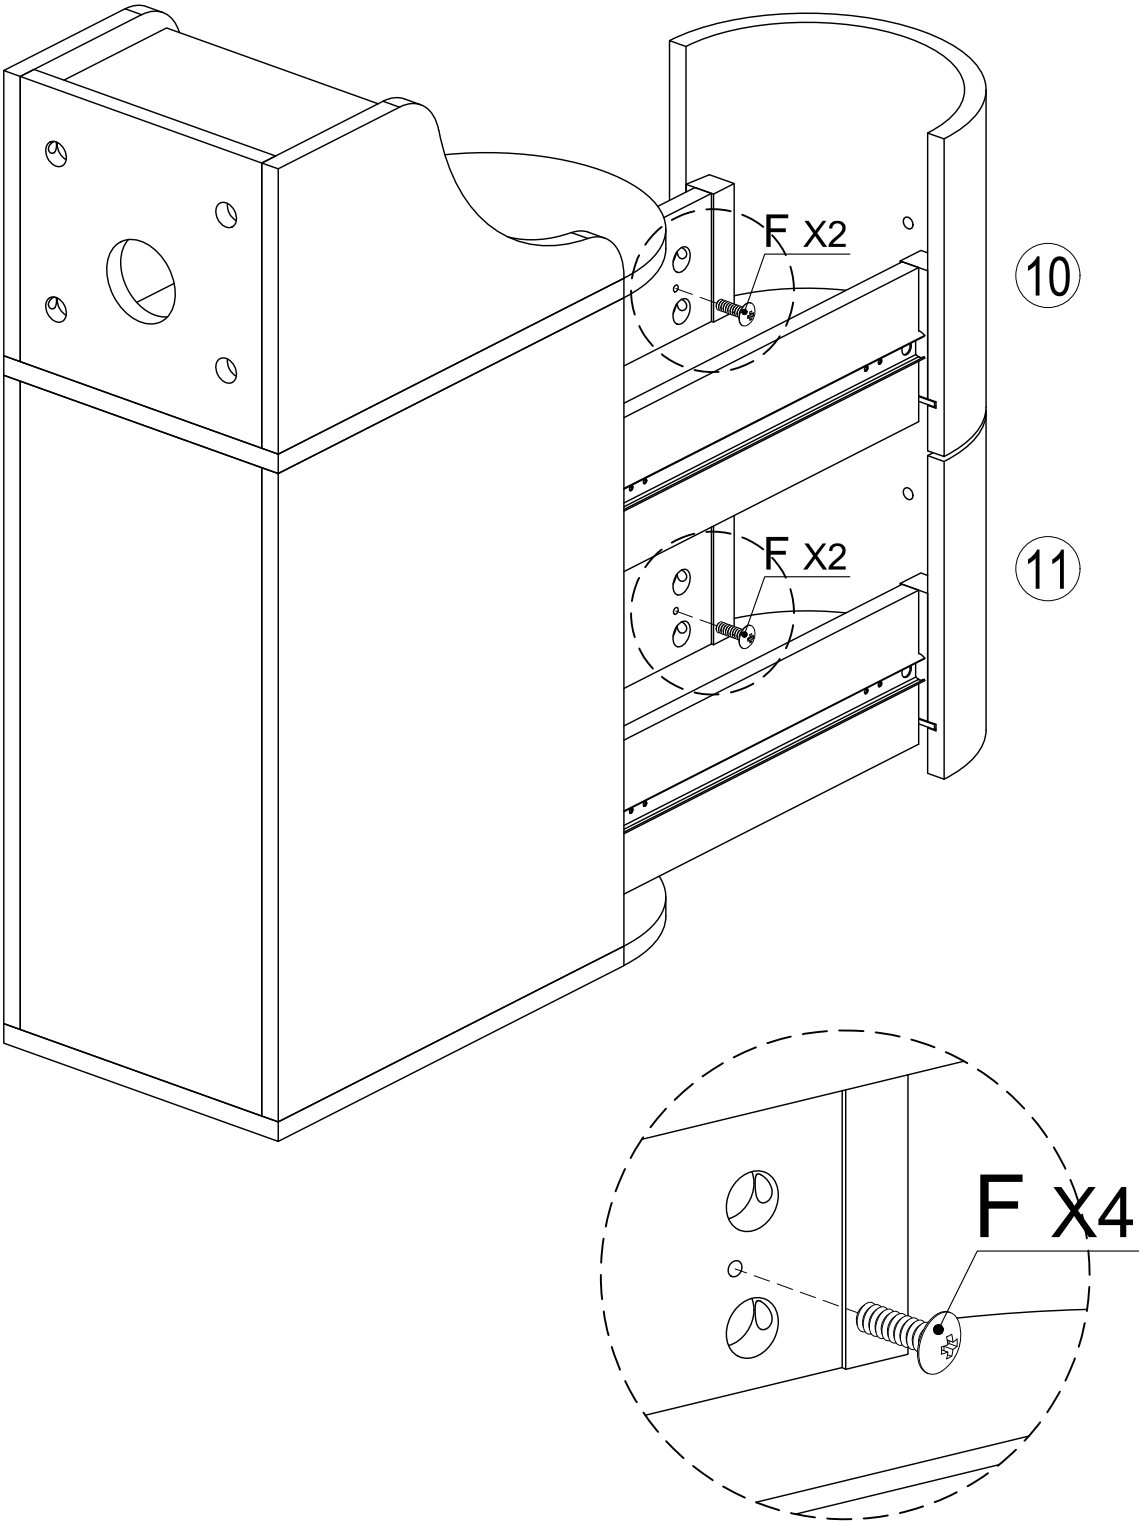

No. F

Quantity: 4 PCS

Bolt
M4x10mm

