

DA0303

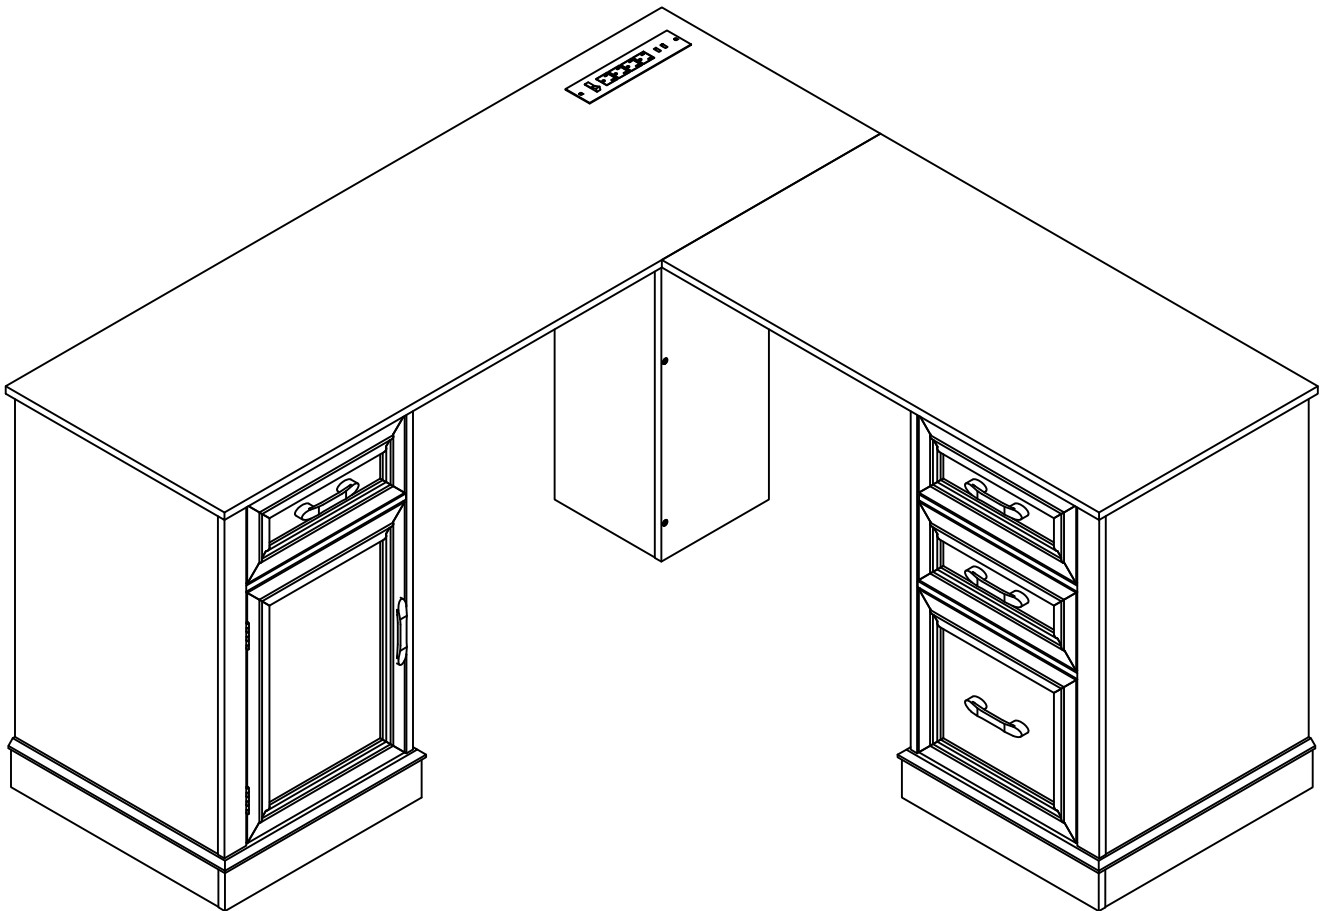

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start



- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY:1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

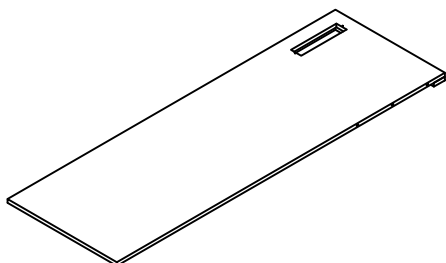


①

DESK TOP
Qty:1

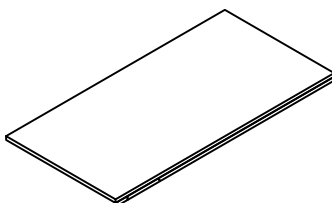


②

DESK TOP
Qty:1

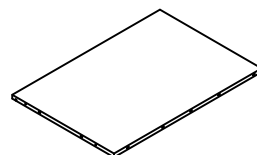


③

LOWER LEFT SIDE PANEL
Qty:1

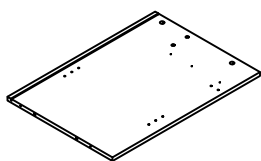


④

RIGHT SIDE PANEL
Qty:1

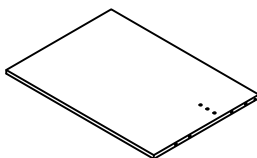


⑤

LOWER LEFT SIDE PANEL
Qty:1

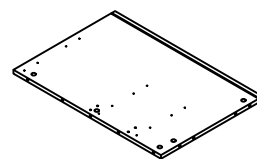


⑥

RIGHT SIDE PANEL
Qty:1

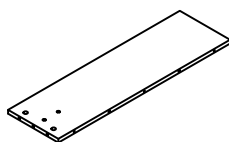


⑦

LEFT SIDE PANEL
Qty:1

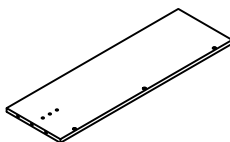

⑧

RIGHT SIDE PANEL
Qty:1

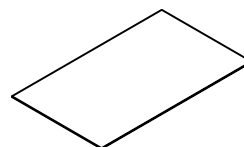


⑨

BACK PANEL
Qty:2


Board Identification

Not actual size

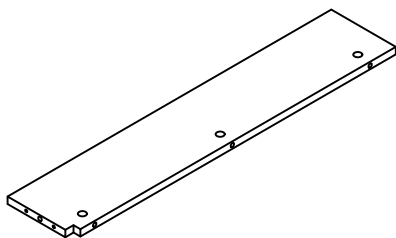


10

LEFT BACK BAFFLE
Qty:1

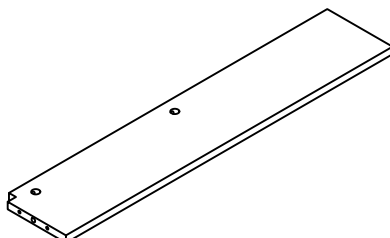


11

RIGHT BACK BAFFLE
Qty:1

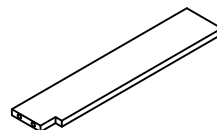


12

BOTTOM FRONT RAIL
Qty:1

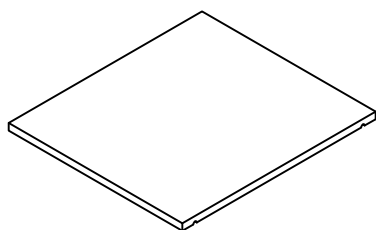


13

ADJUSTABLE SHELF
Qty:1

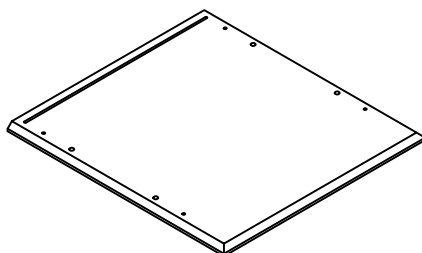


14

BOTTOM
Qty:2

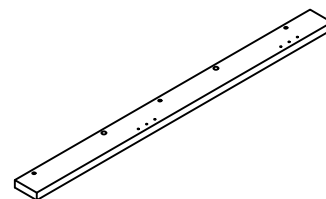


15

LEFT FRONT APRON
Qty:1

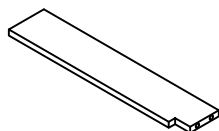


16

BOTTOM FRONT RAIL
Qty:2

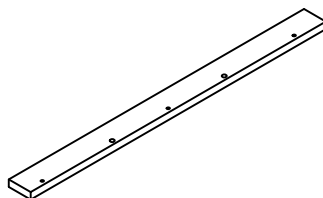

17

RIGHT FRONT APRON
Qty:1

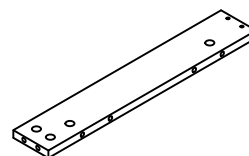


18

BOTTOM FRONT RAIL
Qty:2


Board Identification

Not actual size

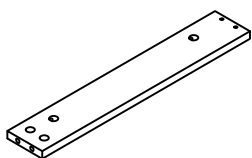


19

BOTTOM LEFT RAIL
Qty:2

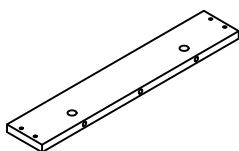


20

FRONT BAFFLE
Qty:2

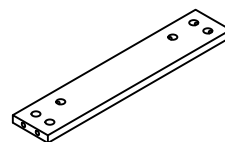


21

BACK BAFFLE
Qty:2

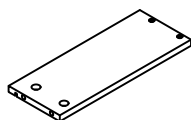


22

DRAWER LEFT SIDE
Qty:3

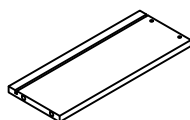


23

DRAWER RIGHT SIDE
Qty:3

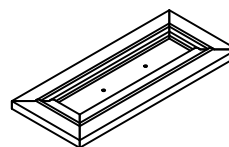


24

DRAWER FRONT
Qty:3

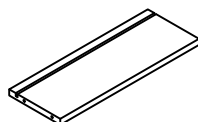


25

SMALL DRAWER BACK
Qty:3

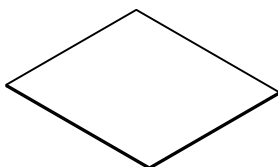

26

SMALL DRAWER BOTTOM
Qty:3

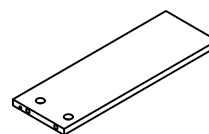


27

BIG DRAWER LEFT SIDE
Qty:1


Board Identification

Not actual size

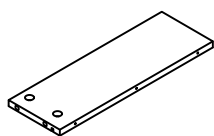


28

BIG DRAWER RIGHT SIDE
Qty:1

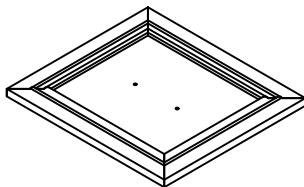


29

BIG DRAWER FRONT
Qty:1

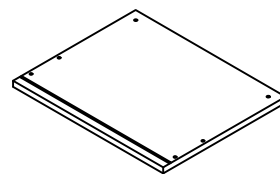


30

BIG DRAWER BACK
Qty:1

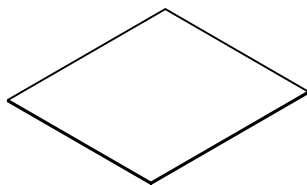

31


BIG DRAWER BOTTOM
Qty:1

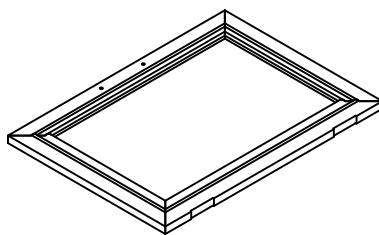


32

DOOR
Qty:1


Part List

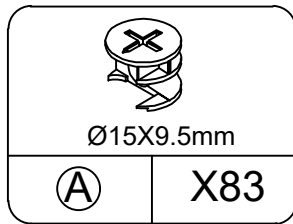


CAM LOCK
spare:3

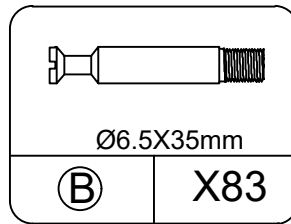


CAM BOLT
spare:3

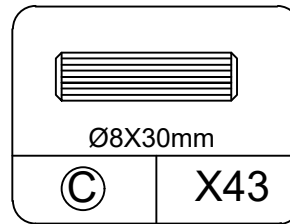


WOOD DOWEL
spare:2

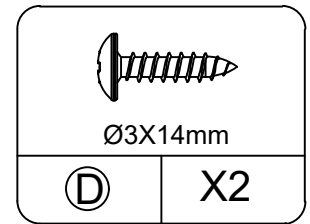


SCREW
spare:1

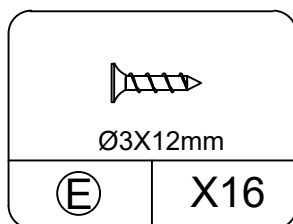


SCREW
spare:1

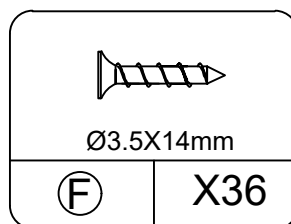


SCREW
spare:3

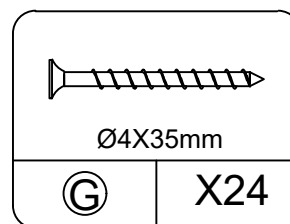


SCREW
spare:2

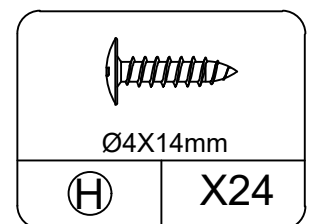


SCREW
spare:2

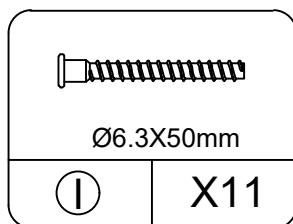


SCREW
spare:1

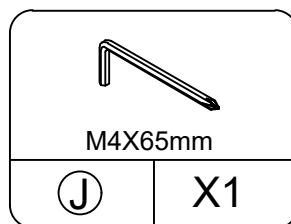


HEX KEY

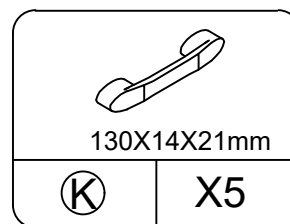


HANDLE

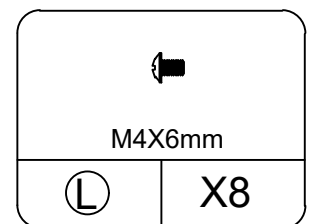


SCREW
spare:1

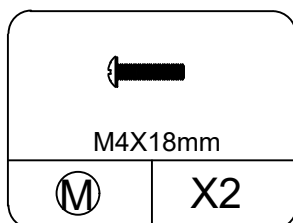


SCREW
spare:1

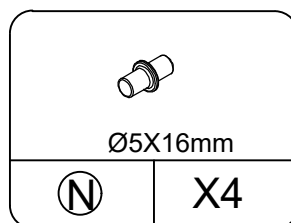


SHELF SUPPORT
spare:1

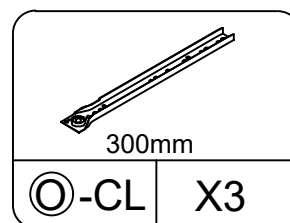


LEFT CABINET MEMBER

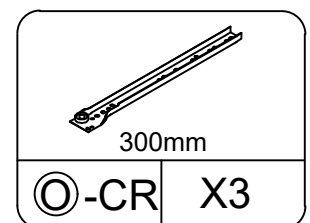


RIGHT CABINET MEMBER

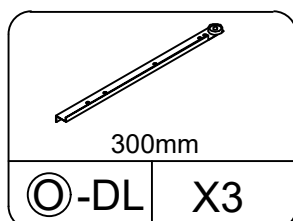


LEFT DRAWER RUNNER

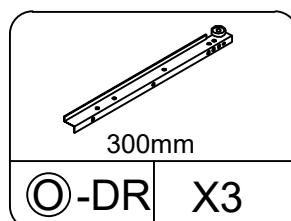

RIGHT DRAWER RUNNER

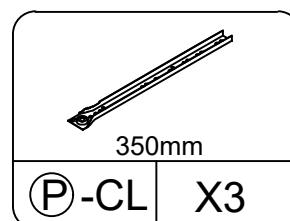


LEFT CABINET MEMBER

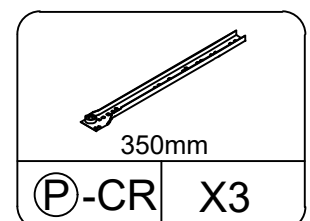


RIGHT CABINET MEMBER


Part List

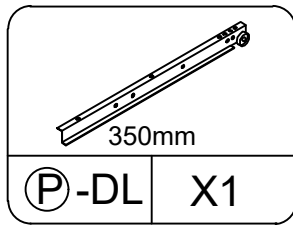


LEFT DRAWER RUNNER

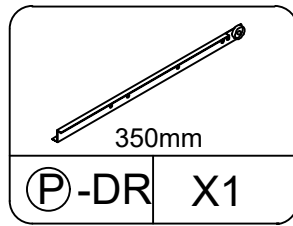


RIGHT DRAWER RUNNER

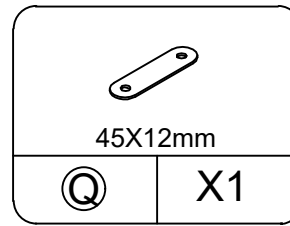


IRON SHEETS

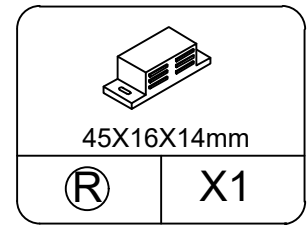


MAGNETS

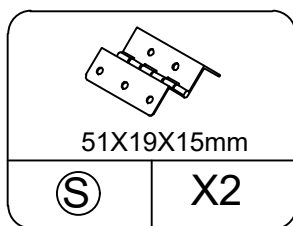


HINGE

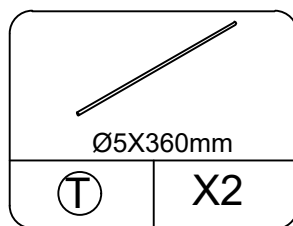


STEEL ROD

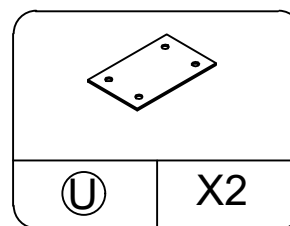


IRON SHEETS

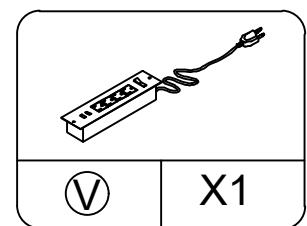


POWER STRIP

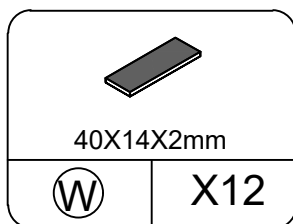


NON-SLIP MAT
spare:1

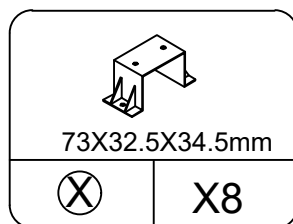


PLASTIC SPACER

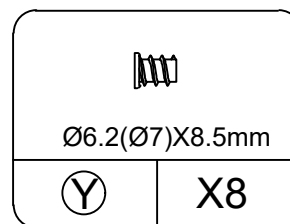


SCREW
spare:1

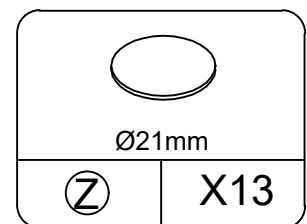

PERFECT STICKR
spare:1

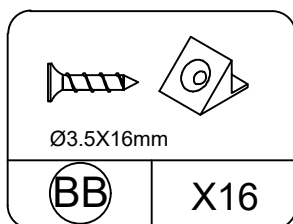

SCREW
spare:1

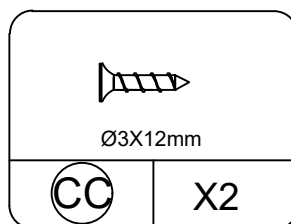


SCREW
spare:1

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

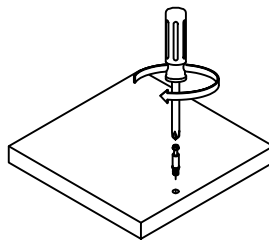

2

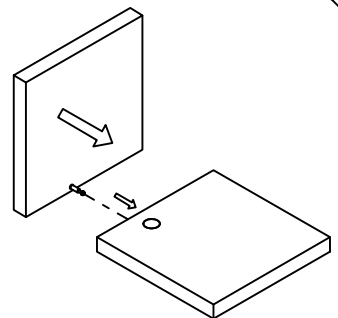


3

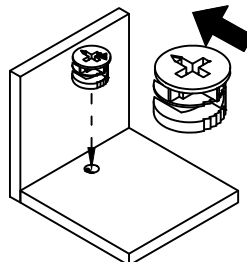


The opening must point toward the edge of the board

4

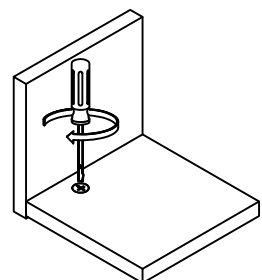



Board Identification

Not actual size

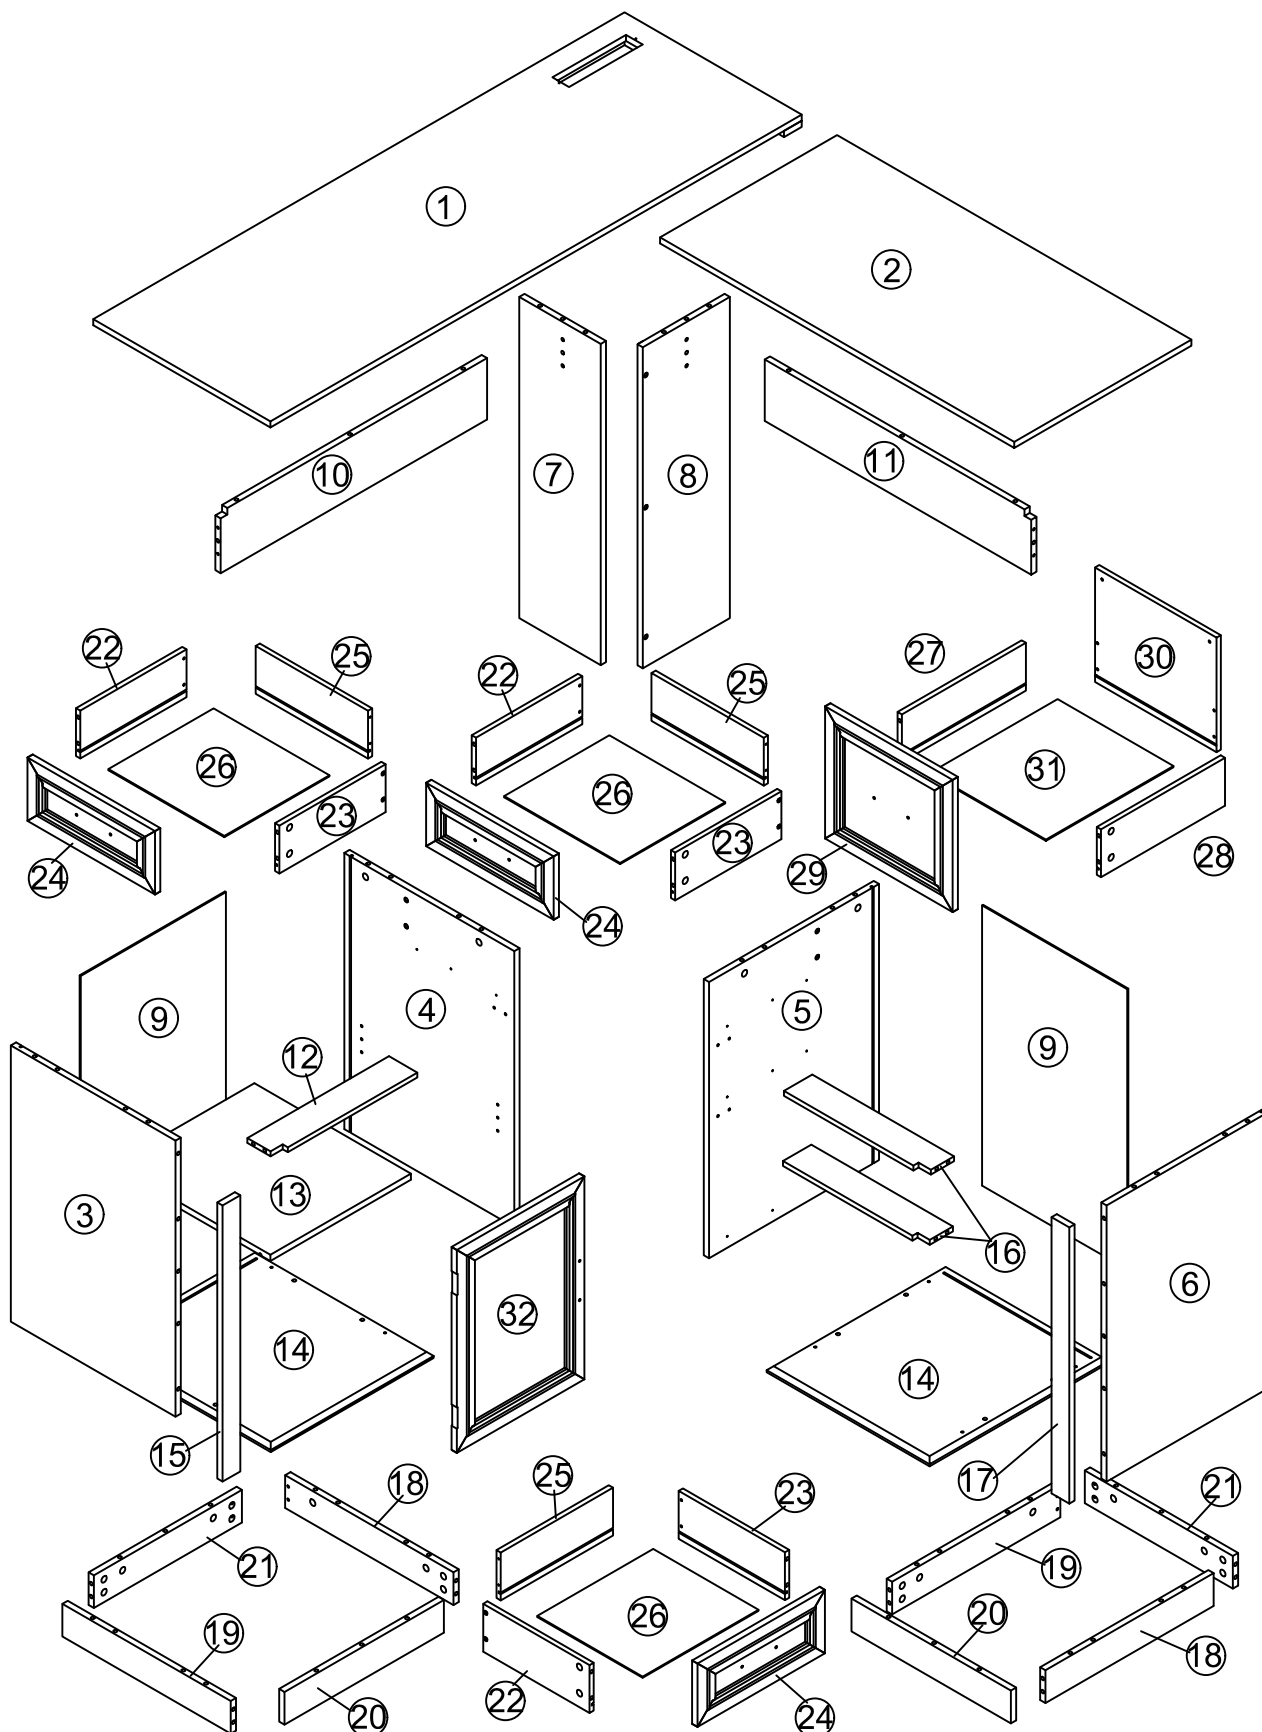


STEP1

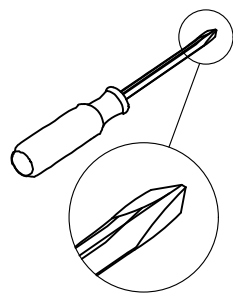


	
Ø6.5X35mm	
(B)	X3



	
Ø8X30mm	
(C)	X4

	
Ø3X12mm	
(E)	X6


	
73X32.5X34.5mm	
(X)	X2


	
Ø4X14mm	
(H)	X4



	
51X19X15mm	
(S)	X2

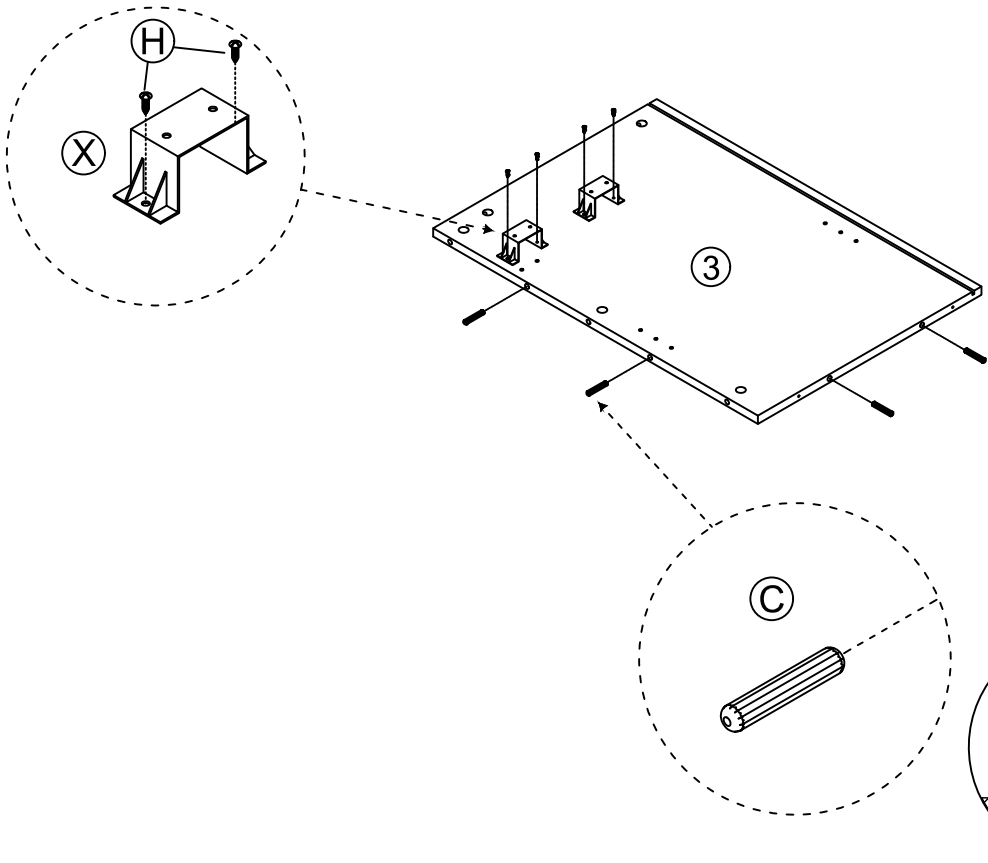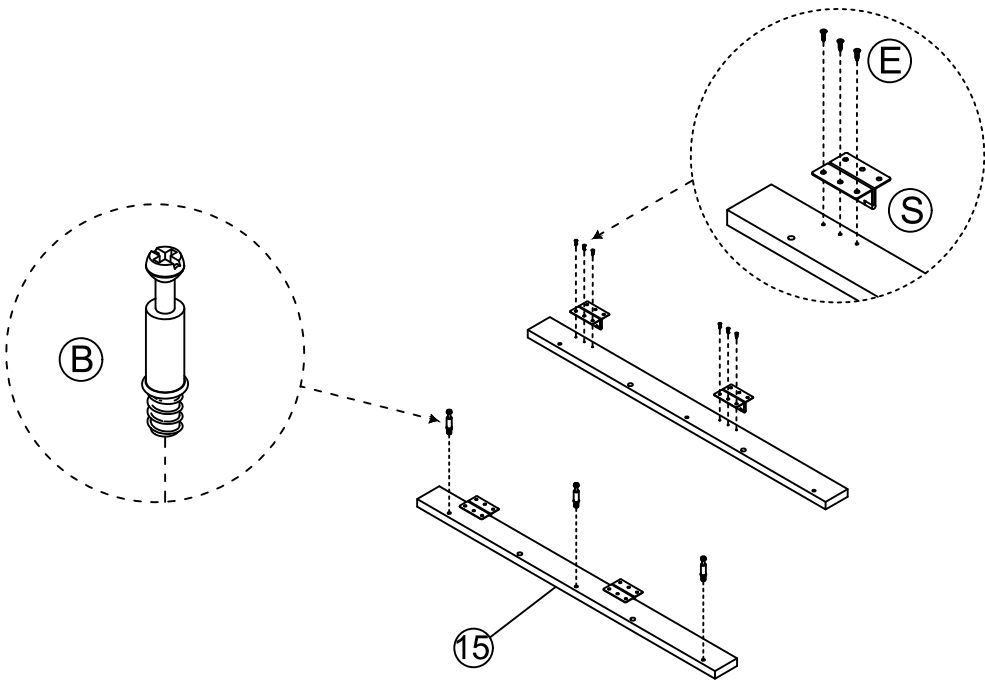


STEP2

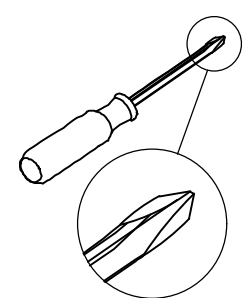


 Ø15X9.5mm		 Ø6.5X35mm		12"  300mm		 Ø6.2(Ø7)X8.5mm	
(A)	X3	(B)	X2	(O-CL)	X1	(Y)	X2

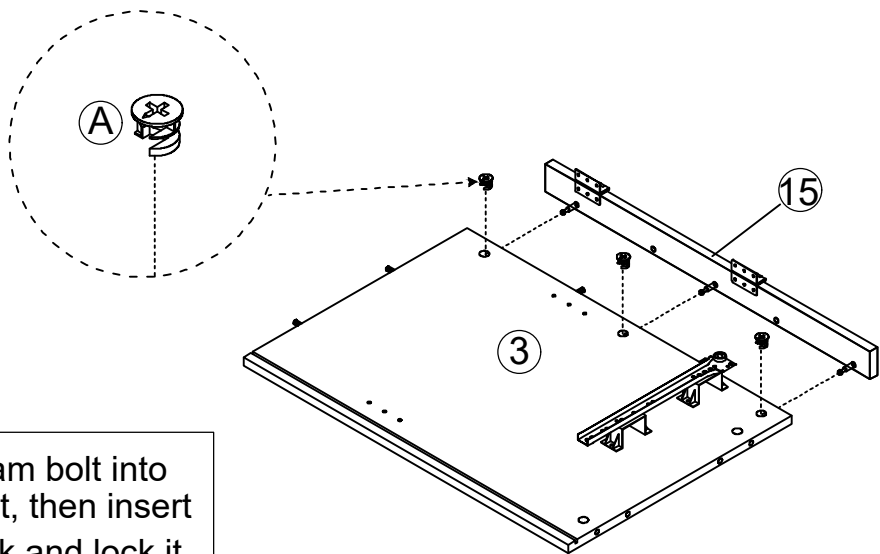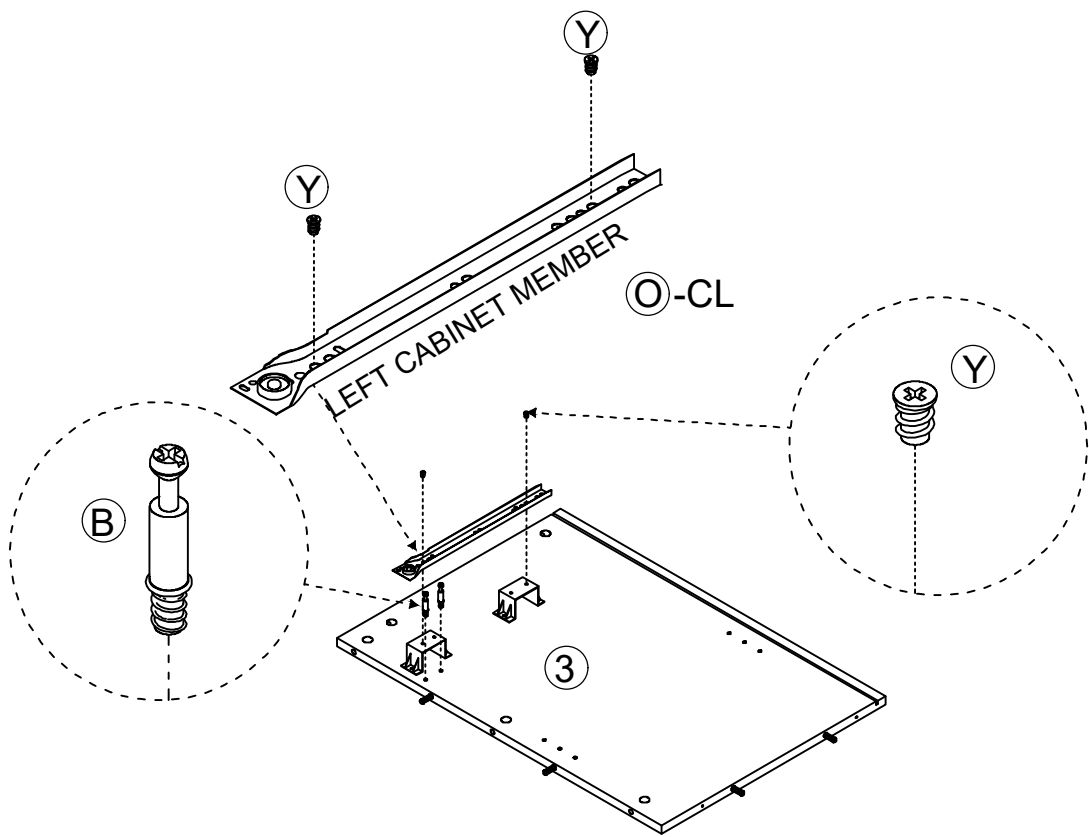









Insert the cam bolt into the hole first, then insert the cam lock and lock it.

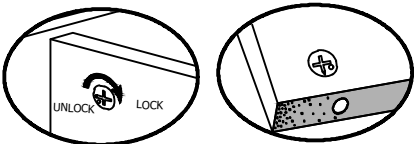






Proper orientation of CAM LOCK

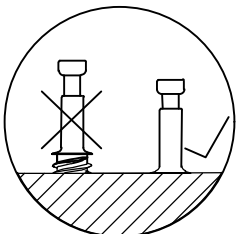


STEP3

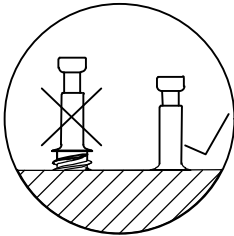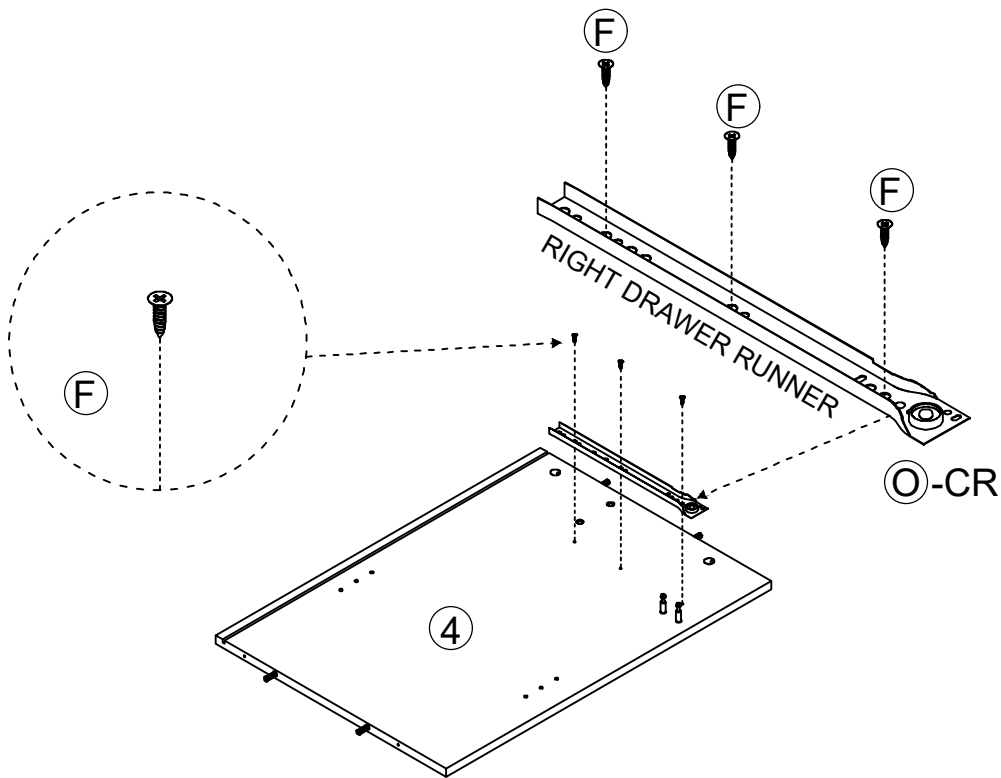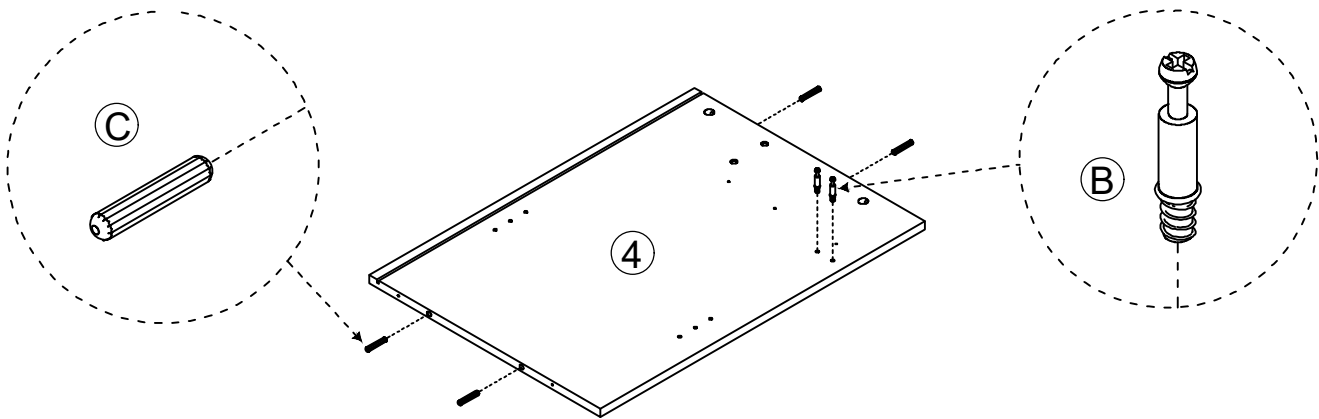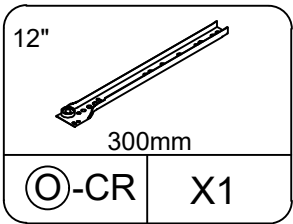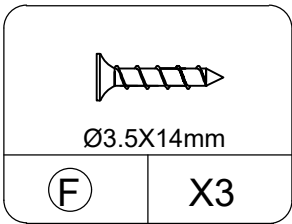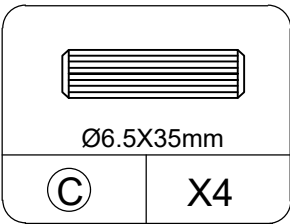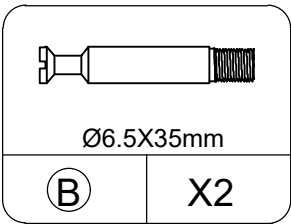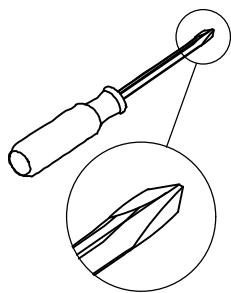

STEP4




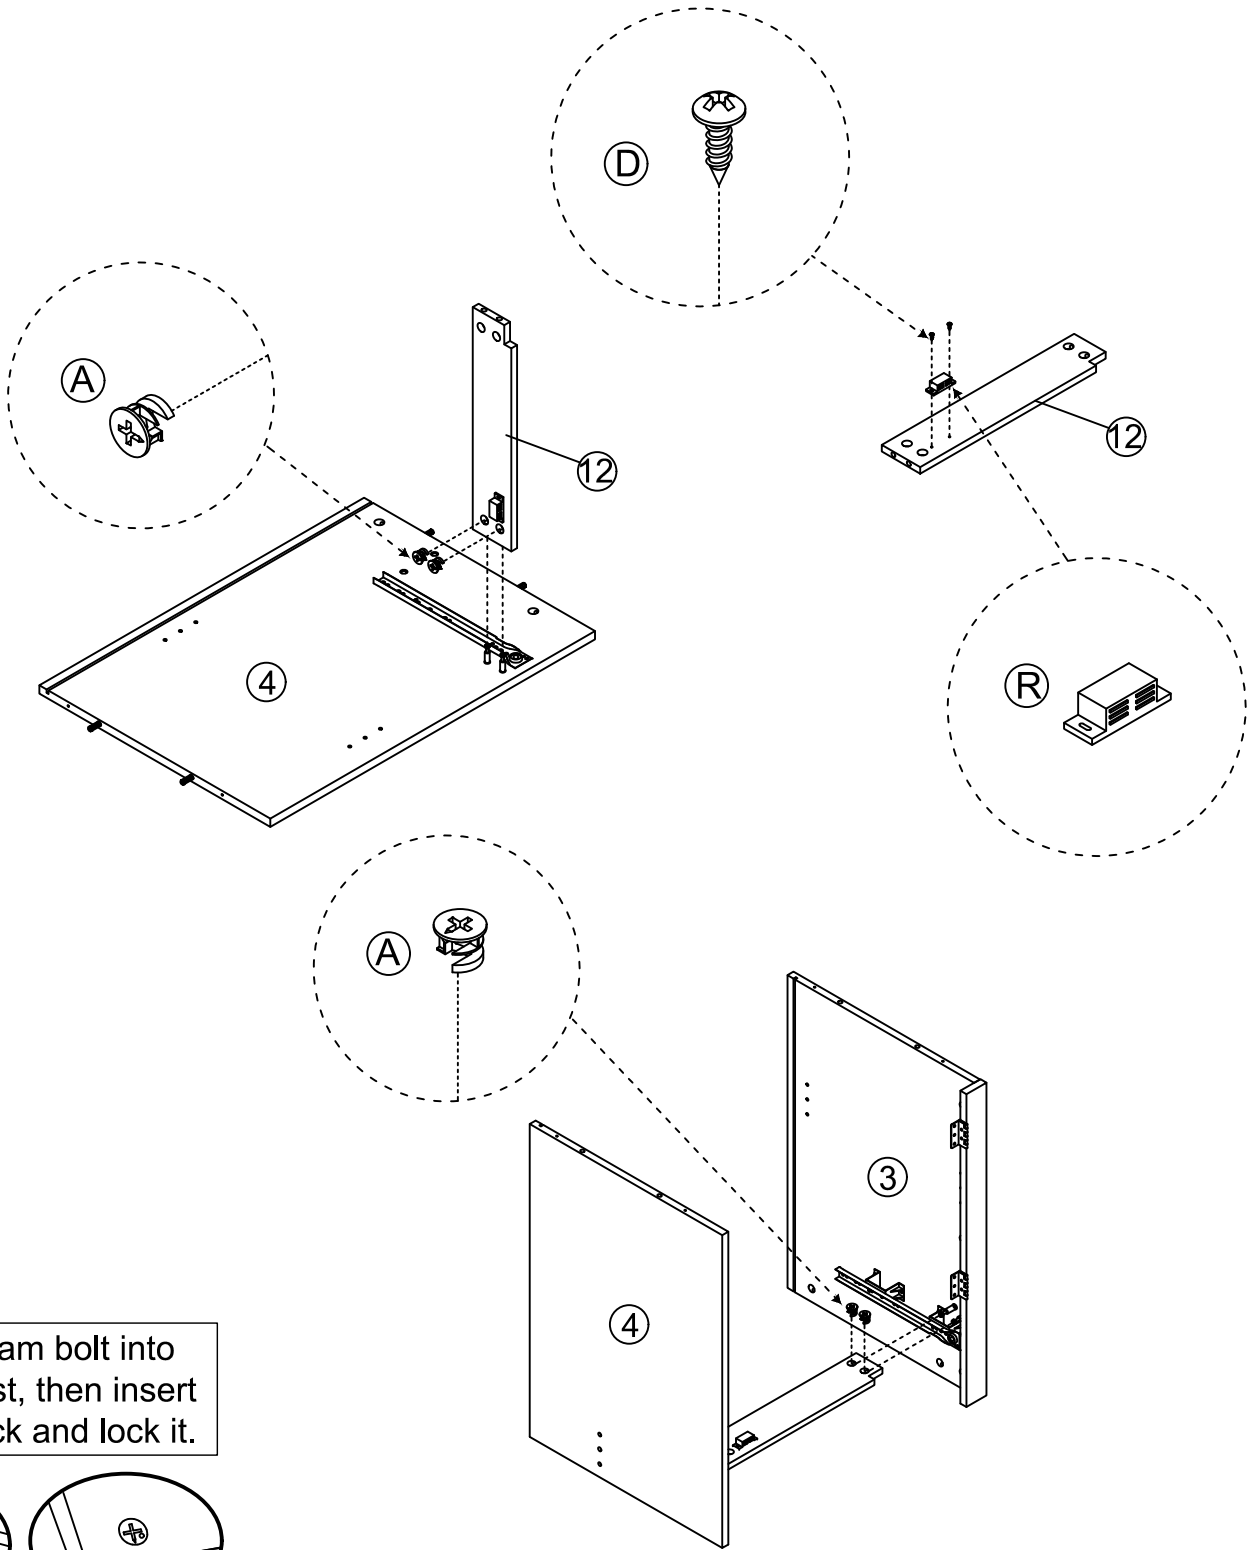
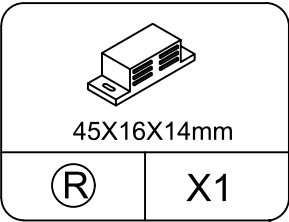
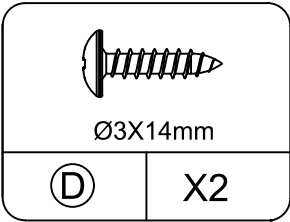
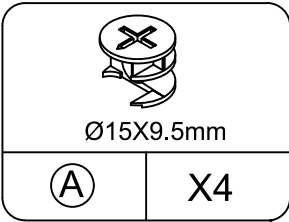
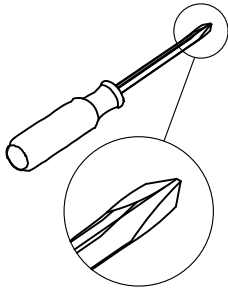


Insert the cam bolt into the hole first, then insert the cam lock and lock it.









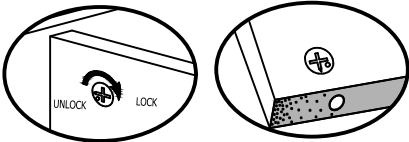


Proper orientation of CAM LOCK


STEP5

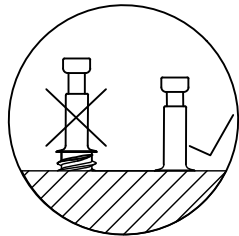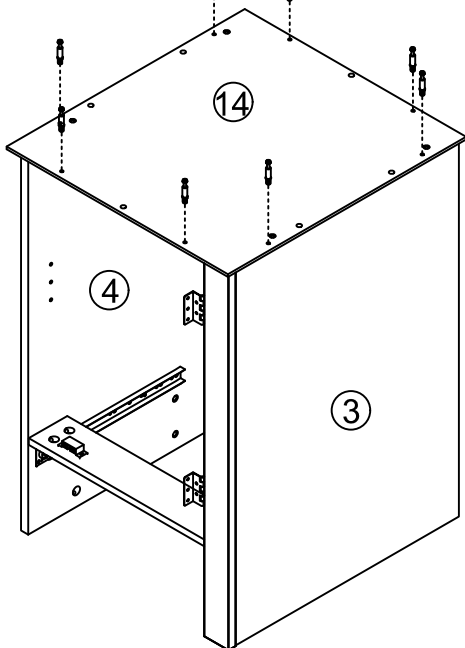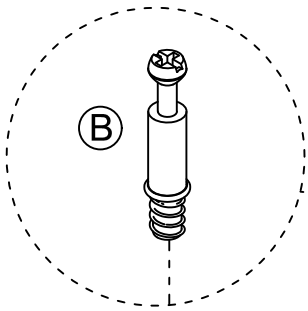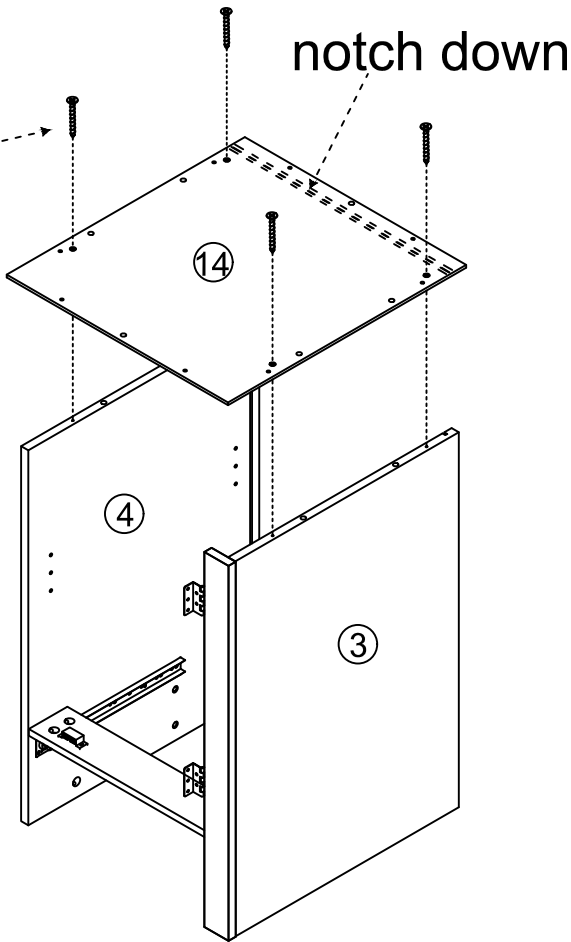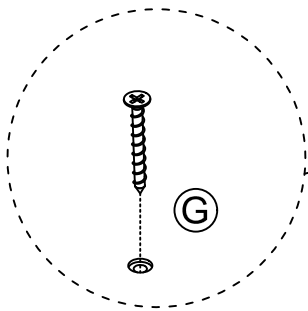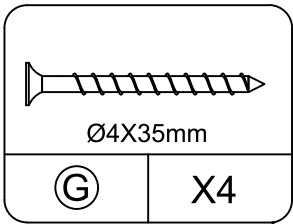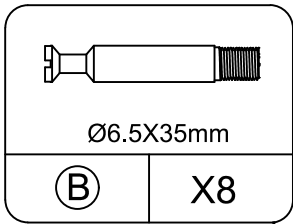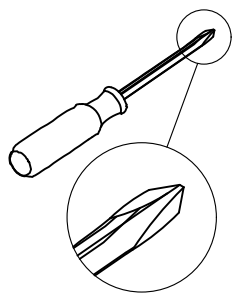

STEP6

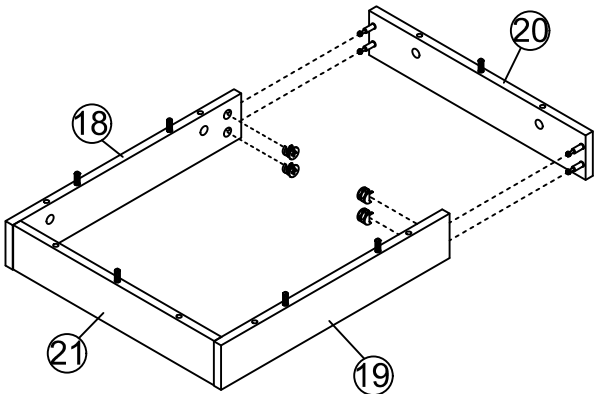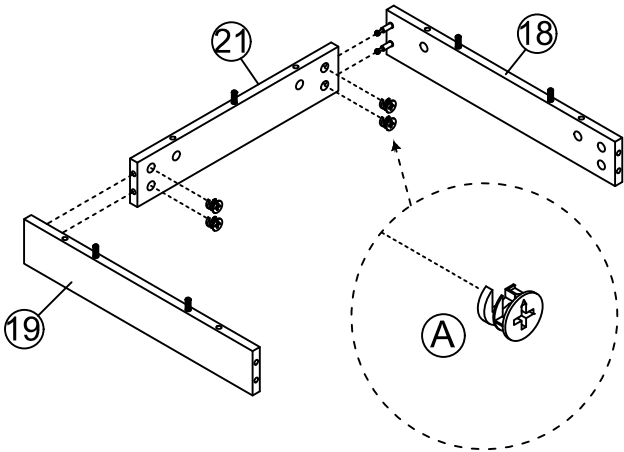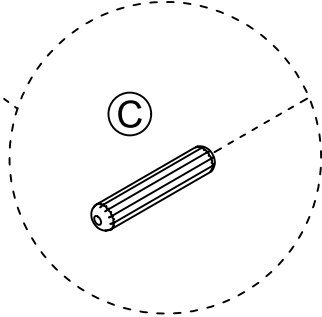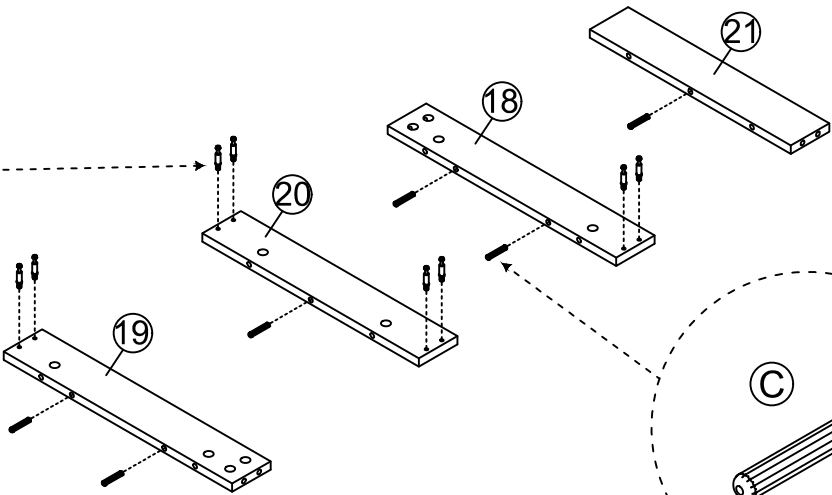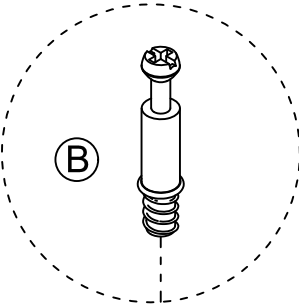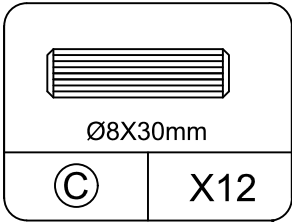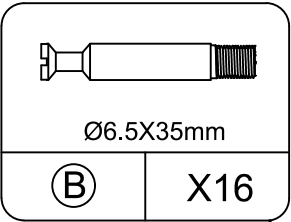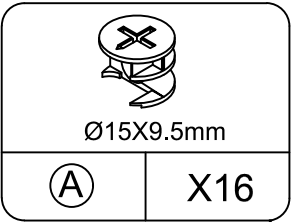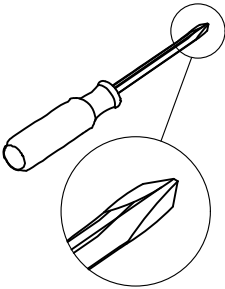


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

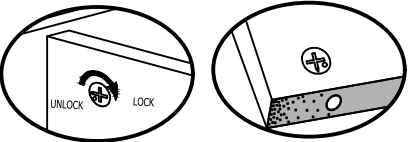


Proper orientation of CAM LOCK

X2

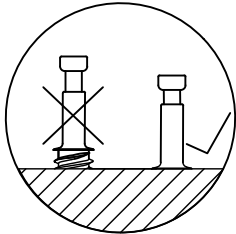


STEP7






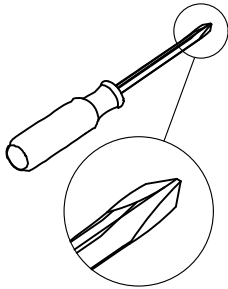


	
Ø15X9.5mm	
(A)	X8


	
Ø8X30mm	
(C)	X2

	
Ø6.3X50mm	
(I)	X3

	
40X14X2mm	
(W)	X4

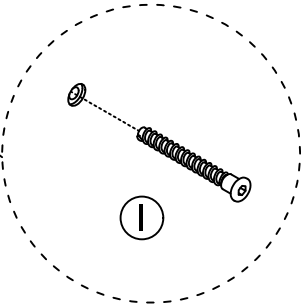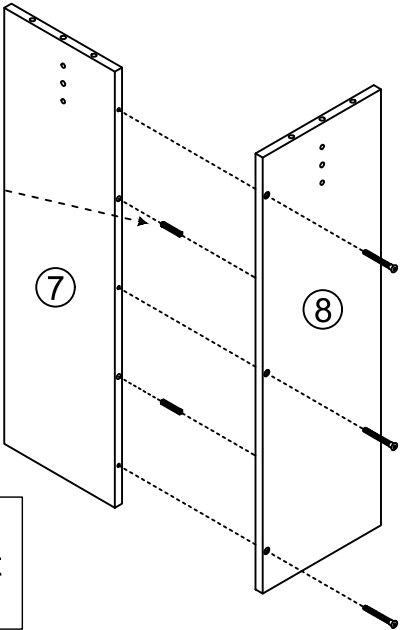
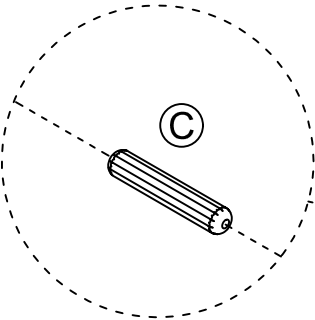
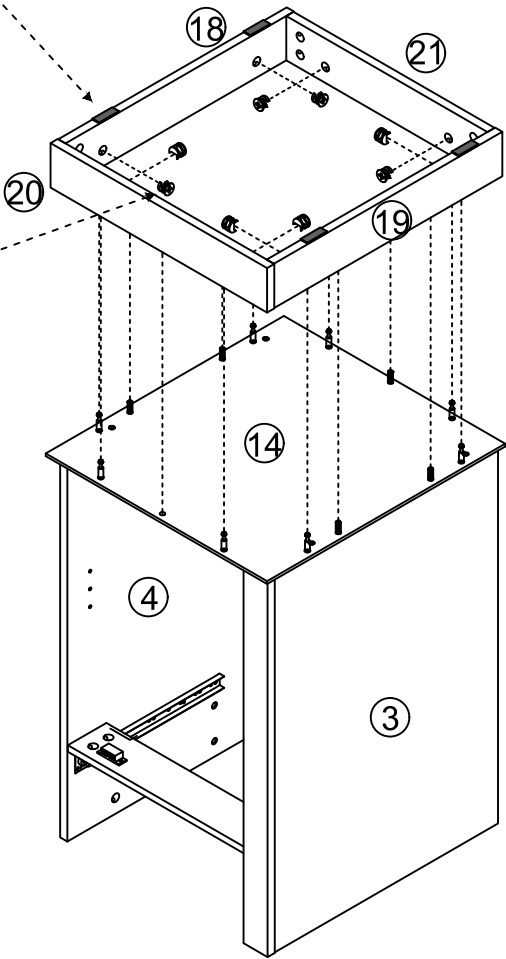
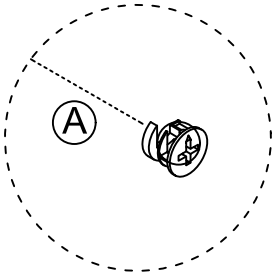
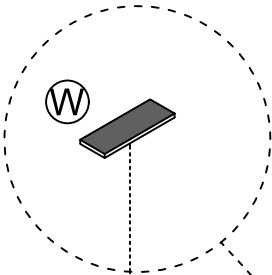


Insert the cam bolt into the hole first, then insert the cam lock and lock it.





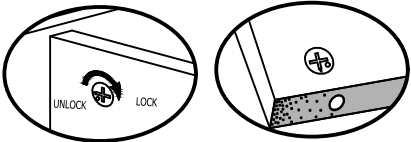


Proper orientation of CAM LOCK









STEP8

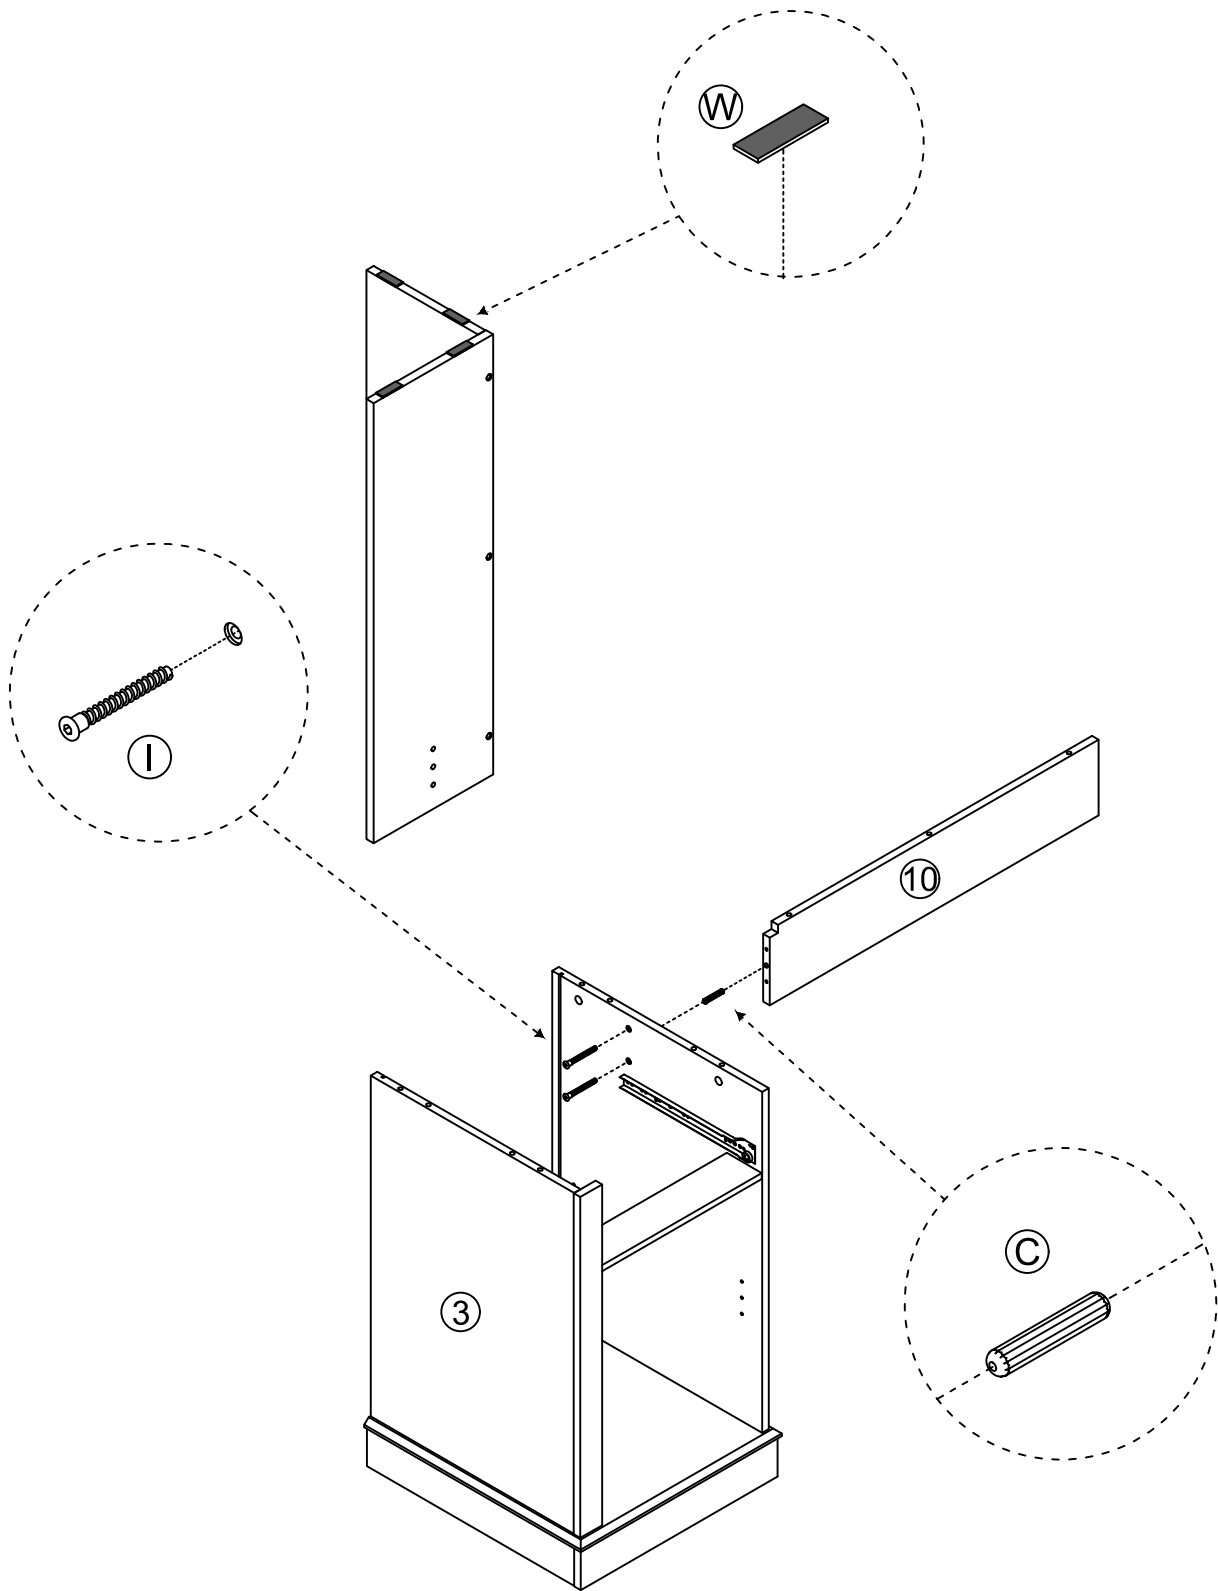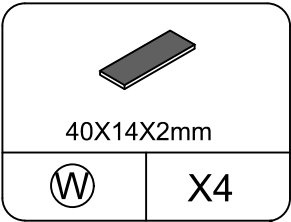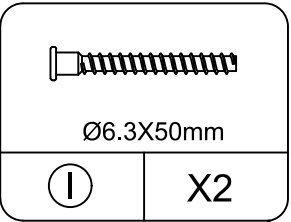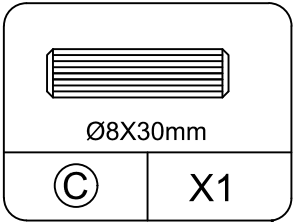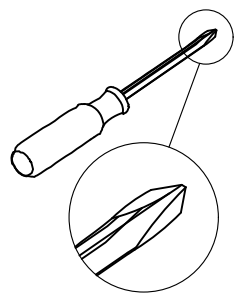





STEP9

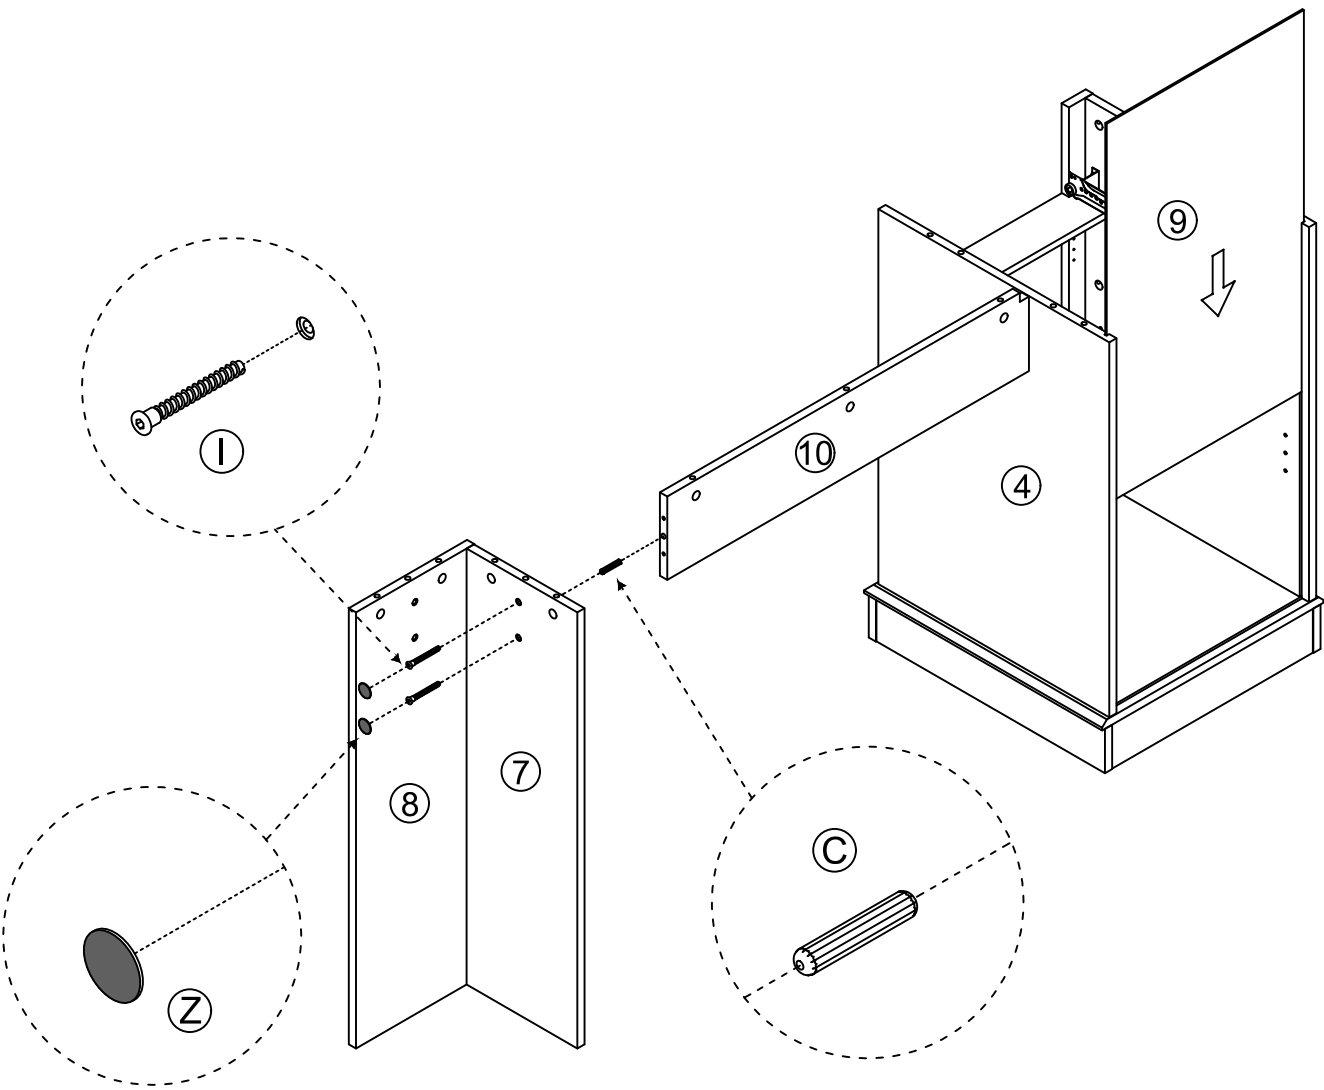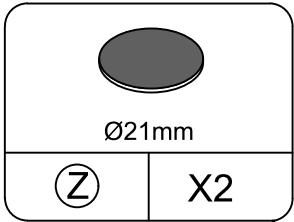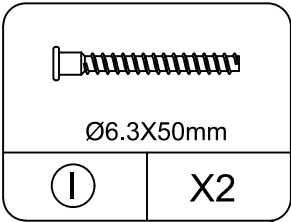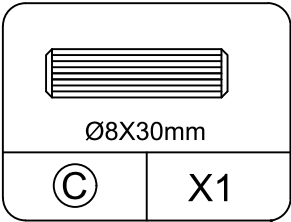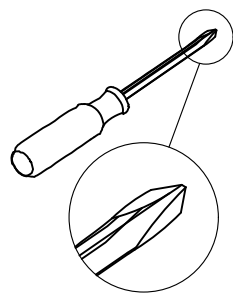


STEP10

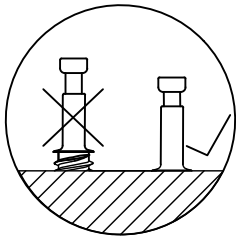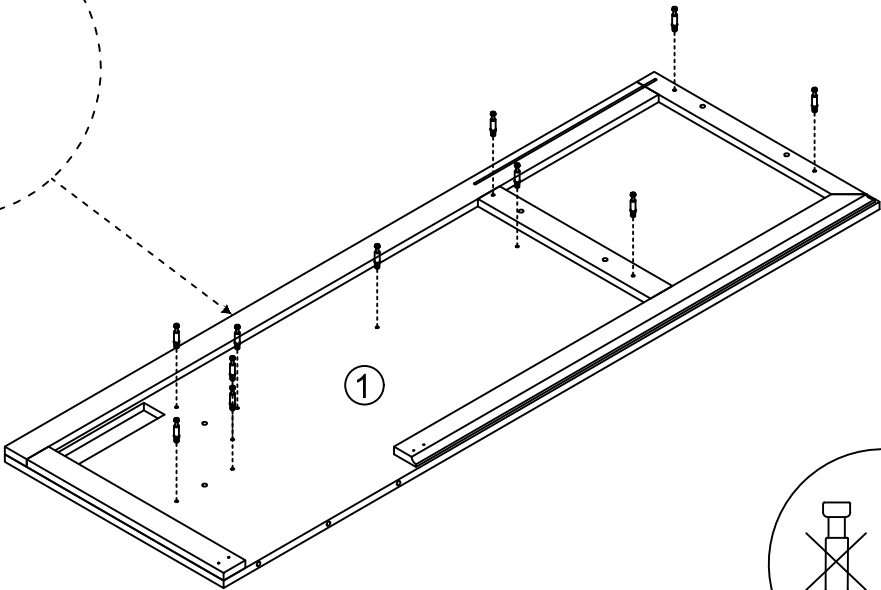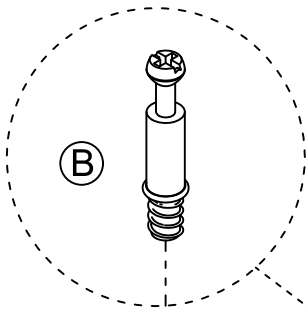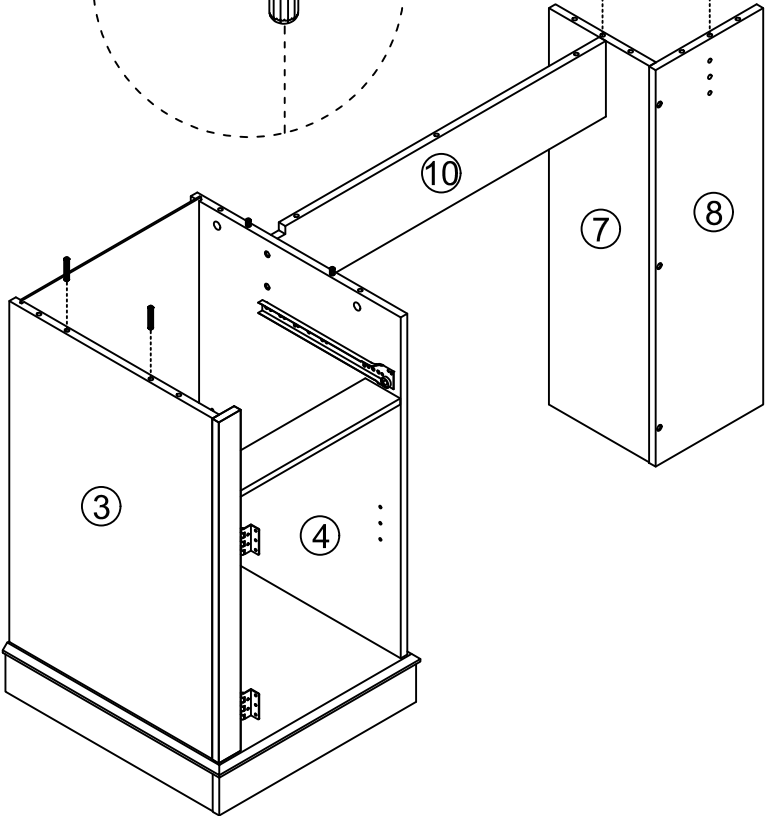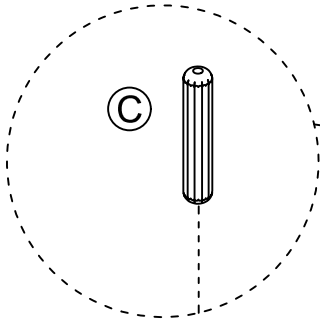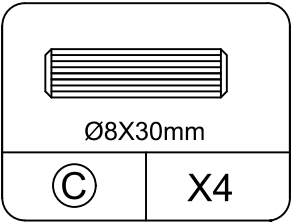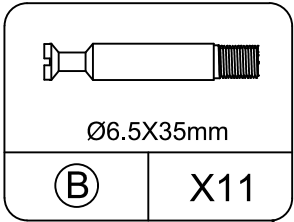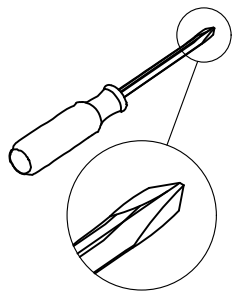






STEP11

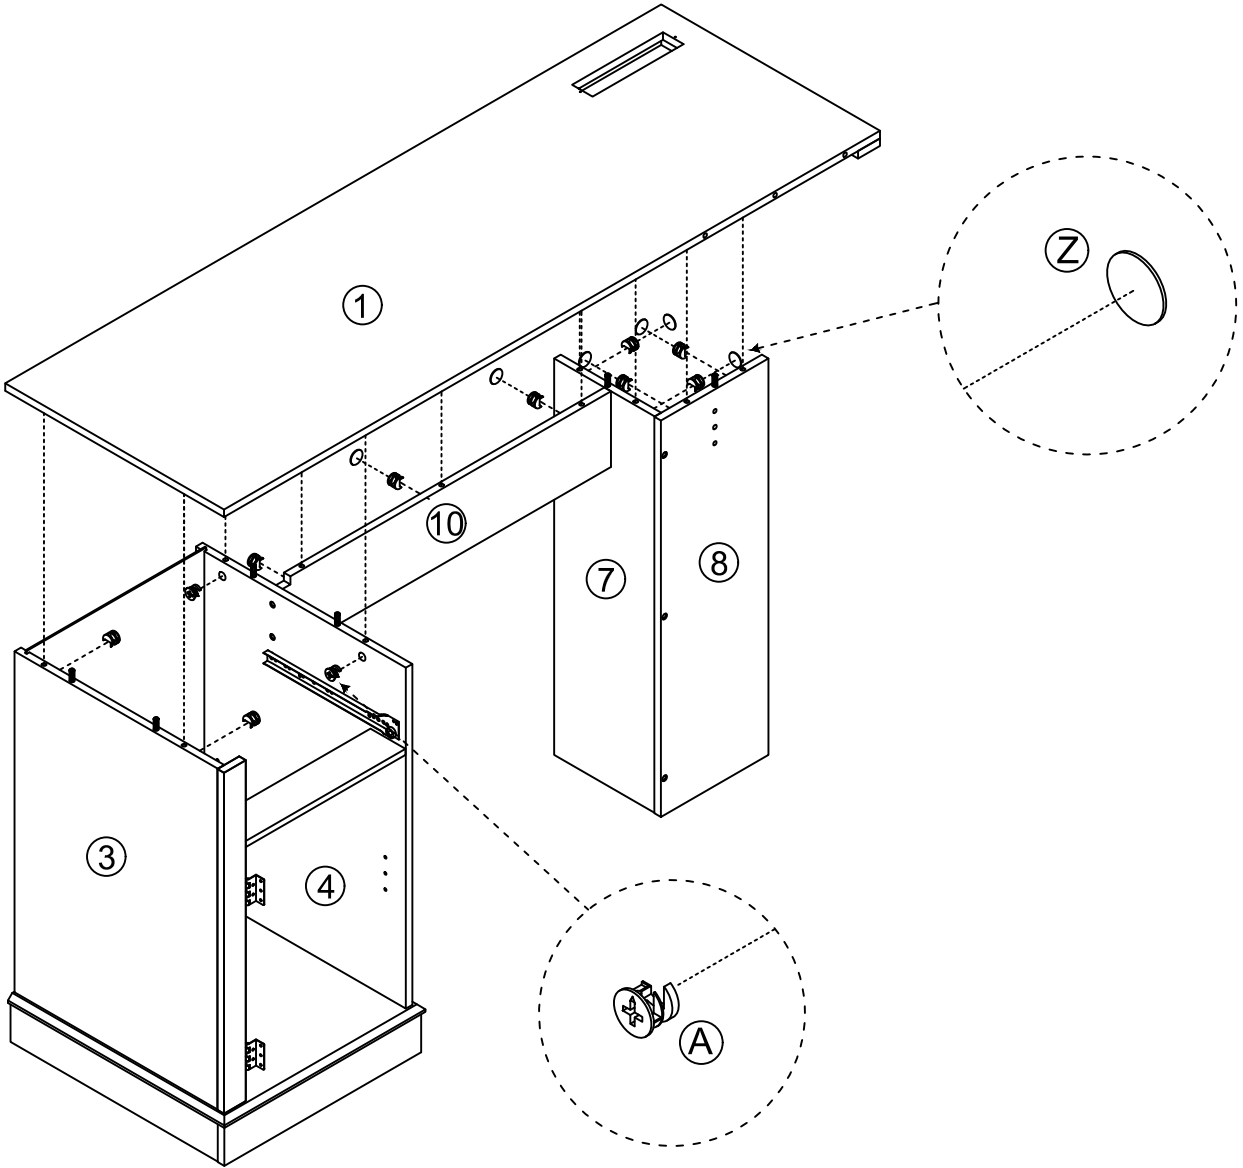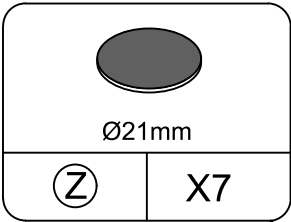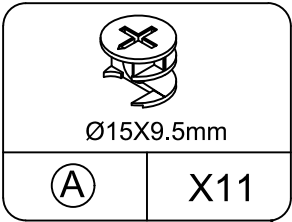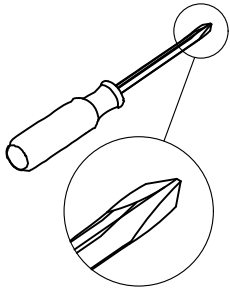






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

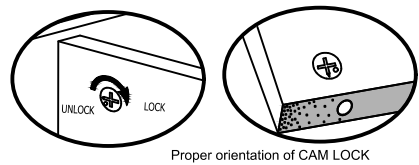


STEP12

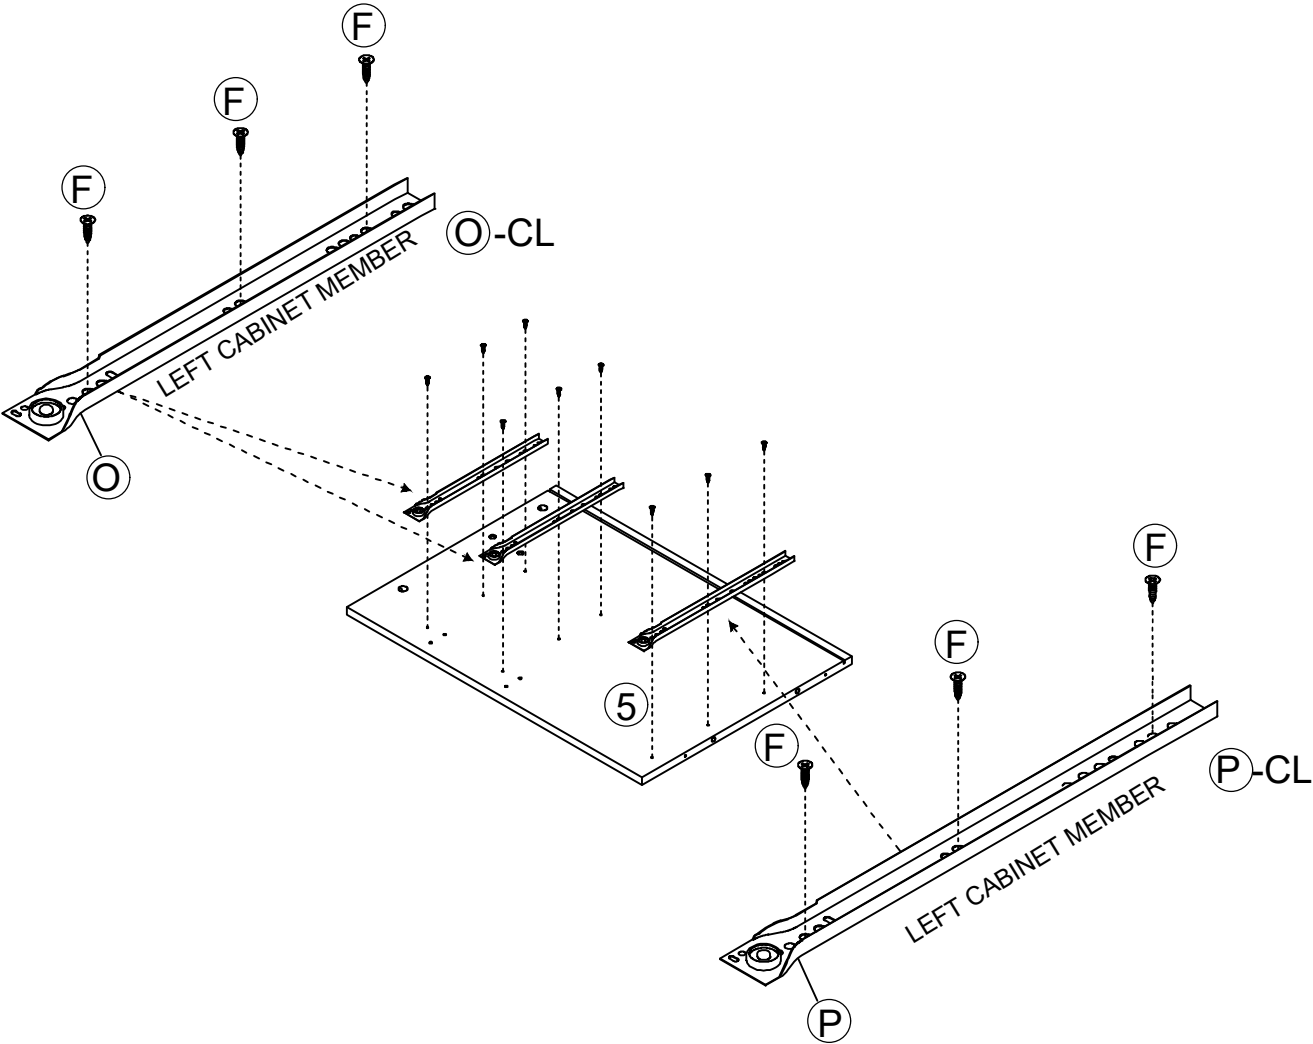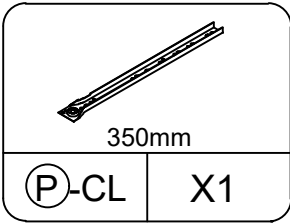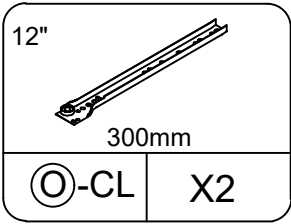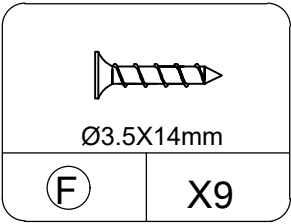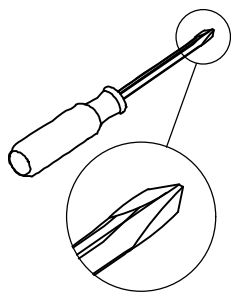


STEP13

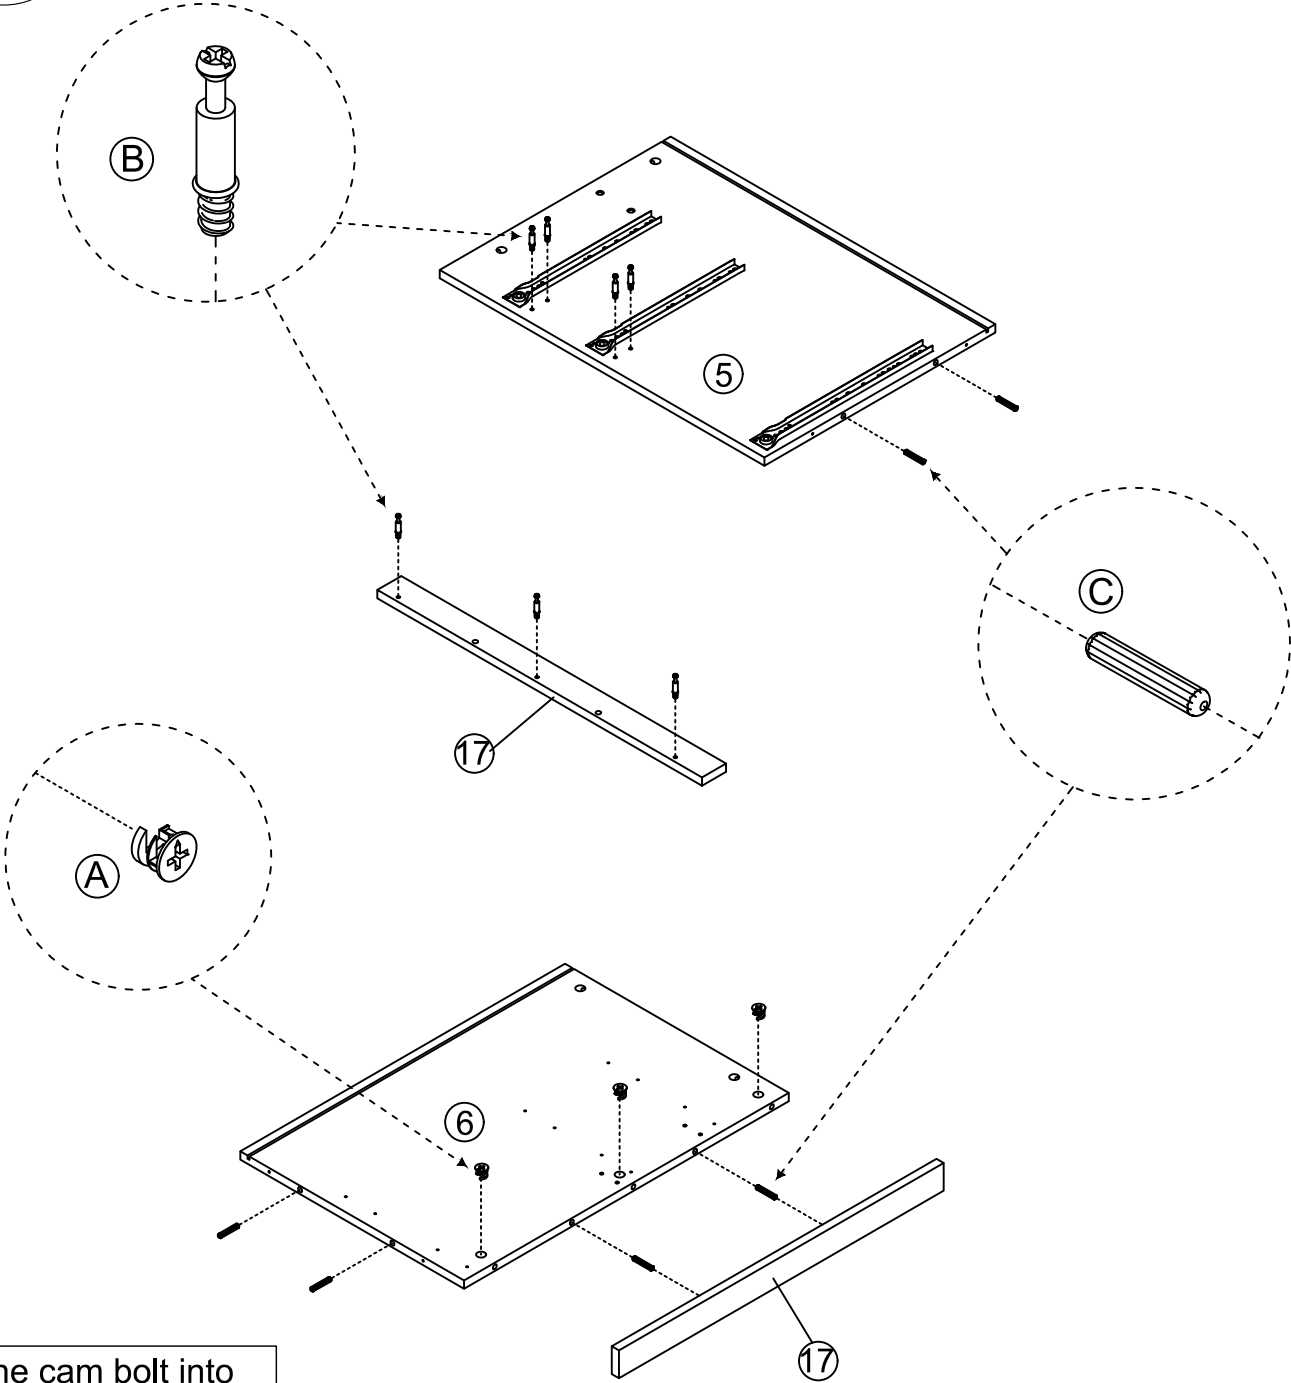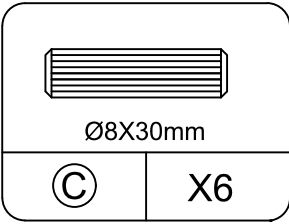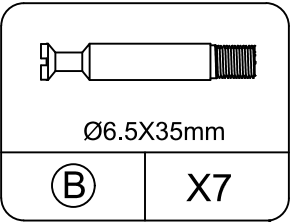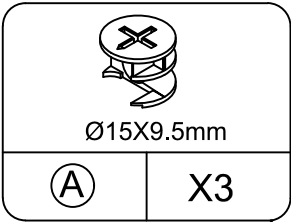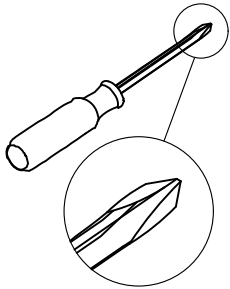








Insert the cam bolt into the hole first, then insert the cam lock and lock it.

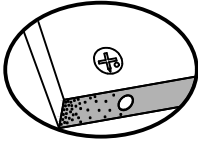








Proper orientation of CAM LOCK

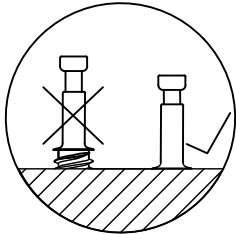


STEP14

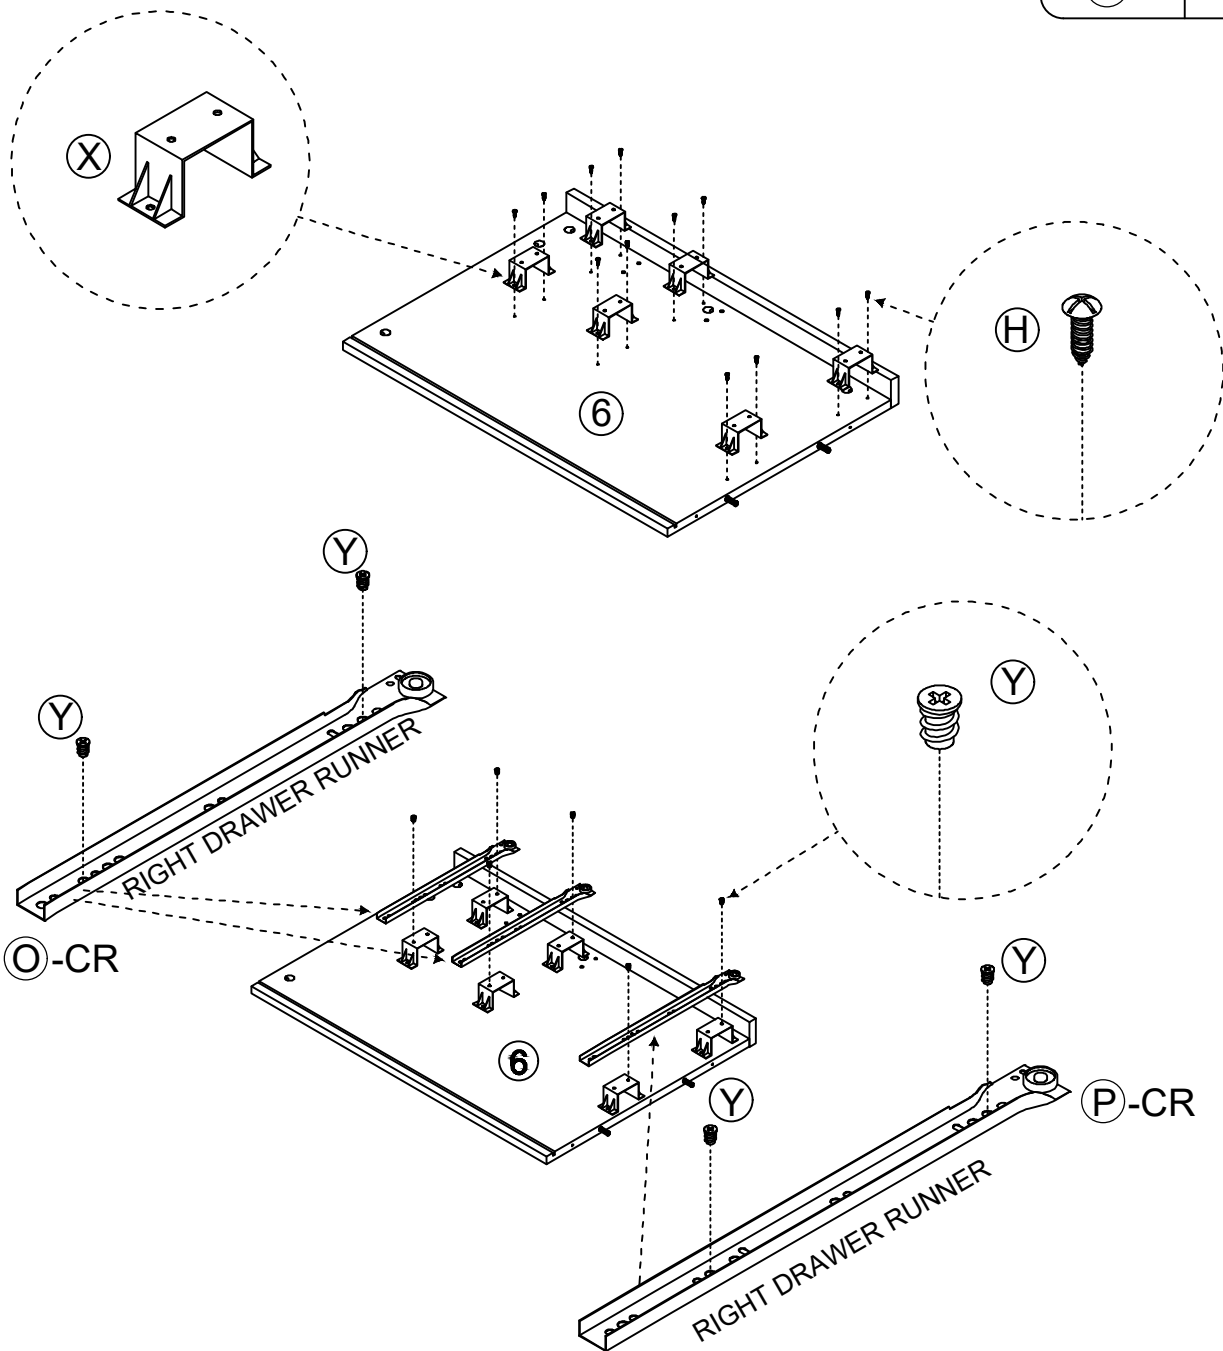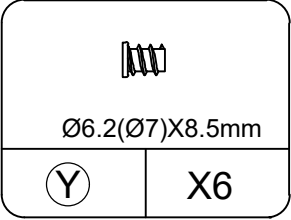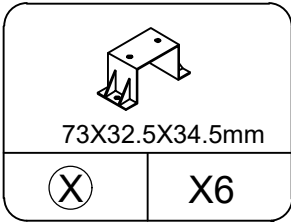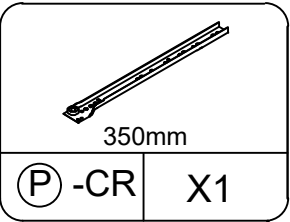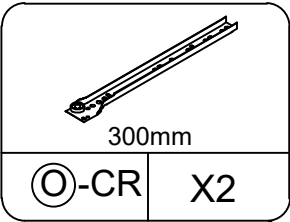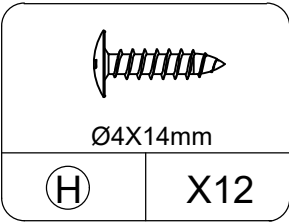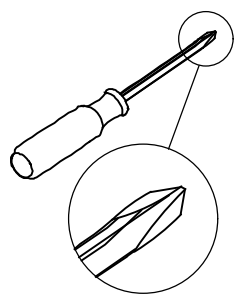


STEP15

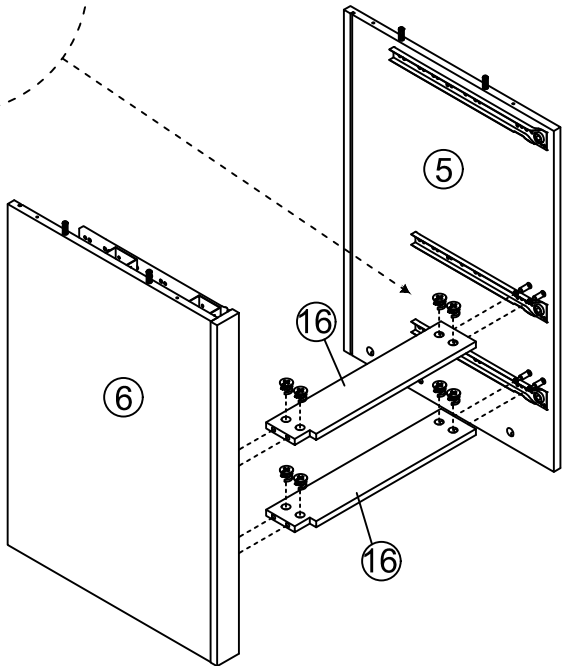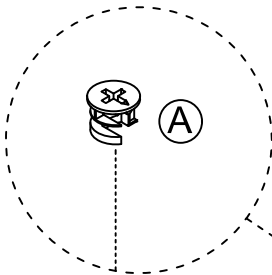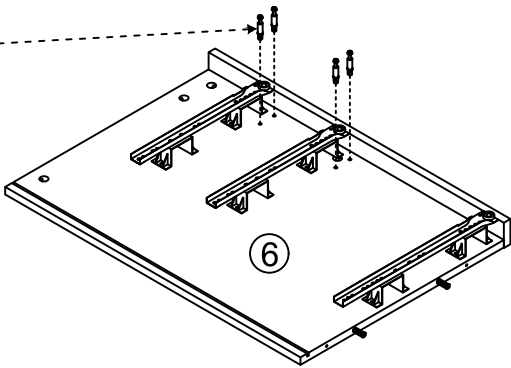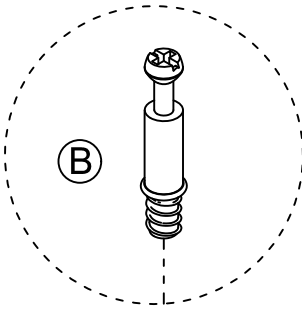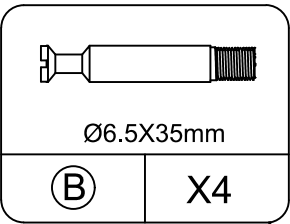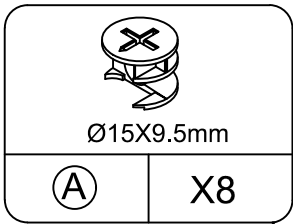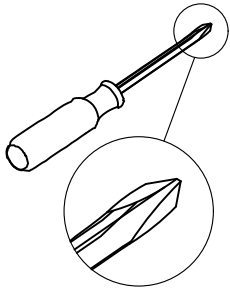





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

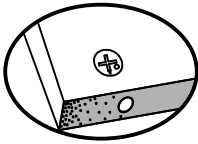





Proper orientation of CAM LOCK

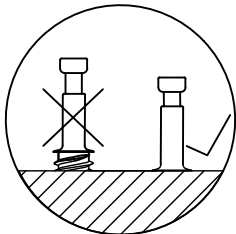






STEP16

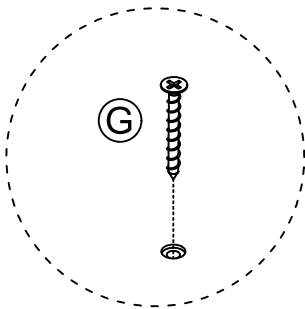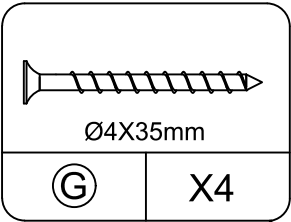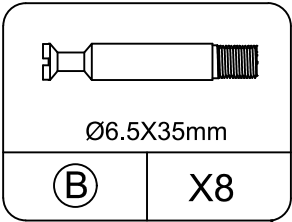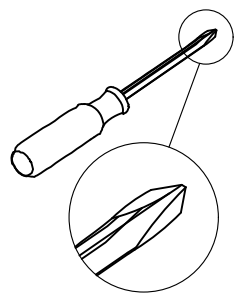






notch down

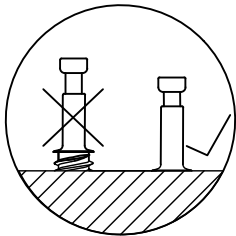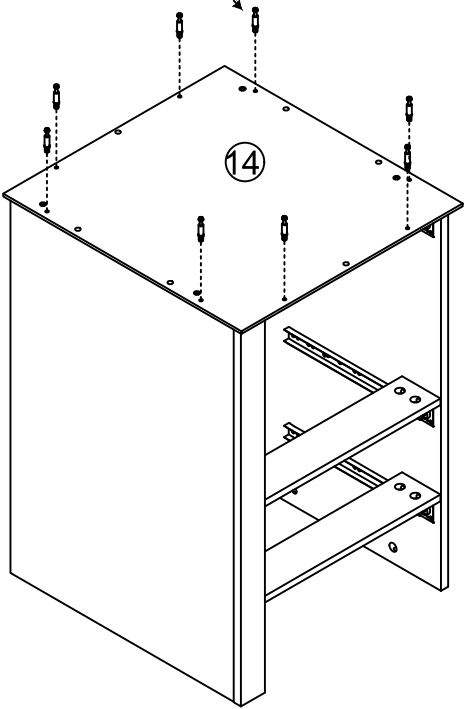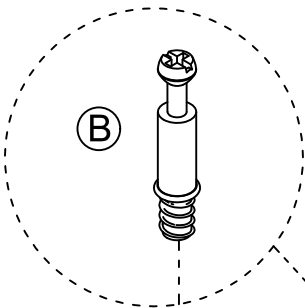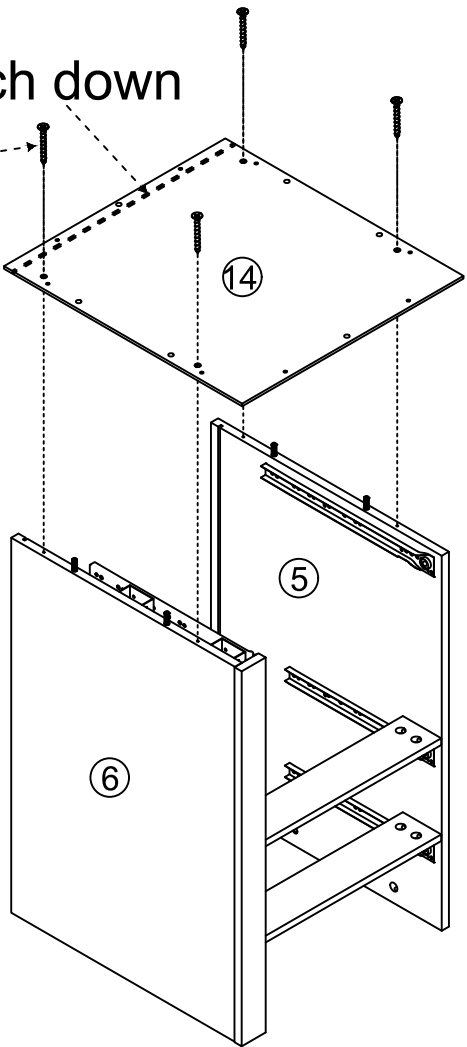






STEP17

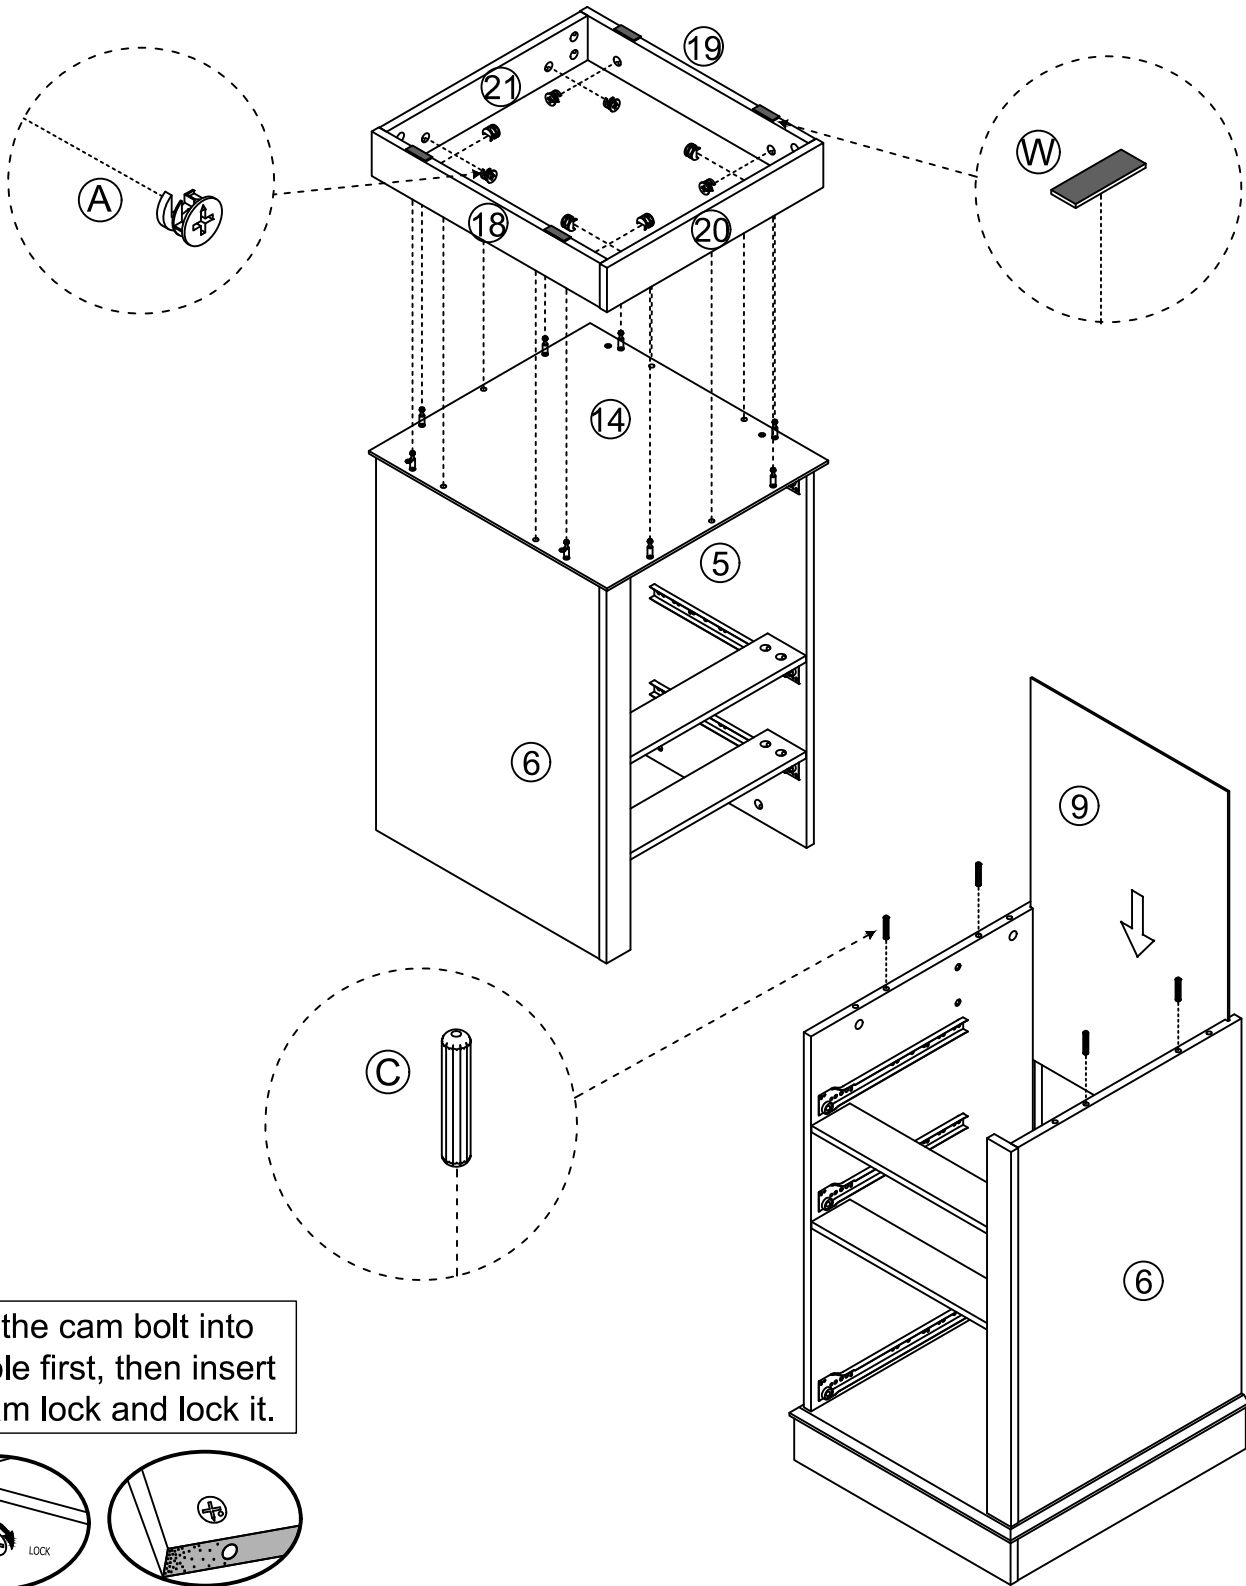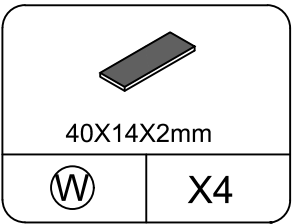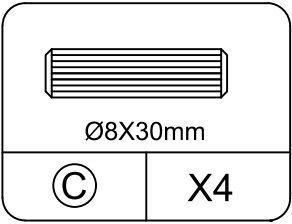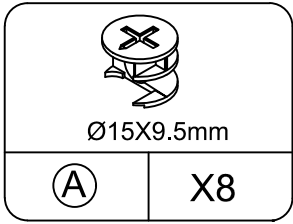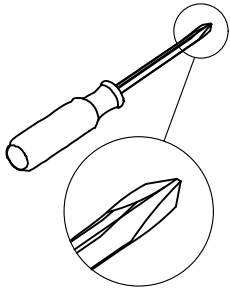


STEP18

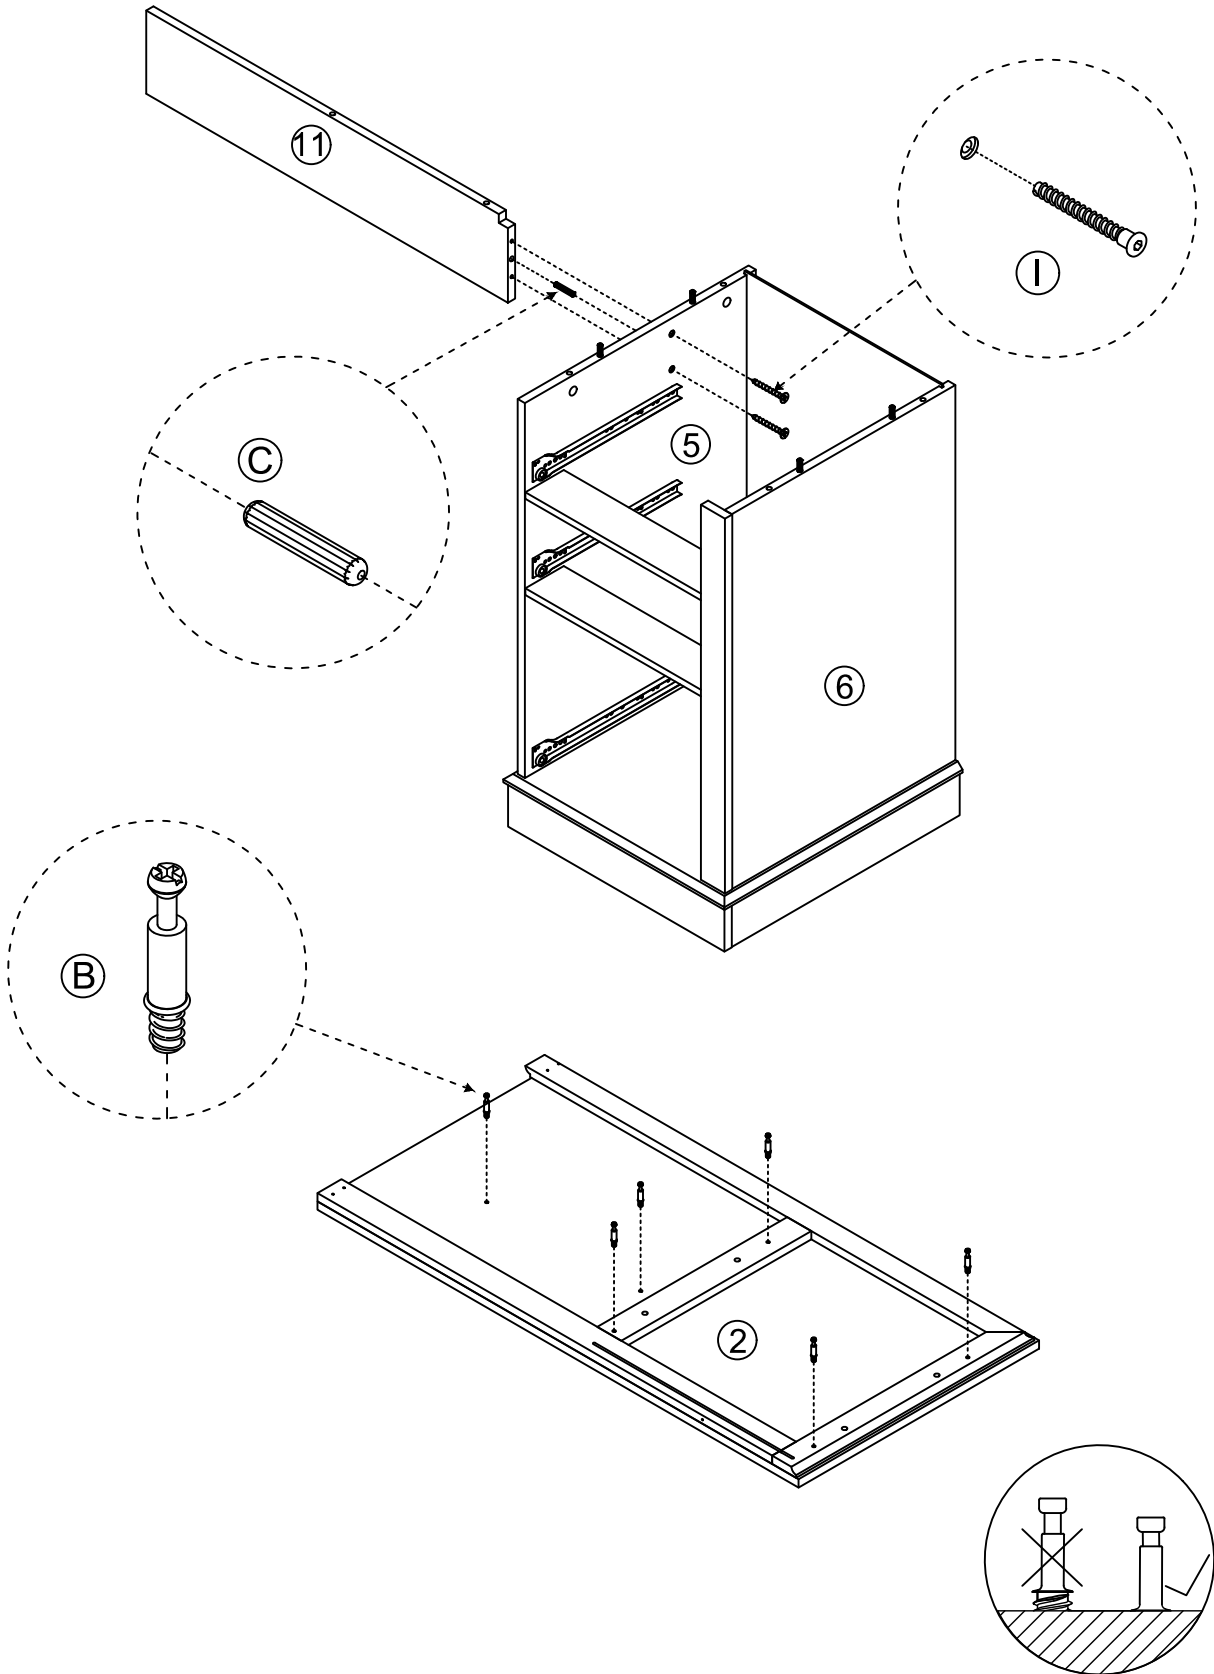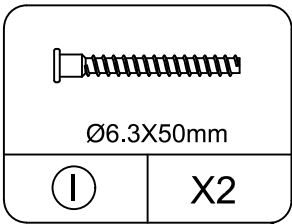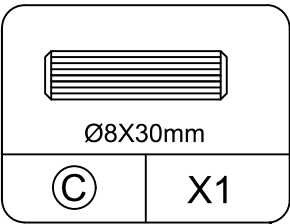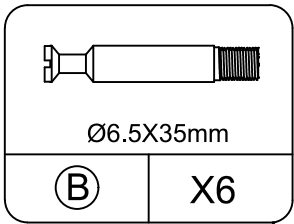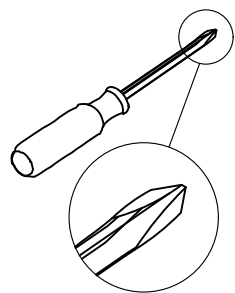

STEP19

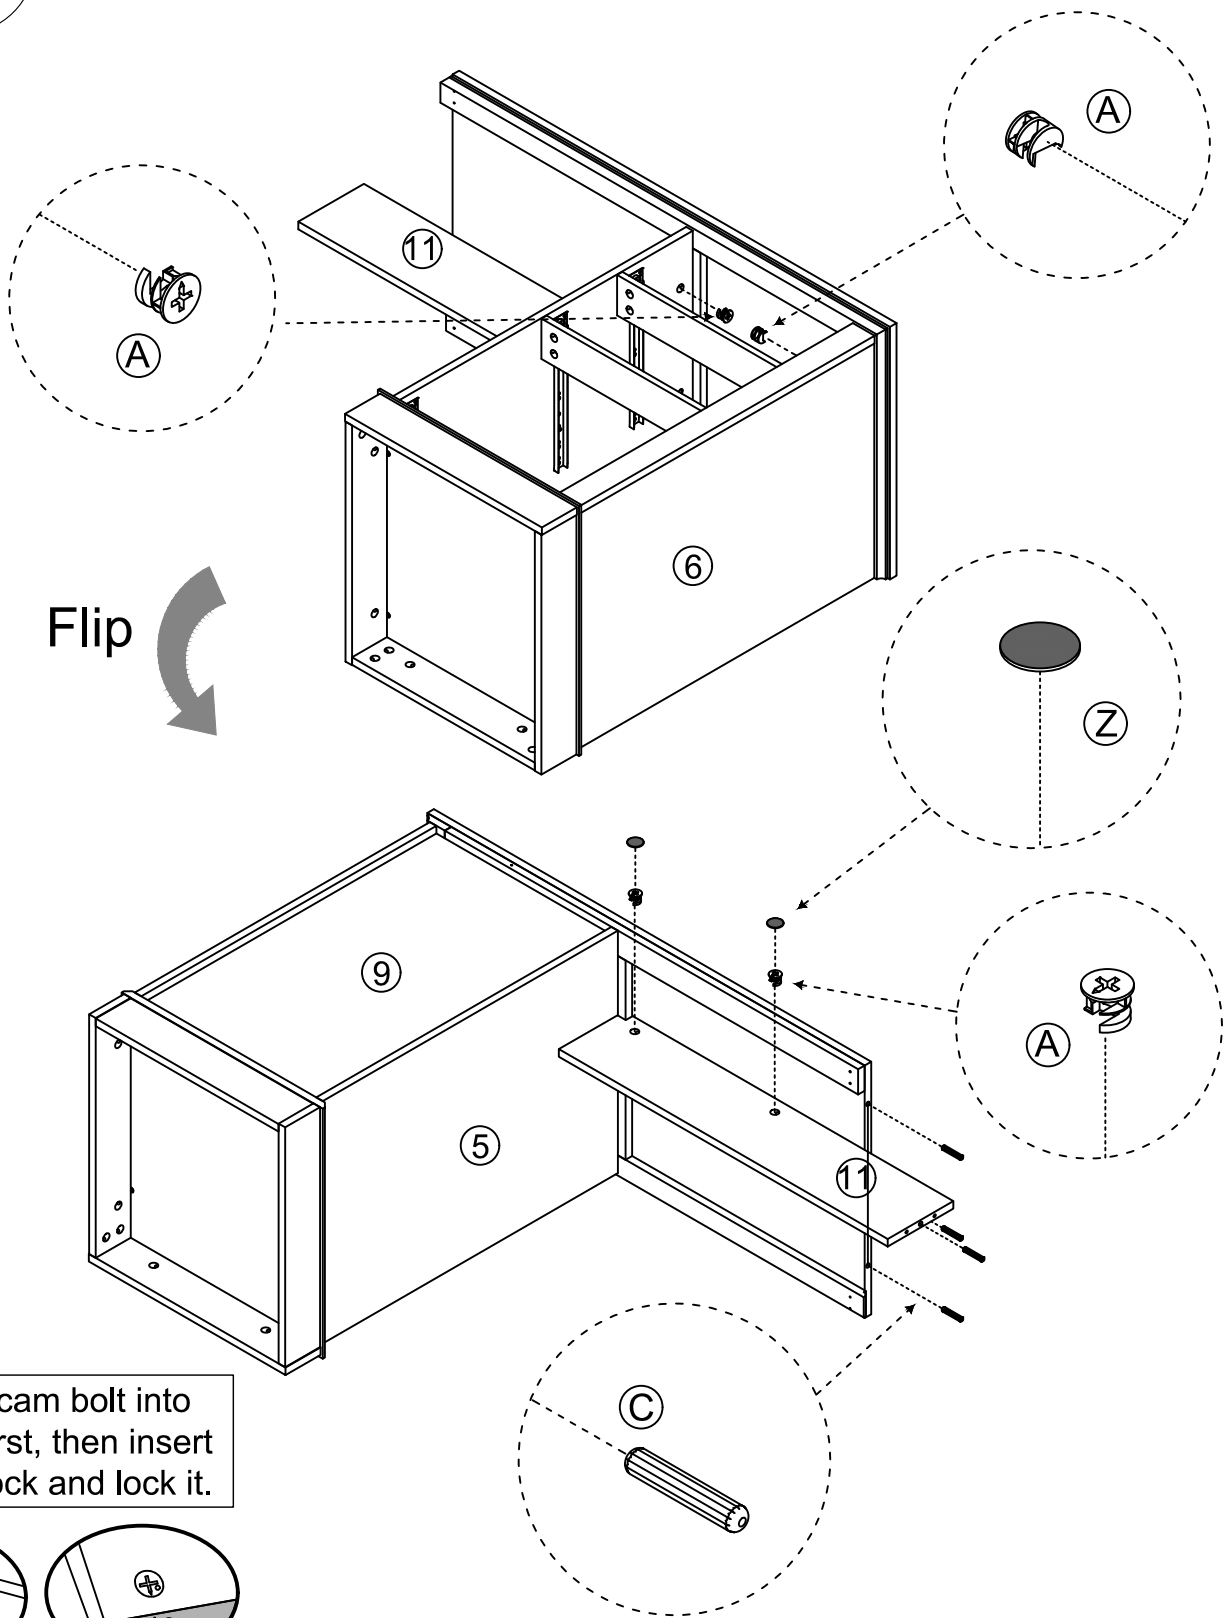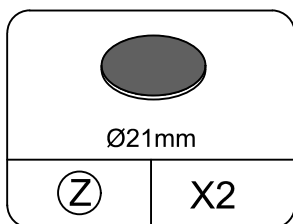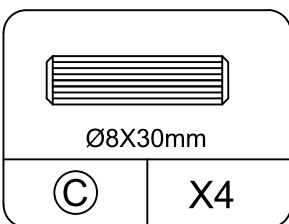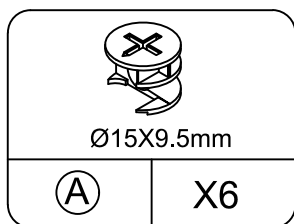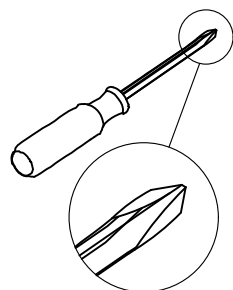


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

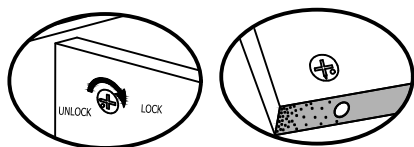





Proper orientation of CAM LOCK

STEP20



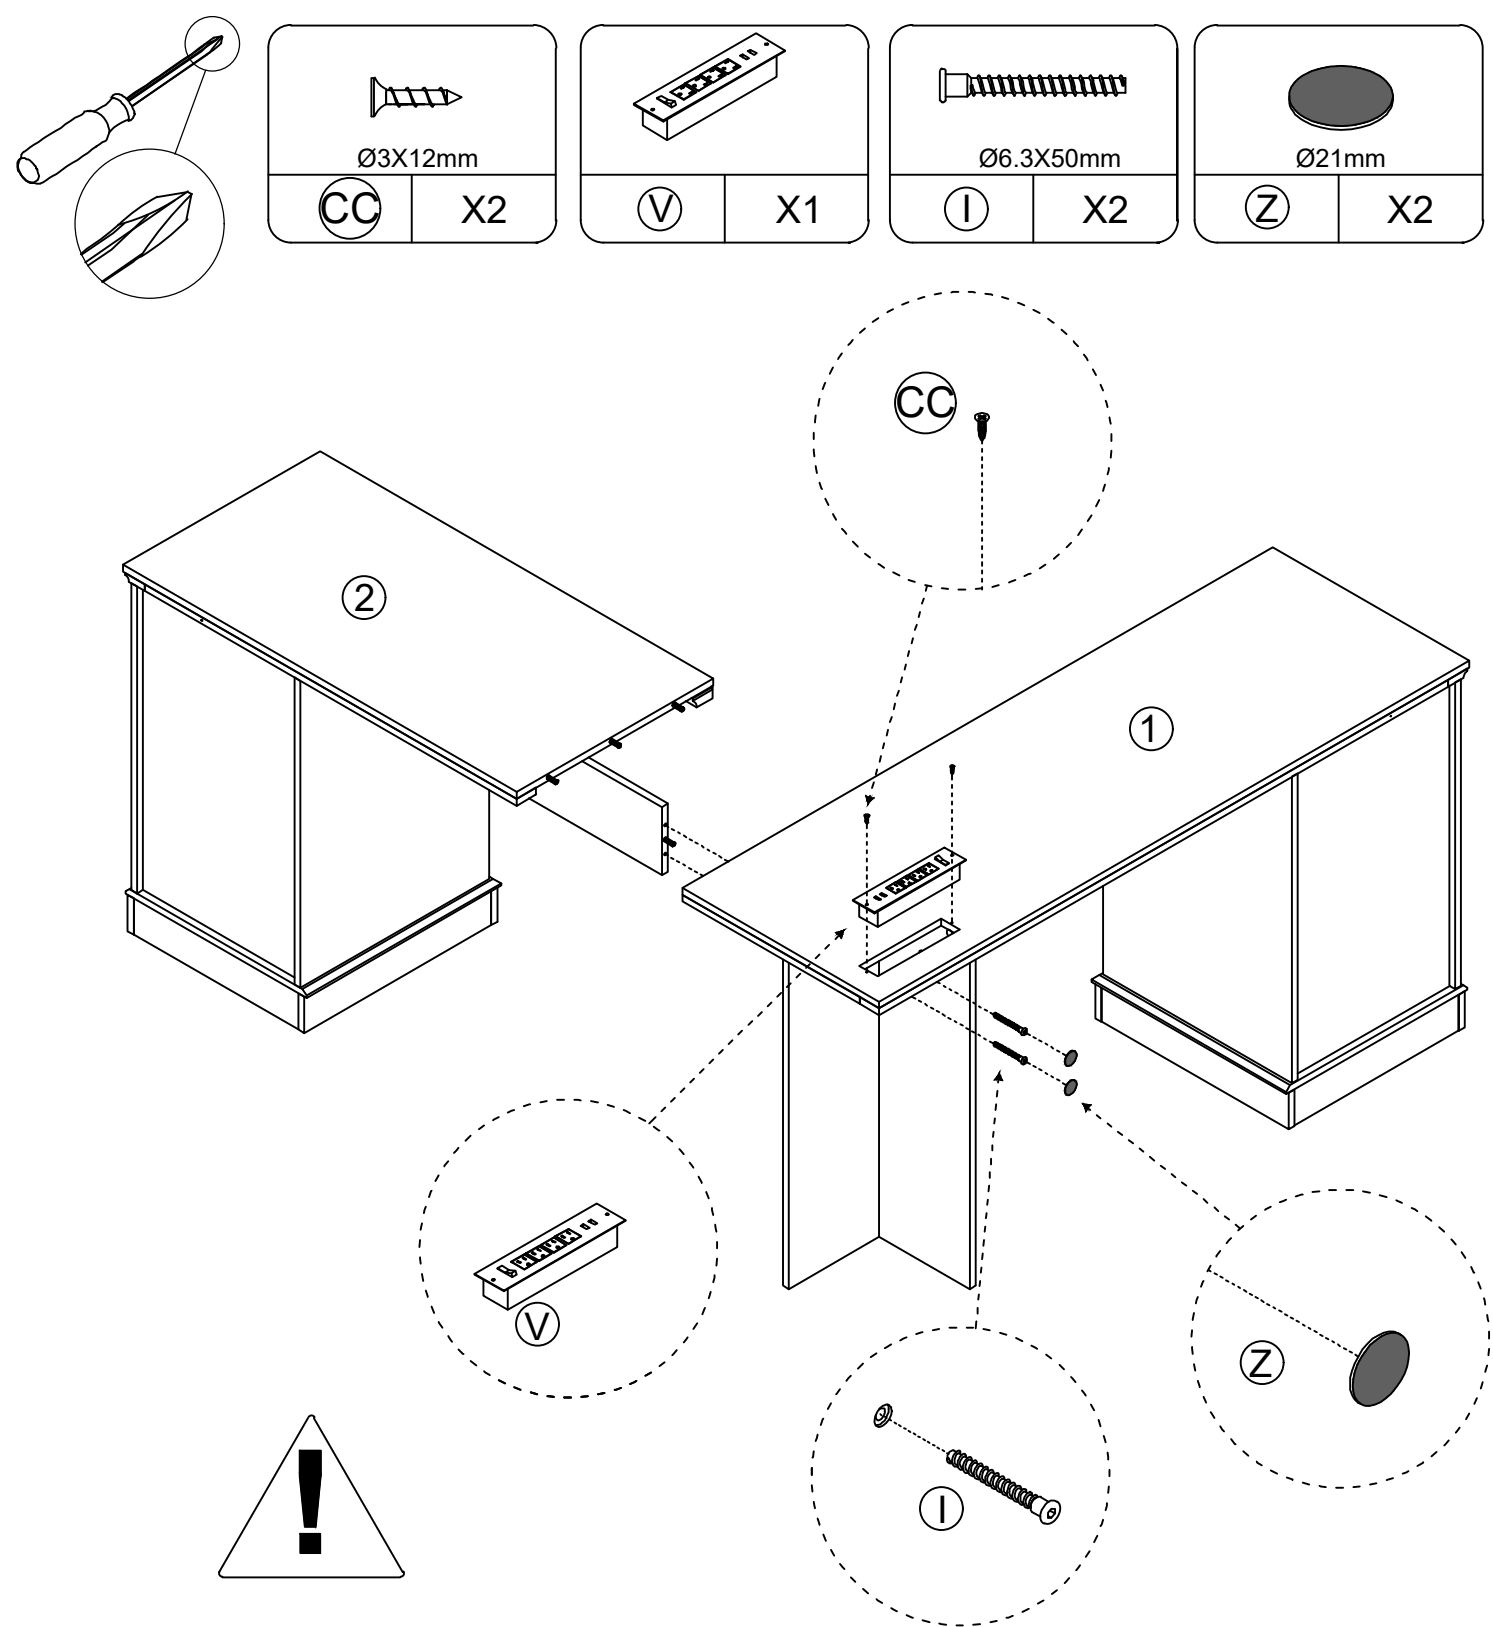


The power of using electrical appliances cannot exceed 1500W.

STEP21

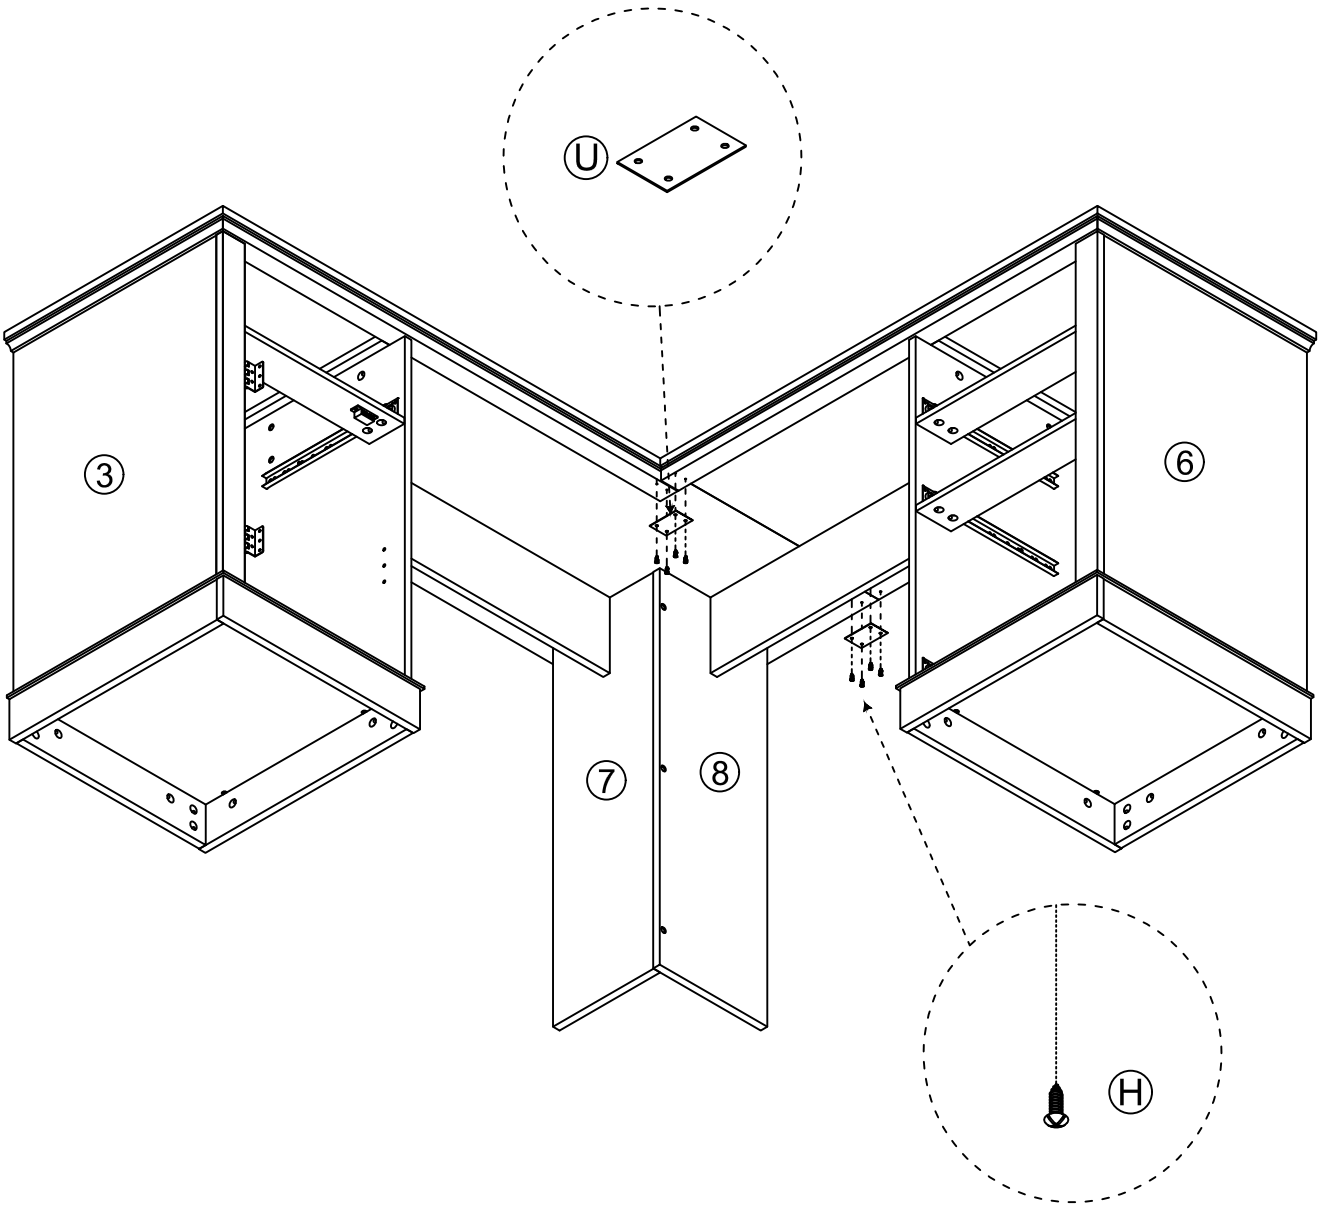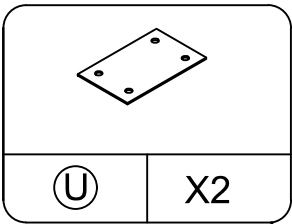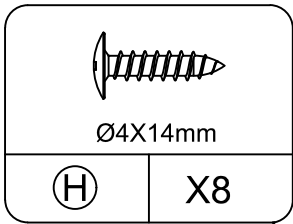
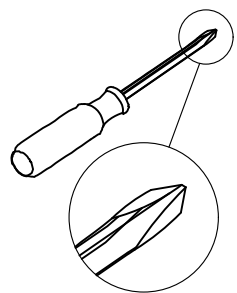


STEP22









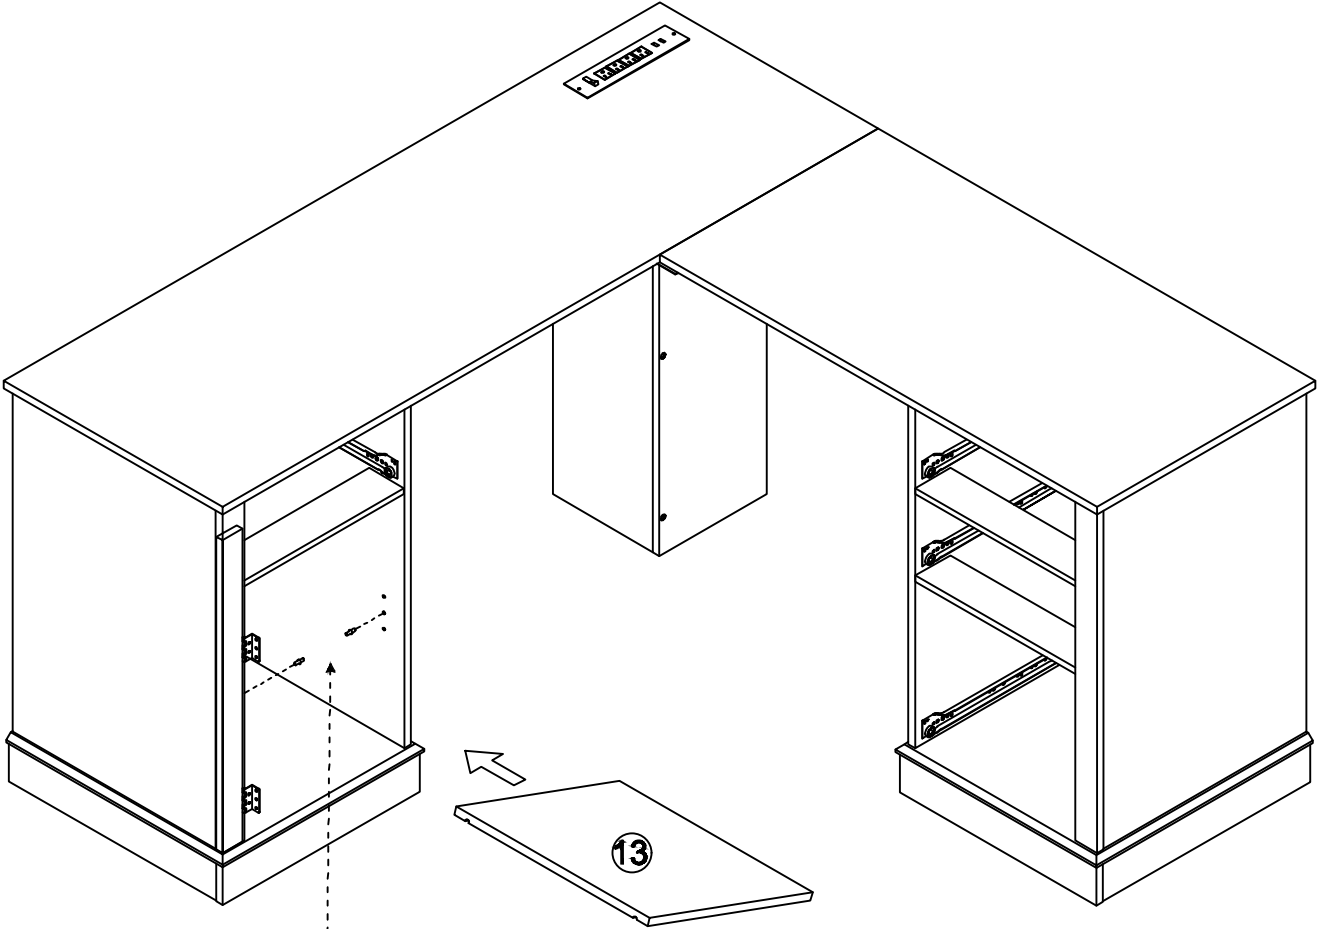
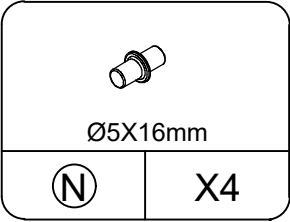
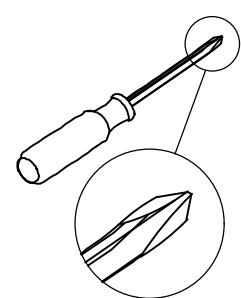


Step1
Select the desired height
and put it in


Step2
Aim the board gaps down

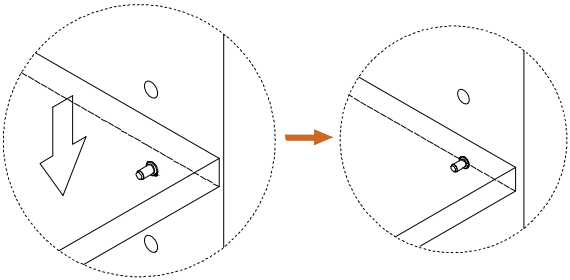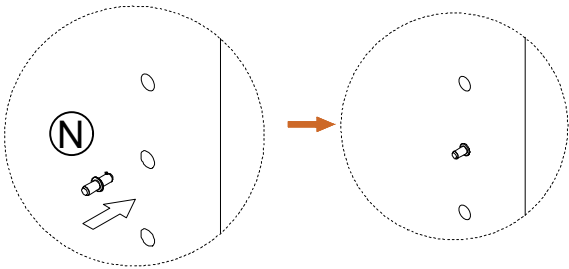

STEP23

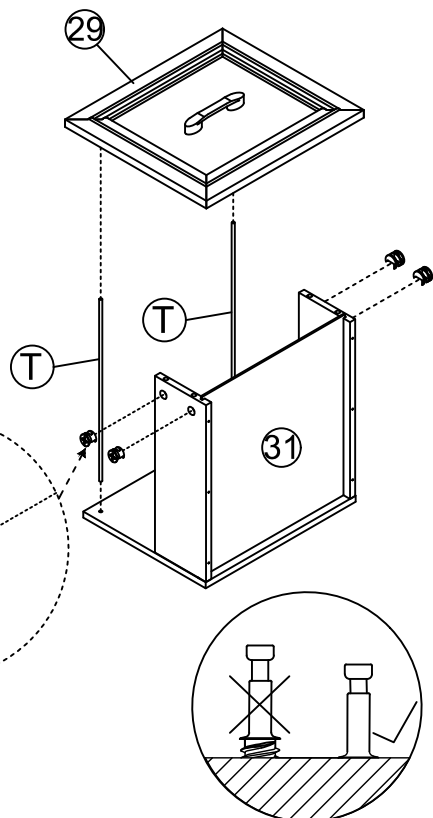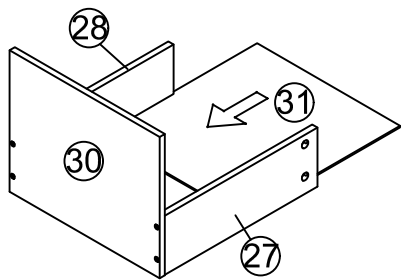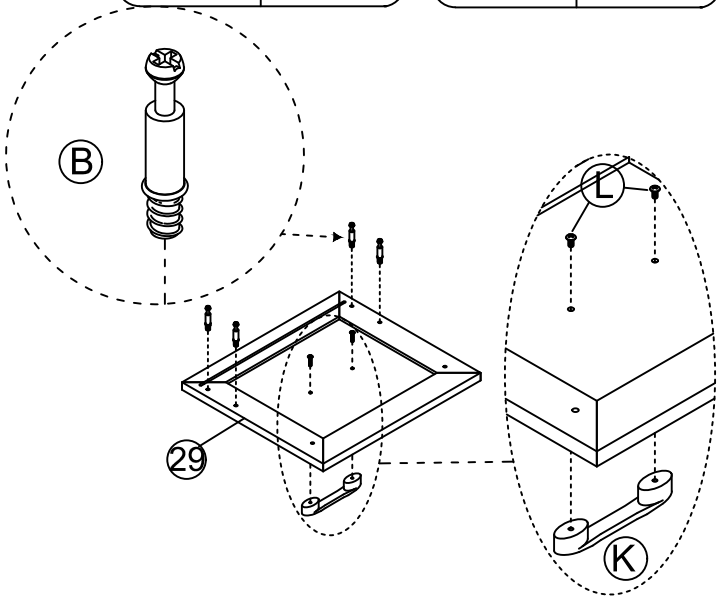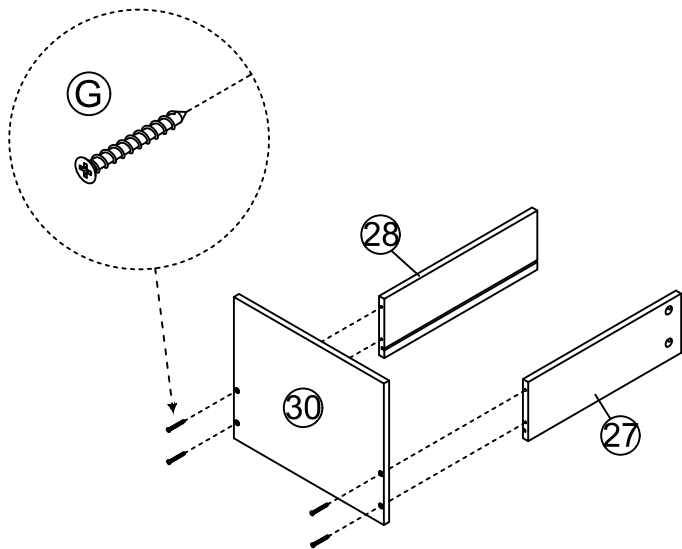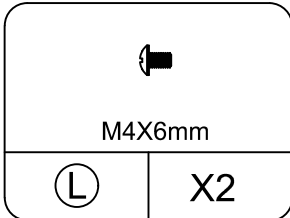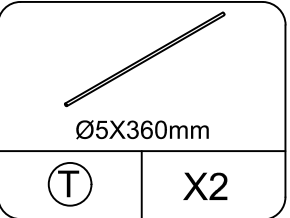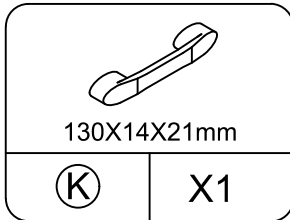
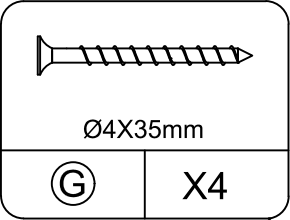
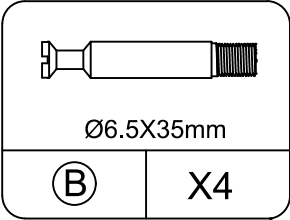
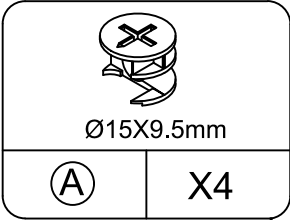
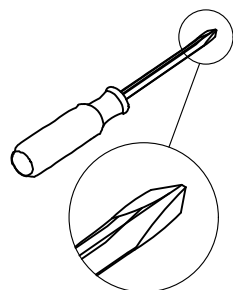


Insert the cam bolt into the hole first, then insert the cam lock and lock it.











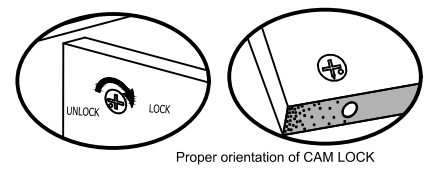


Proper orientation of CAM LOCK

STEP24

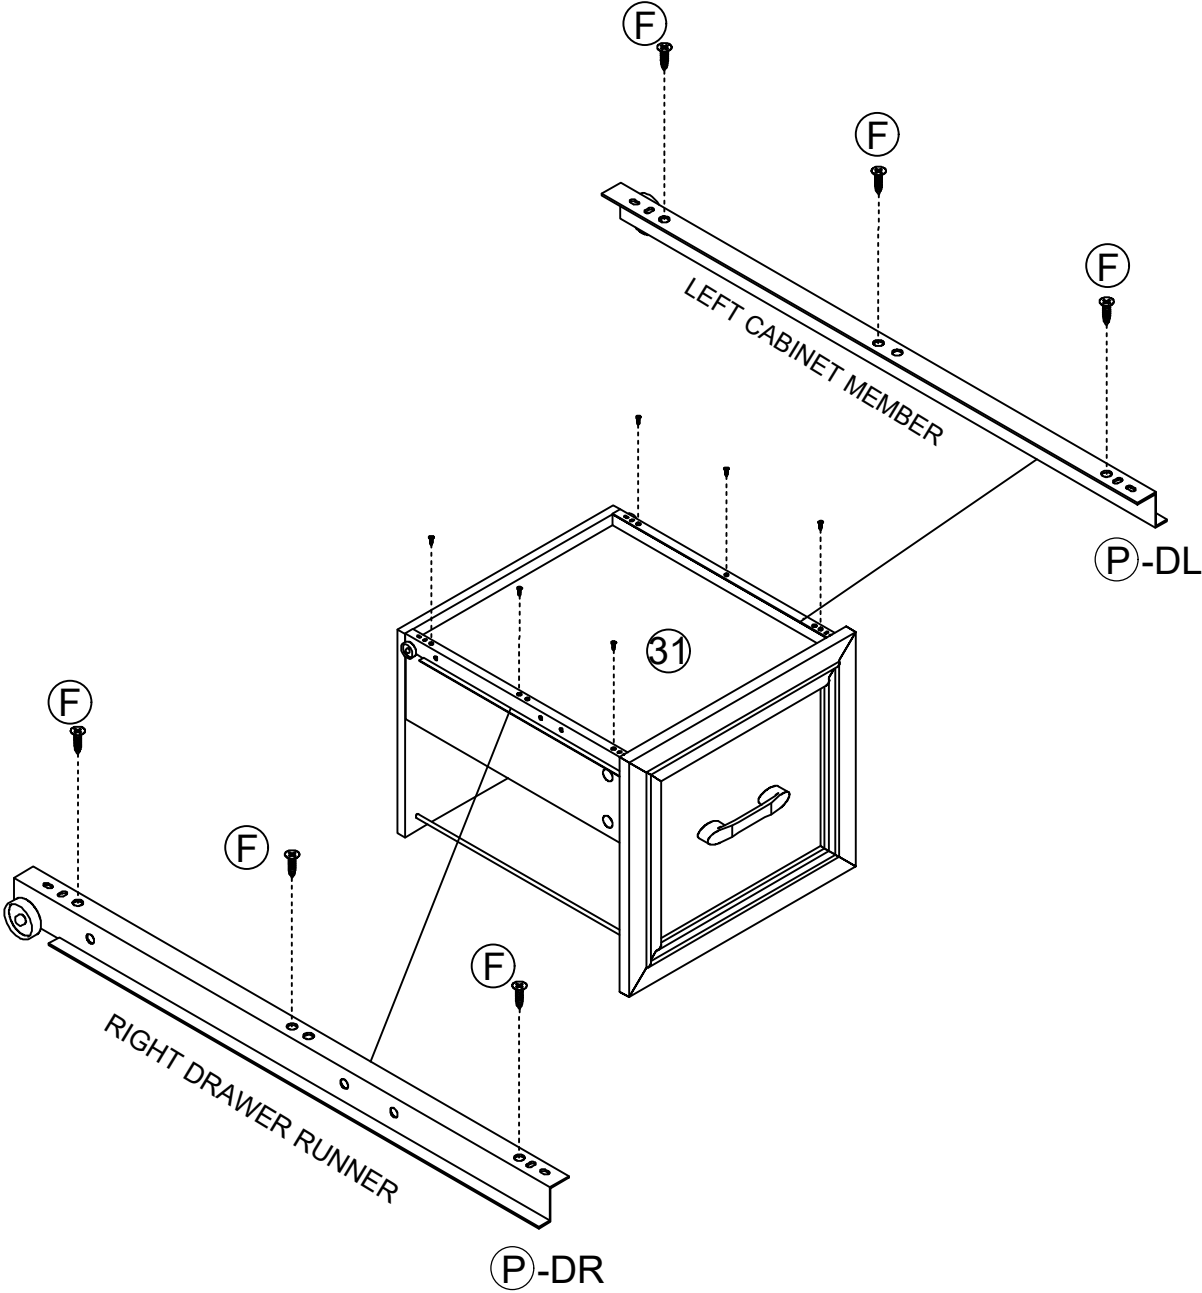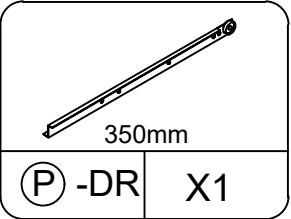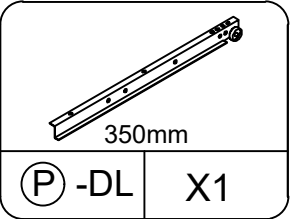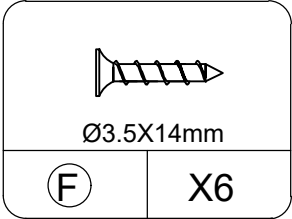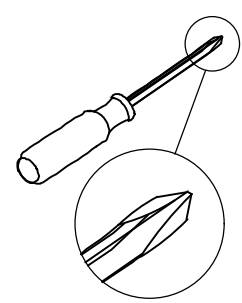



STEP25

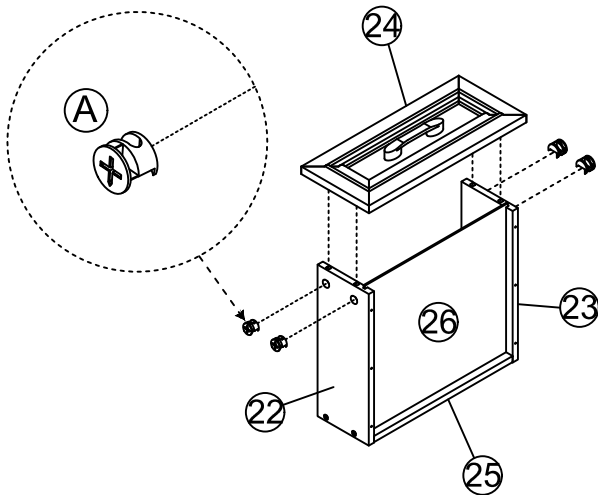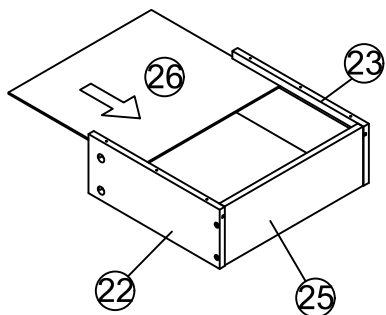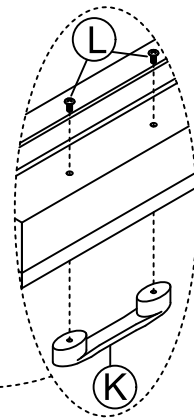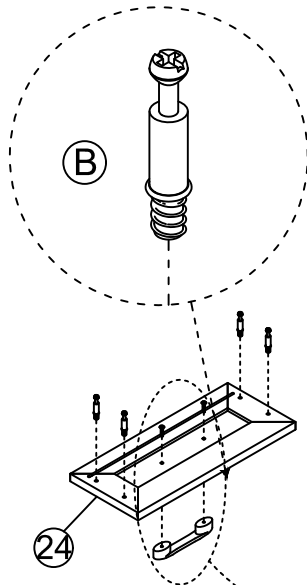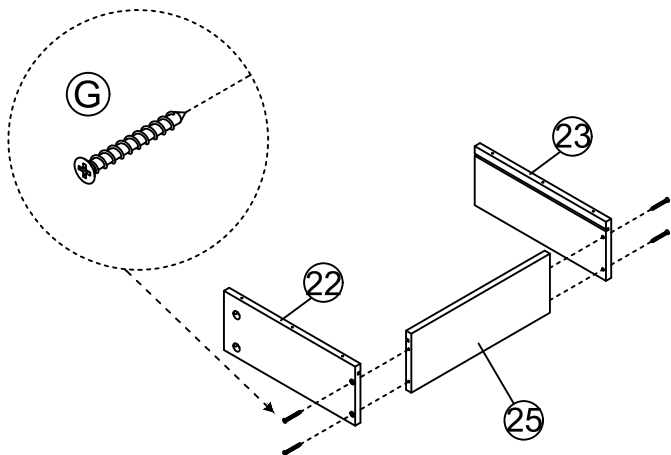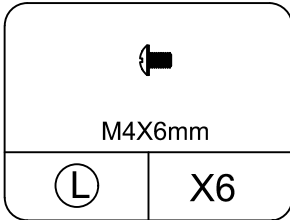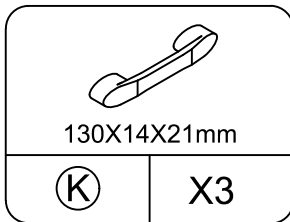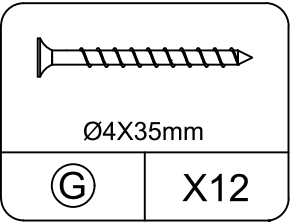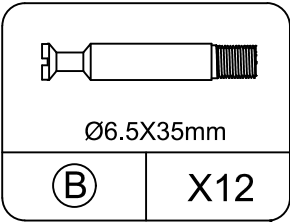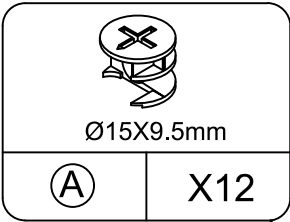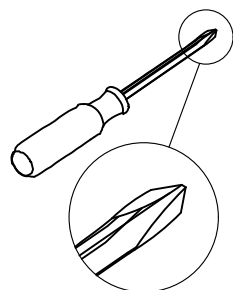






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

X3


X6

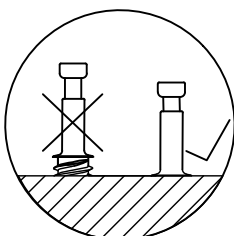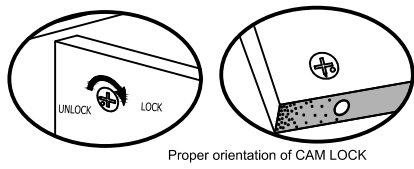


STEP26

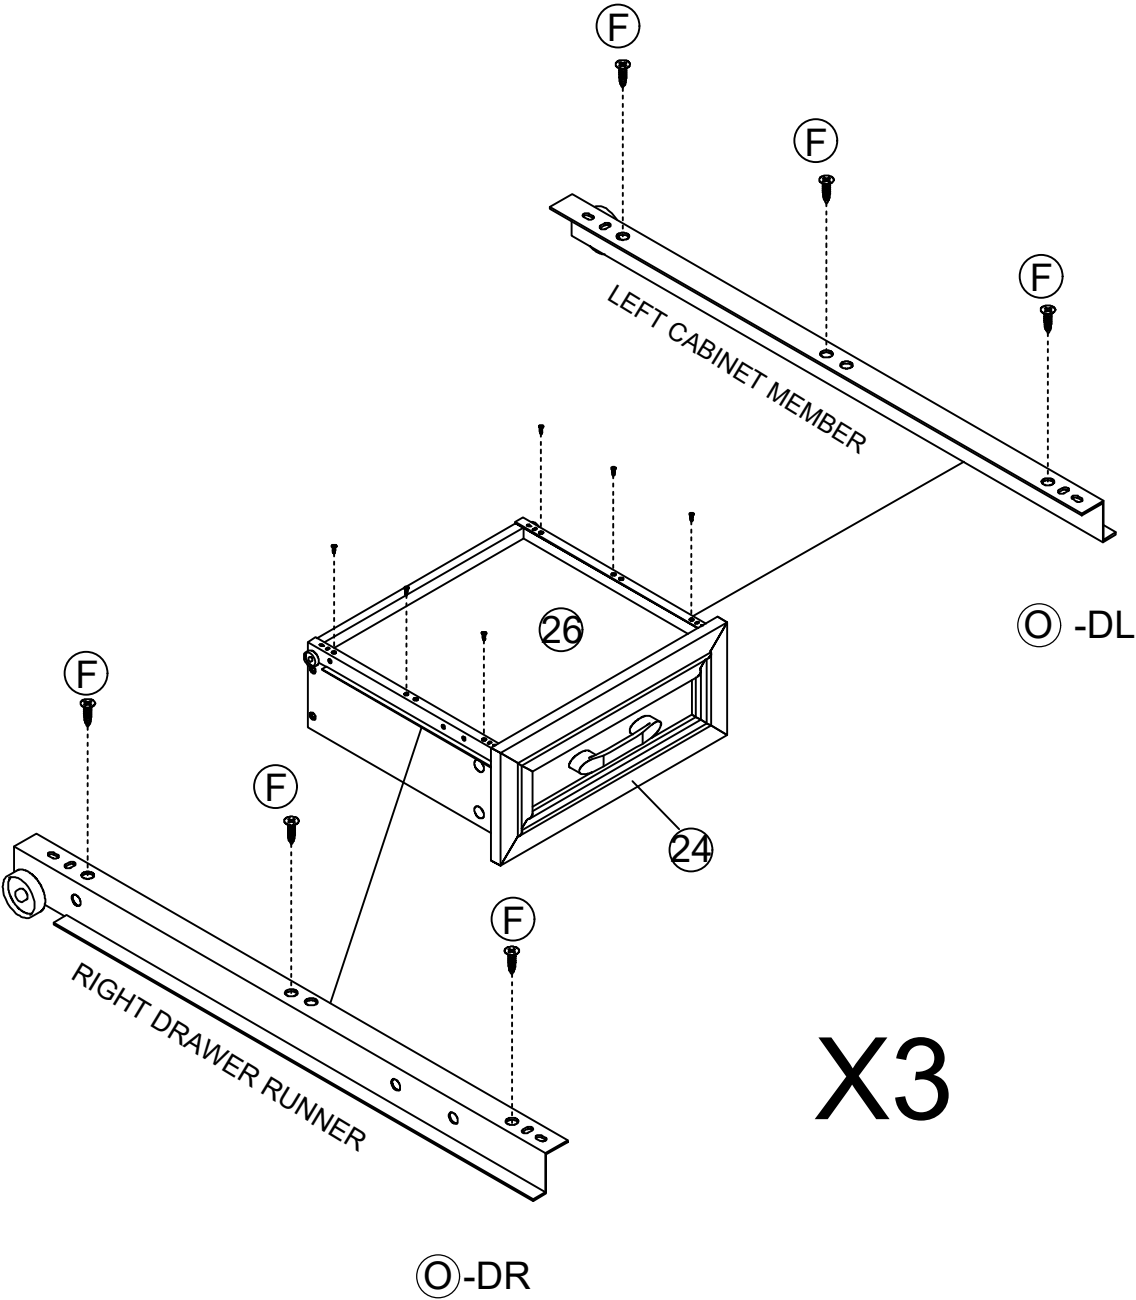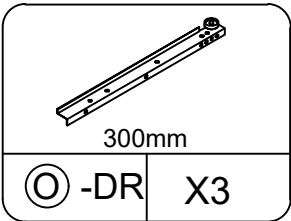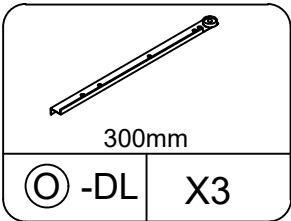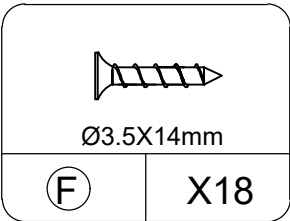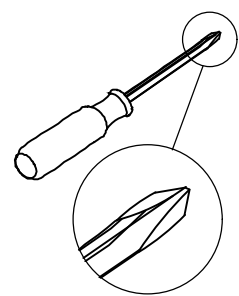

STEP27

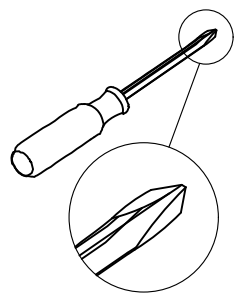


 Ø3X12mm	
Ⓔ	X2





 130X14X21mm	
Ⓚ	X1

 M4X18mm	
Ⓜ	X2

 45X12mm	
Ⓚ	X1




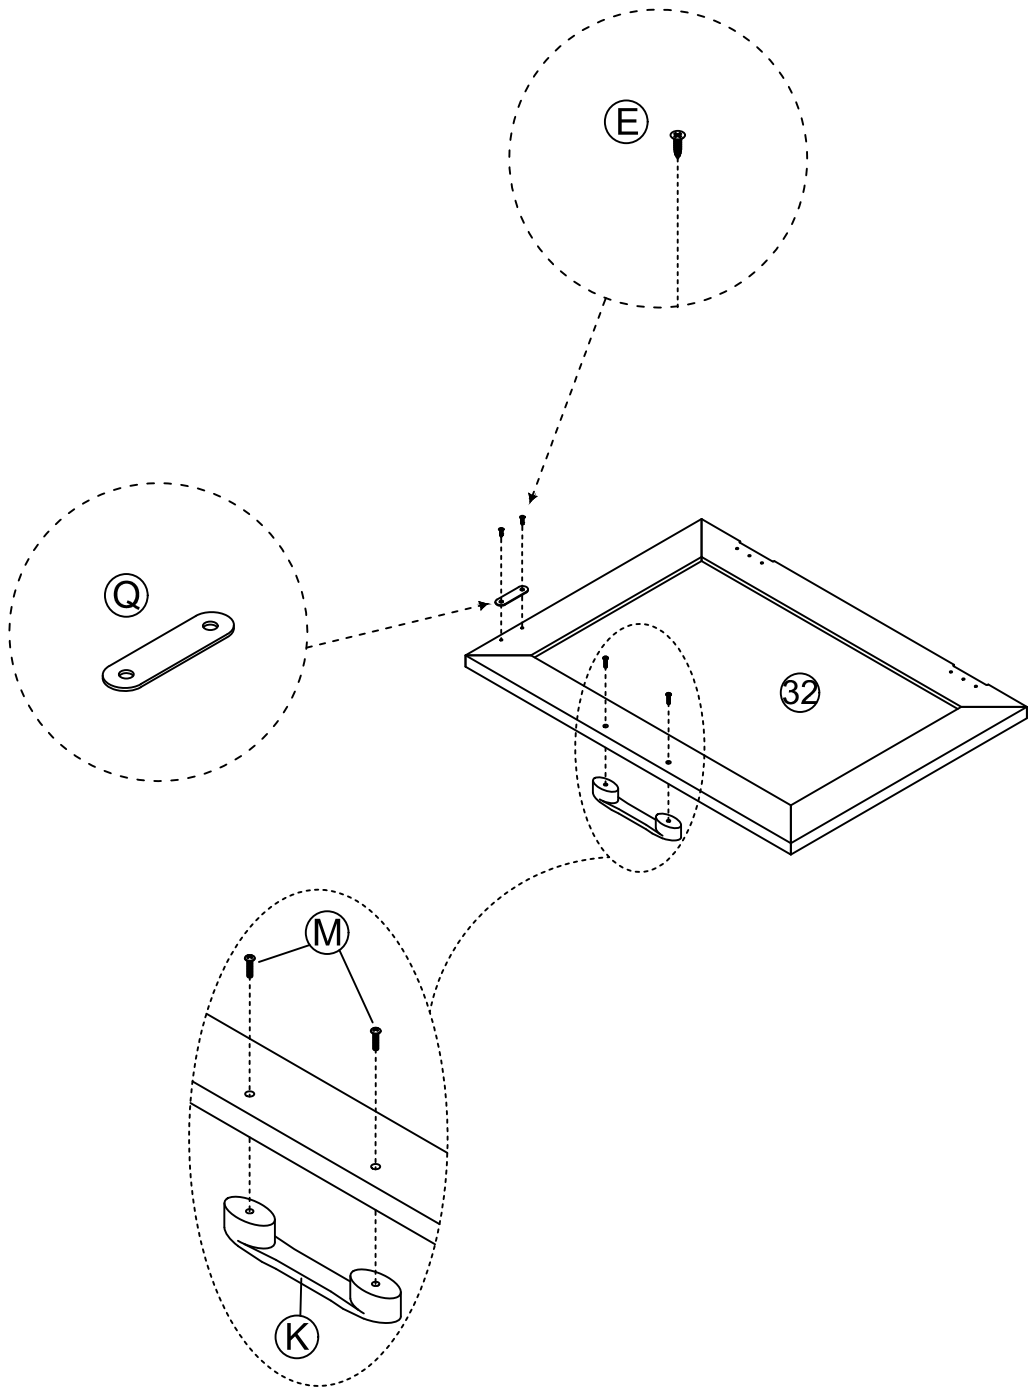


STEP28

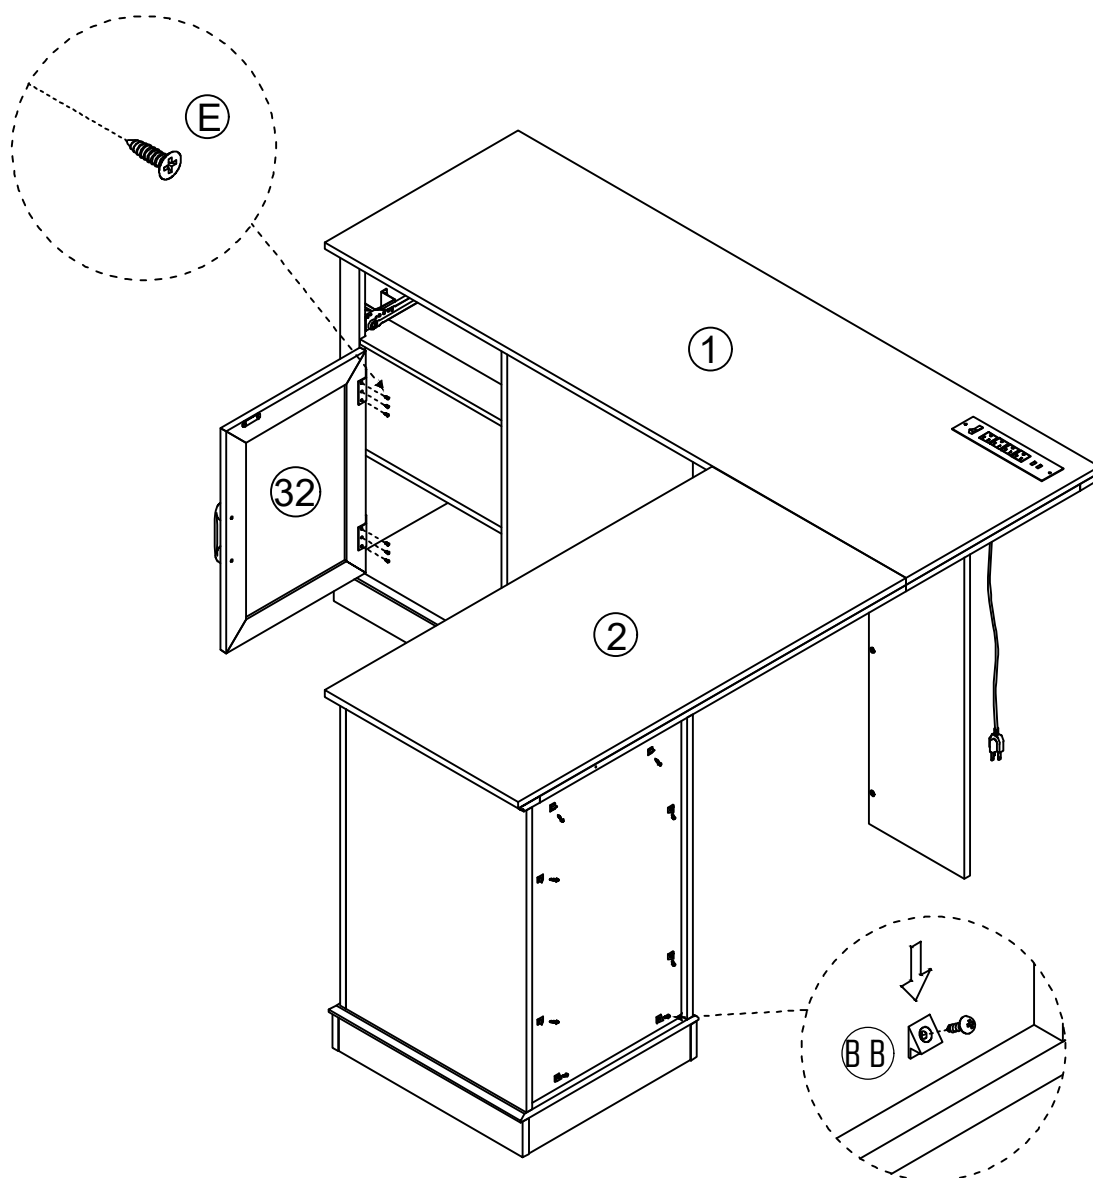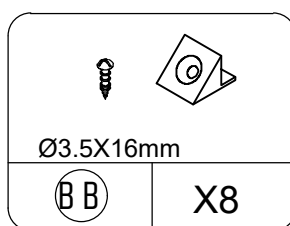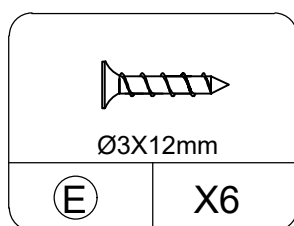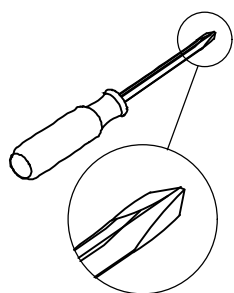


Insert the plastic buckle into back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP29

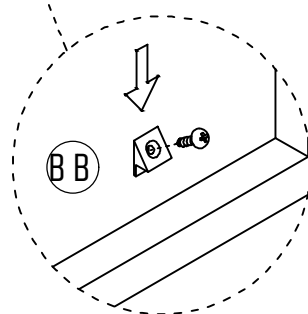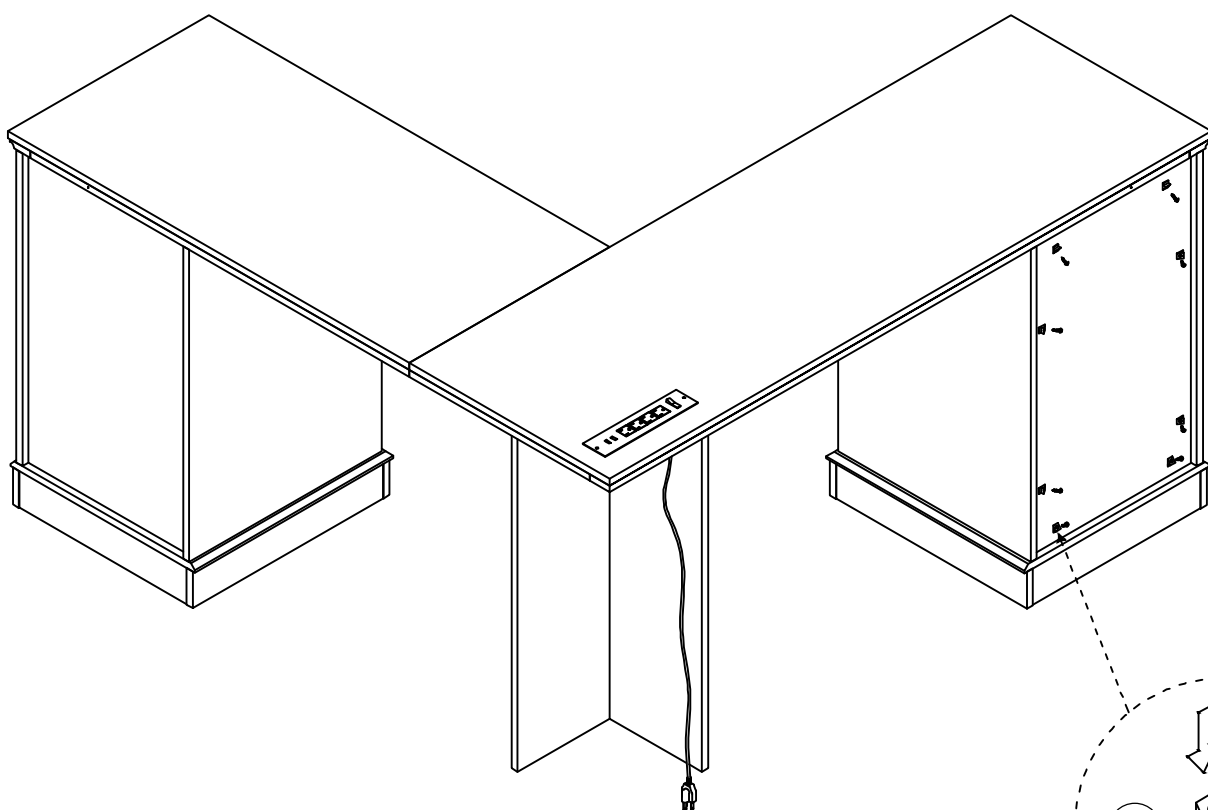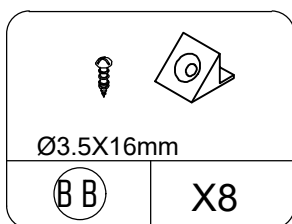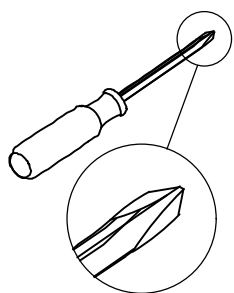


Insert the plastic buckle into back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP30

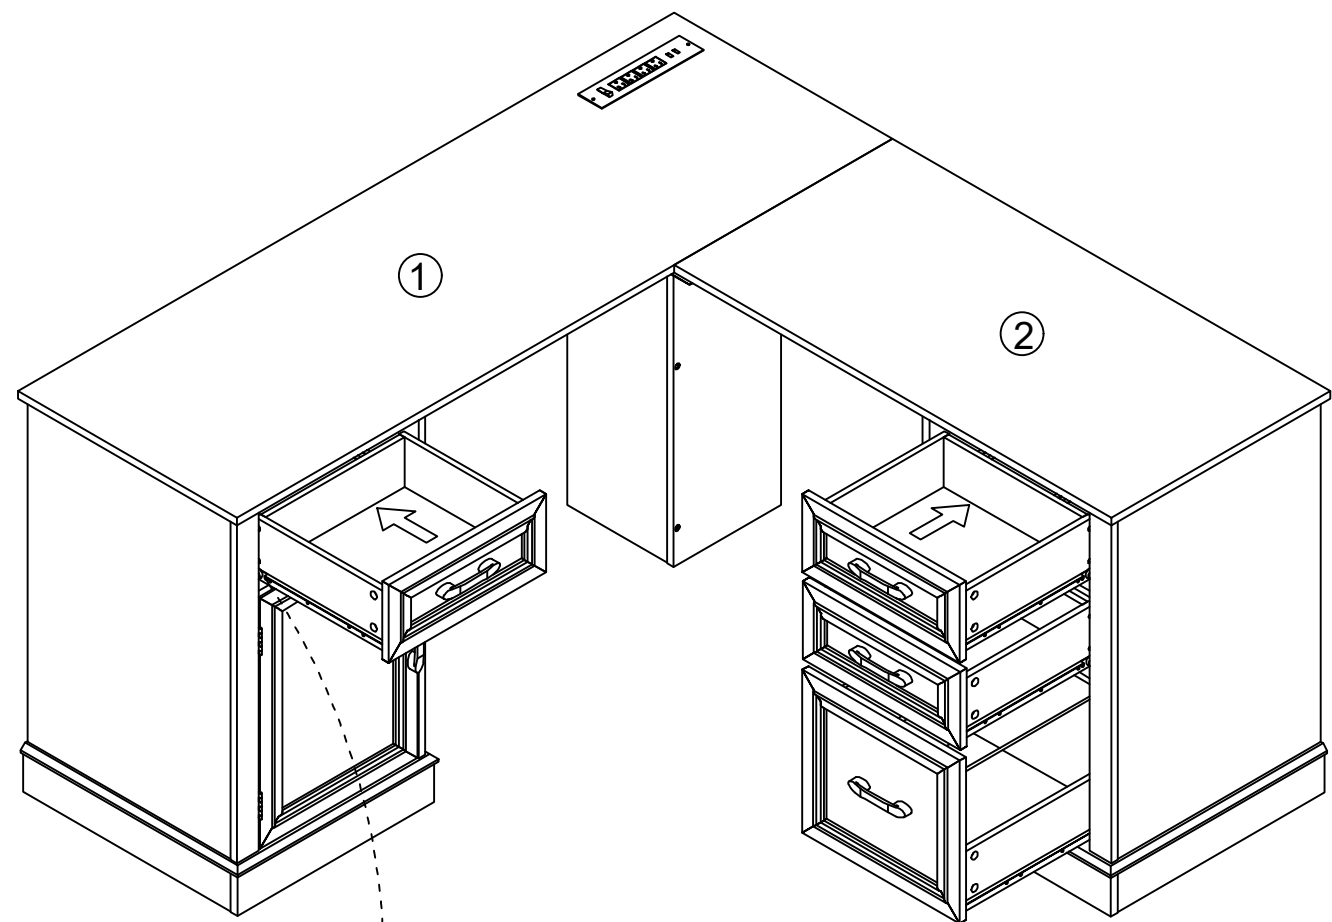

Cabinet Slide

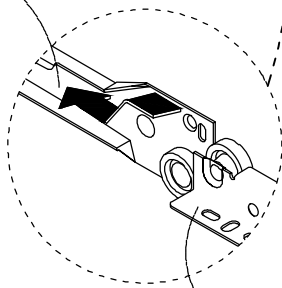

Drawer Slide