
DESK WITH METAL LEGS

Assembly Instructions – Please keep for future reference

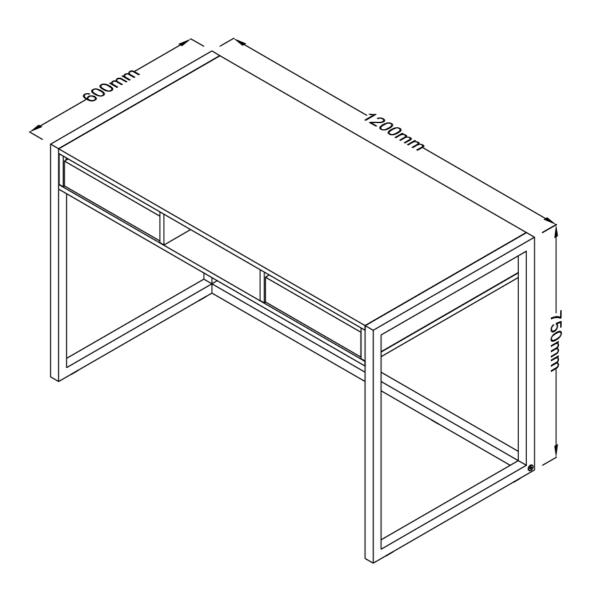

Dimensions	No. people	Assembly Time	SKU#
Width: 120cm Depth: 60cm Height: 75cm	Ť	45 mins (approx.)	DESTOROAK

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 4 and 5.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area. small parts could choke if swallowed
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit.

Only use hand screwdrivers.

Dispose of all packaging carefully and responsibly.


Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT WHEN FITTING CAMLOCK **ENSURE STARTING POSITION IS CORRECT** BEFORE YOU INSERT CONNECTING QUICKFIT TURN CLOCKWISE UNTIL SECURE WRONG Quickfit head needs to be in centre QUICKFIT Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below) Shoulder Panel Panel

If you are unhappy with the product and wish to return it, please follow the retailer's returns procedure.

Exploded View

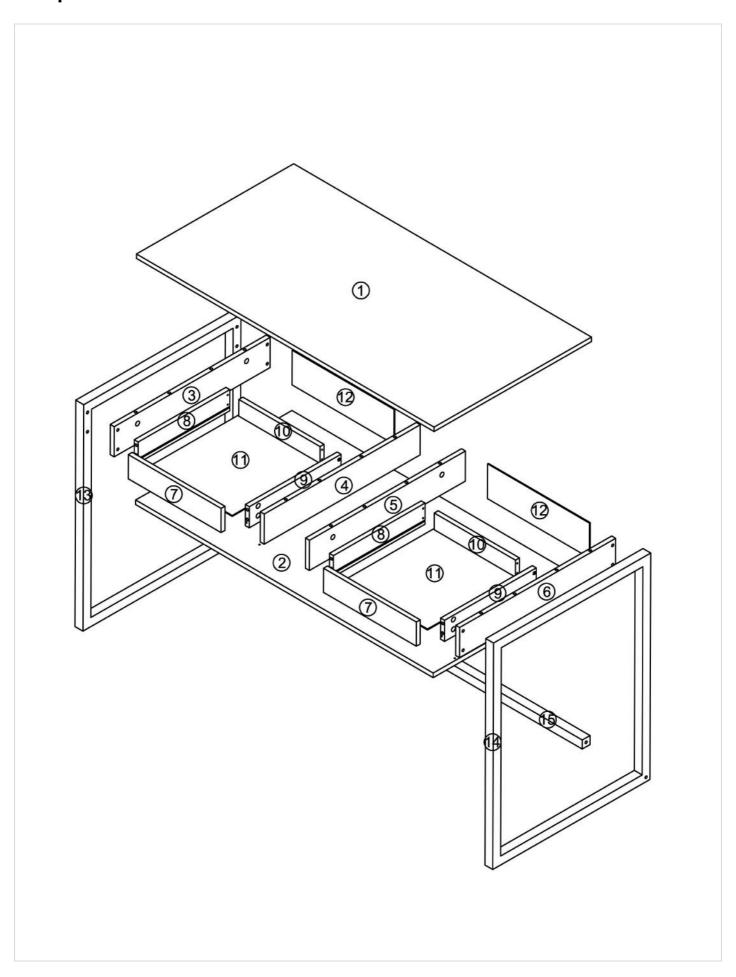

Components - Panels

Please check that you have all the components listed below before constructing your item.

Part No	Description	Qty	Size (mm)	Thickness (mm)
1	TOP PANEL	1	1140X600	15
2	BOTTOM PANEL	1	1140X596	15
3	LEFT SIDE PANEL	1	595X100	15
4	LEFT-MIDDLE PANEL	1	595X100	15
5	RIGHT-MIDDLE PANEL	1	595X100	15
6	RIGHT SIDE PANEL	1	595X100	15
7	DRAWER FRONT	2	355X80	15
8	DRAWER LEFT SIDE PANEL	2	350X70	15
9	DRAWER RIGHT SIDE PANEL	2	350X70	15
10	DRAWER BACK SIDE PANEL	2	311X70	15
11	DRAWER BOTTOM PANEL	2	345X321	2.7
12	BACK PANEL	2	390X115	2.7

Important - Please read these instructions fully before starting assembly

Components - Fixings

Please check that you have all the components listed below before constructing your item.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A) X16	ğ	(B) X16		(C) X16		(D) X2	11 12	
	40 mm		15 mm		8*40 mm		350 mm	
(E) X16	Appropriate	(F) X16	2	(G) X6		(H) X10		
	3.5*35 mm		3.5*14 mm		25*25mm		J	
(I) X9	6*25mm	(J) X2	8*50 mm	(K) X1	9 9 3.5*14 mm 3.5			
(L) X4								

Tools Required



Ruler – Use this to measure your screws (mm)

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Important - Please read these instructions fully before starting assembly

Assembly Instructions

