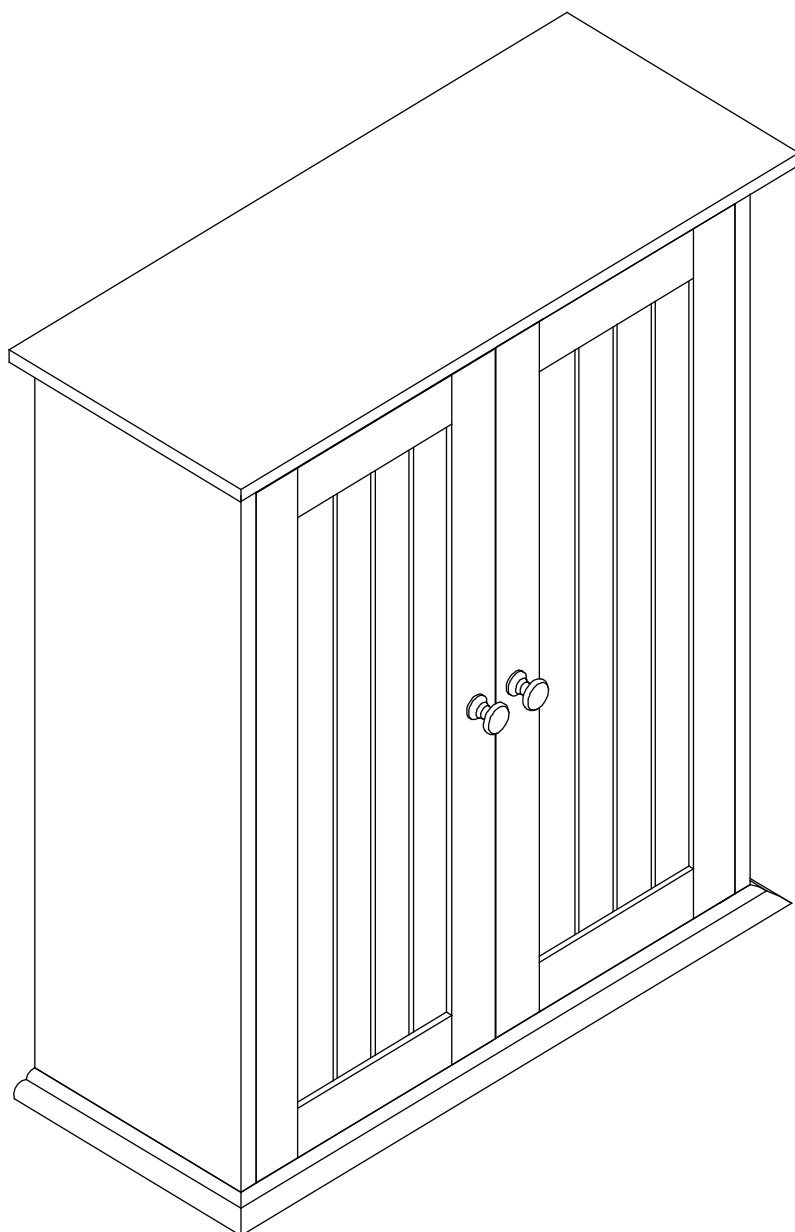
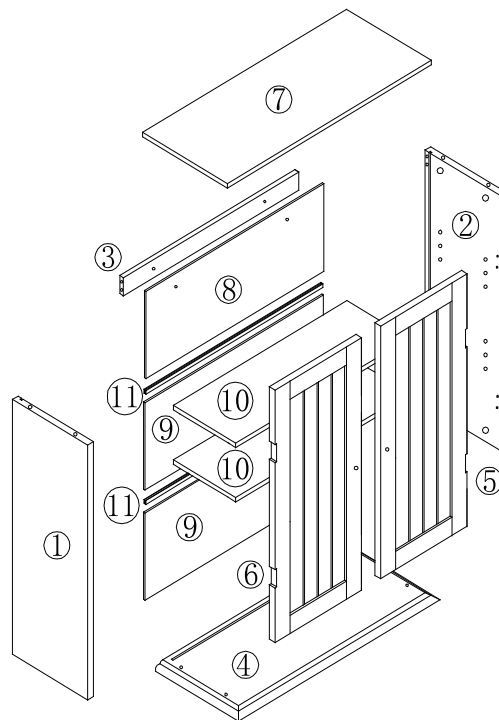
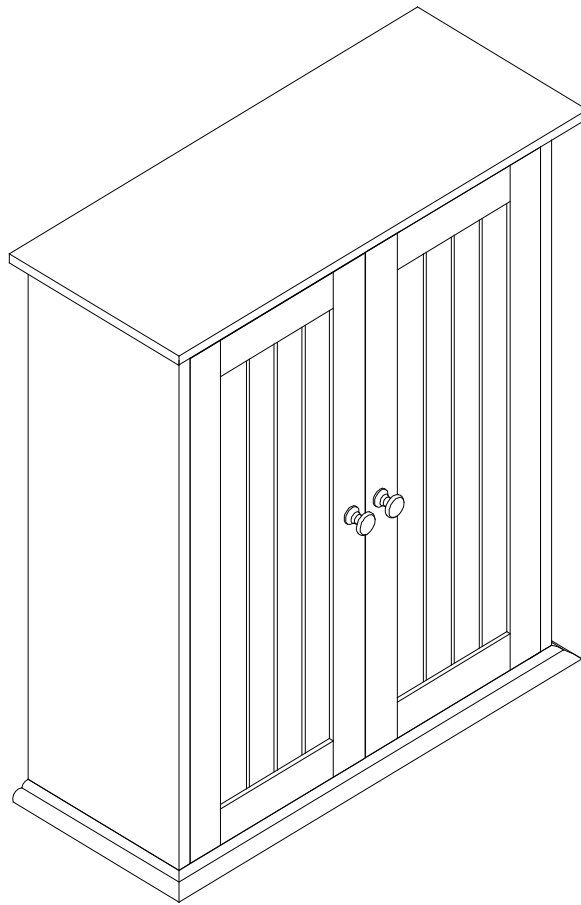


2-DOOR WALL UNIT



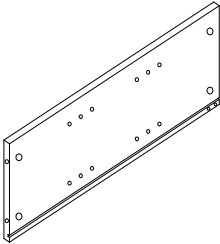
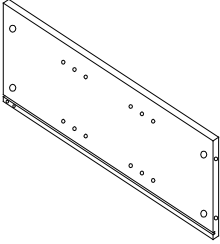
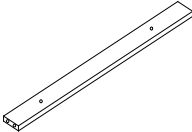
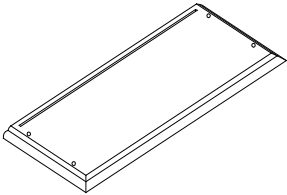
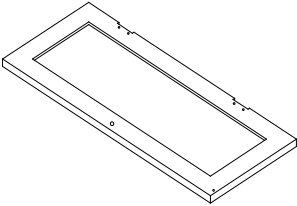
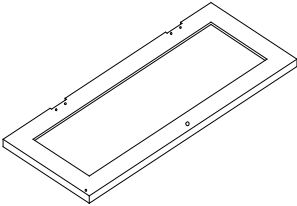
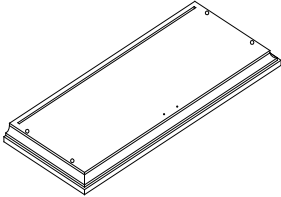
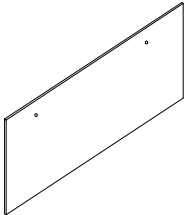
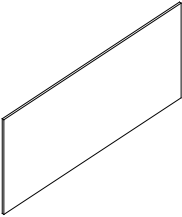
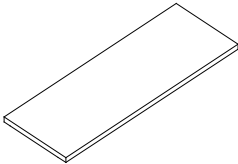
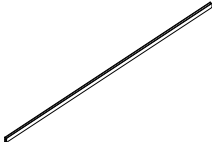




Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.




Special Note: We recommend the use of a hand held screwdriver to avoid the stripping of screw heads.

PART LIST


1  Left Side Panel1 pc	2  Right Side Panel1 pc	3  Back Bar1 pc	4  Bottom Panel1 pc
5  Right Door1 pc	6  Left Door1 pc	7  Top Panel1 pc	8  Back Panel1 pc
9  Back Panel2 pcs	10  Shelf Panel2 pcs	11  Connected Strip2 pcs	A  Cam Lock8 pcs
B  Cam Bolt8 pcs	C  Wooden Dowel4 pcs	D  Screw18 pcs	E  Hinge4 pcs
F  Magnet1 pc	G  Screw2 pcs	H  Shelf Supporter8 pcs	I  Anchor2 pcs
J  Screw2 pcs	K  Knob2 pcs	L  Bolt2 pcs	M  Magnet Strip2 pcs
N  4 pcs	O  Screw4 pcs		

B	
Cam Bolt	8 pcs
D	
Screw	10 pcs
E	
Hinge	4 pcs
F	
Magnet	1 pc
G	
Screw	2 pcs
K	
Knob	2 pcs
L	
Bolt	2 pcs
M	
Magnet Strip	2 pcs
C	
Wooden Dowel	4 pcs

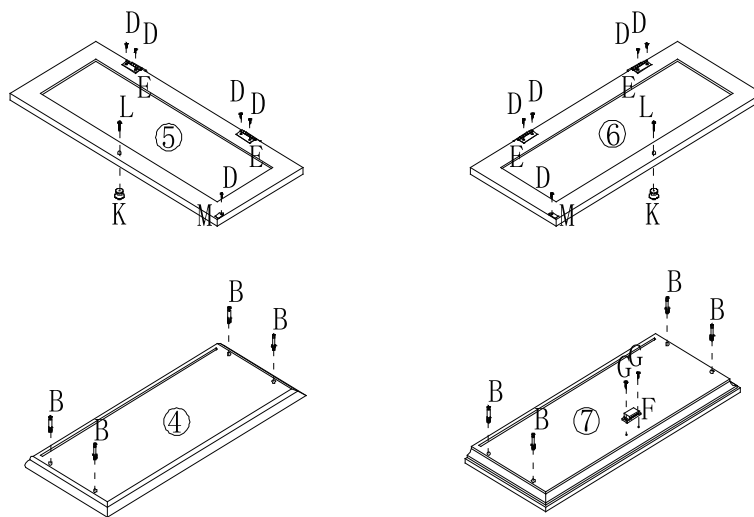


STEP 1

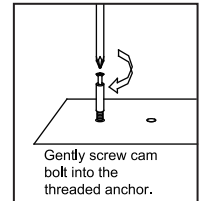1. Attach Hinge (E) to Right Door (5) and Left Door (6) using Screw (D)
2. Attach Magnet (M) to Right Door(5) and Left Door (6) using Screw (D)
3. Attach Knob (K) to Right Door (5) and Left Door (6) using Bolt (L)
4. Lock Cam Bolt (B) on Bottom Panel (4)
5. Attach Magnet (F) to Top Panel (7) using Screw (G)
6. Lock Cam Bolt (B) on Top Panel(7)




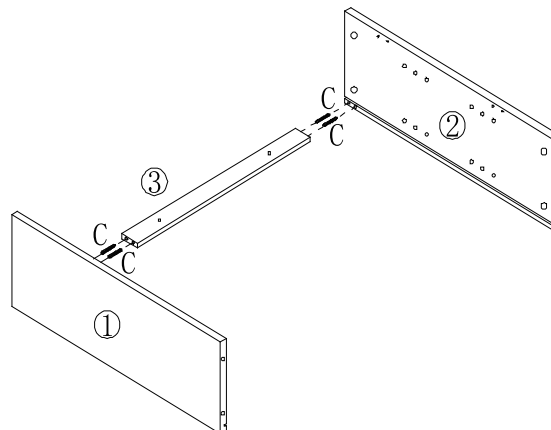
STEP 2



Attach Back Bar (3), Side Panel (1) and Side Panel (2) to assembly using Wooden Dowel (C)

A	
Cam Lock	4 pcs

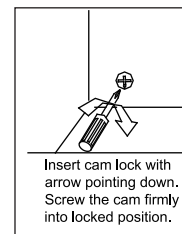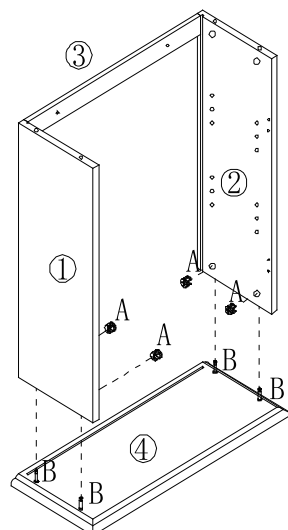STEP 3




Attach Bottom Panel (4) to the unit using Cam Bolt (B) and Cam Lock (A)

A 

Cam Lock 4 pcs

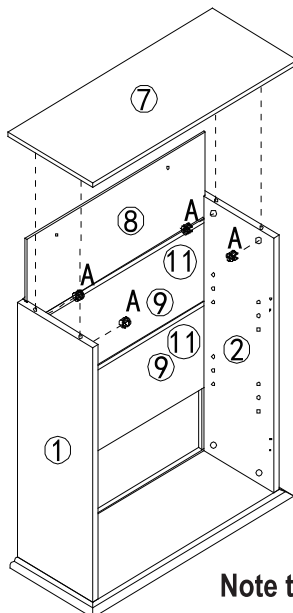STEP 4




Note the connected order!

1. Insert Back Panel (9), Back Panel (8) and Connected Strip (11) between Left Side Panel (1) and Right Side Panel (2)
2. Attach Top Panel (7) to assembly using Cam Bolt (B) and Cam Lock (A)

D 

Screw 4 pcs

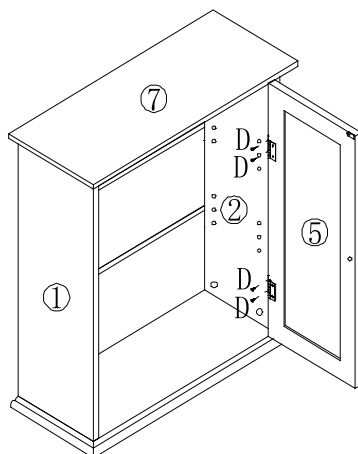STEP 5




Attach Right Door (5) to Right Side Panel (2) using Screw (D)

D 

Screw 4 pcs

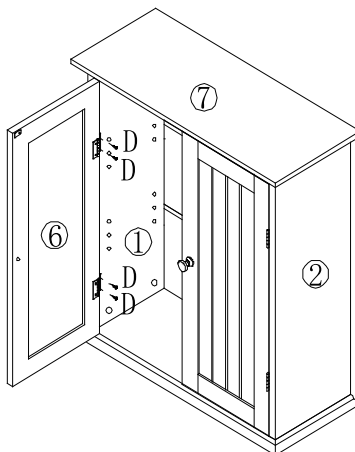STEP 6




Attach Left Door (6) to Left Side Panel (1) using Screw (D)

H



Shelf Supporter 8 pcs

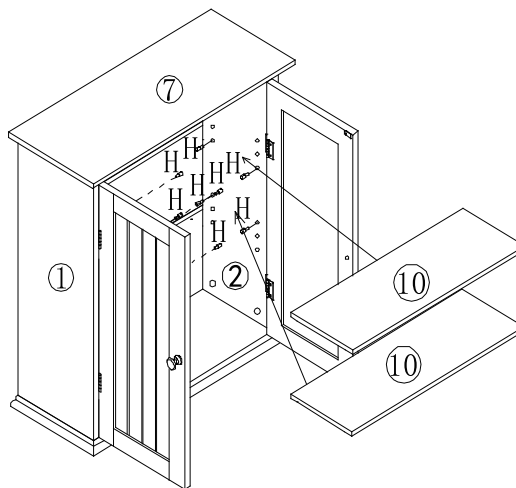STEP 7



1. Attach Shelf Supporter (H) into Left Side Panel (1) and Right Side Panel (2)
2. Put Shelf Panel (10) into the cabinet

I



Anchor 2 pcs

J



Screw 2 pcs

N



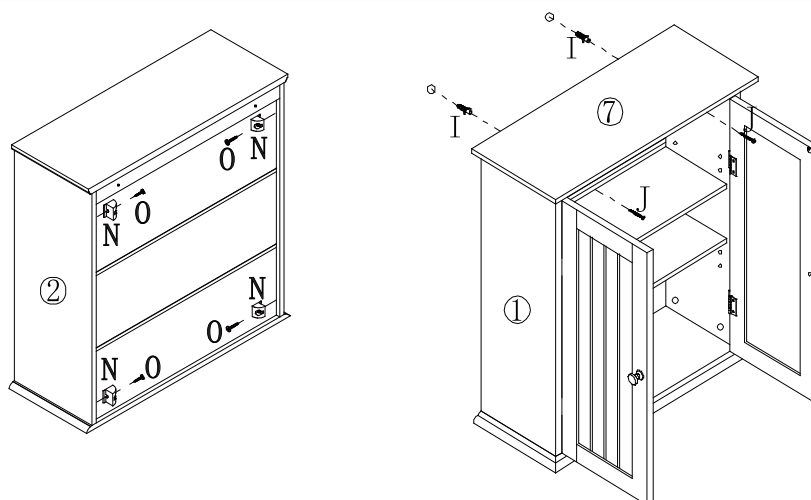
4 pcs

O



Screw 4 pcs

STEP 8



1. Push the Top Panel (7) and swing it from side to side to align the two doors, and then attach the Rear Panel Hooks (N) to the back panels using Screw (O).
2. Drill holes into wall slightly smaller than Anchor (I), gently tap Anchors (I) into the wall.
3. Fix the wall cabinet to the wall using Screw (J).

