




Product Installation Instructions

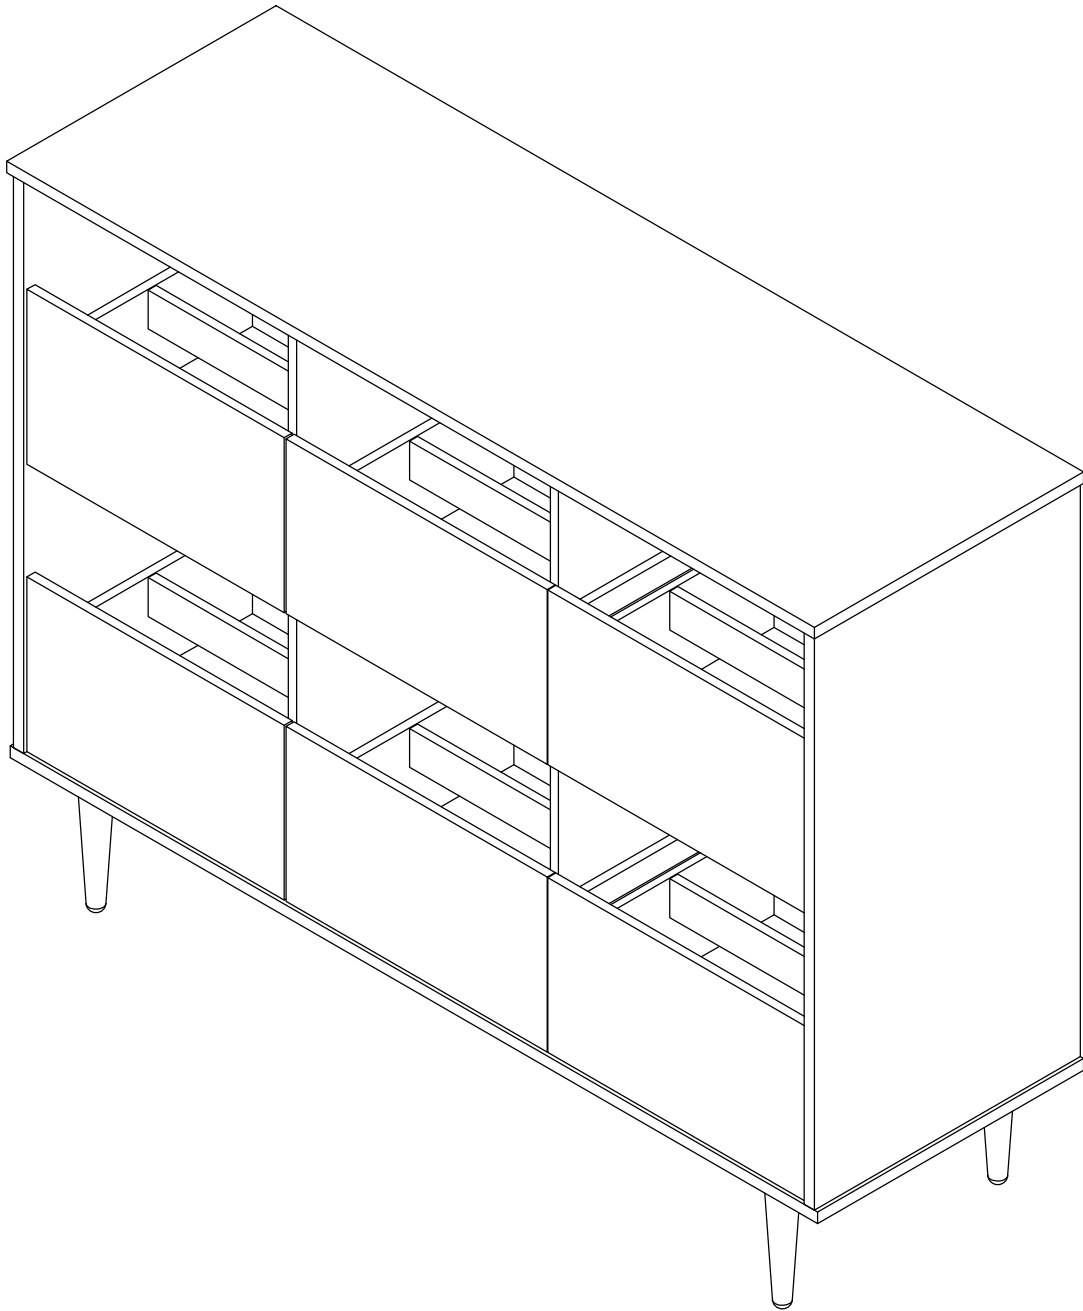


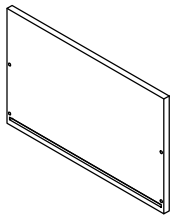


A x6

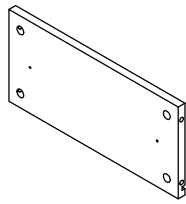


Bx12




C x6

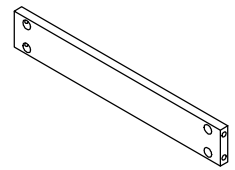


D x6

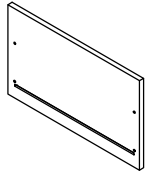


E x2

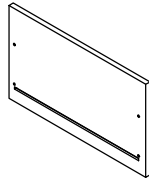


F x2

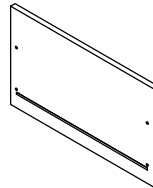


G x2

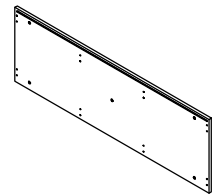


H x1

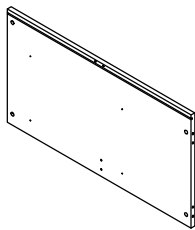


J x1

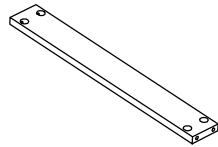


K x2

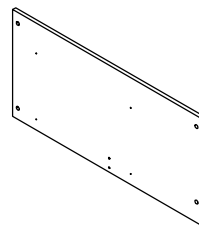


L x1

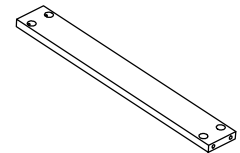


Mx1

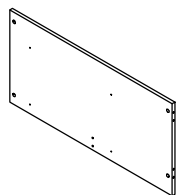


N x1

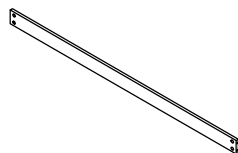


Ox1

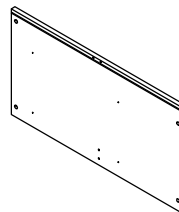

P x1




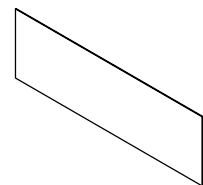



Qx2

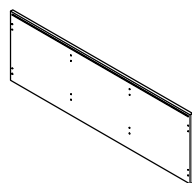

R x1

Accessories list


①		Two In One Screw (6x28mm)	104pcs +10pcs
②		Two In One Nut (10x12mm)	104pcs +10pcs
③		Wood Chipping (6x30mm)	16pcs +3pcs
④		Guide rails & screws (3x12mm) 29cm	60pcs +12pcs 12pcs
⑤		Non-slip pads (φ12x2mm)	5pcs +1pcs
⑥		Fixing Clip & Screw (3x16mm)	12pcs +1pcs
⑦	 1pcs  1pcs  2pcs  1pcs  1pcs	anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)	1pcs
I		wooden foot	6pcs

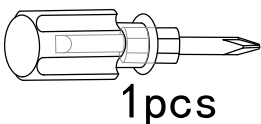

Double-head screwdriver, use as required


2

Product structure decomposition

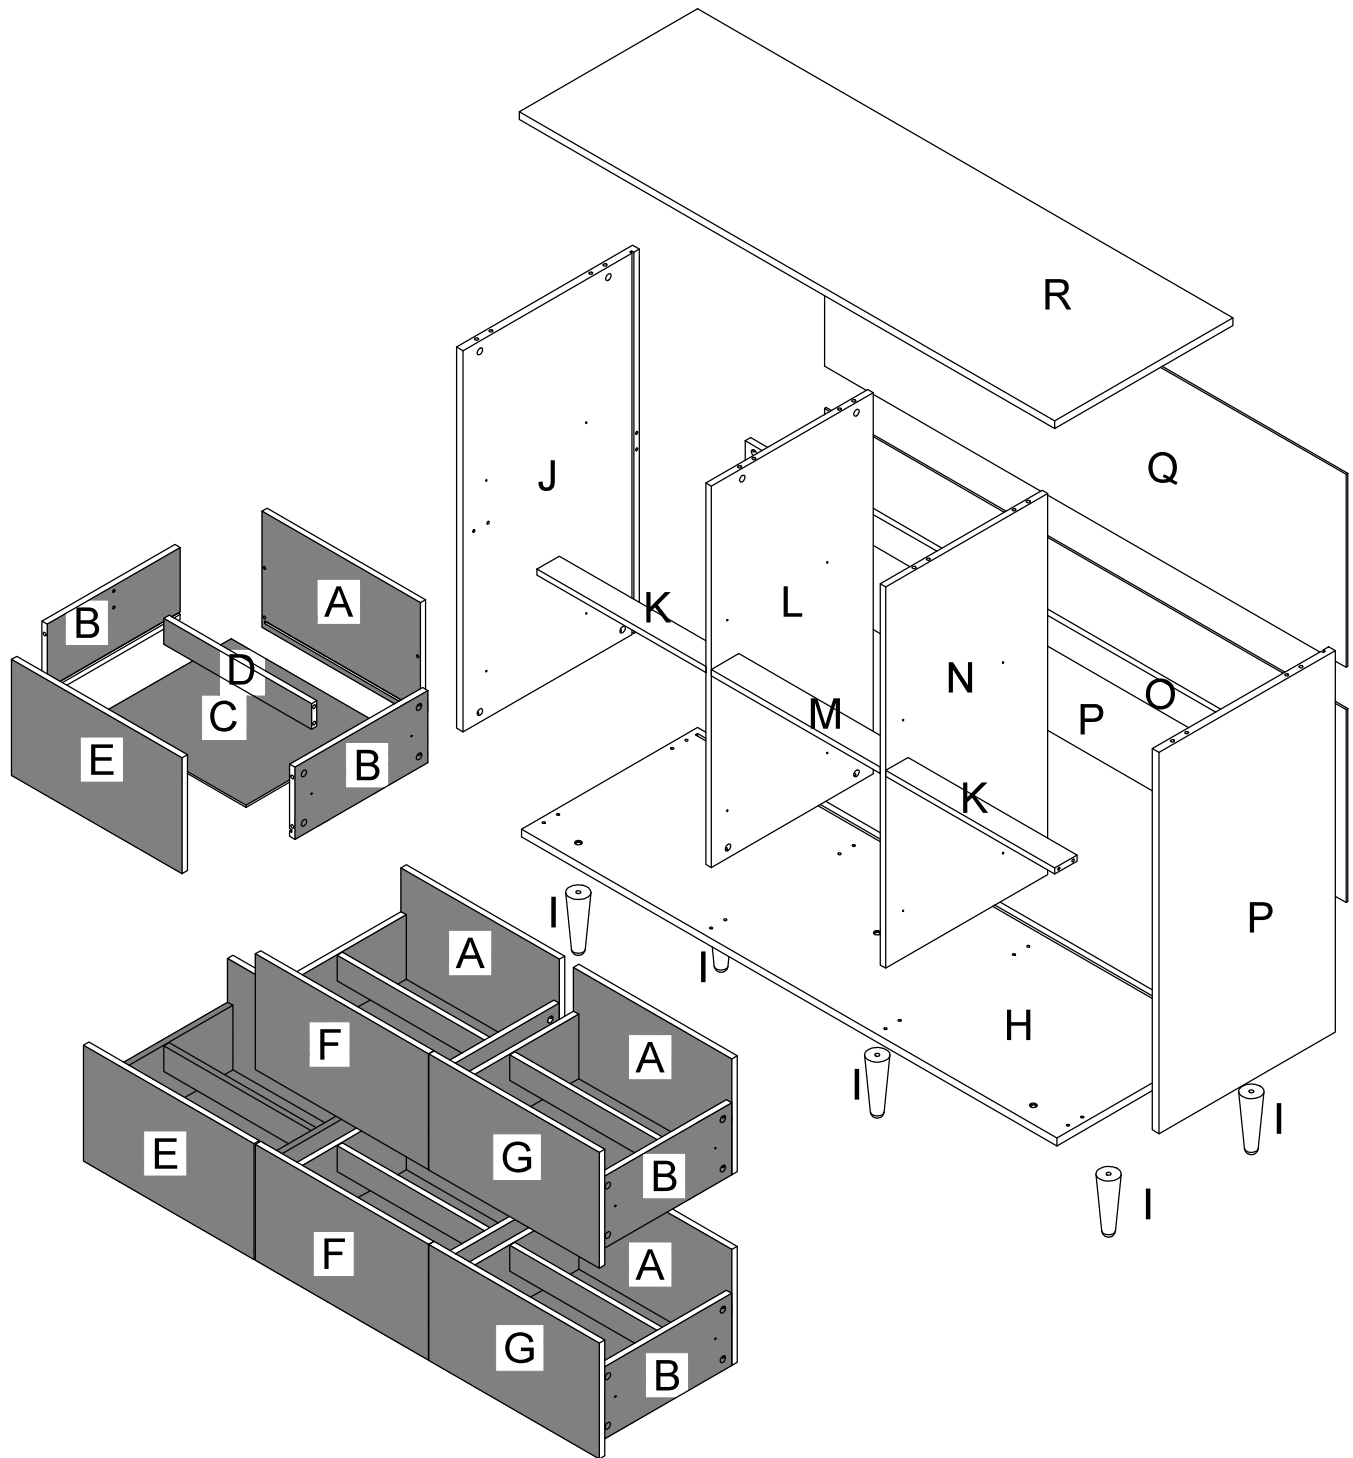


Use parts ① and ②




Step1

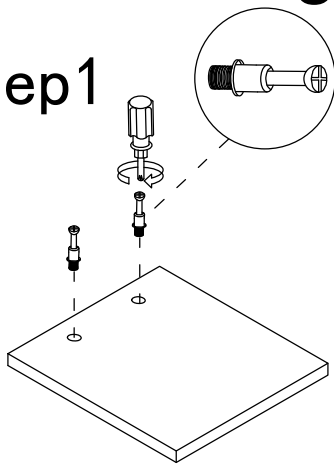

Step2

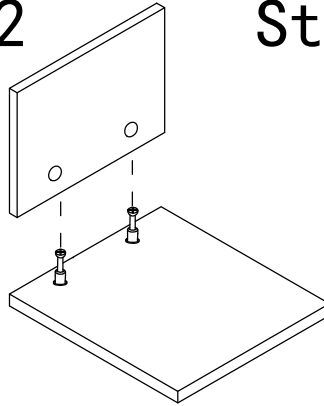



Step3

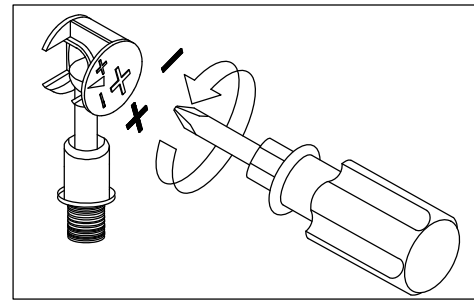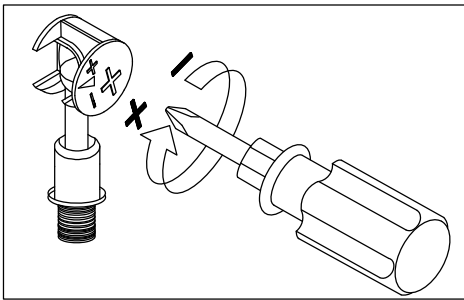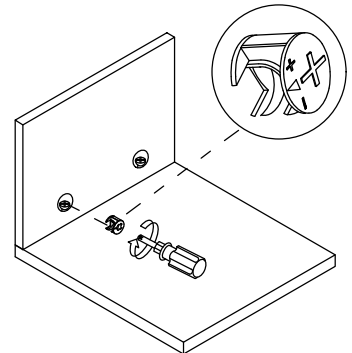



Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign

Step 1

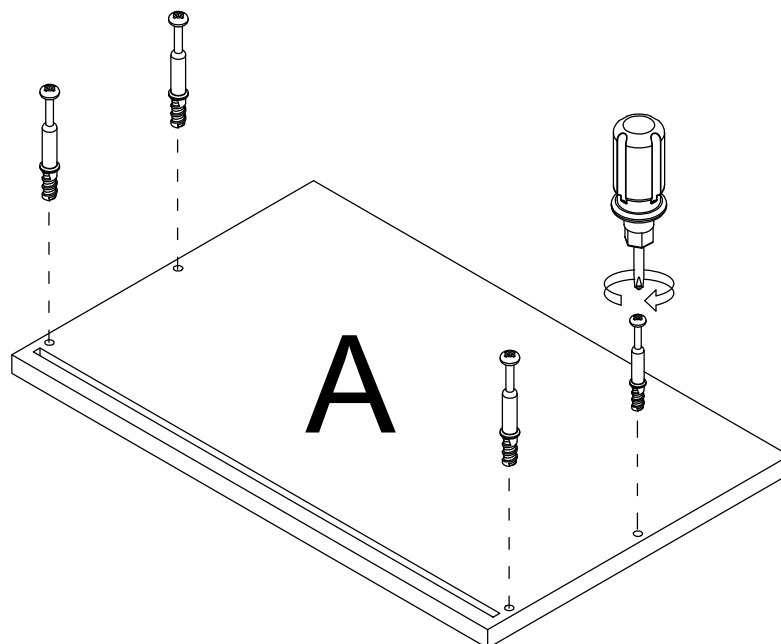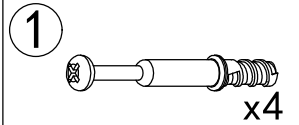


Step 2

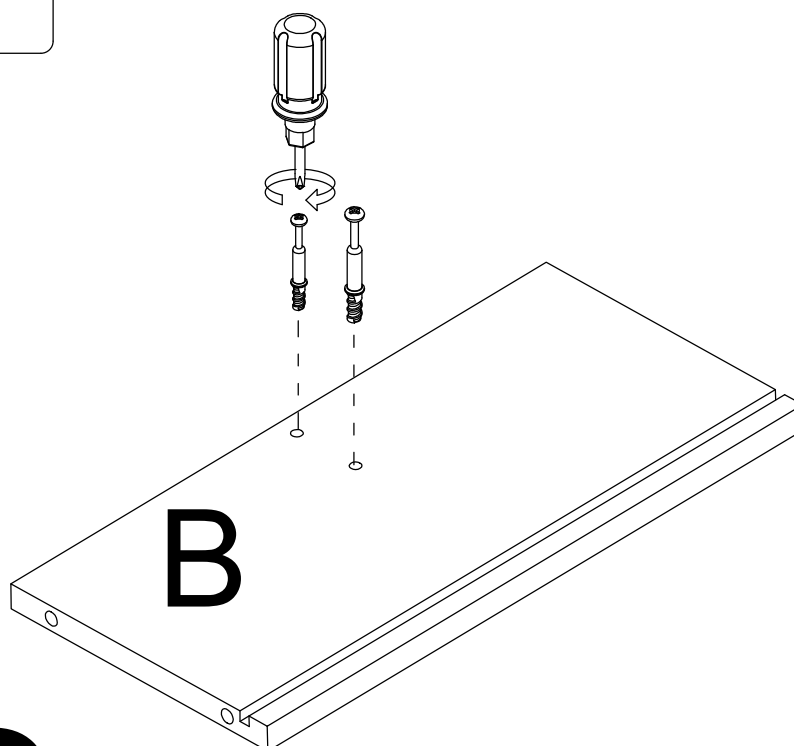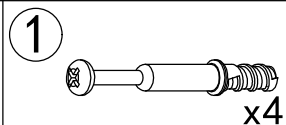


x 2

Step 3


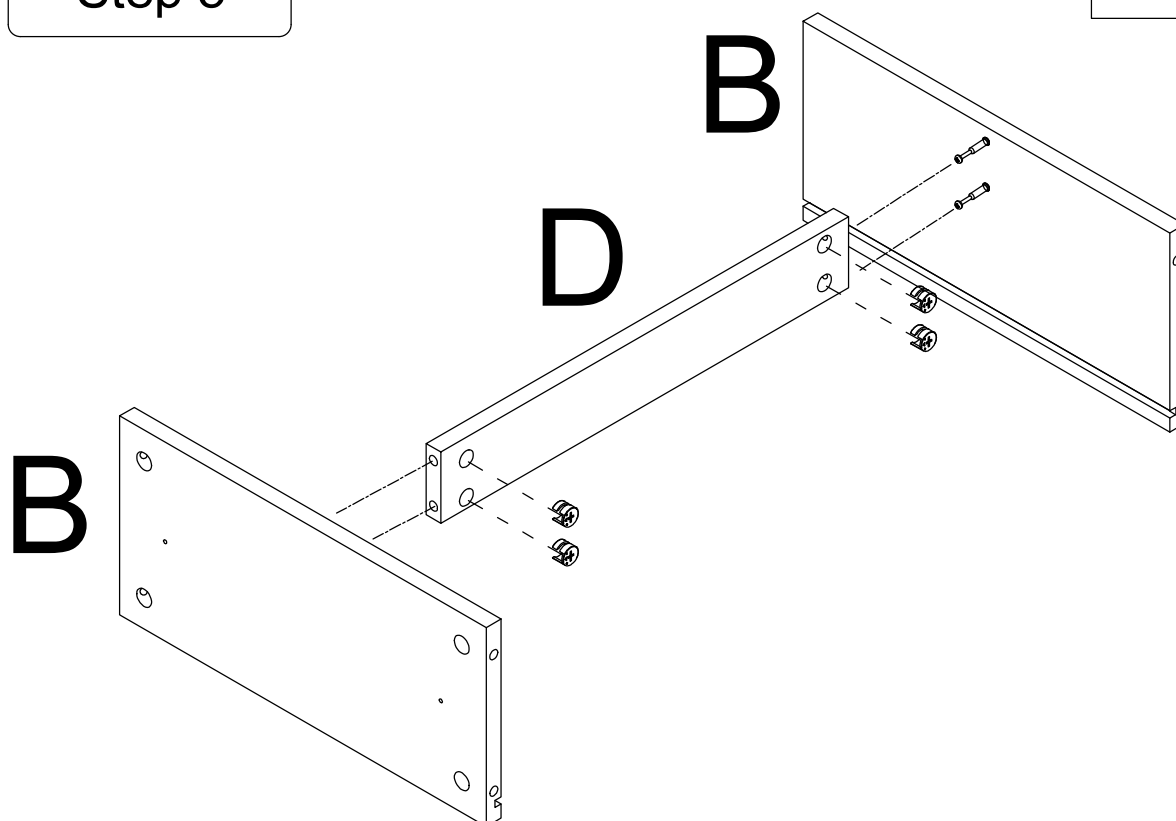


5



Step 4

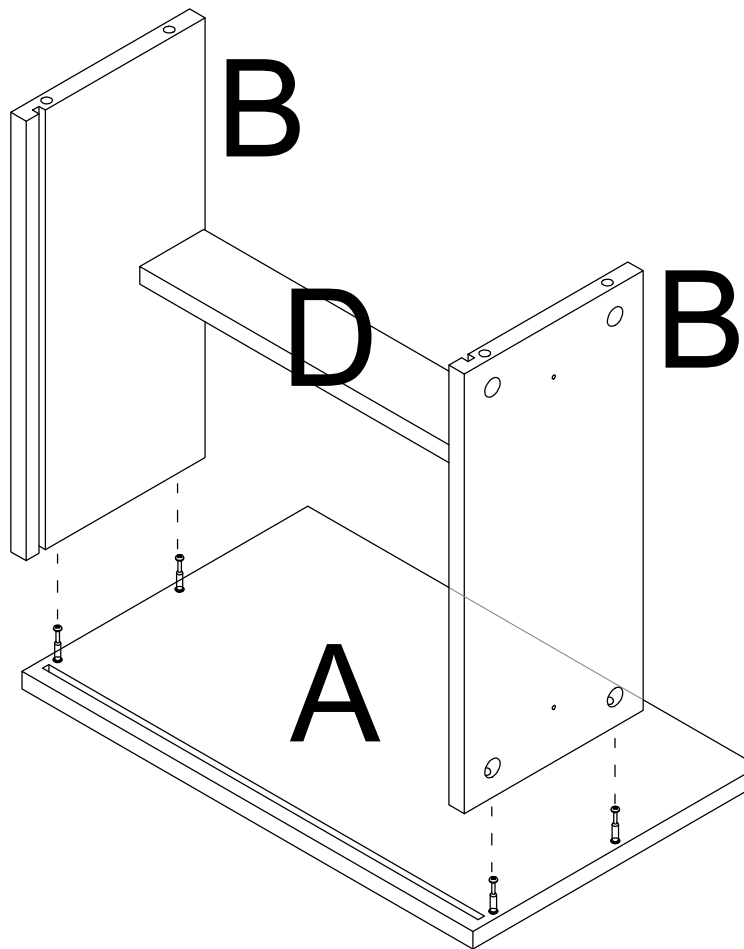

Step 5

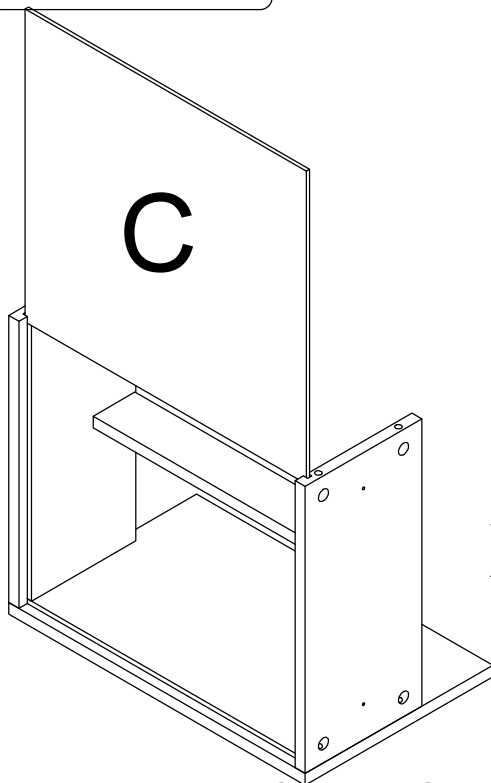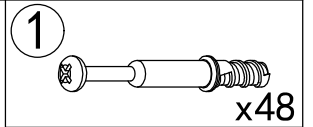

x6

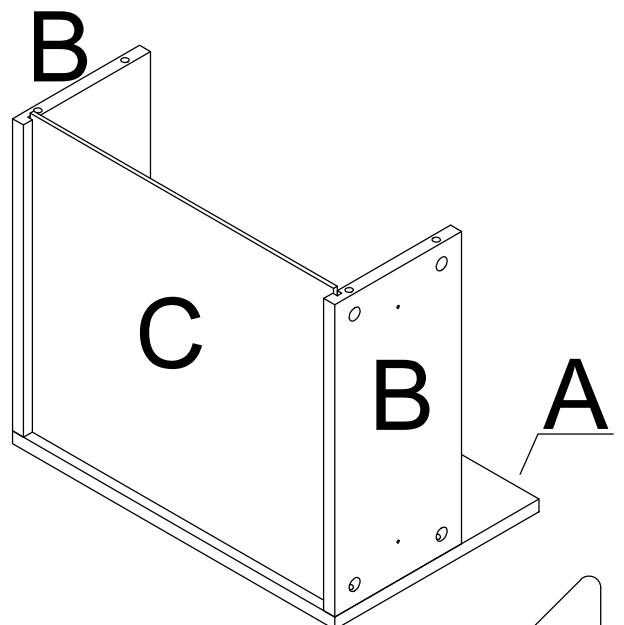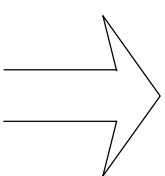


You can repeat the previous steps to obtain 6 identical drawers.

6

Step 6

1


x24

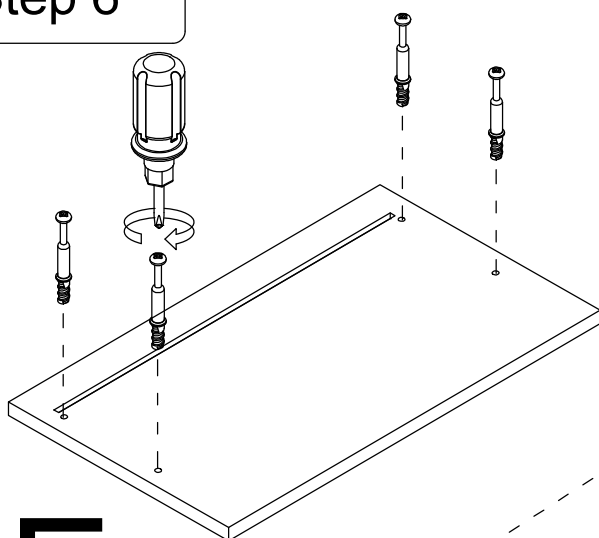


E

x 2

F

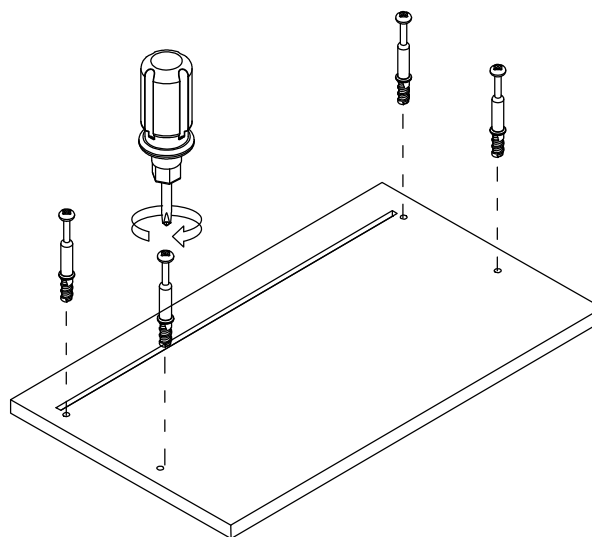

G

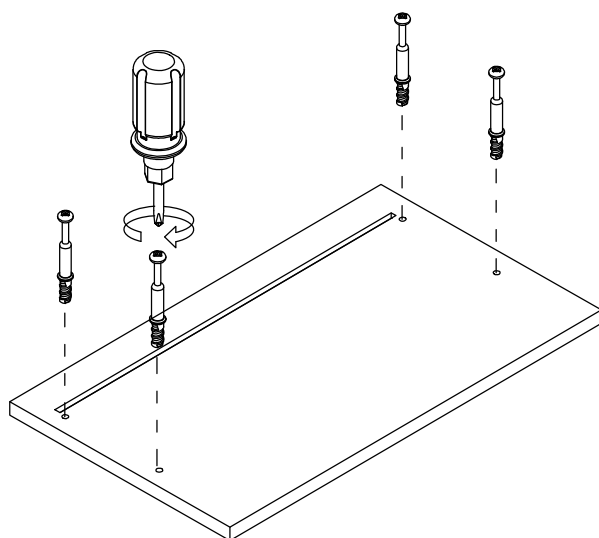



7

Step 7


2




x68

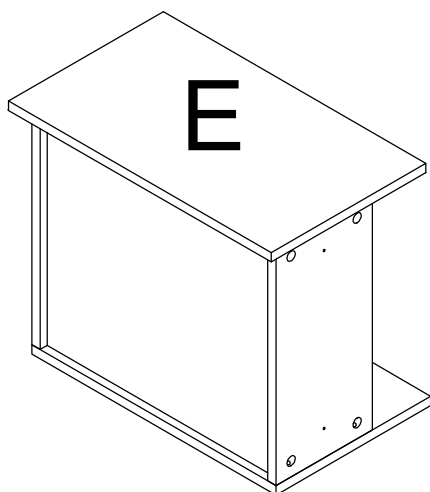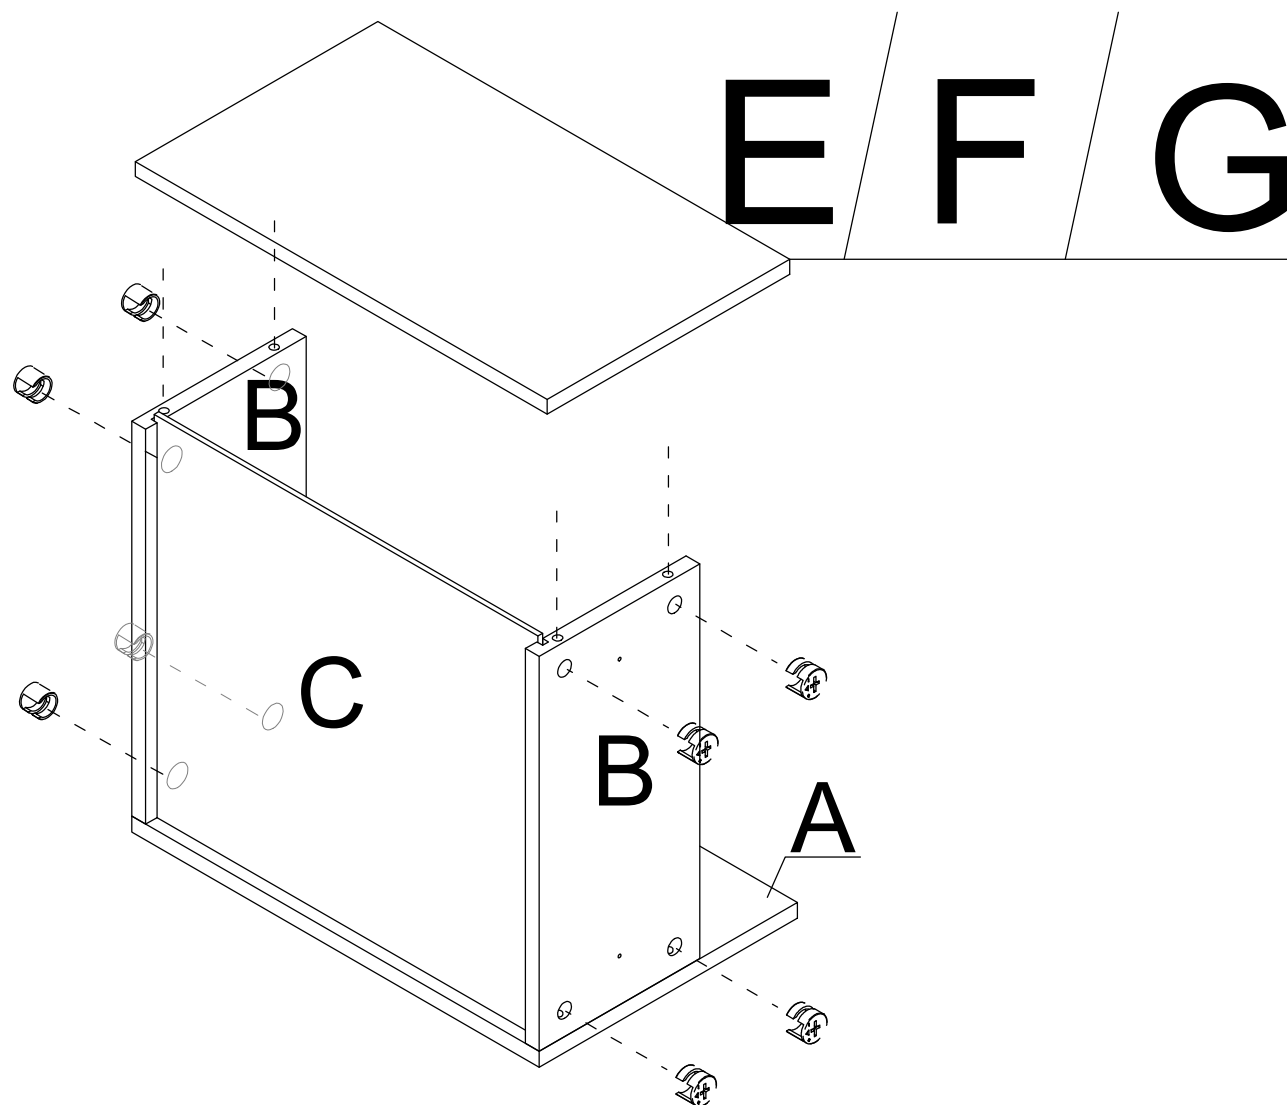

x 2

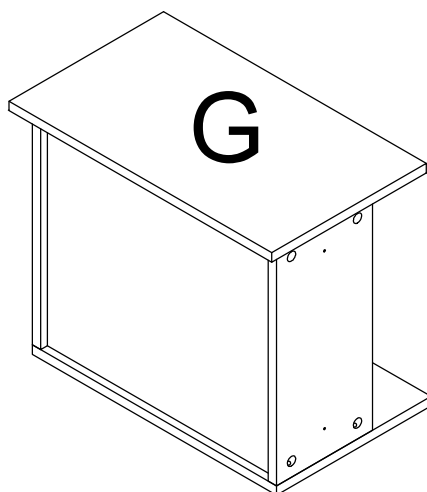


x 2

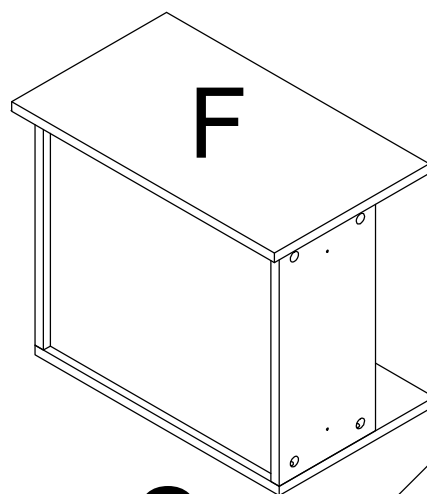

x 2


8

Drawer rail breakdown diagram

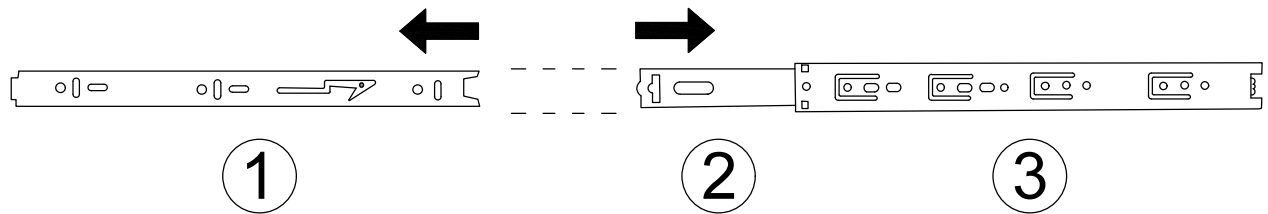



① Dismantle the schematic diagram

Step 1 : Pull the rails apart

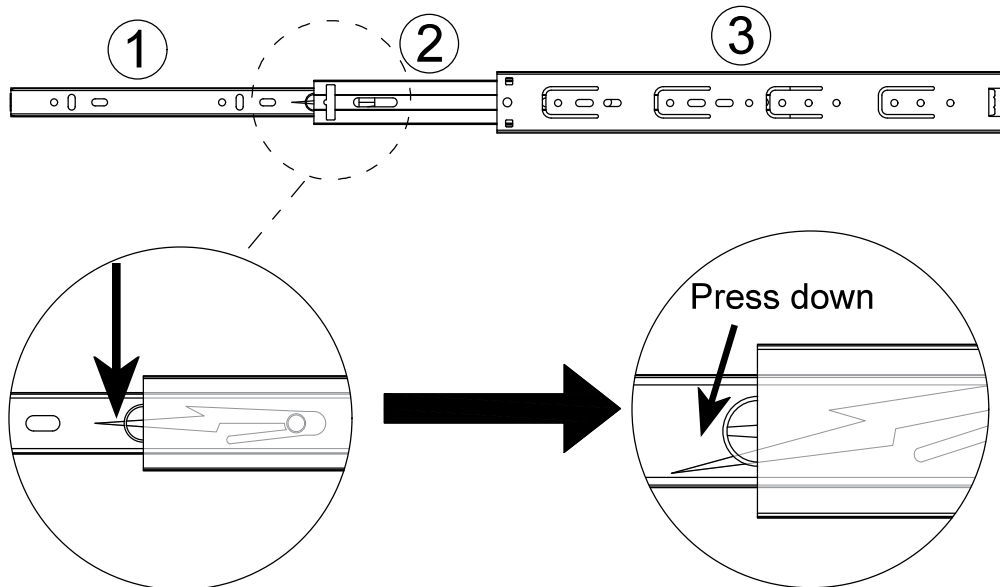

Step 2 : Press the nylon button and pull out ①.

Drawer rail decomposition completed schematic diagram

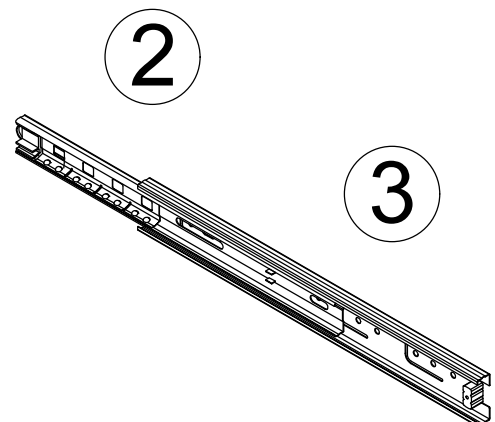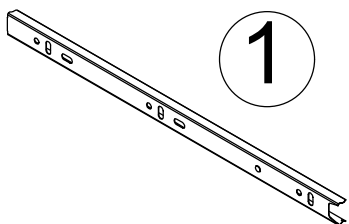



Step 8

4

x12




x24

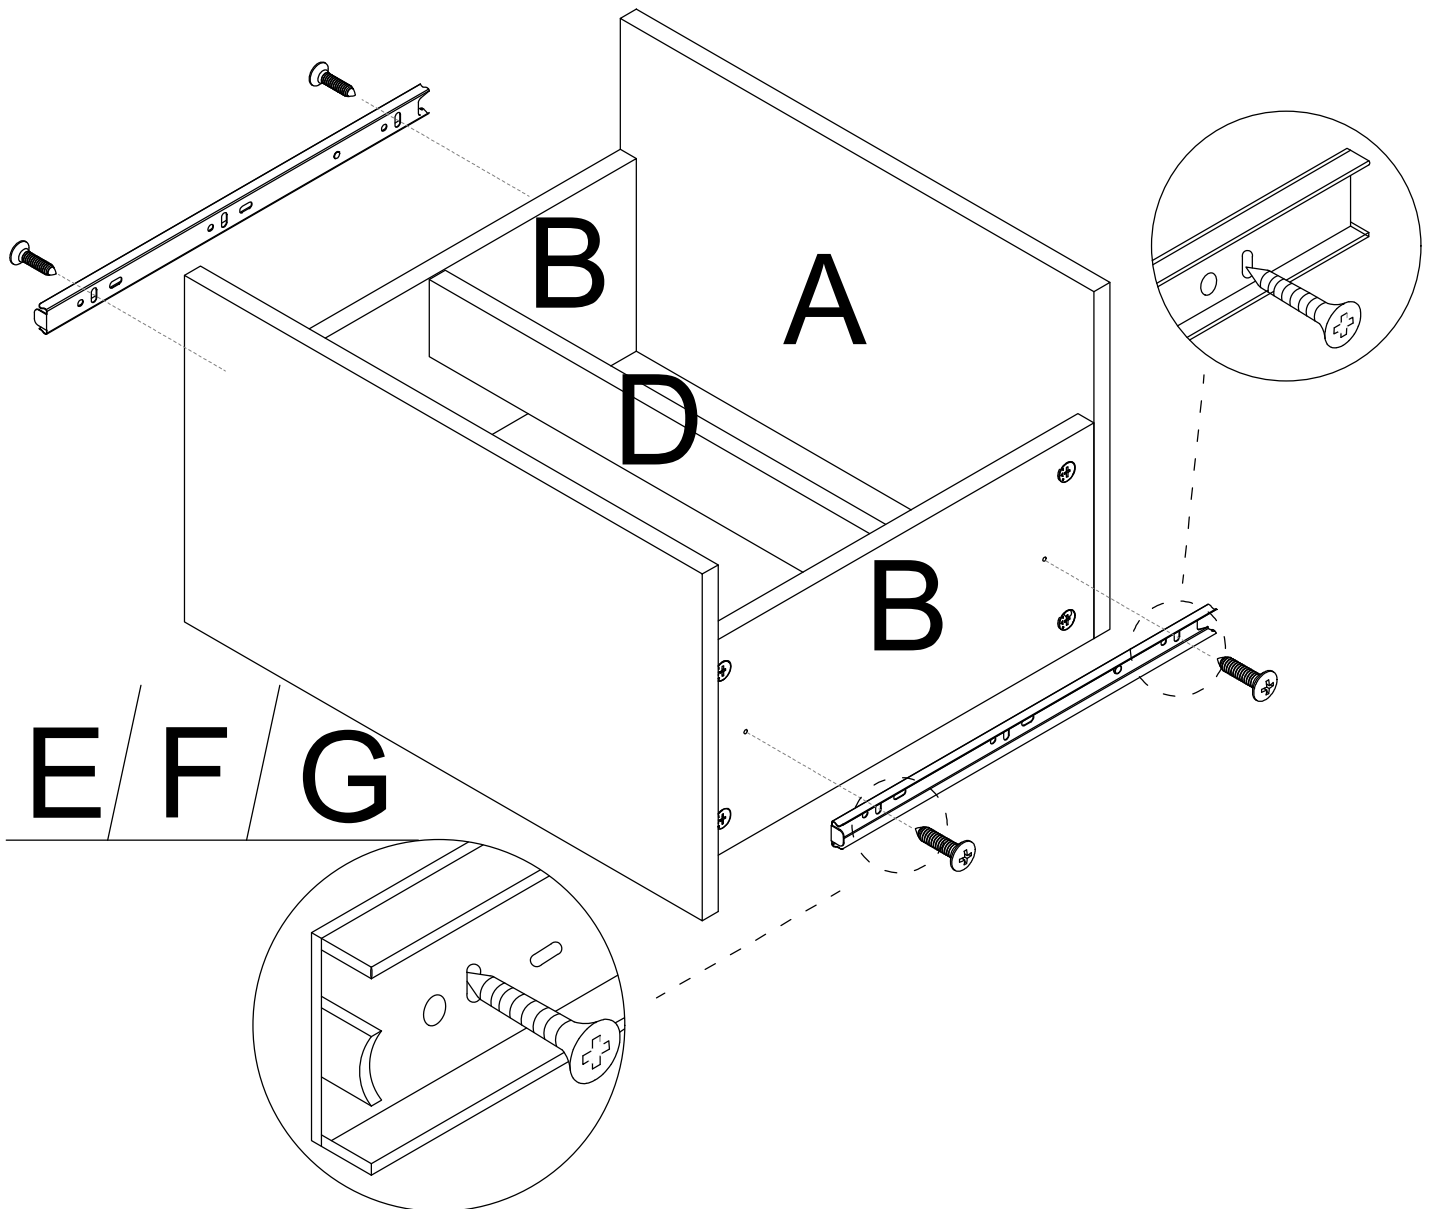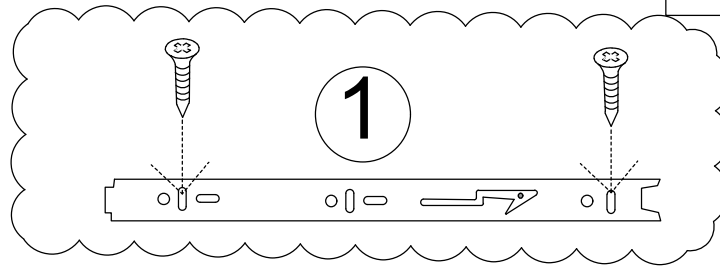

You can repeat the previous steps to obtain 6 identical drawers.

9


Product structure decomposition

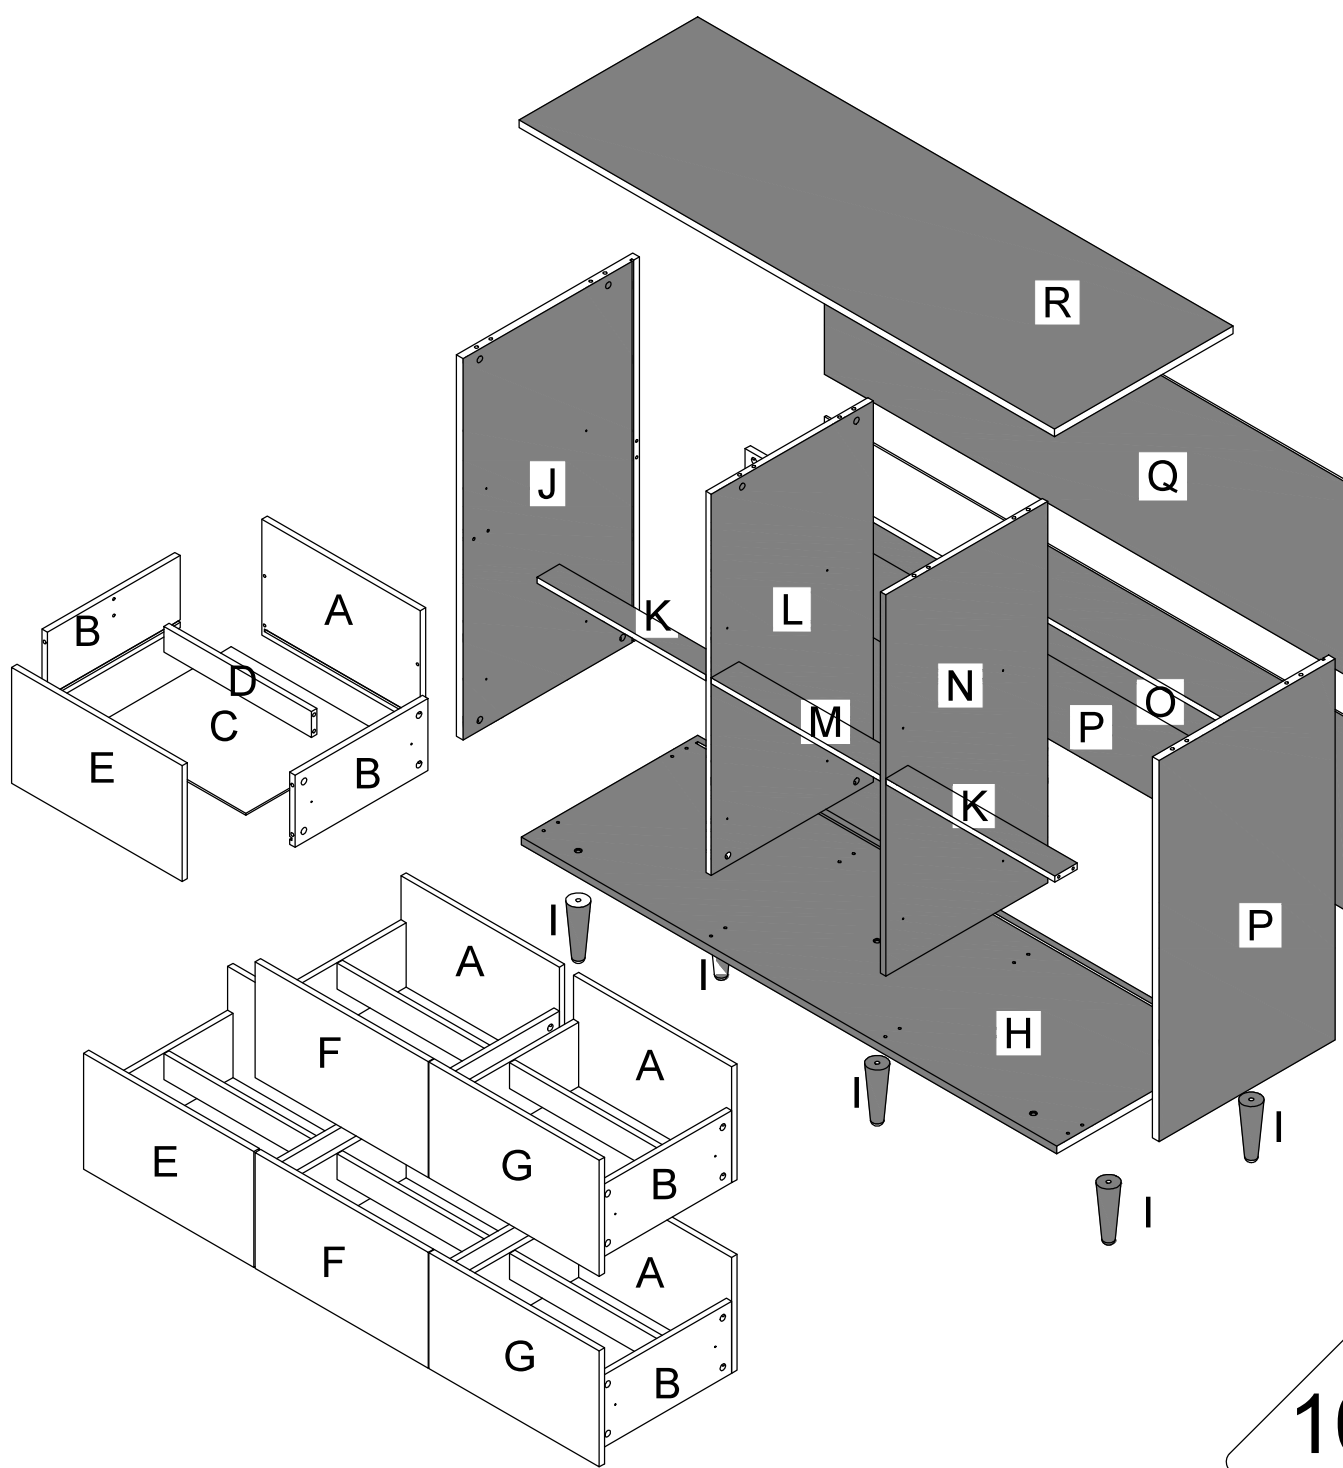

Step 9




I x6

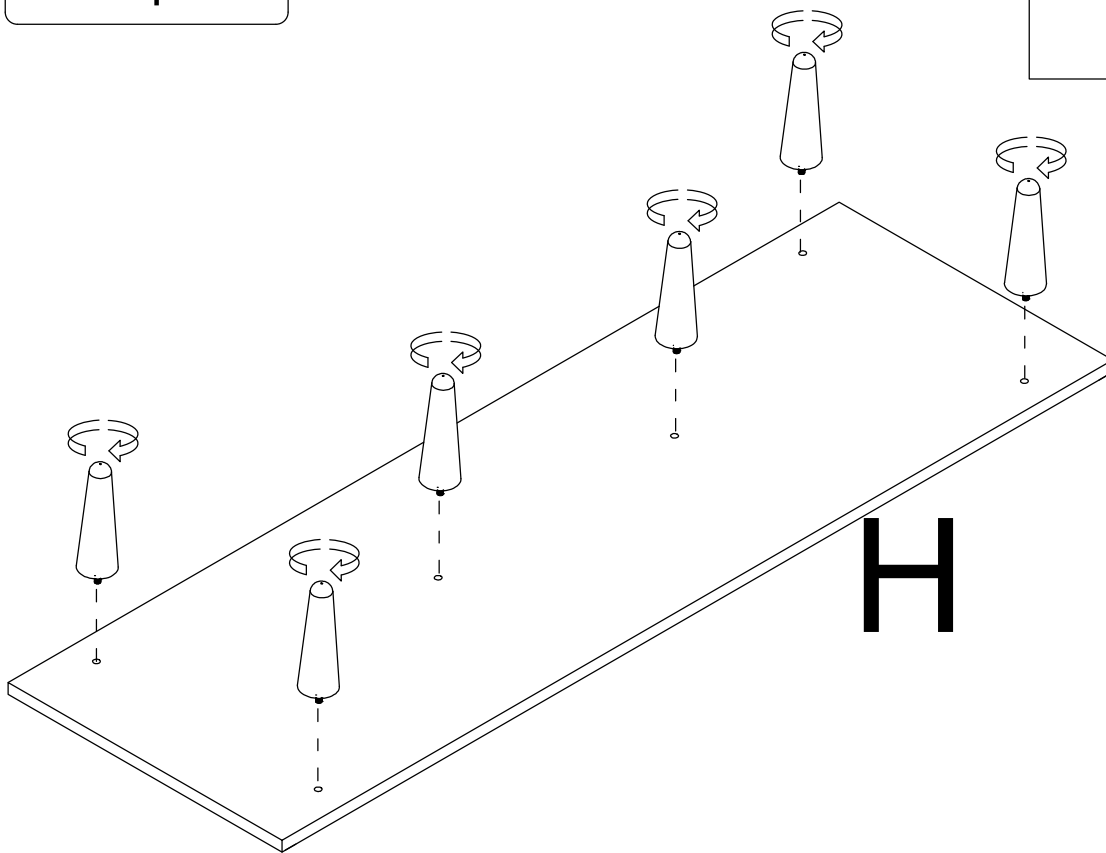


Step 10

Tear off release paper and stick the black foot pad on the board

⑤





x6

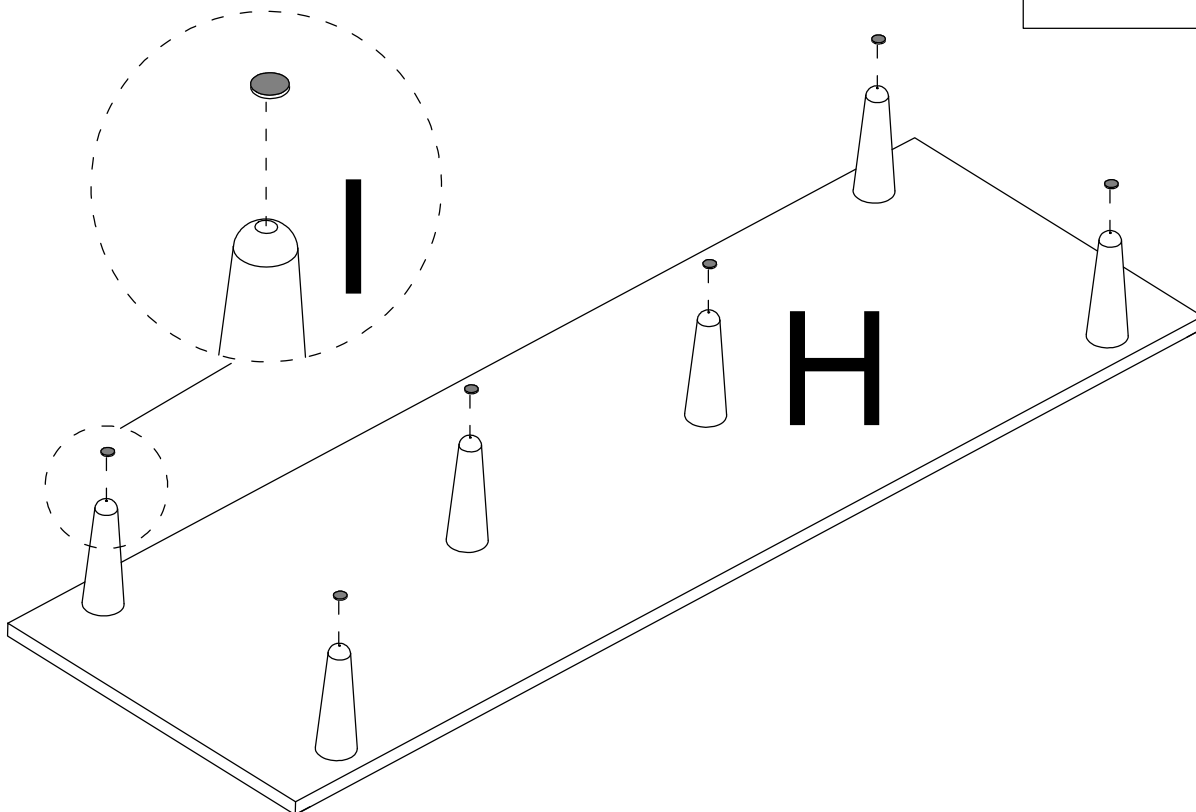


Step 11



1

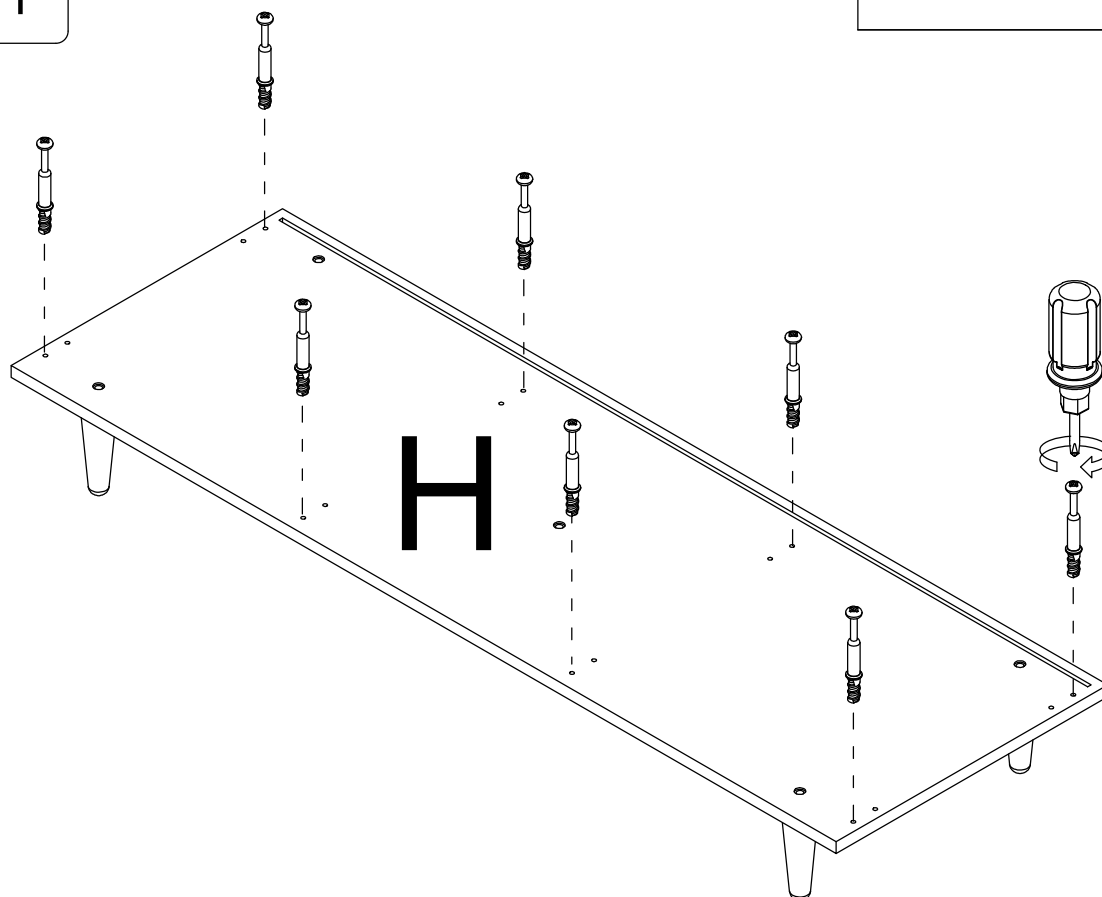


Step 12

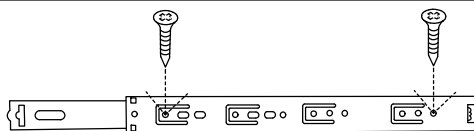



4

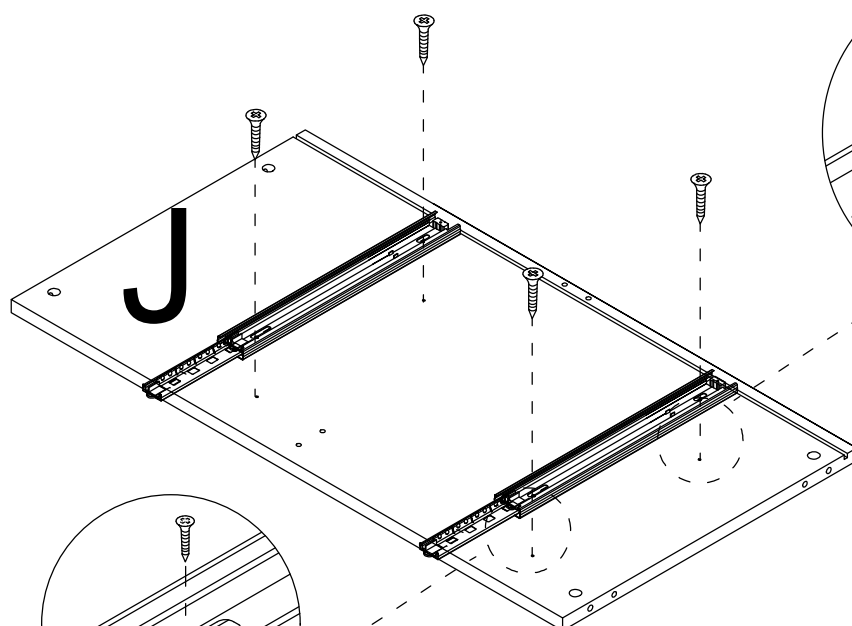

Step 13

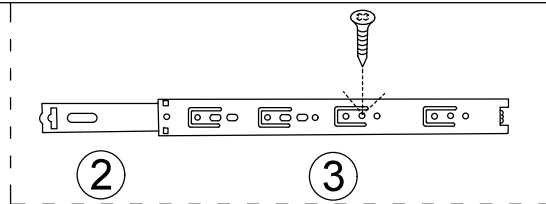



4

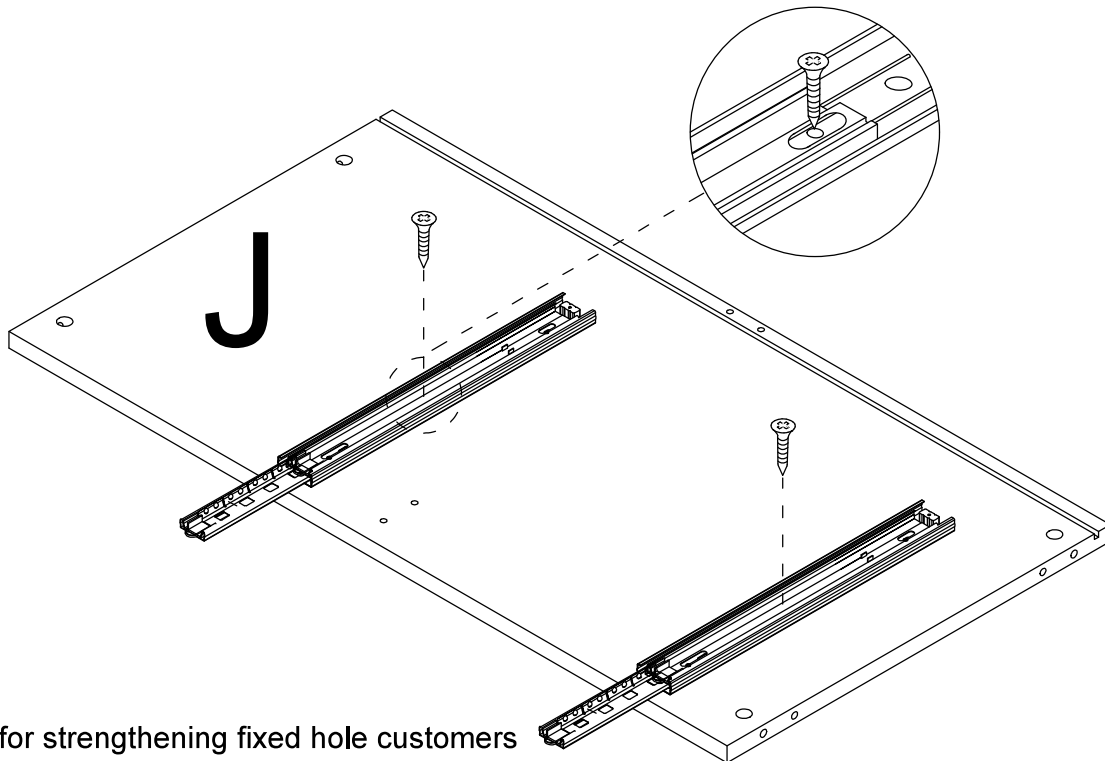

This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 14

1

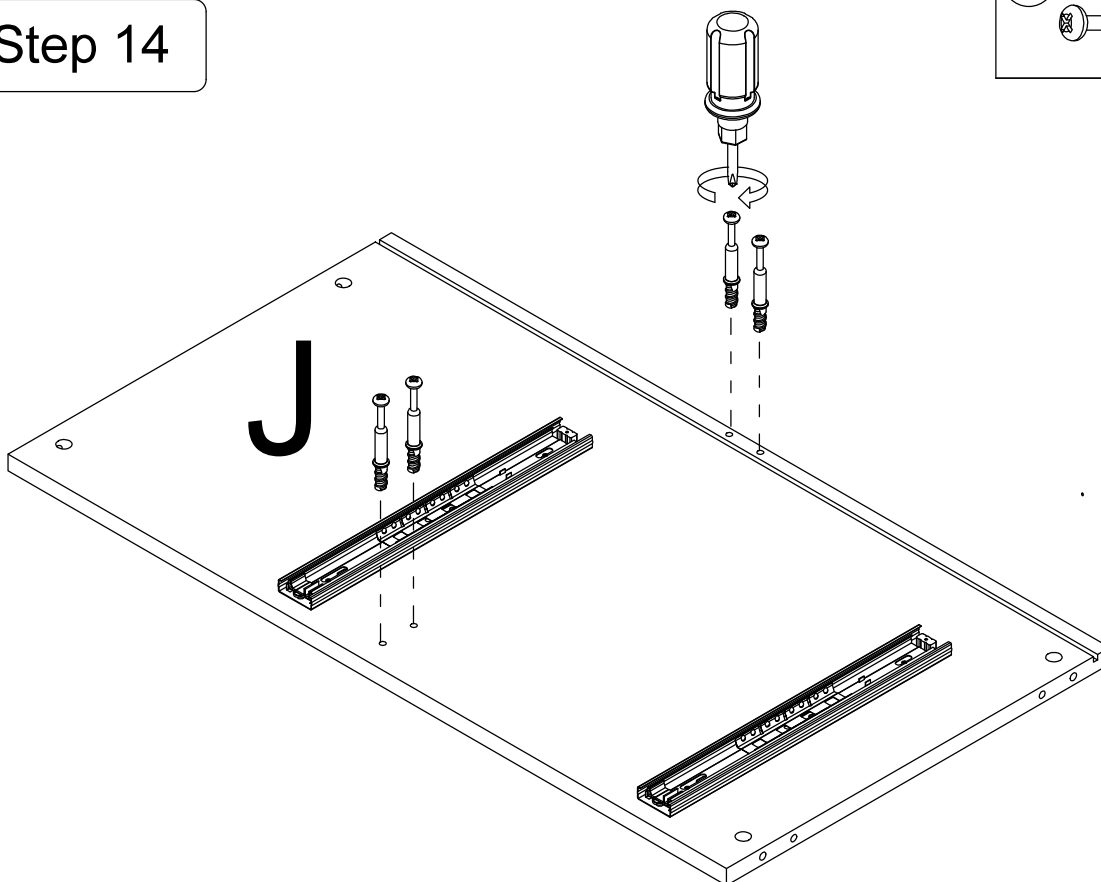


Step 15

2



x2

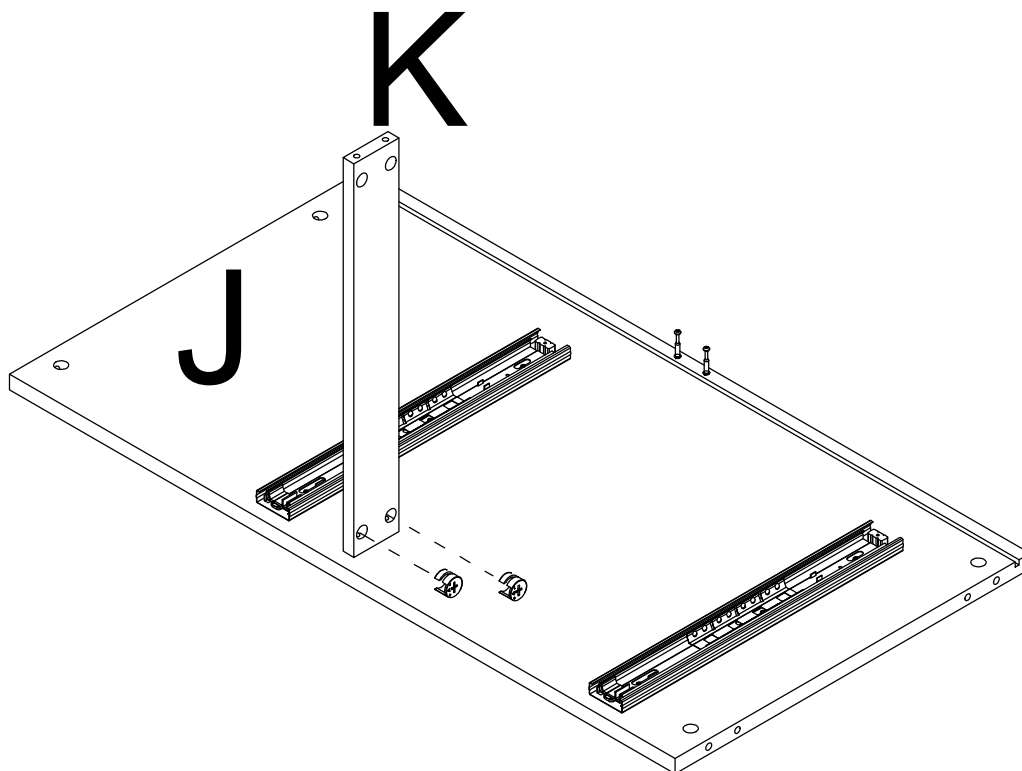








Step 16

2






x2


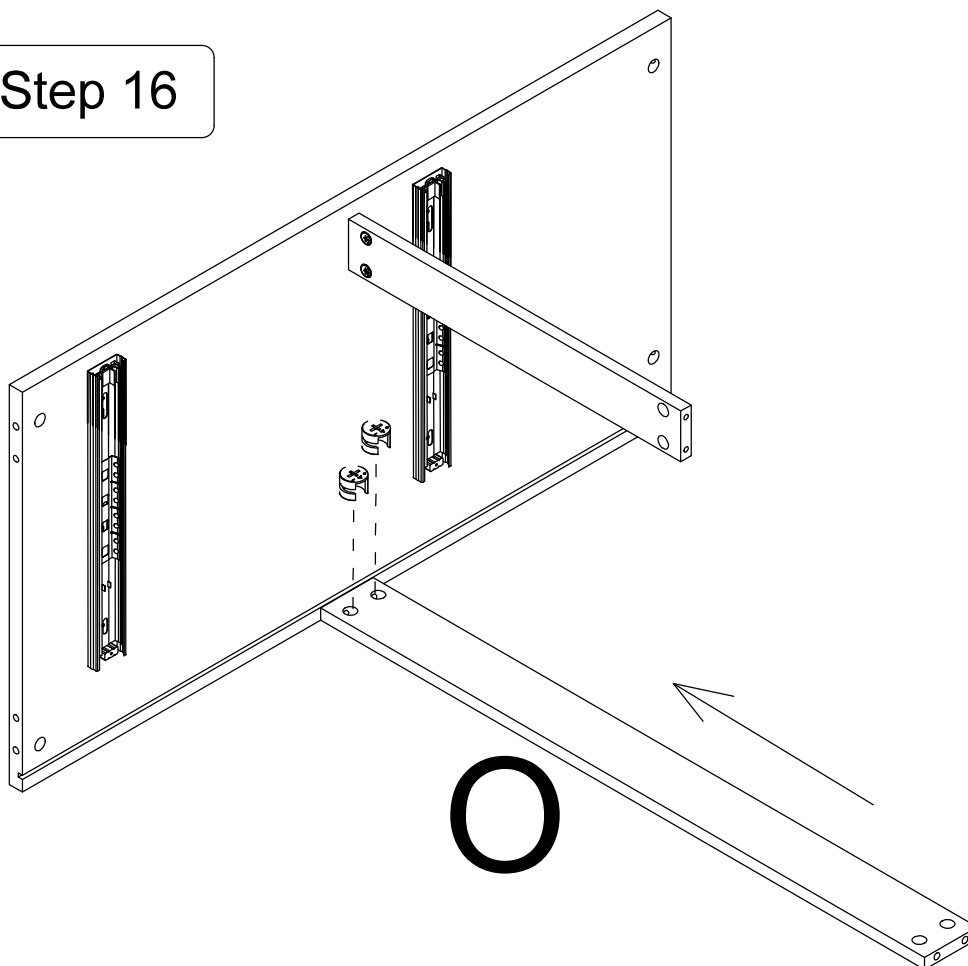


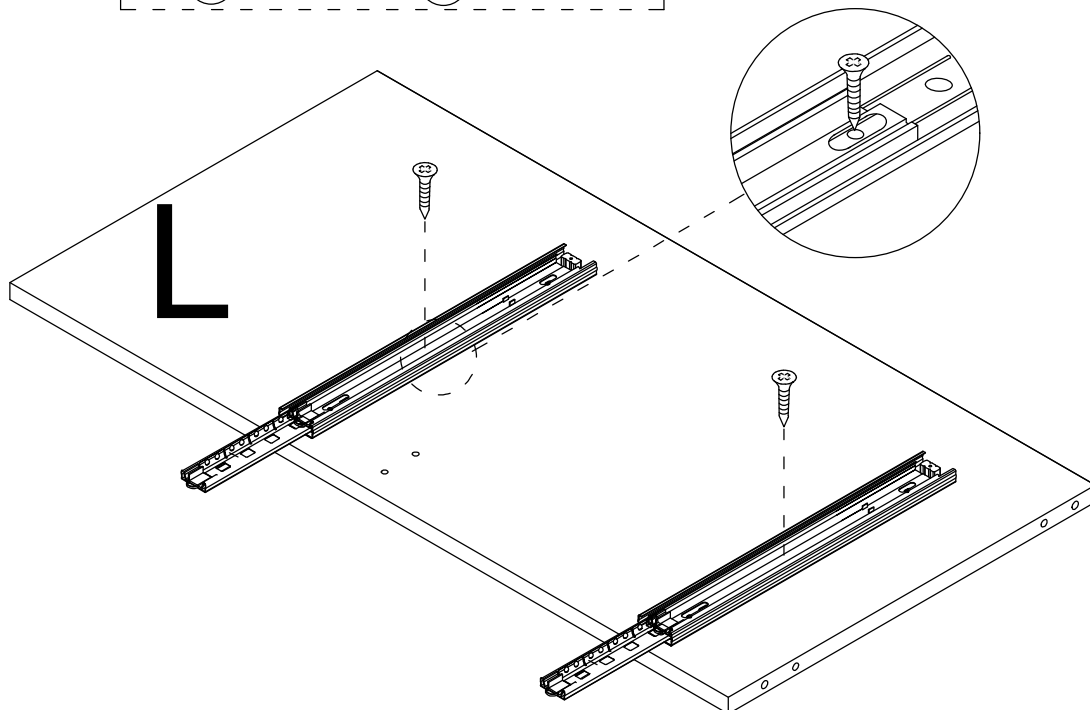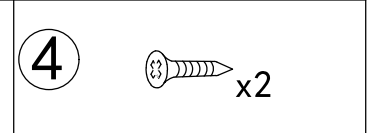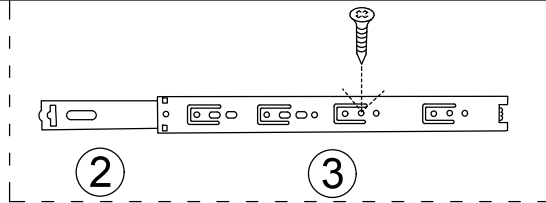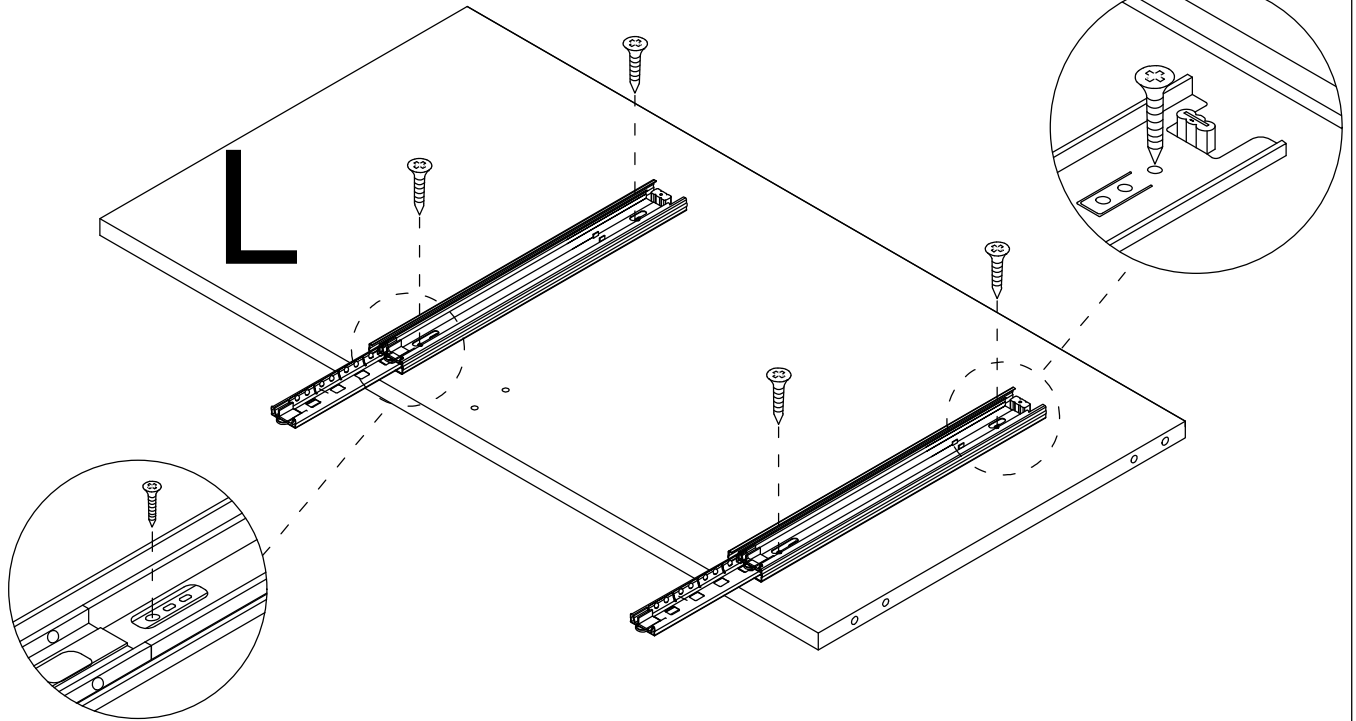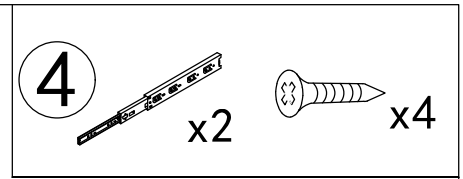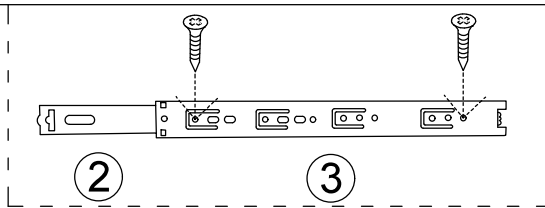



Step 17

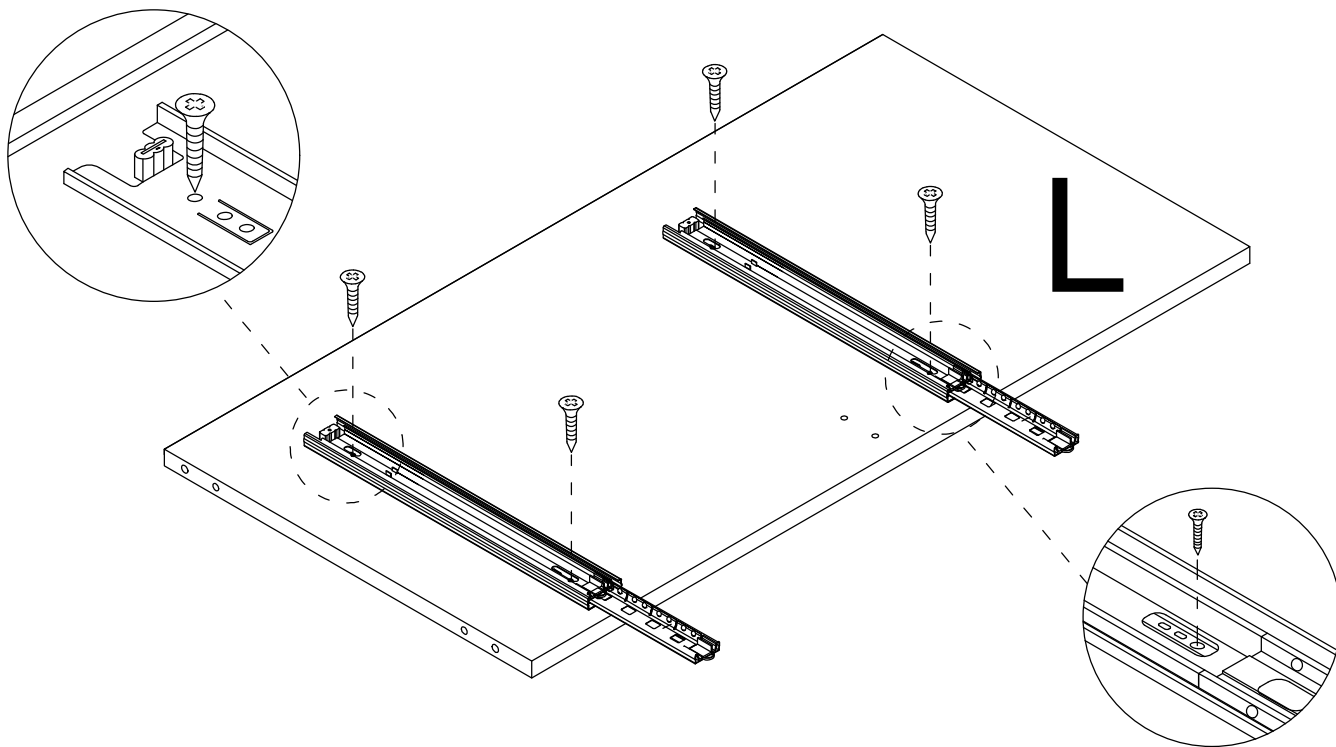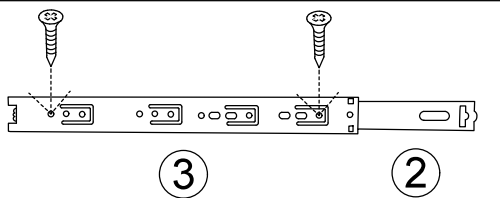



Step 18

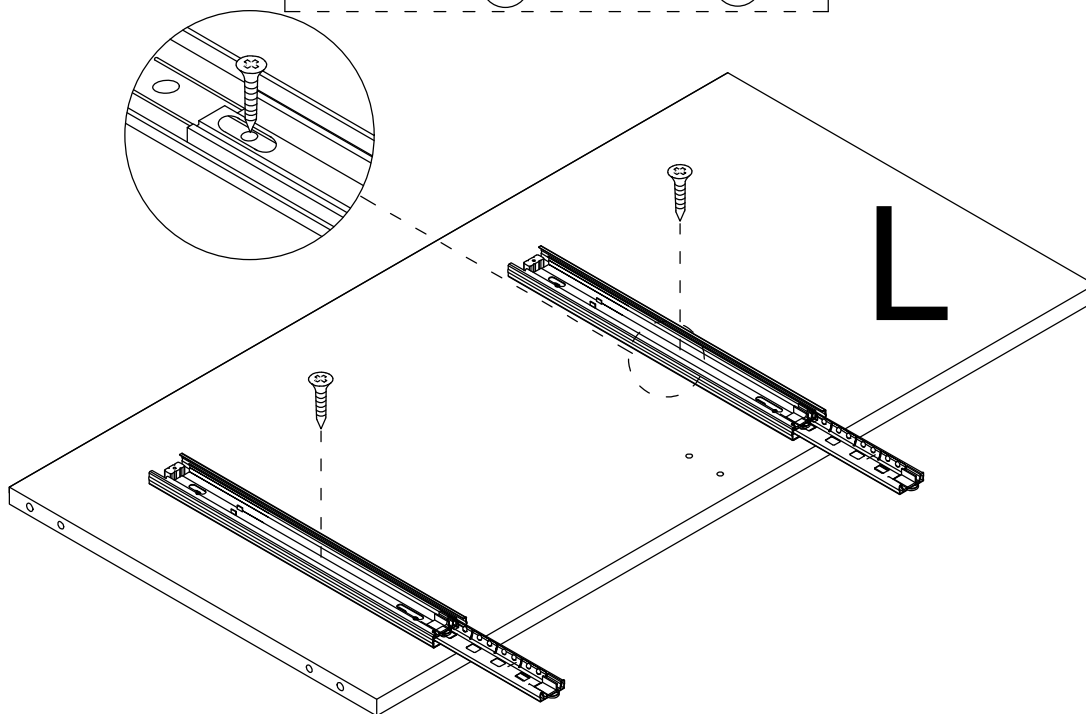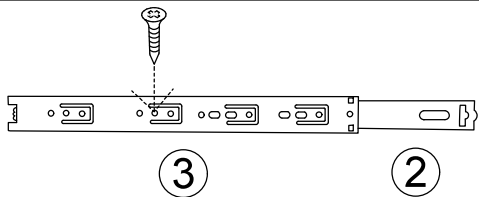

Step 19

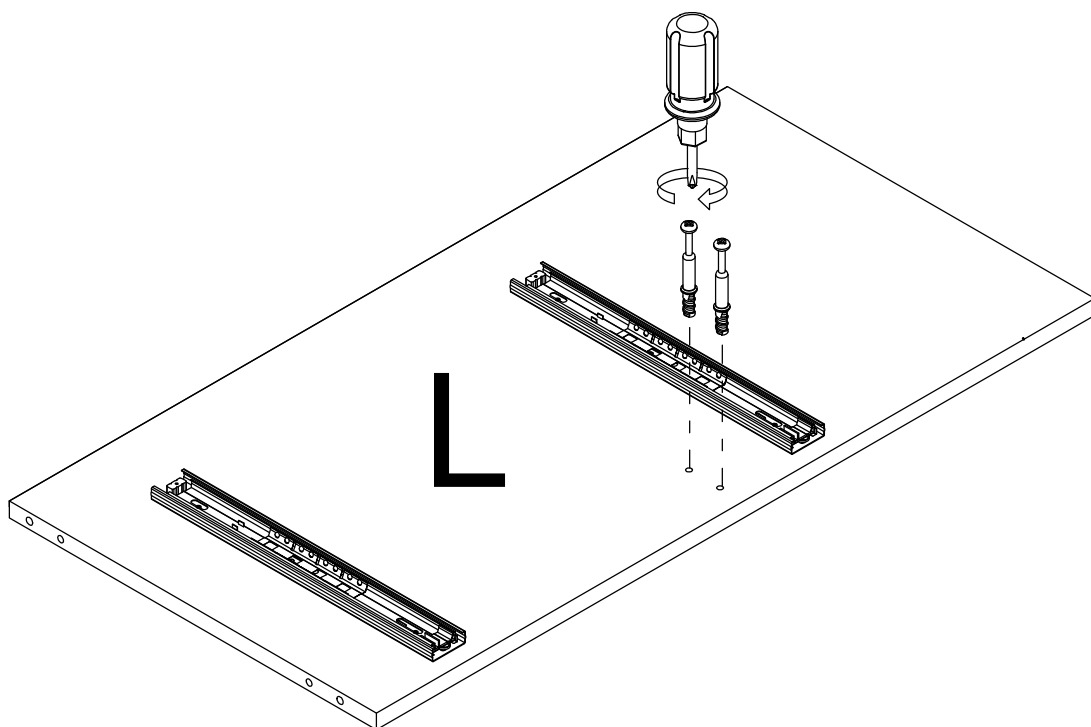
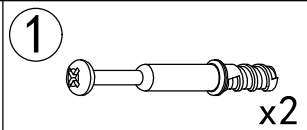


Step 20

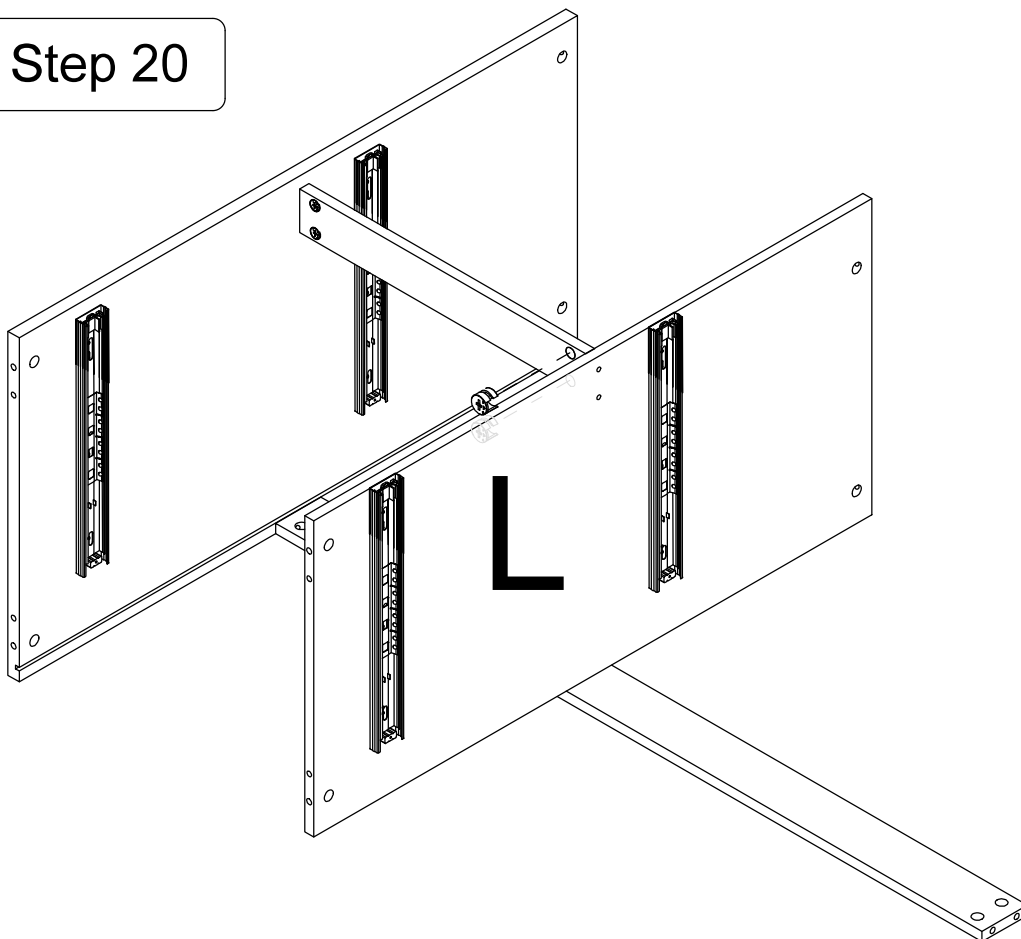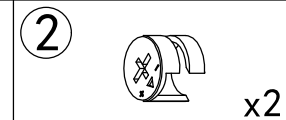


Step 21

1


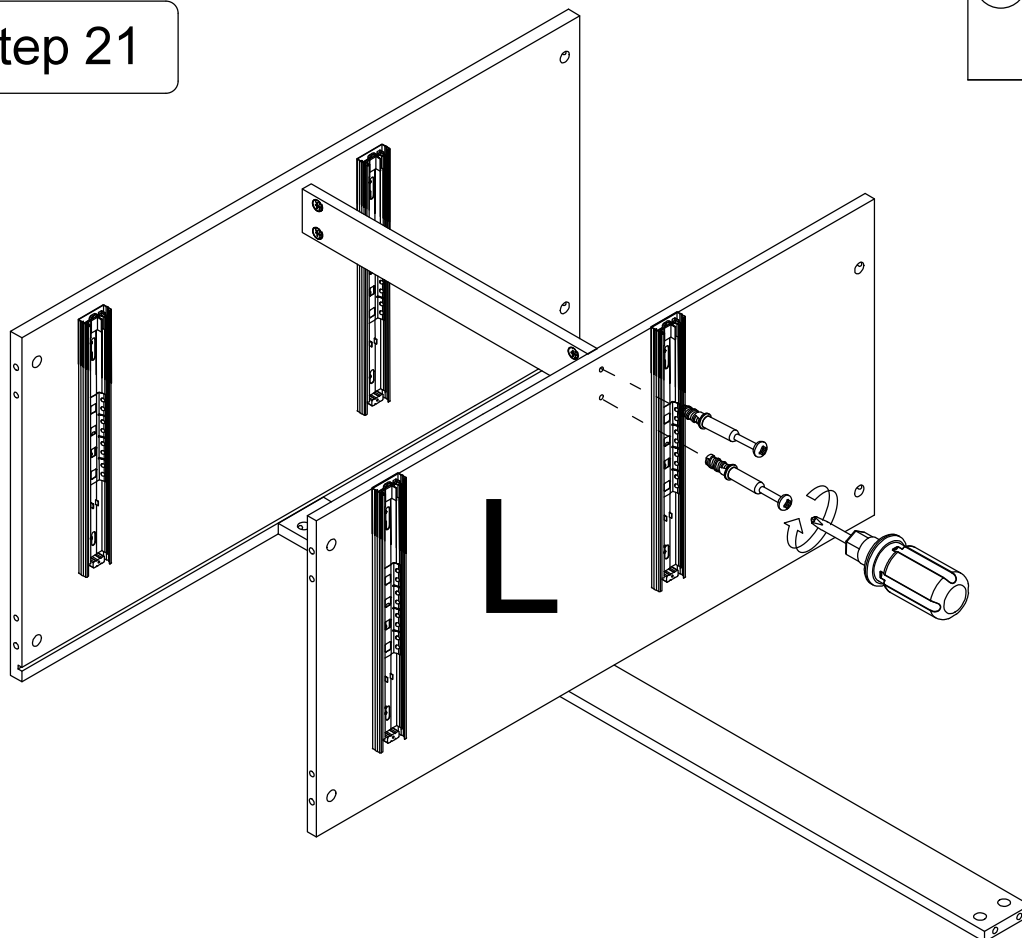



Step 22



2

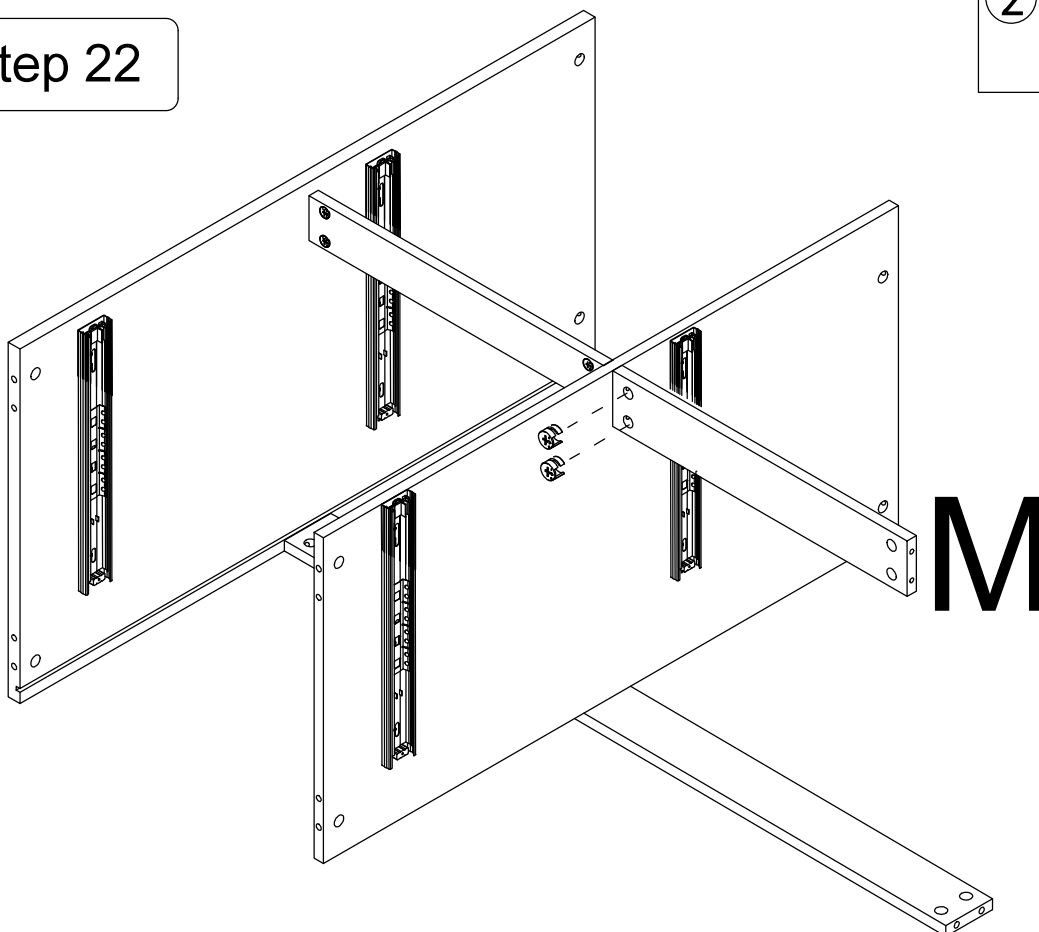

Step 23

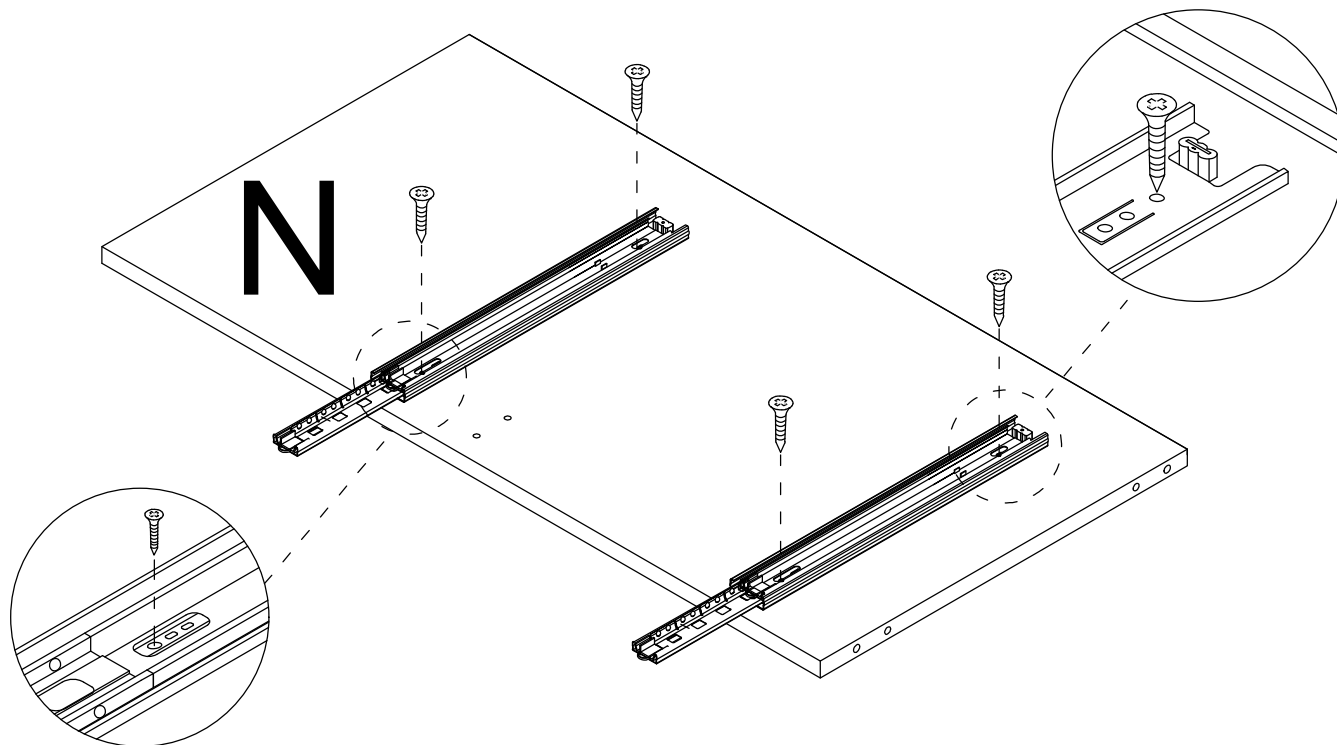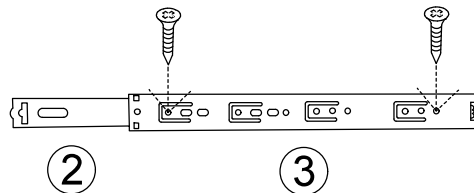


Step 24

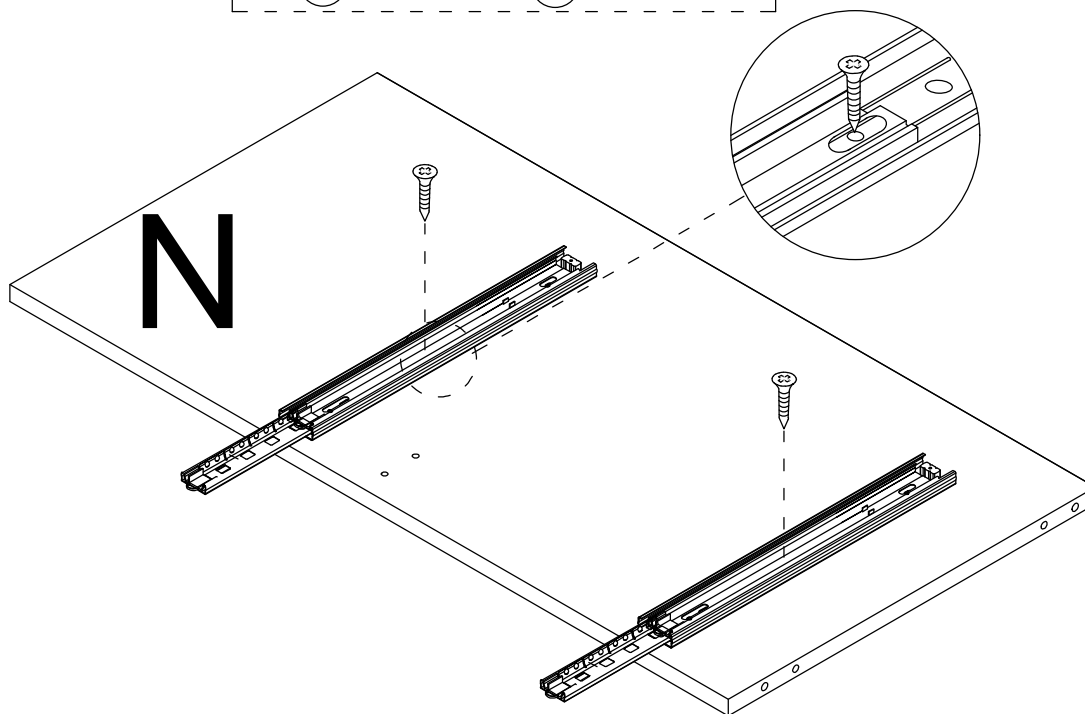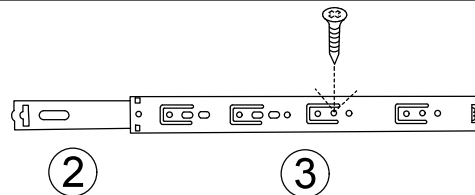


Step 25




4



x2




x4

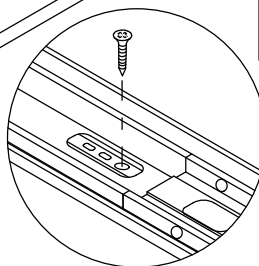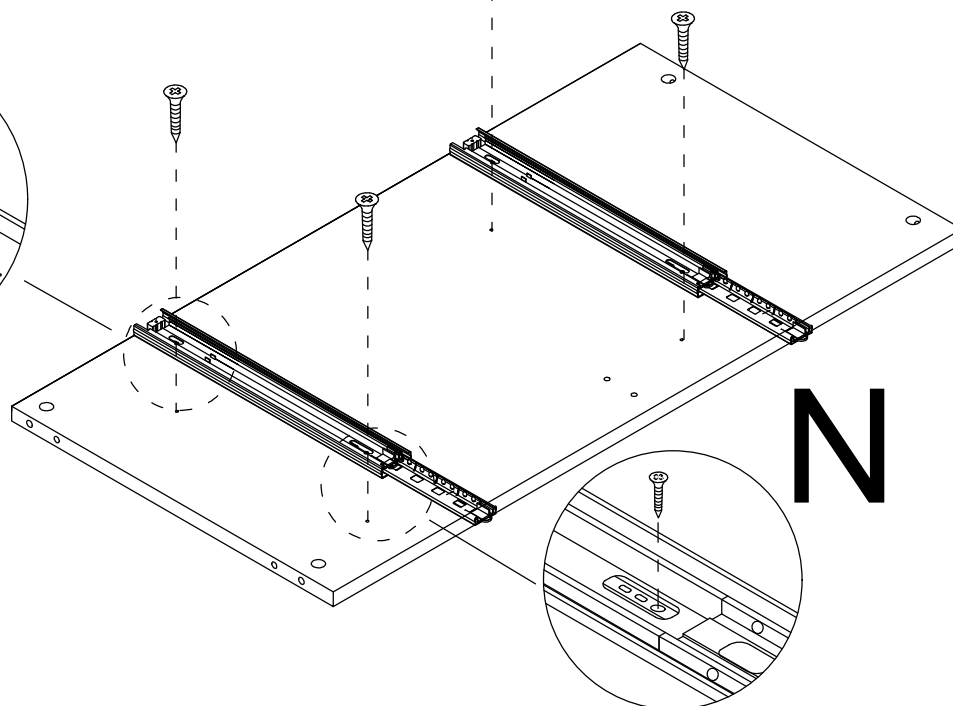
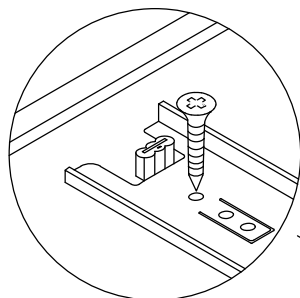


Step 26



4





x2

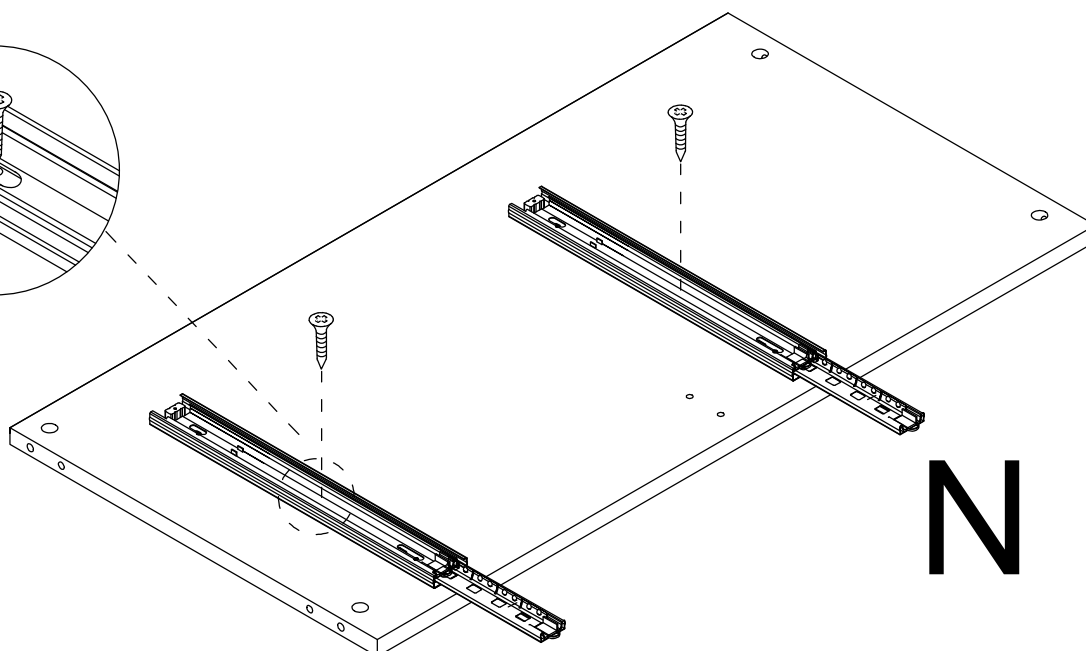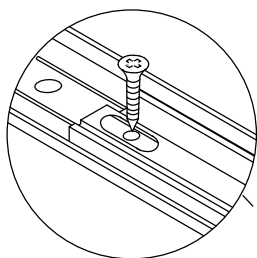



Step 27

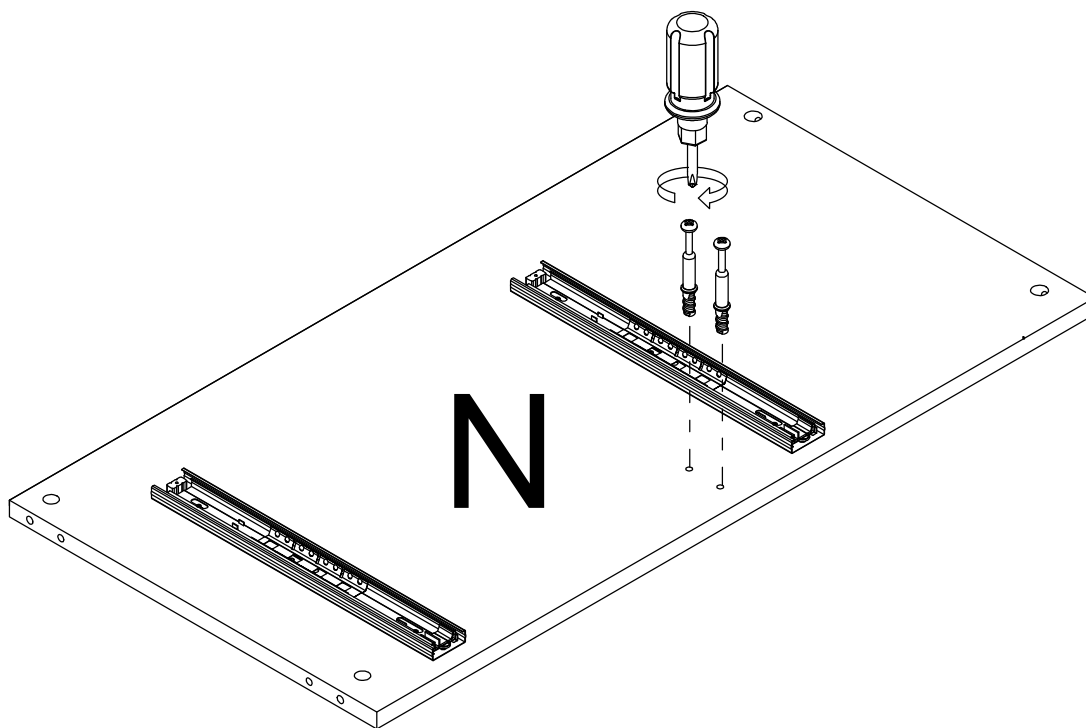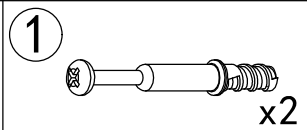



Step 28

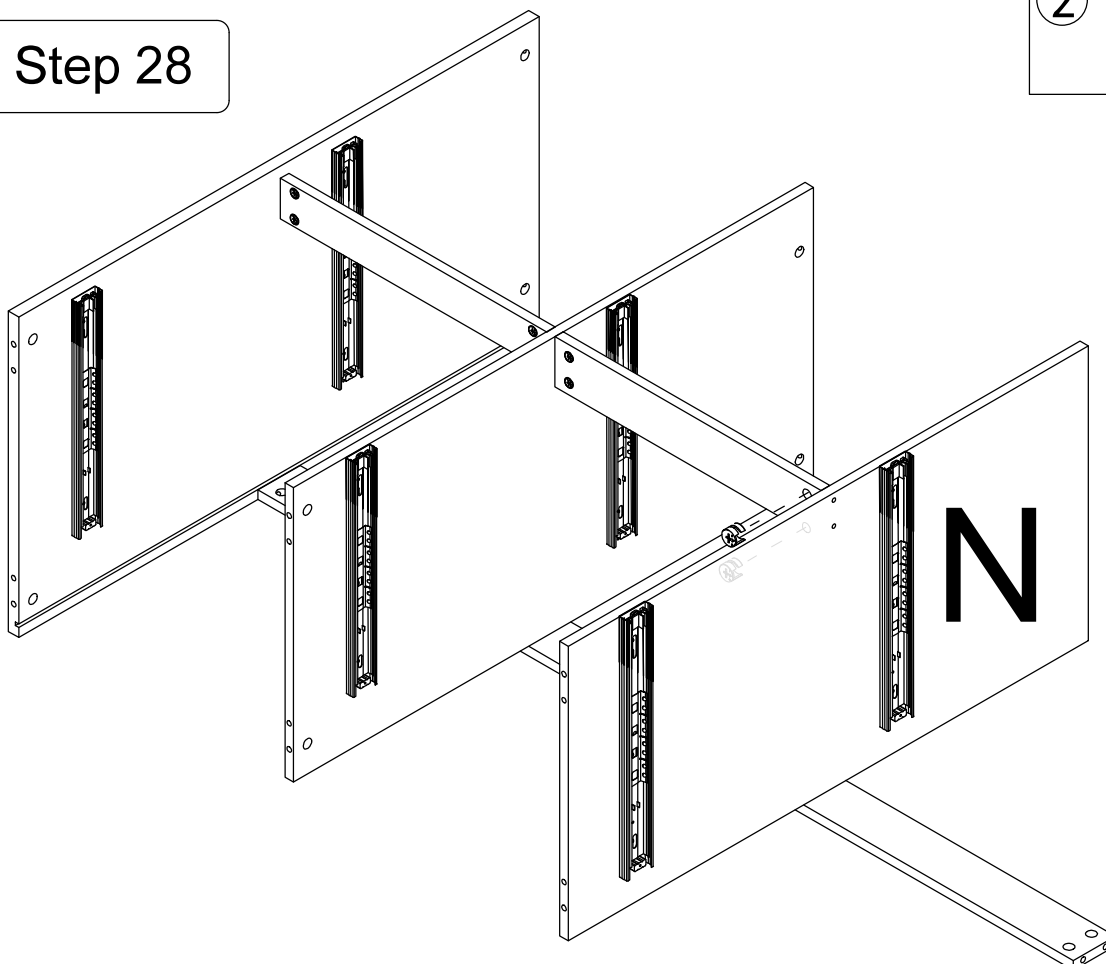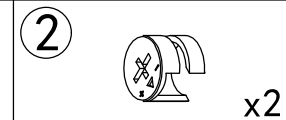






Step 29

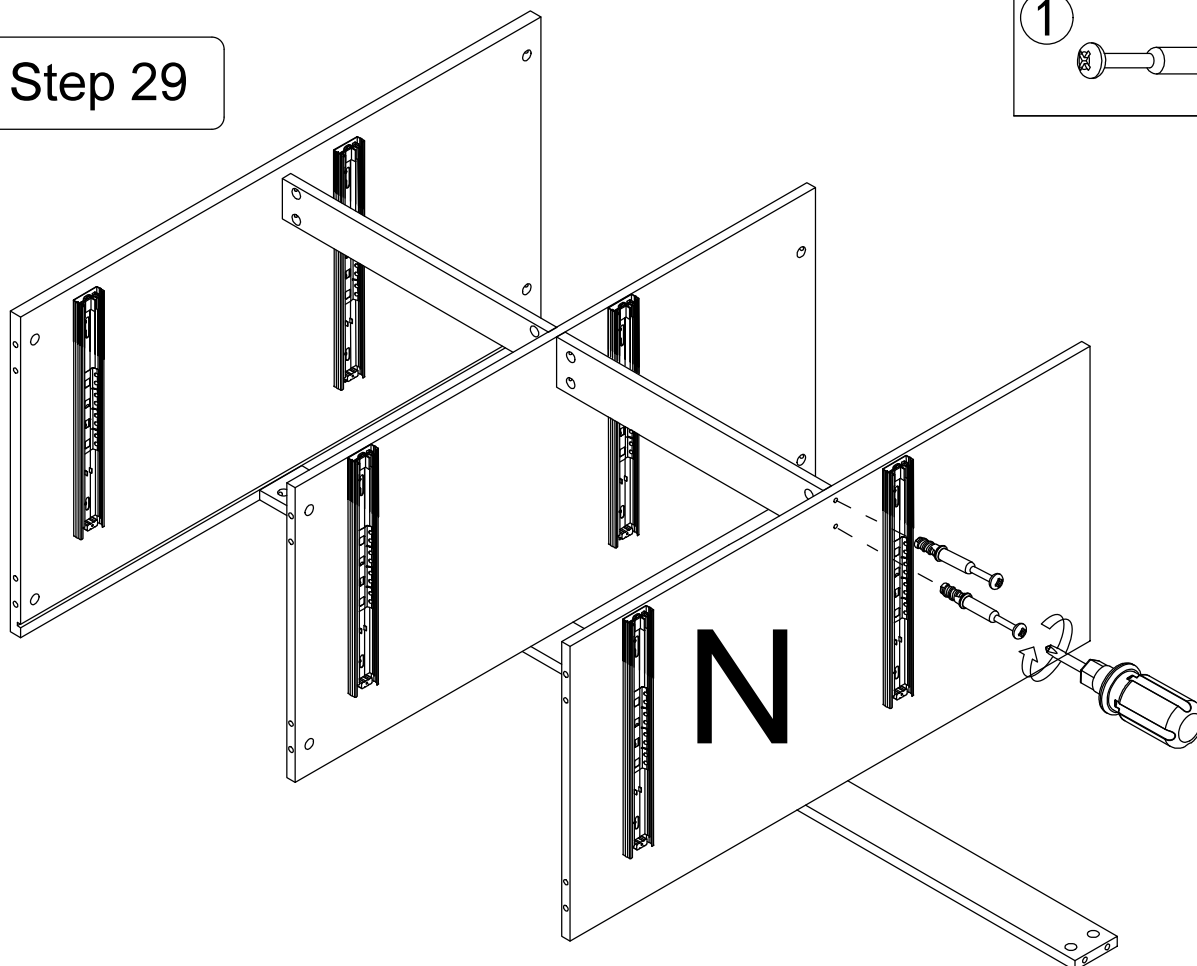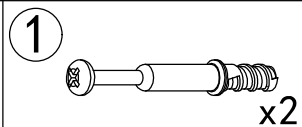

Step 30

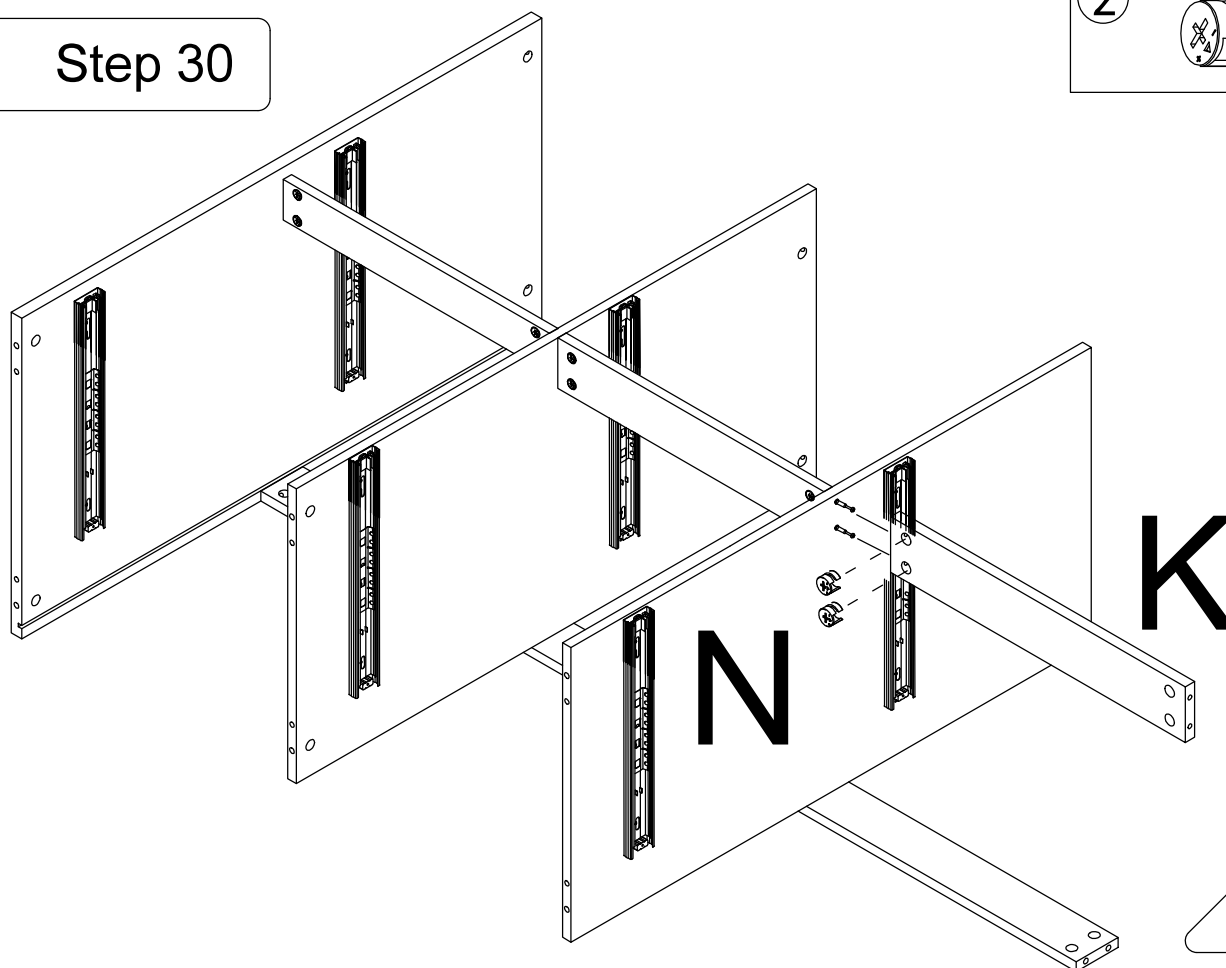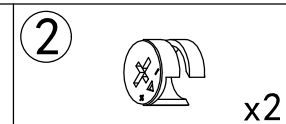


Step 31

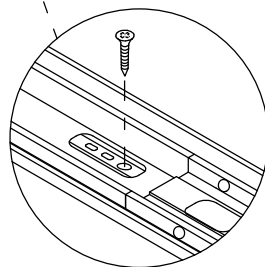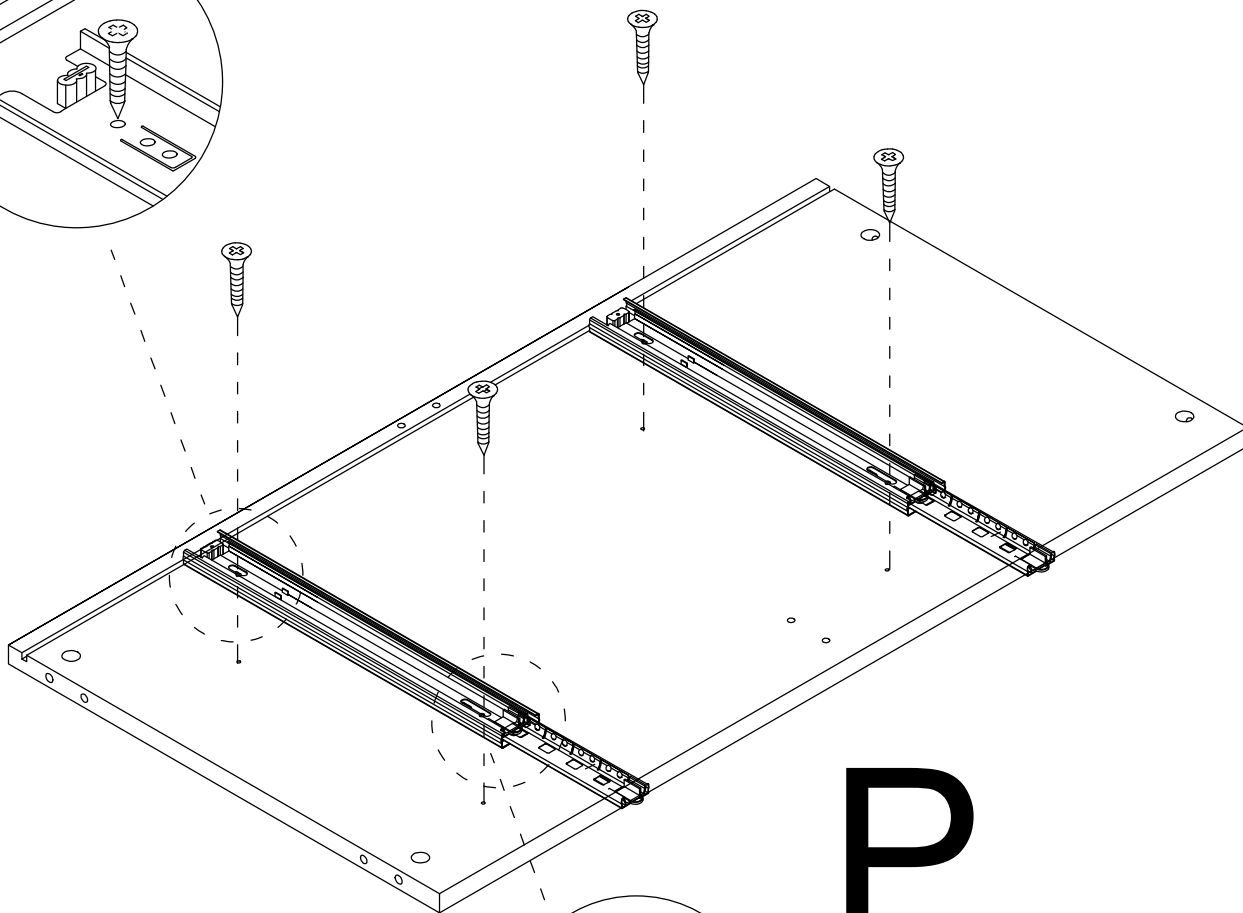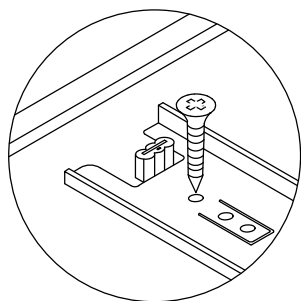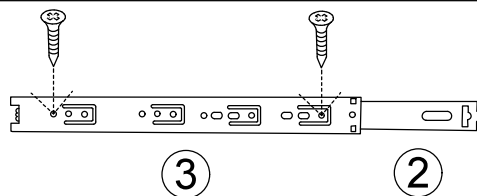

P


Step 32

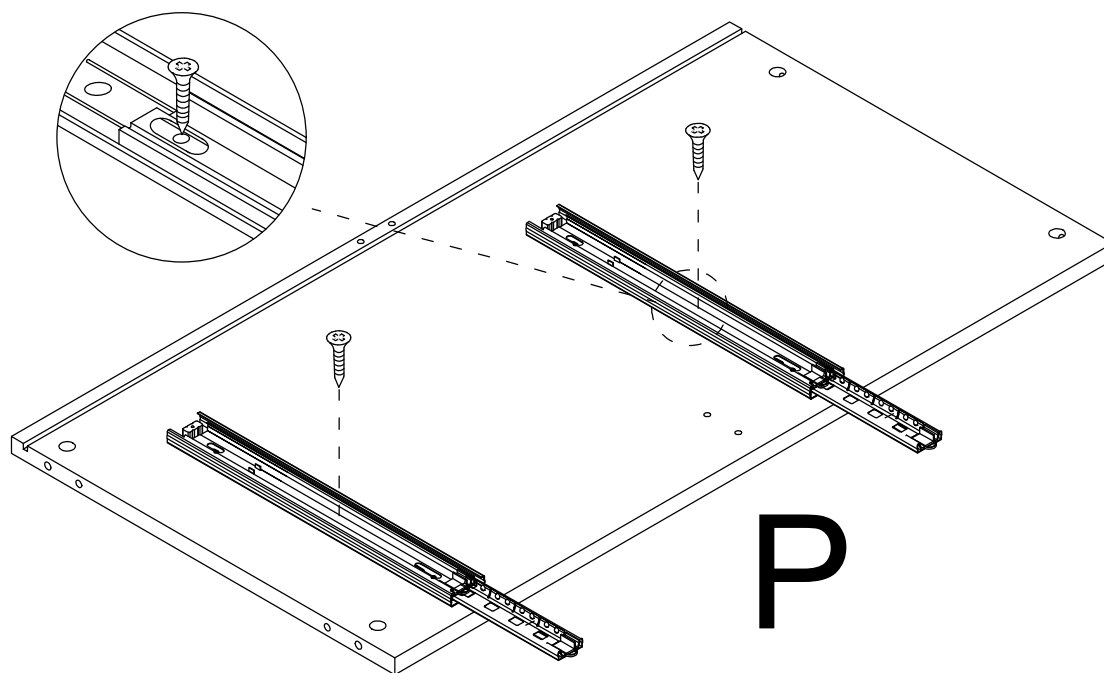

4

x2

Step 33

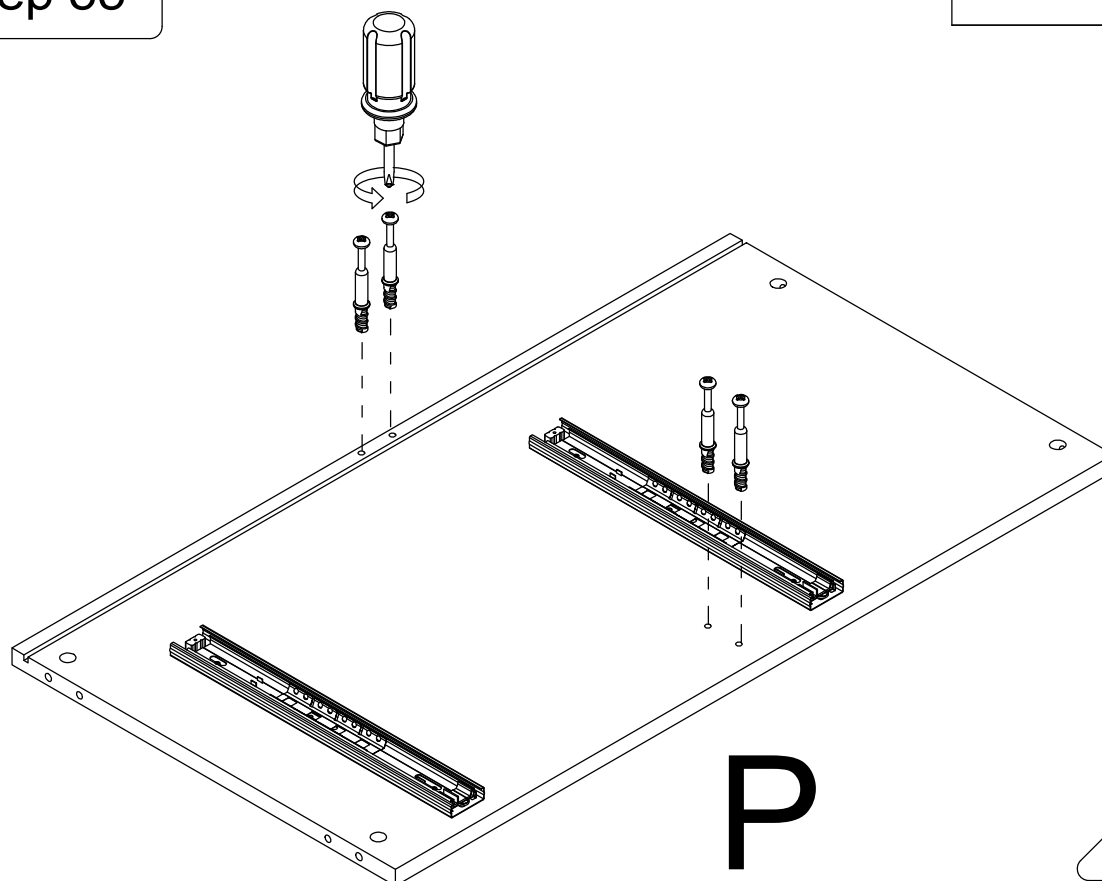

1

x4

P


24

Step 34

2




x4

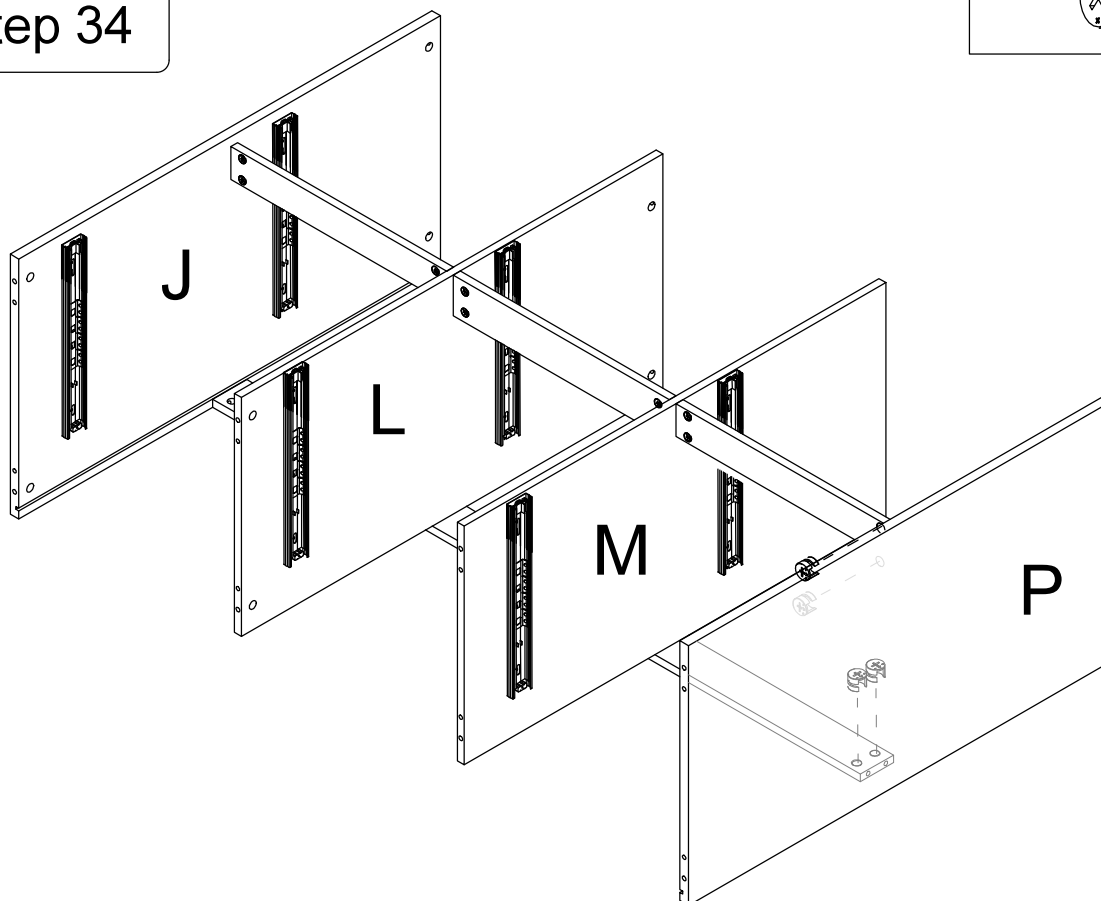


Step 35

3



x8

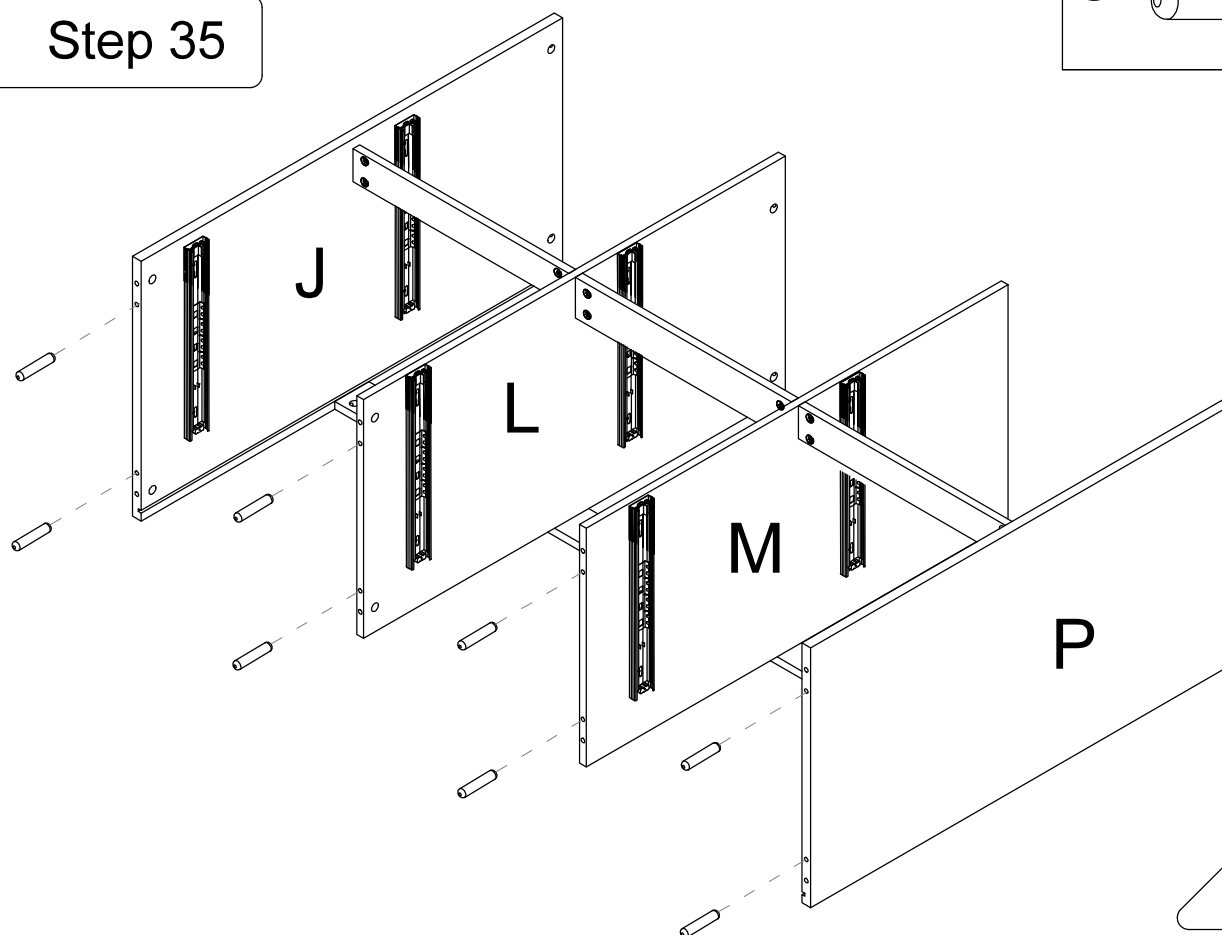


Step 36


2




x8

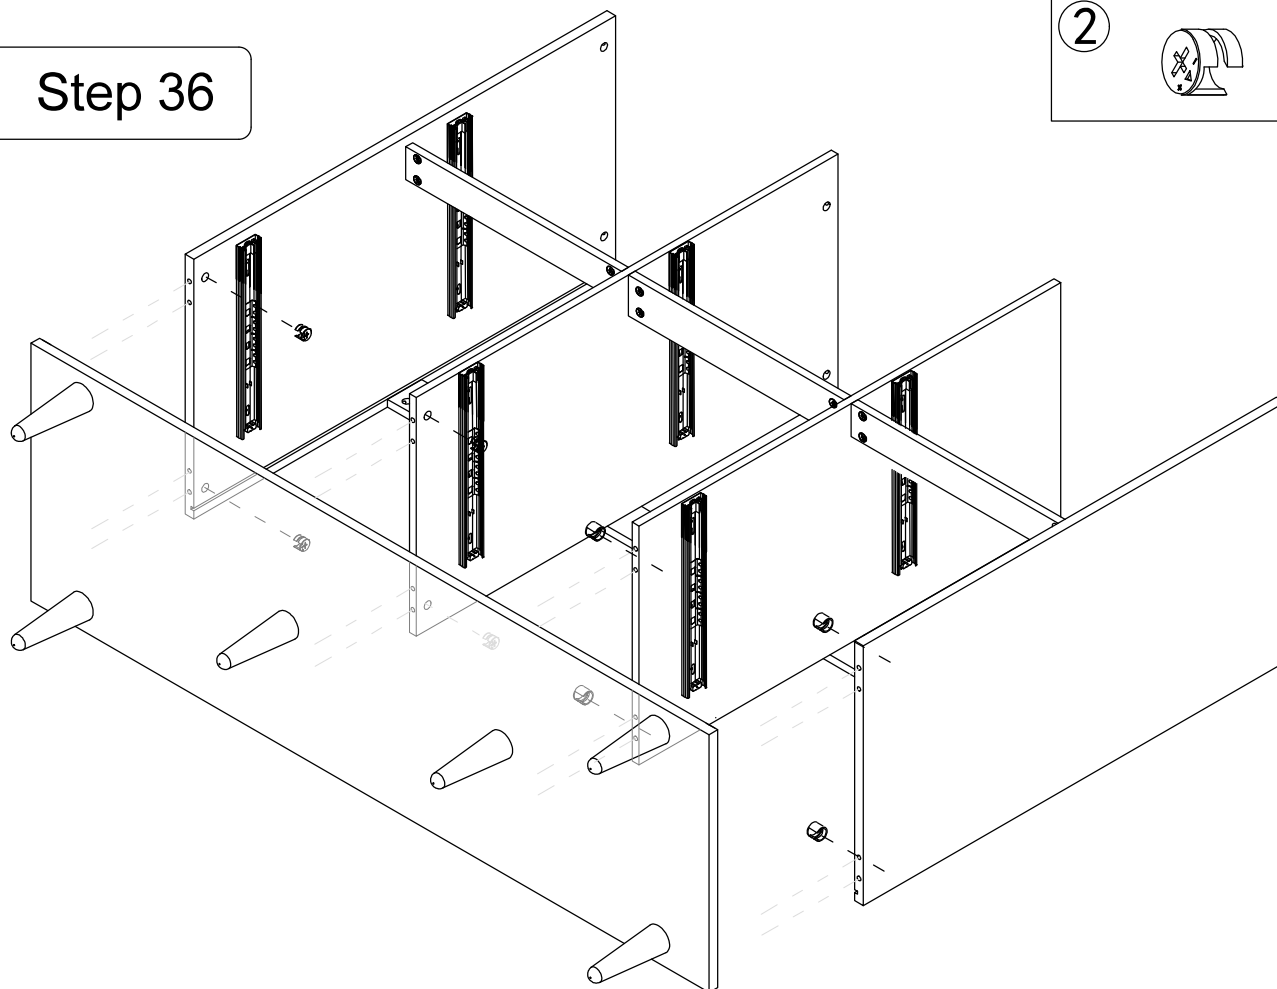

Step 37

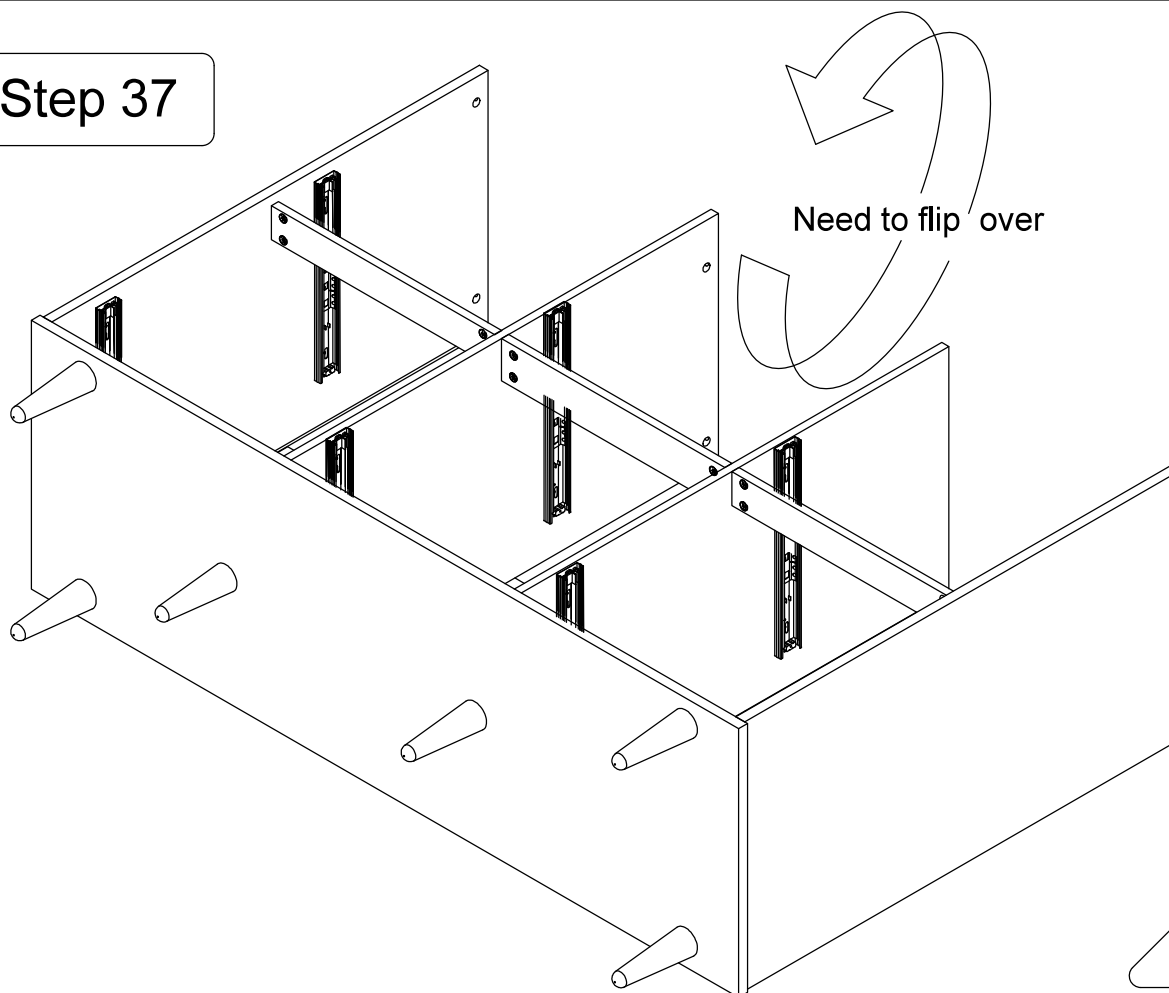

Step 38

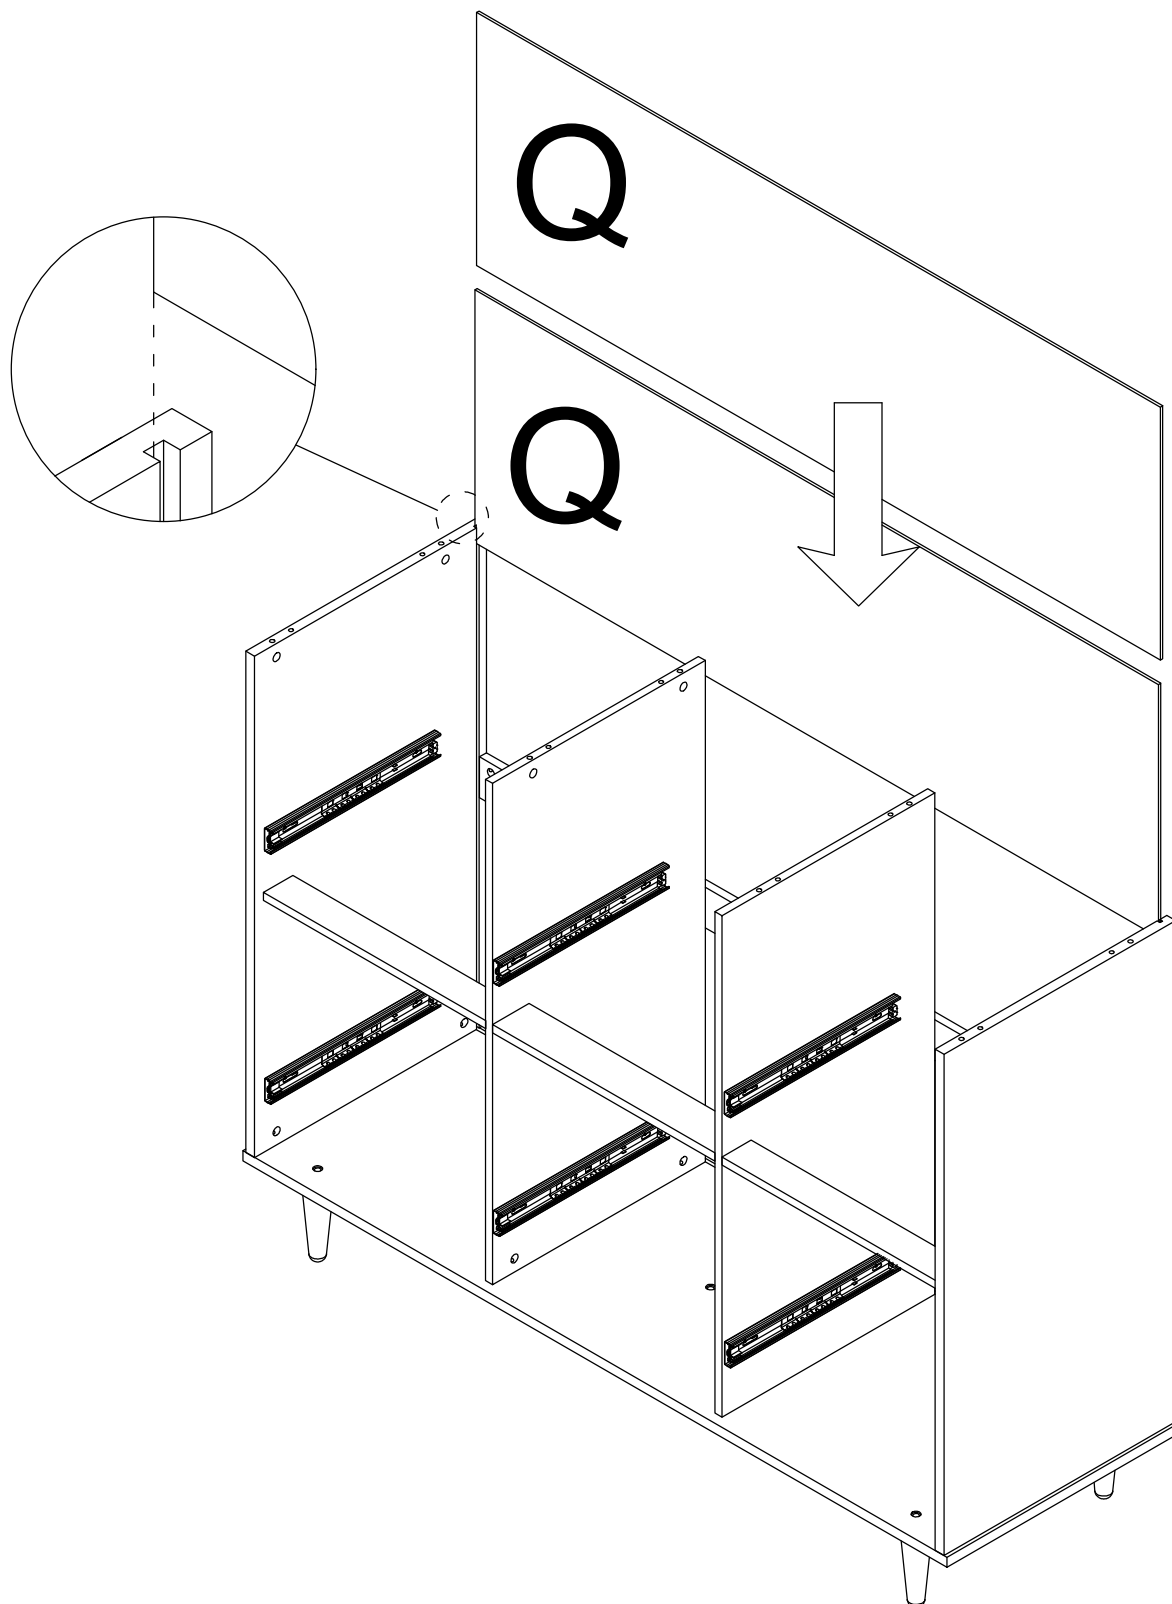


Step 39

3




x8

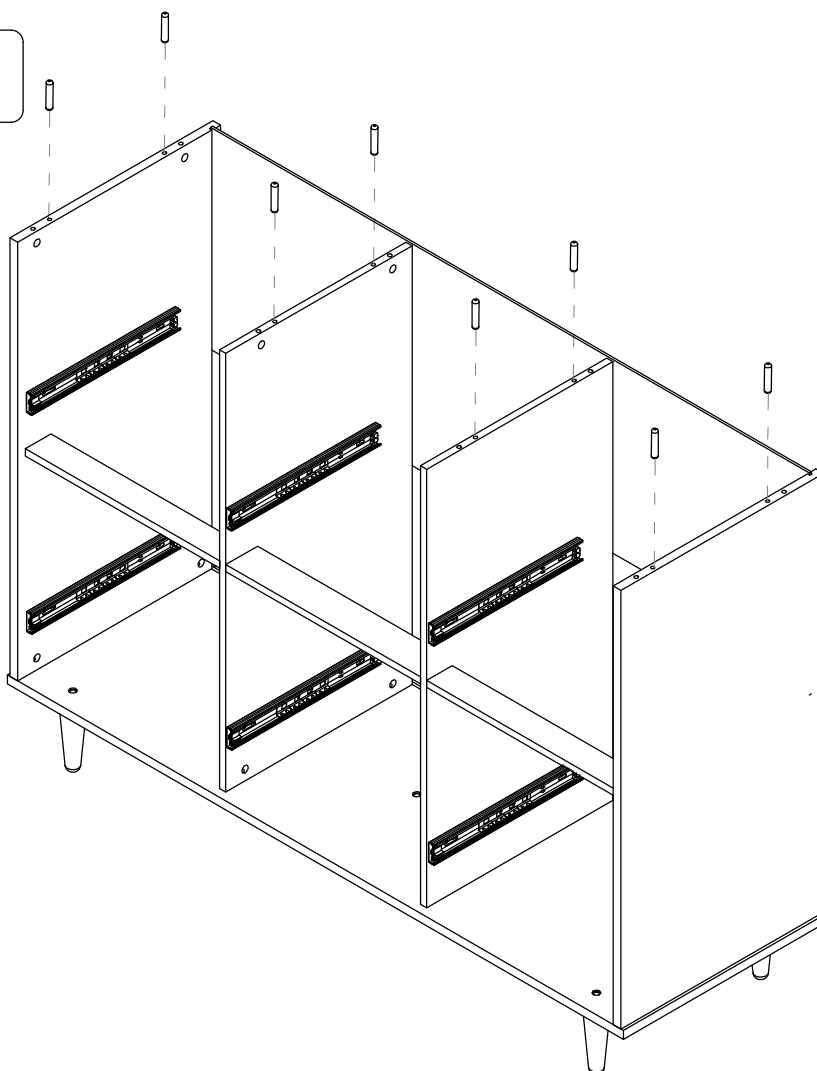


Step 40

1



x8

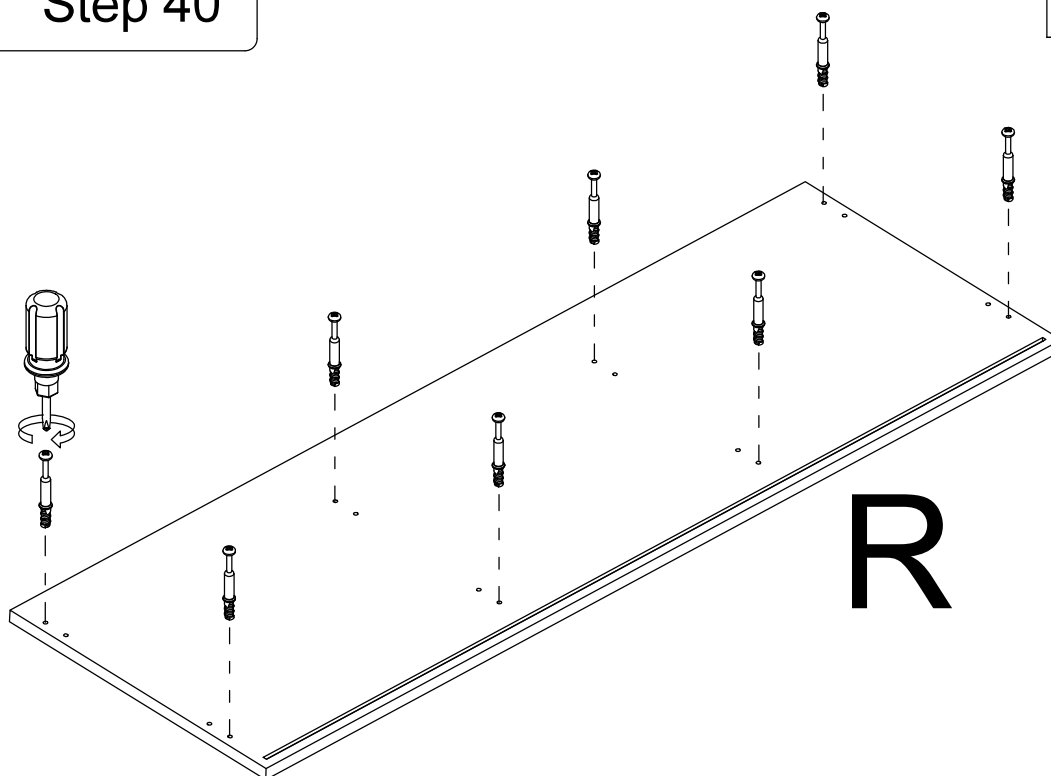


Step 41


2



x8

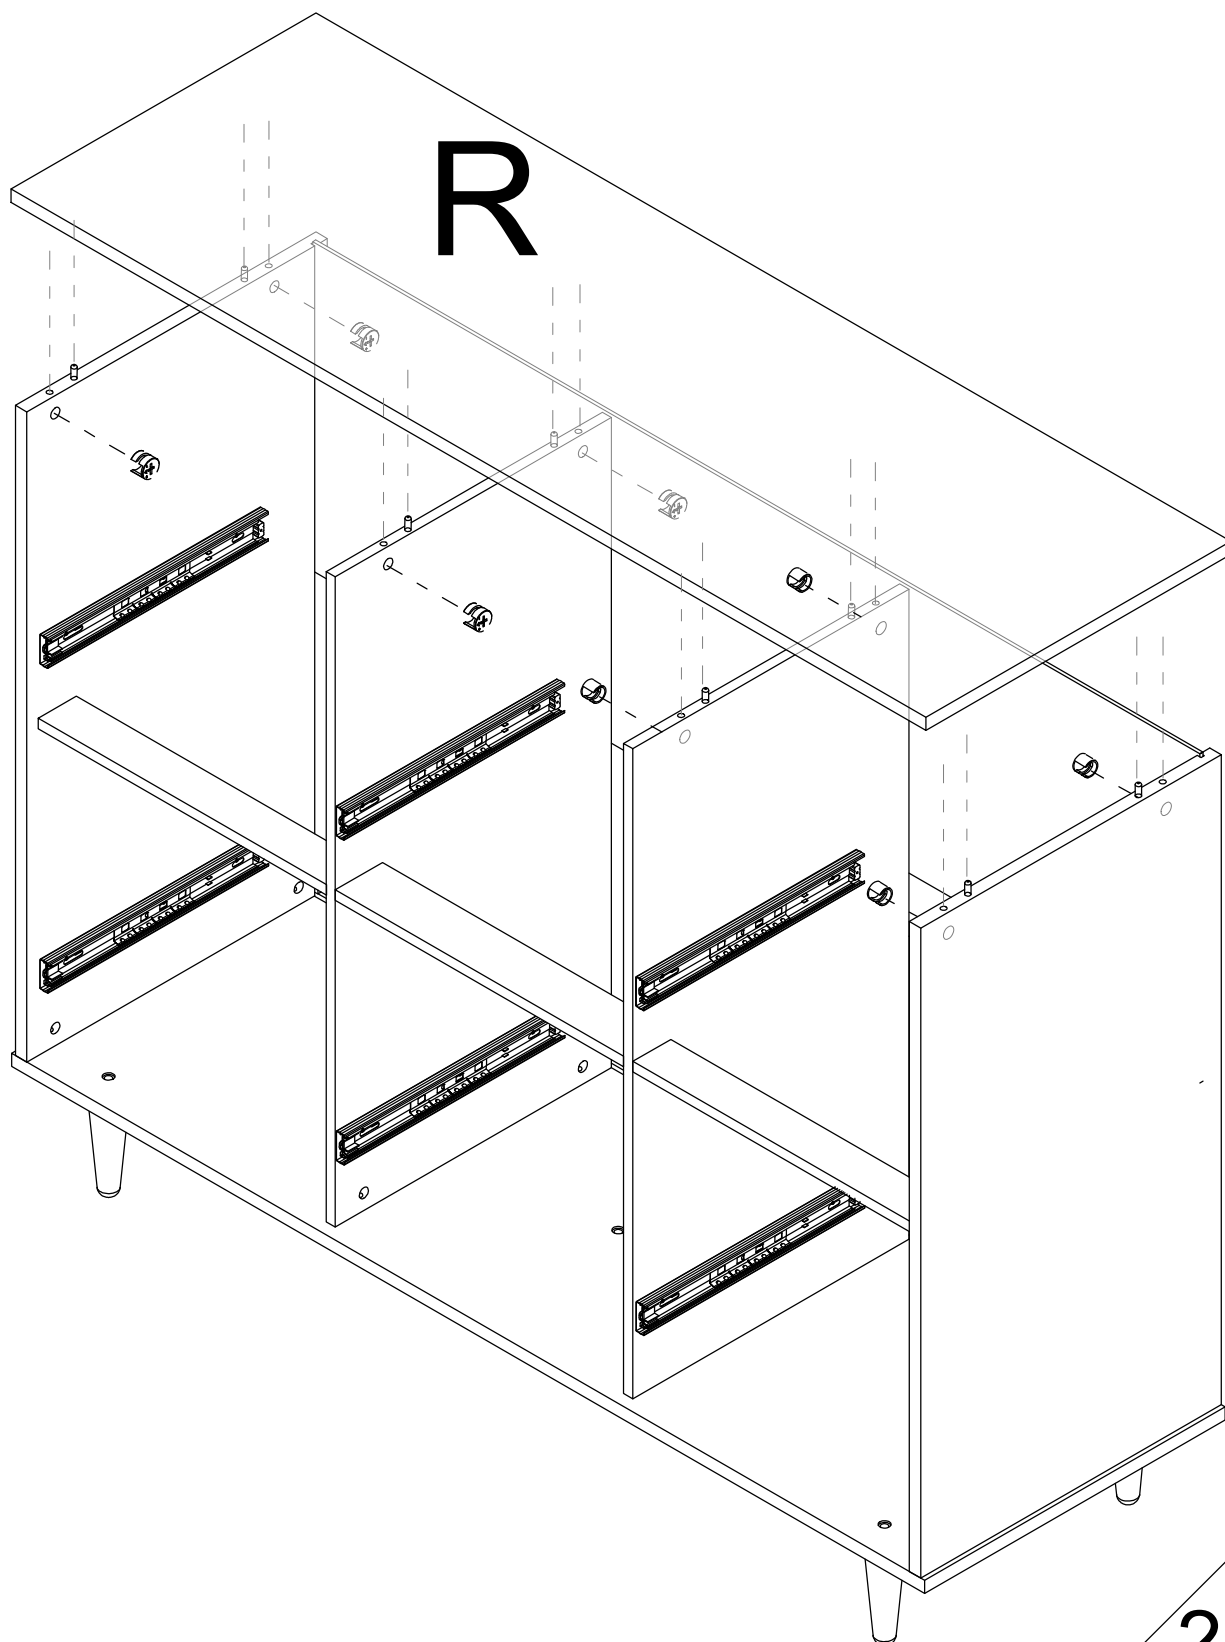


Step 42

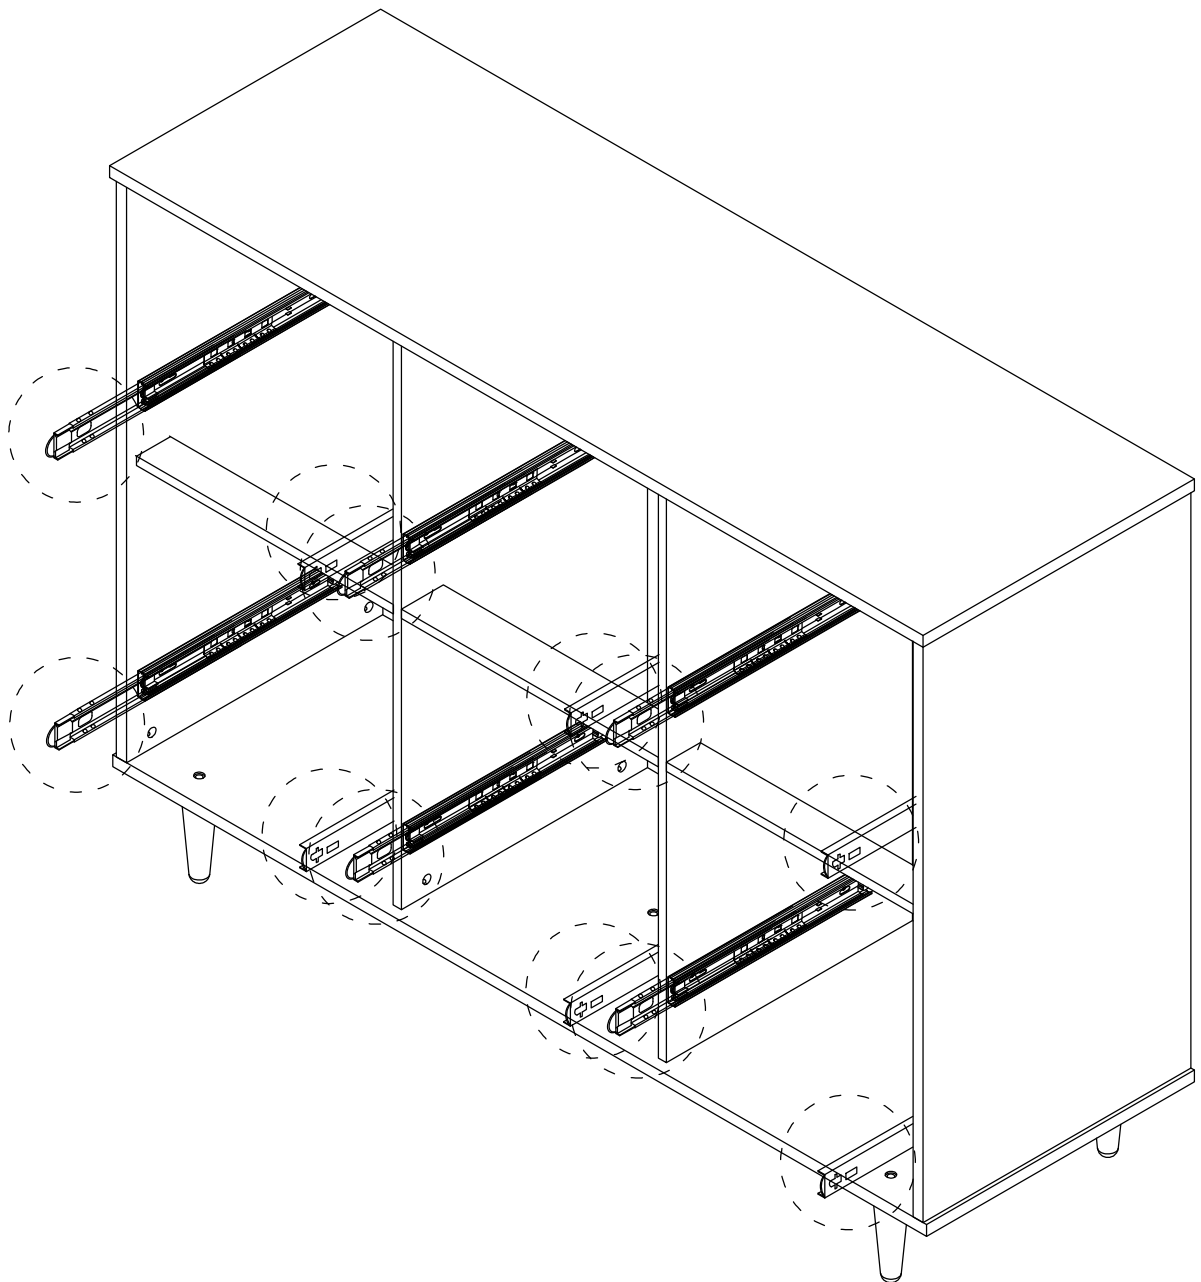





As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 43

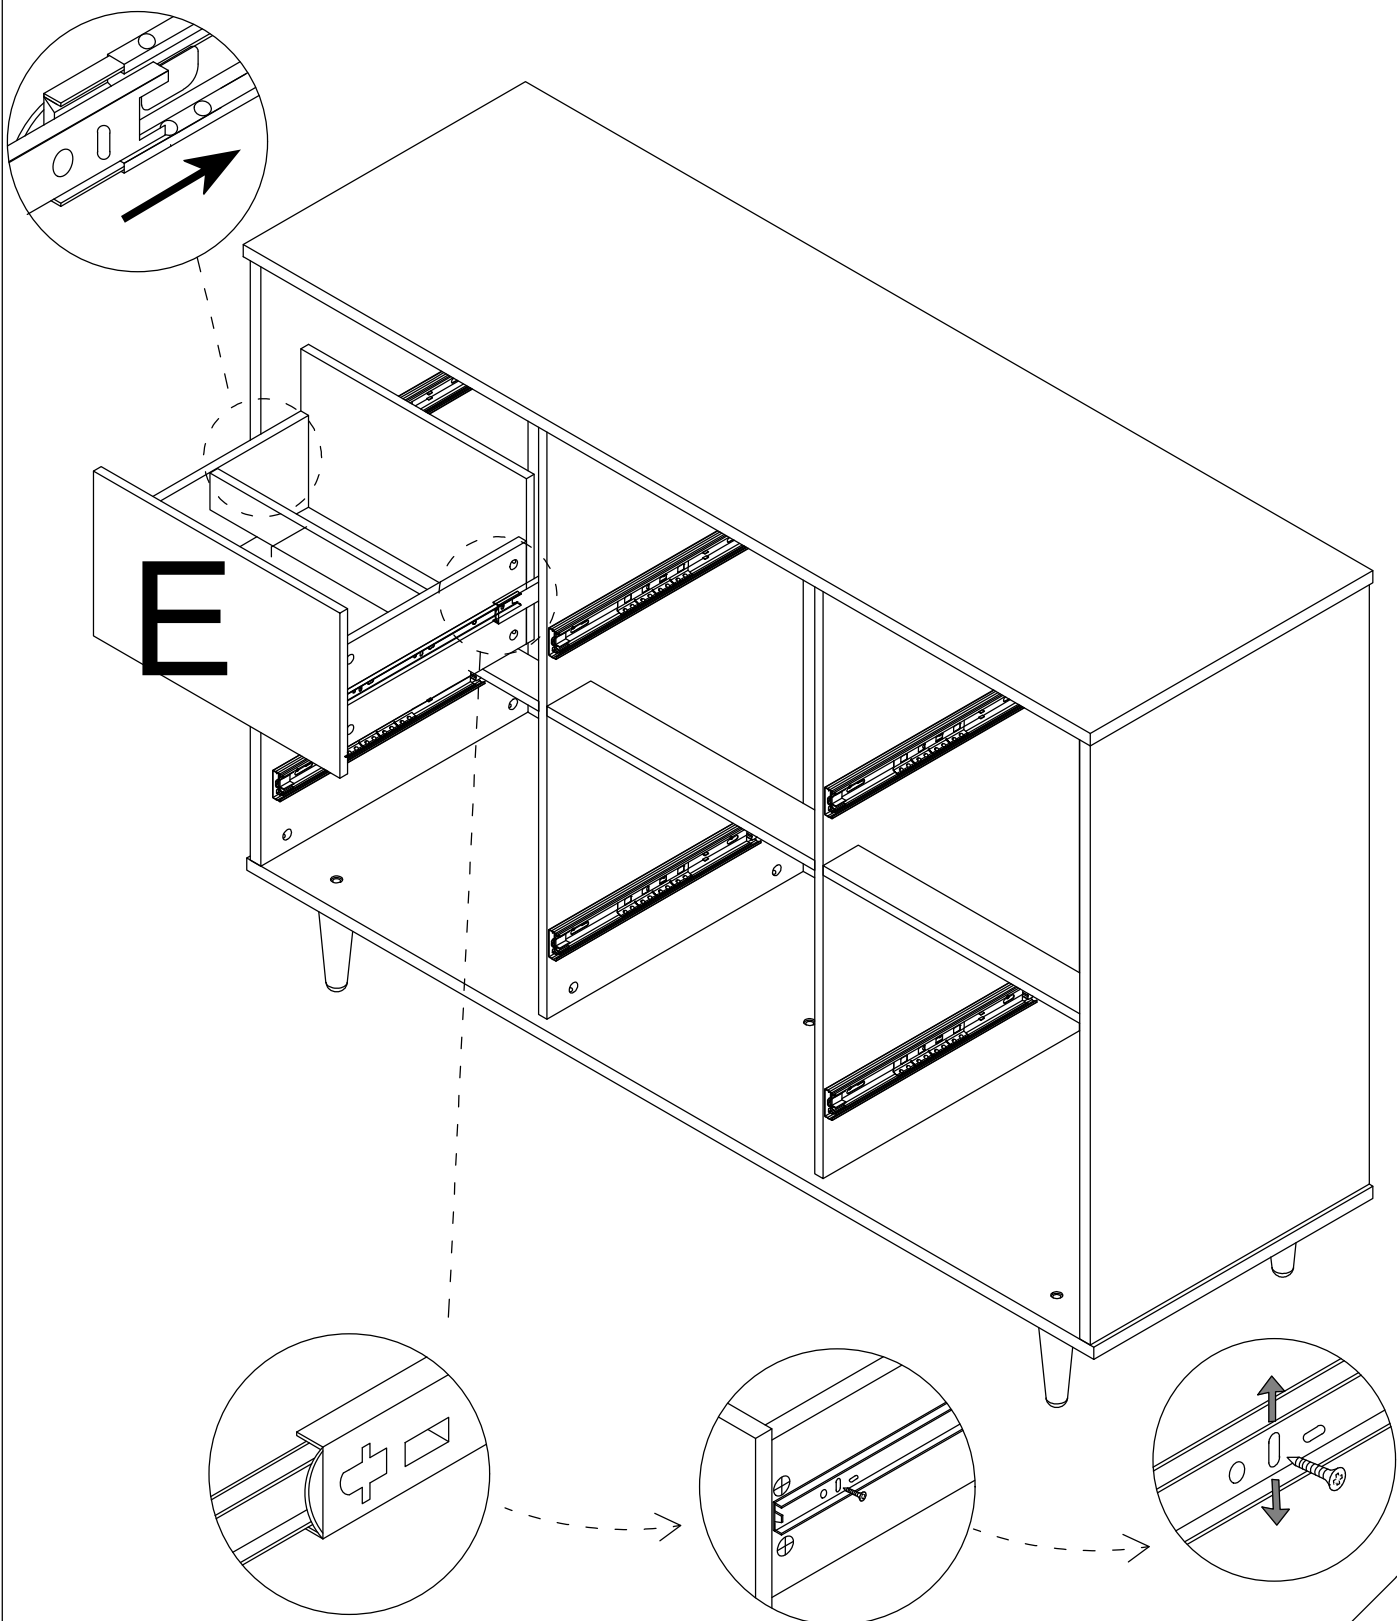

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 44

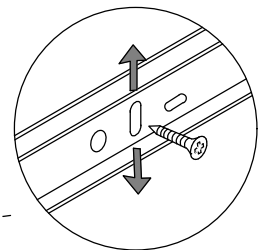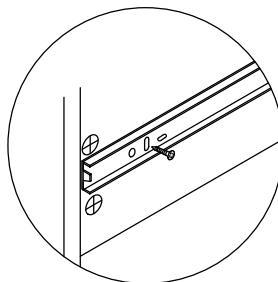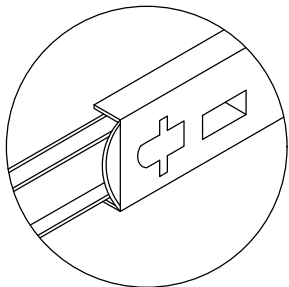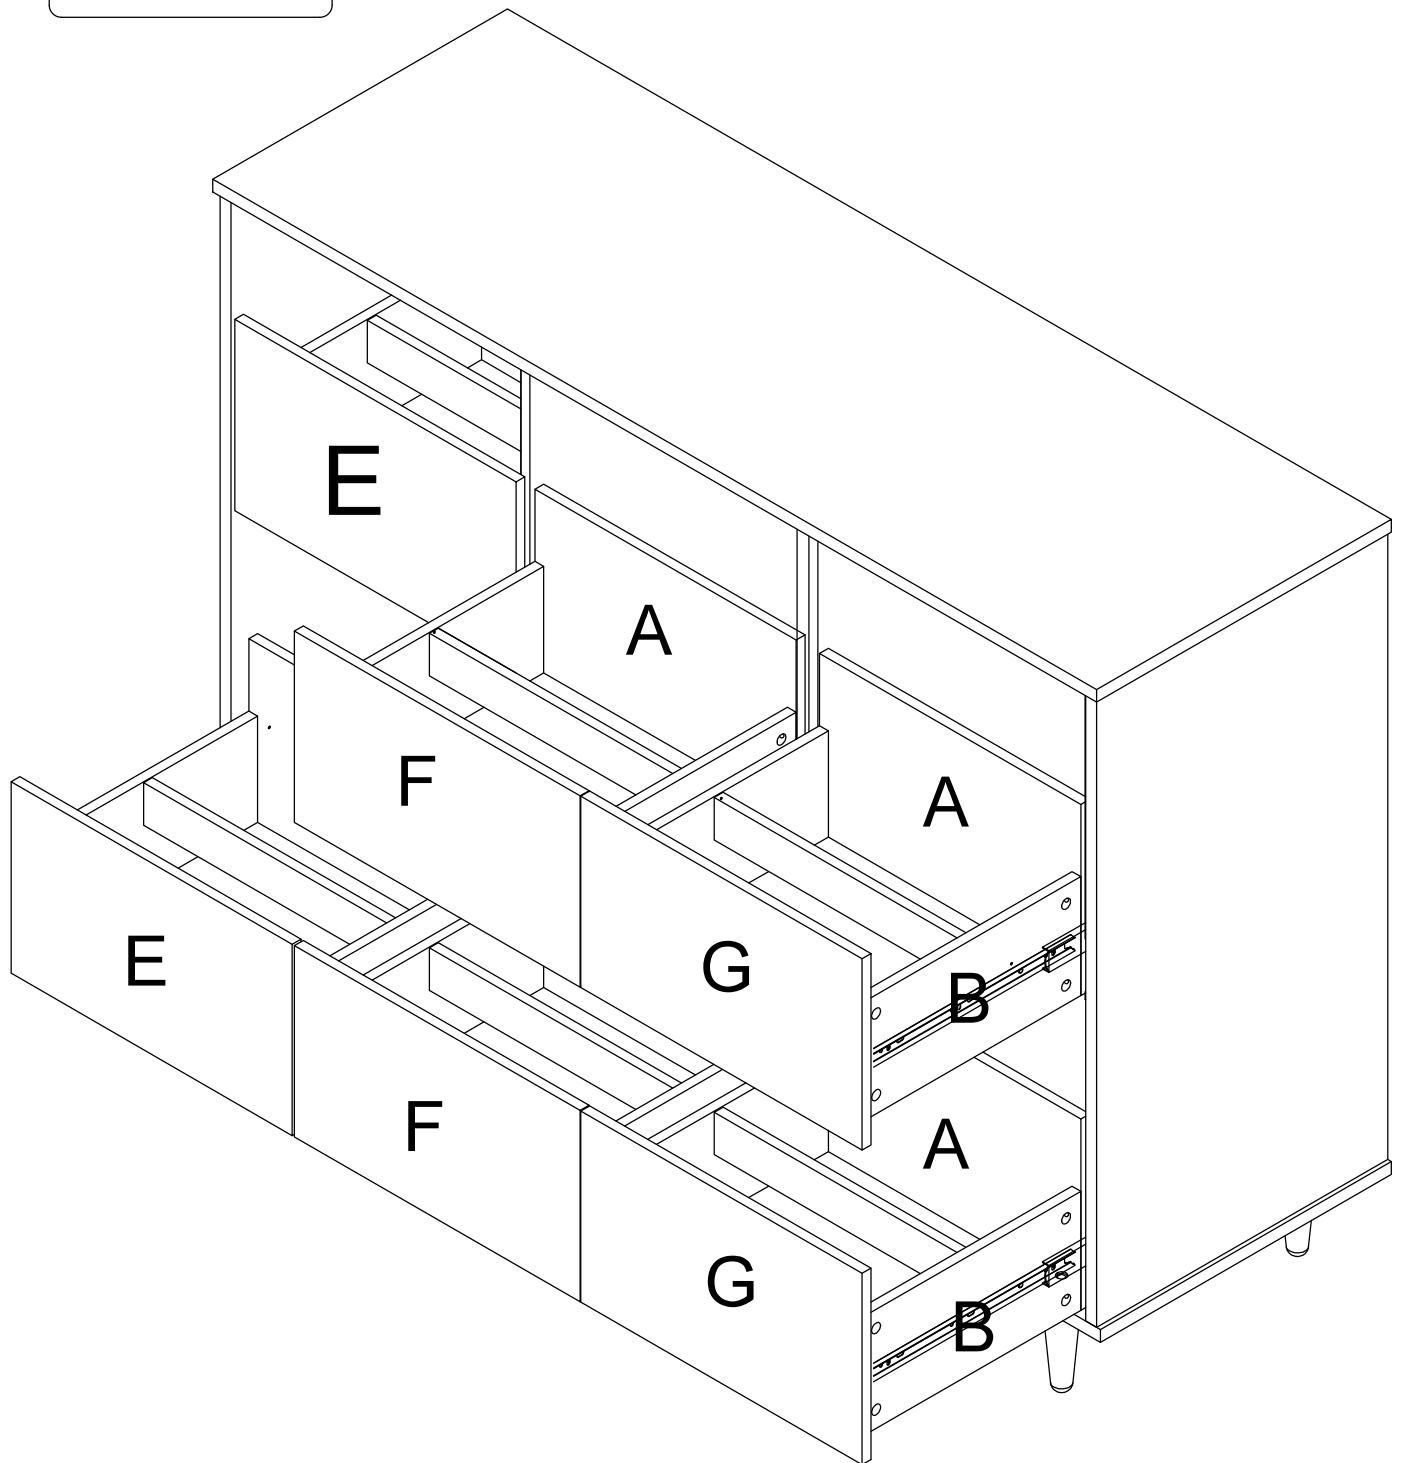


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 45

6

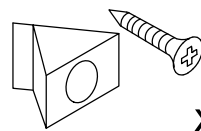

x12

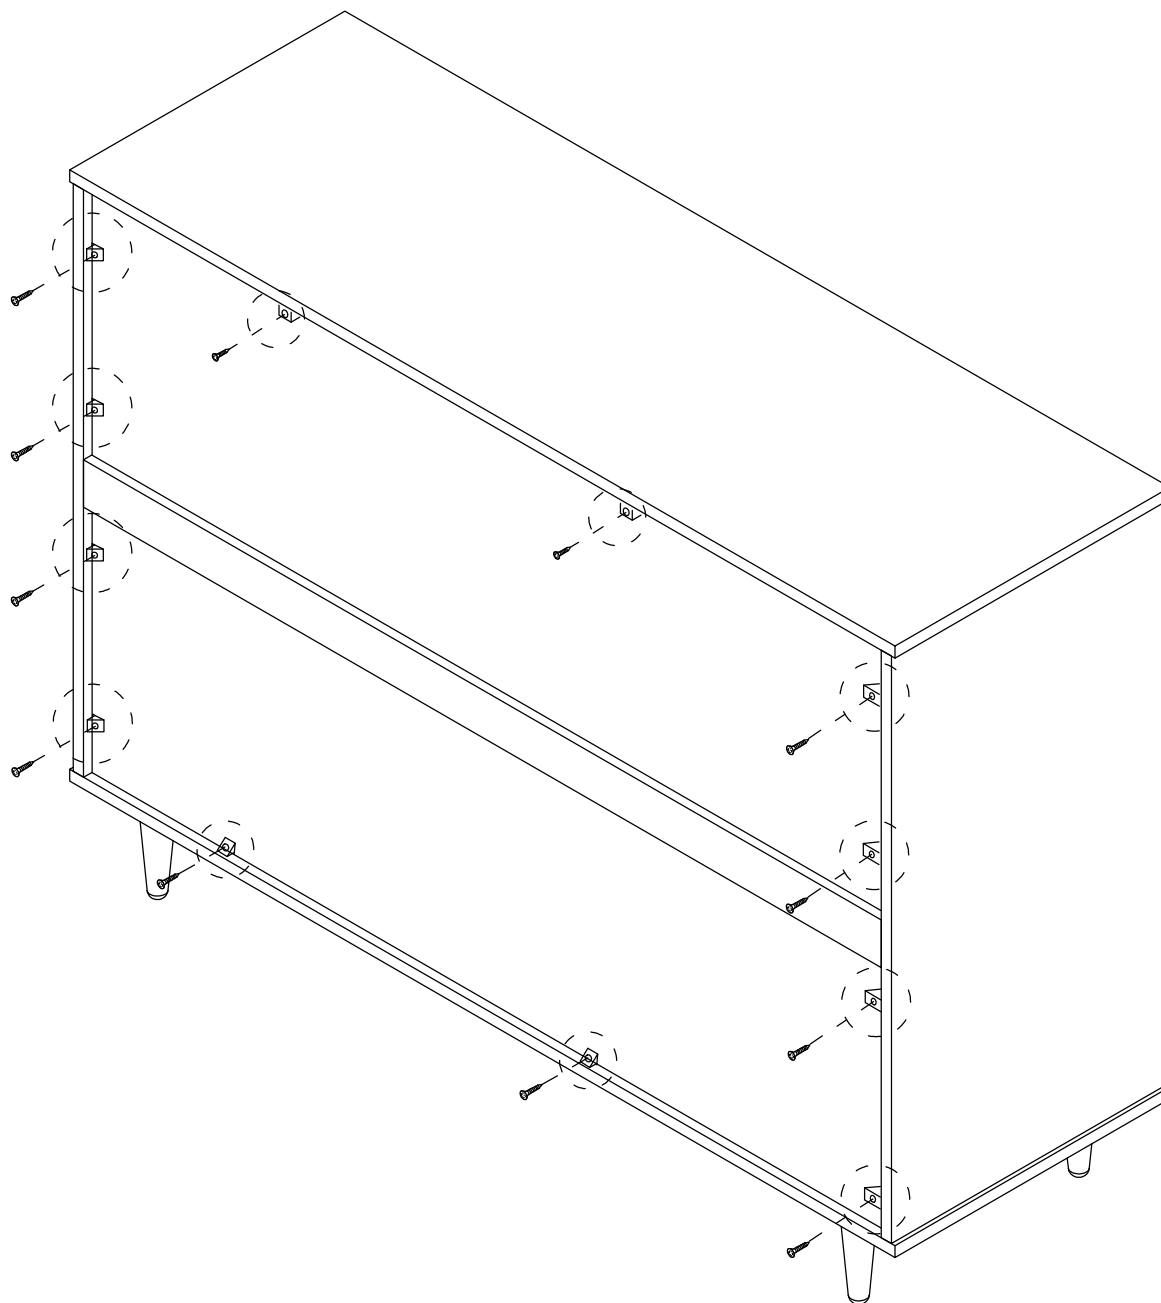

Step 46

7




1pcs



1pcs





1pcs

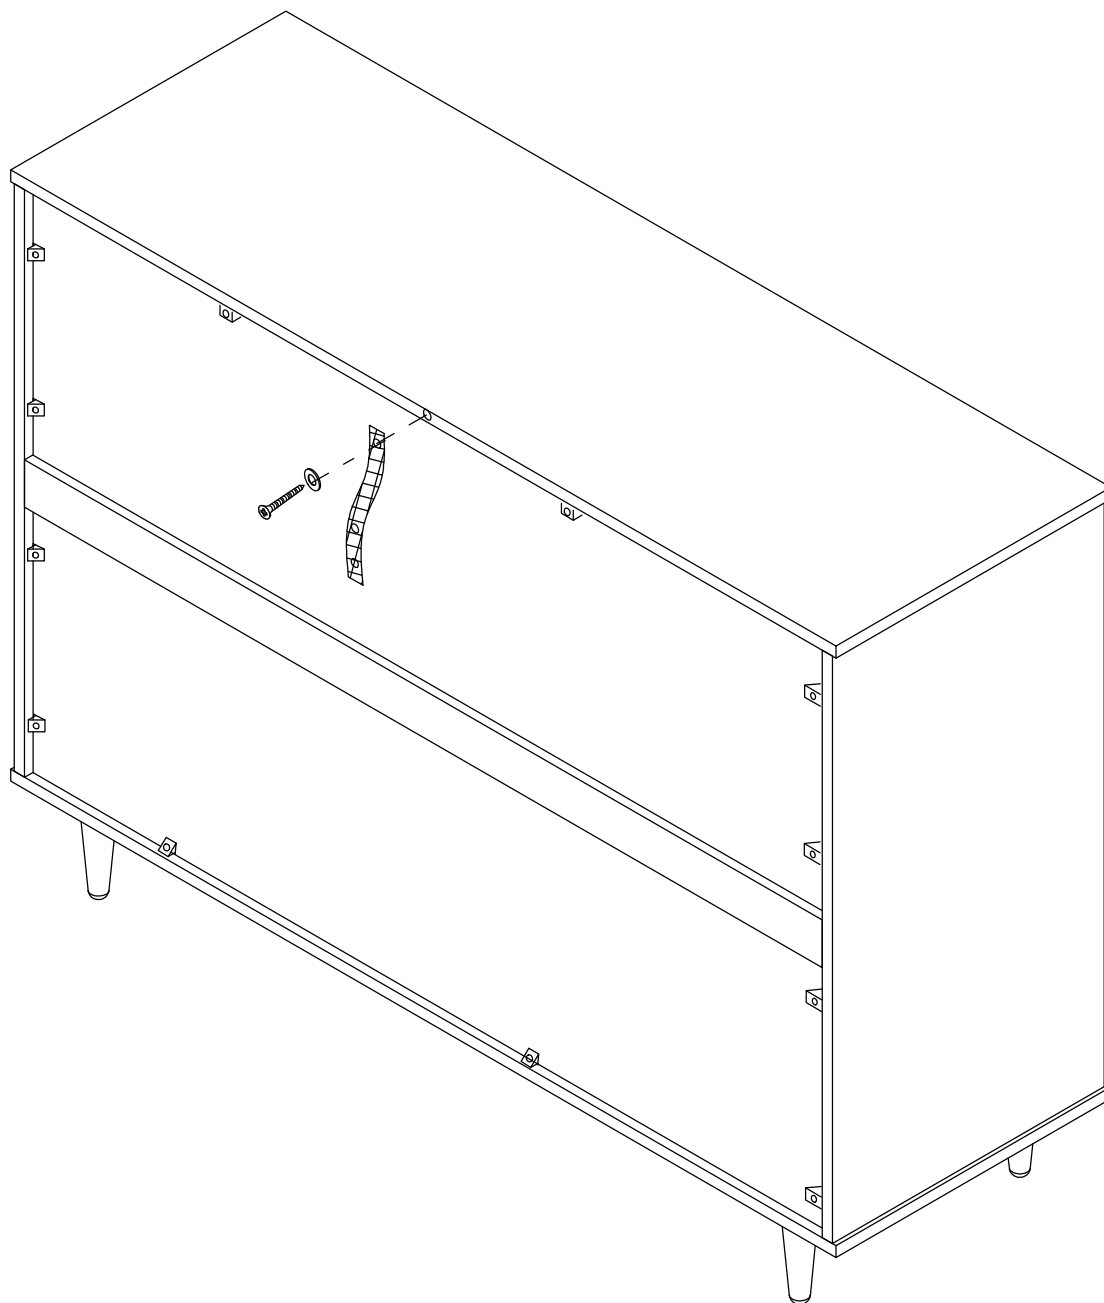

Step 47

use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

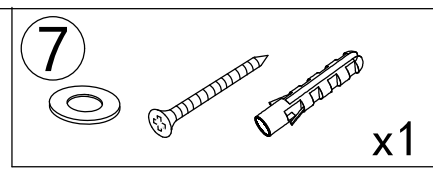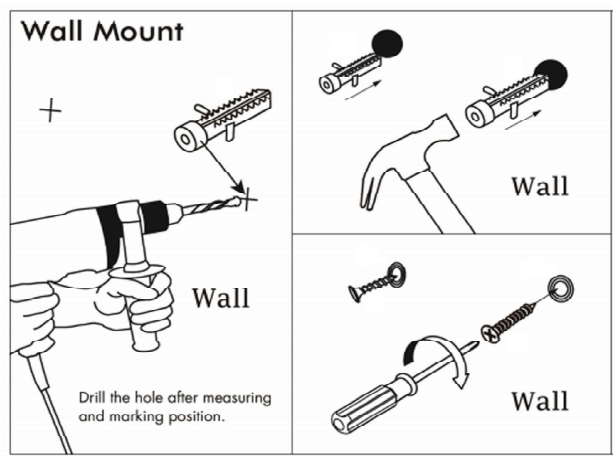

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Use a tape drill to make holes in the wall that are suitable for the product screws.

