










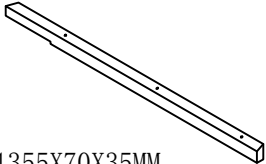
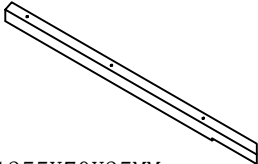
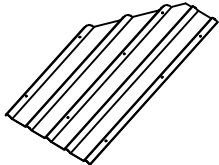
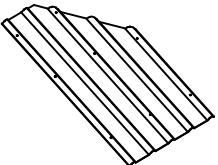
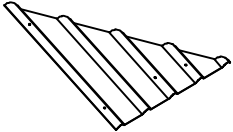
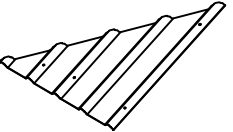


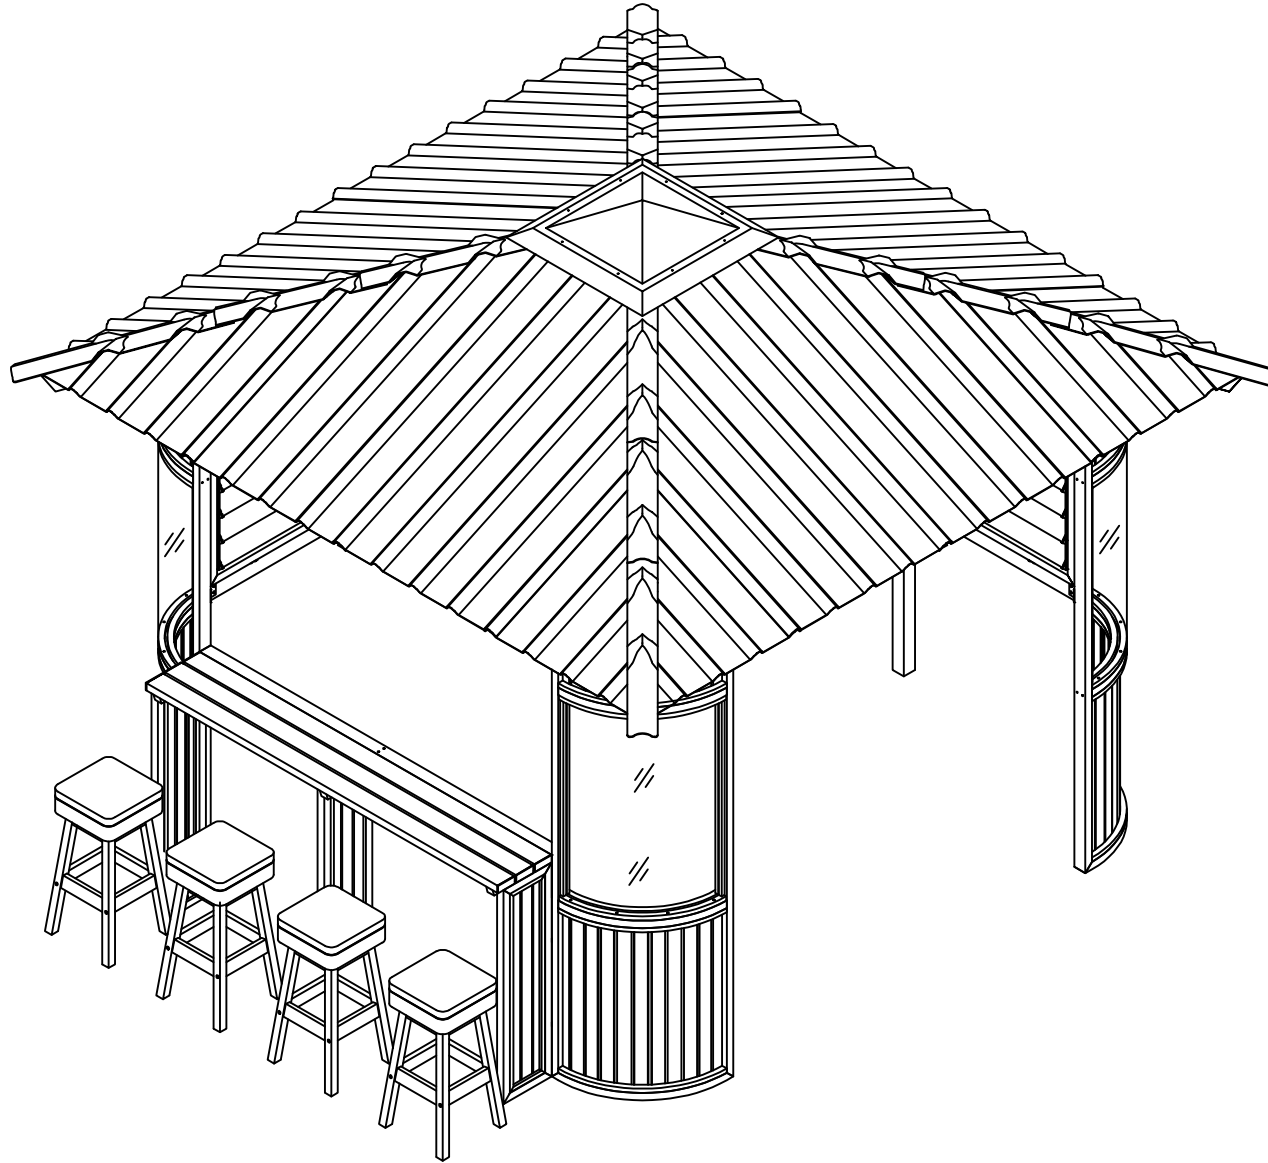
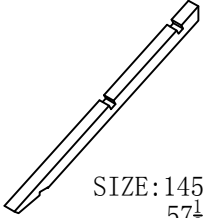













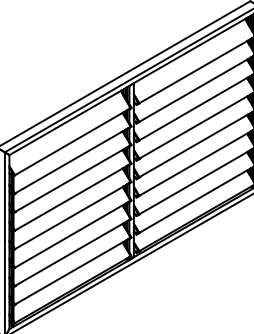





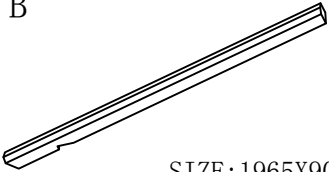

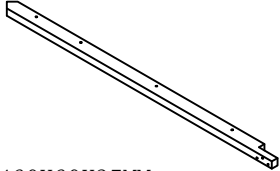



# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

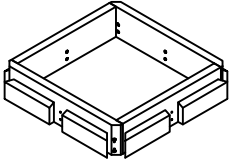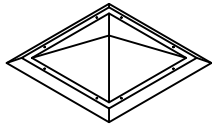
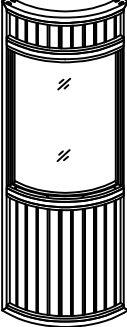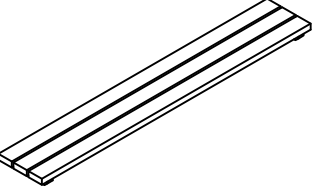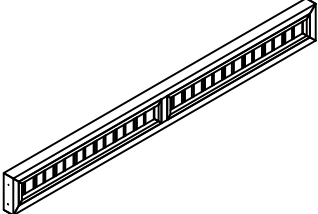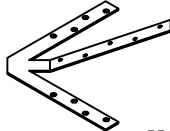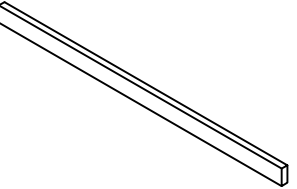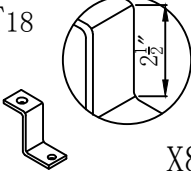
# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


|   |   |  |  |
|---|---|--|--|
| <p>A</p>  <p>SIZE: 1450X80X70MM<br/>57<sup>1</sup>/<sub>8</sub>"X3"X2<sup>3</sup>/<sub>4</sub>" X4</p>                               | <p>B</p>  <p>SIZE: 1965X90X70MM<br/>77<sup>3</sup>/<sub>8</sub>"X3<sup>1</sup>/<sub>2</sub>"X2<sup>3</sup>/<sub>4</sub>" X4</p>      | <p>C1</p>  <p>SIZE: 1460X60X35MM<br/>58<sup>1</sup>/<sub>2</sub>"X2<sup>3</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>    | <p>C2</p>  <p>SIZE: 1460X60X35MM<br/>58<sup>1</sup>/<sub>2</sub>"X2<sup>3</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>    |
| <p>D</p>  <p>SIZE: 590X90X35MM<br/>23<sup>1</sup>/<sub>4</sub>"X3<sup>1</sup>/<sub>2</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>       | <p>D1</p>  <p>SIZE: 300X90X35MM<br/>12<sup>3</sup>/<sub>4</sub>"X3<sup>1</sup>/<sub>2</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>      | <p>E</p>  <p>SIZE: 886X60X35MM<br/>35<sup>1</sup>/<sub>8</sub>"X2<sup>3</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>      | <p>F</p>  <p>SIZE: 886X60X35MM<br/>35<sup>1</sup>/<sub>8</sub>"X2<sup>3</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>      |
| <p>G</p>  <p>SIZE: 400X60X35MM<br/>16<sup>3</sup>/<sub>4</sub>"X2<sup>3</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>       | <p>H</p>  <p>SIZE: 400X60X35MM<br/>16<sup>3</sup>/<sub>4</sub>"X2<sup>3</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>       | <p>I</p>  <p>SIZE: 1355X70X35MM<br/>53<sup>3</sup>/<sub>8</sub>"X2<sup>3</sup>/<sub>4</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>     | <p>J</p>  <p>SIZE: 1355X70X35MM<br/>53<sup>3</sup>/<sub>8</sub>"X2<sup>3</sup>/<sub>4</sub>"X1<sup>3</sup>/<sub>8</sub>" X4</p>     |
| <p>K</p>  <p>SIZE: 1485X880X30MM<br/>58<sup>7</sup>/<sub>16</sub>"X34<sup>5</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>16</sub>" X4</p> | <p>L</p>  <p>SIZE: 1485X880X30MM<br/>58<sup>7</sup>/<sub>16</sub>"X34<sup>5</sup>/<sub>8</sub>"X1<sup>3</sup>/<sub>16</sub>" X4</p> | <p>M</p>  <p>SIZE: 945X864X30MM<br/>37<sup>1</sup>/<sub>4</sub>"X34"X1<sup>3</sup>/<sub>16</sub>" X4</p>                           | <p>N</p>  <p>SIZE: 945X864X30MM<br/>37<sup>1</sup>/<sub>4</sub>"X34"X1<sup>3</sup>/<sub>16</sub>" X4</p>                           |
| <p>O</p>  <p>SIZE: 720X115X50MM<br/>28<sup>3</sup>/<sub>8</sub>"X4<sup>1</sup>/<sub>2</sub>"X2" X8</p>                             | <p>P</p>  <p>SIZE: 835X115X50MM<br/>33"X4<sup>1</sup>/<sub>2</sub>"X2" X4</p>  | <p>Q</p>  <p>SIZE: 650X650X140MM<br/>26<sup>3</sup>/<sub>8</sub>"X26<sup>3</sup>/<sub>8</sub>"X5<sup>1</sup>/<sub>2</sub>" X1</p> | <p>R</p>  <p>SIZE: 740X740X190MM<br/>29<sup>1</sup>/<sub>4</sub>"X29<sup>1</sup>/<sub>4</sub>"X7<sup>1</sup>/<sub>2</sub>" X1</p> |

# ASSEMBLY INSTRUCTION FOR 10' X 10' ULTRAWOOD GAZEBO


|   |  |  |   |  |  |   |
|---|--|--|---|--|--|---|
| <p>W1</p>  <p>SIZE: 693X60X2080MM<br/>27<math>\frac{1}{4}</math>" X 2<math>\frac{3}{8}</math>" X 81<math>\frac{1}{8}</math>"</p> <p>X4</p>     | <p>W17</p>  <p>SIZE: 1900X290X70MM<br/>75<math>\frac{3}{4}</math>" X 11<math>\frac{3}{8}</math>" X 2<math>\frac{3}{4}</math>"</p> <p>X1</p> | <p>W18</p>  <p>SIZE: 1900X200X60MM<br/>75<math>\frac{3}{4}</math>" X 7<math>\frac{7}{8}</math>" X 2<math>\frac{3}{8}</math>"</p> <p>X1</p> | <p>T1</p>  <p>X4</p>   | <p>T2</p>  <p>X4</p>  | <p>T3</p>  <p>X4</p>        |   |
| <p>W20</p>  <p>SIZE: 260X35X1000MM<br/>10<math>\frac{1}{4}</math>" X 1<math>\frac{3}{8}</math>" X 39<math>\frac{3}{8}</math>"</p> <p>X3</p>    | <p>W21</p>  <p>SIZE: 1900X90X35<br/>75<math>\frac{3}{4}</math>" X 3<math>\frac{1}{2}</math>" X 1<math>\frac{3}{8}</math>"</p> <p>X4</p>    | <p>T16</p>  <p>X8</p>   | <p>T18</p>  <p>X8</p>  | <p>U1</p>  <p>4-Ø5X90MM<br/>SIZE: <math>\frac{3}{16}</math>" X 3<math>\frac{9}{16}</math>"</p>    |  |   |
| <p>W22</p>  <p>SIZE: 1900X60X1200MM<br/>75<math>\frac{3}{4}</math>" X 2<math>\frac{3}{8}</math>" X 47<math>\frac{1}{4}</math>"</p> <p>X2</p> | <p>W24</p>  <p>SIZE: 60X60X880MM<br/>2<math>\frac{3}{8}</math>" X 2<math>\frac{3}{8}</math>" X 34<math>\frac{5}{8}</math>"</p> <p>X2</p>  | <p>U2</p>  <p>32-Ø5X75MM<br/>SIZE: <math>\frac{3}{16}</math>" X 3"</p>  | <p>U3</p>  <p>92-Ø5X55MM<br/>SIZE: <math>\frac{3}{16}</math>" X 2<math>\frac{3}{16}</math>"</p>    | <p>U4</p>  <p>236-Ø4X30MM<br/>SIZE: <math>\frac{3}{16}</math>" X 1<math>\frac{3}{16}</math>"</p>  |  |   |
| <p>U5</p>  <p>92-Ø4X55MM<br/>SIZE: <math>\frac{3}{16}</math>" X 2<math>\frac{3}{16}</math>"</p>  | <p>U6</p>  <p>8-Ø4X20MM<br/>SIZE: <math>\frac{3}{16}</math>" X 1<math>\frac{3}{16}</math>"</p>  | <p>U9</p>  <p>Color: Black<br/>32-Ø4X30MM<br/>SIZE: <math>\frac{3}{16}</math>" X 1<math>\frac{3}{16}</math>"</p>                        | <p>U10</p>  <p>26-Ø5X55MM<br/>SIZE: <math>\frac{3}{16}</math>" X 2<math>\frac{3}{16}</math>"</p> | <p>U11</p>  <p>16-Ø3.5X16MM<br/>SIZE: <math>\frac{1}{8}</math>" X <math>\frac{5}{8}</math>"</p> | <p>V</p>  <p>SHIM X10</p> | <p>V1</p>  <p>PLASTIC SPACER<br/>PIECE X18</p> |

# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#1

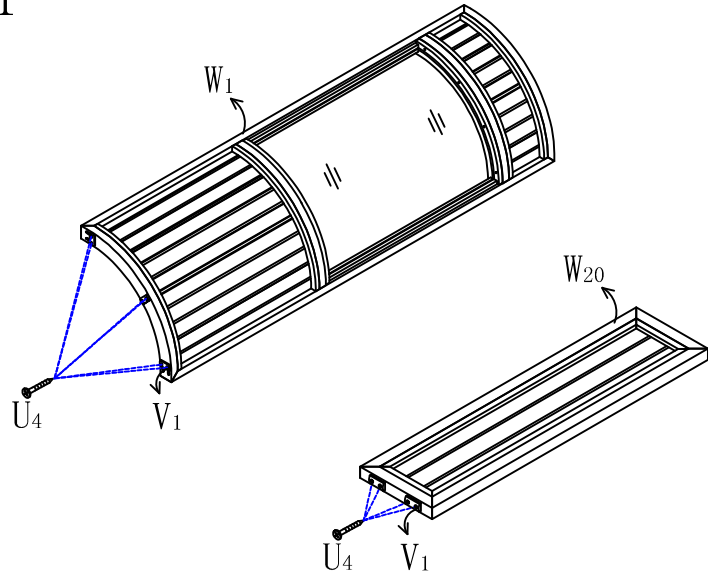


#2

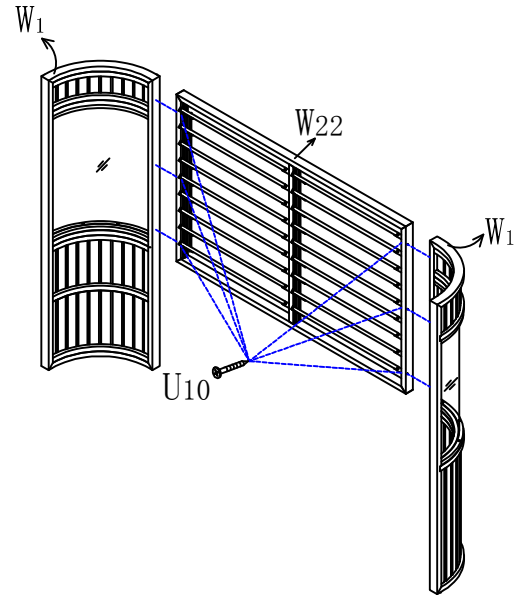

#3

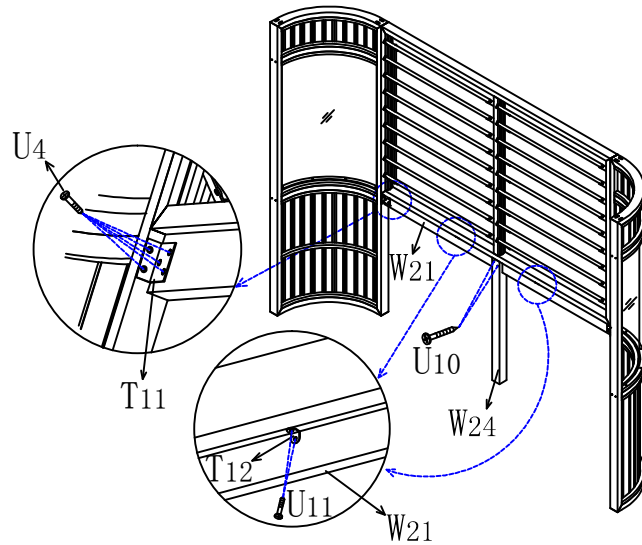


#4

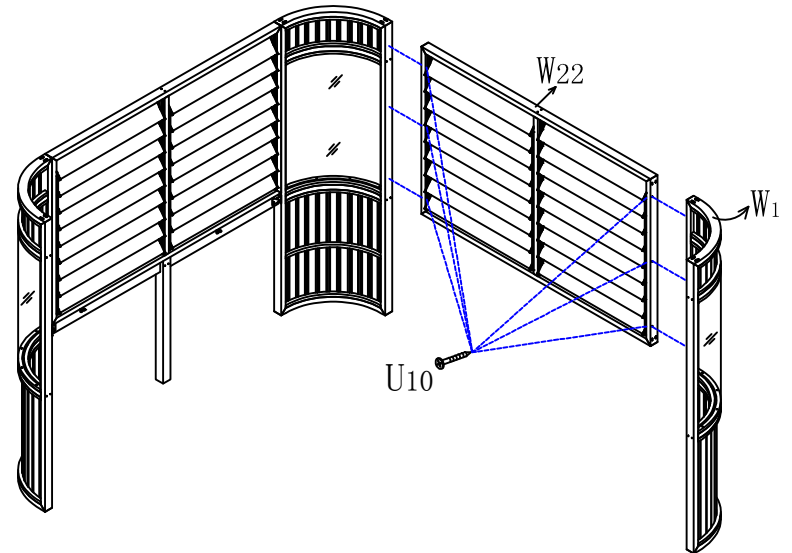


# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#5

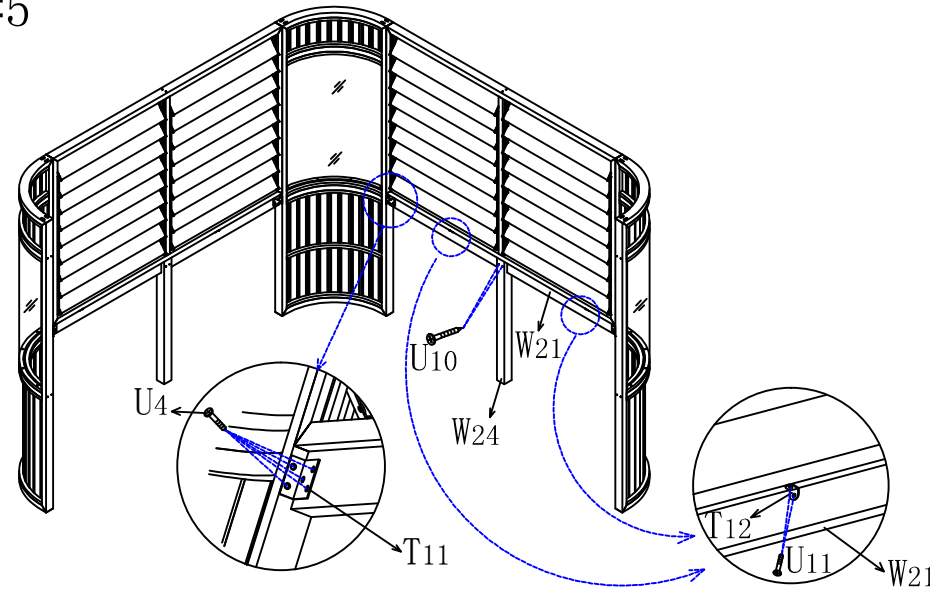


#6

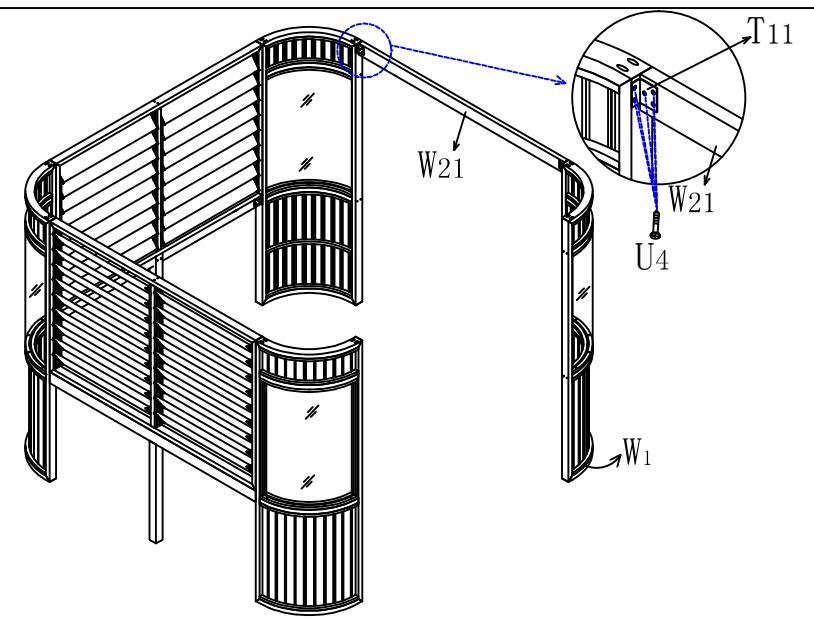

#7

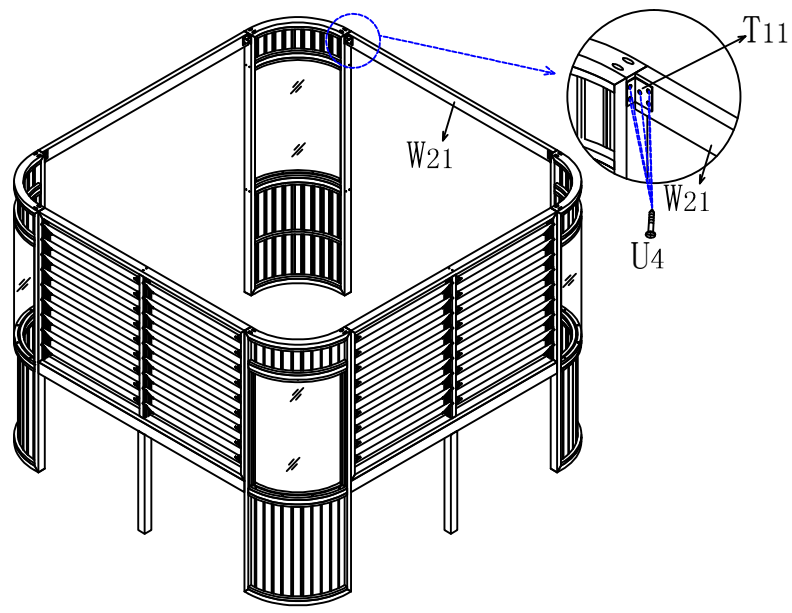


#8

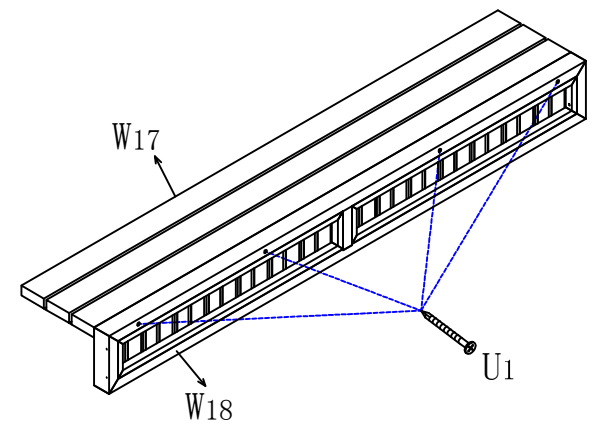


# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#9

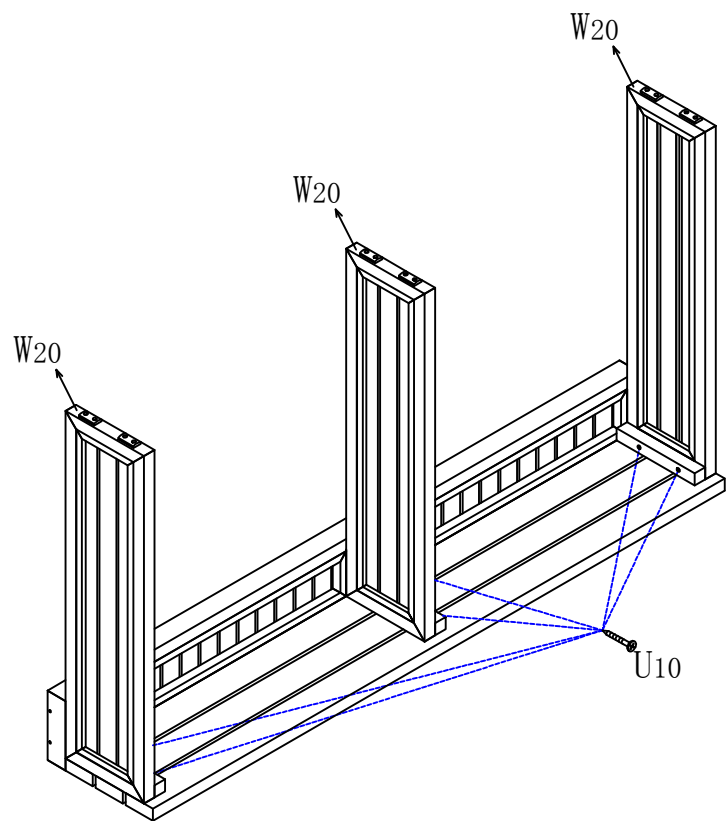


#10

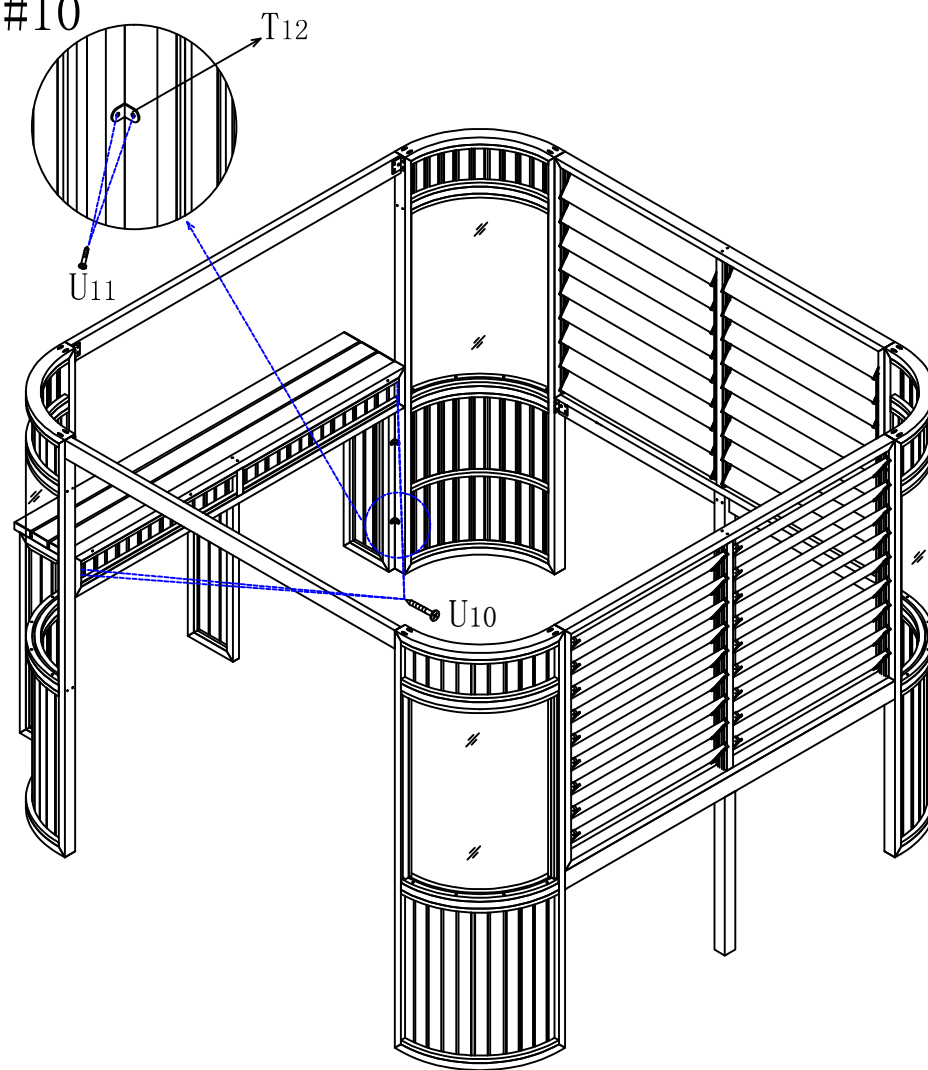


# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#11

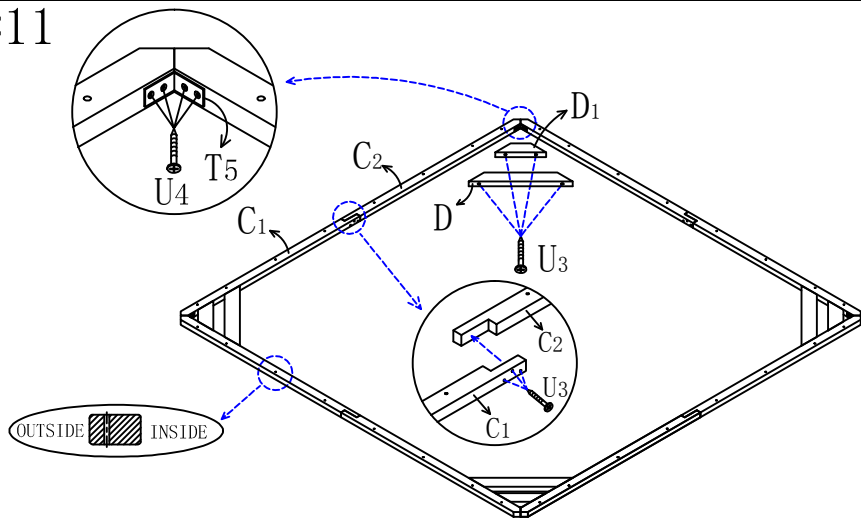


#12

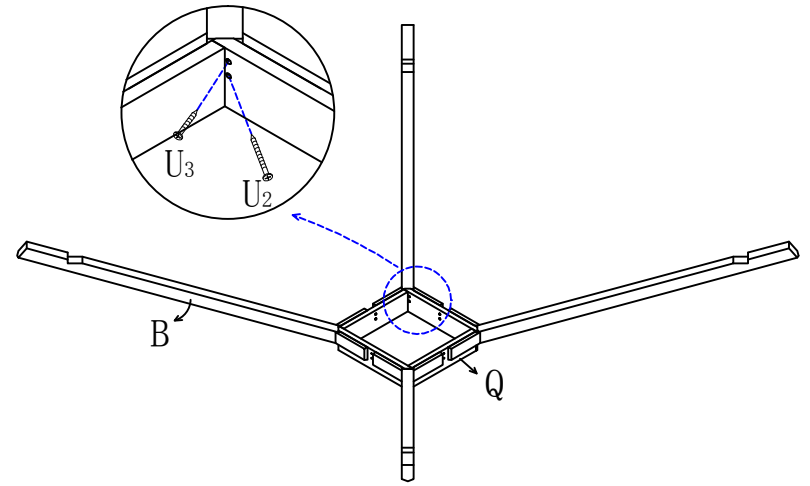

#13

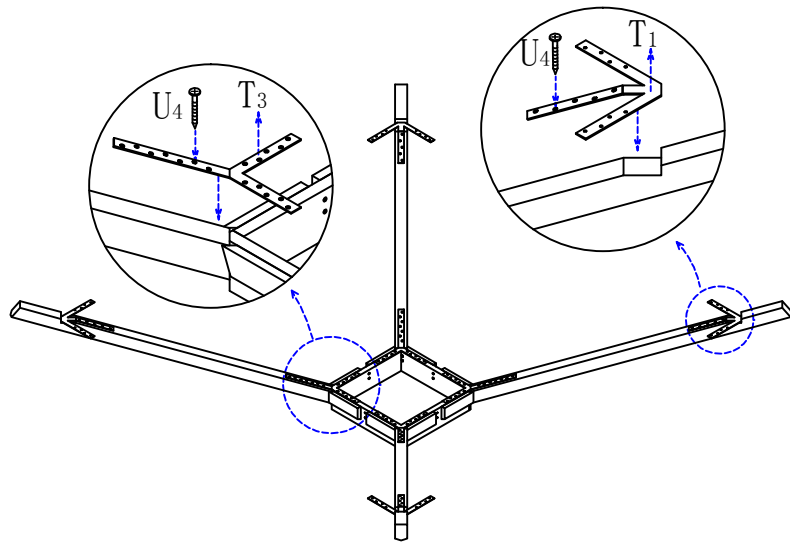


#14

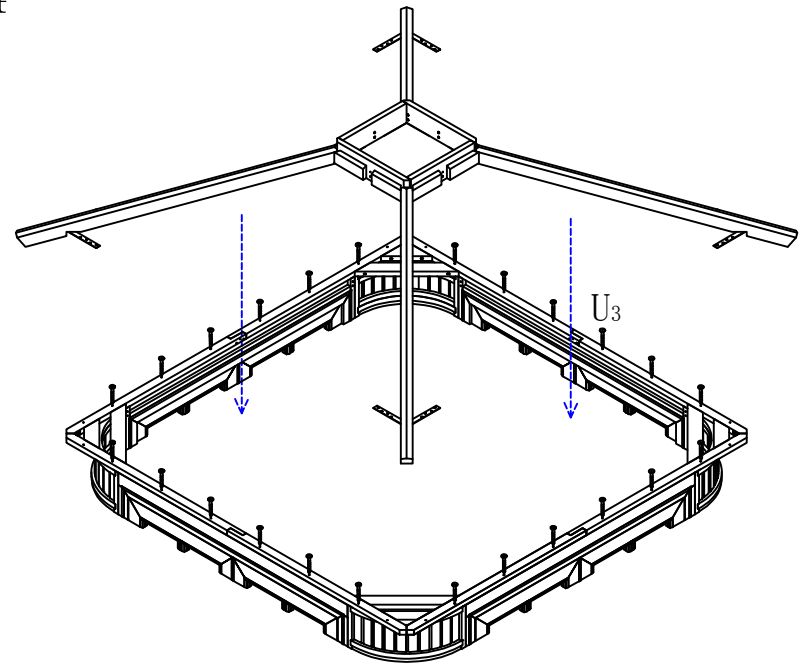


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#15

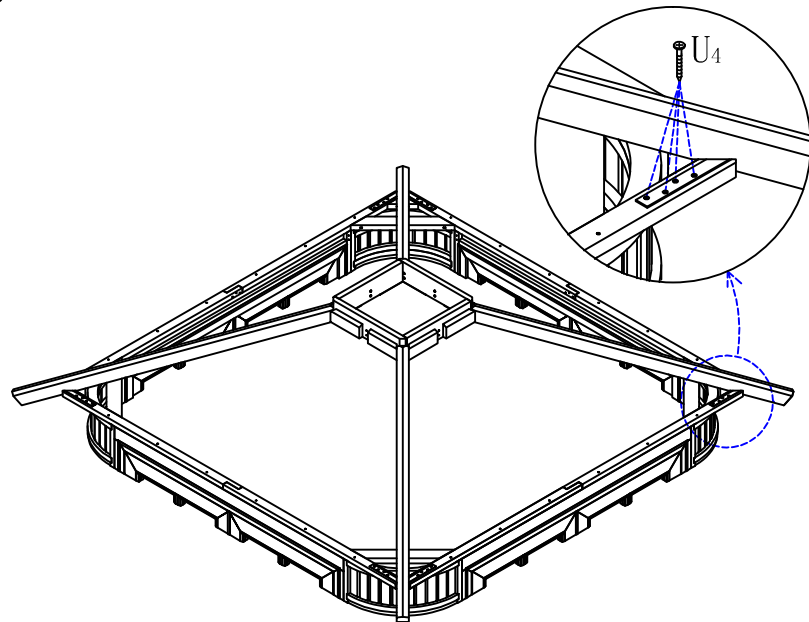


#16

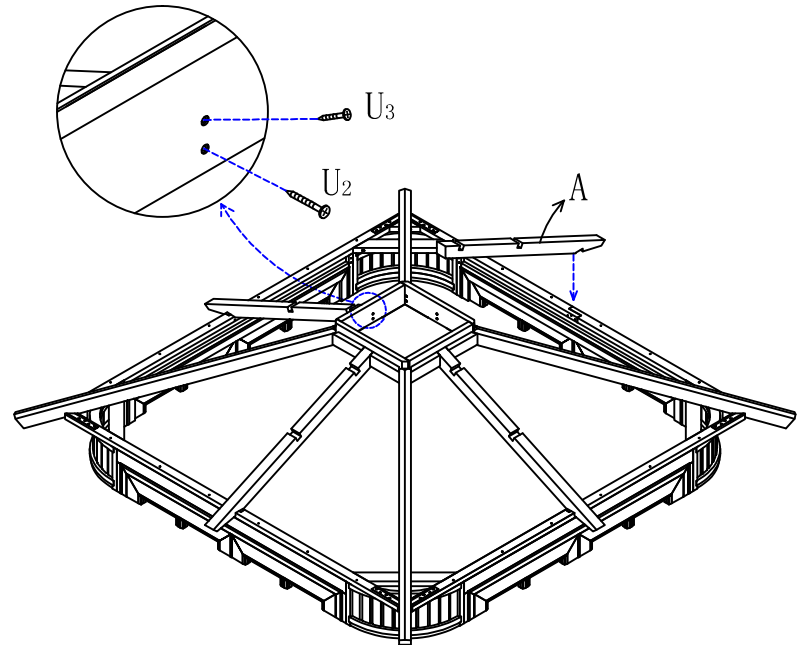

#17

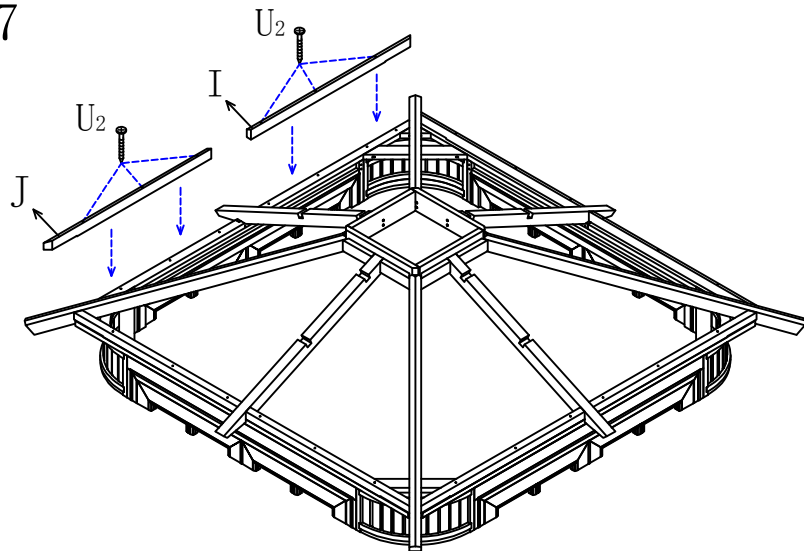


#18

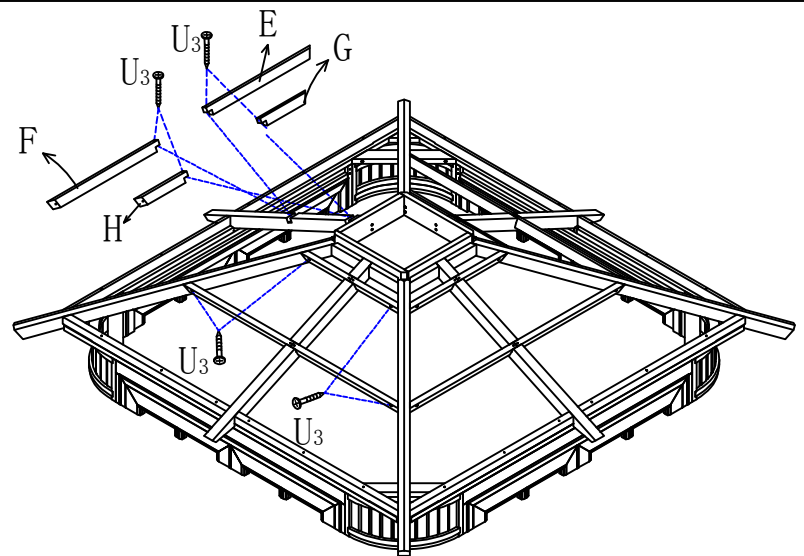


# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#19

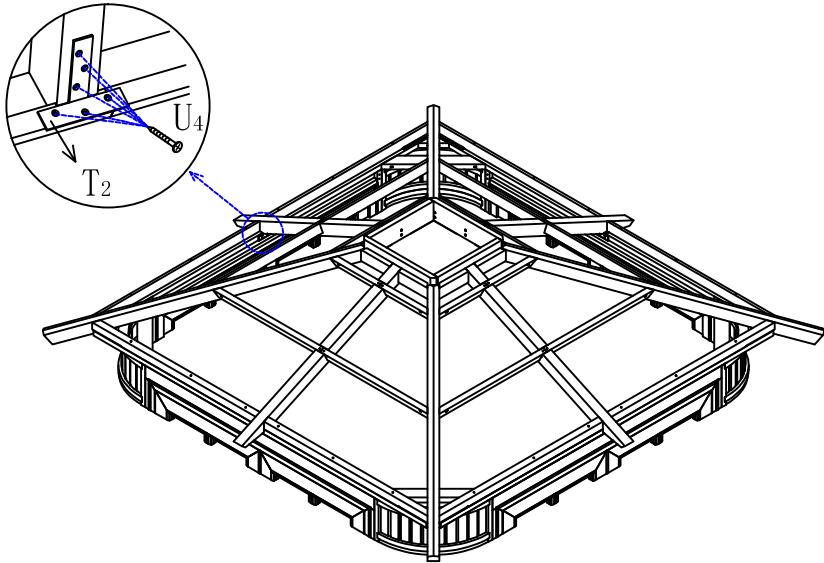


#20

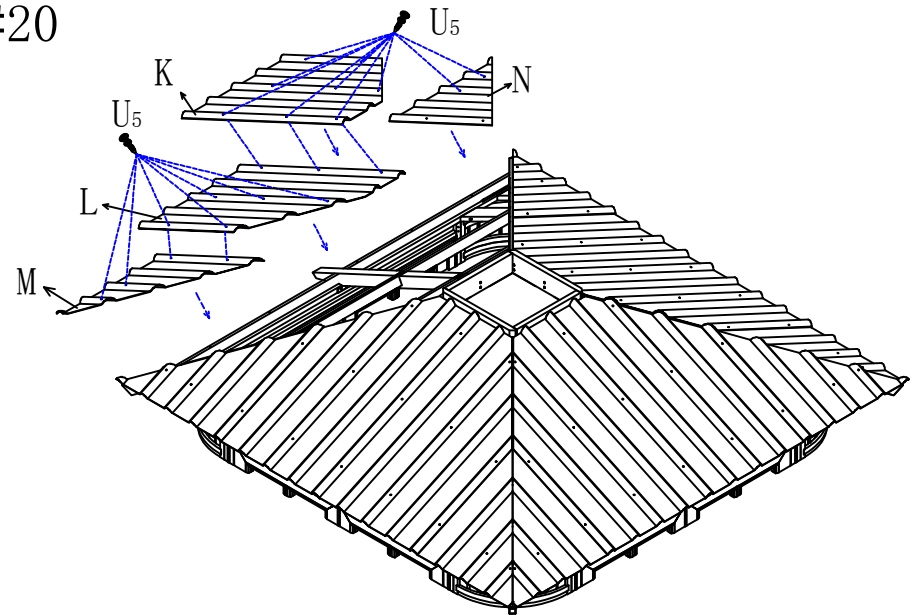

#21

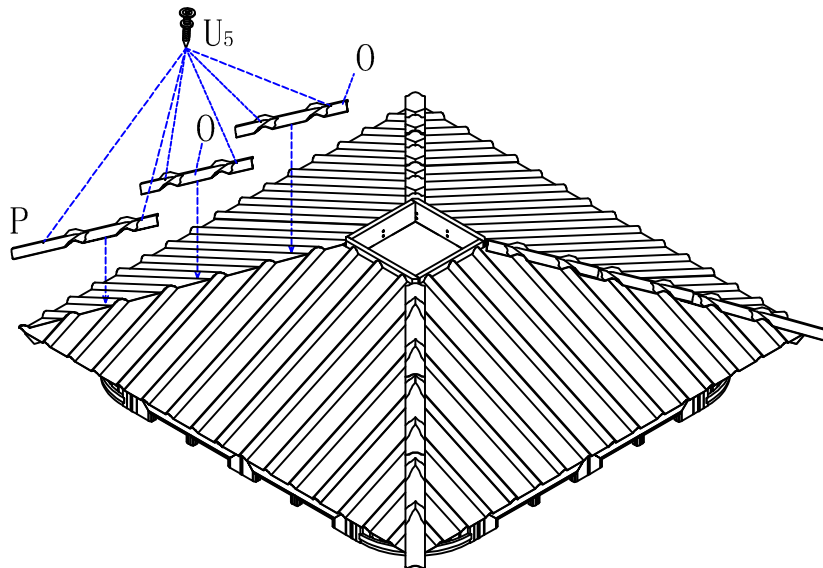

#22

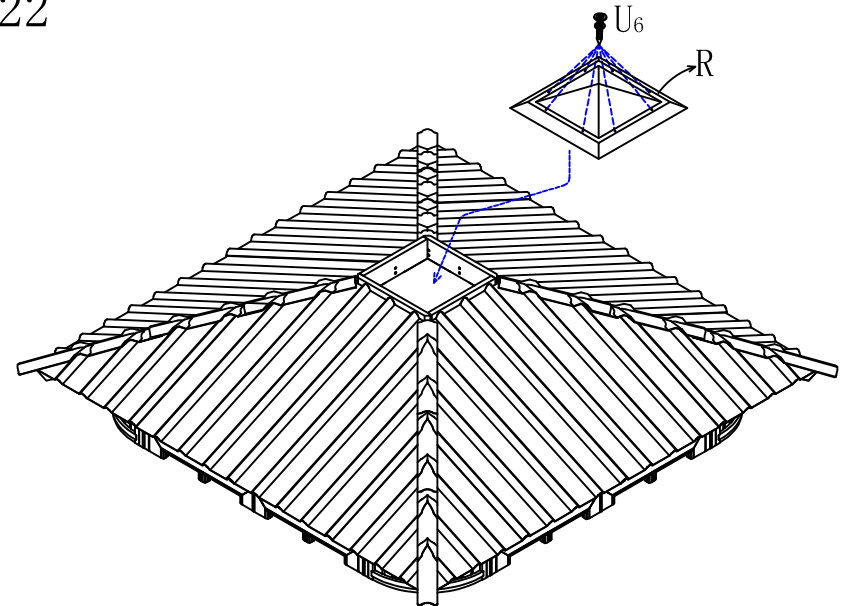

# ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#23

