



INSTALLATION GUIDE

LED WALLPACK CUBE


LR40600, LR40610

CAUTION


1. To avoid electric shock, disconnect power at source prior to installation.
2. The installation should be performed by qualified electricians or lighting technicians.
3. Before conducting any installation, maintenance, or removal, disable all power to the luminaires and wait until the fixture has cooled down.
4. Do not touch the fixture while it is in use.
5. If there is any problem with fixture, DO turn off the power and DO NOT attempt to repair unless you are a qualified electrician.
6. The electrical rating of this product contains a photocell which is 110-277VAC
7. Mounting instructions specify the use of a sealing compound to fully fill the gap of the fixture and mounting surface.

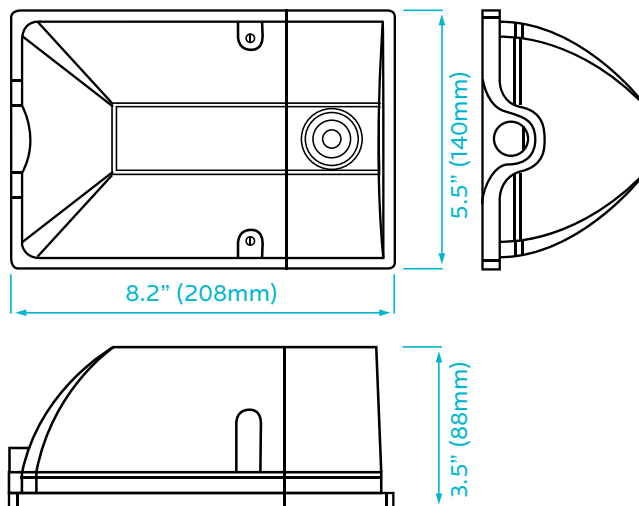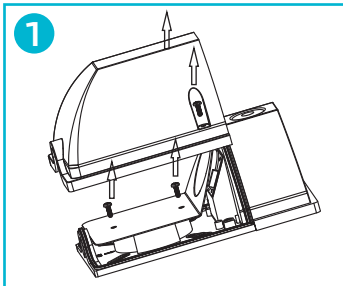INSTALLATION**1. MOUNTING WITH A 1/2" CONDUIT AT THE BOTTOM.**


1. Remove the lens of the wall pack by loosening the two screws on each side of the fixture. Remove the reflector by loosening the two screws.

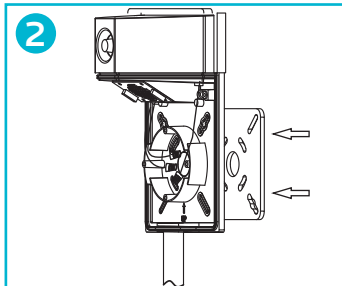


2. Remove the threaded plug from the bottom, plug the 1/2" conduit into the fixture, knock out 2 screw holes on the back housing and attach the fixture on the wall with the correct screws. Use the supplied gasket for a weatherproof tight seal.

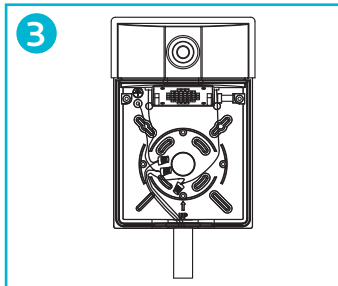


3. Connect black for line, white for neutral and bare wire for ground to complete the wiring.

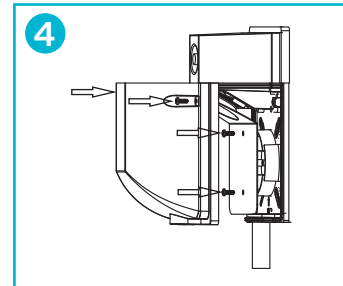


4. Replace the reflector and lens carefully by reversing the procedure use to remove them. (See instruction 1)

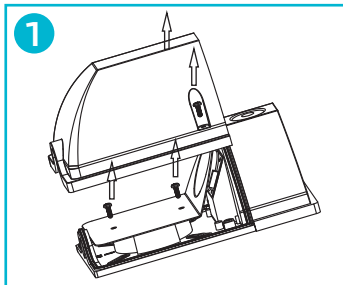2. MOUNTING WITH J-BOX


1. Remove the lens of the wall pack by loosening the two screws on each side of the fixture. Remove the reflector by loosening the two screws.

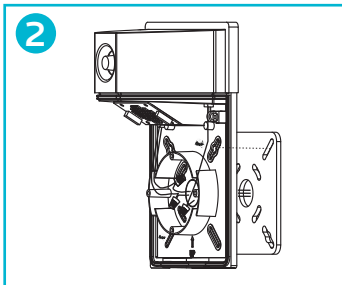

2. Knock out the 2 screw holes and the holes in the center of the back housing. Plug the wires from the J-Box into the fixture through the center hole, and attach the fixture to the J-Box with proper screws. Use the supplied gasket for a weatherproof tight seal.

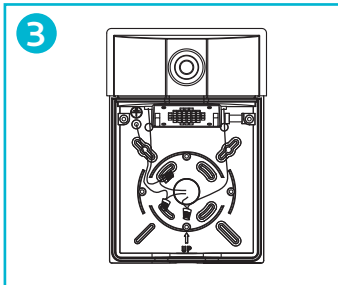

3. Connect black for line, white for neutral and bare wire for ground to complete the wiring.

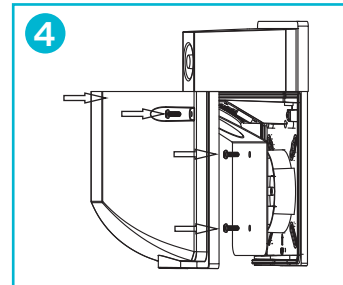

4. Replace the reflector and lens carefully by reversing the procedure use to remove them. (See instruction 1)