


A	M6*15	5
C	M6*30	8
D	M6*35	8
S	M6*40	4
E		8
F		37
G		1
H		1
I		1
J		1
K		1
L		1
M		1
N		1
O		1
P		1
Q		1
R		1
S		1

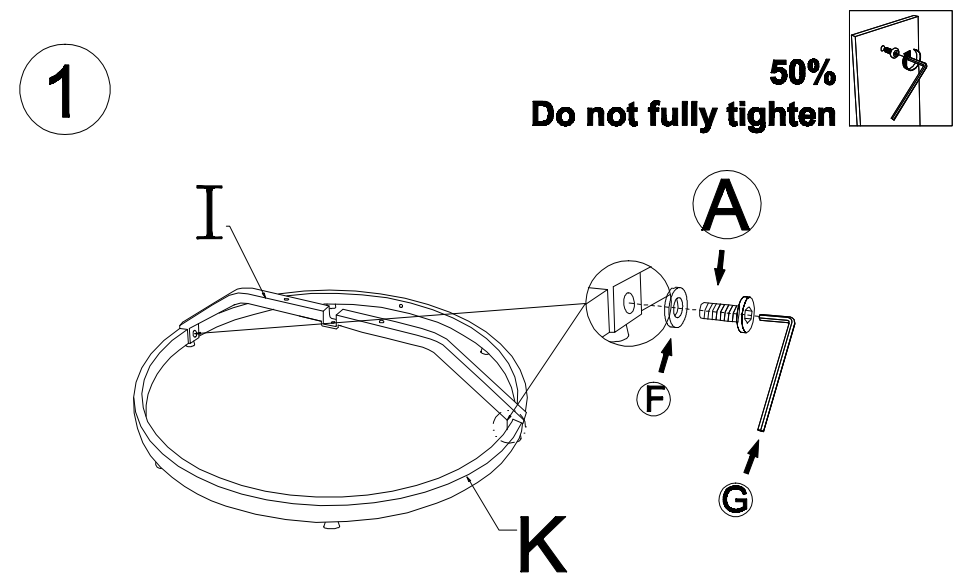

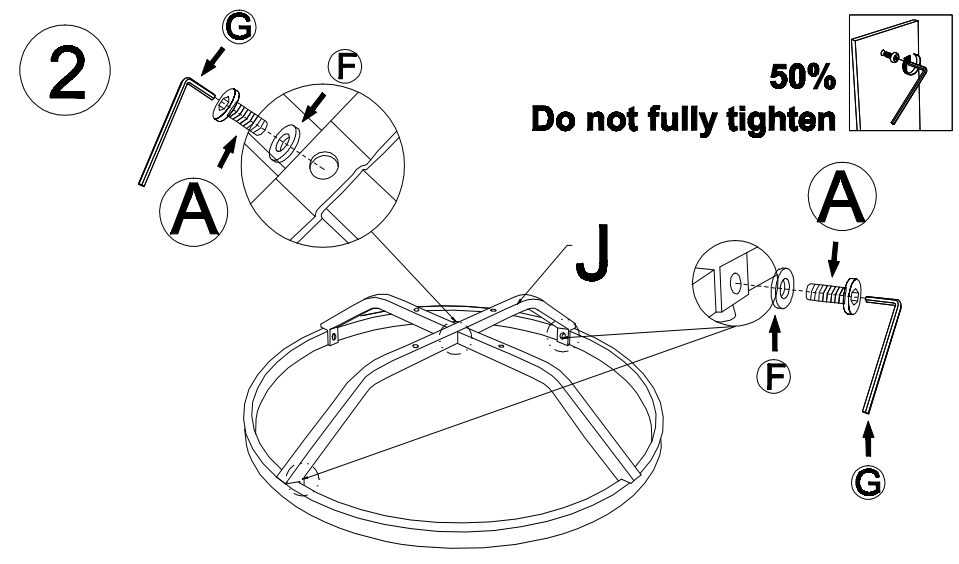

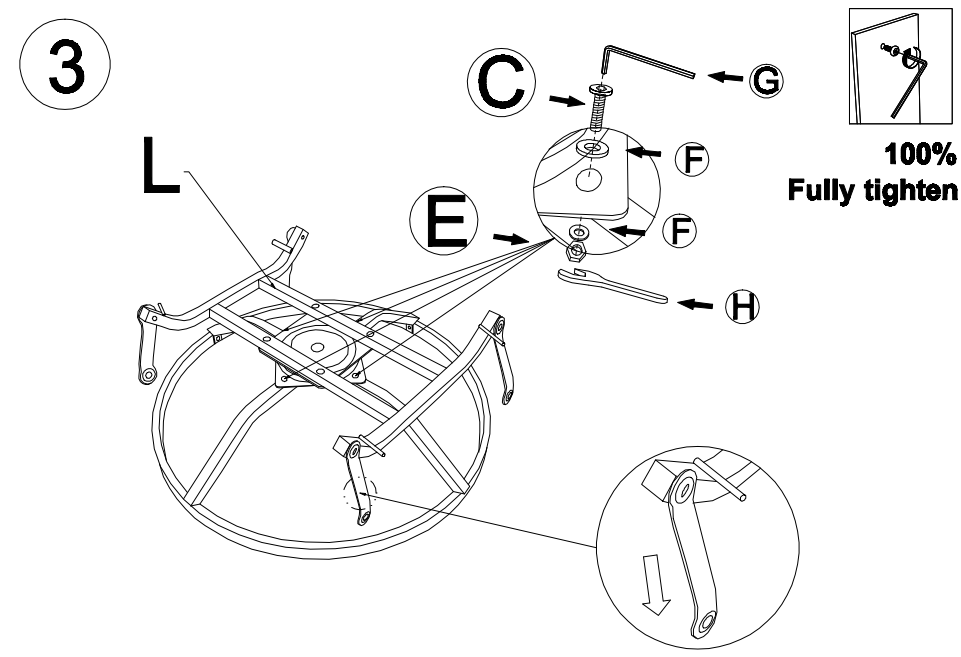

** Part L must be assembled before continuing the installation

STEP 3 | IMPORTANT ASSEMBLY DETAILS

Check the connecting arm orientation BEFORE fully tightening the bolts.

1. Rotate each silver connecting arm to match the completed assembly photos below.
2. Check the arm direction carefully. The bolts may still fit even if an arm is reversed.
3. Align the mounting holes and install bolt C, washers F and nut E as illustrated above.
4. Use wrench H to HOLD nut E while turning bolt C with Allen key G.
5. Once the direction is correct, fully tighten the hardware (100%).

CORRECT ASSEMBLY REFERENCE | Underside view



Close-up: silver connecting arm




Overall view: both sides and base

WARNING: Verify the arm orientation and secure all fasteners before using the chair.


4

50%
Do not fully tighten

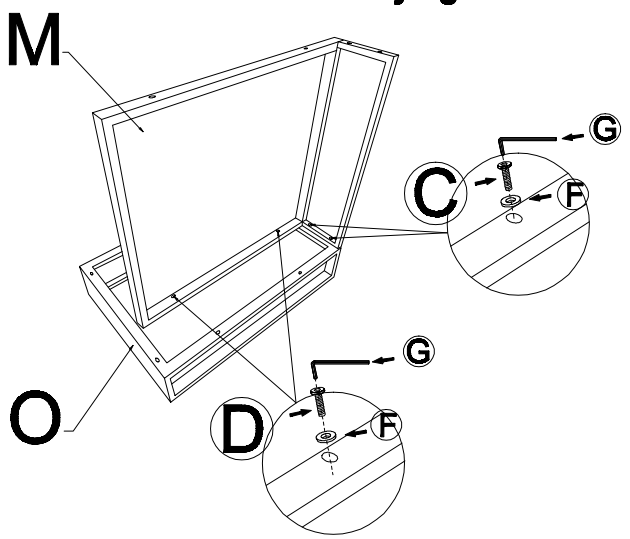


7

100%
Fully tighten

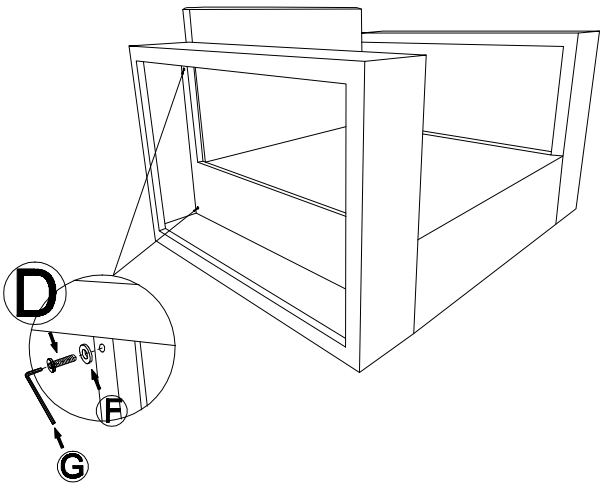


5

50%
Do not fully tighten

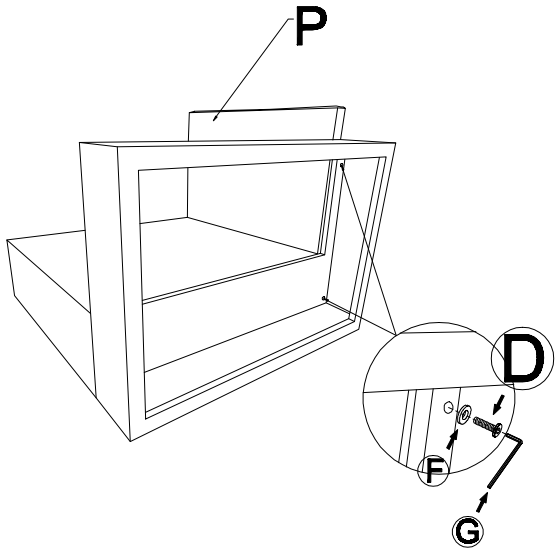


8

100%
Fully tighten

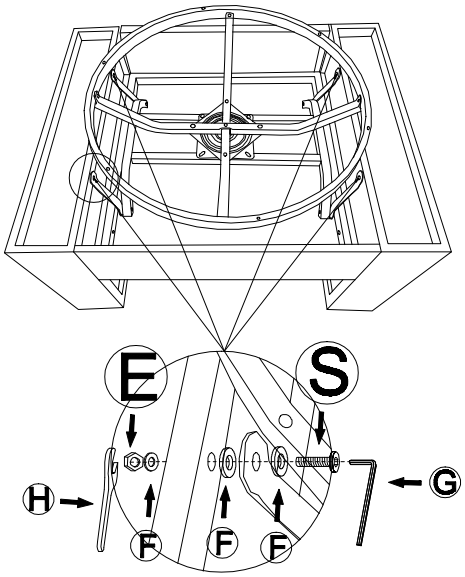

6

50%
Do not fully tighten

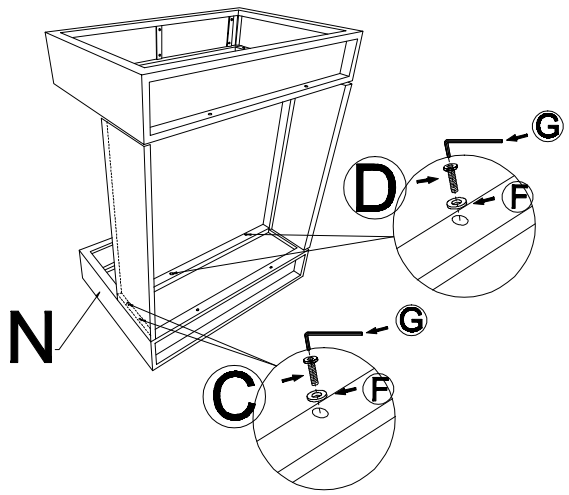

9

100%
Fully tighten

