


# Coffee table

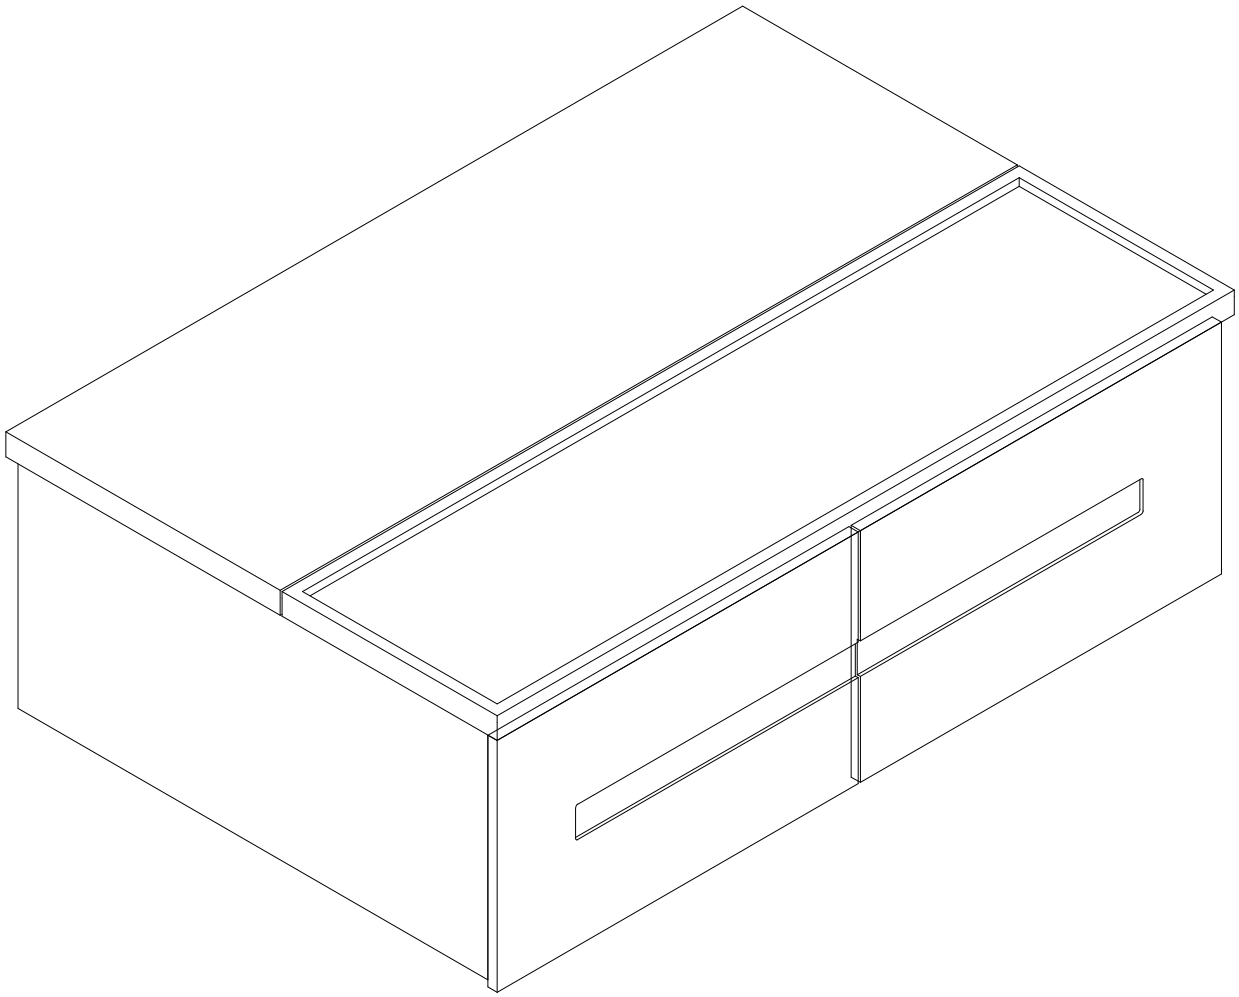

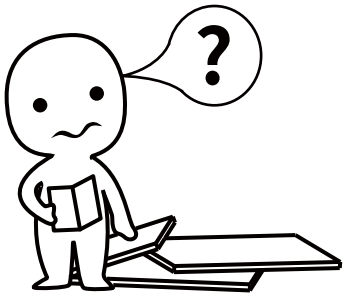


## *IMPORTANT INFORMATION!*

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

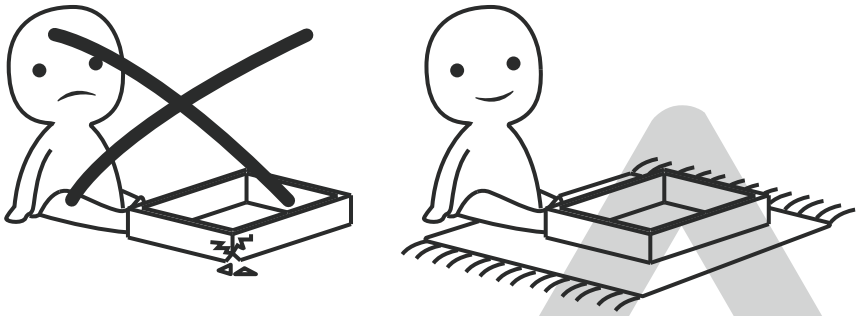


## *AVOID SCRATCHES!*

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

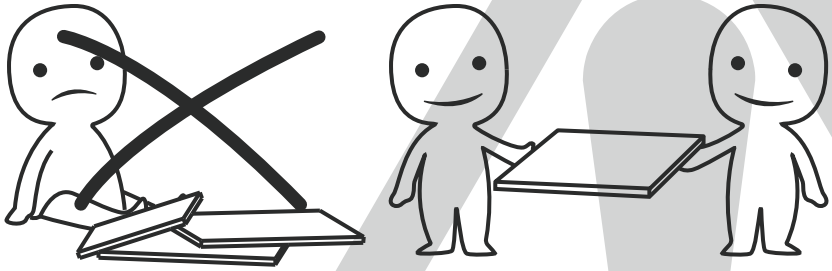

## *IMPROVE EFFICIENCY !*

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

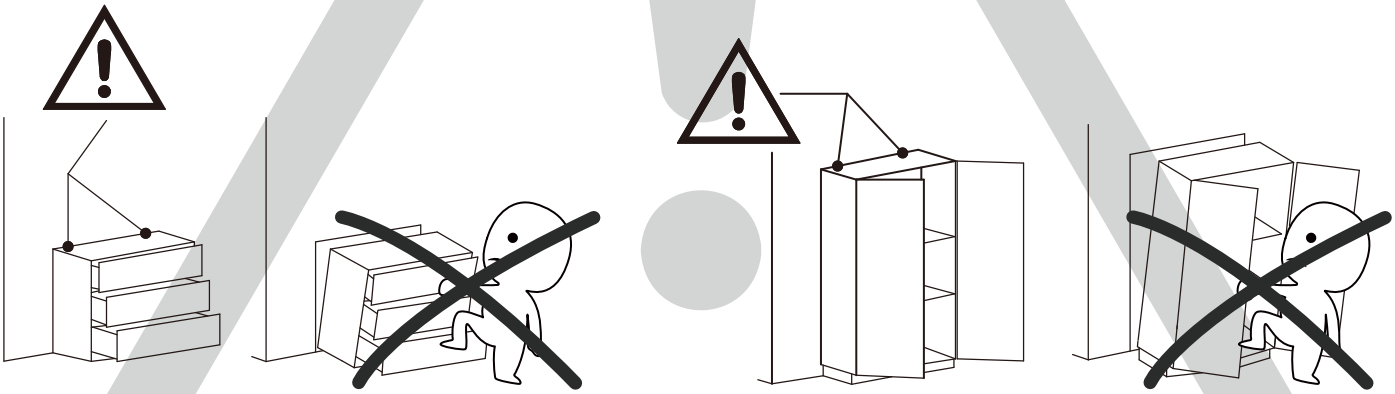

## *ANTI-TOPPLE WARNING !*

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


## *IMPORTANT !*

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


# Board Identification

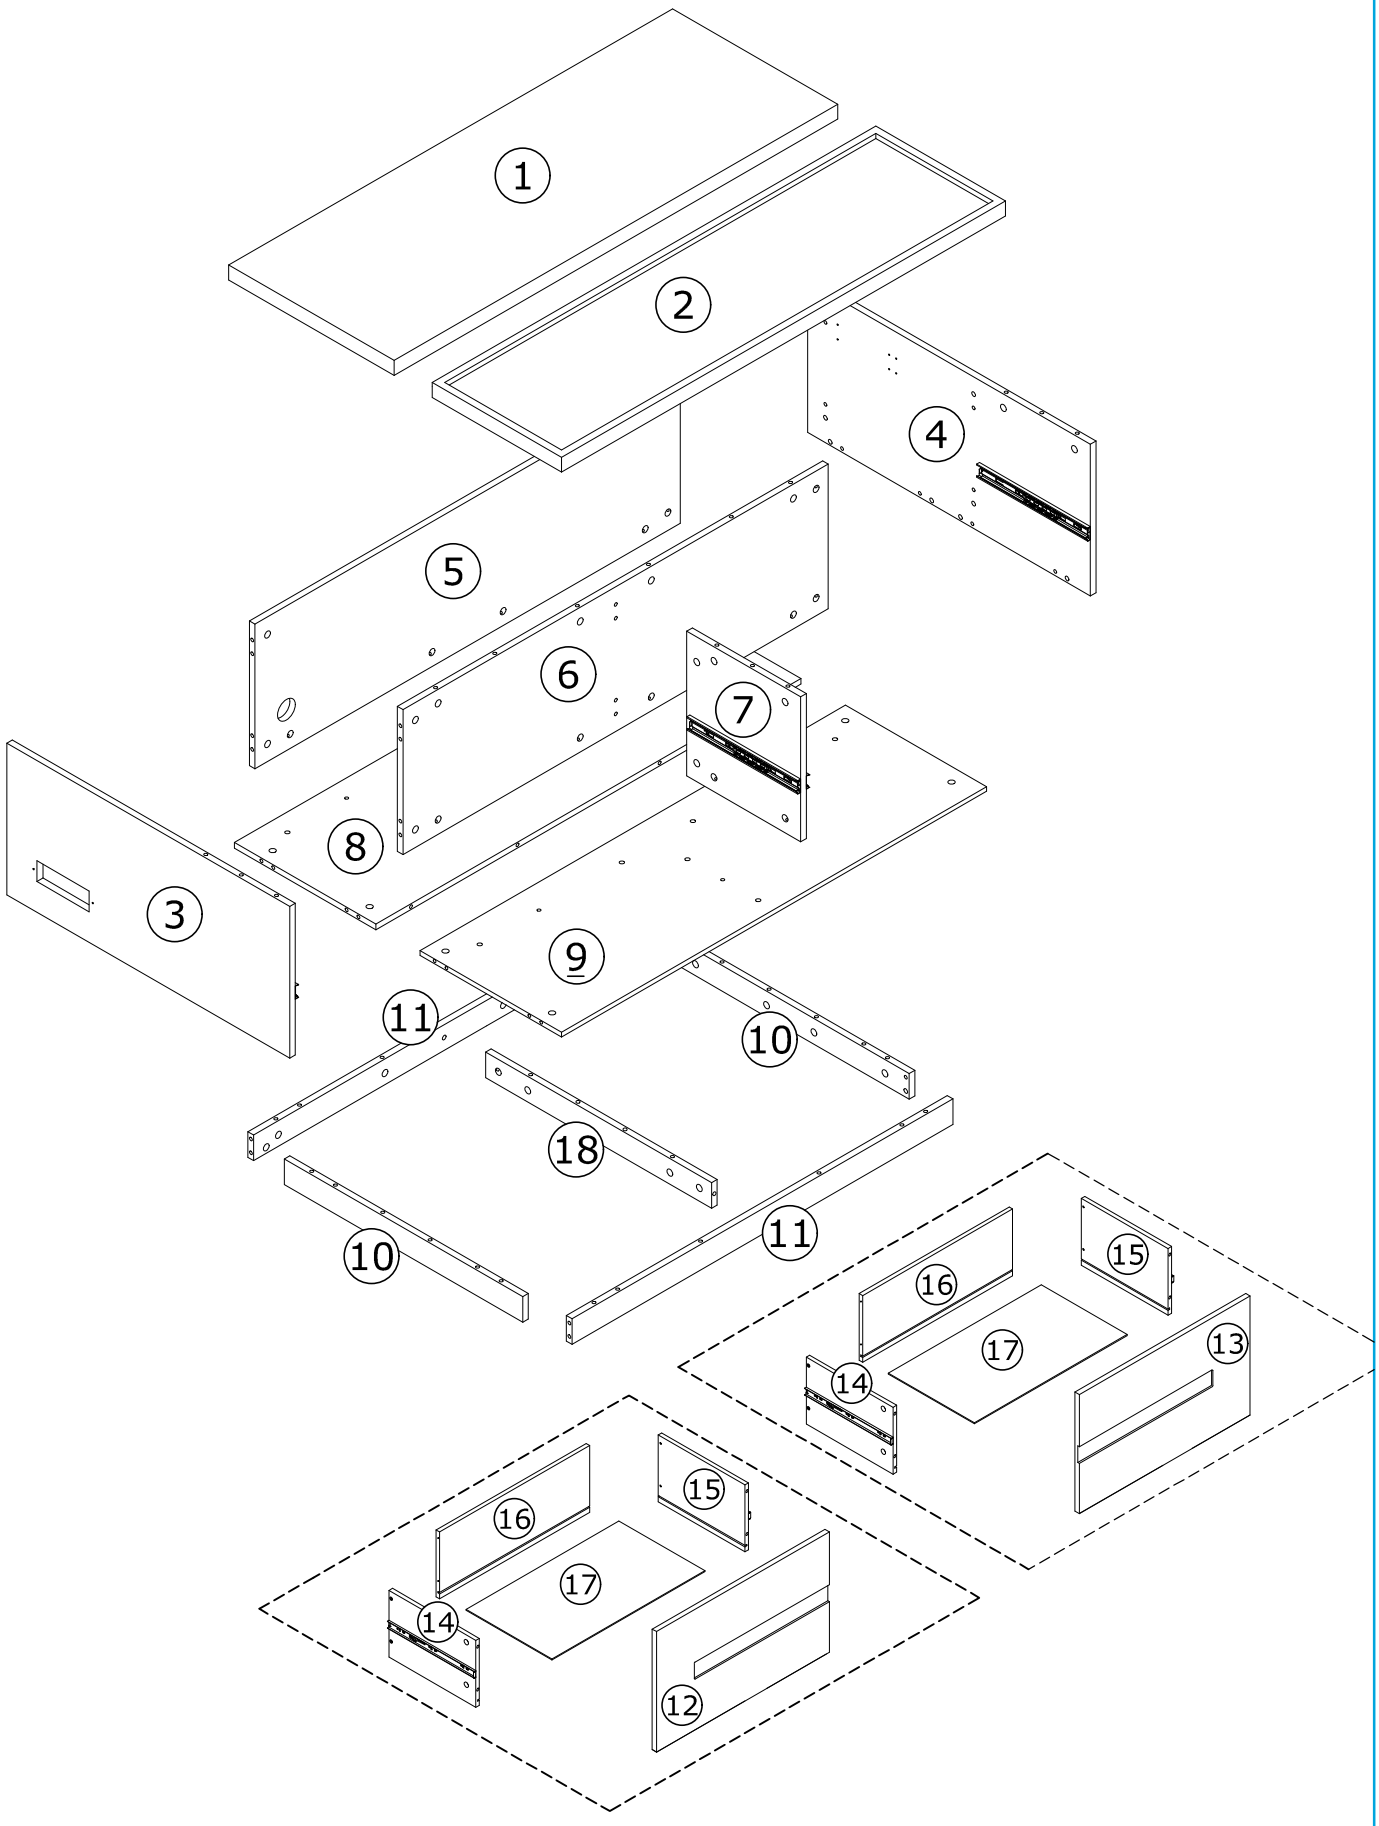


# PARTS LIST

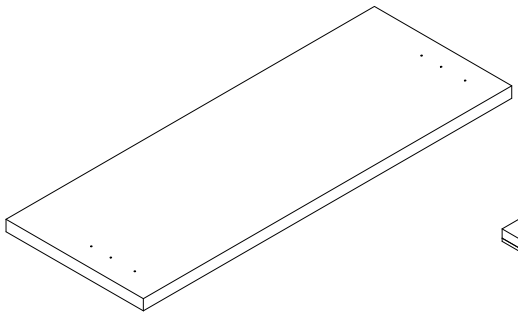


1

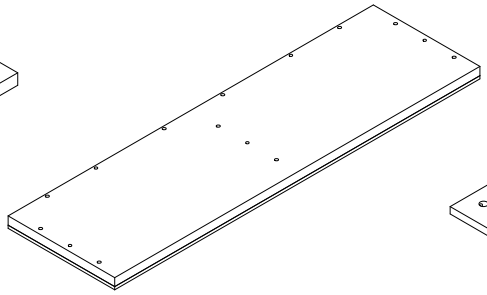


2

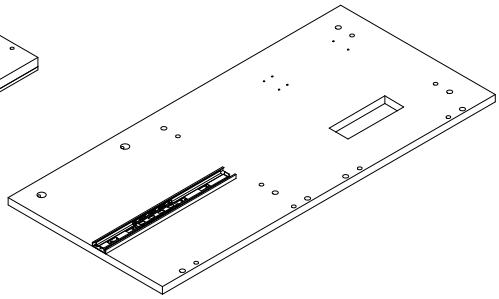


3

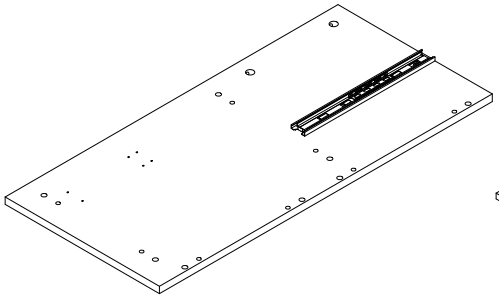


4

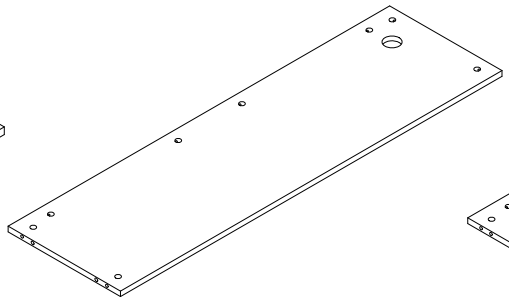


5

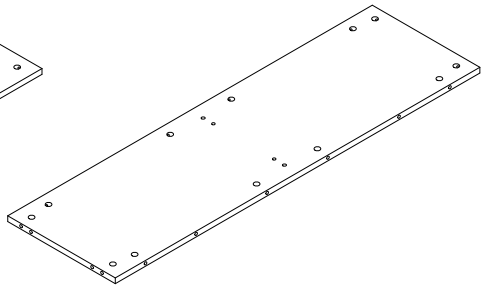


6

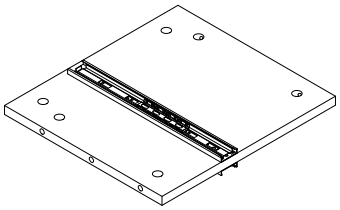


7

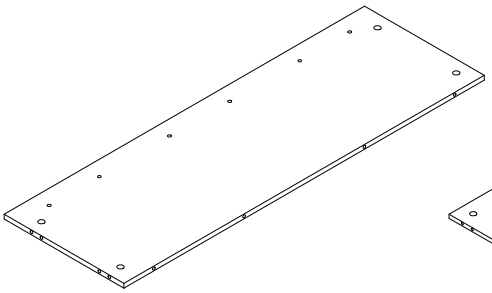


8

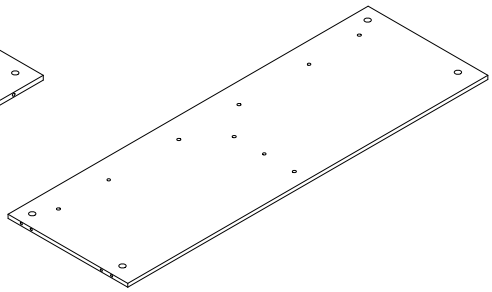


9

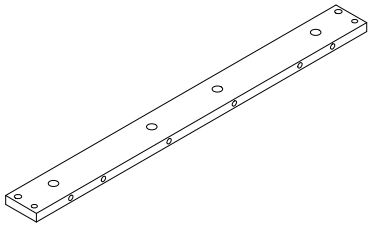

10

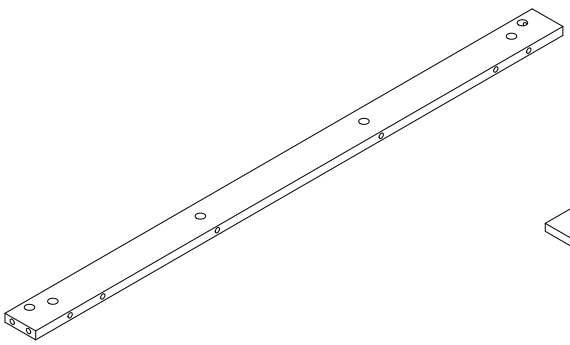


11

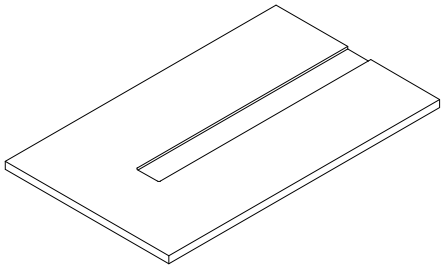


12


# PARTS LIST

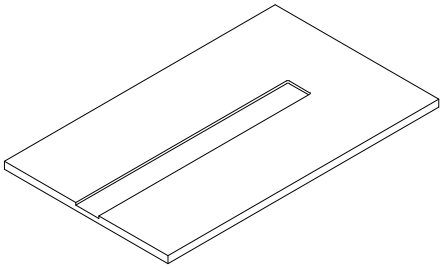


⑬

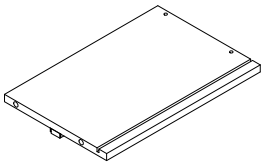


⑭ X2

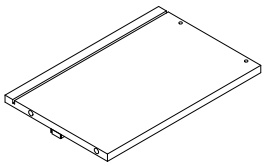


⑮ X2

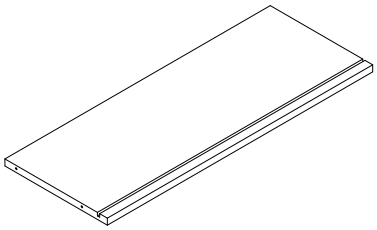


⑯ X2












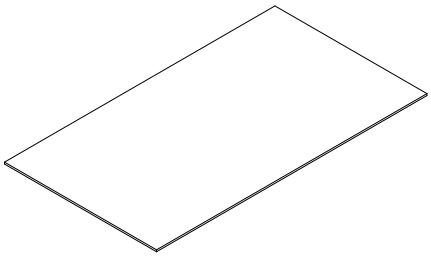



⑰ X2

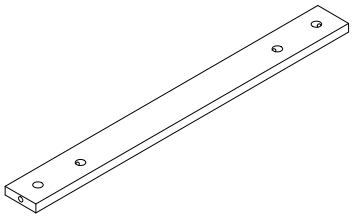

⑱

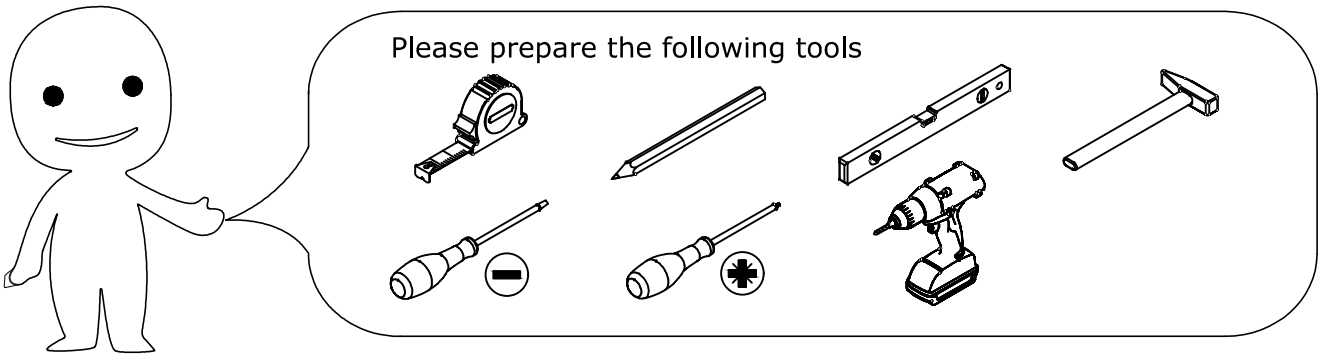

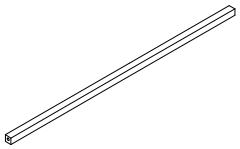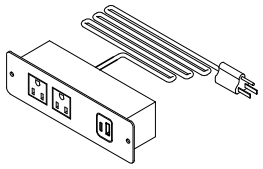

| A x 70 | B x 70 | C x 48 | D x 16 |
|---|---|---|---|
|  Ø15 x 9.5 mm |  Ø7 x 40 mm |  Ø8 x 40 mm |  M4 x 15 mm |
| **E x 8** | **F x 1** | **G x 2** | **H x 4** |
|  M4 x 40 mm |  |  M3.5 x 14 mm |  |
| **I x 22** | **J x 1** | **K x 11** | **L x 1** |
|  |  |  |  |
| **M x 1** | **N x 2** | **O x 28** | **P x 4** |
|  |  M6 x 35 mm |  M4 x 14 mm |  |

| SPARE BAG |
|---|
|  +2 |


Tips:The number after “+” represents the spare hardware.


# 1


B x 8




Ø7 x 40 mm

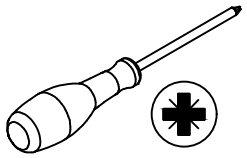

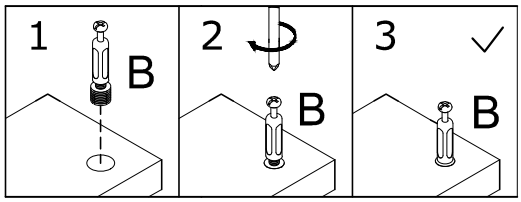


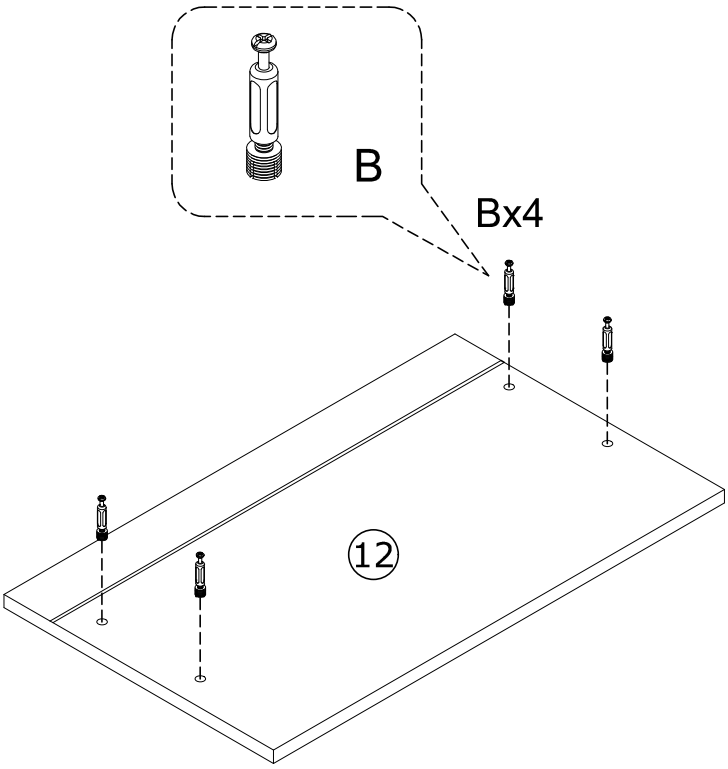


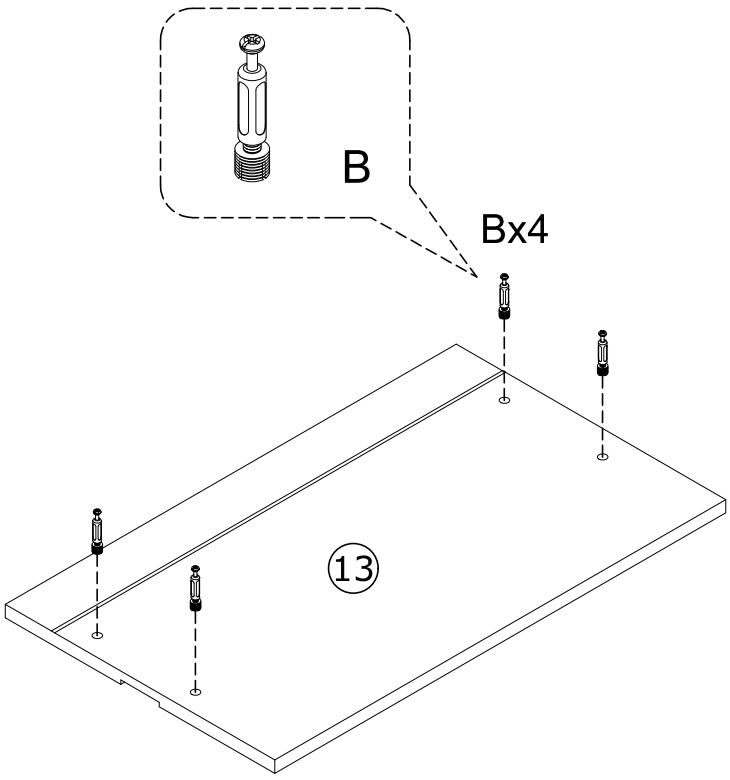
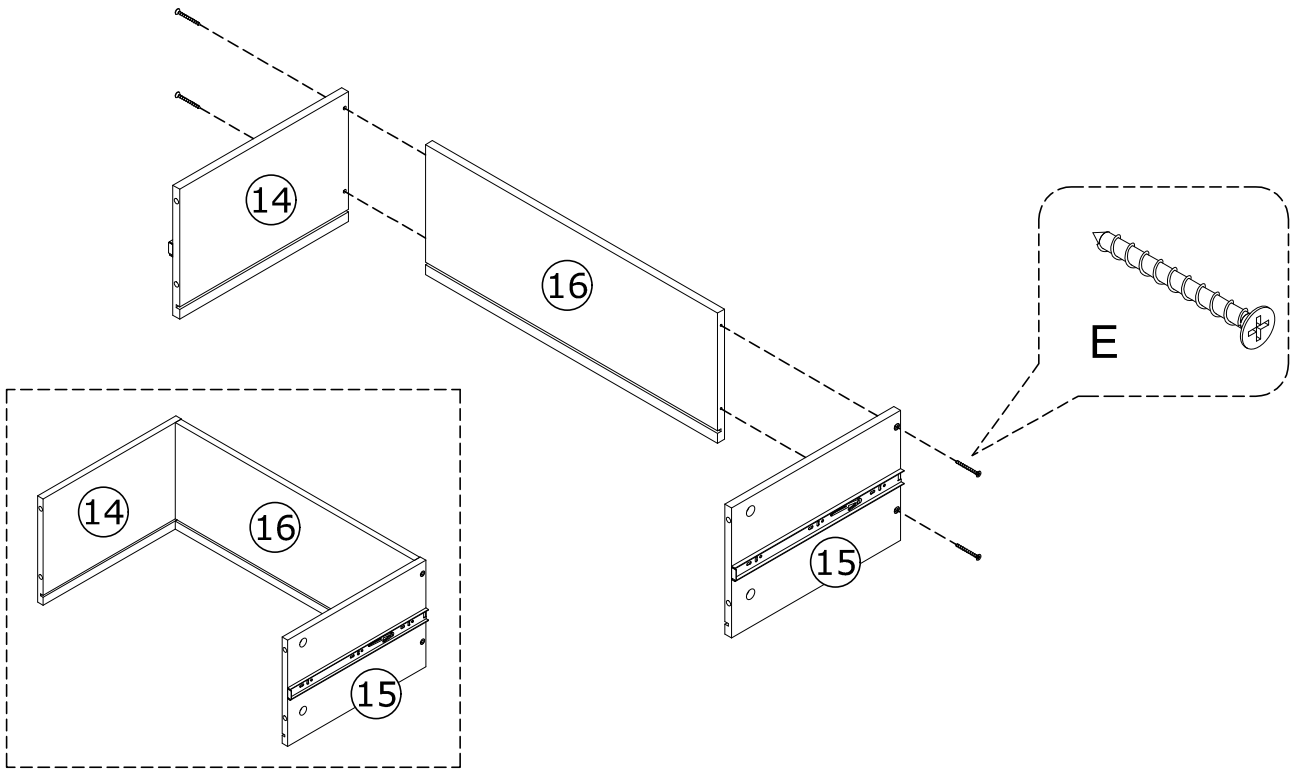
# 2


E x 8



M 4 x 40 mm

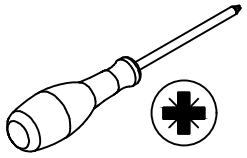



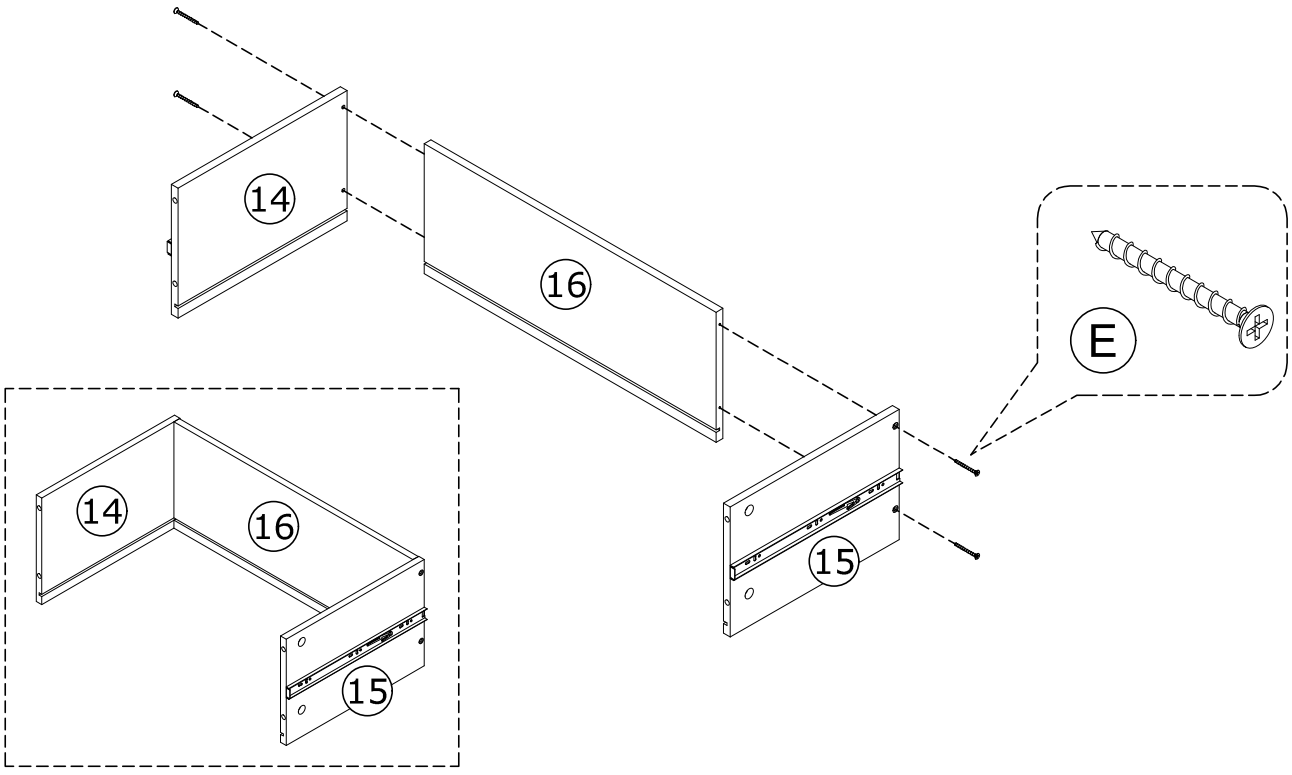



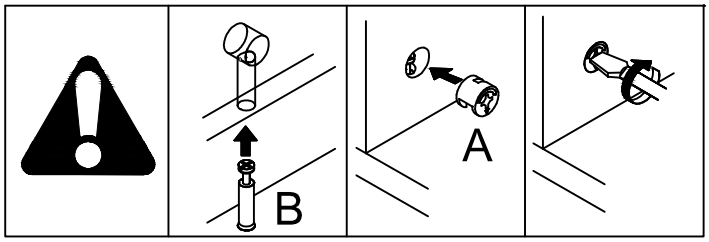
# 3


A x 8




Ø15 x 9.5 mm

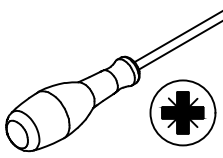




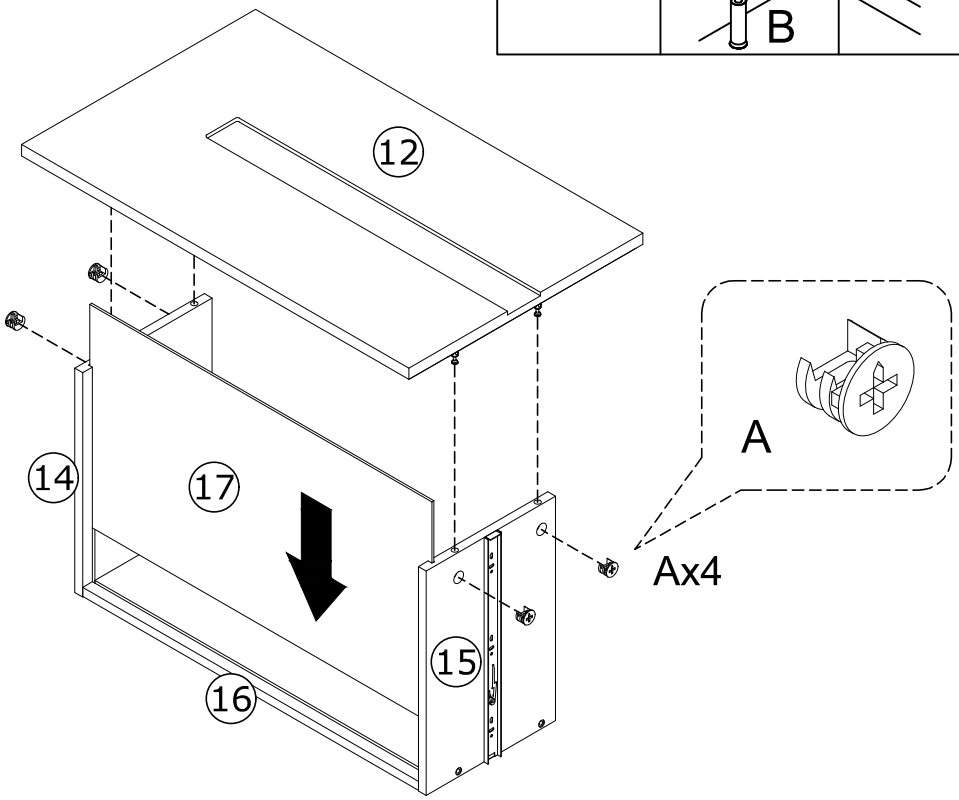


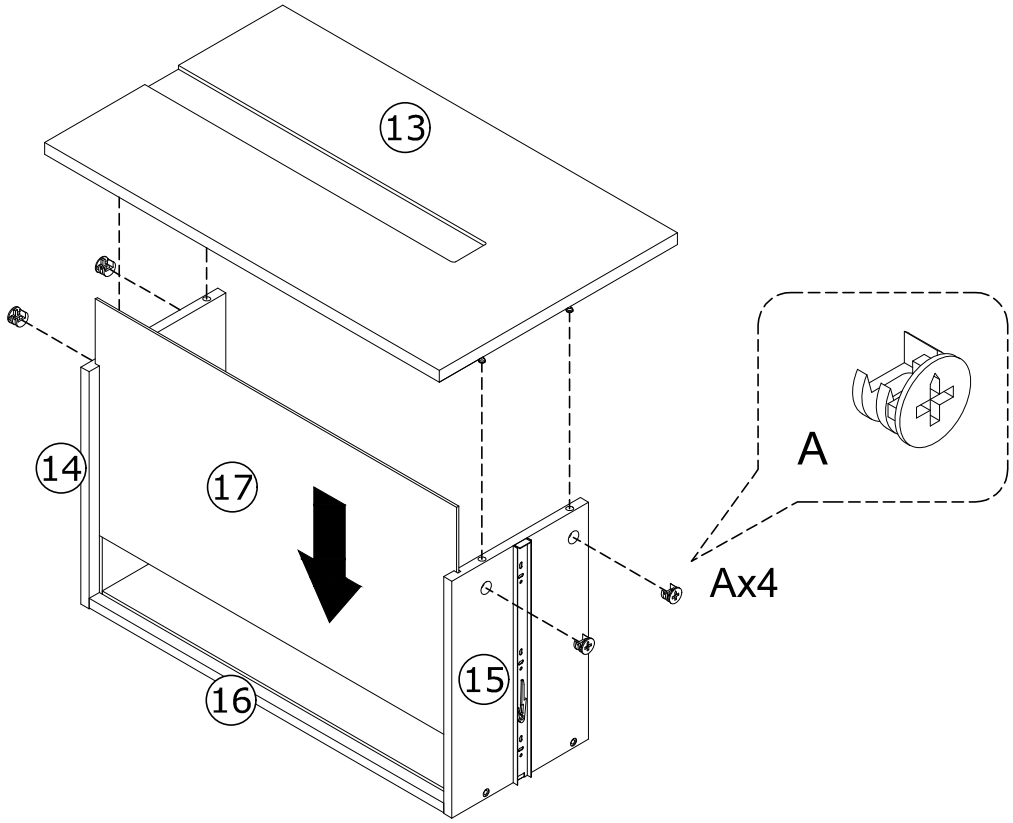
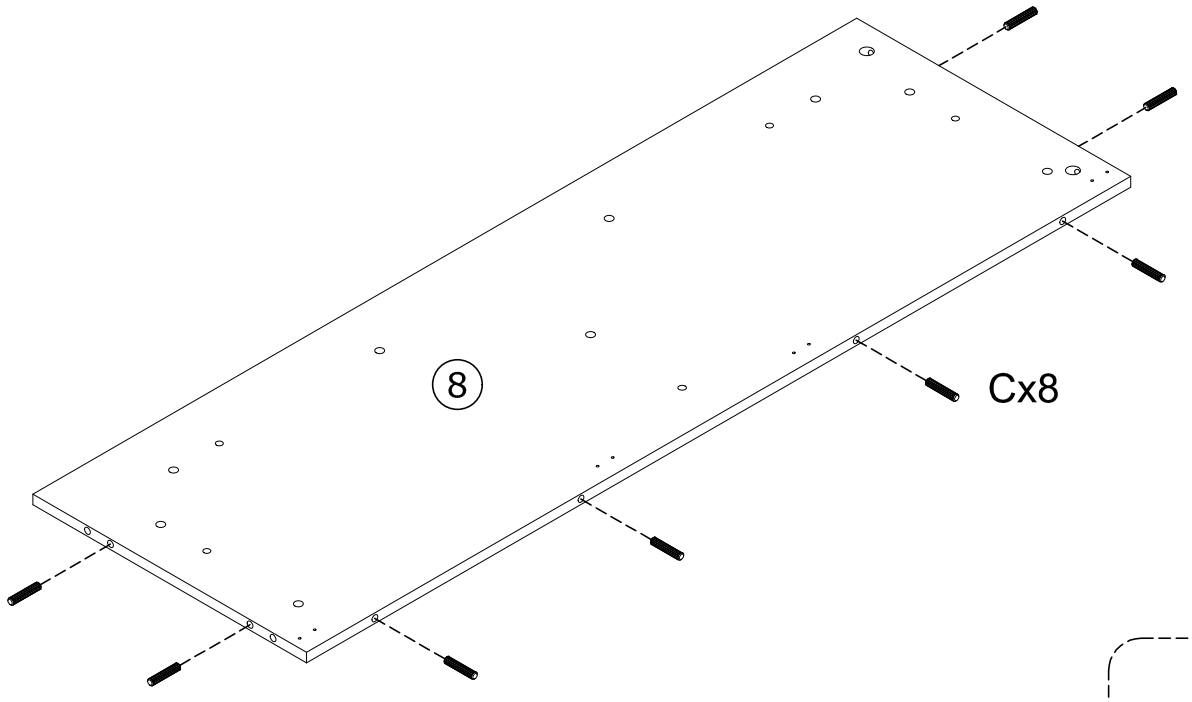
# 4


C x 12





Ø8 x 40 mm

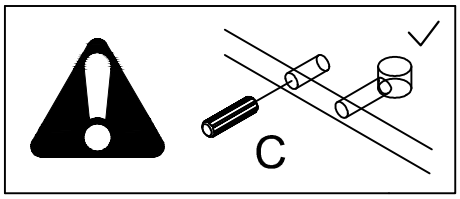


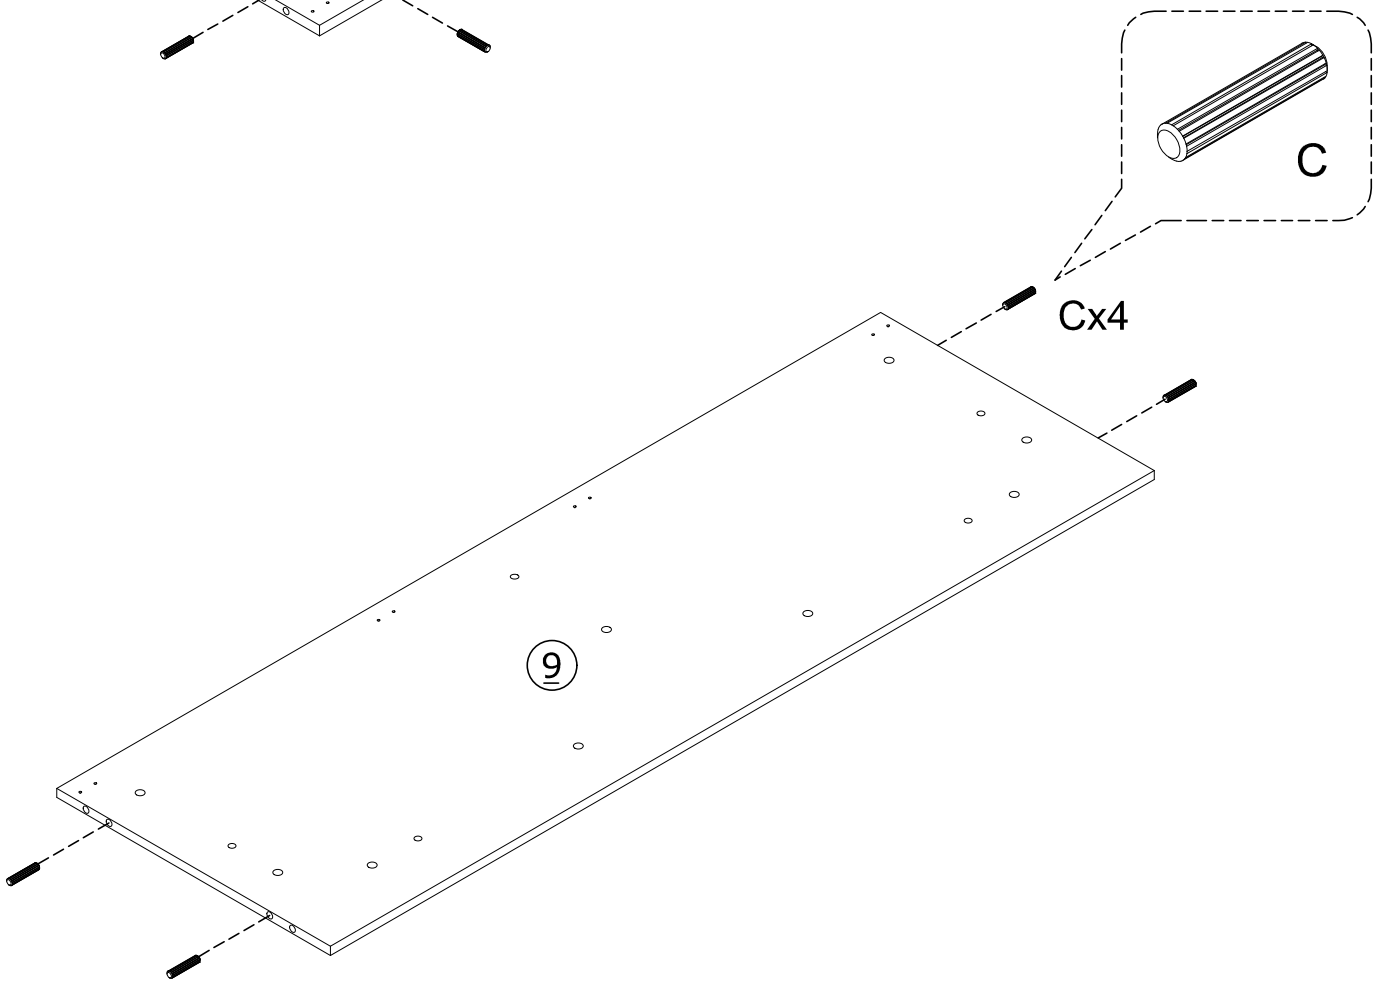






# 5


| O x 16 | H x 4 | |
|---|---|---|
|  M4 x 14 mm |  |  |

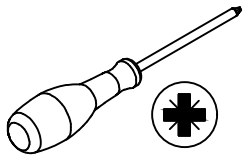


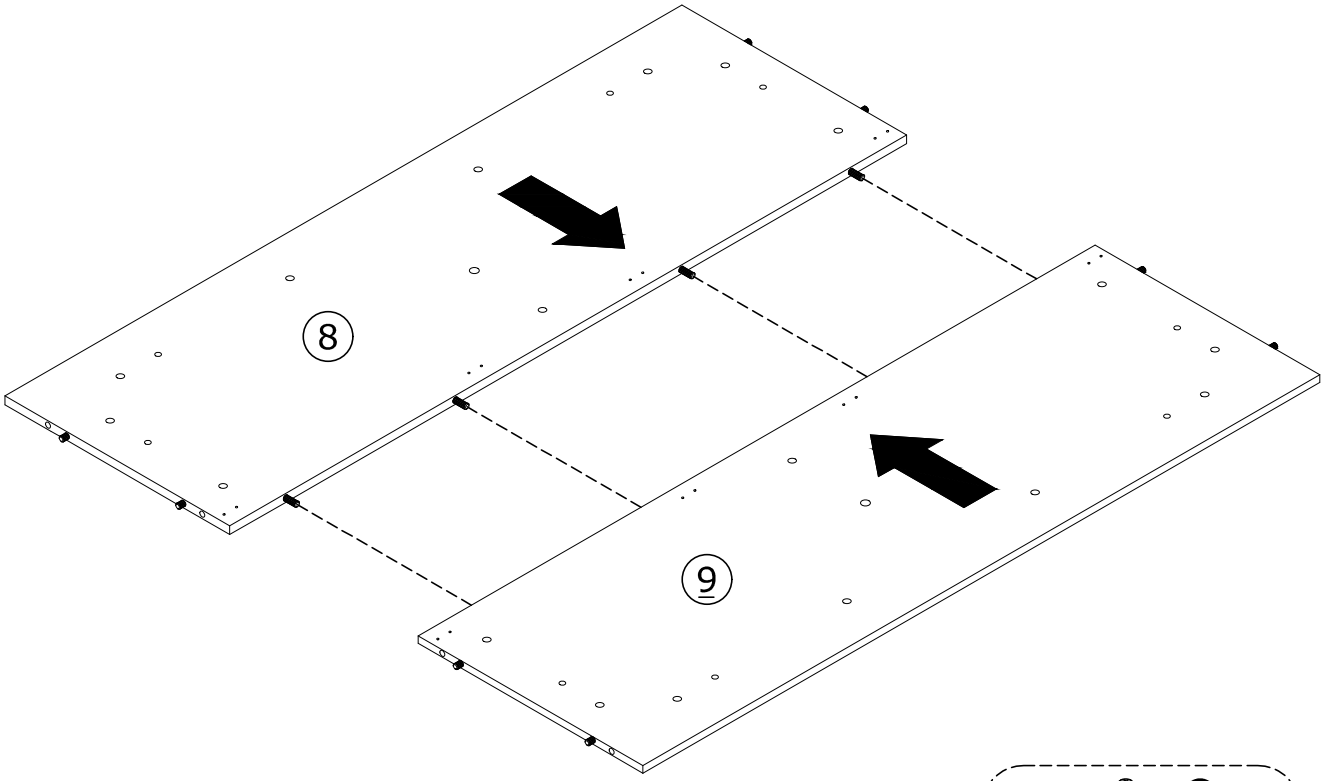


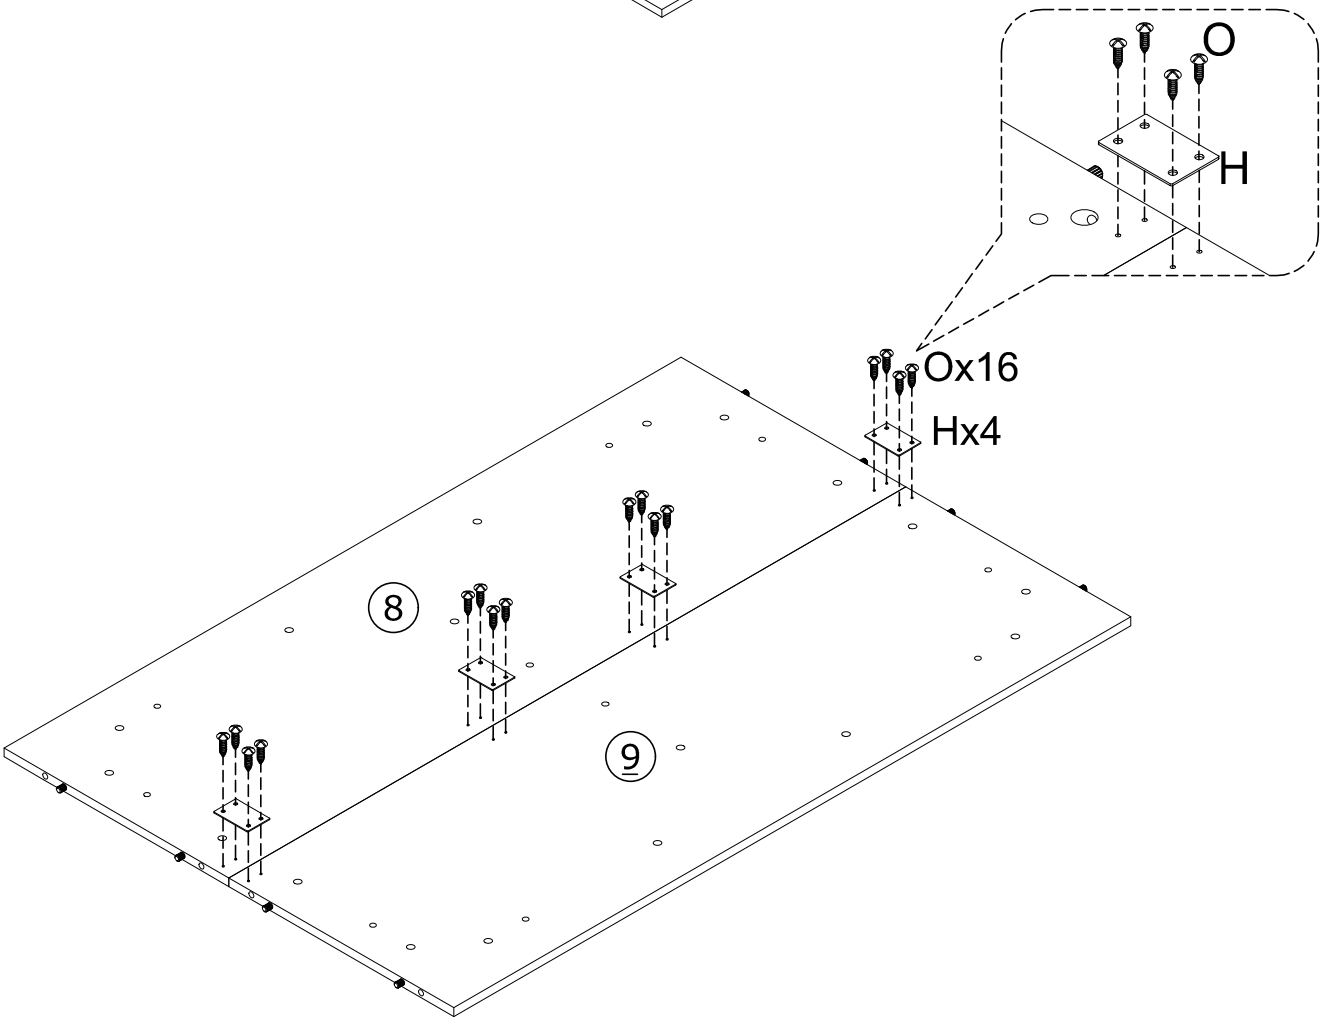
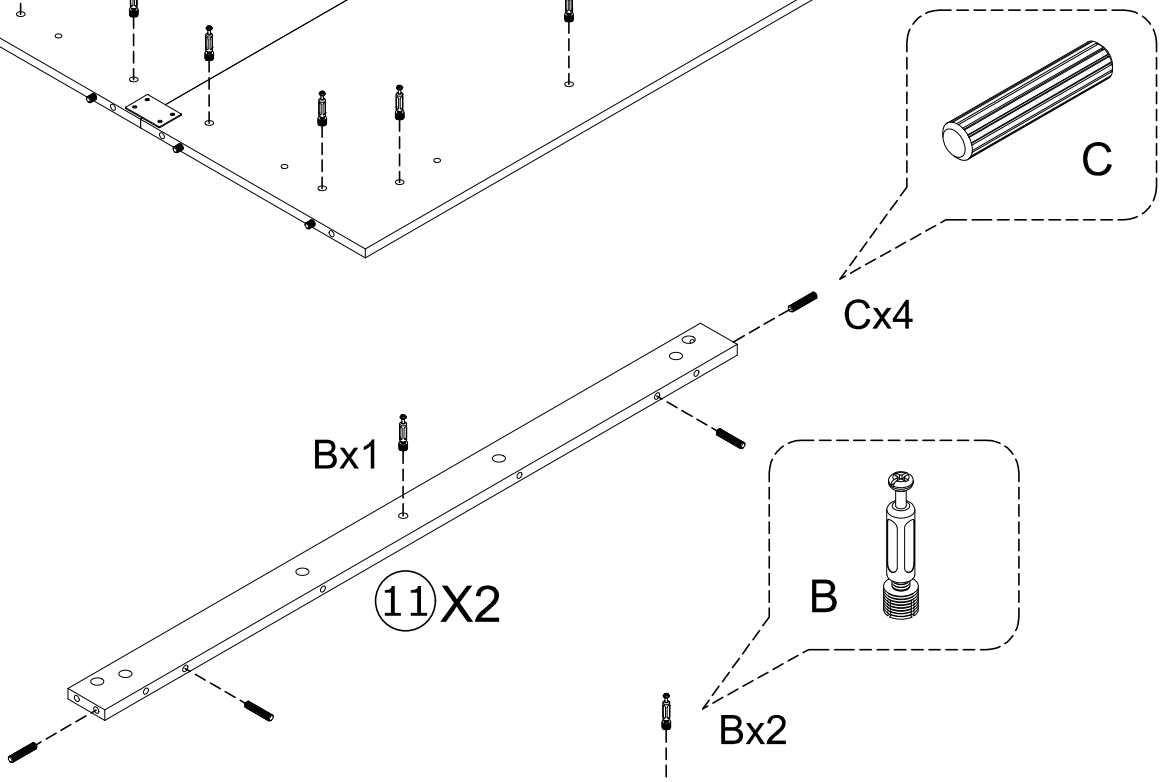
6

| B x 24 | C x 14 | |
|---|---|---|
|  Ø7 x 40 mm |  Ø8 x 40 mm |  |

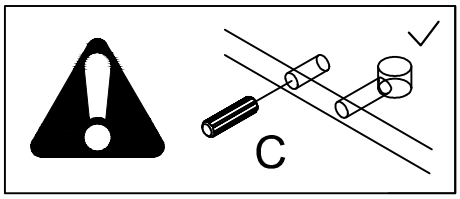

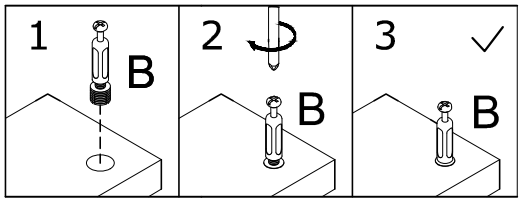


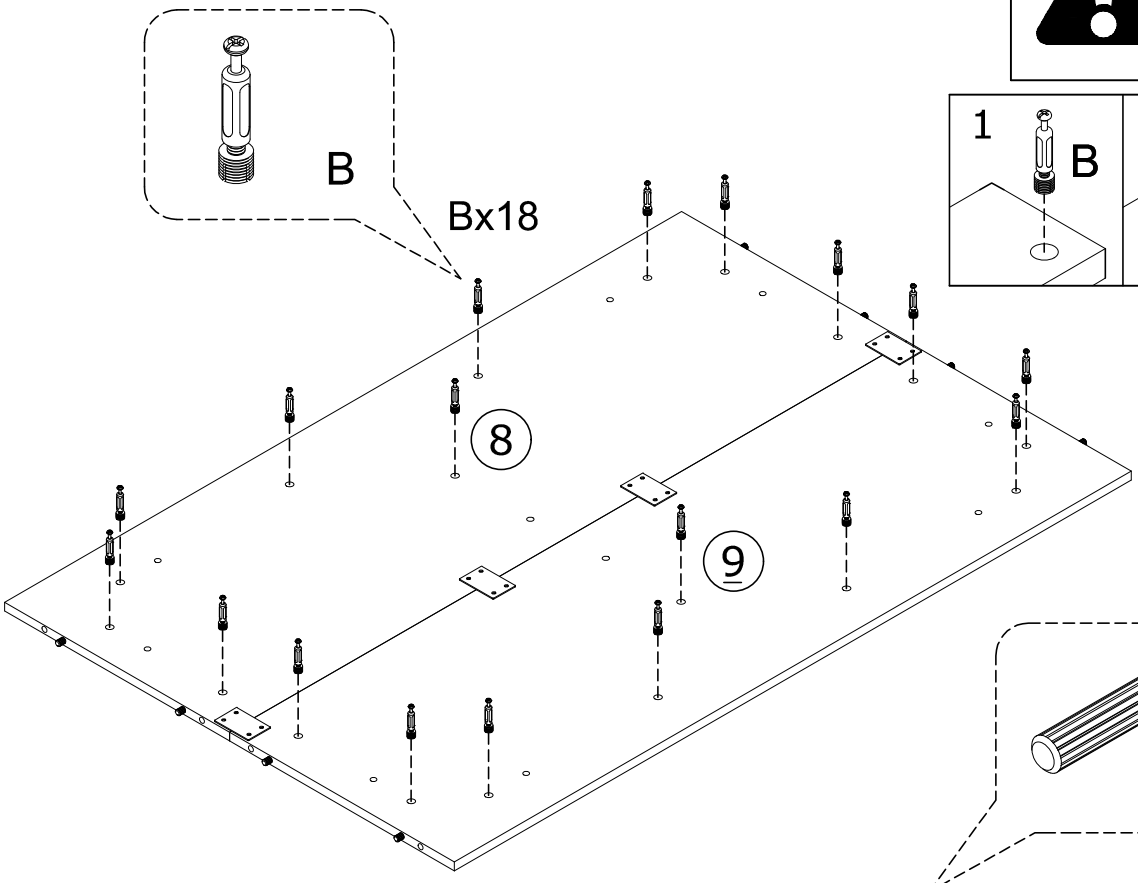
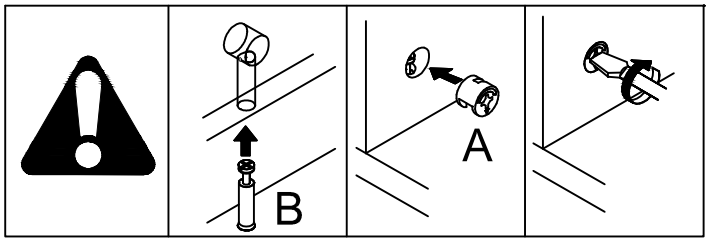
# 7


A x 6




Ø15 x 9.5 mm





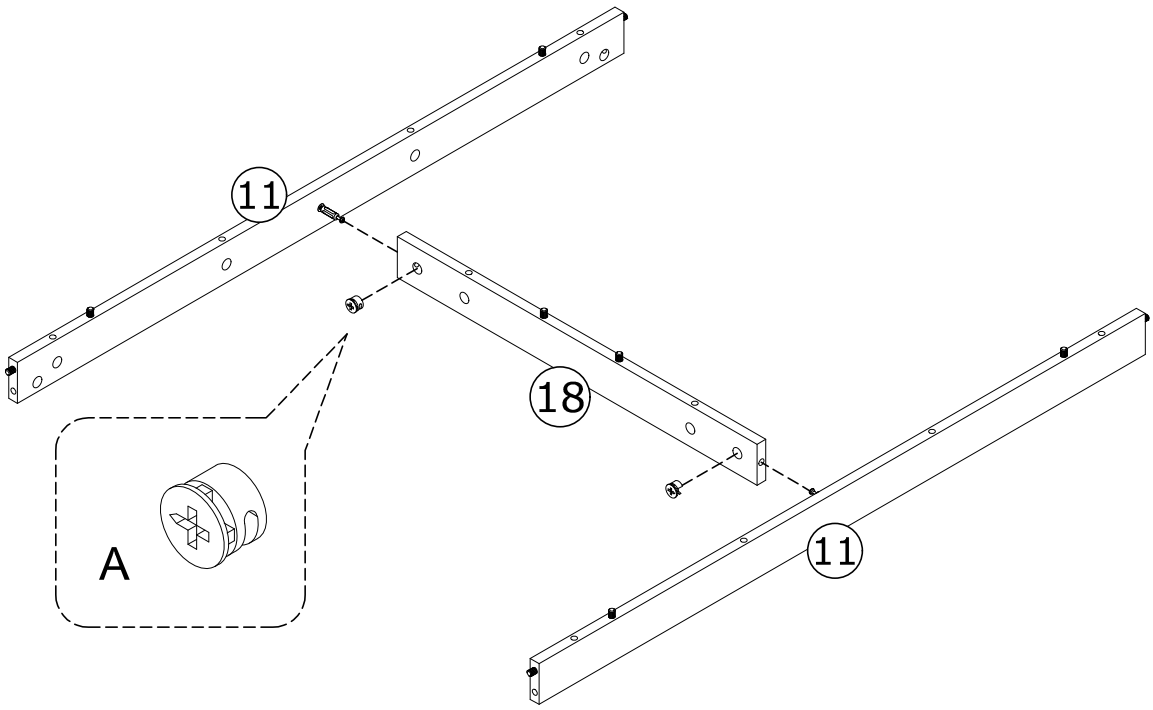


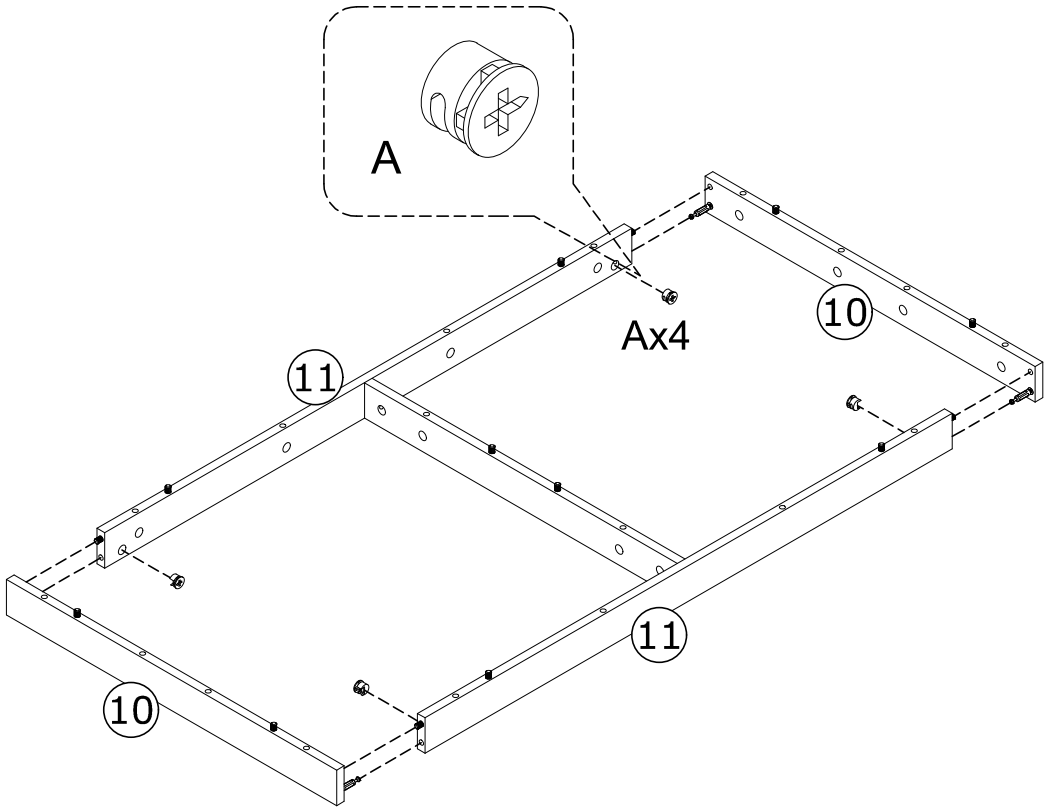
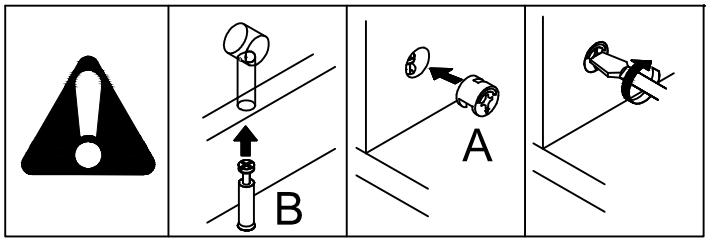
# 8


A x 18






Ø15 x 9.5 mm







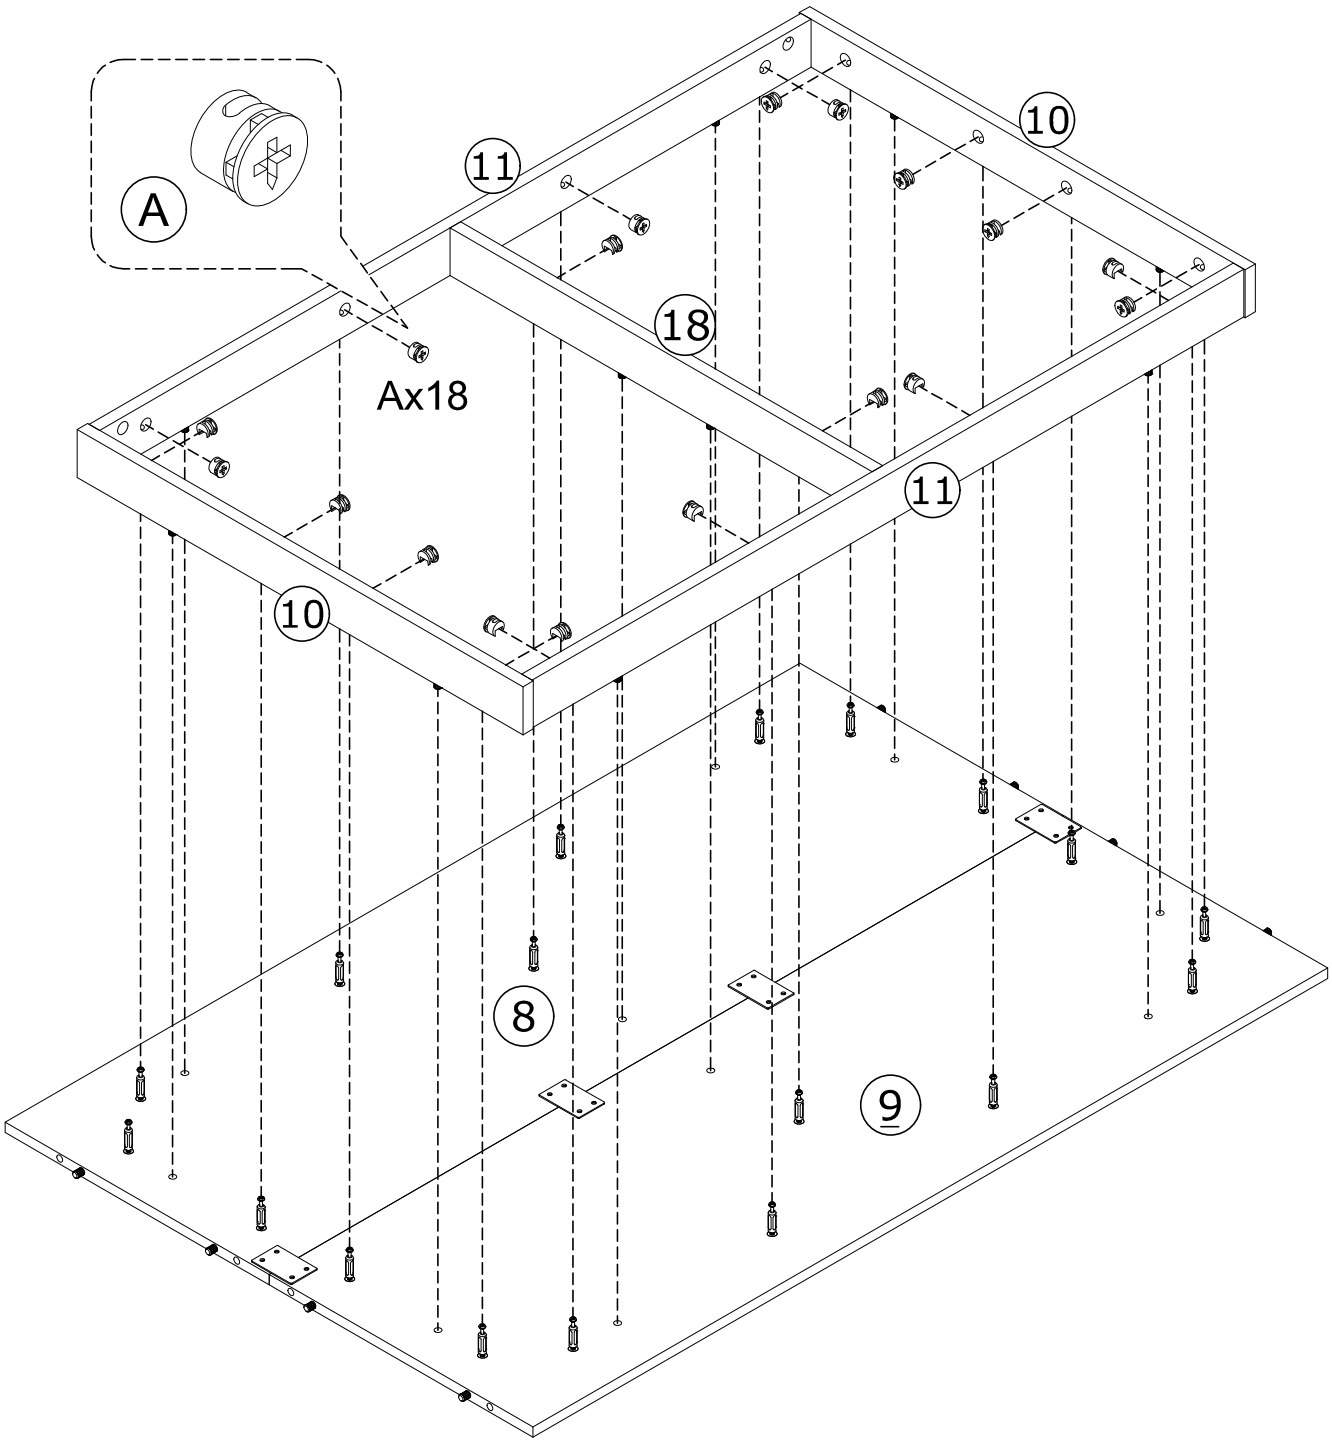



# 9


| K x 11 | B x 10 | C x 5 | |
|---|---|---|---|
|  |  Ø7 x 40 mm |  Ø8 x 40 mm | |

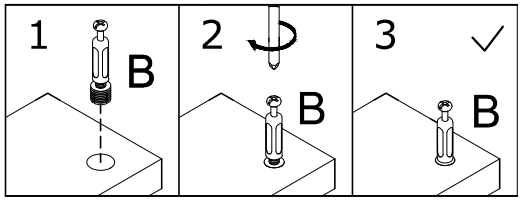


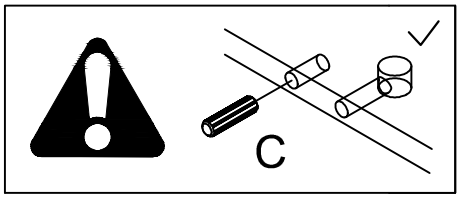


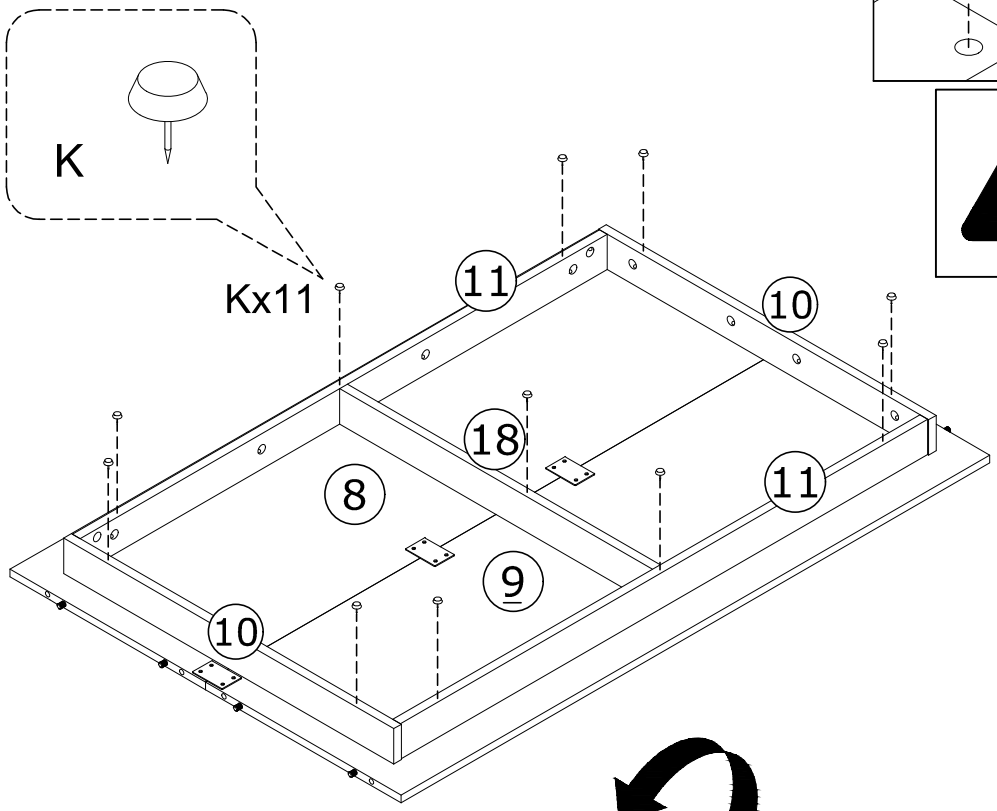
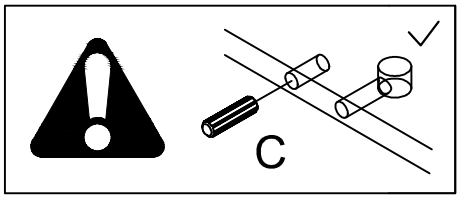



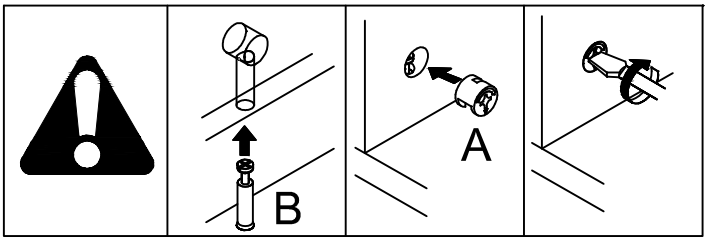

ROTATE 180°

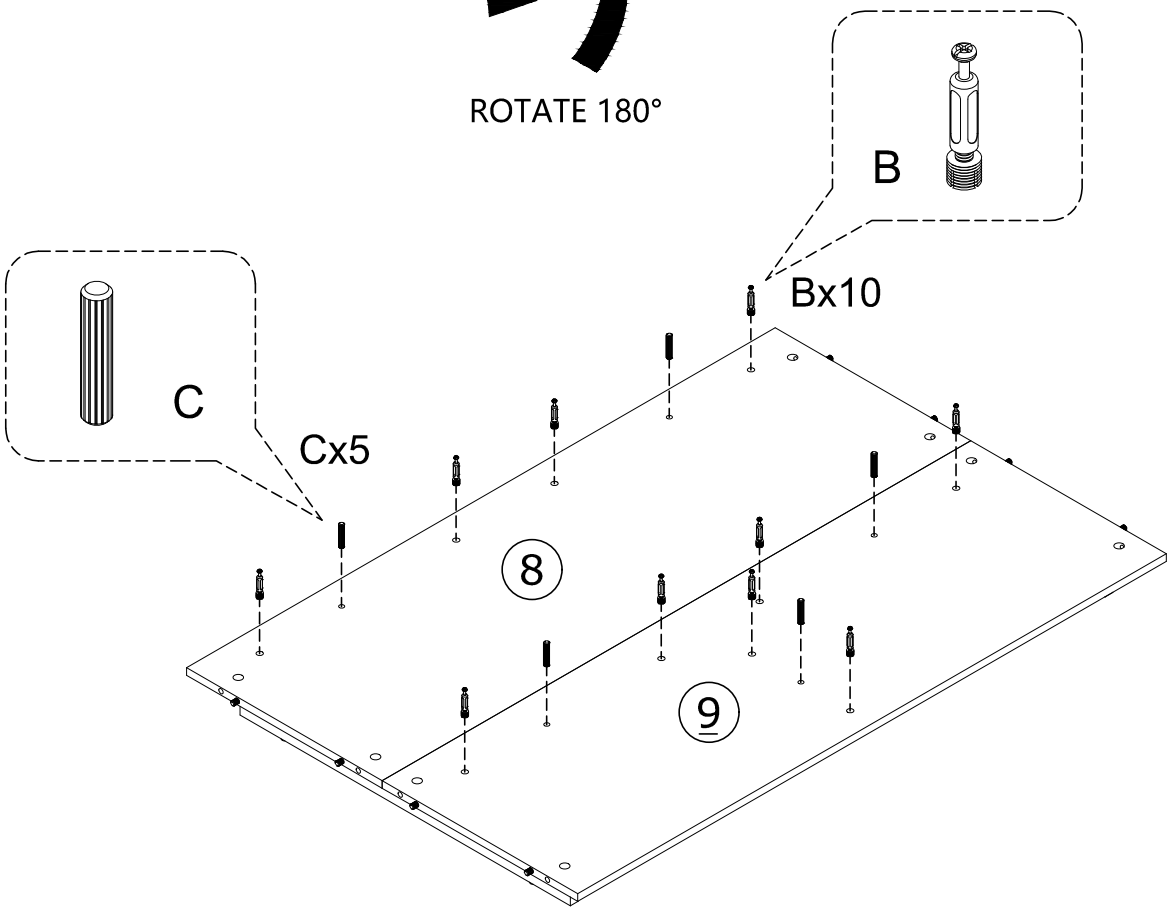



10
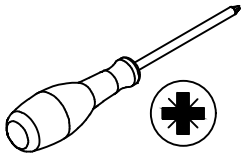
| C x 4 | A x 4 | |
|---|---|---|
|  |  |  |
| Ø8 x 40 mm | Ø15 x 9.5 mm | |






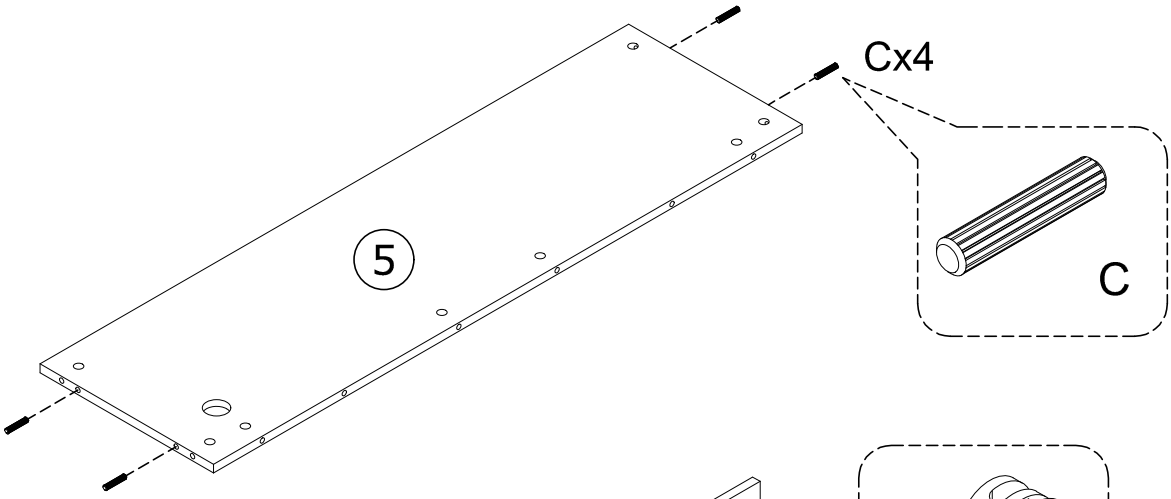



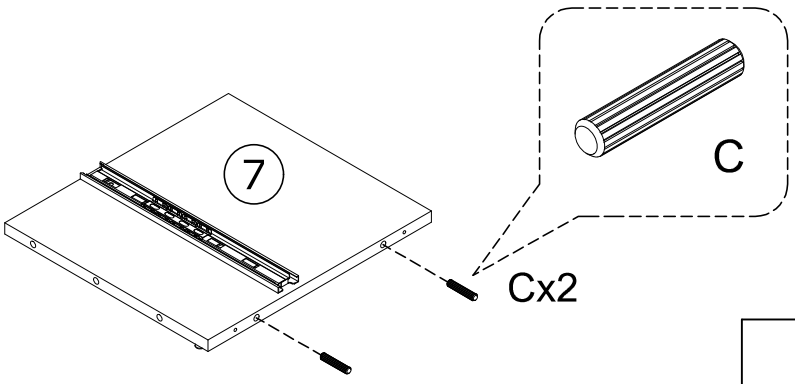


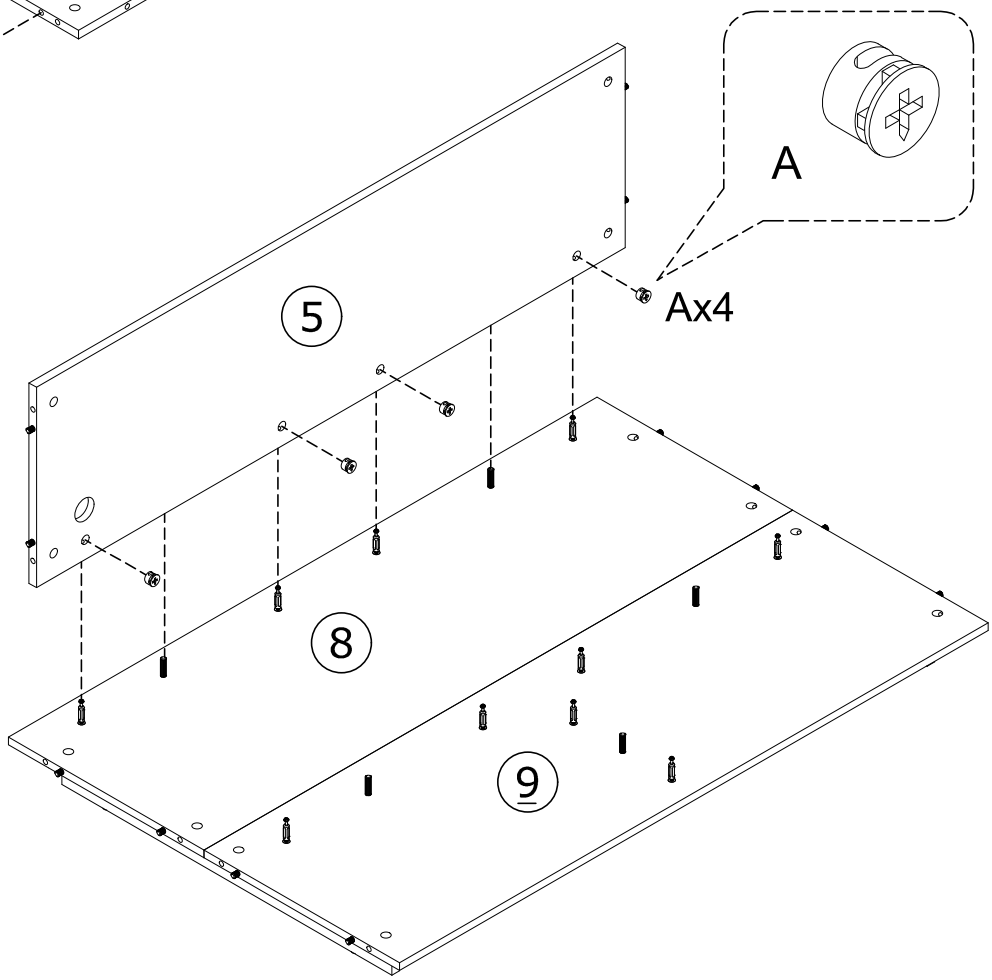
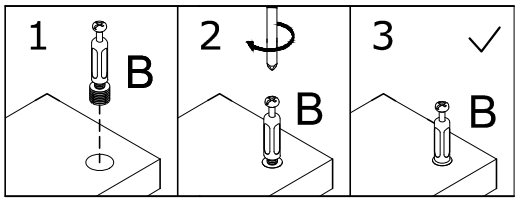



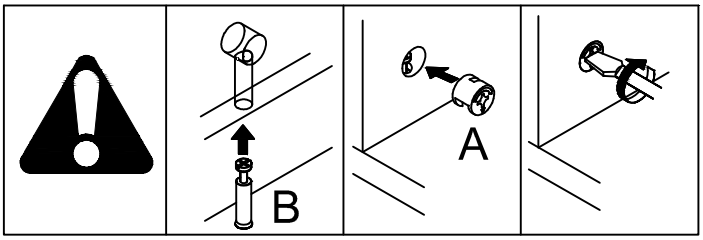
# 11

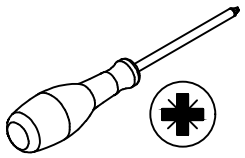
| C x 6 | B x 2 | A x 2 | |
|---|---|---|---|
|  |  |  |  |
| Ø8 x 40 mm | Ø7 x 40 mm | Ø15 x 9.5 mm | |

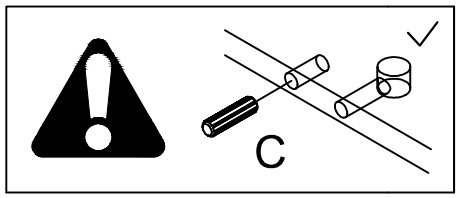






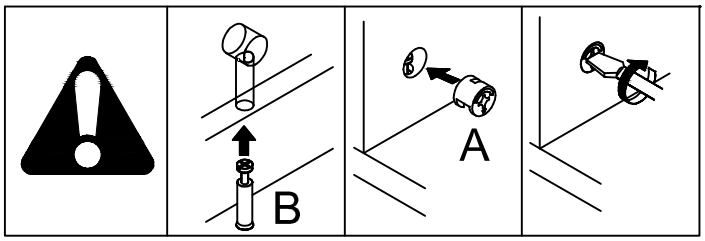
# 12


A x 6

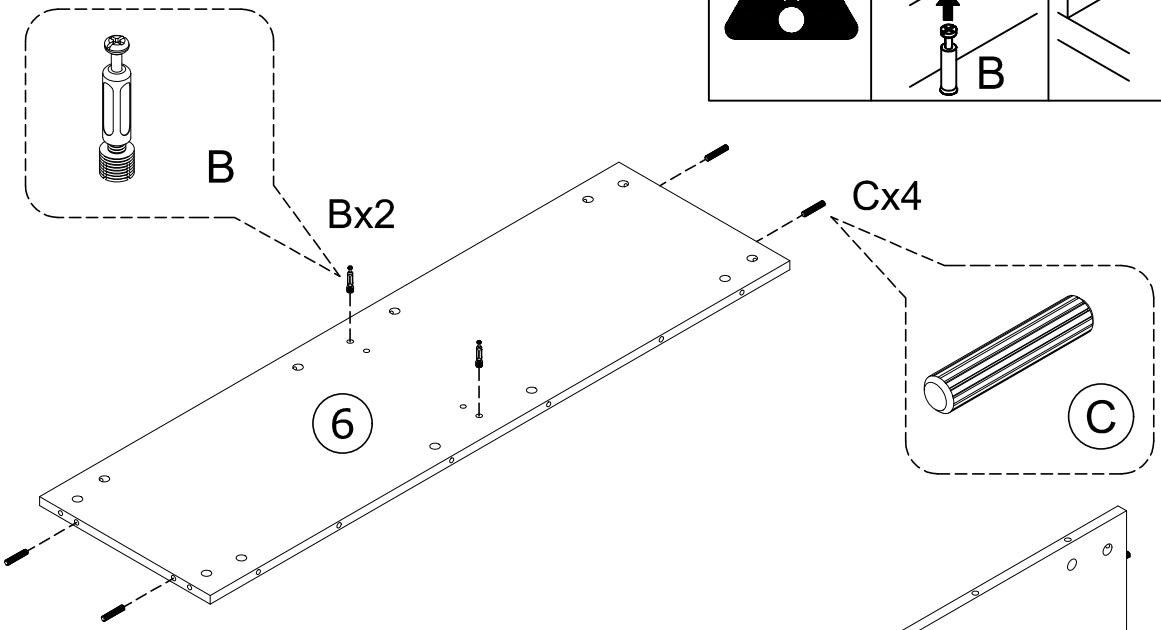

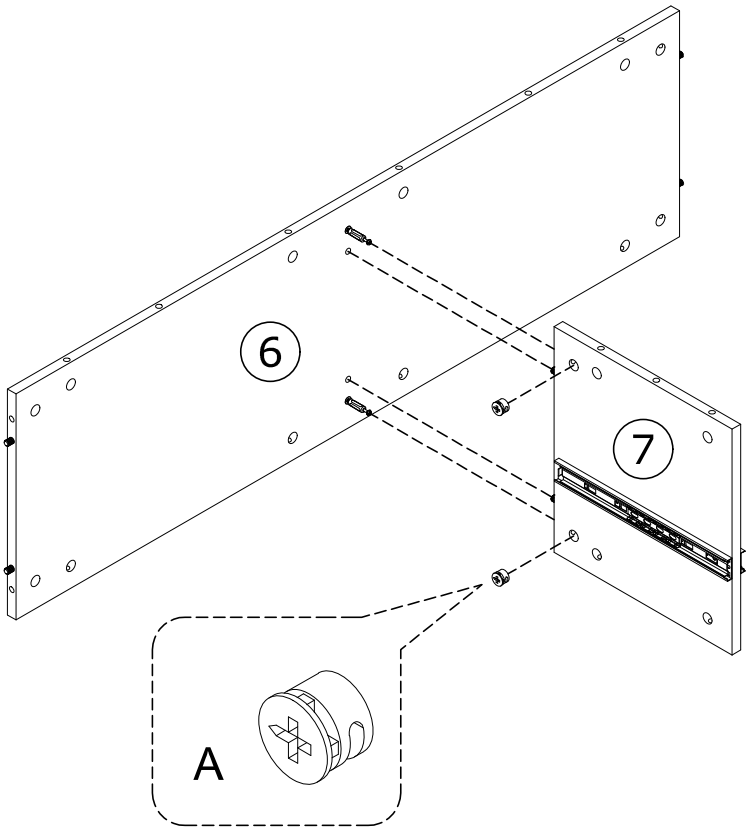Ø15 x 9.5 mm

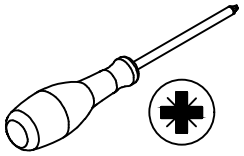




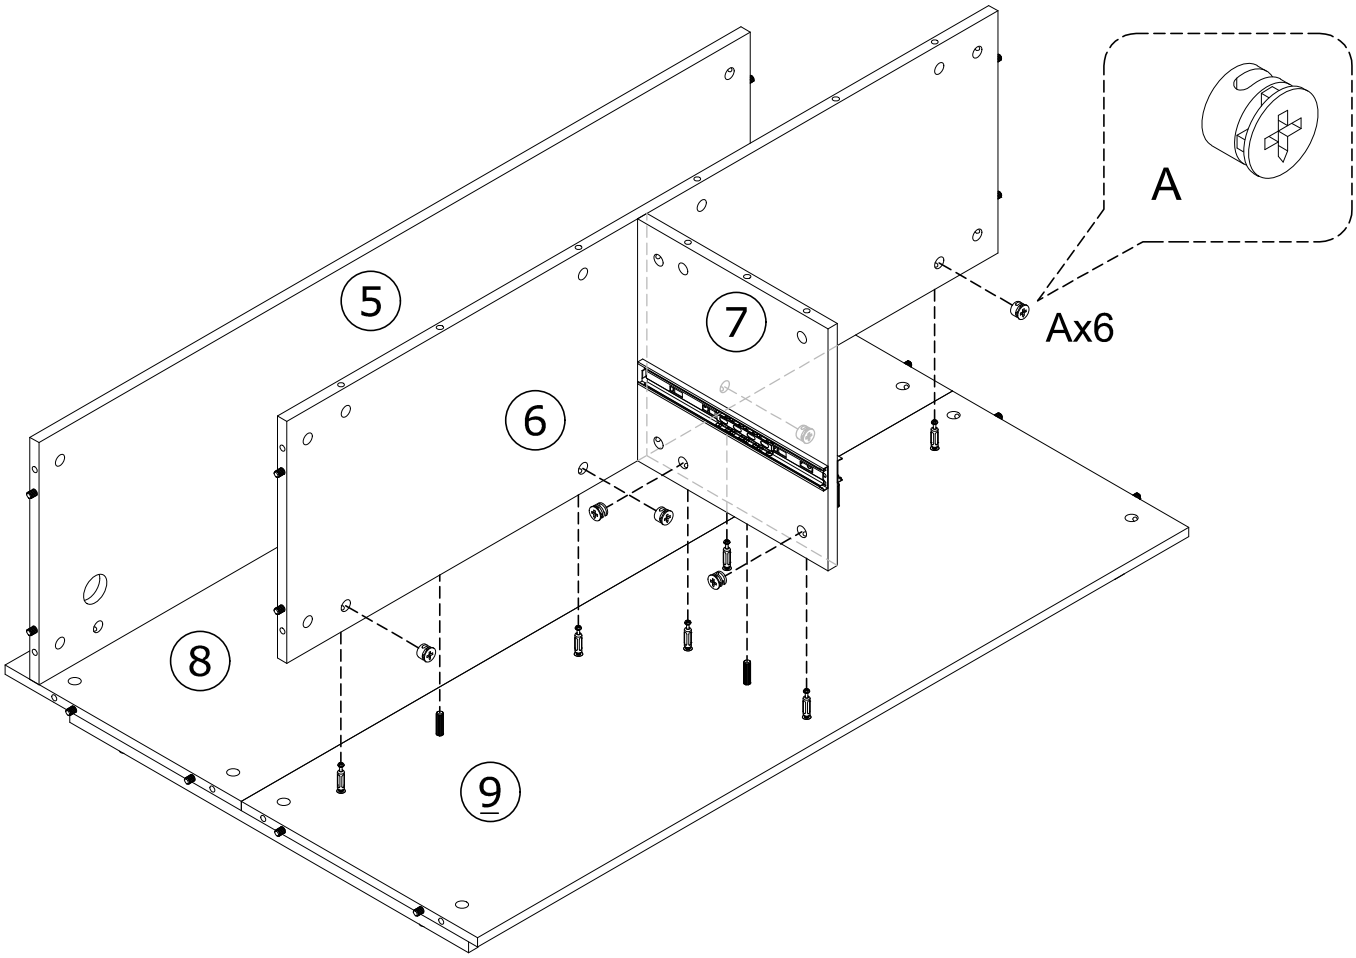



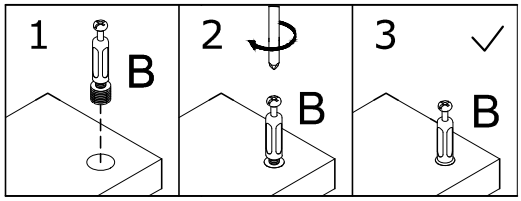
# 13


B x 16




Ø7 x 40 mm

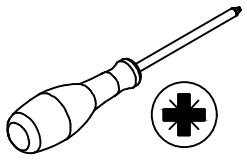



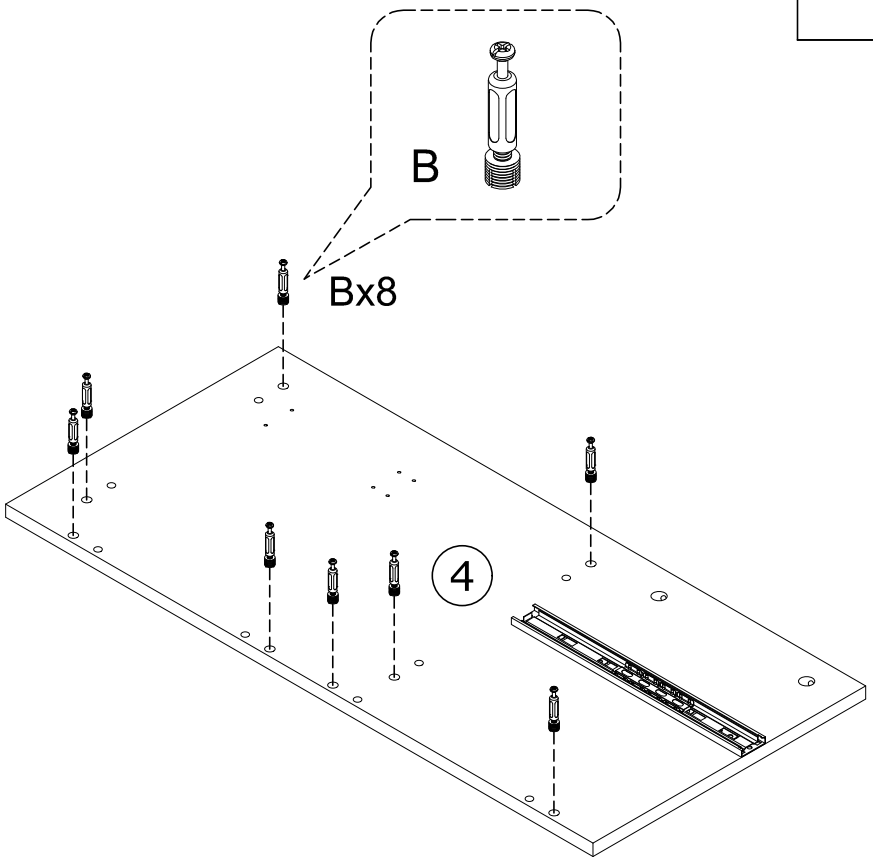


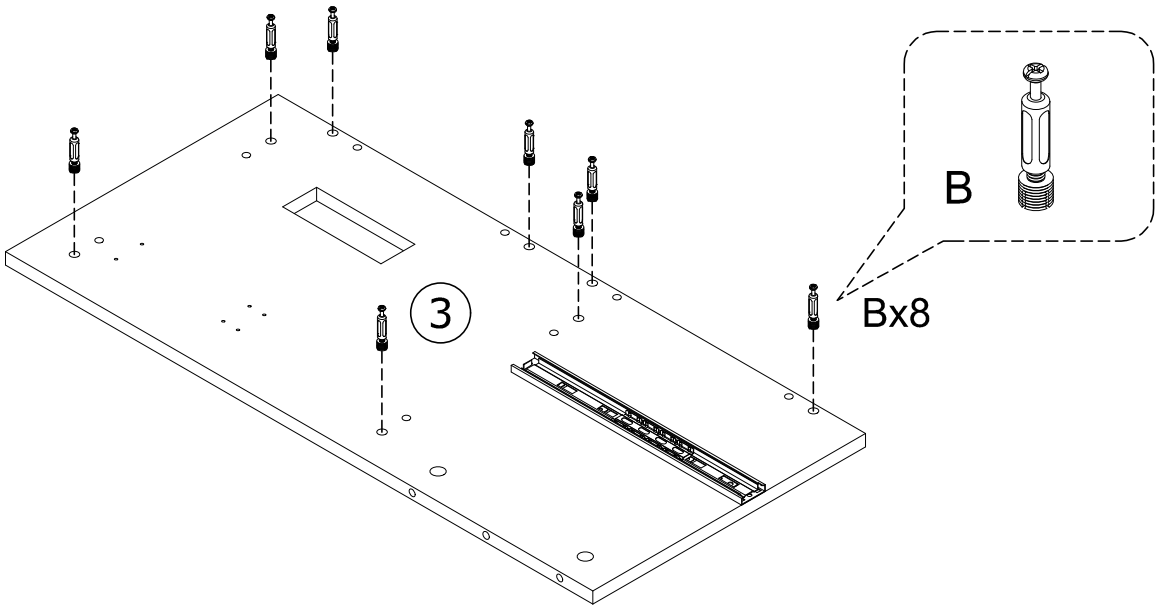
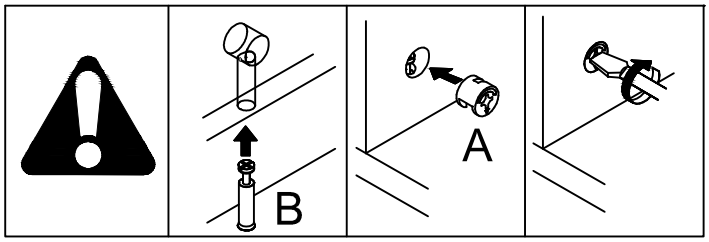
# 14


A x 16






Ø15 x 9.5 mm

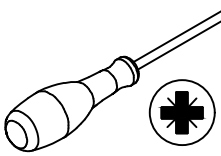




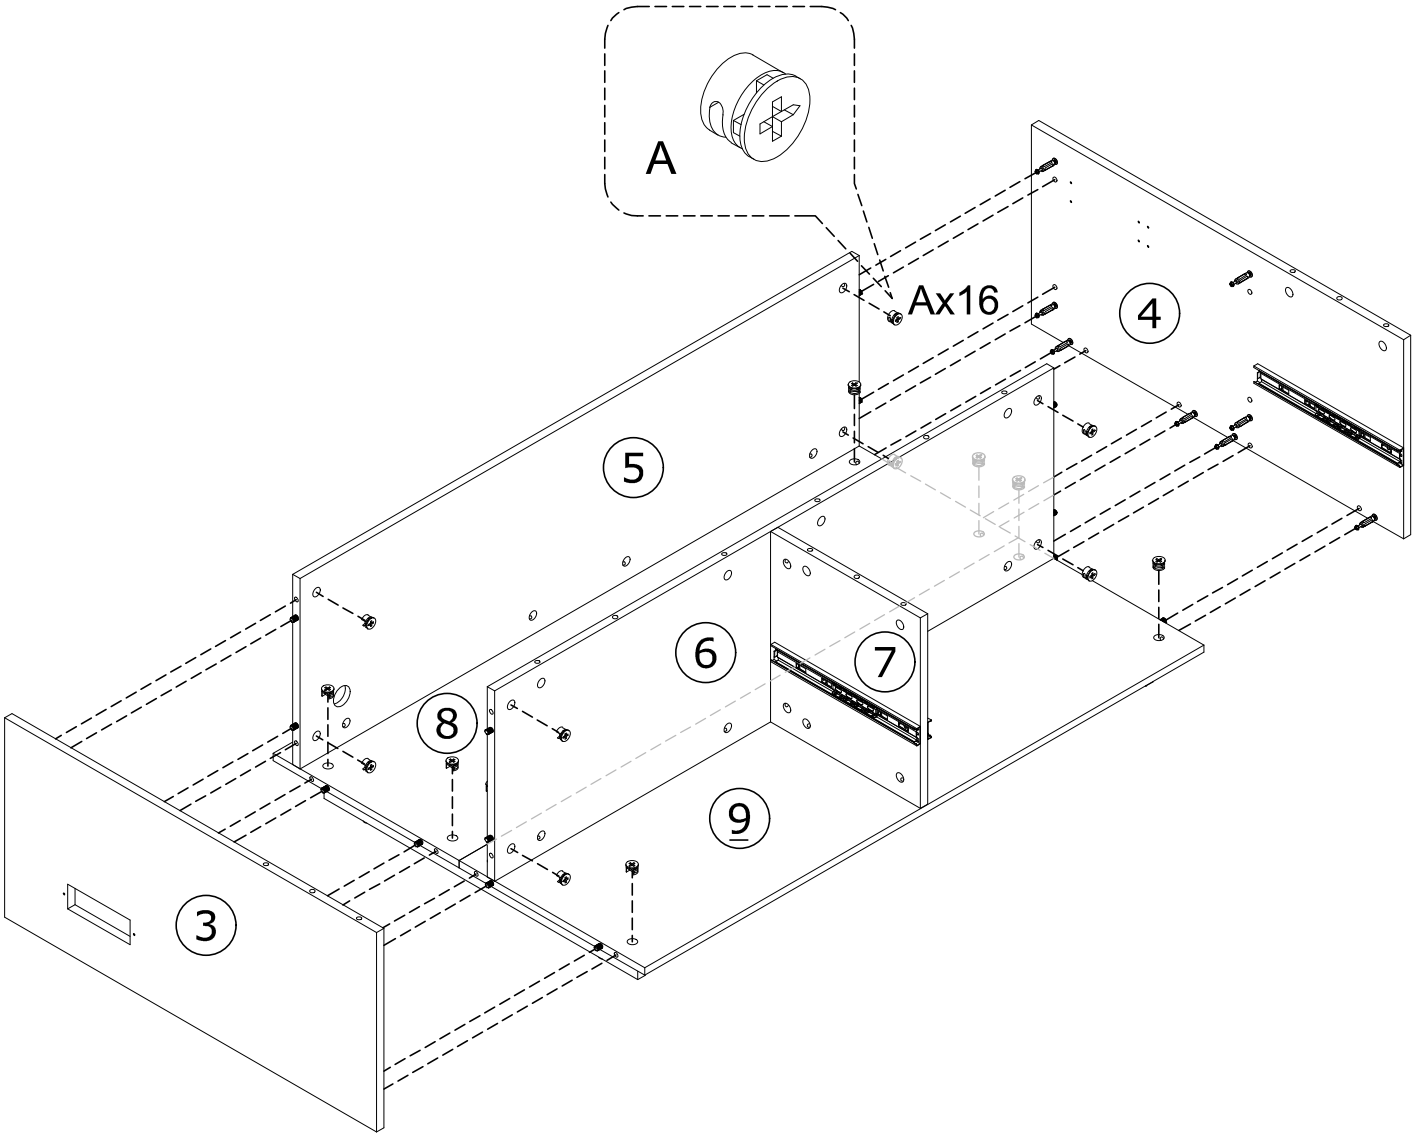



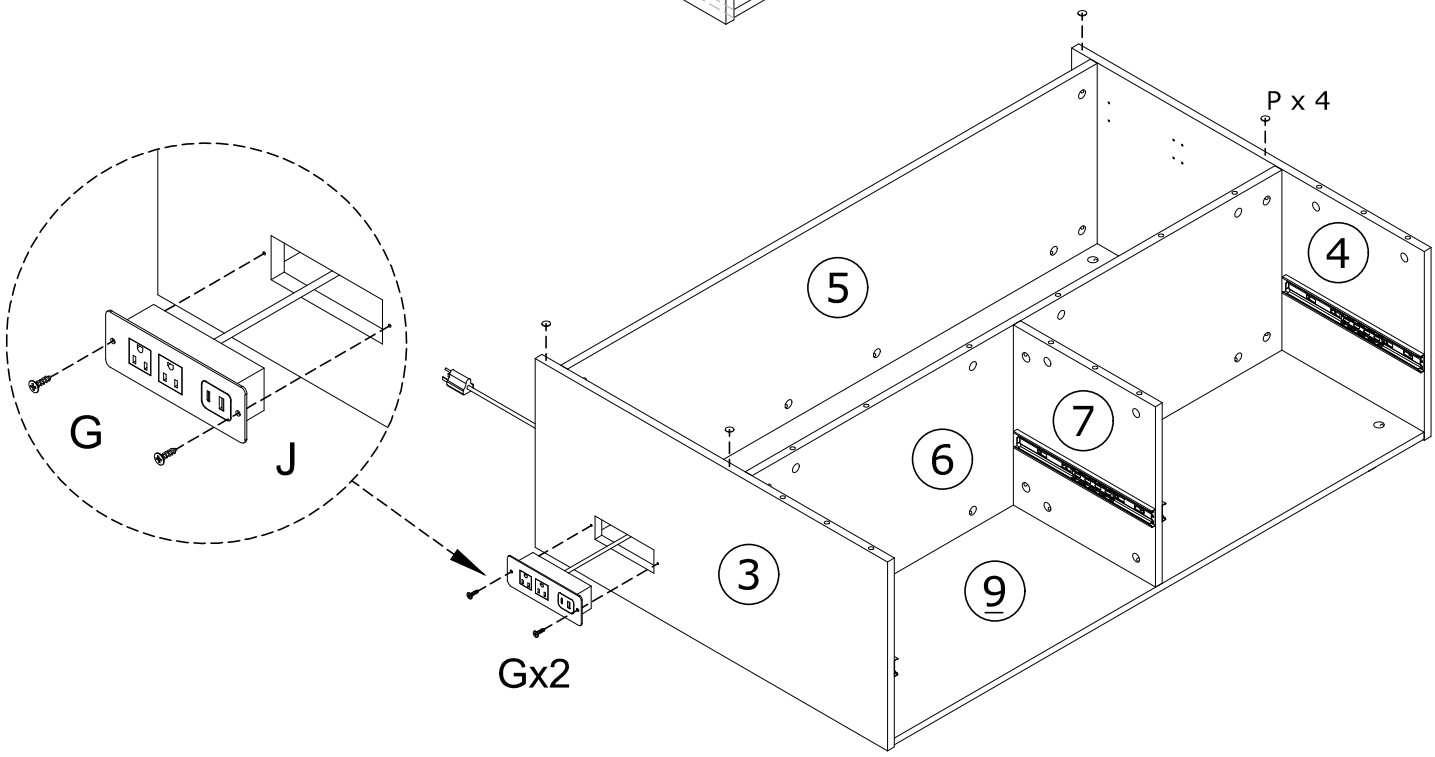
# 15
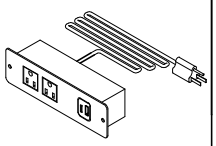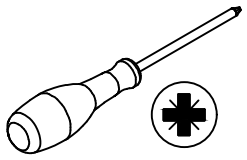
| I x 14 | G x 2 | J x 1 | P x 4 | |
|---|---|---|---|---|
|  |  Ø3.5 x 14 mm |  |  |  |




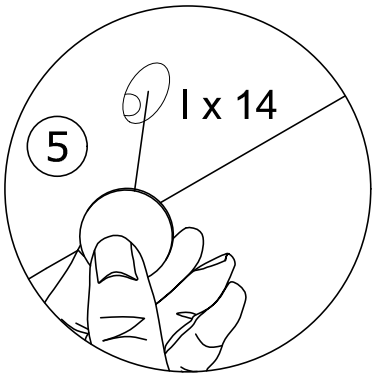




Stick the eccentric wheel sticker on the board (5) & (8) .

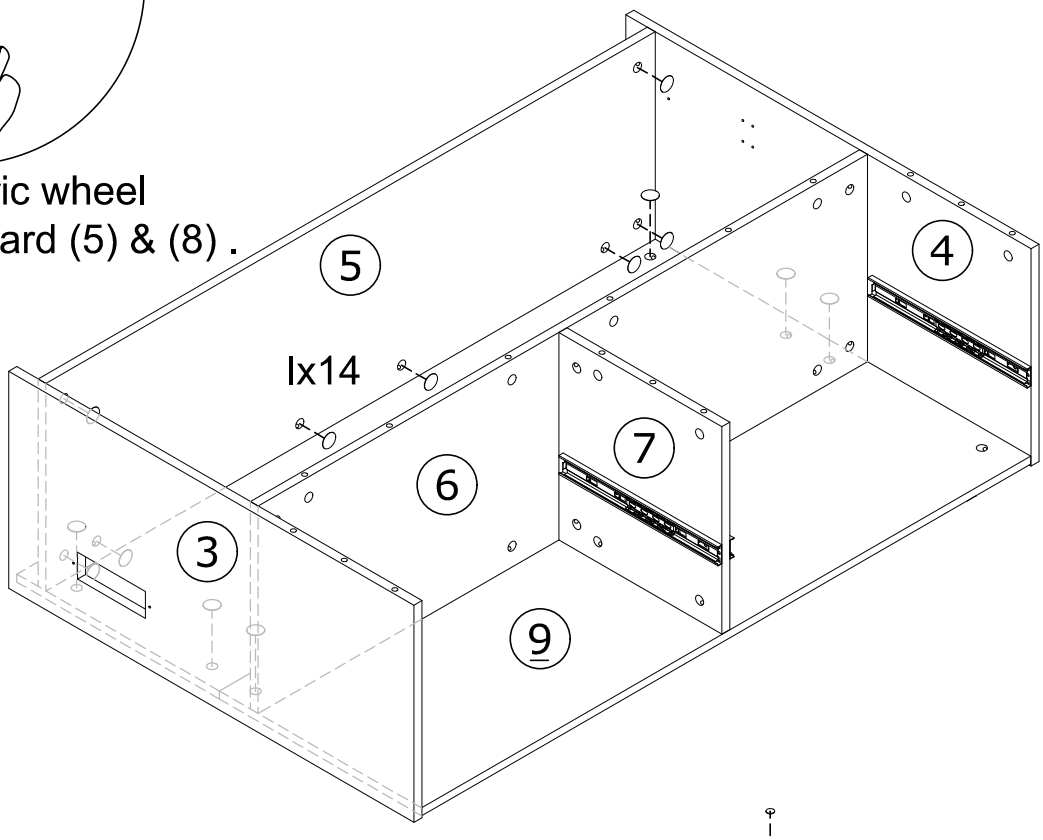


16

| D x 6 | L x 1 | M x 1 | N x 2 | F x 1 |
|---|---|---|---|---|
|  M4 x 15 mm |  |  |  M6 x 35 mm |  |

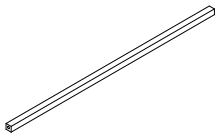

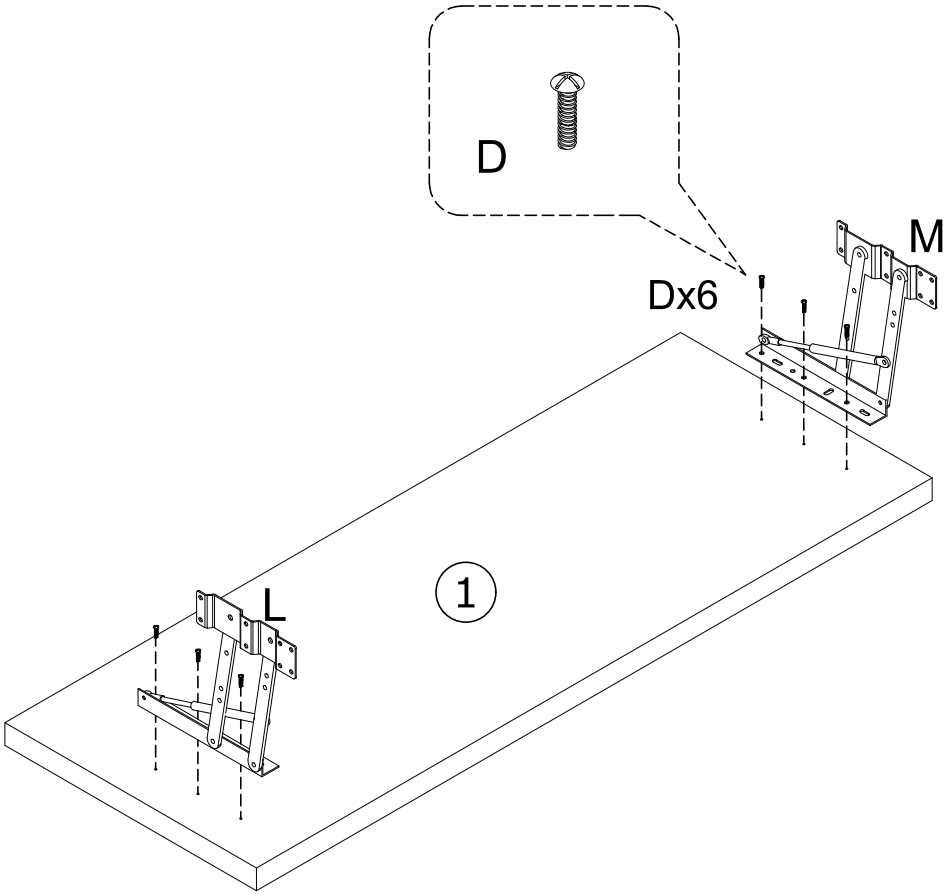


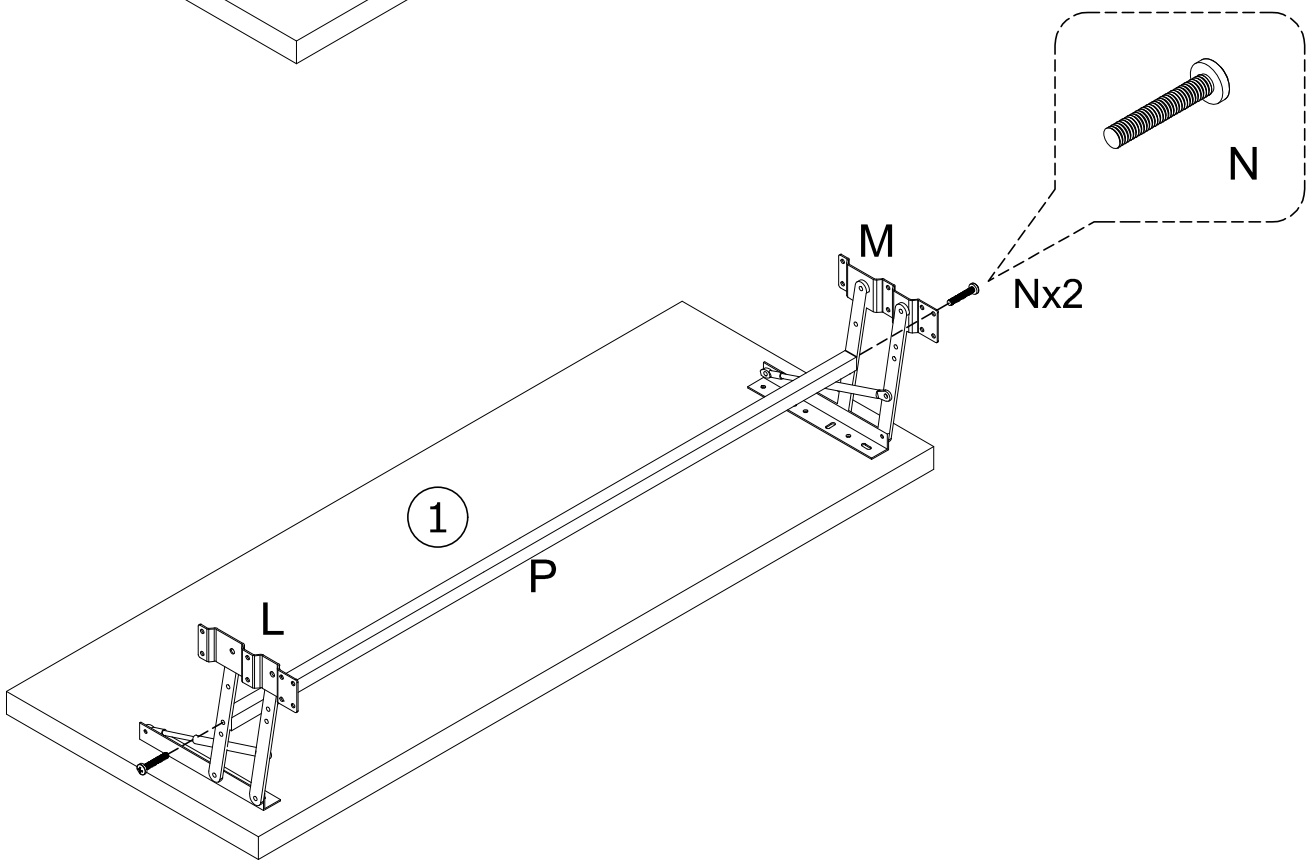
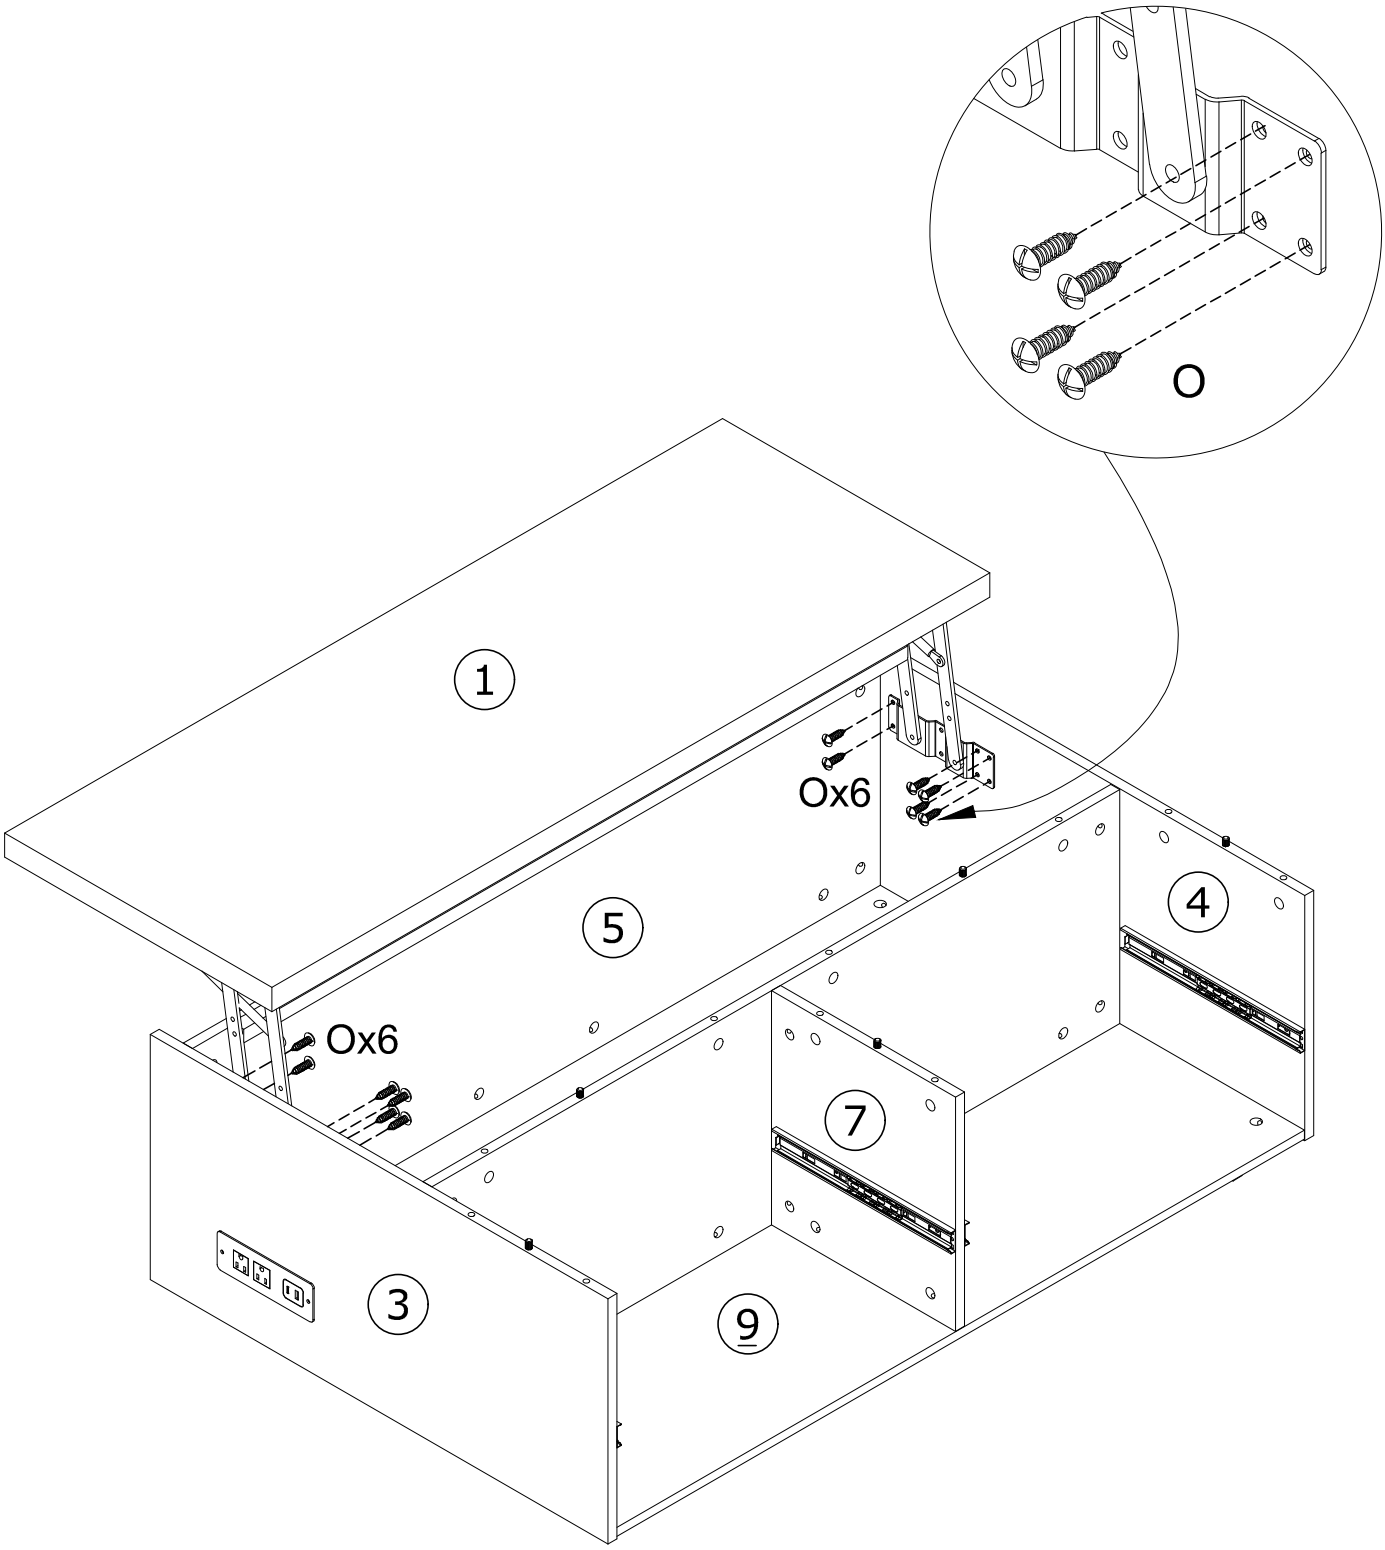
# 17

O x 12







M4 x 14 mm

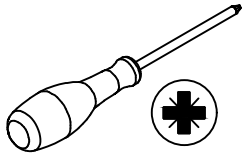






# 18
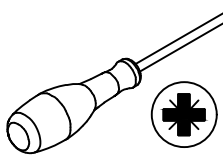
| B x 10 | C x 5 | |
|---|---|---|
|  |  |  |
| Ø7 x 40 mm | Ø8 x 40 mm | |

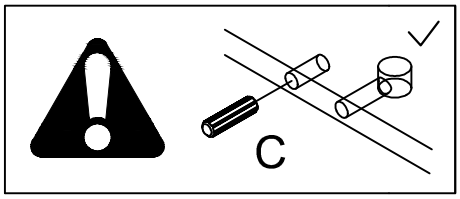

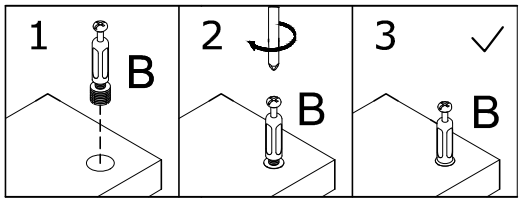


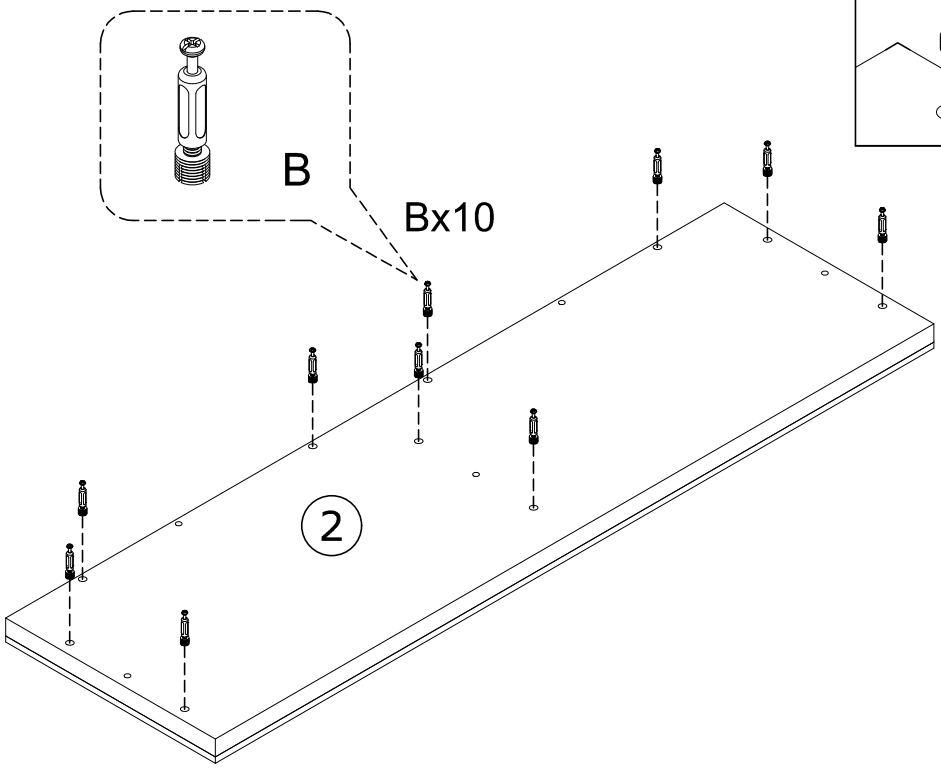
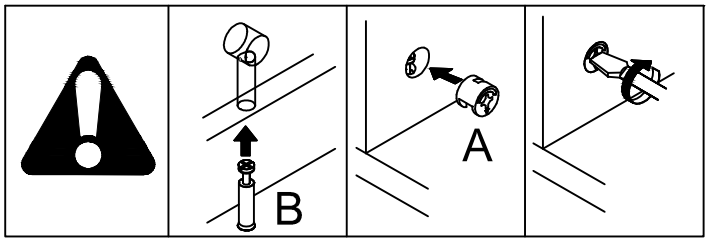
19

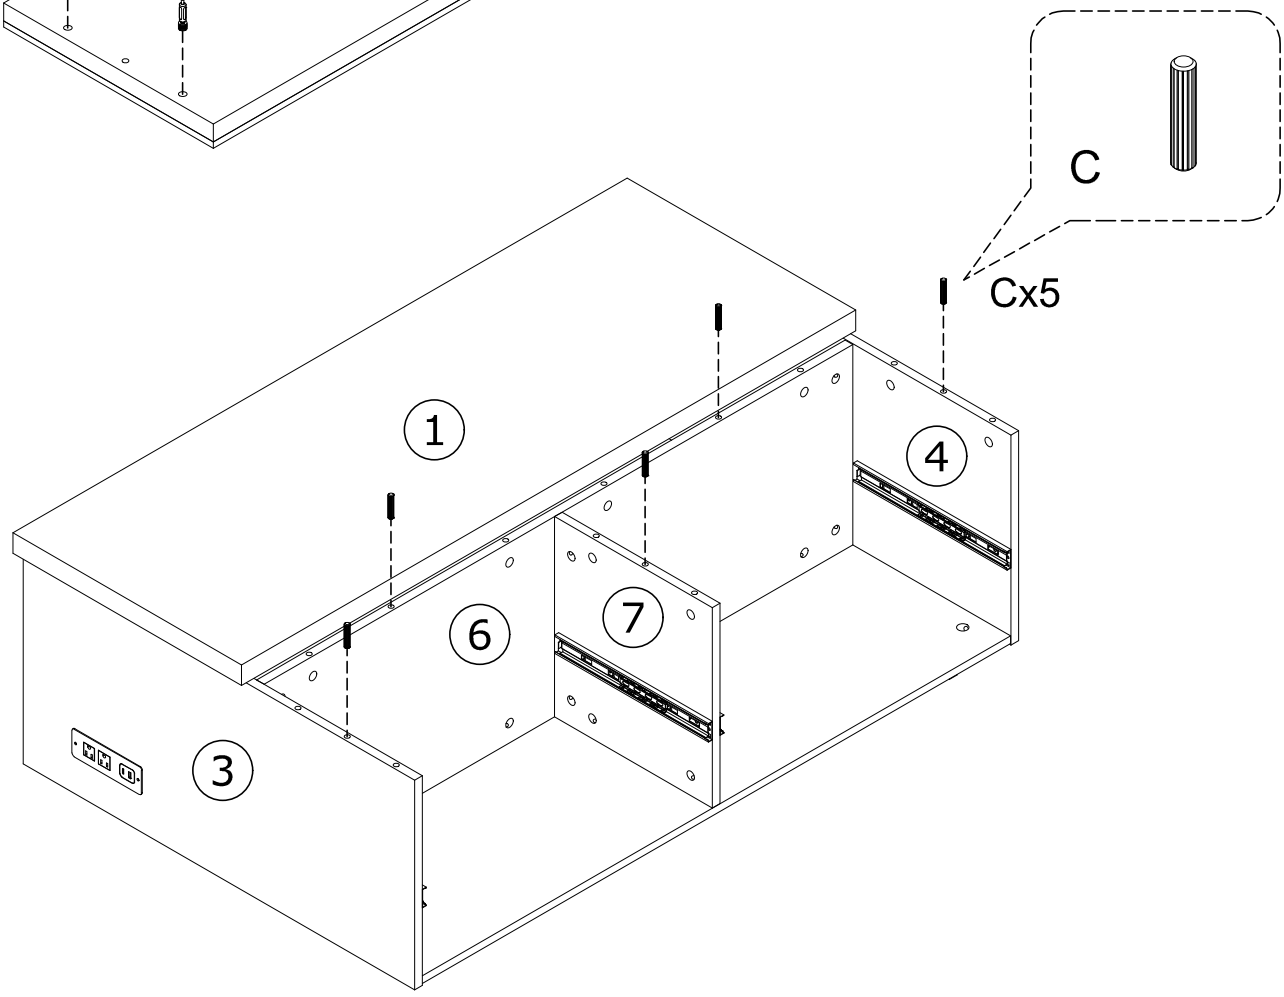
A x 10



Ø15 x 9.5 mm

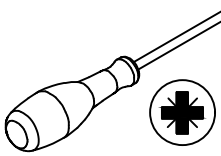

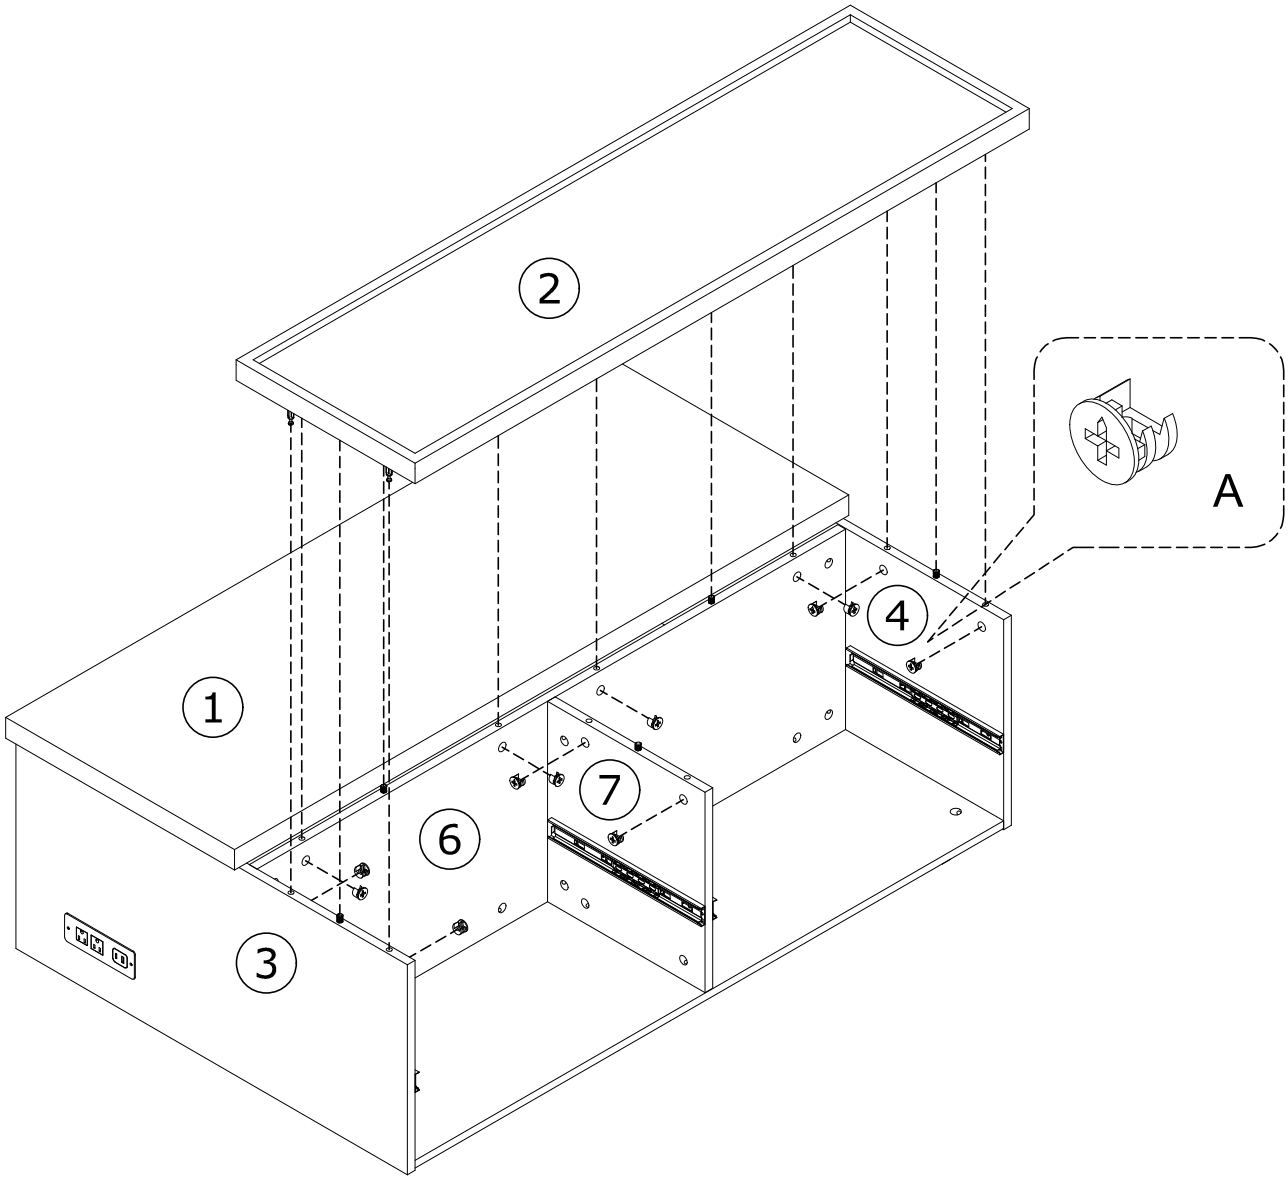

20

I x 8

Use the stickers I to cover the holes

