

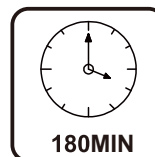
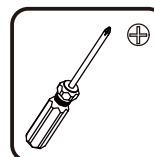
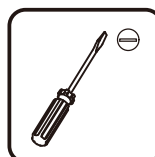



Installation & Assembly

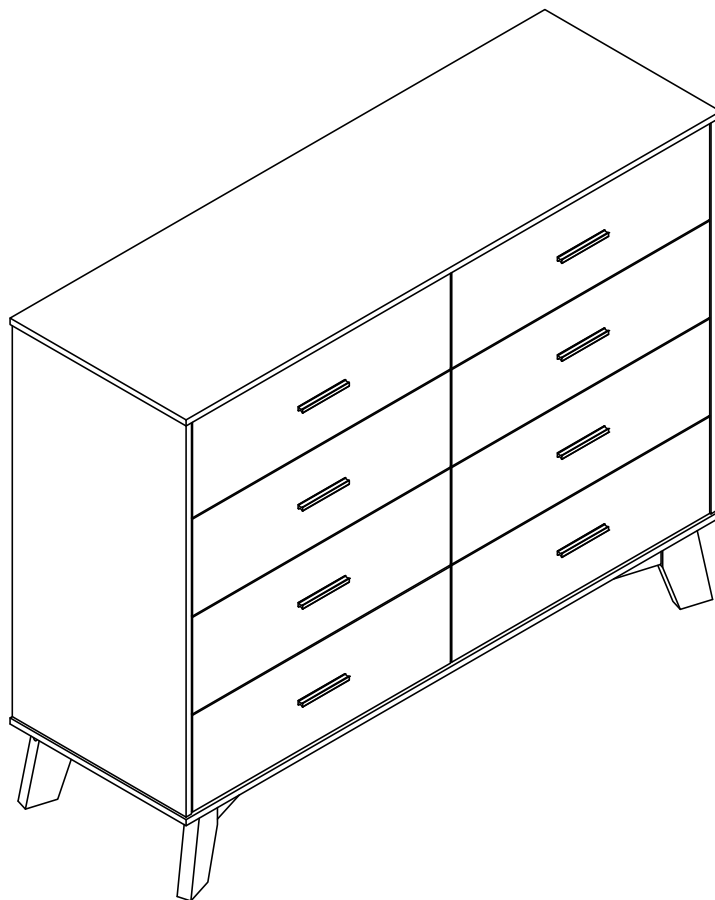


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

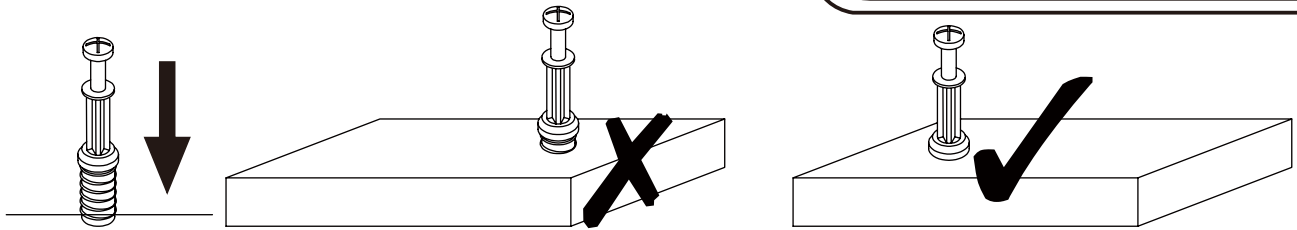


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

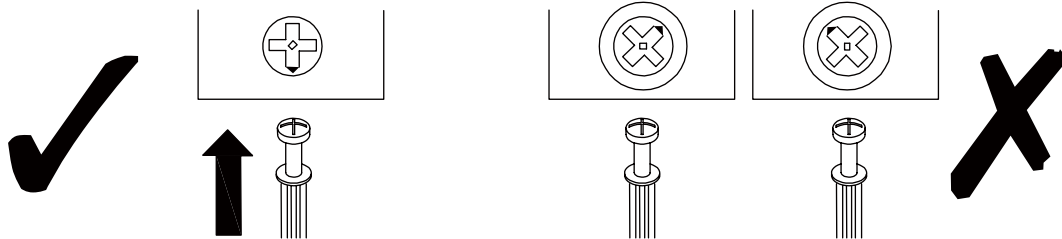

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










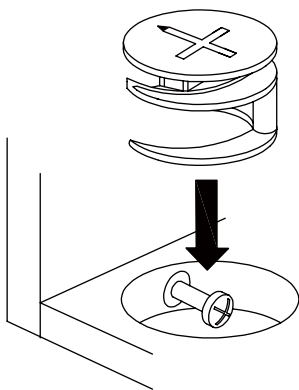










EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

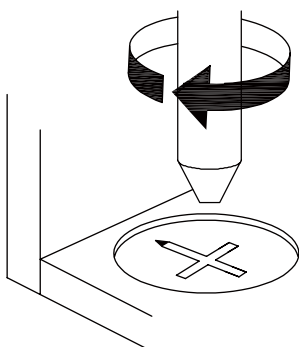

EN_Turn cam lock clockwise to tighten.

PACKING DETAILS

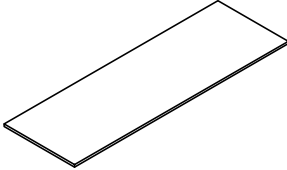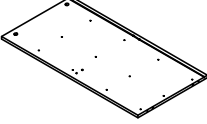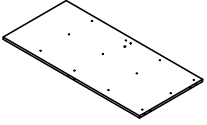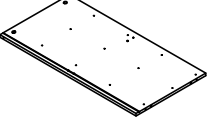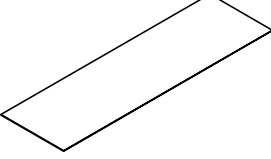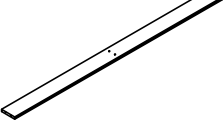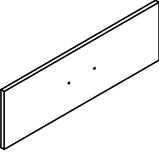


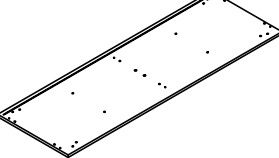
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x4	
⑧		x1	
⑨		x1	
⑩		x1	

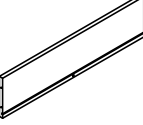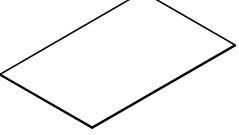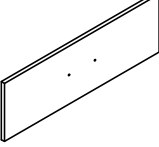NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x1	
⑬		x2	
⑮		x1	
⑯		x8	
⑰		x8	
⑱		x8	
⑲		x8	
⑳		x8	
㉑		x4	

PACKING DETAILS



[illegible]

PARTS

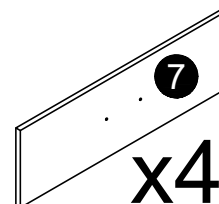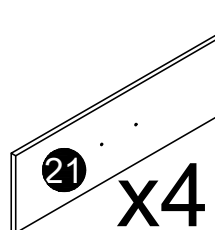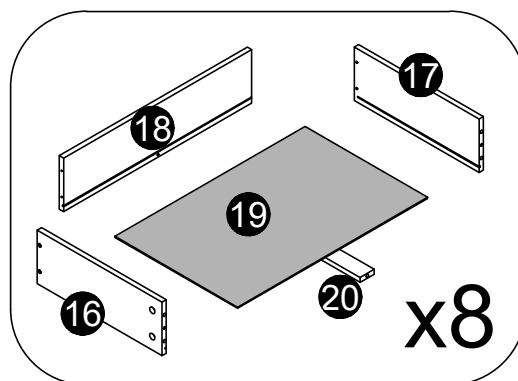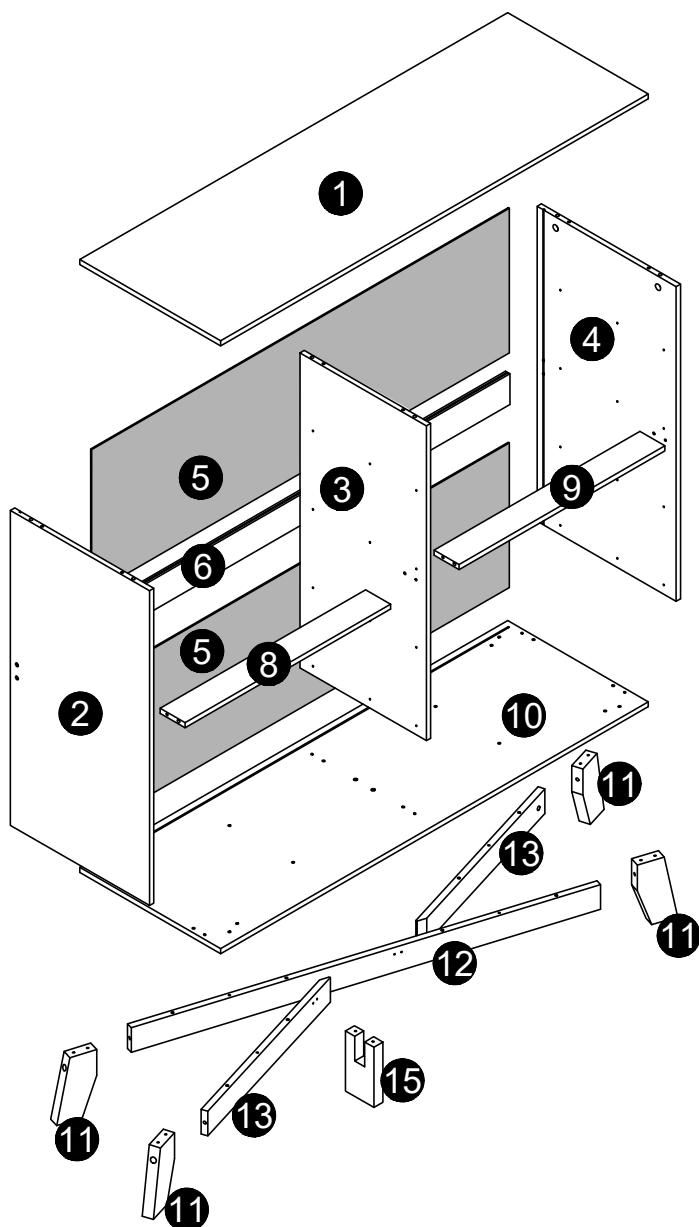

HARDWARE




A x49 $\varnothing 6 \times 35 \text{mm}$ +3(spare)	B x49 $\varnothing 15 \times 10 \text{mm}$ +3(spare)	C x40 $\varnothing 6 \times 30 \text{mm}$ +4(spare)	D x55 $\varnothing 4 \times 35 \text{mm}$ +5(spare)	E x112 $\varnothing 3.5 \times 12 \text{mm}$ +8(spare)	F x4
H x14 $\varnothing 5 \times 35 \text{mm}$ +1(spare)	I x1	J x8 J-1 J-2	K x2 $\varnothing 4 \times 14 \text{mm}$ K-1 K-2	L x10 $\varnothing 3 \times 16 \text{mm}$ +1(spare) L-1 L-2	M x2 $\varnothing 6 \times 30 \text{mm}$
N x8 +2(spare)	O x4 $\varnothing 10 \times 10 \text{mm}$	P x4 $\varnothing 6 \times 80 \text{mm}$			
CL x8 L350mm	CR x8 L350mm	DL x8 L350mm	DR x8 L350mm		

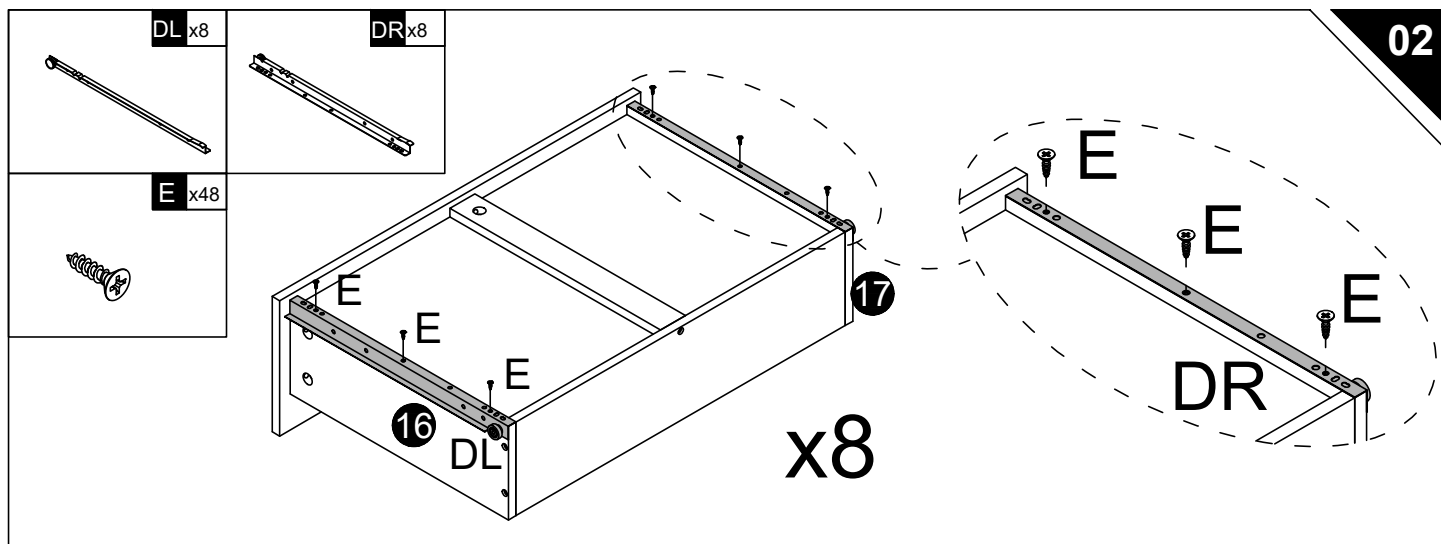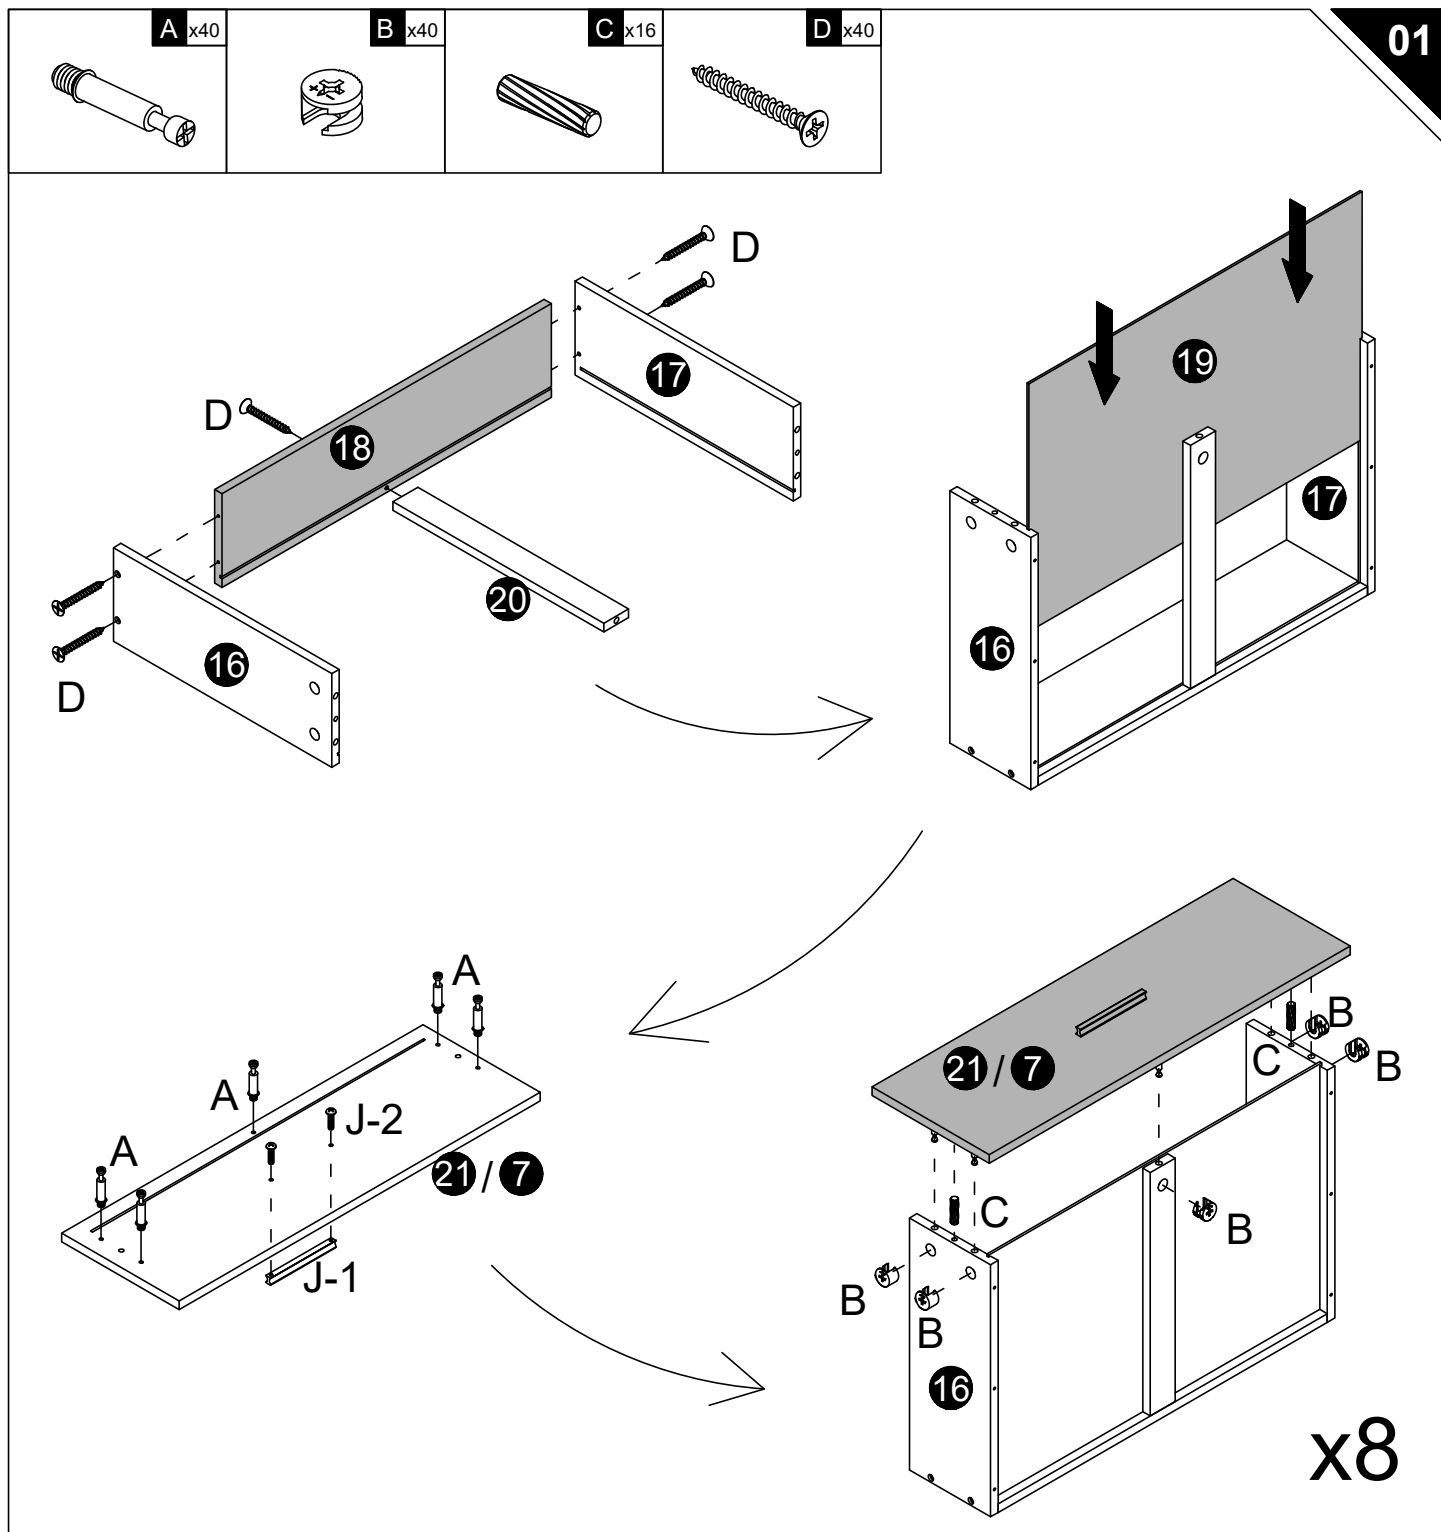

A x1

E x12



CL x4

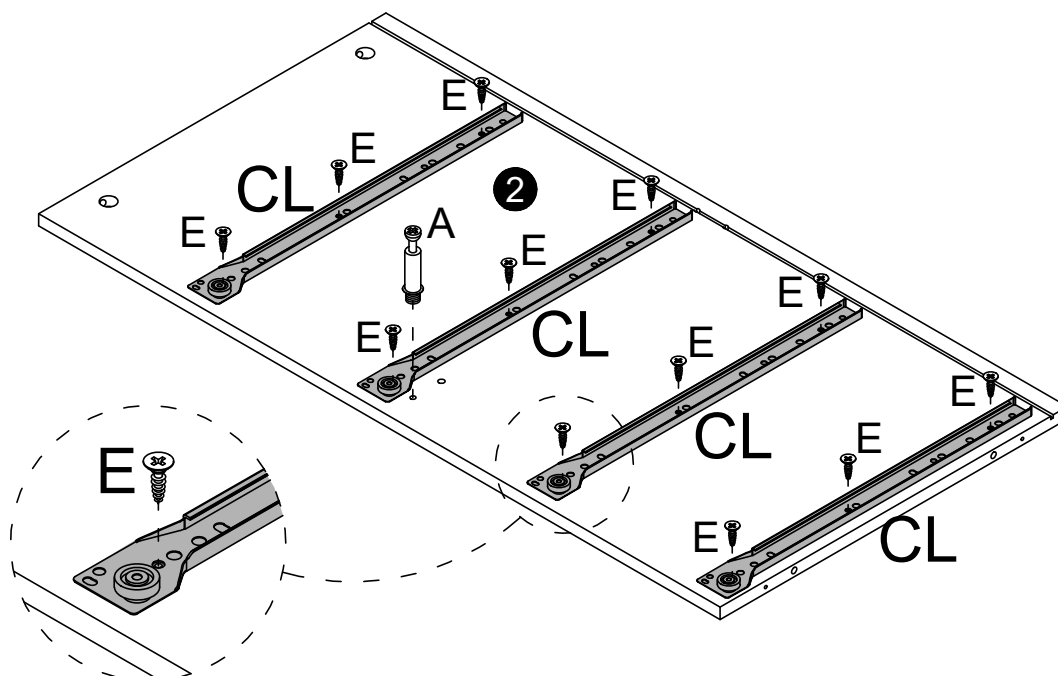


A x1

E x12

CR x4

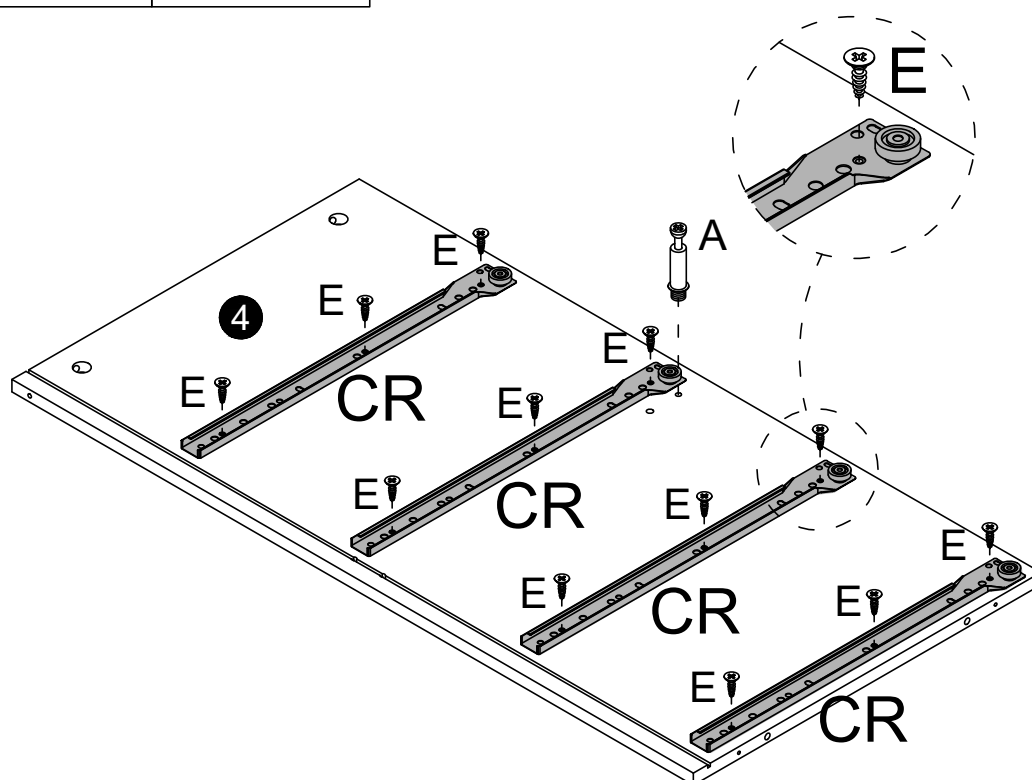


A x1




E x24



CL x4





CR x4

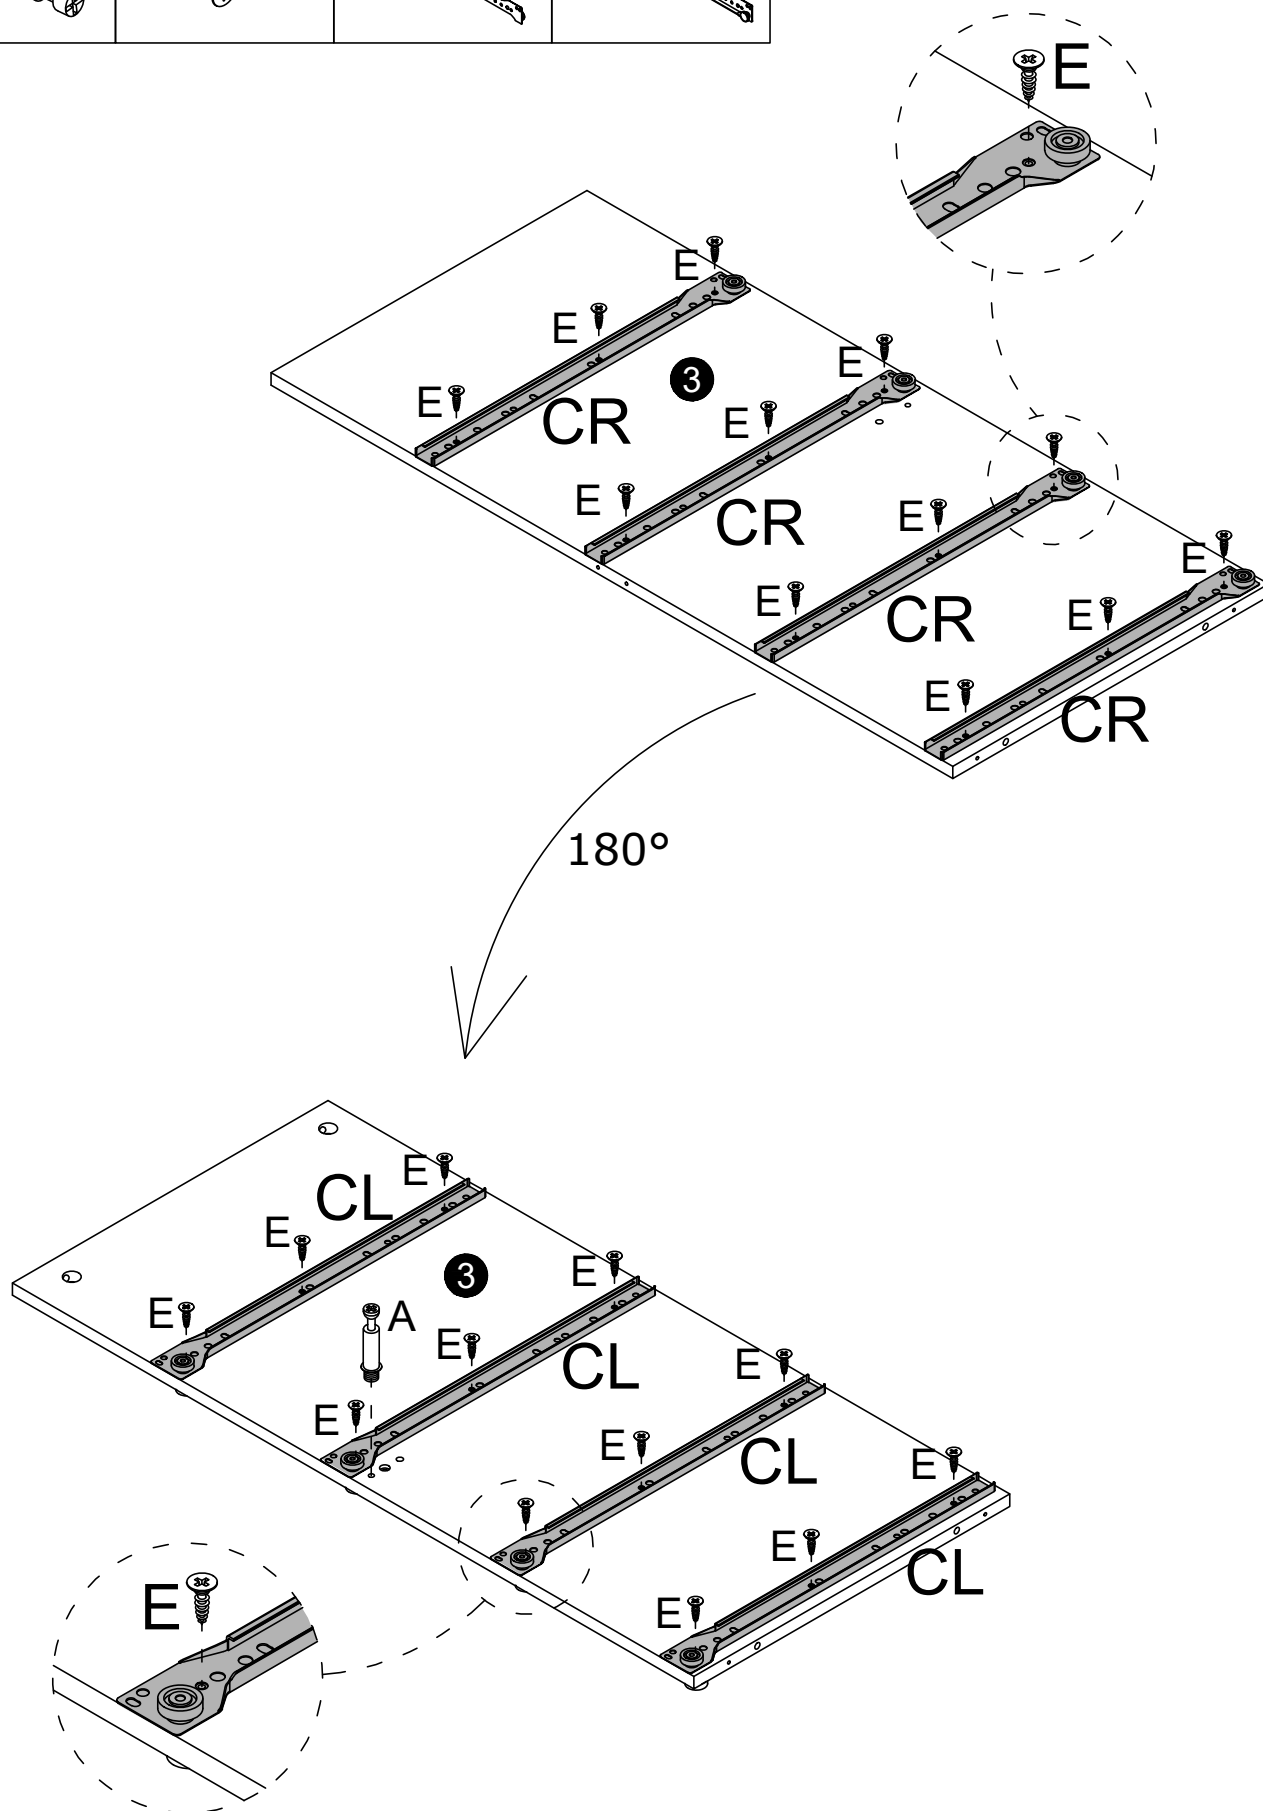

C x1



D x3

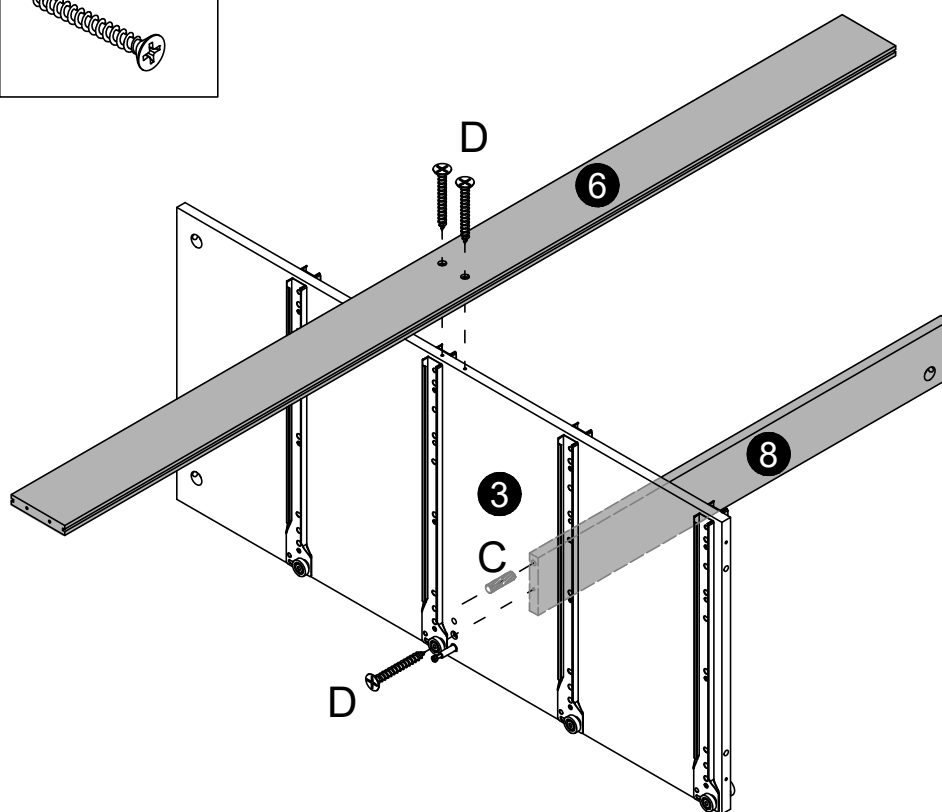

B x1

C x1

D x2

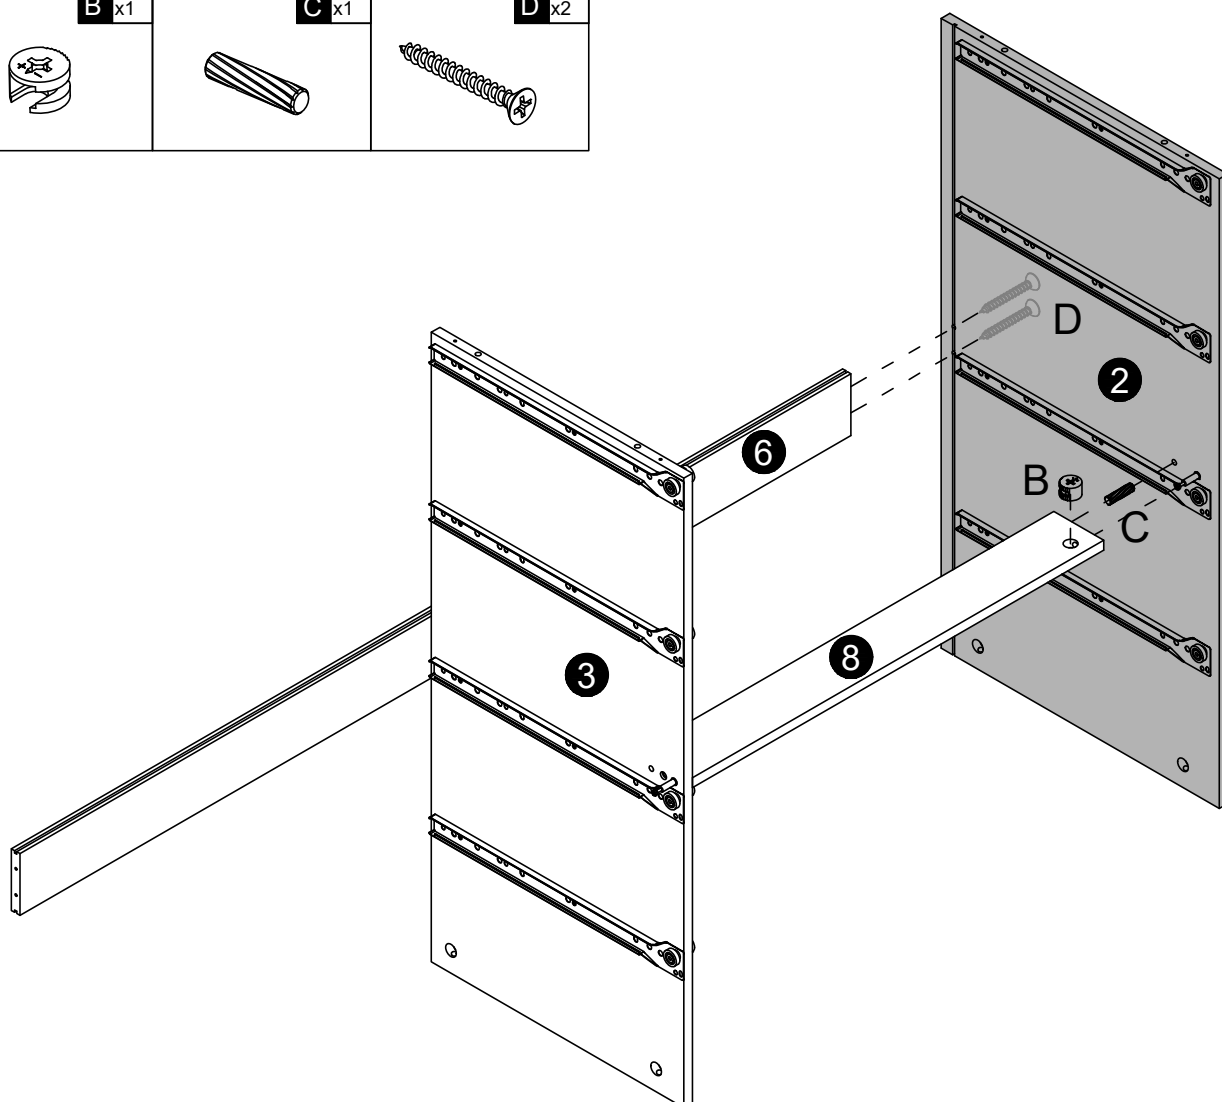



B x2






C x2




D x2

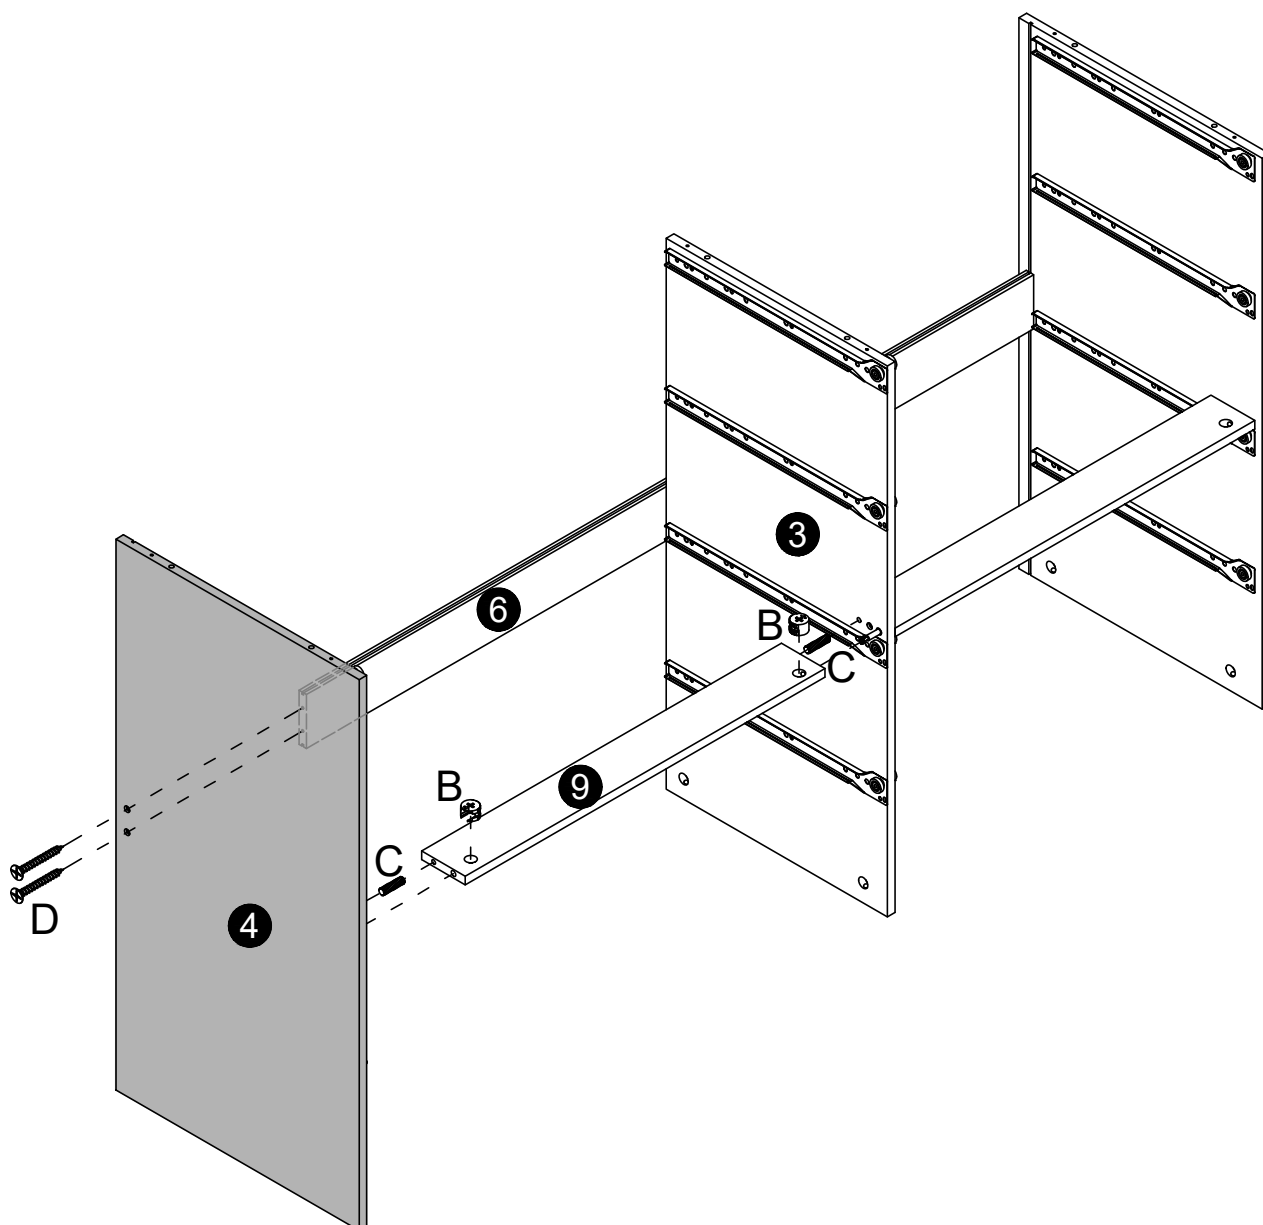

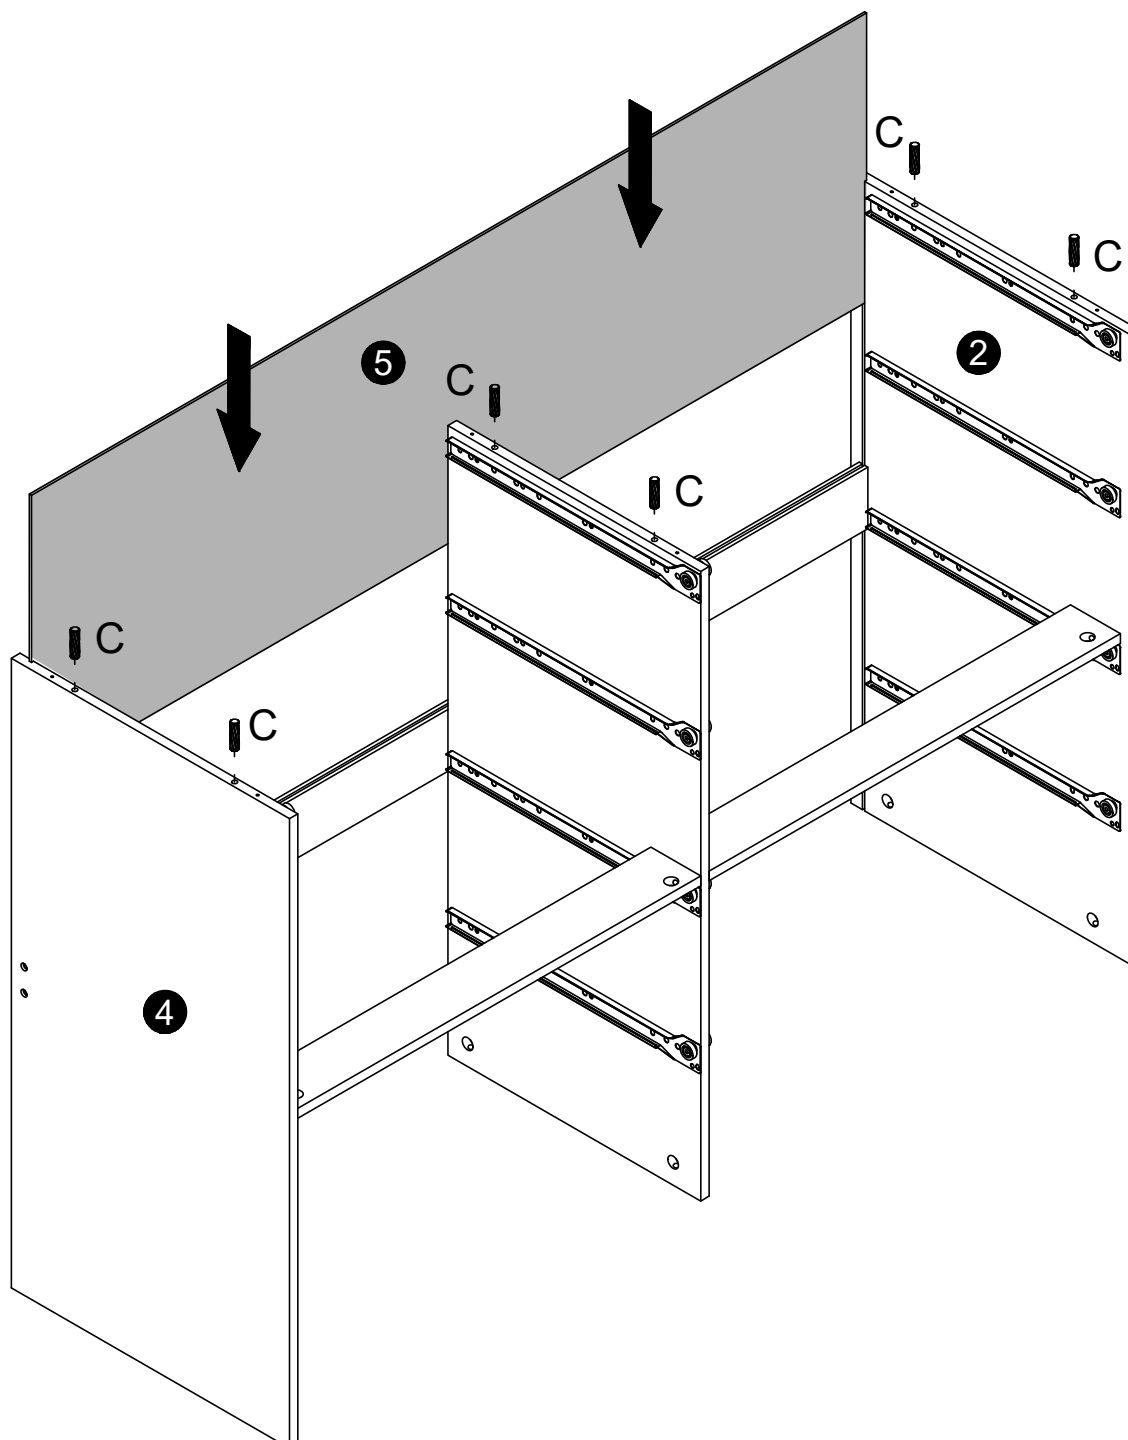


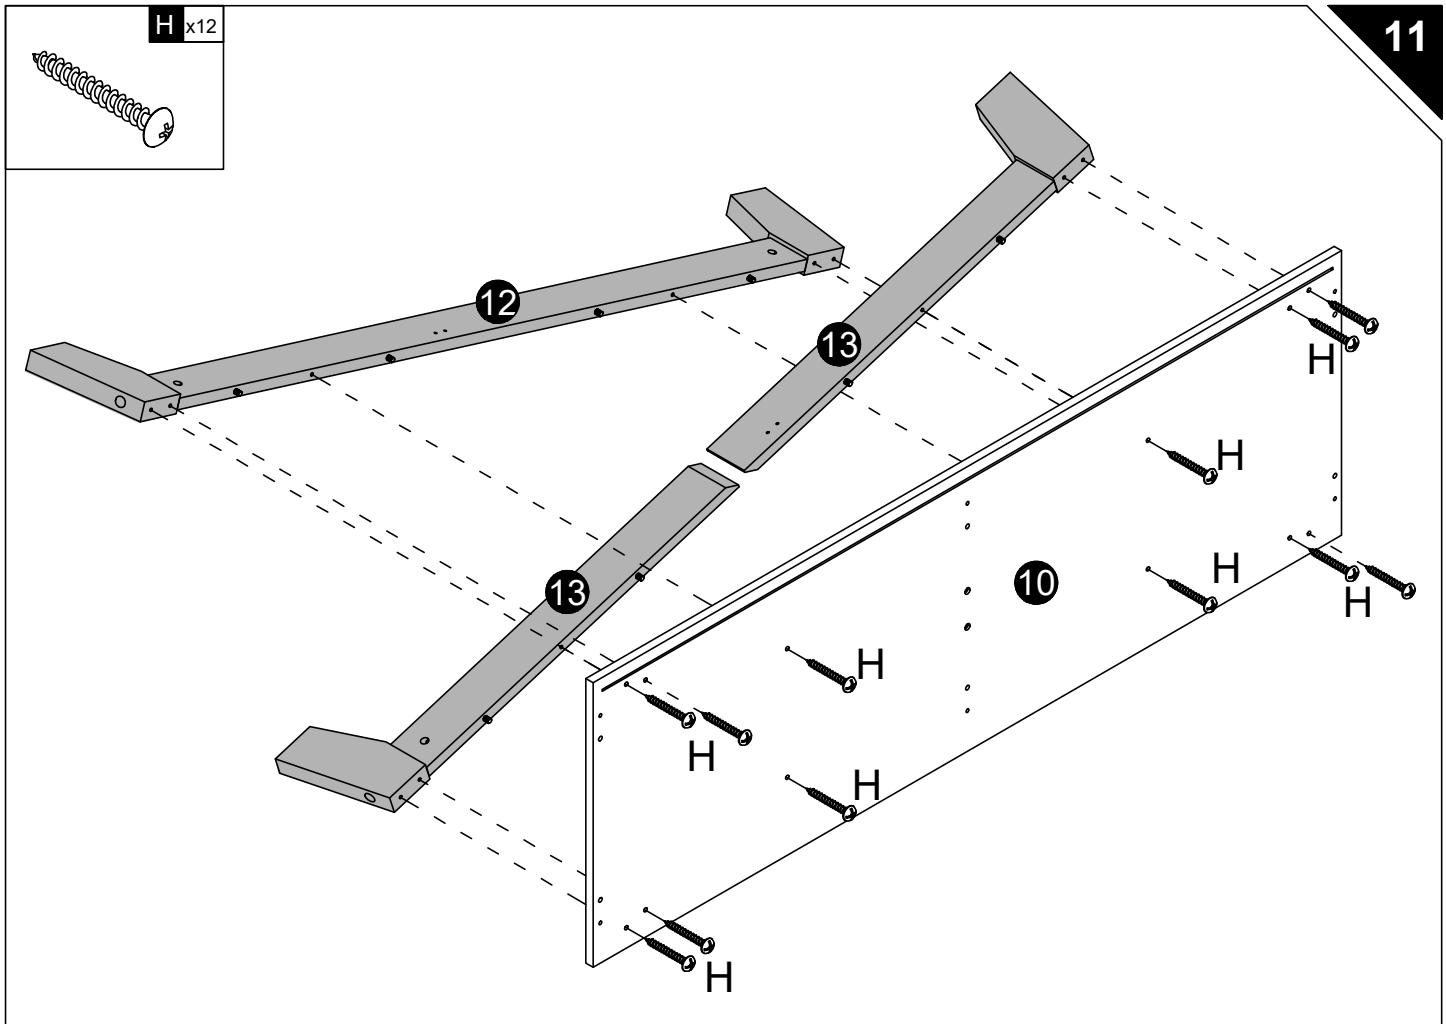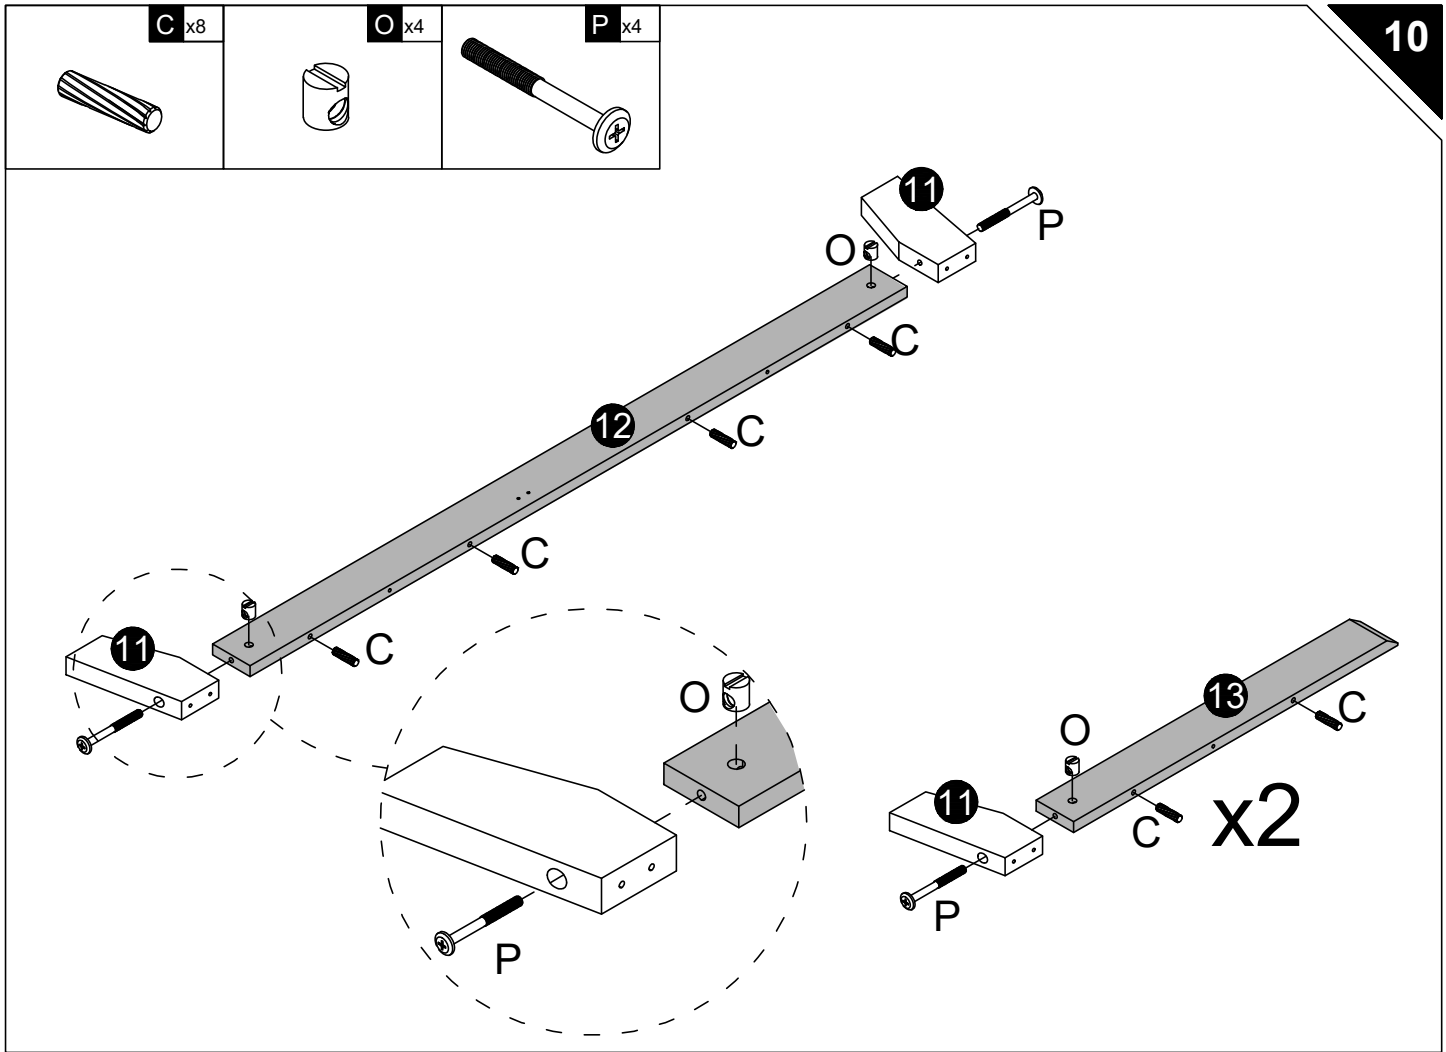

H x2




12

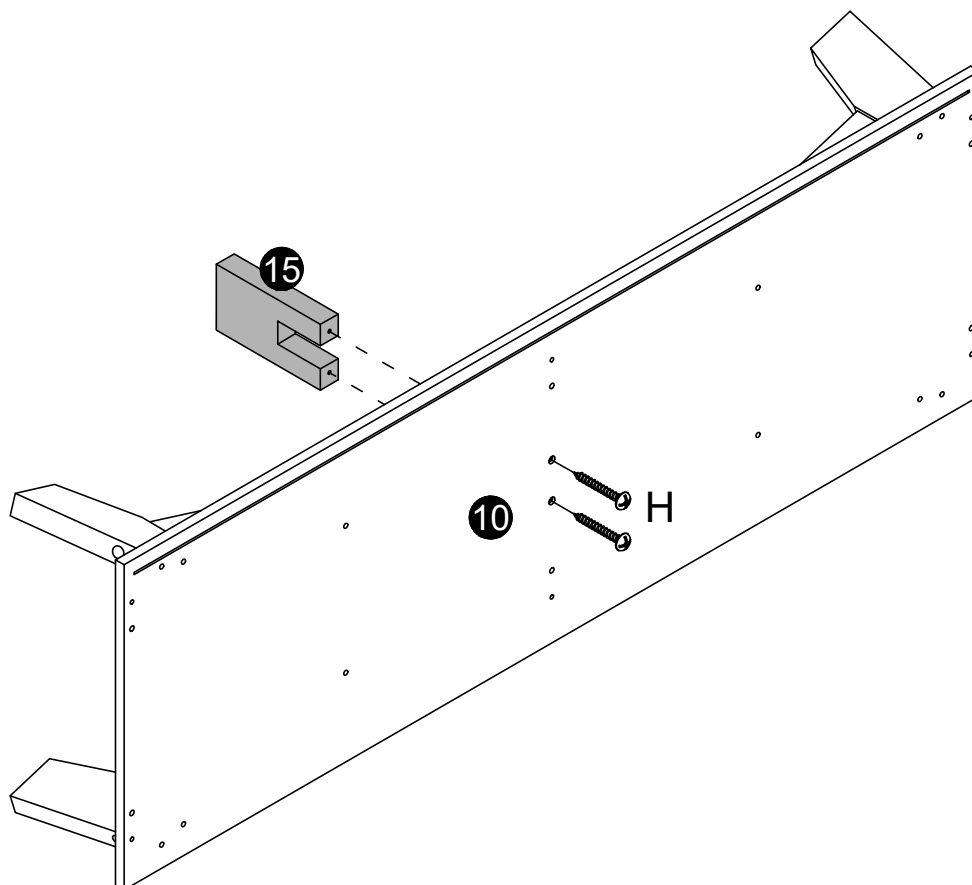

E x16




F x4





I x1



13

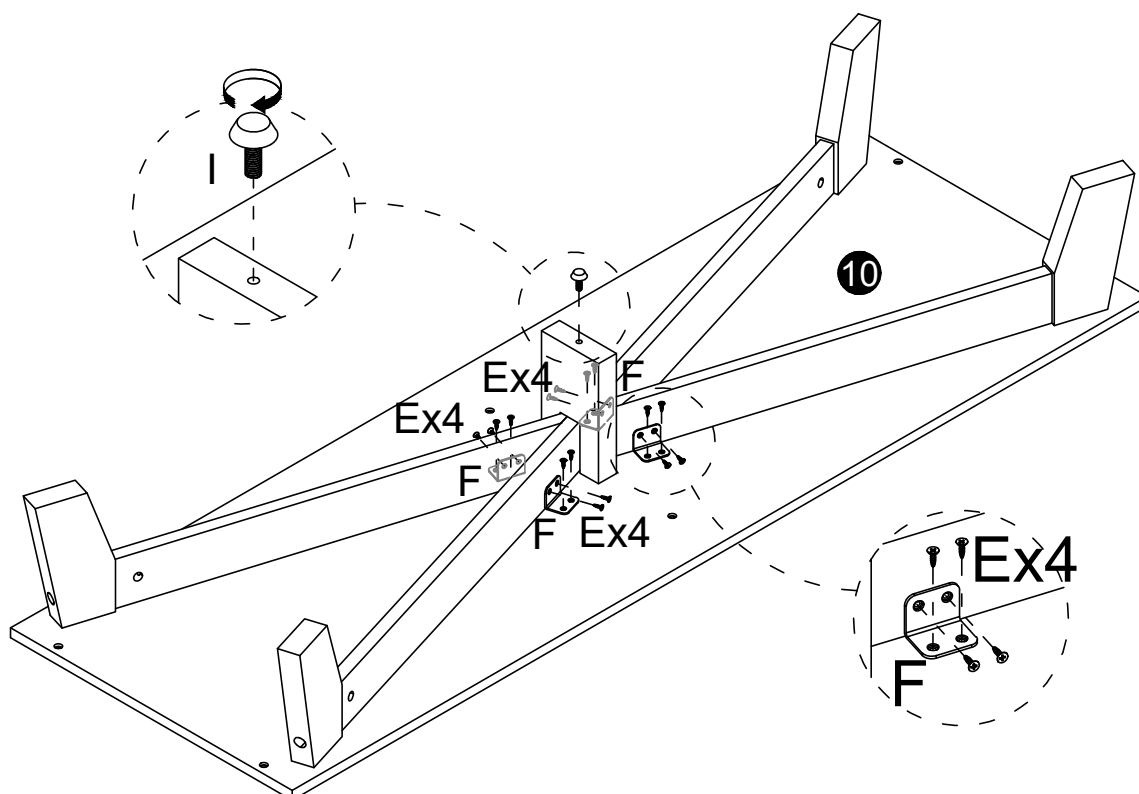


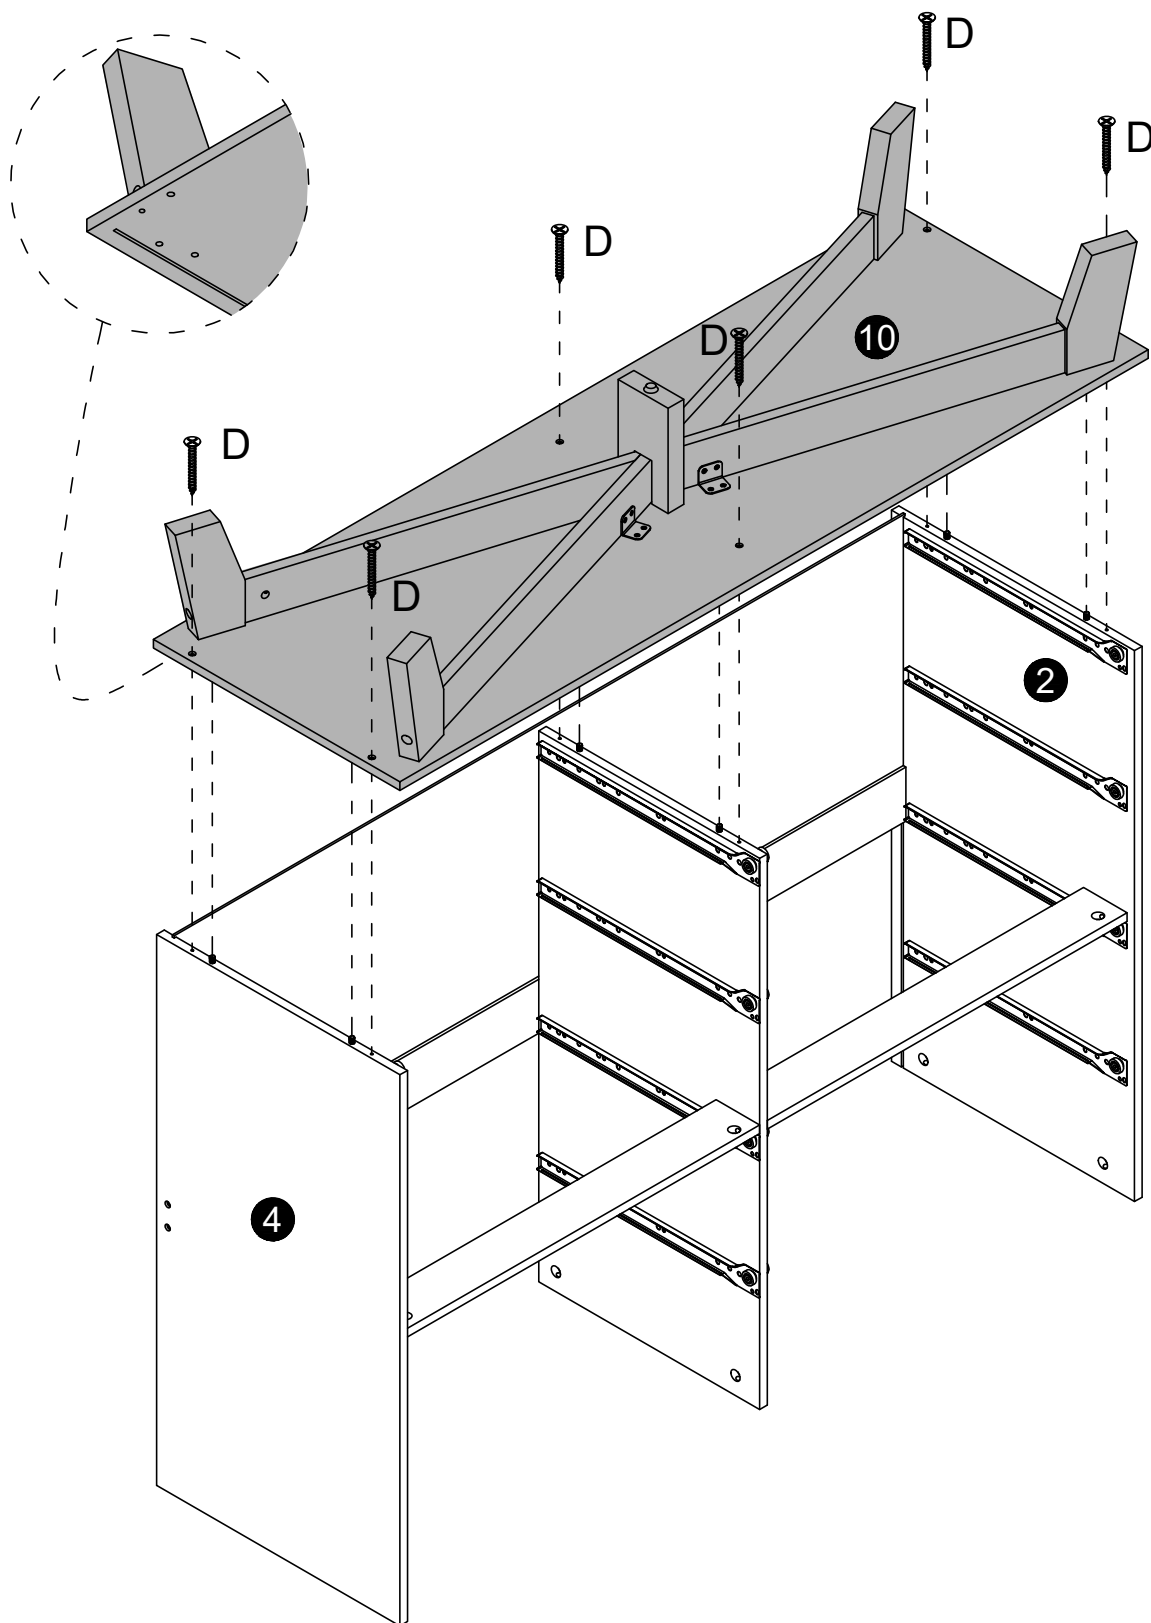


C x6




15

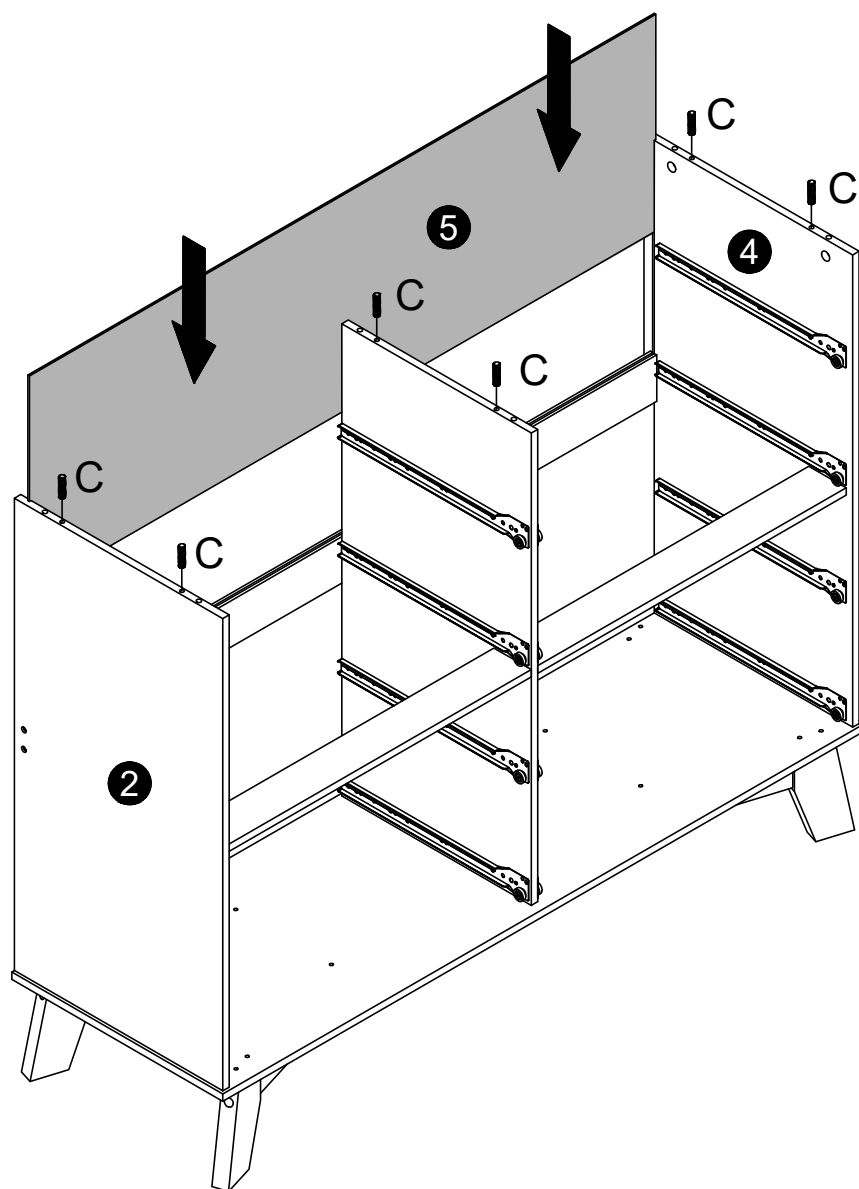






A x6





16

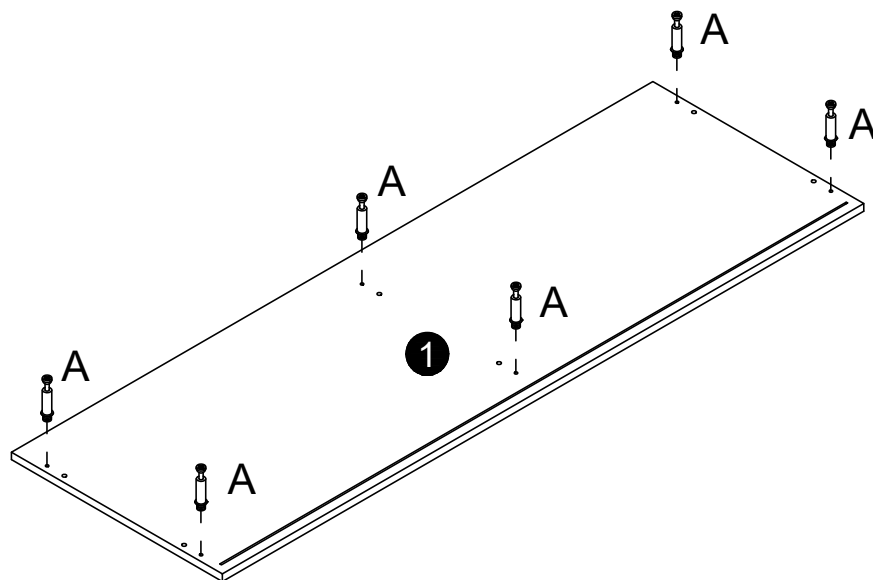

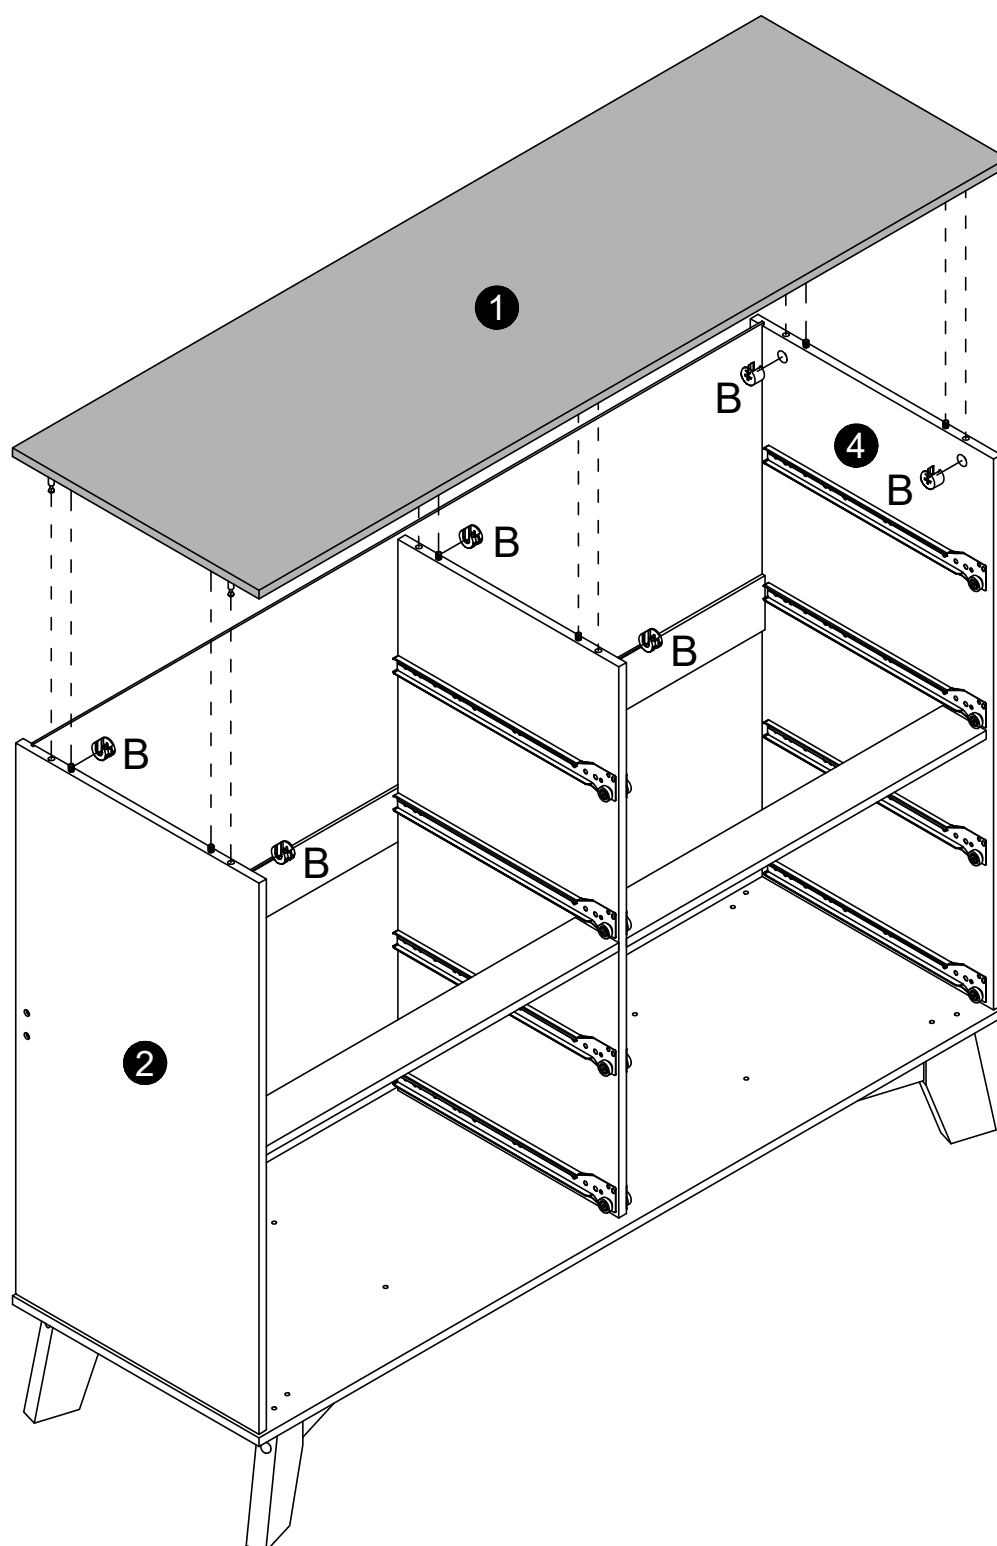

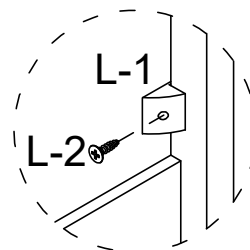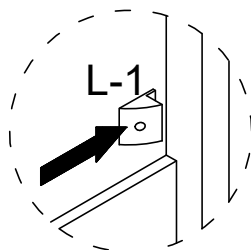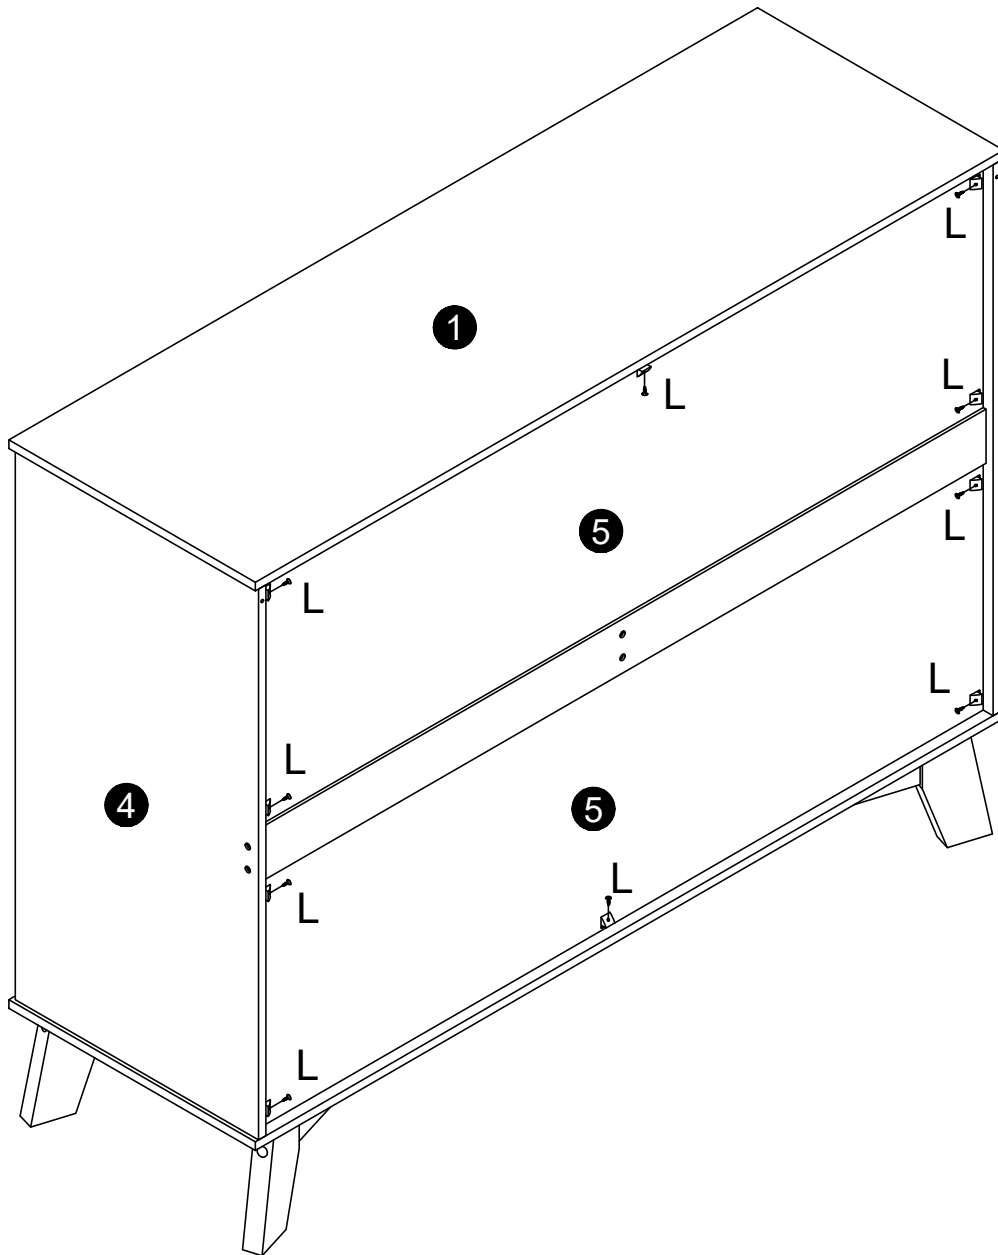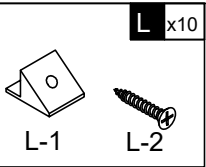


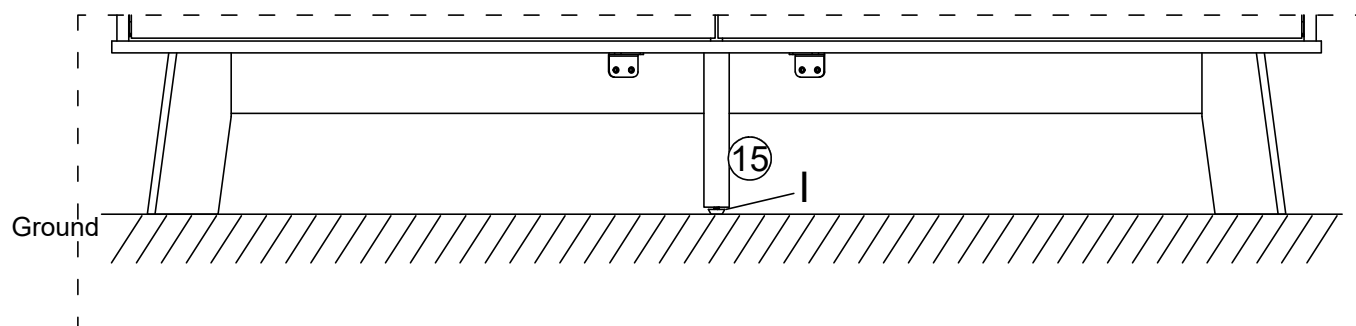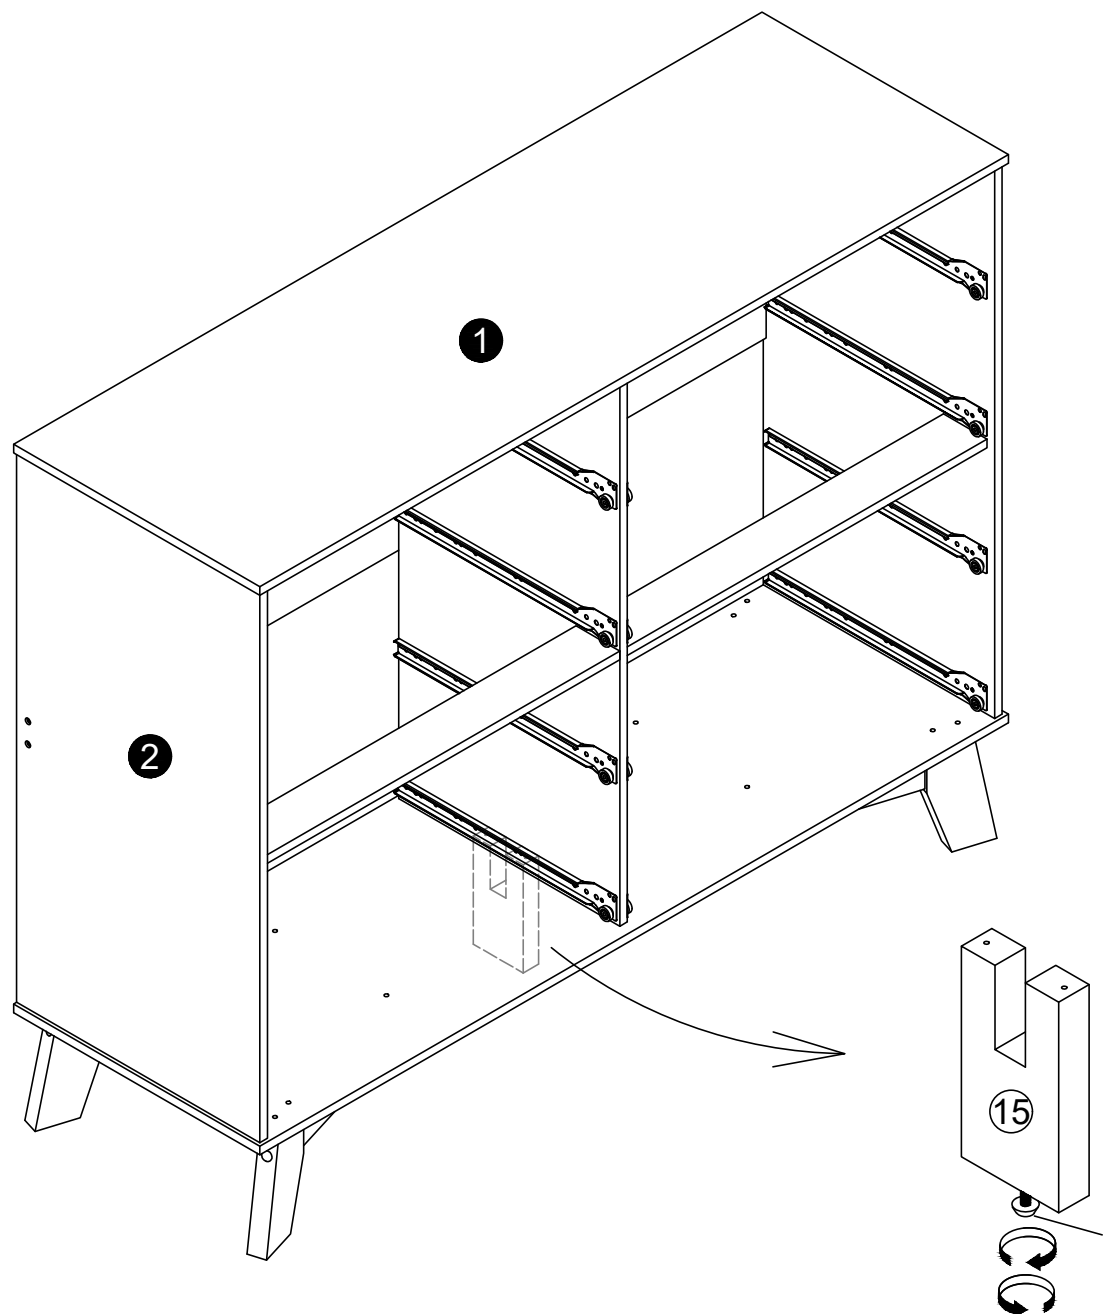





If the cabinet is unstable with the ground, please rotation control the foot fitting (I)




(1)

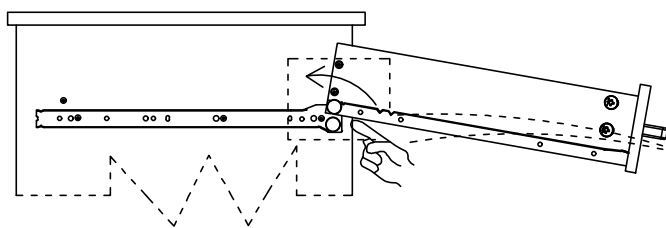

(2)

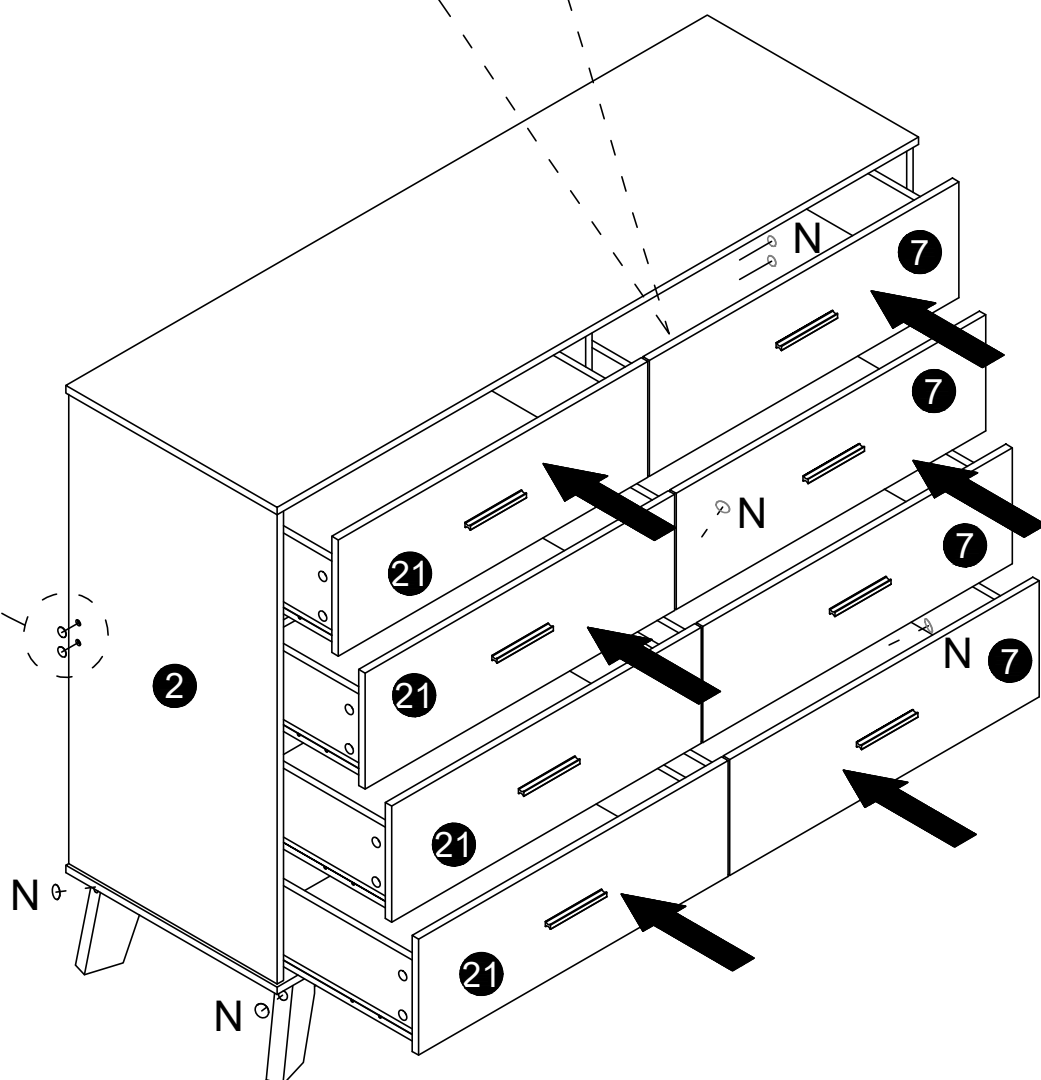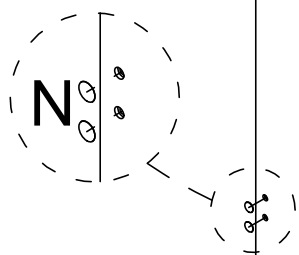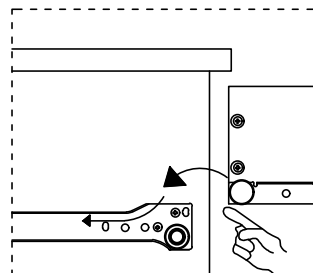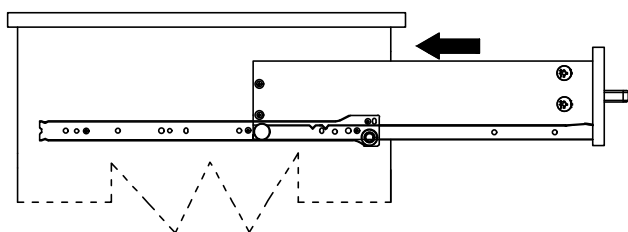


D x2



K x2



M x2




K-1

K-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

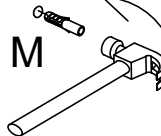

Then, put the expansion bolt into the hole

(4)x2

WALL

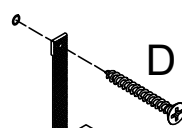

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2



(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

+
drilling hole
Ø6x30mm





(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.



WALL

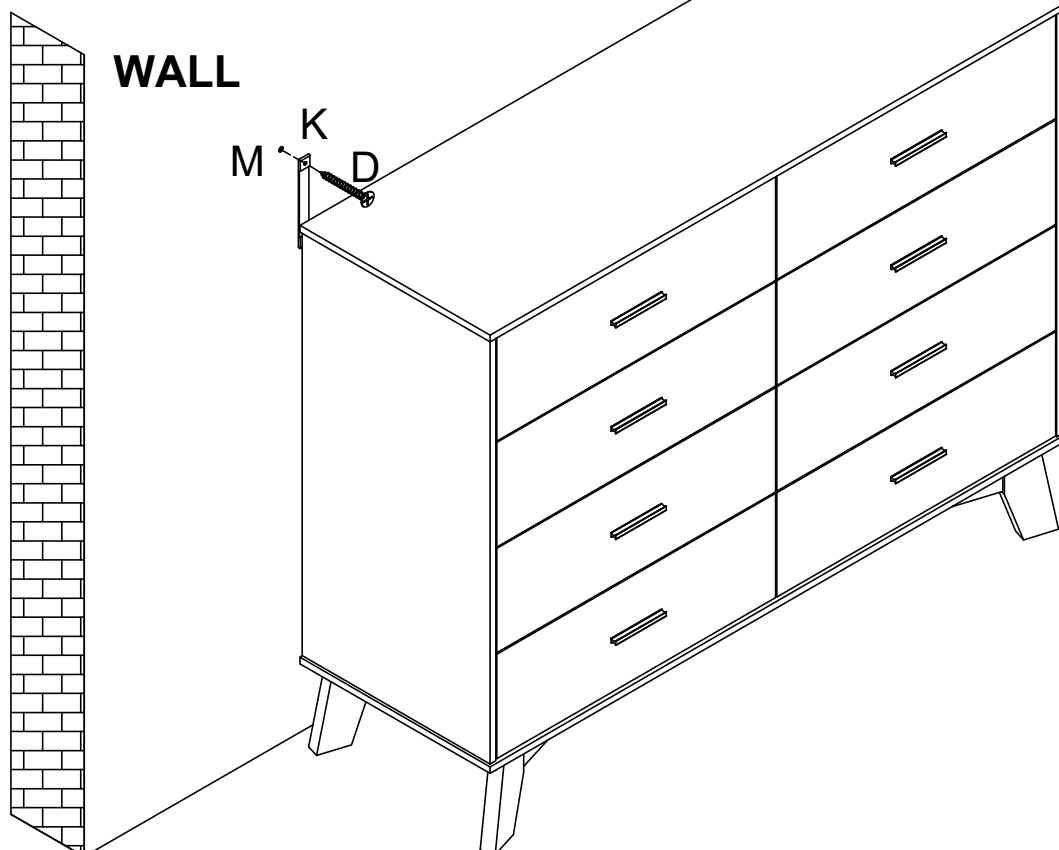

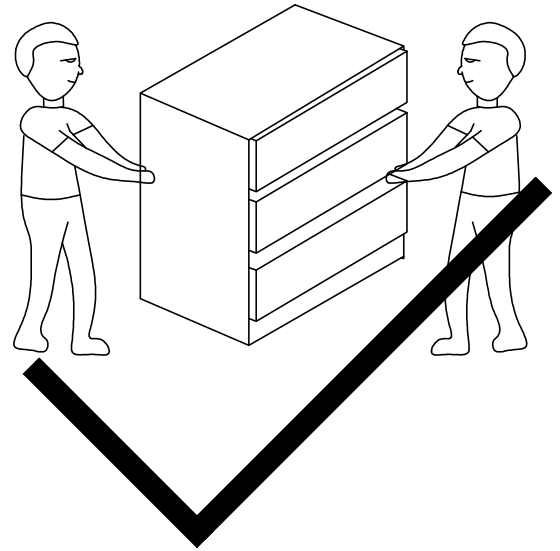

WARNING

Do not push the furniture violently during the moving process, otherwise there will be a risk of tipping and damage, which is unsafe behavior. Moving furniture after assembly requires two or more people to lift it.