

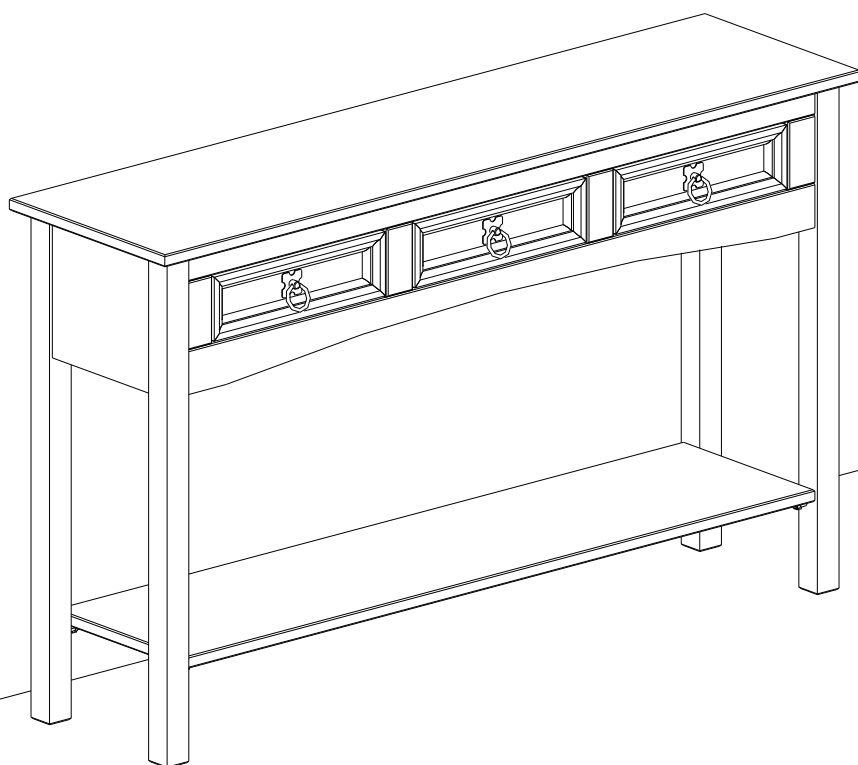
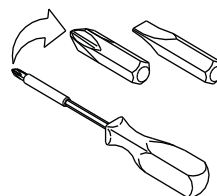
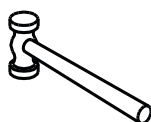

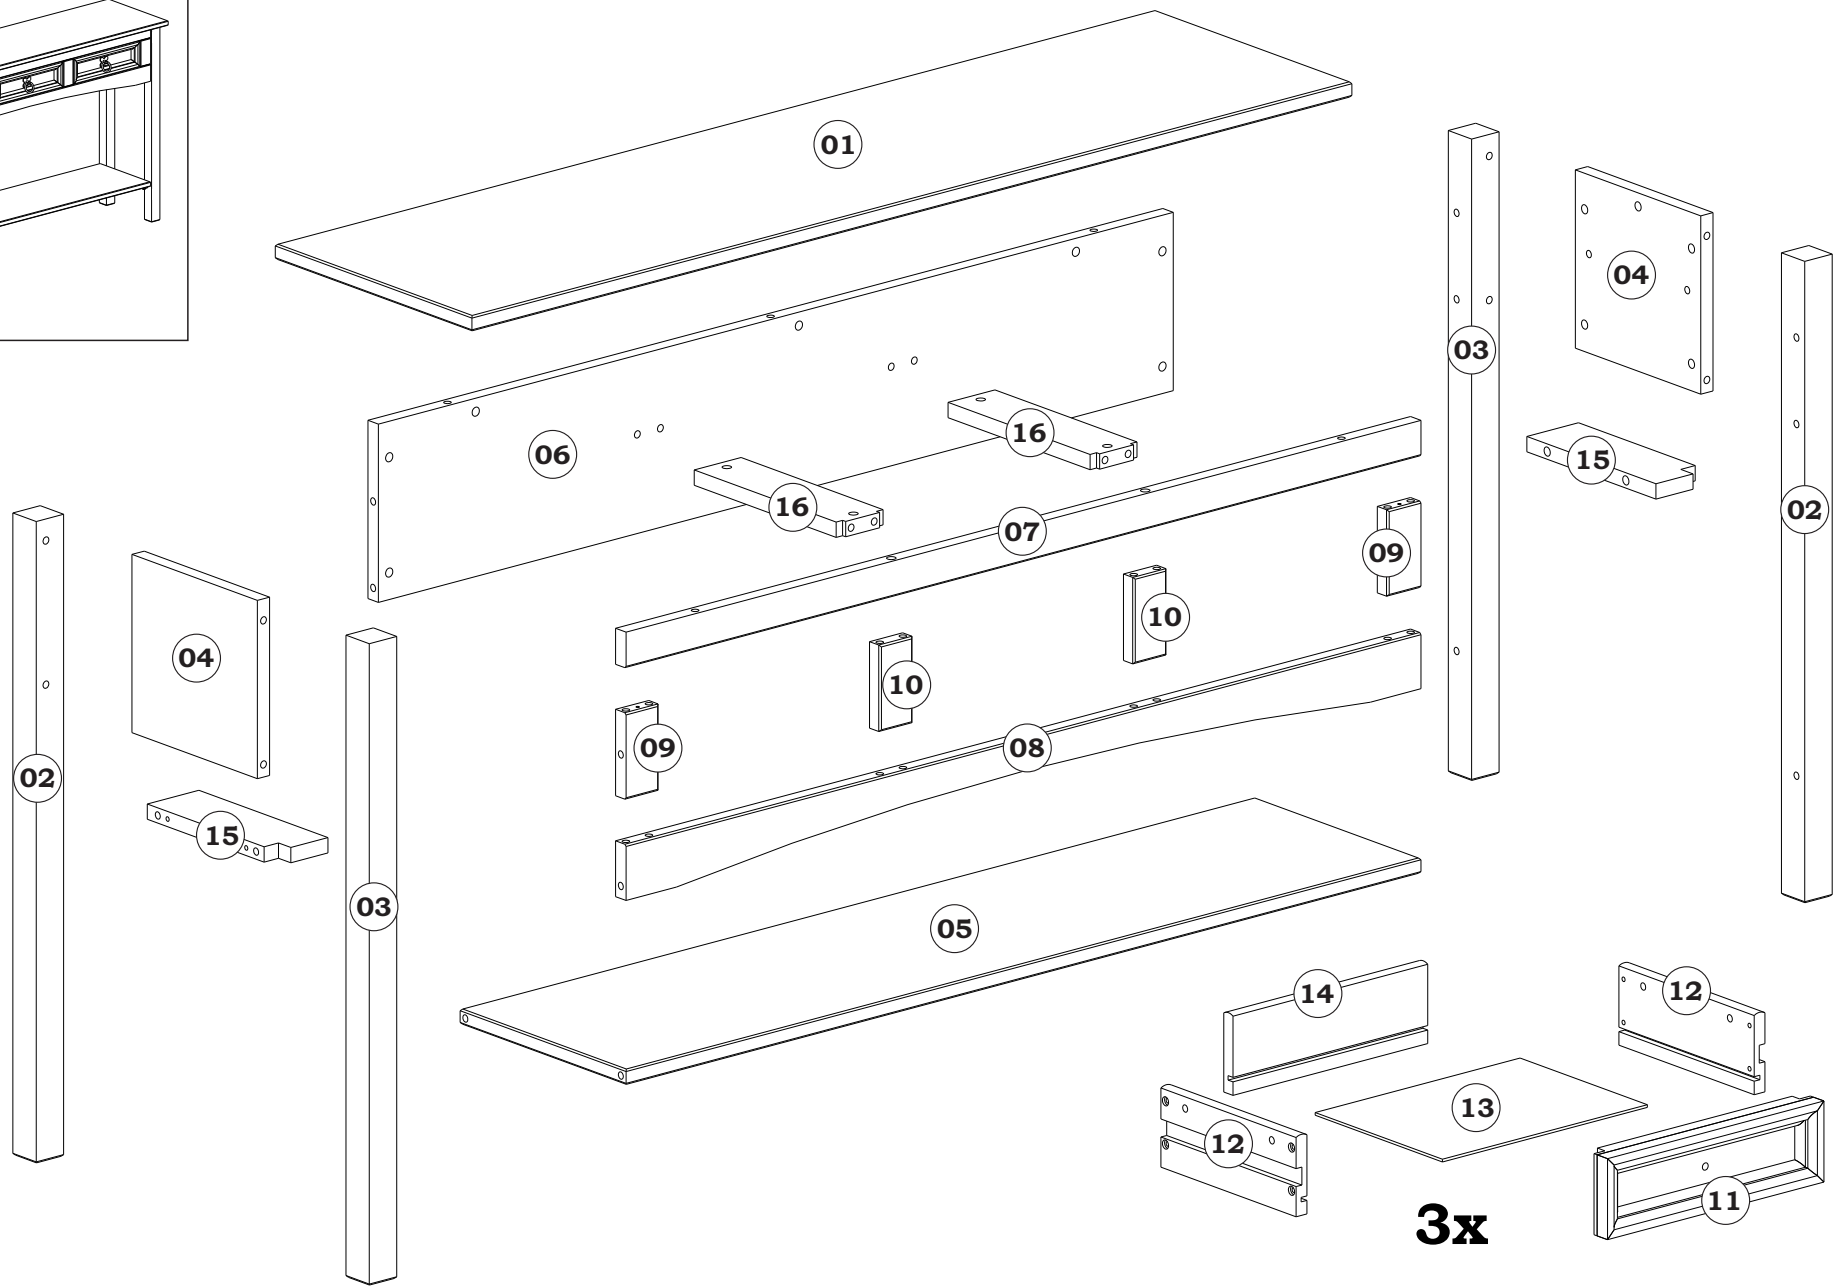
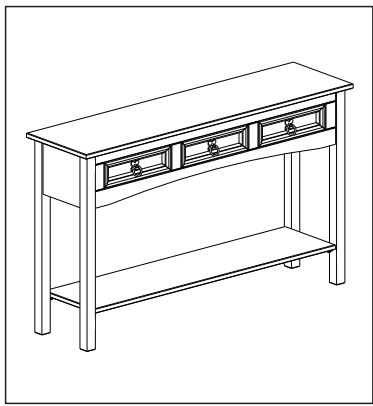


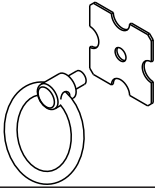









2m x 2m

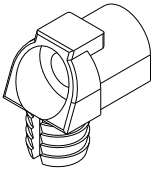

0:60h



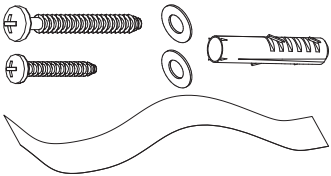


A	 $\varnothing 8,0 \times 30 \text{ mm}$	60
B	 $\varnothing 3,5 \times 30 \text{ mm}$	50
C	 $\varnothing 4,5 \times 60 \text{ mm}$	06
D	 $\varnothing 4,0 \times 25 \text{ mm}$	12
E		03
F	 $3/16" \times 5/8"$	03
G		32
Y		01

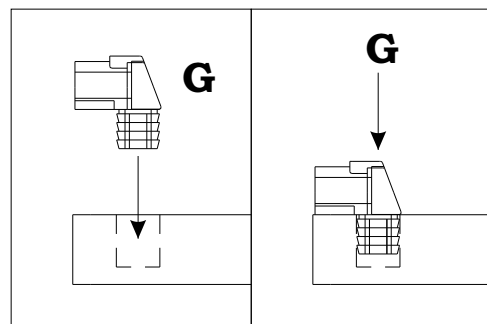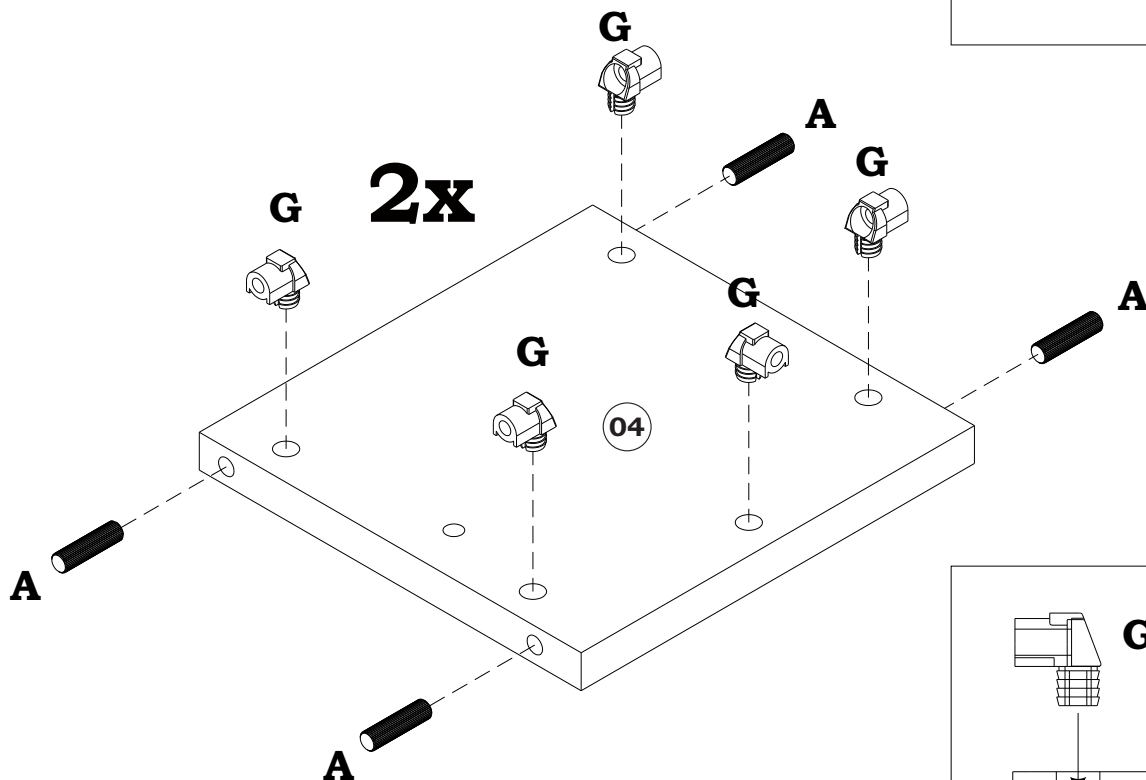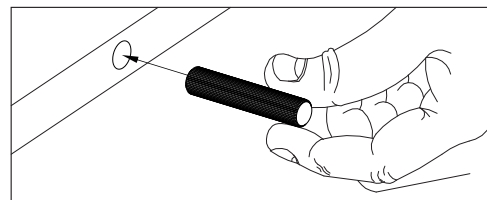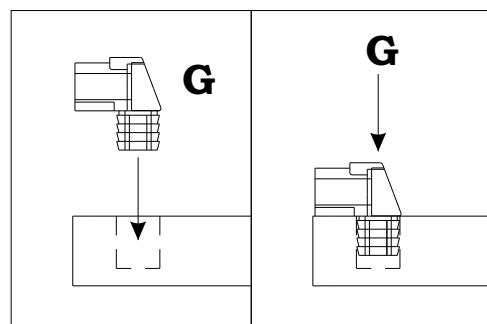
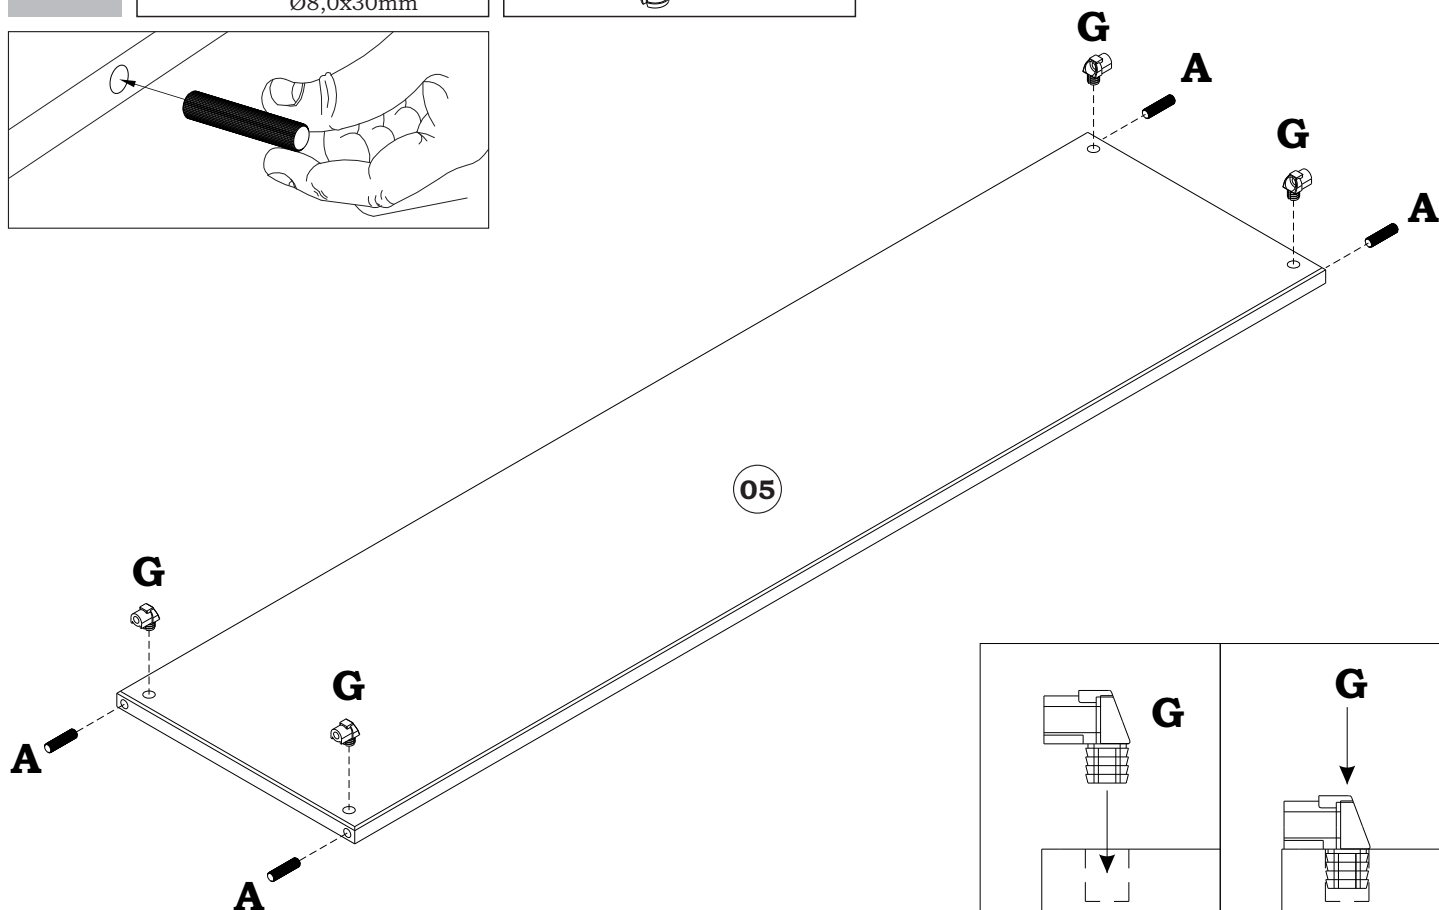
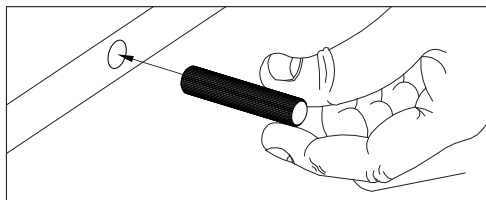
01**A**  **08x**
Ø8,0x30mm**G****10x****02****A**  **04x**
Ø8,0x30mm**G****04x**

03**A****07x**

Ø8,0x30mm

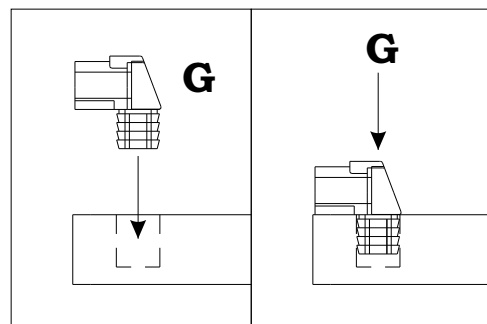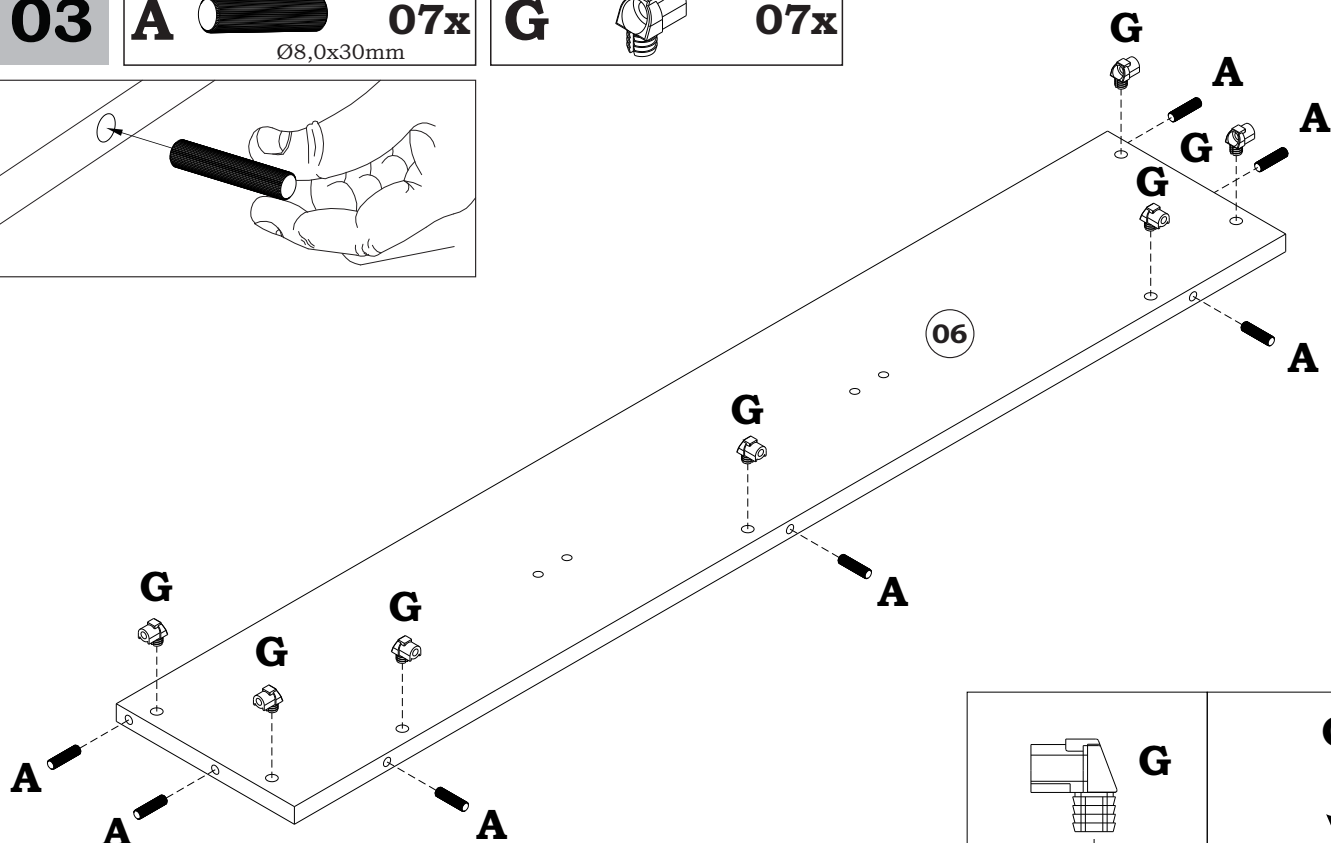
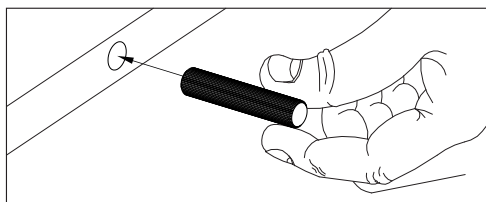
G**07x****04****A****08x**

Ø8,0x30mm

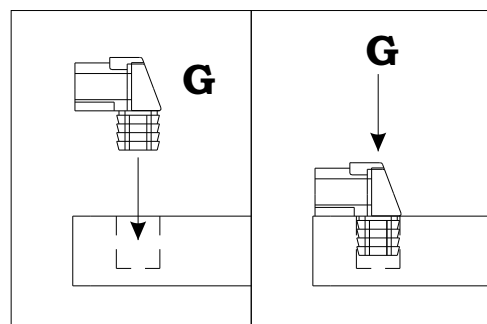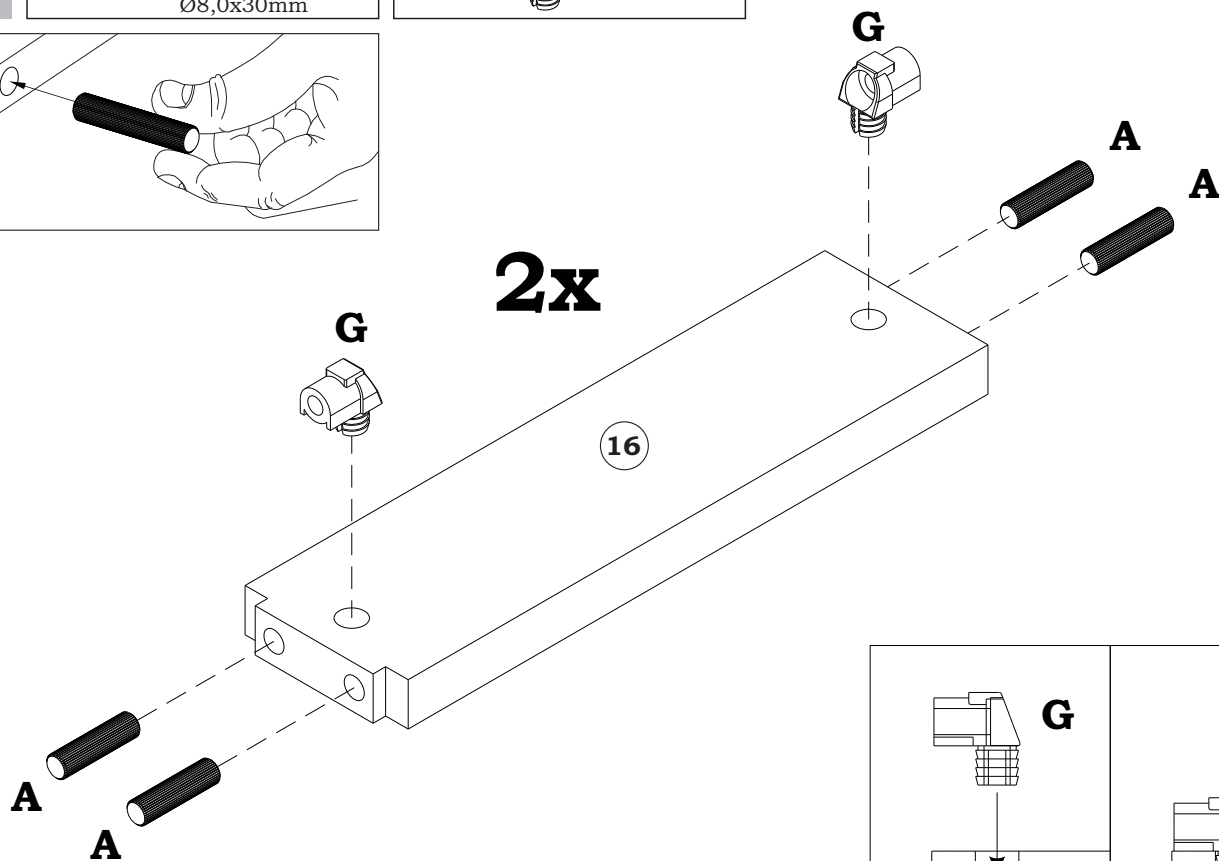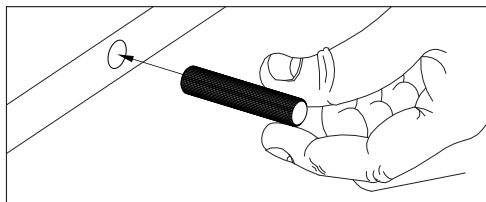G**04x**



05

A  **08x**
Ø8,0x30mm

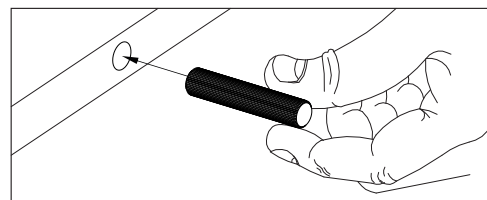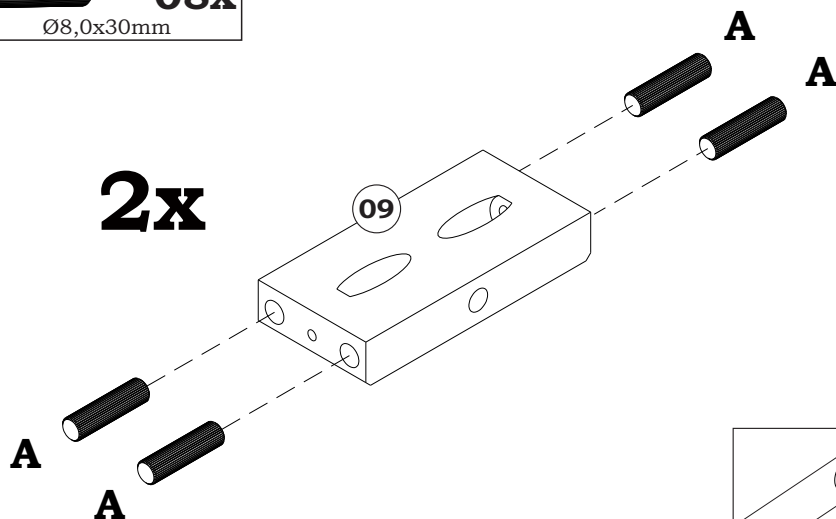



06

A  **08x**
Ø8,0x30mm

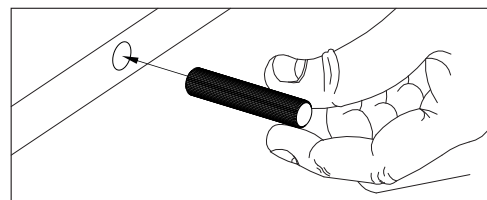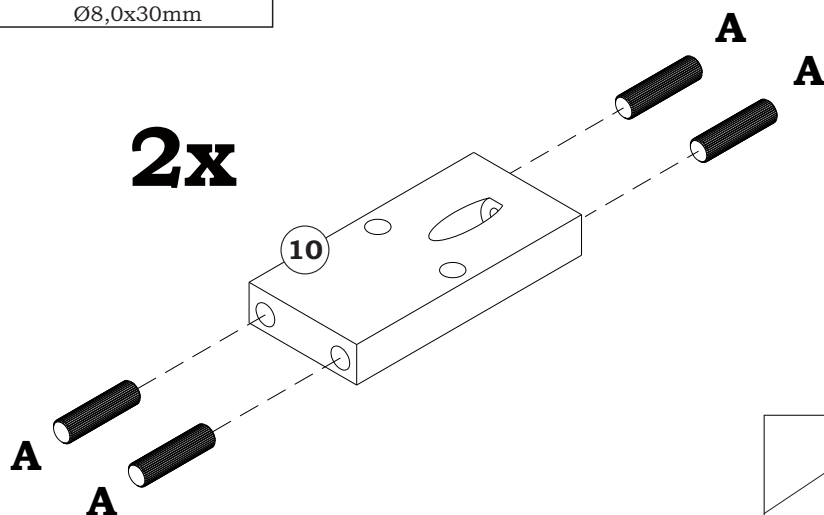

07

A  **04x**
Ø8,0x30mm

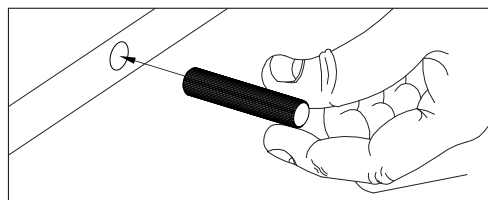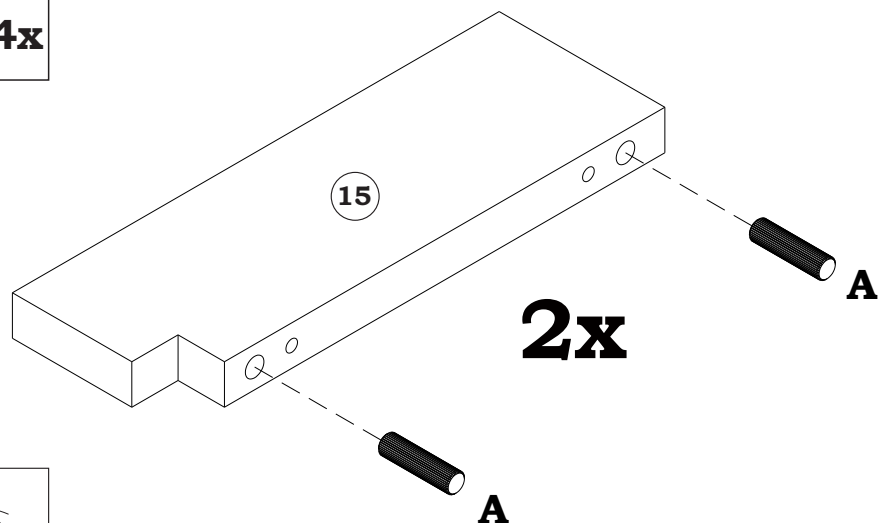


08

B




04x

Ø3,5x30mm

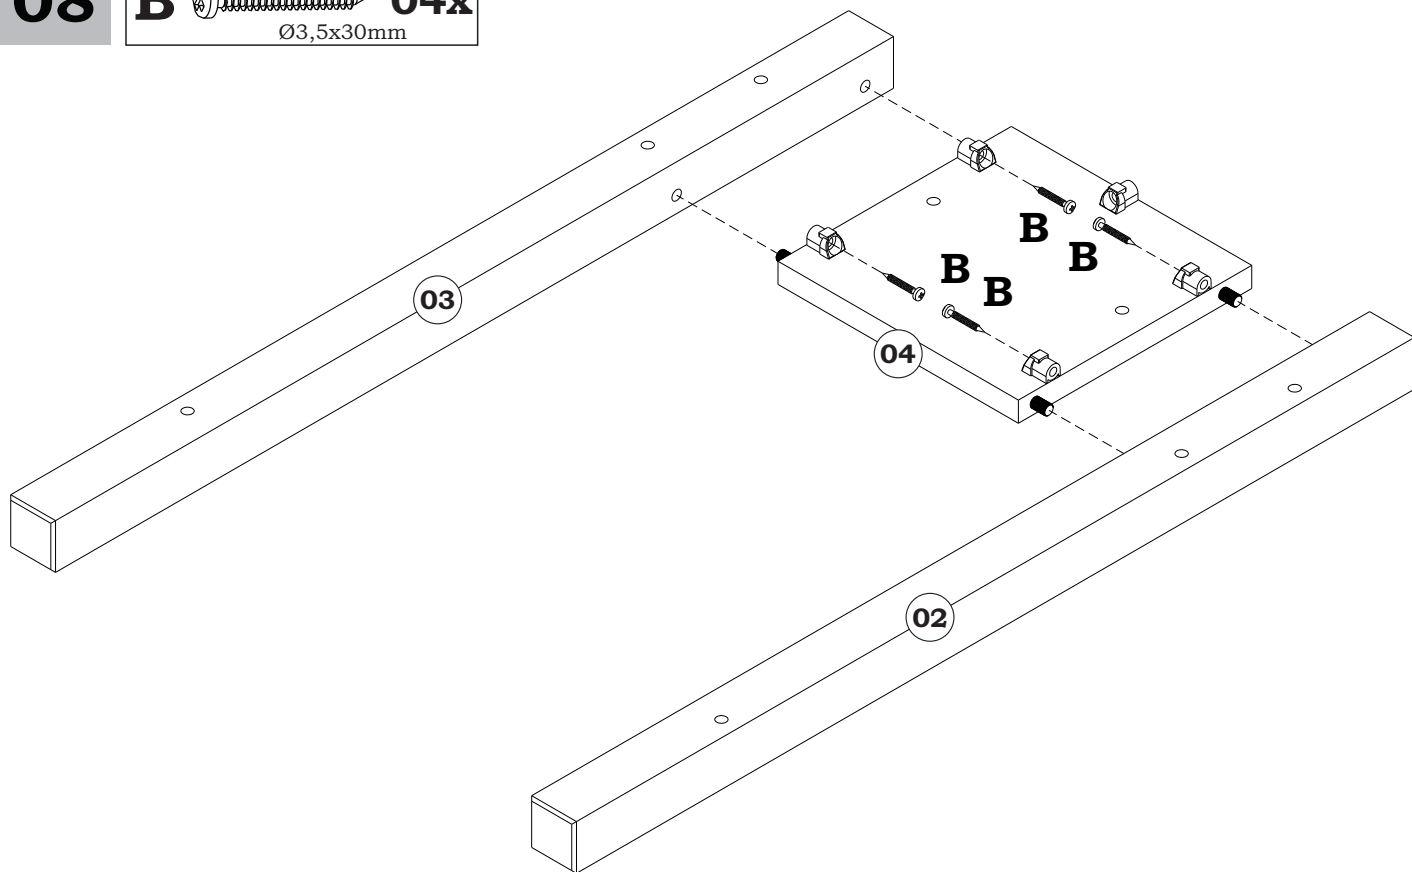


09

B





04x

Ø3,5x30mm

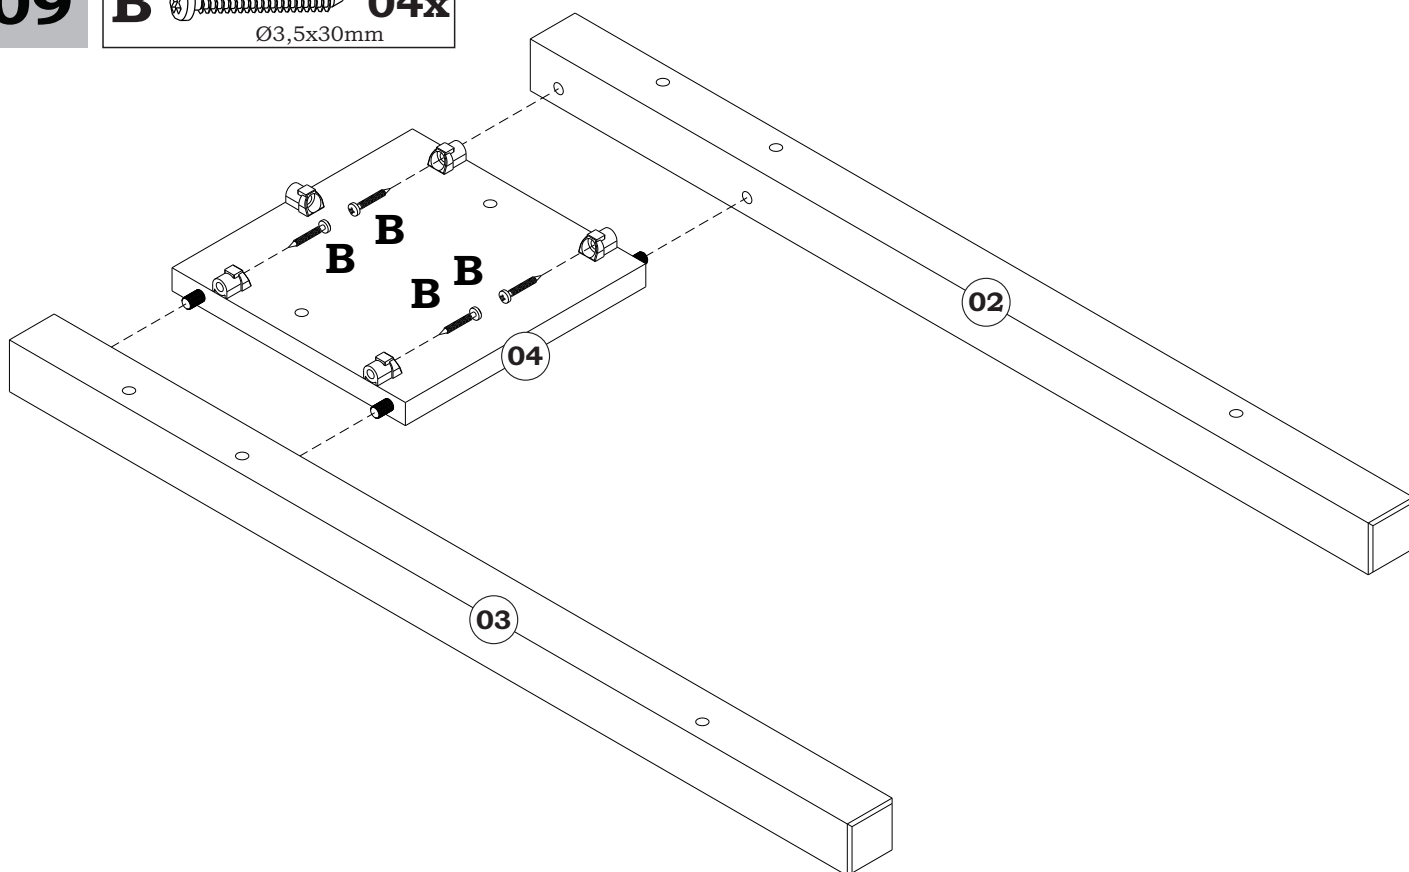


10



B  **04x**
Ø3,5x30mm

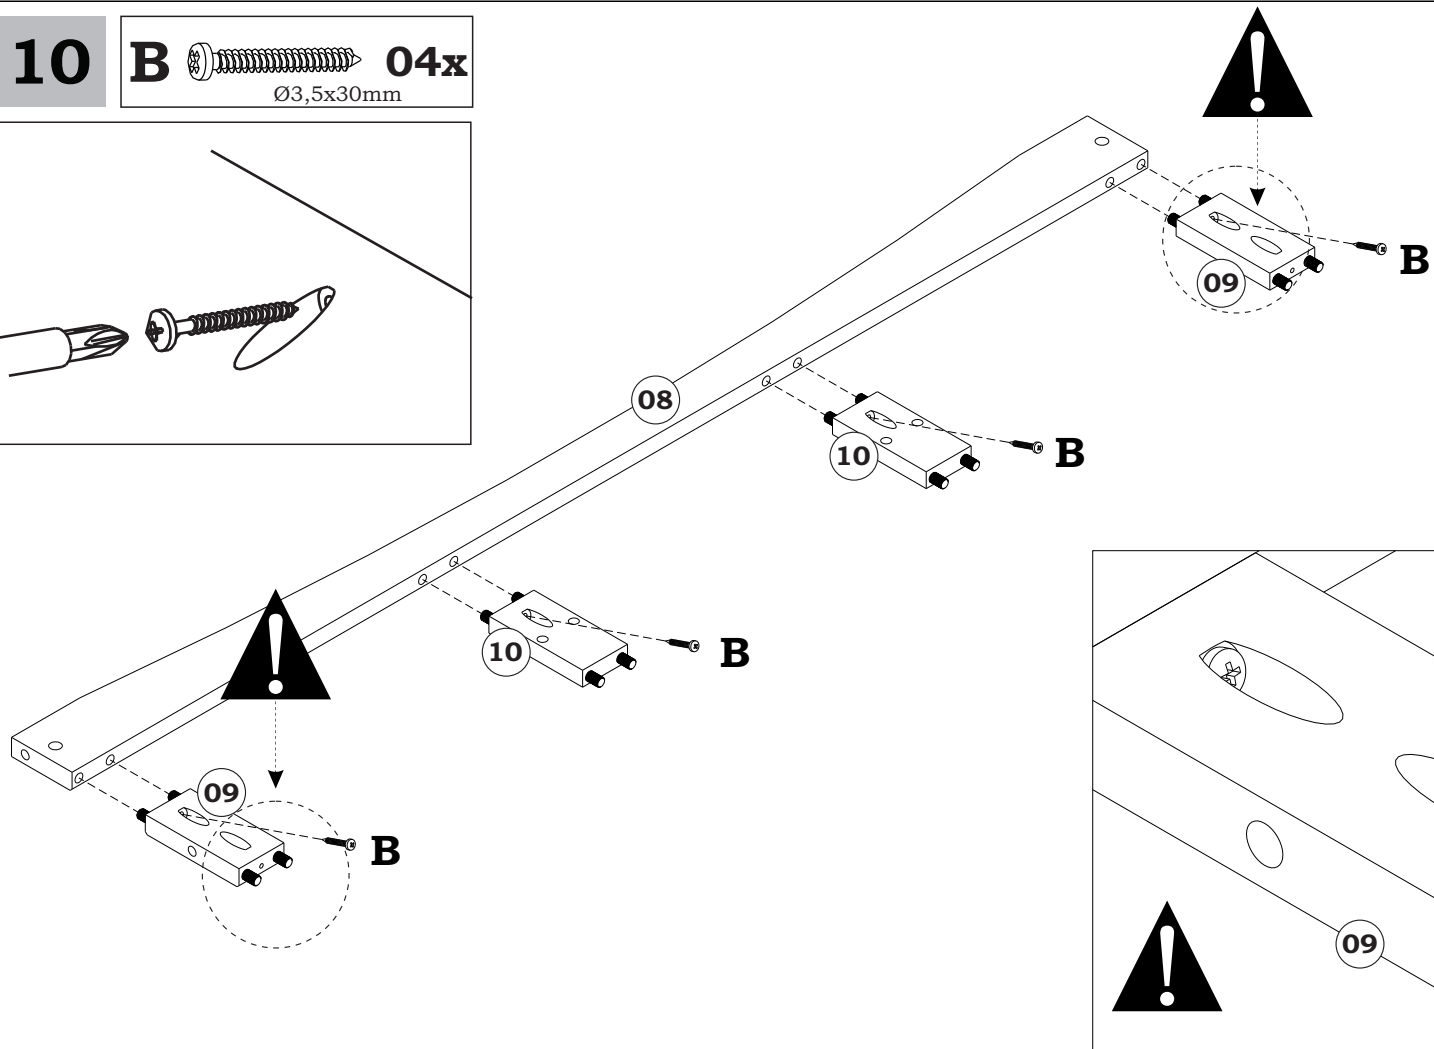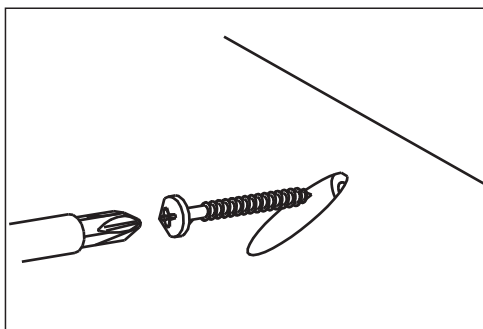

11



B  **02x**
Ø3,5x30mm

C  **02x**
Ø4,5x60mm

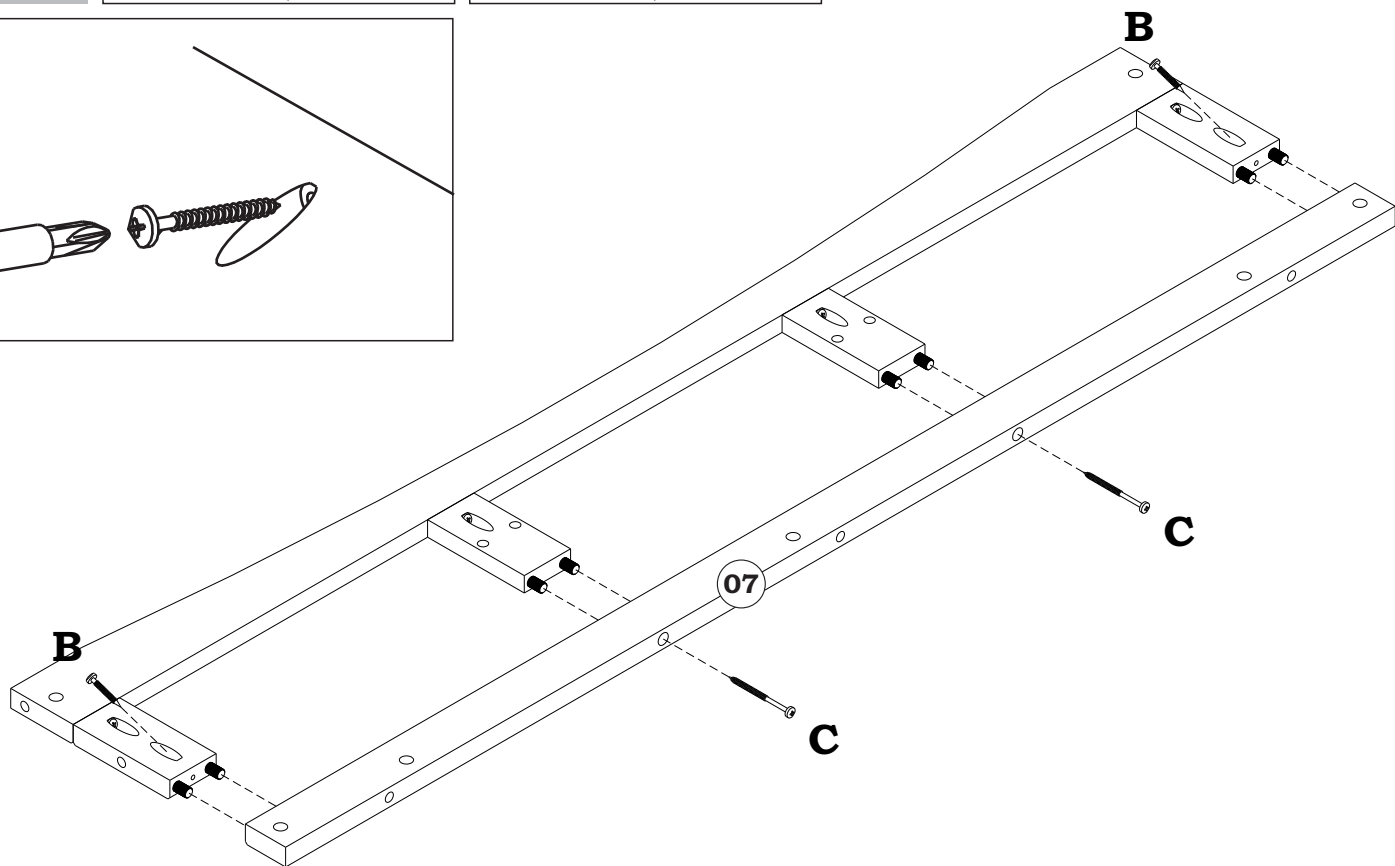
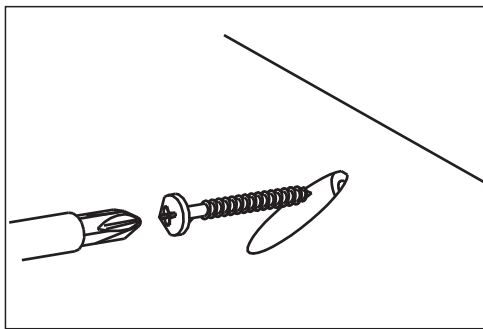


12**A****07x**

Ø8,0x30mm

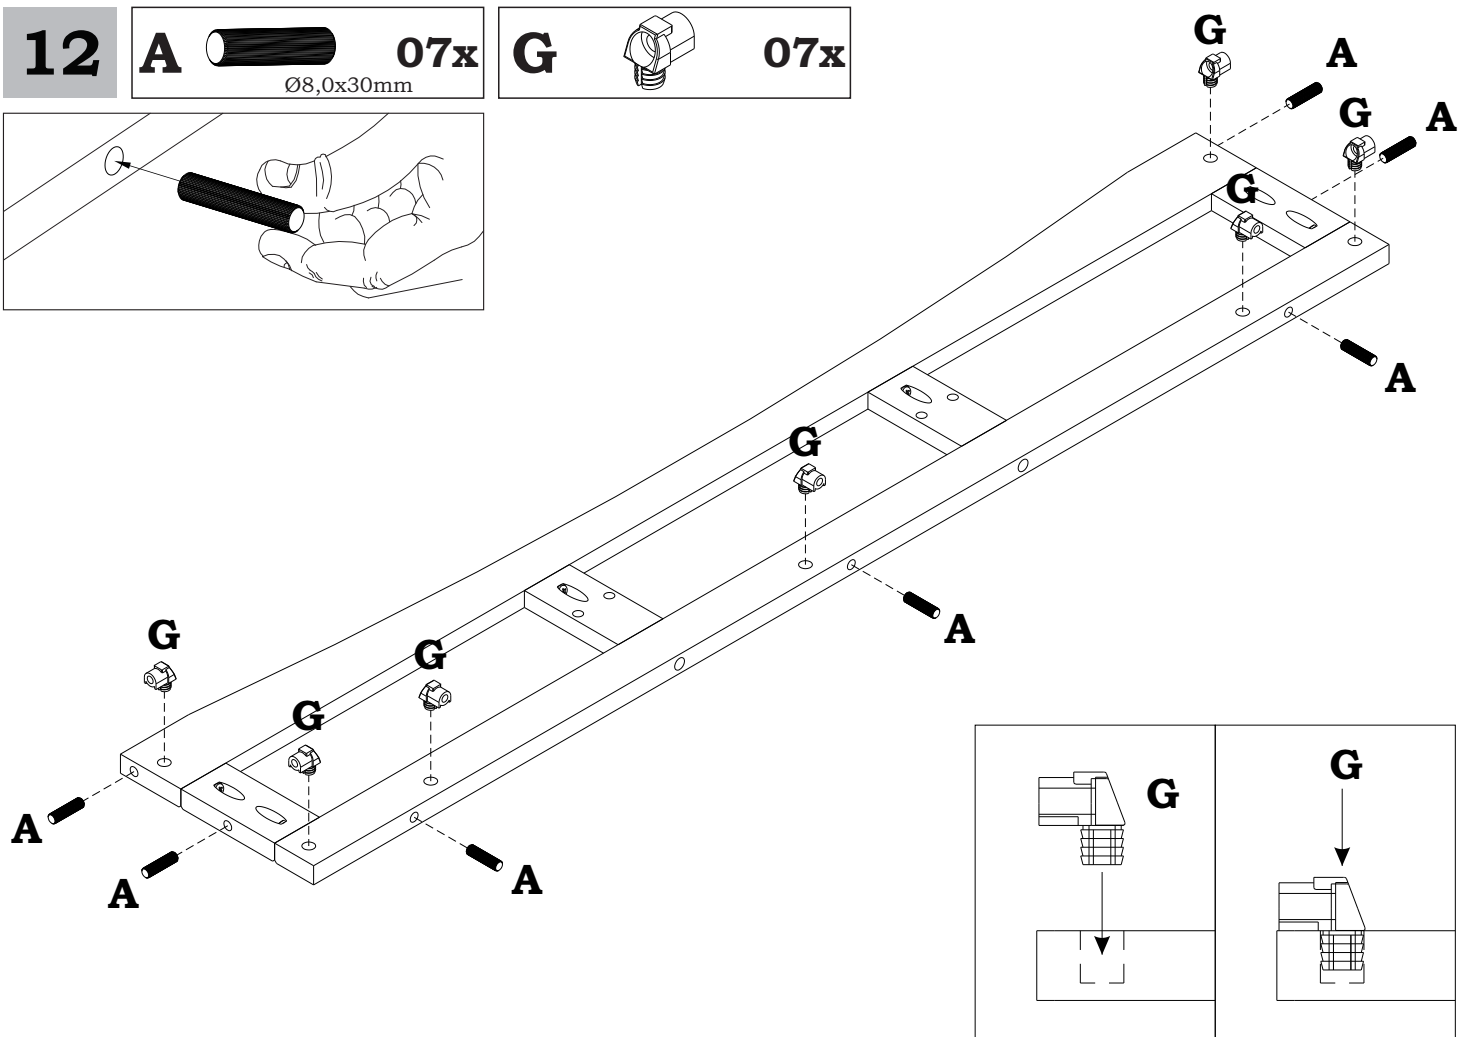
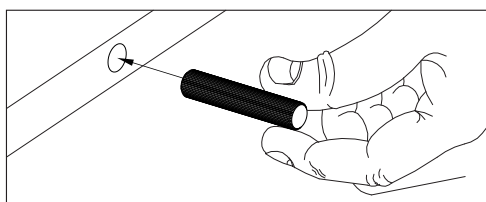
G**07x****13****D****02x**

Ø4,0x25mm

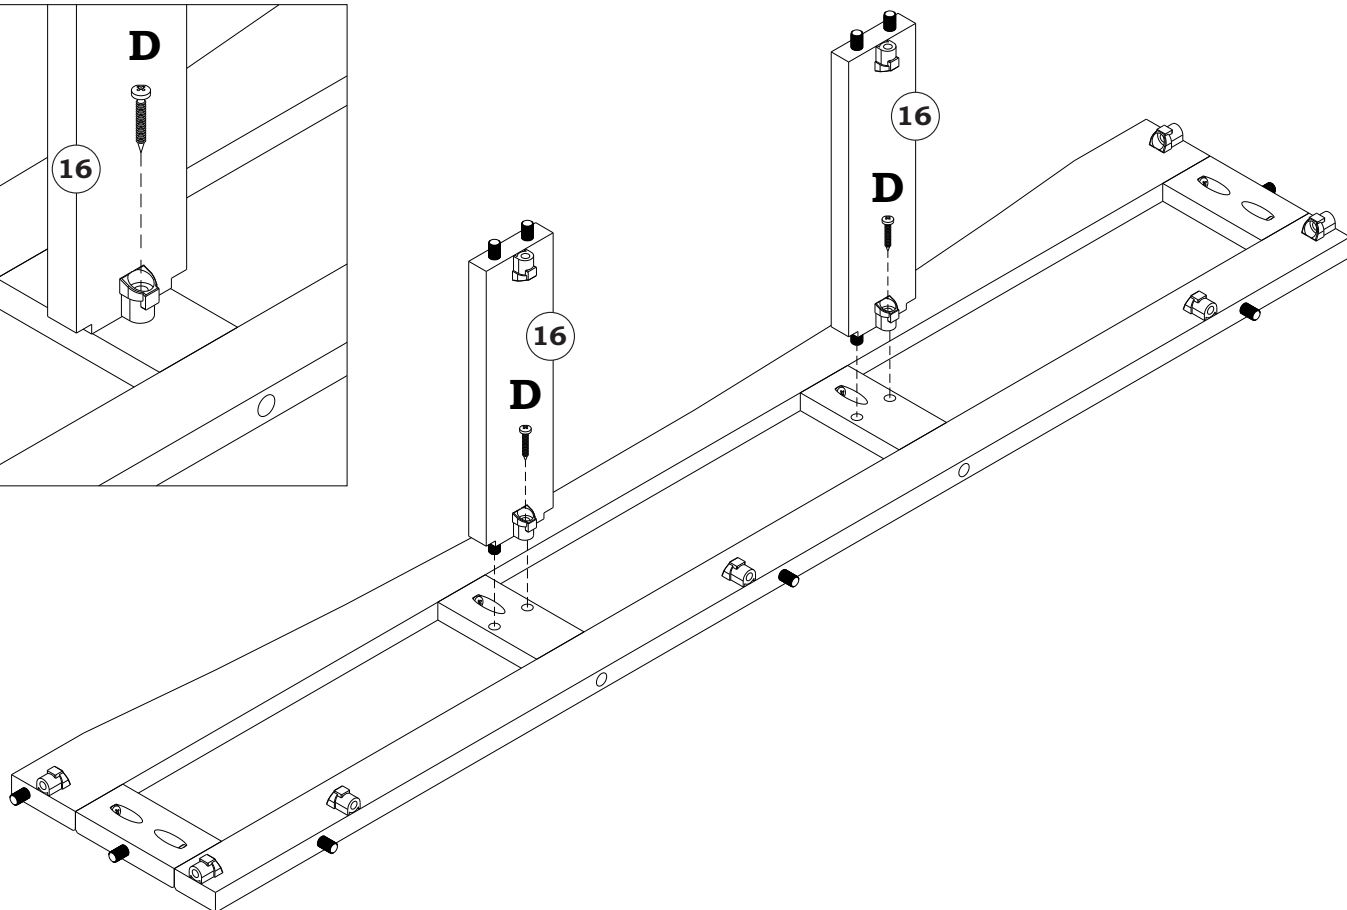
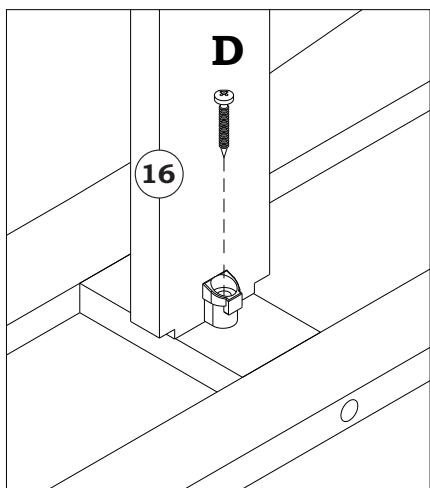


14**D****02x**

Ø4,0x25mm

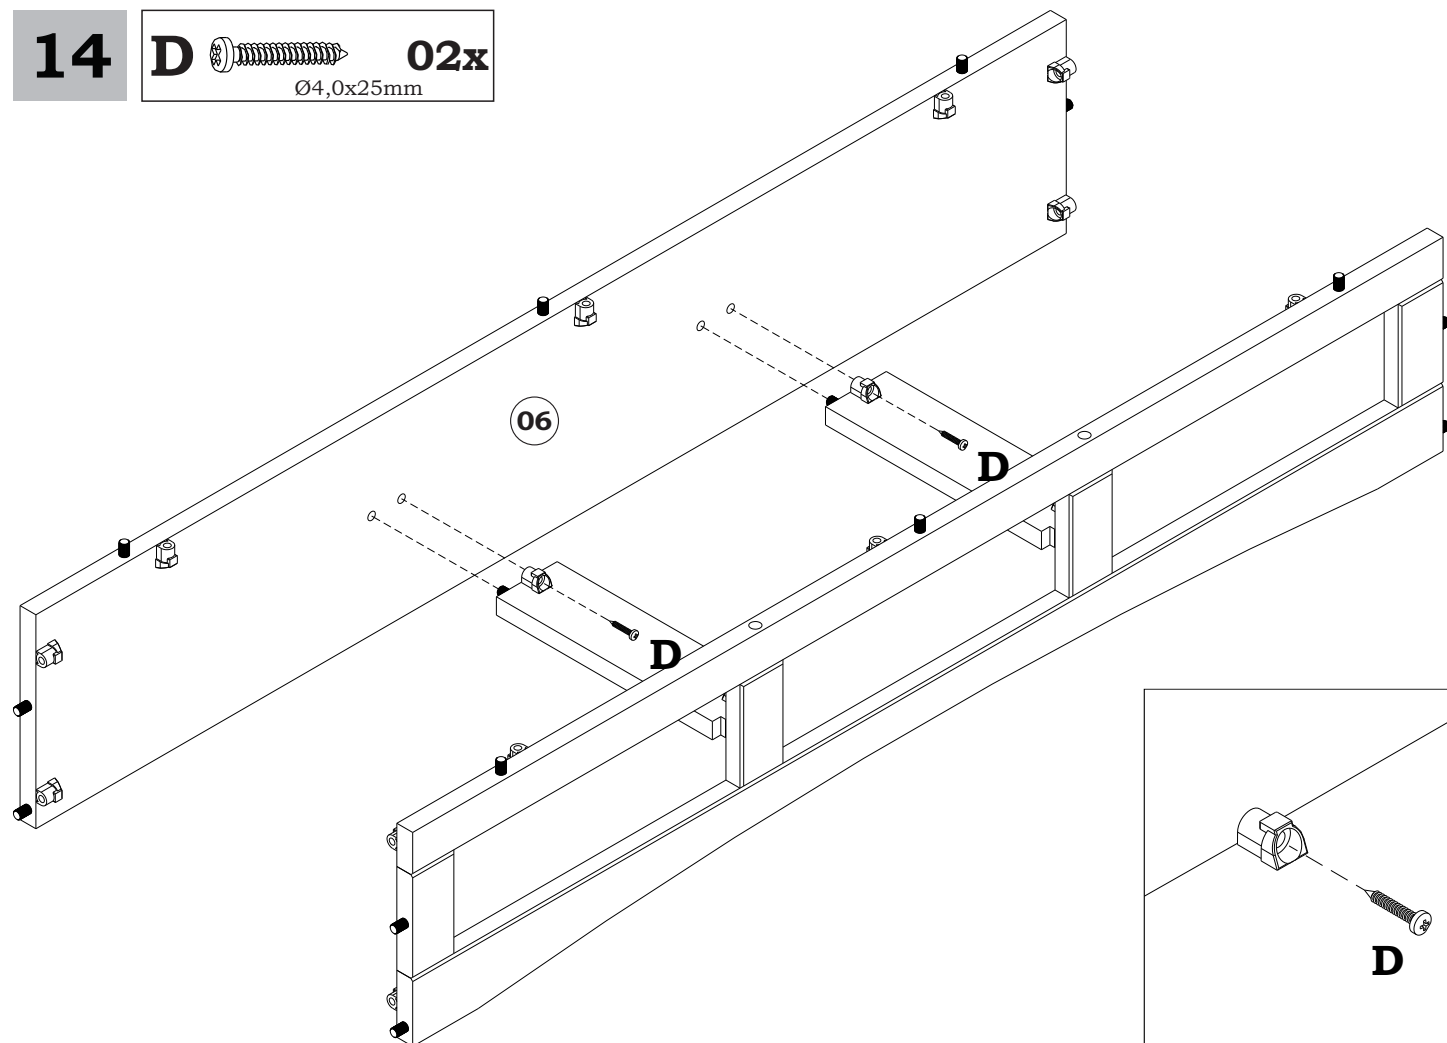**15****B****04x**

Ø3,5x30mm

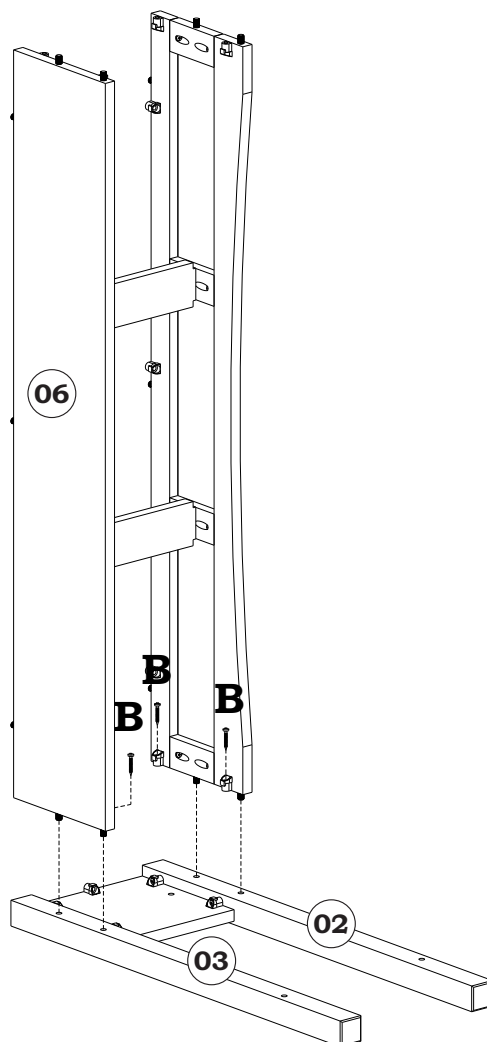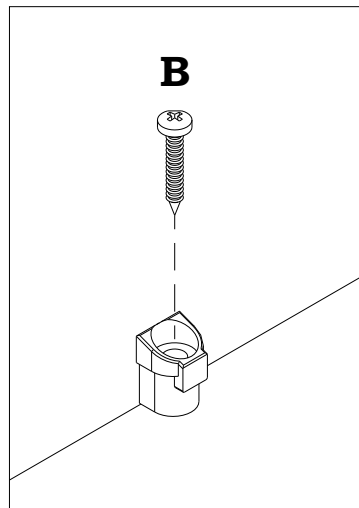

16


B



02x

Ø3,5x30mm

B

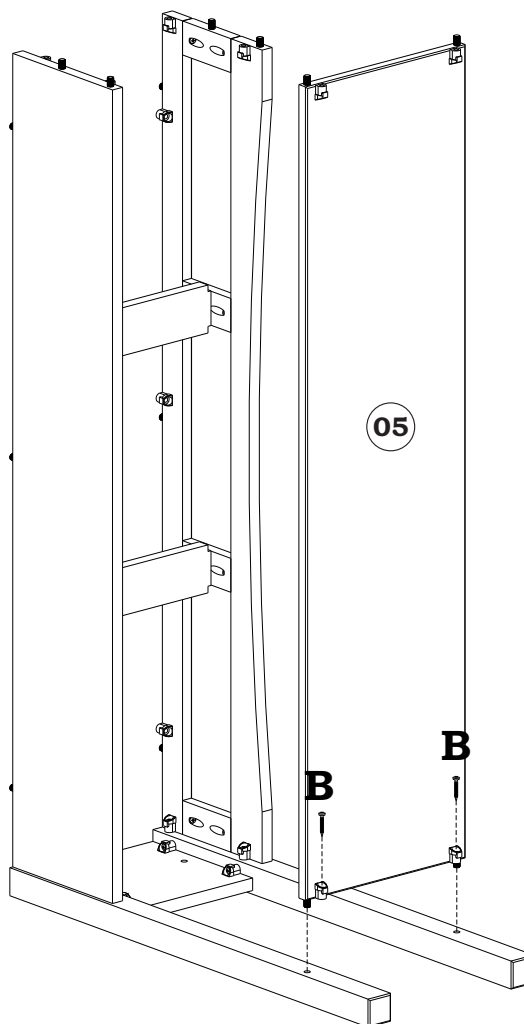

17


B



06x

Ø3,5x30mm

B

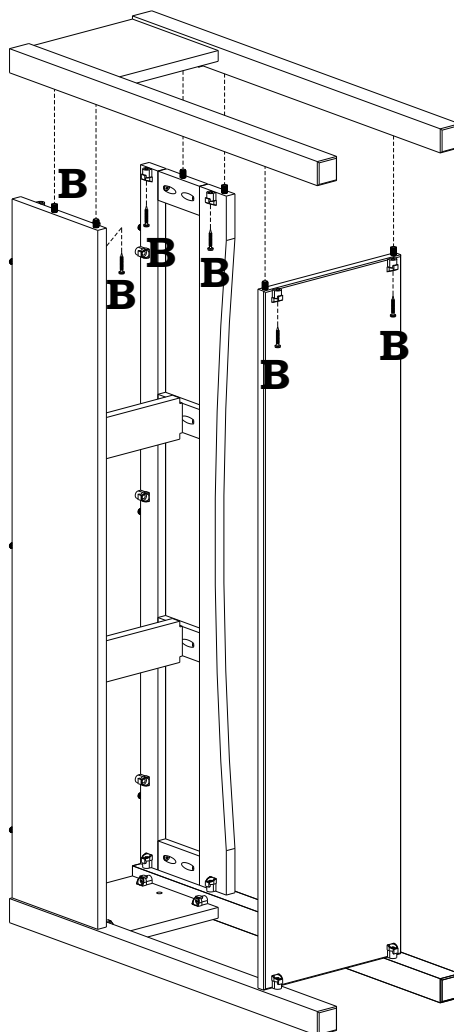


18

D






08x

Ø4,0x25mm

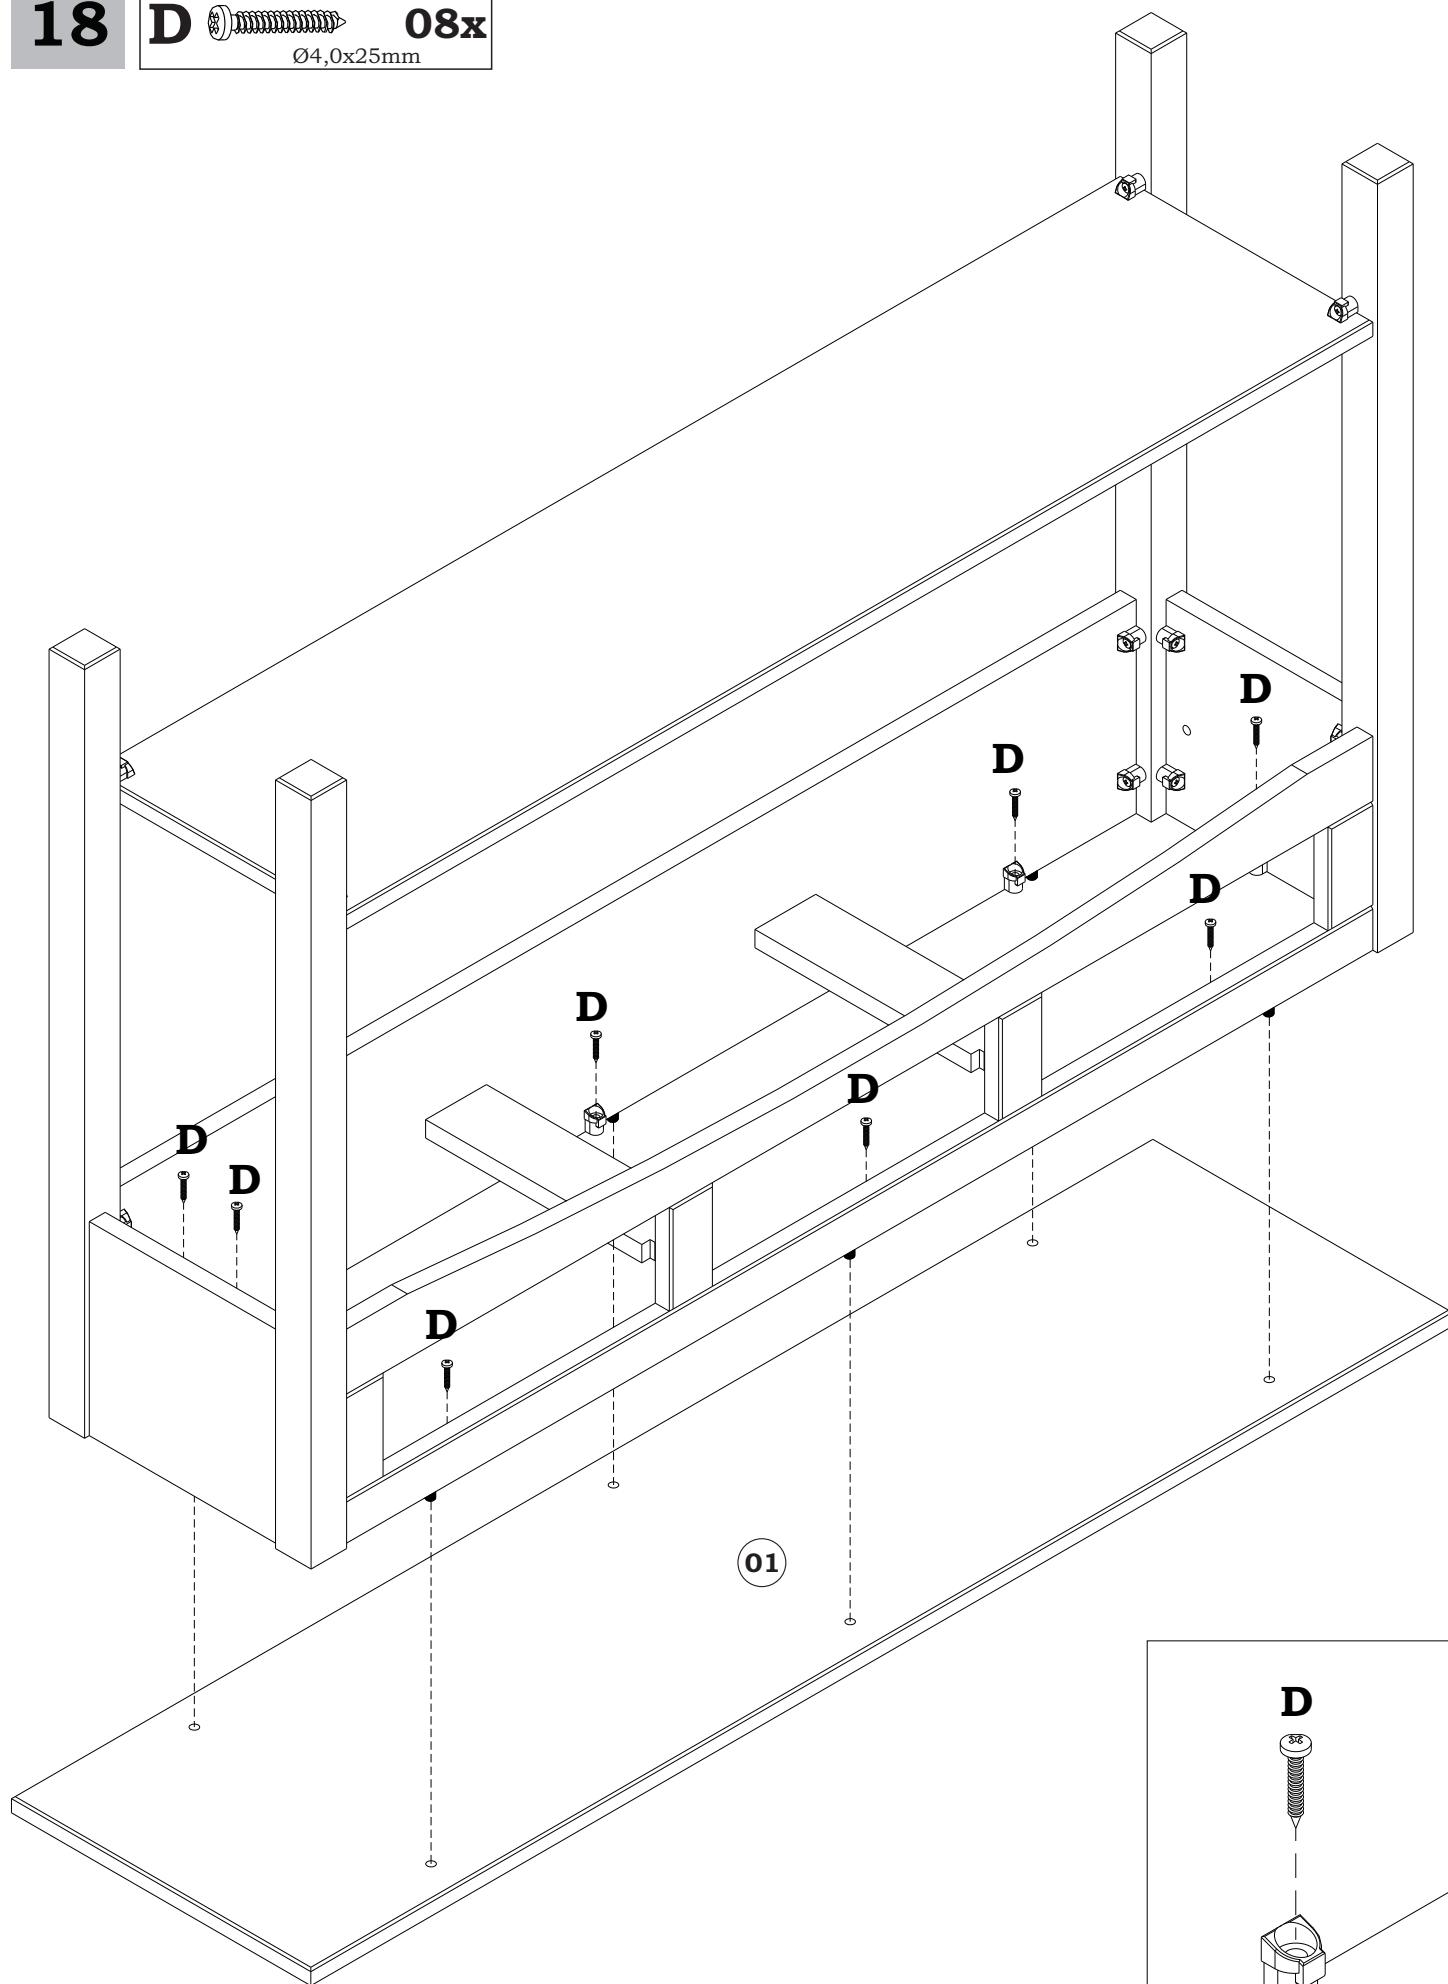

19

C  **04x**
Ø4,5x60mm

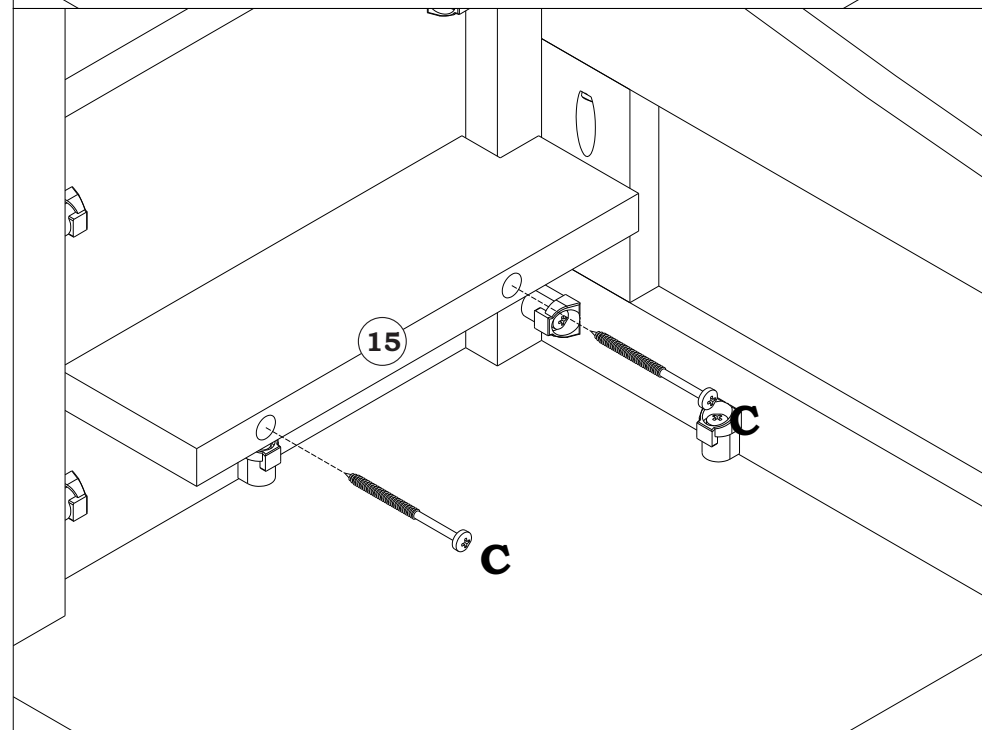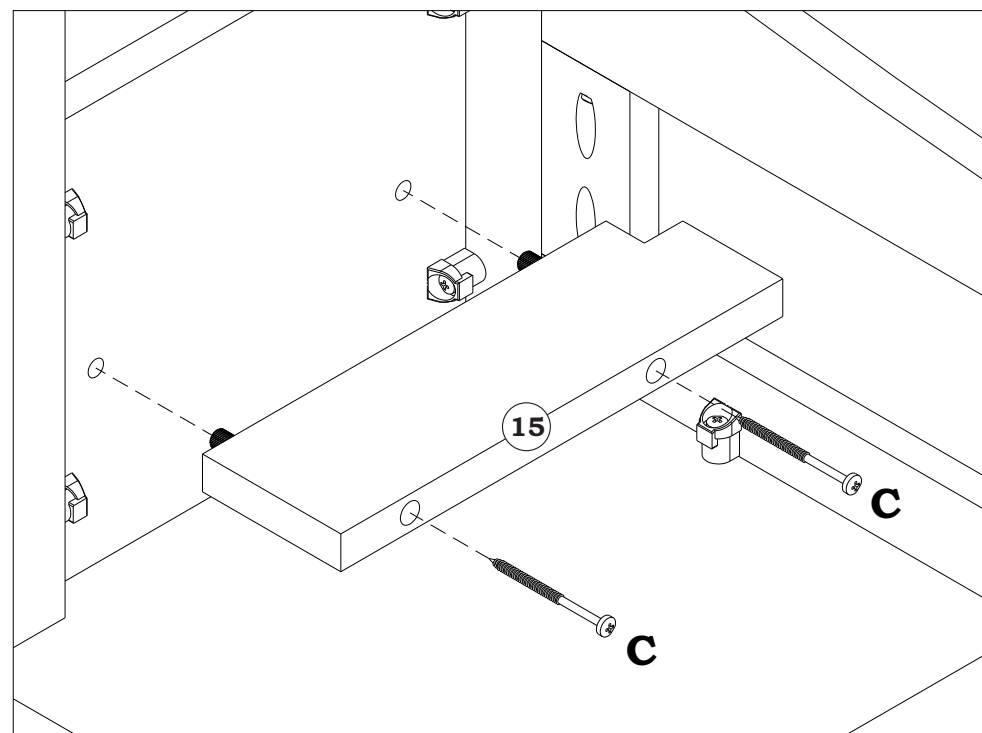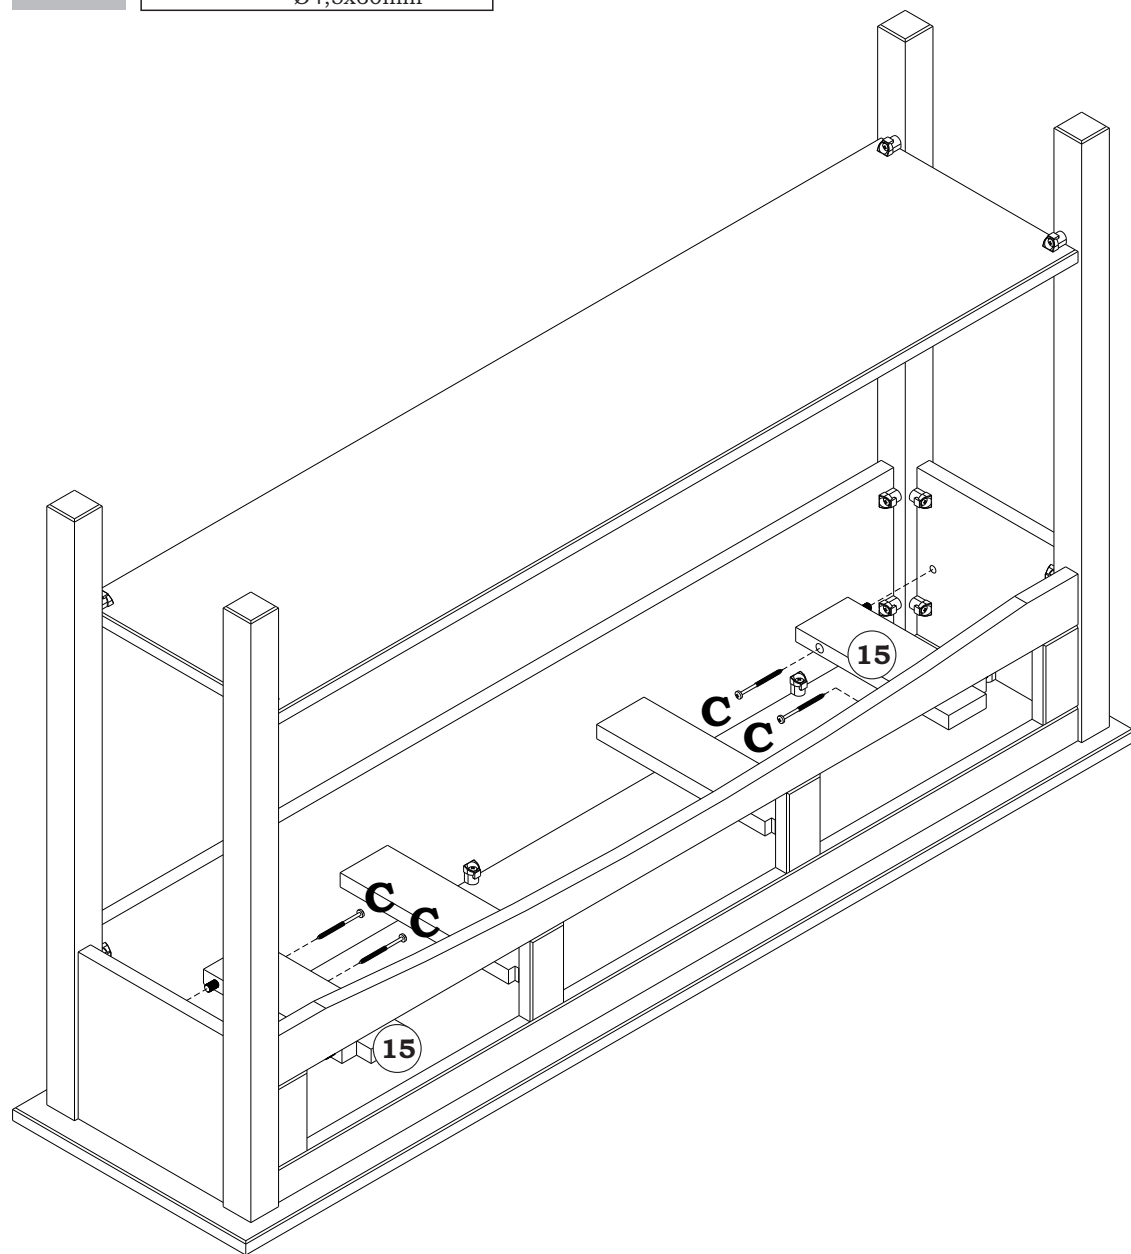


20

B  **24x**
Ø3,5x30mm

E  **03x**
3/16"x5/8"

F  **03x**

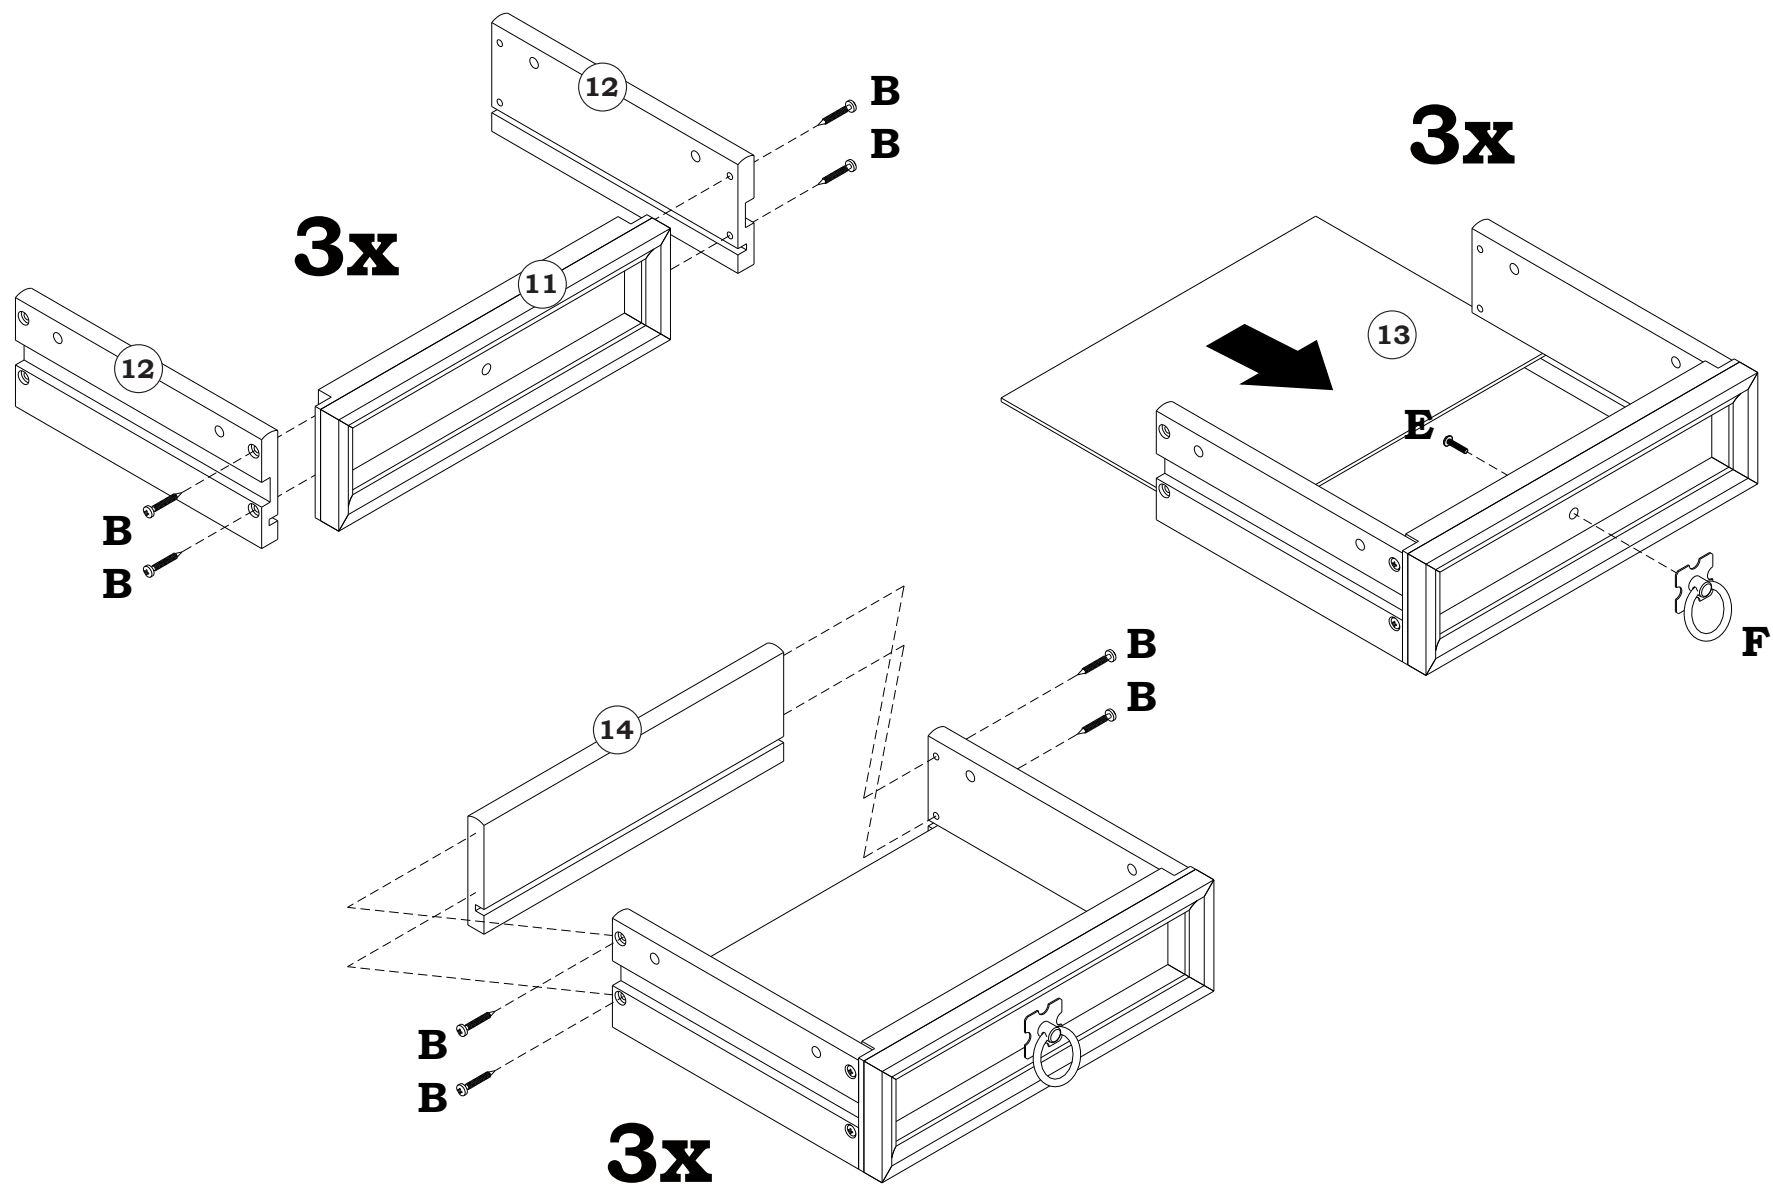





21







A



06x

Ø8,0x30mm

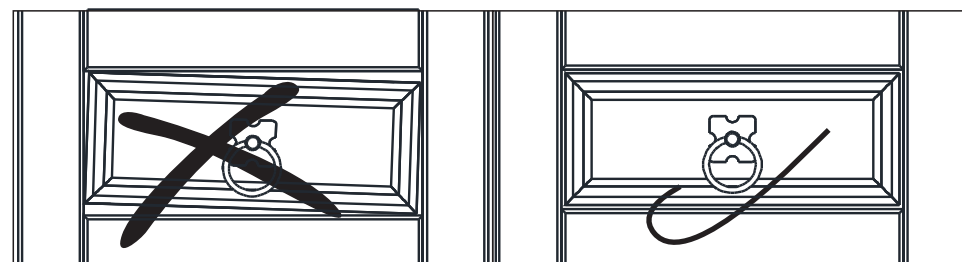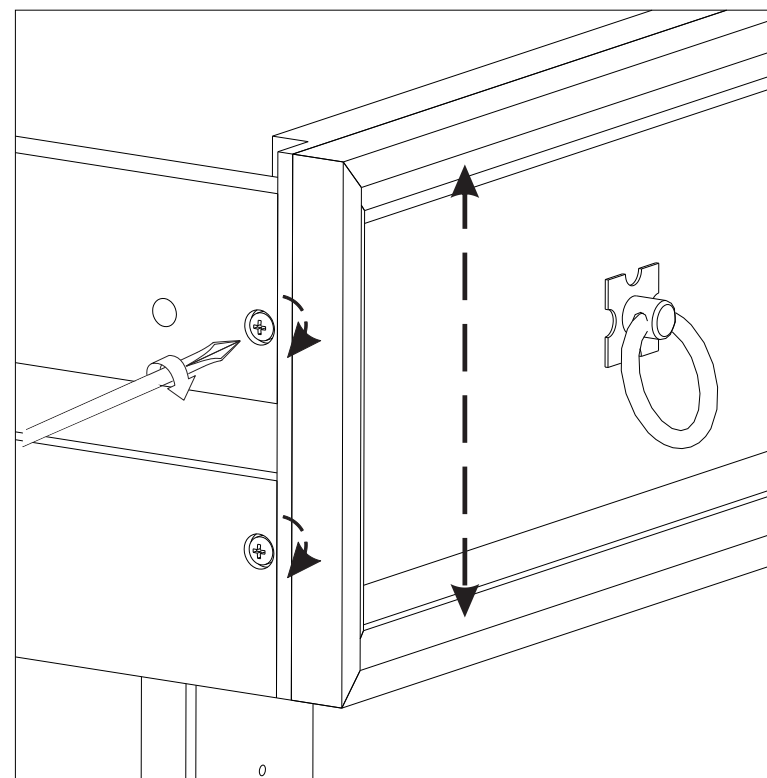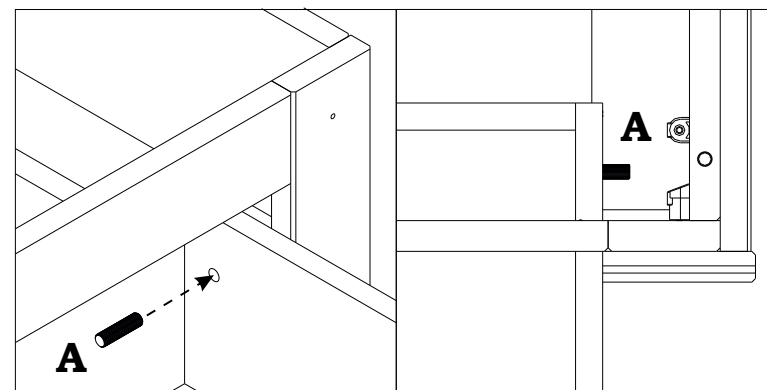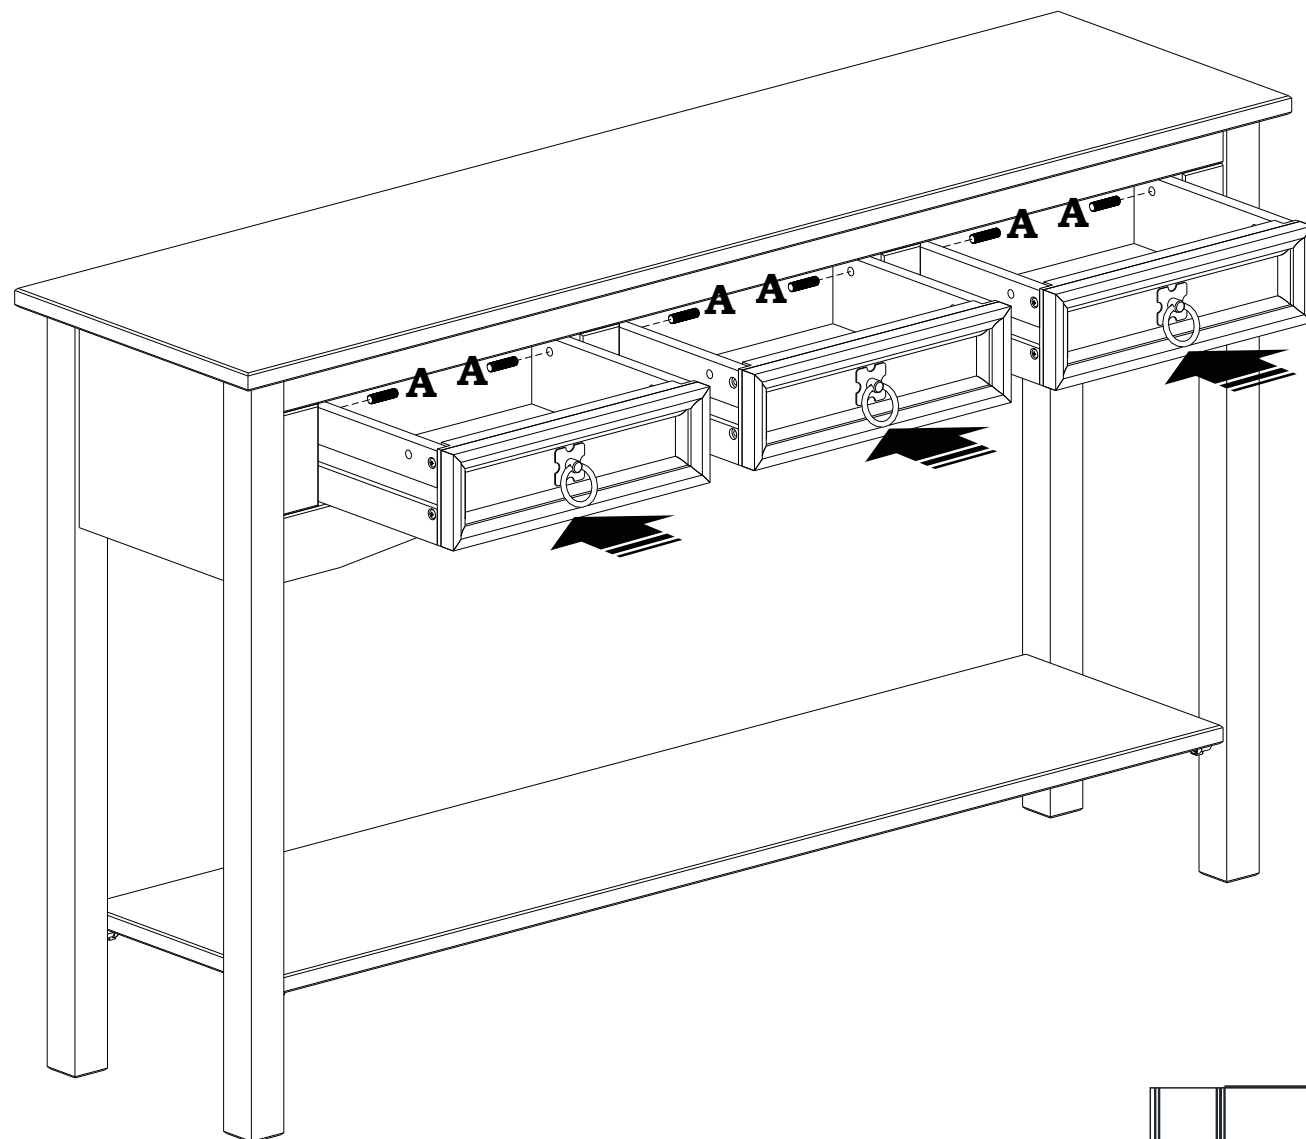

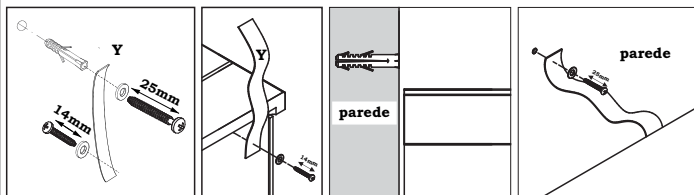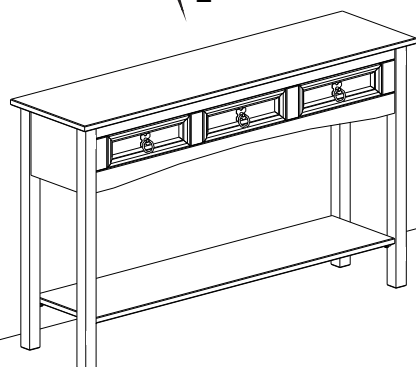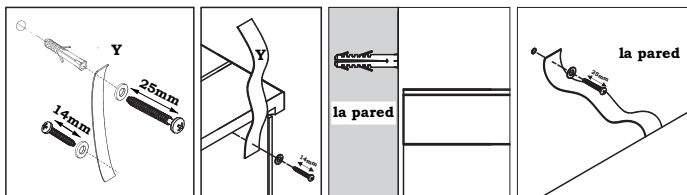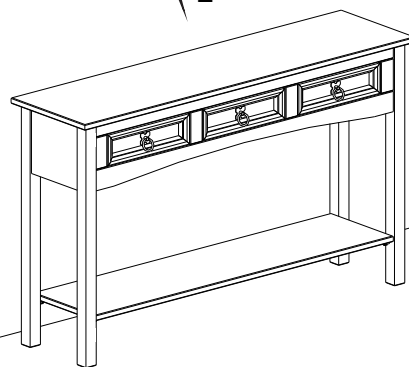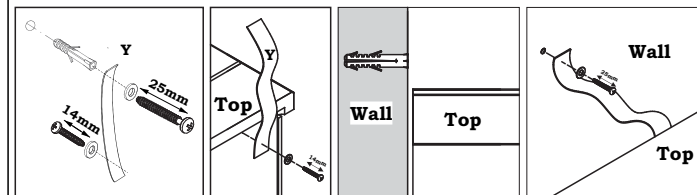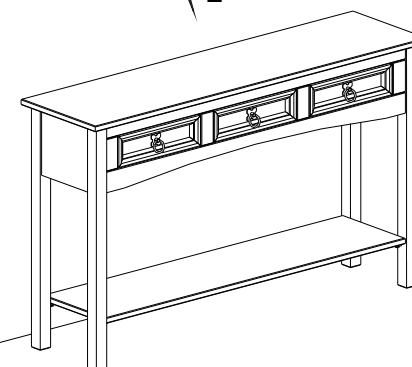22**Y****01x****Y****22****Y****01x****Y****22****Y****01x****Y**

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED).

- Place fixing strip against the wall and mark position for drilling hole.
- Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.
- Insert the wall plug into the hole with end flush to the wall surface.
- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.
- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of fixing strip to the back edge of the furniture top using the 14mm screw + washer and securely tighten.