
















Assembly Instruction

251023WXL0702-2-21
251023WXL0702-2-22
251023WXL0703-2-21
251023WXL0703-2-22






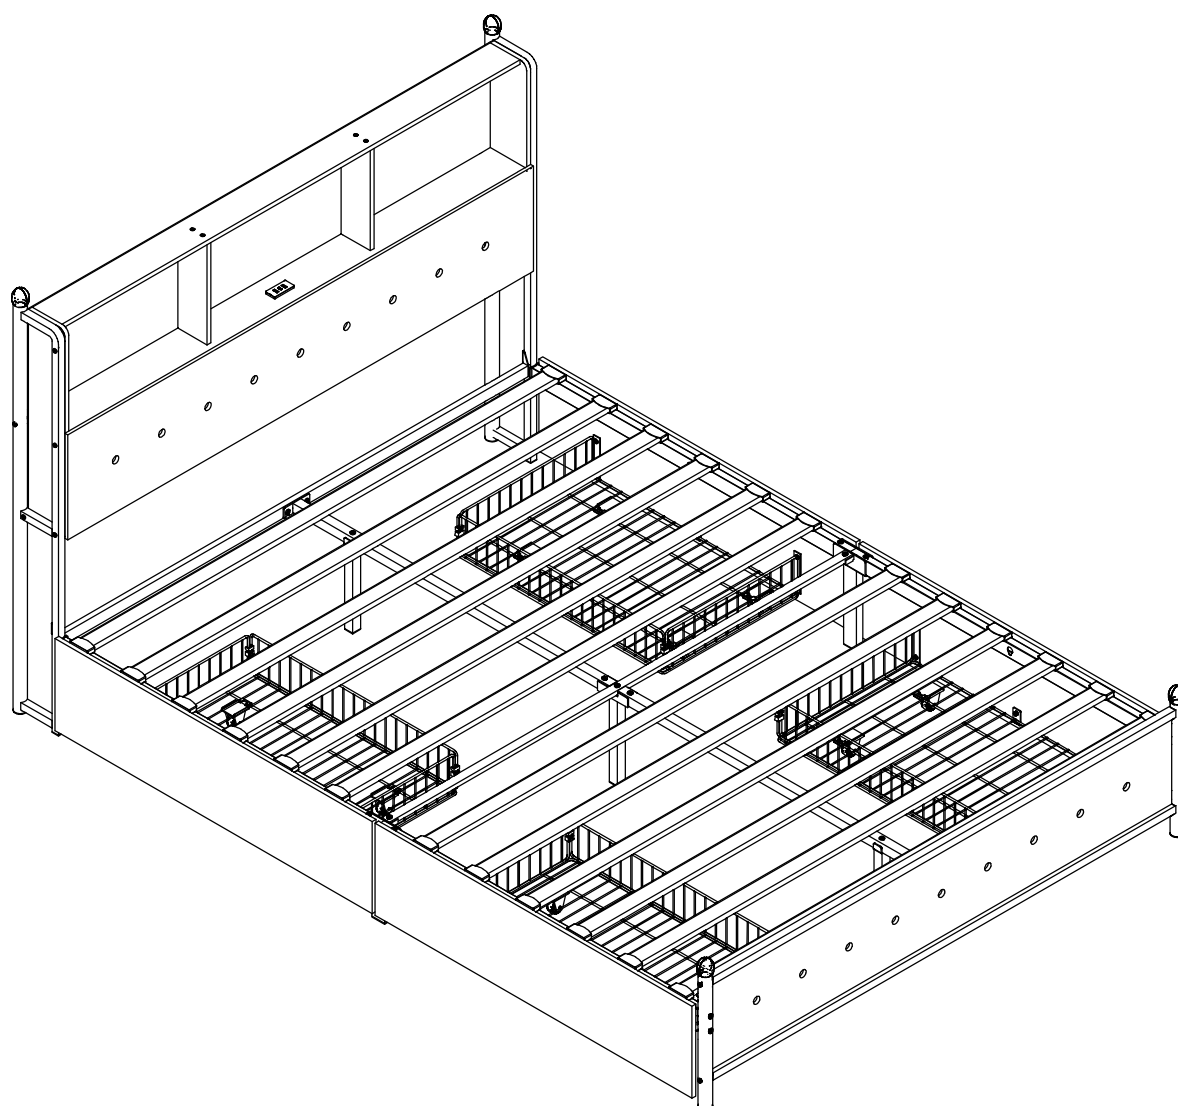


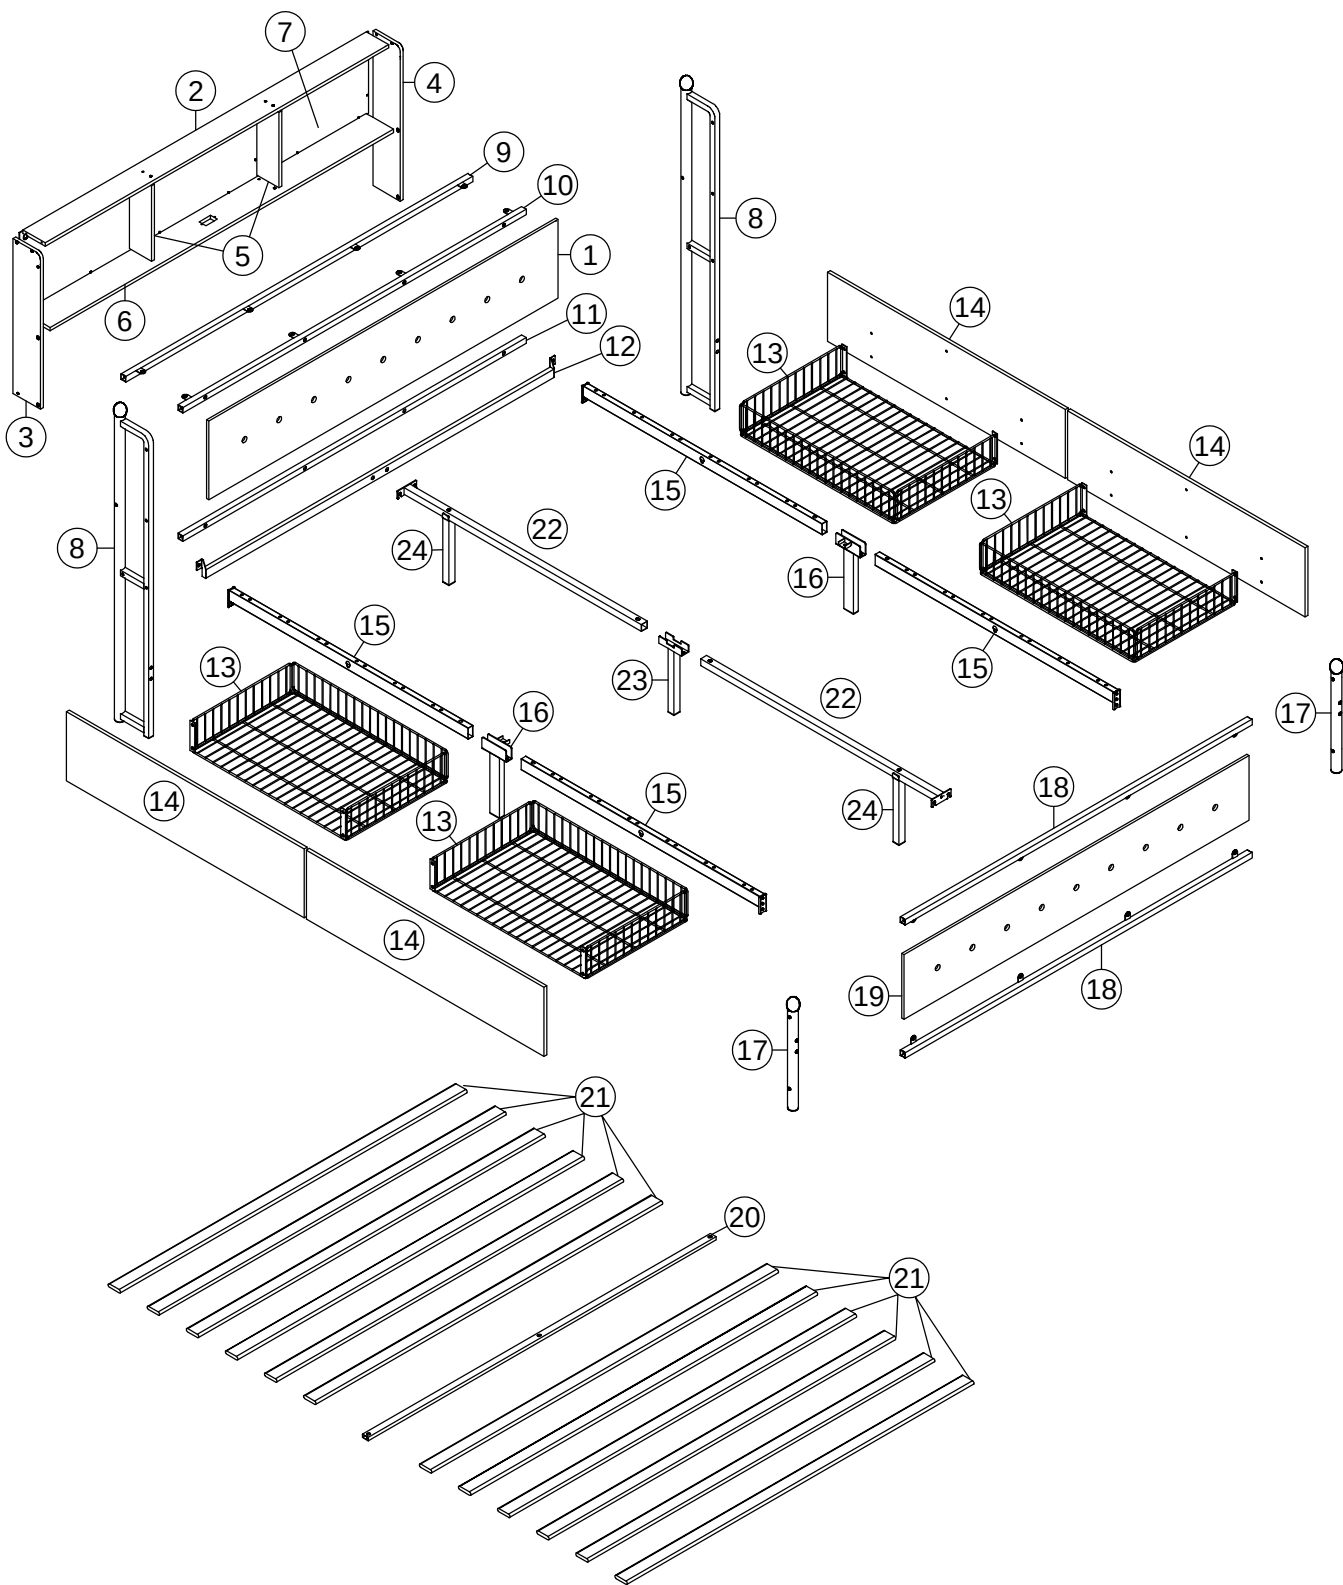

251023WXL0702-2-21 / 251023WXL0703-2-21

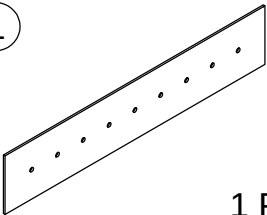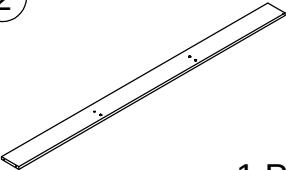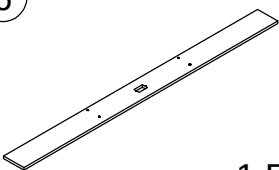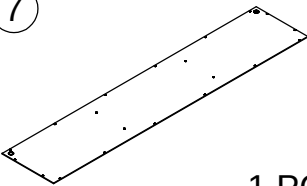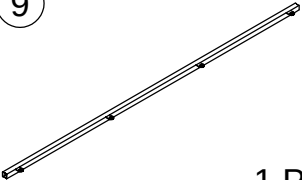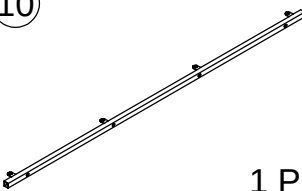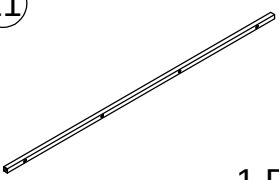
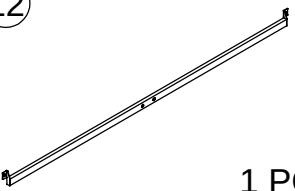
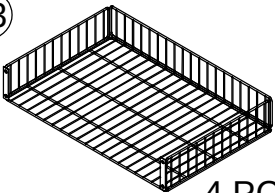
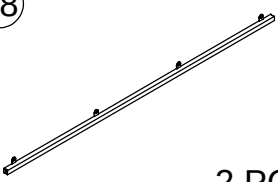
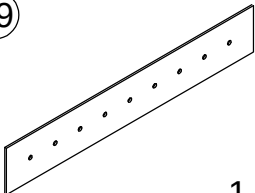
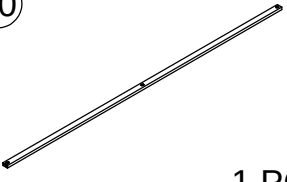
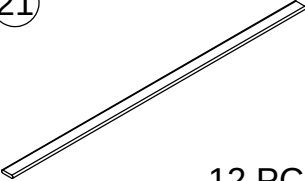
①  1 PC	②  1 PC	⑥  1 PC	⑦  1 PC
⑨  1 PC	⑩  1 PC	⑪  1 PC	⑫  1 PC
⑬  4 PCS	⑱  2 PCS	⑲  1 PC	⑳  1 PC
㉑  12 PCS			

251023WXL0702-2-22 / 251023WXL0703-2-22

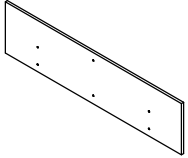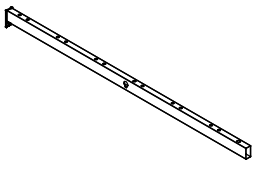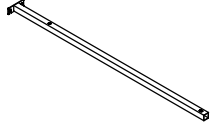
③  1 PC	④  1 PC	⑤  2 PCS	⑧  2 PCS
⑭  4 PCS	⑮  4 PCS	⑯  2 PCS	⑰  2 PCS
㉒  2 PCS	㉓  1 PC	㉔  2 PCS	

Hardware/Mat riel

251023WXL0702-2-22 / 251023WXL0703-2-22

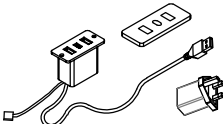A  8PCS	B  4PCS	C  16PCS	D  M8x15mm 6PCS+1	E  M8x25mm 2PCS+1
F  M8x40mm 9PCS+1	G  M8x50mm 8PCS+1	H  M6x10mm 8PCS+1	I  M6x12mm 28PCS+2	J  1PC
K  1PC	L  M6x28mm 4PCS+1	M  M6x32mm 8PCS+1	N  M6x55mm 10PCS+1	O  M6x19mm 4PCS+1
P  Ø5x38mm 12PCS+1	Q  3.5x12mm 2PCS+1	R  4x14mm 20PCS+2	S  24PCS	T  M5 1+1PCS
U  M4 1+1PCS	V  M3 2PCS			

Step 1


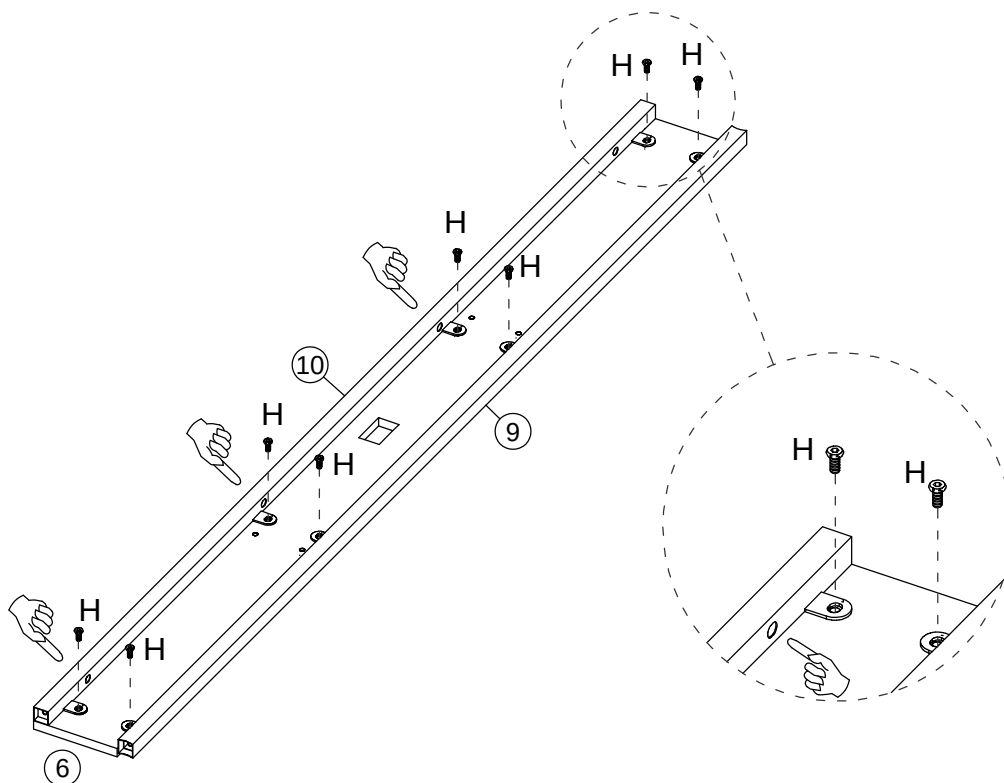


H




M6x10mm

8PCS

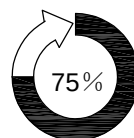

Step 2

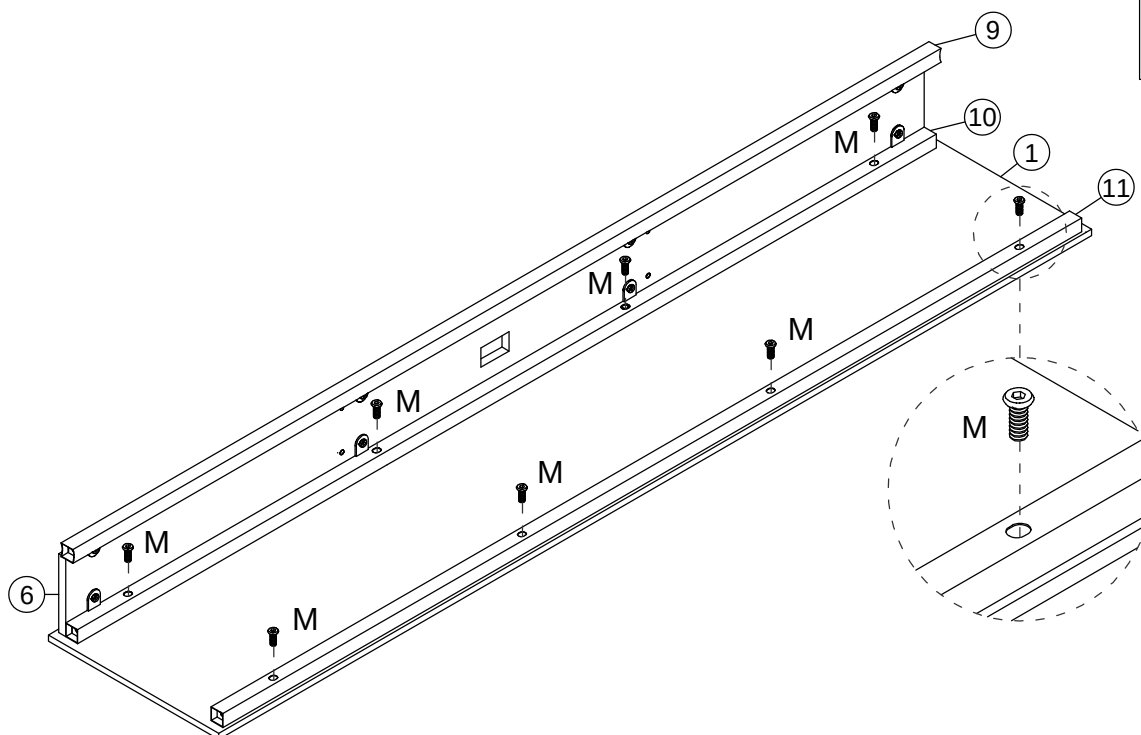


M



M6x32mm

8PCS

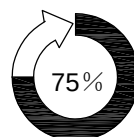



Step 3

P



Ø5x38mm

4PCS

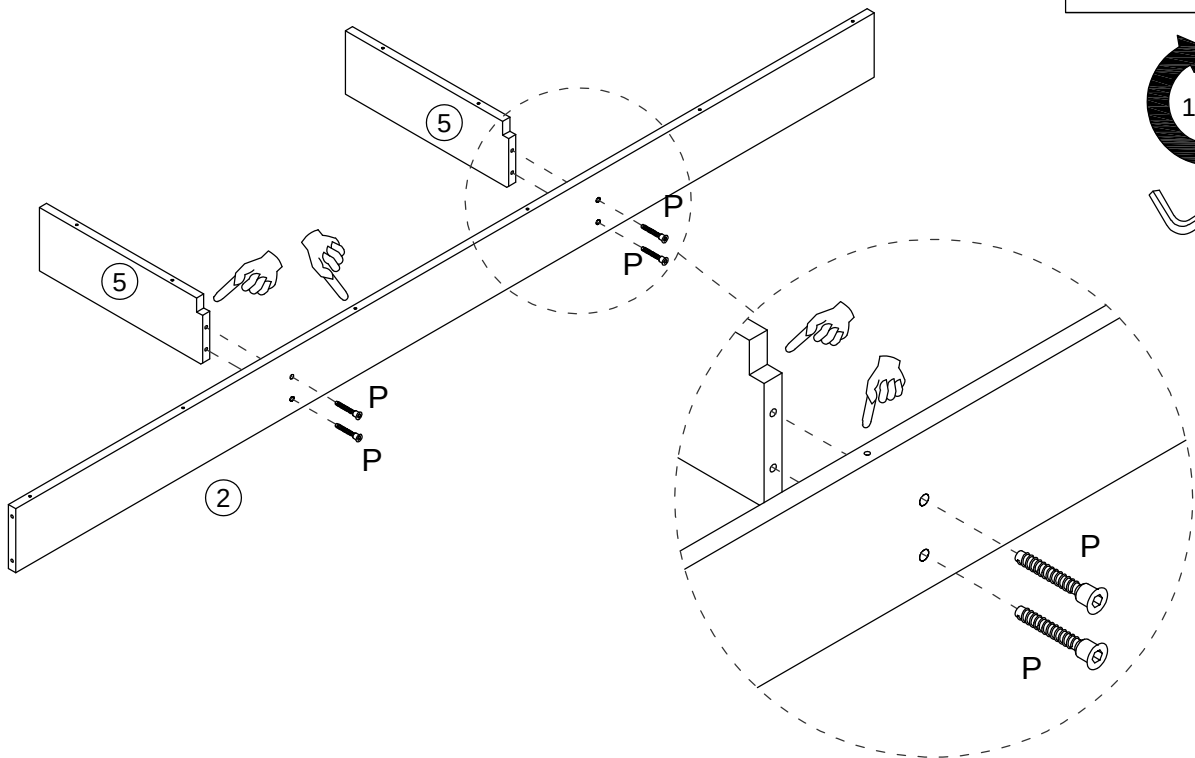


Step 4

P



Ø5x38mm

4PCS

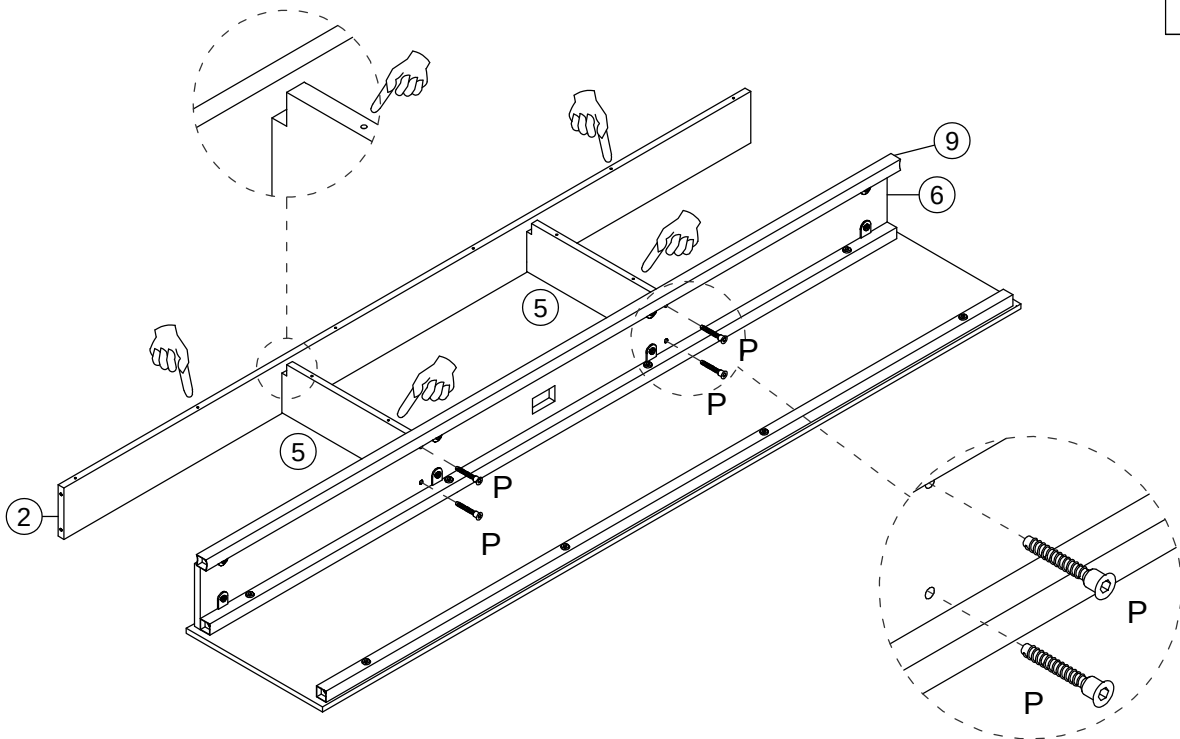


Step 5

P



Ø5x38mm

4PCS

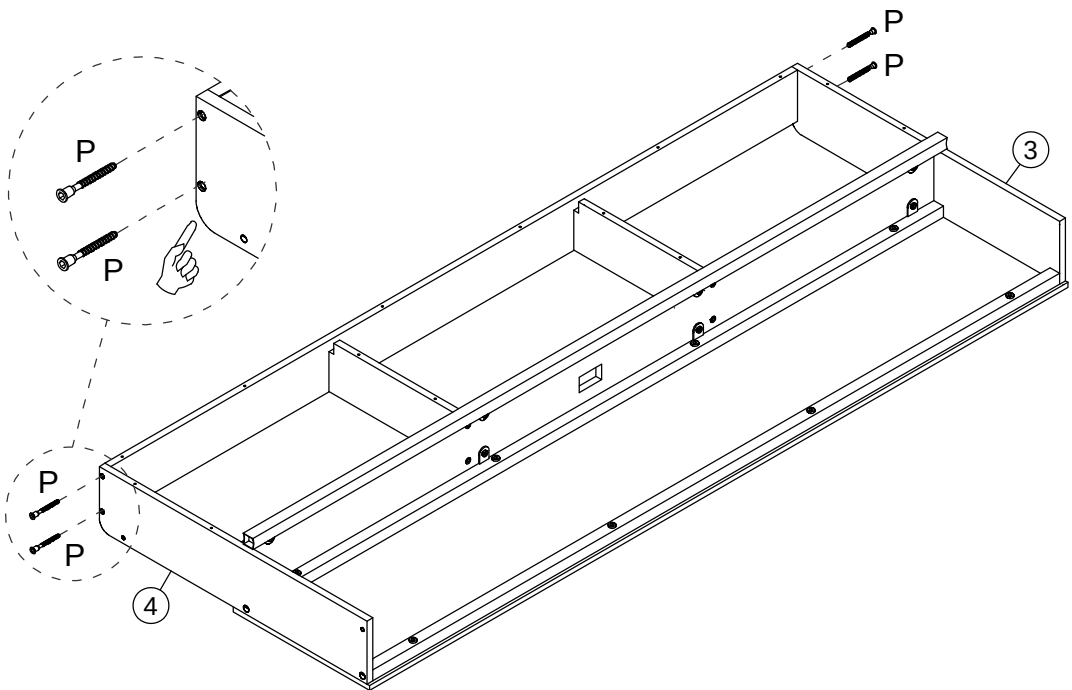


Step 6


K




1PC

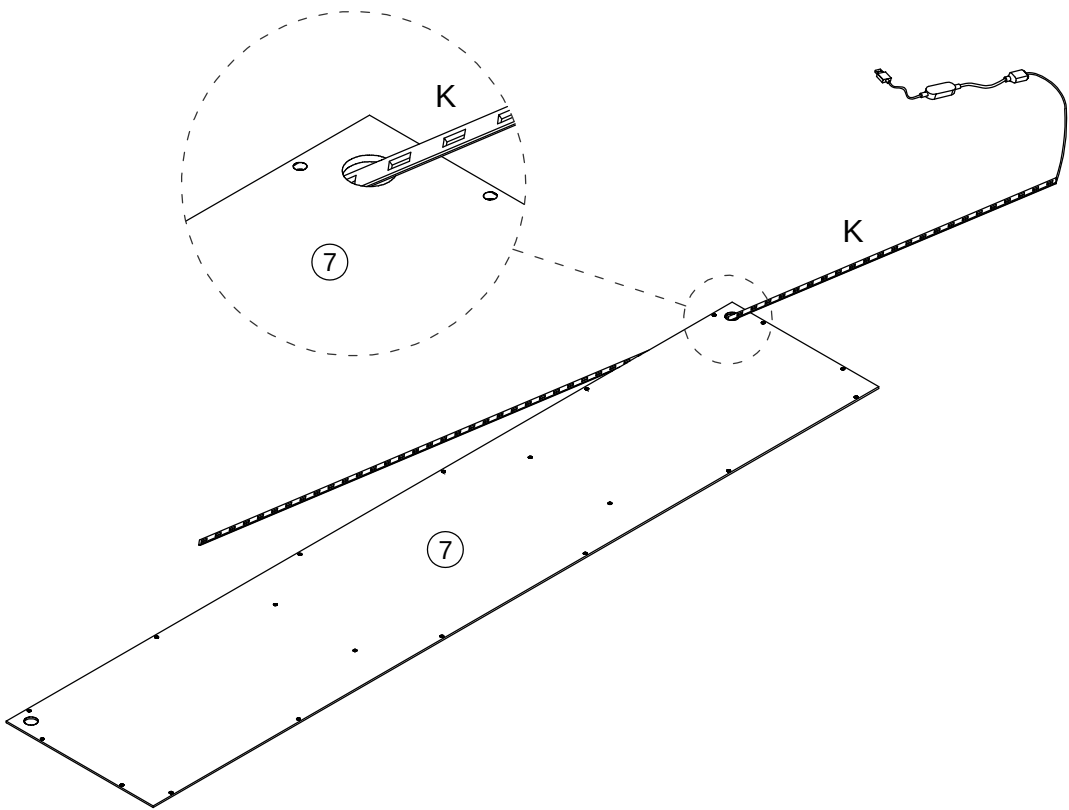

Step 7

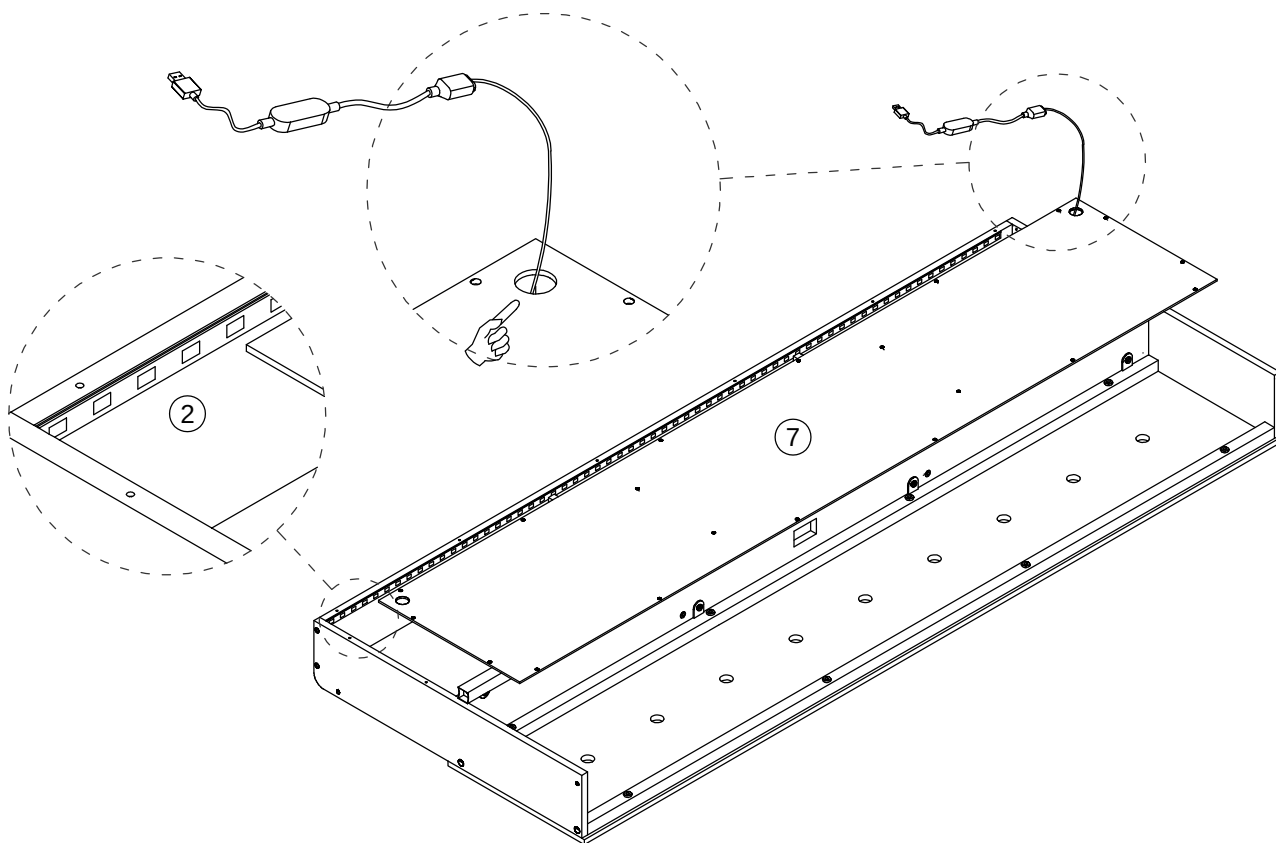

Step 8

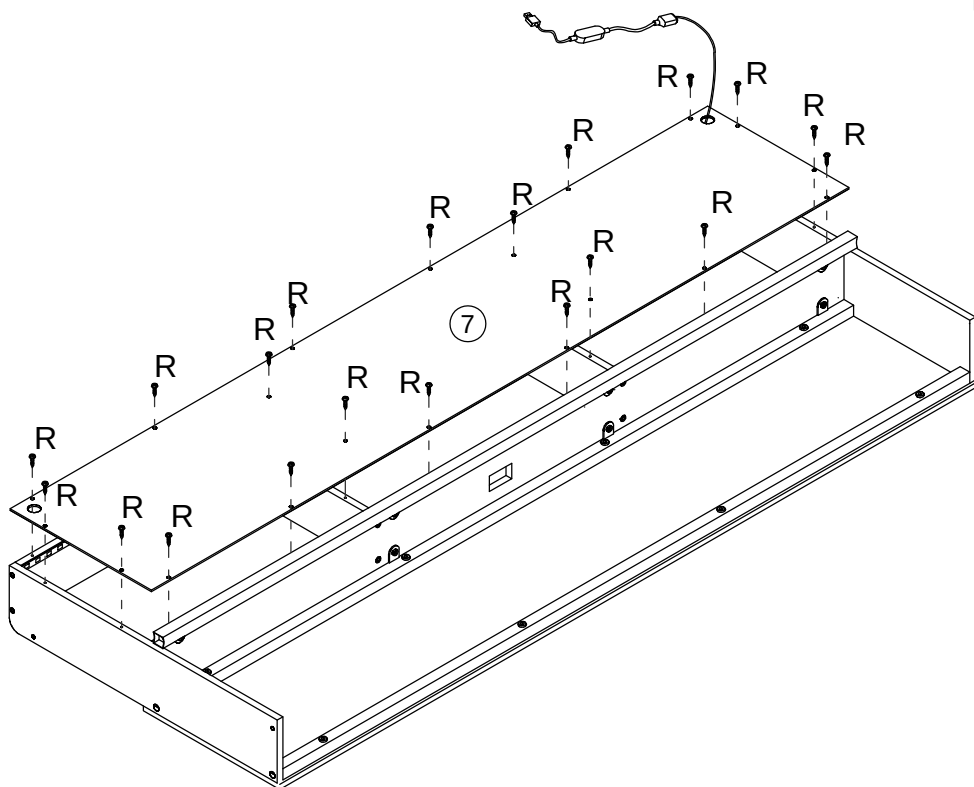

R






4x14mm

20PCS+1



Step 9



L	N
	
M6x28mm	M6x55mm
4PCS	6PCS

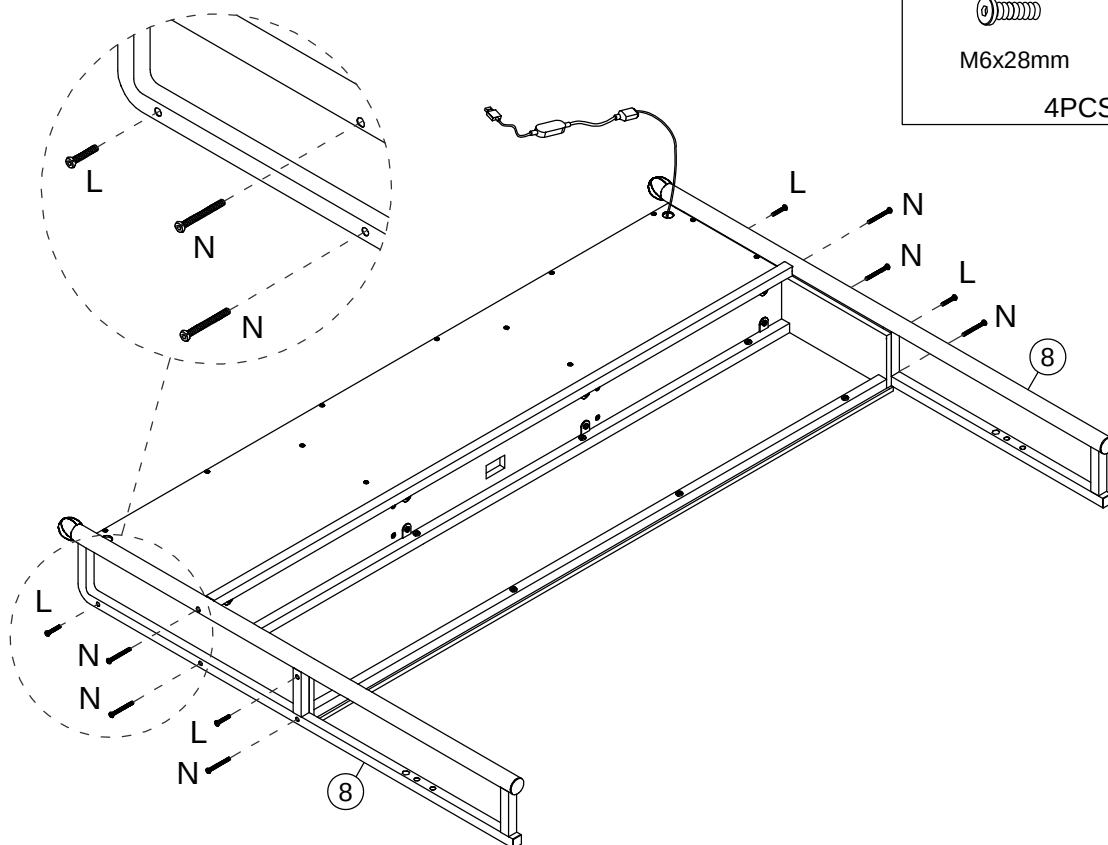


Step 10

D

M8x15mm
2PCS

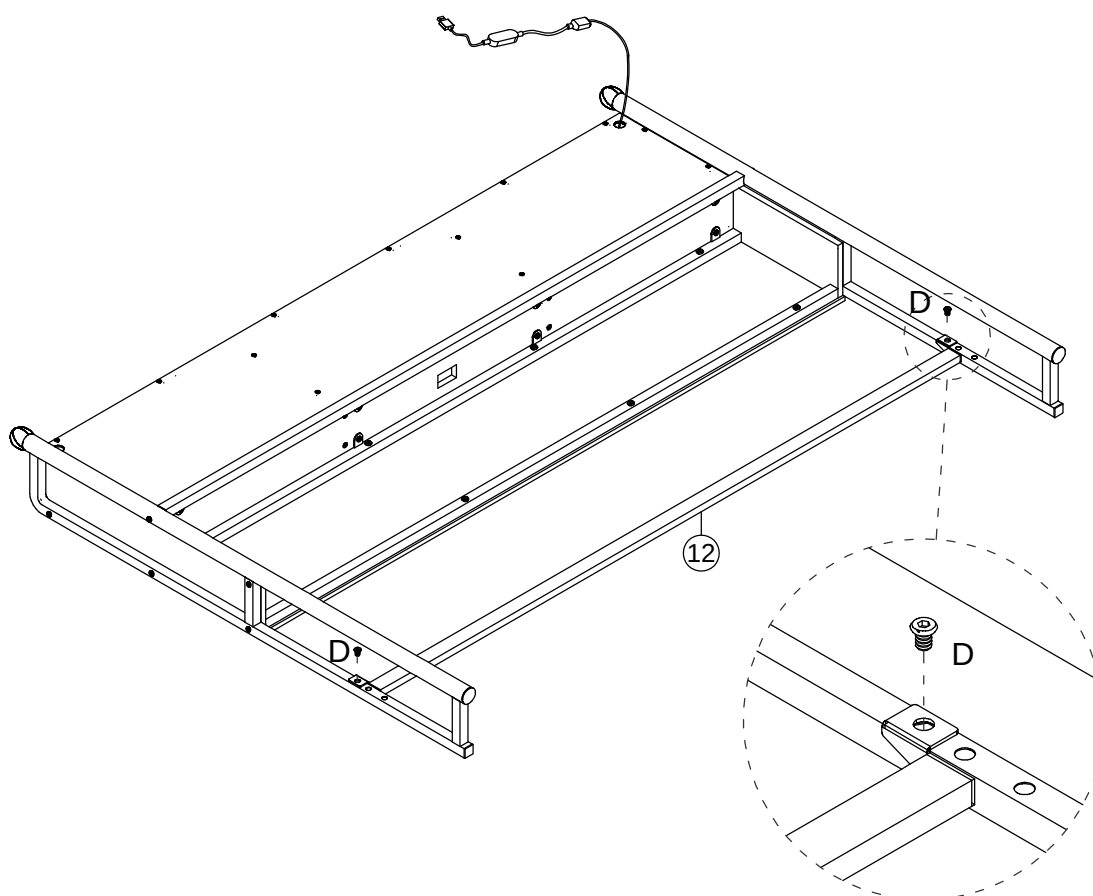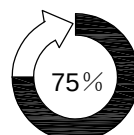

Step 11


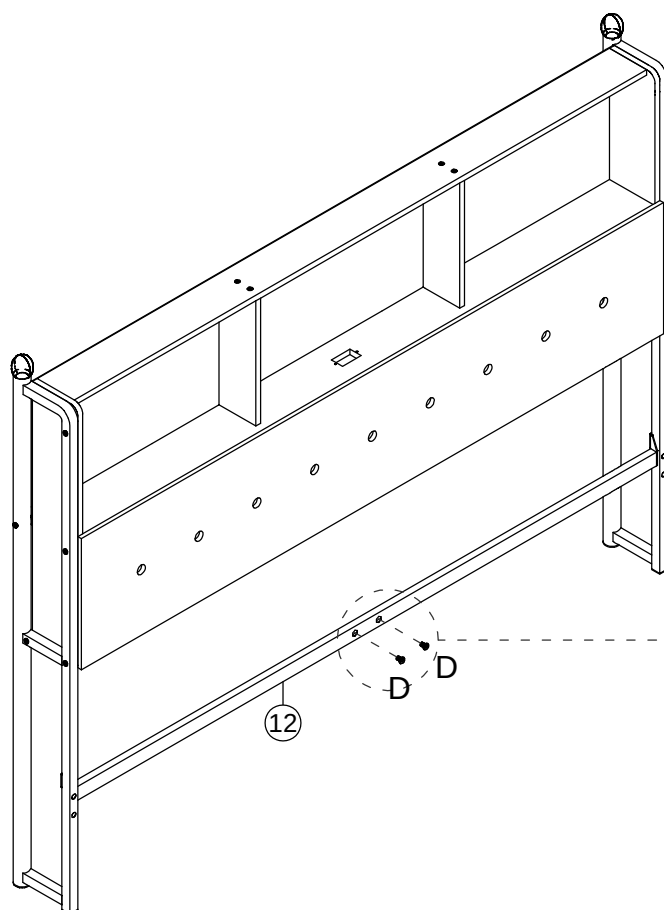


D




M8x15mm


2PCS

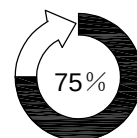

Step 12

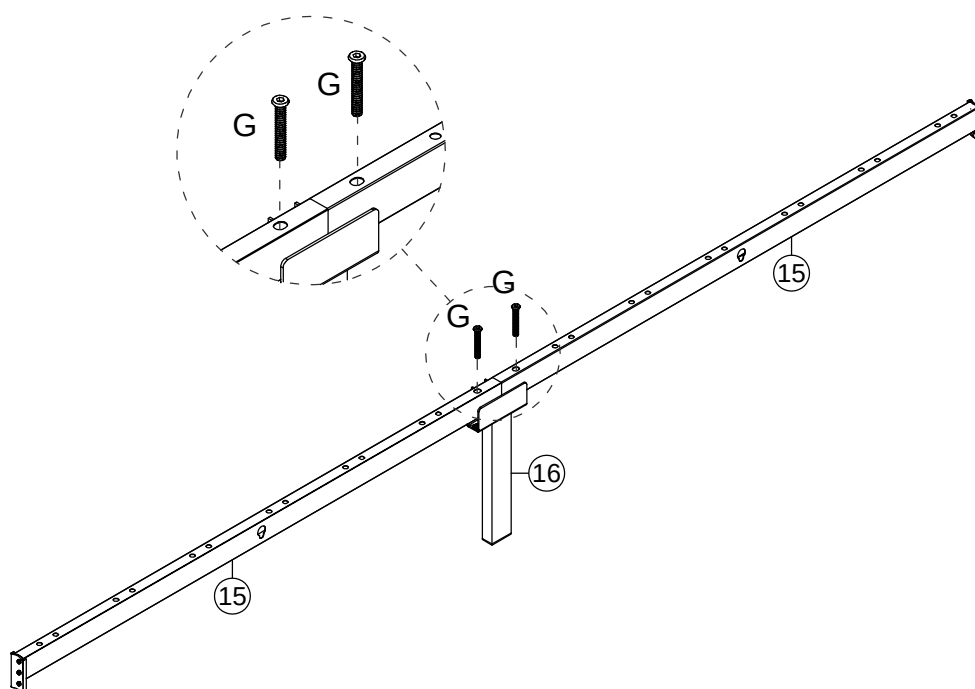

G



M8x50mm



4PCS




x2


Step 13

D	I
	
M8x15mm	M6x12mm
2PCS	8PCS

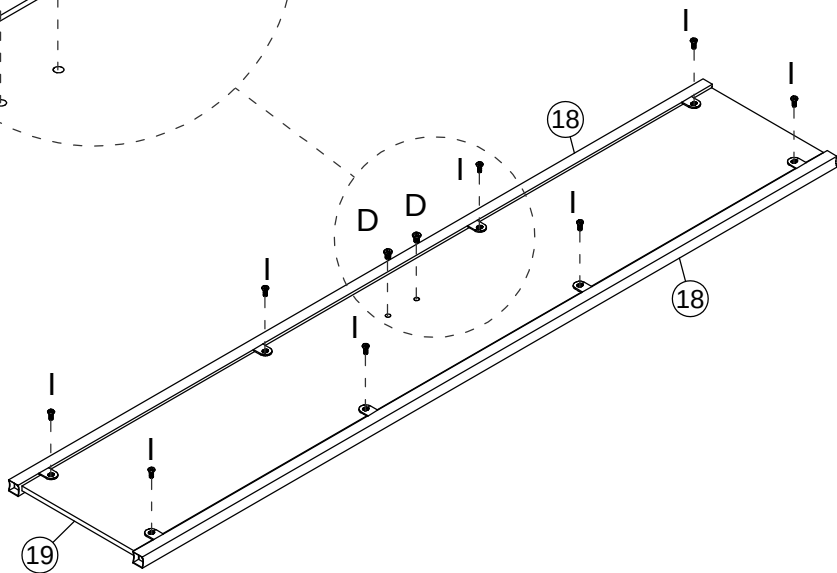
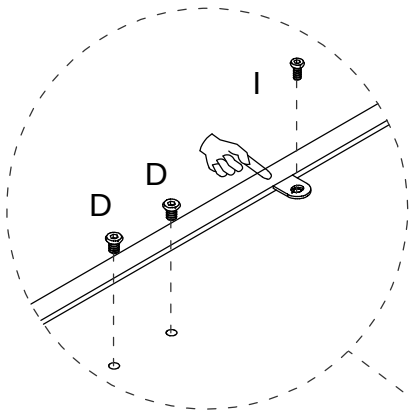



Step 14

N

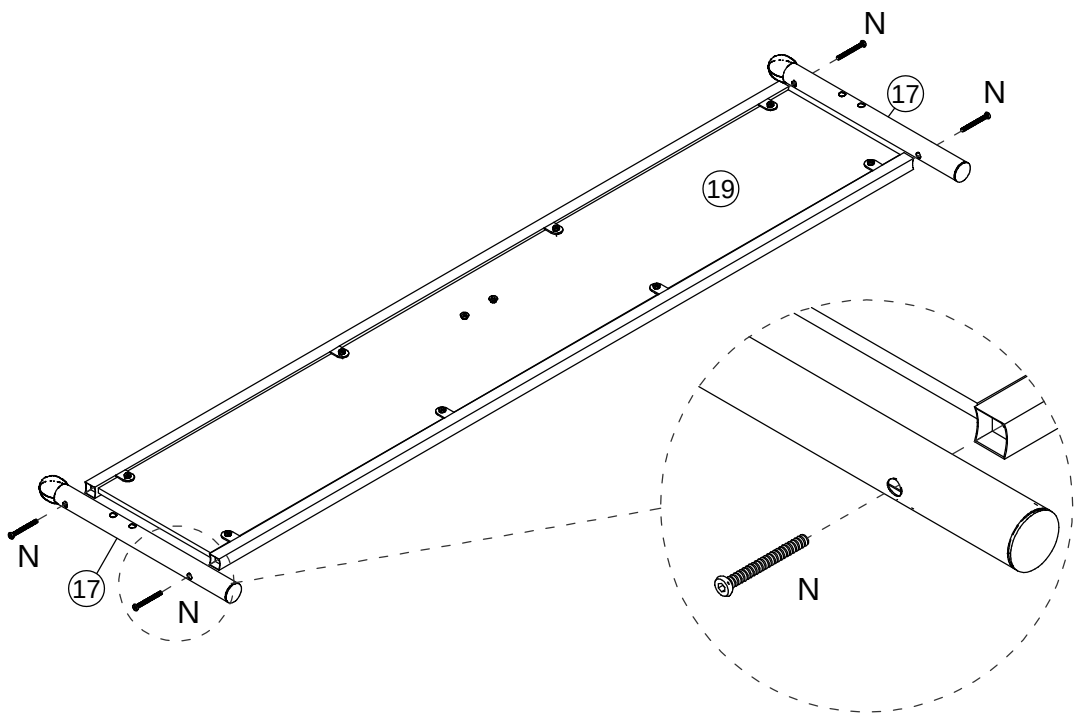M6x55mm
4PCS





Step 15

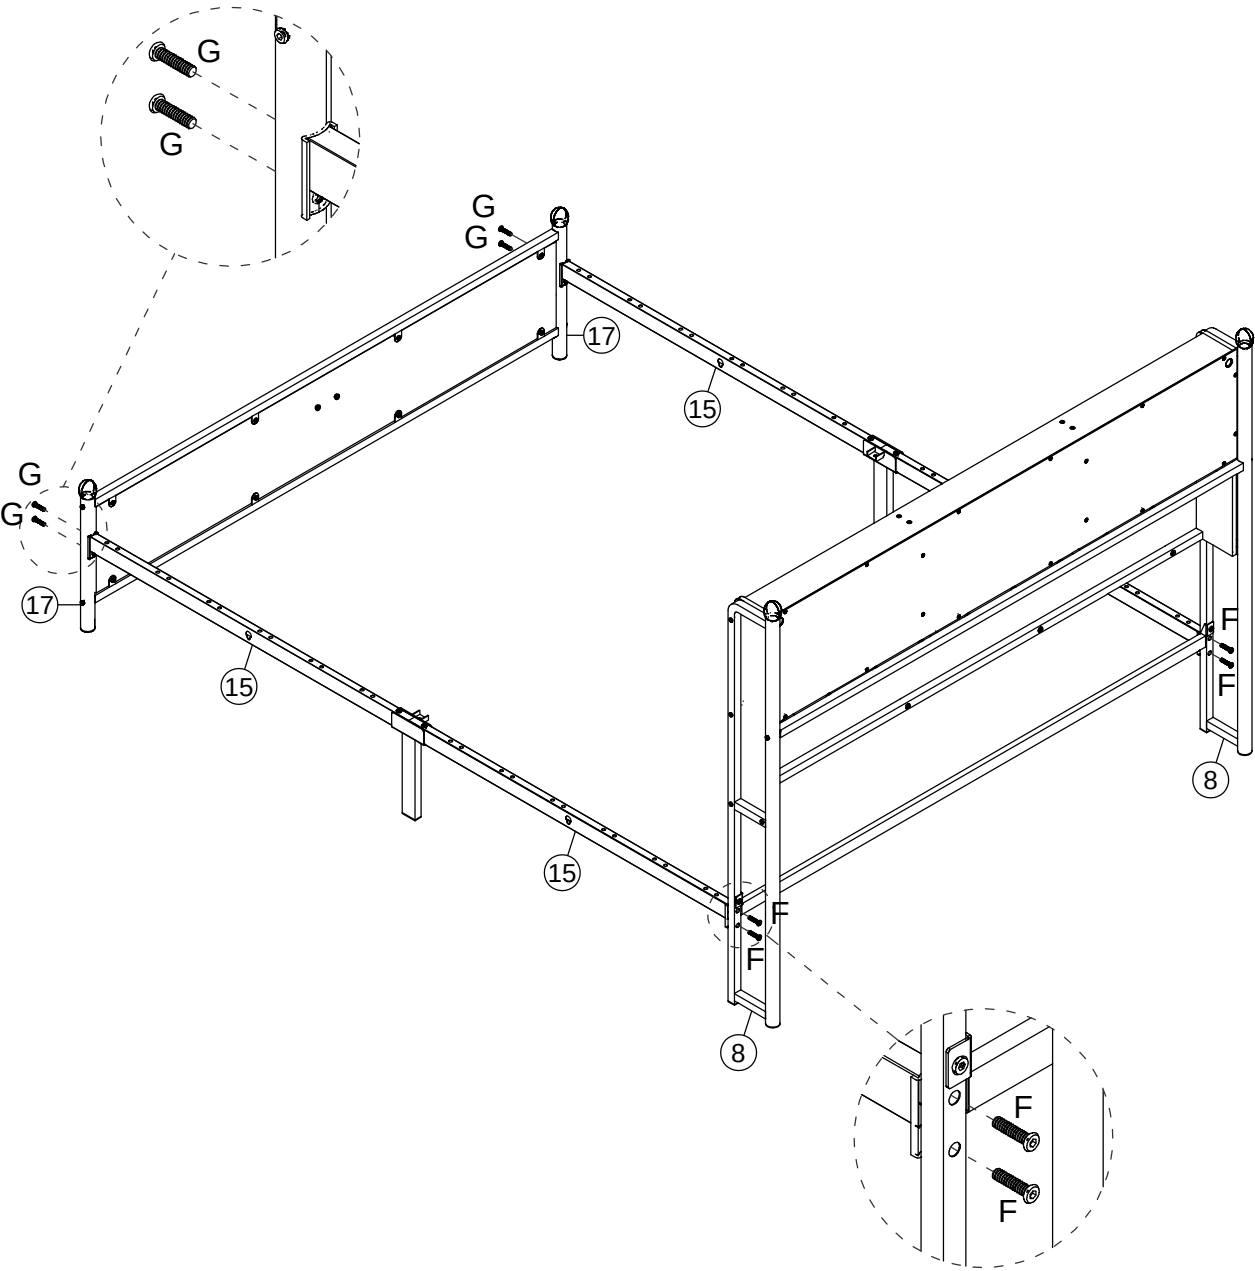F	G
	
M8x40mm	M8x50mm
4PCS	4PCS



Step 16

E	F
	
M8x25mm	M8x40mm
2PCS	1PC

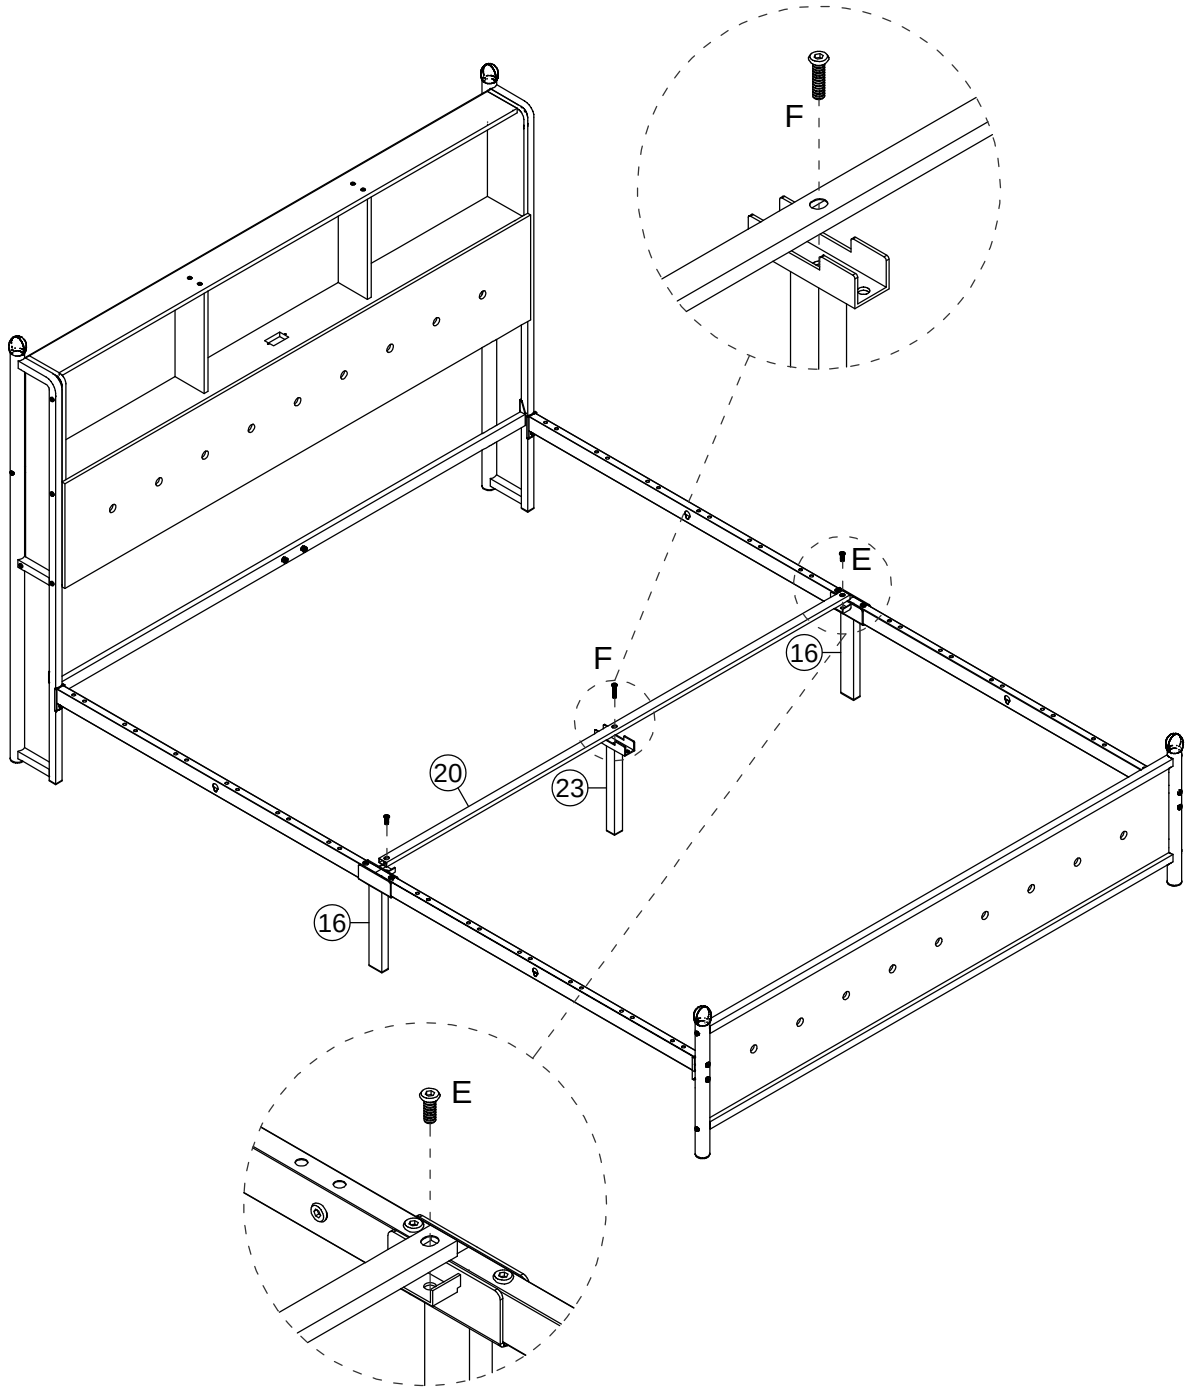


Step 17

F



M8x40mm

4PCS

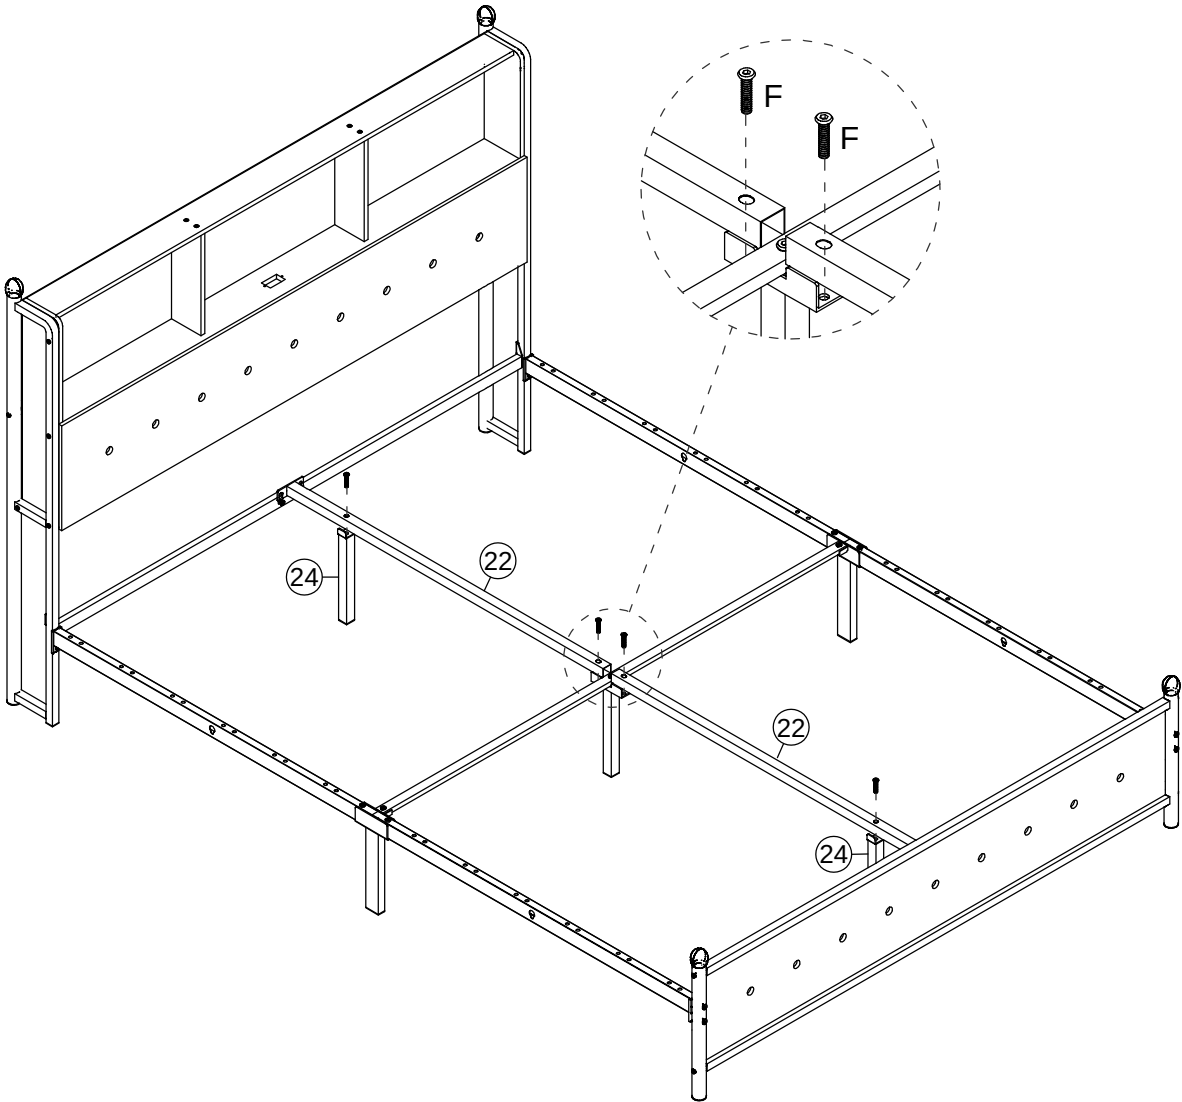


Step 18


S



24PCS

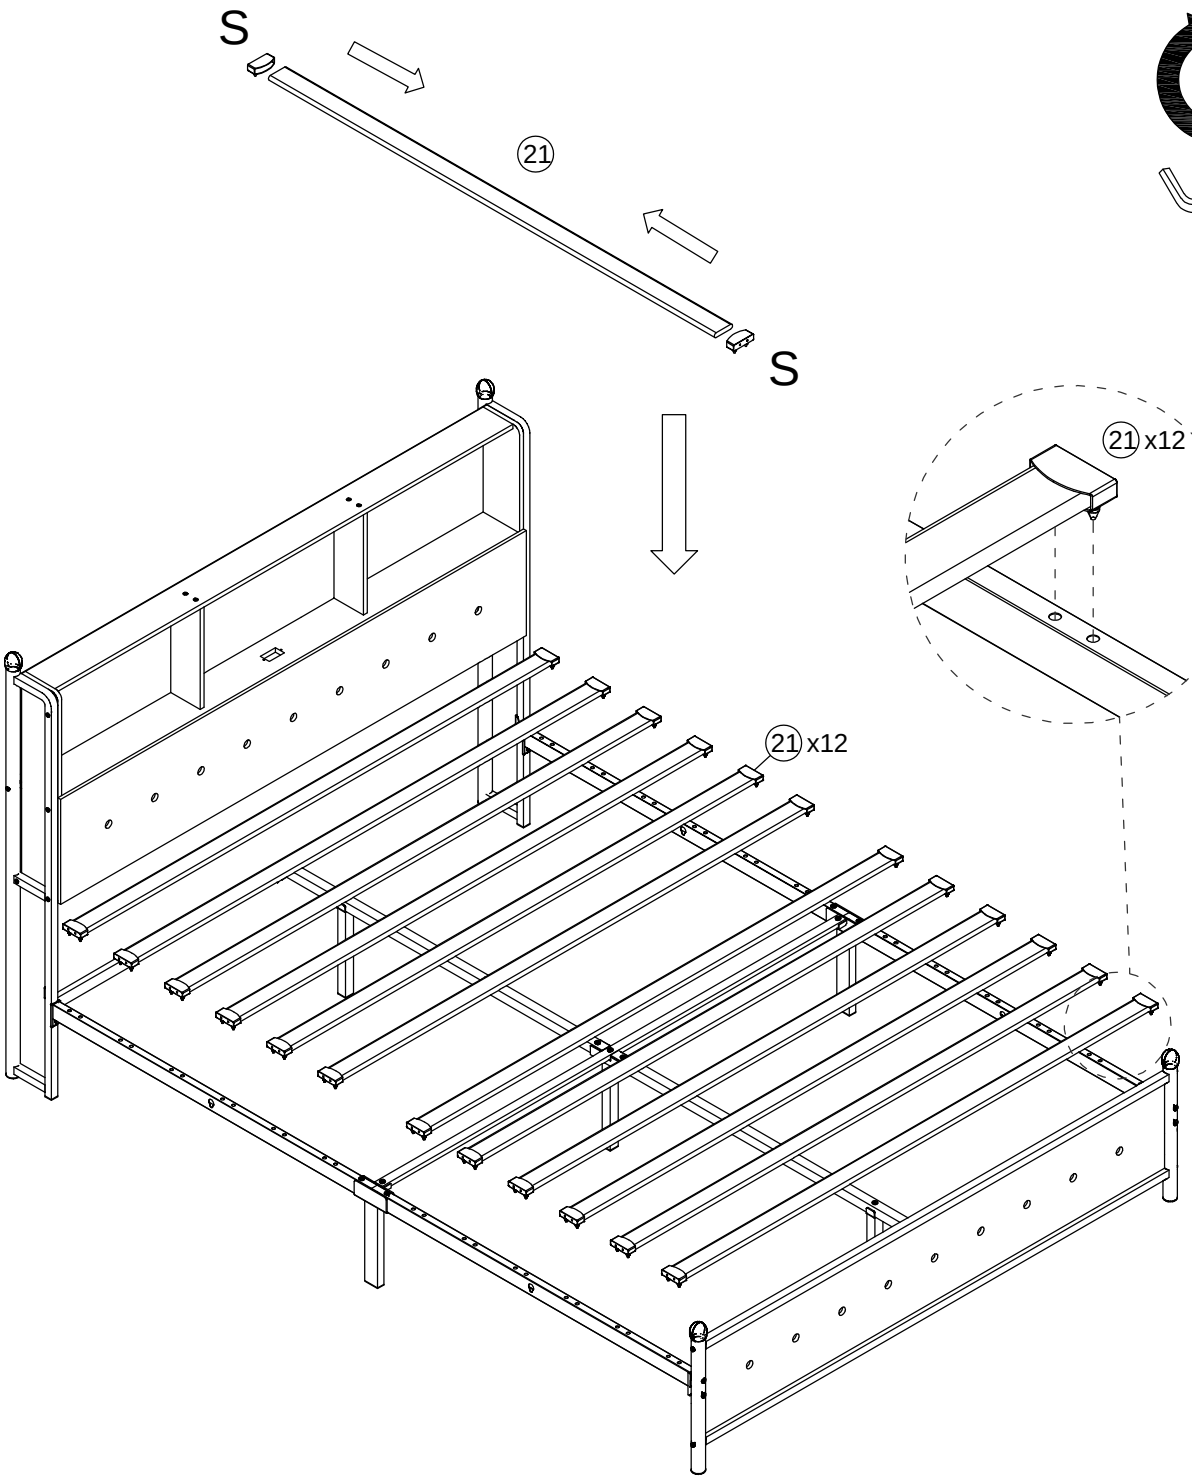


Step 19

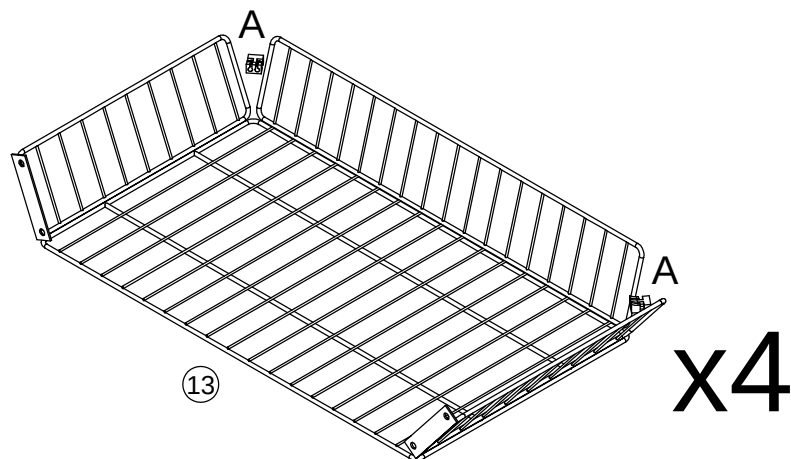


A




8PCS

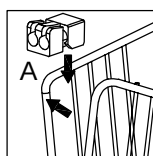

1、
Take the A number accessory and insert it in the middle of the left and right steel bars, ensuring a tight fit.

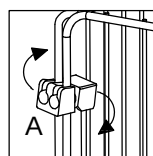


2、
Then, secure the steel bars in the inner and outer slots ensuring a tight fit.

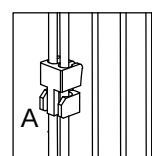

3、
Once all the steel bars are securely placed, the assembly is complete.





Step 20

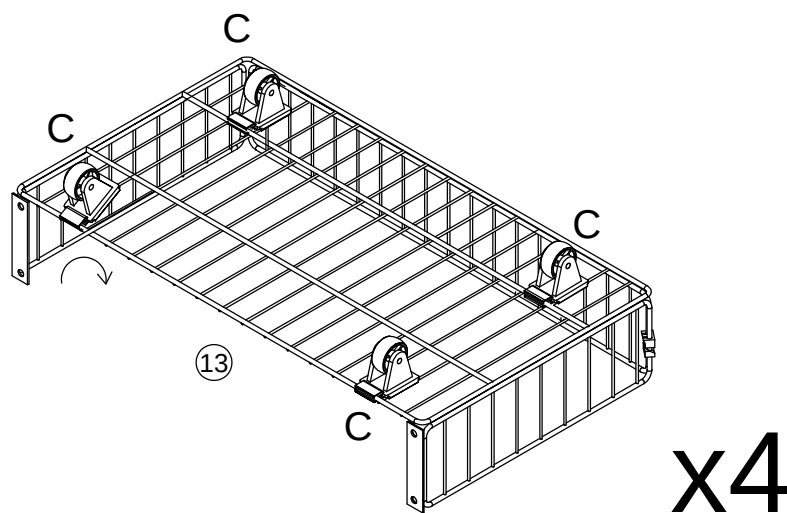

C




16PCS

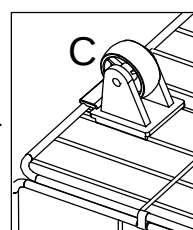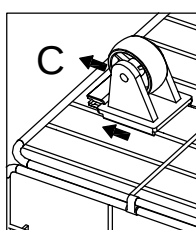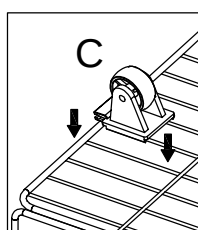


x16


Step 21

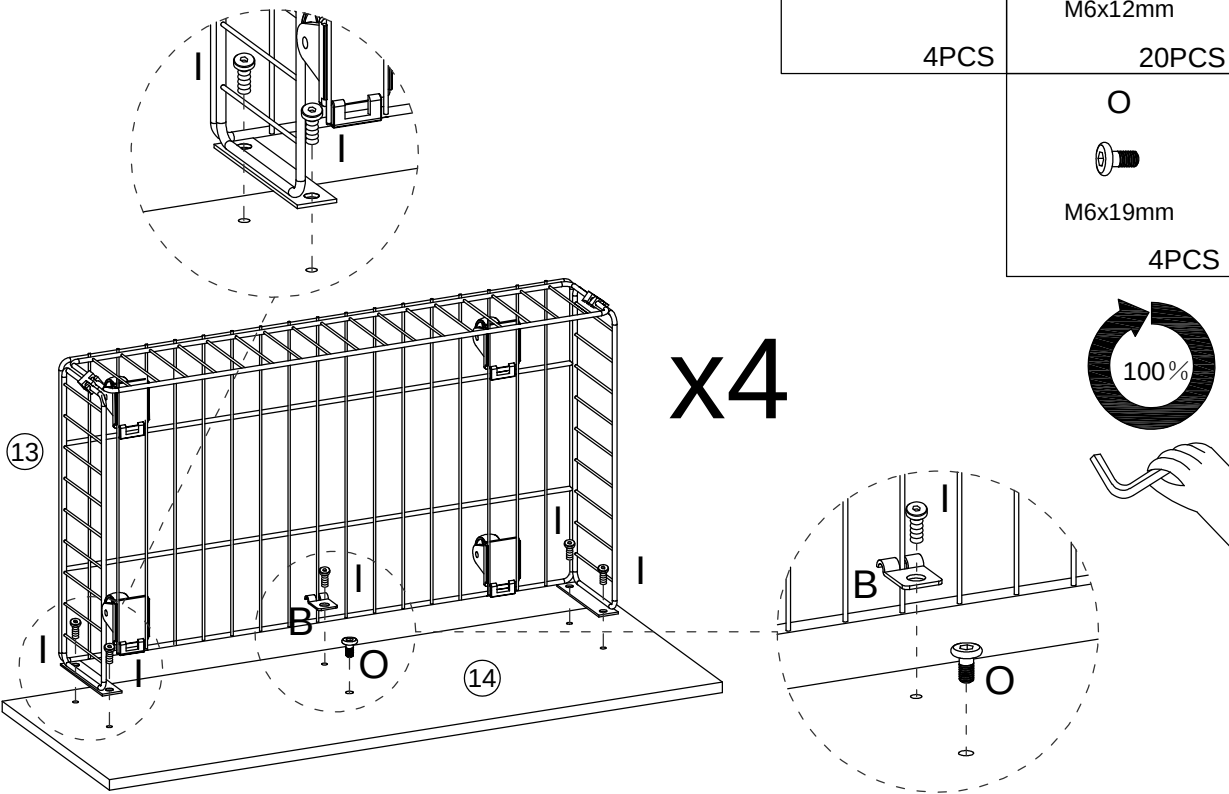


Step 22

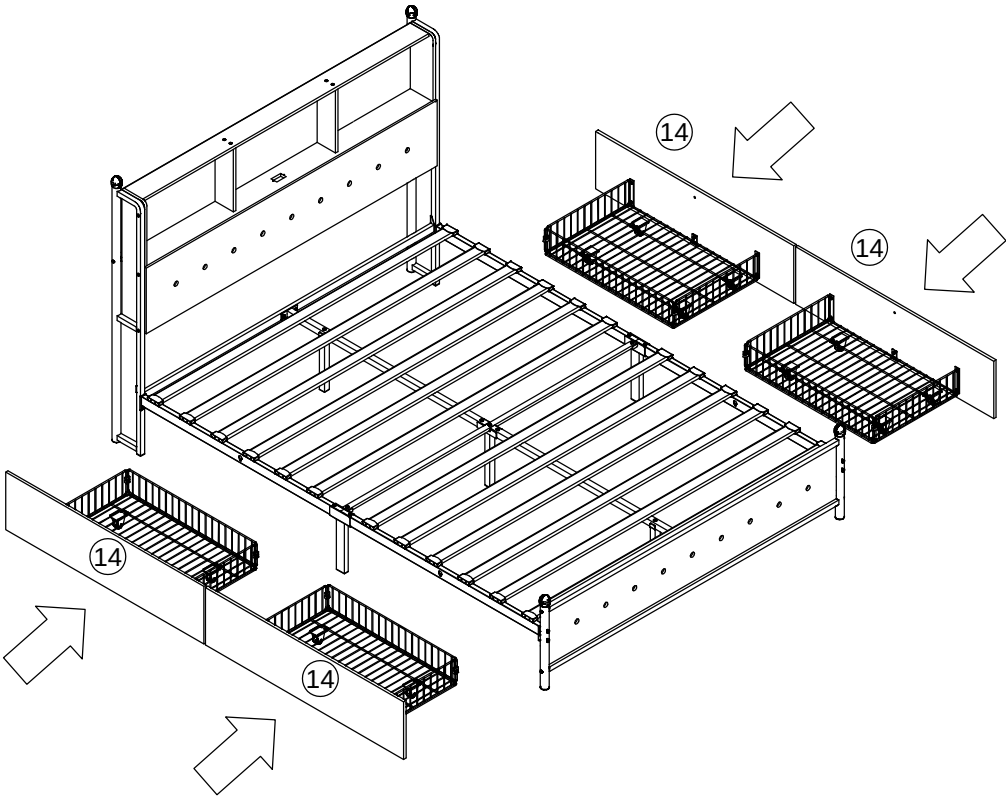

Step 23

J  1PC	Q  3.5x12mm 2PCS
---	--

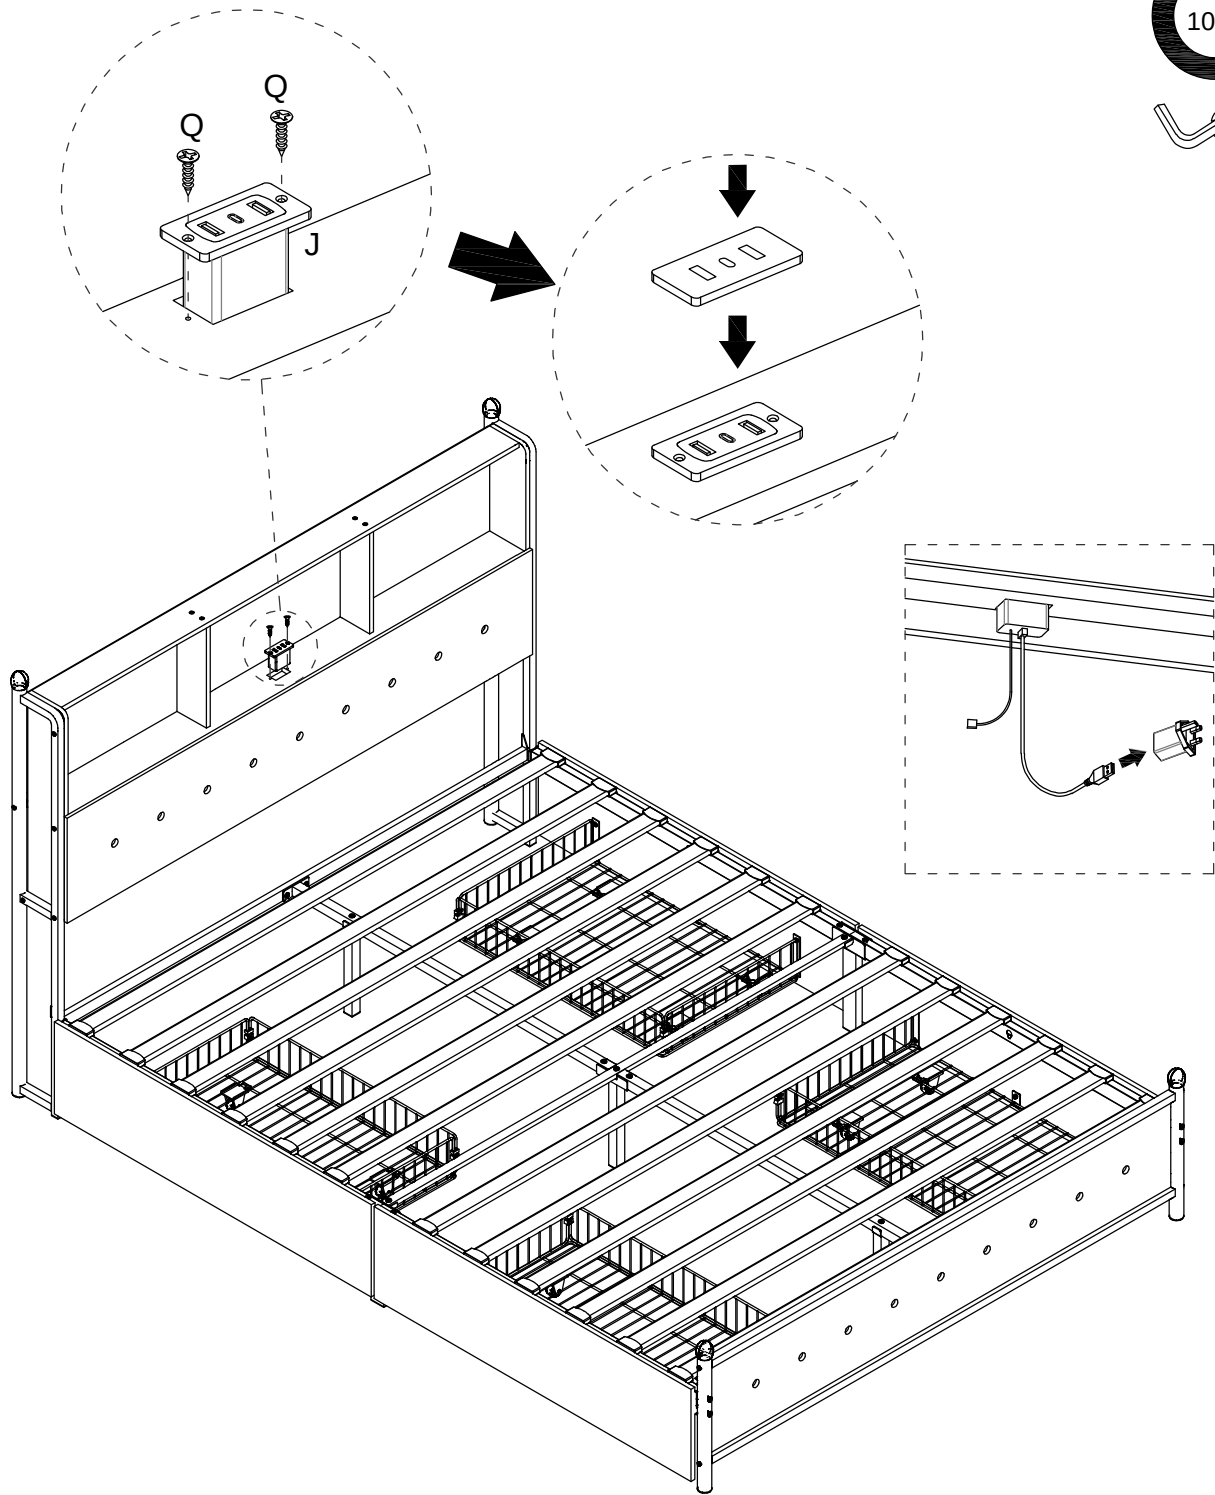

Step 24

