


Assembly Instructions

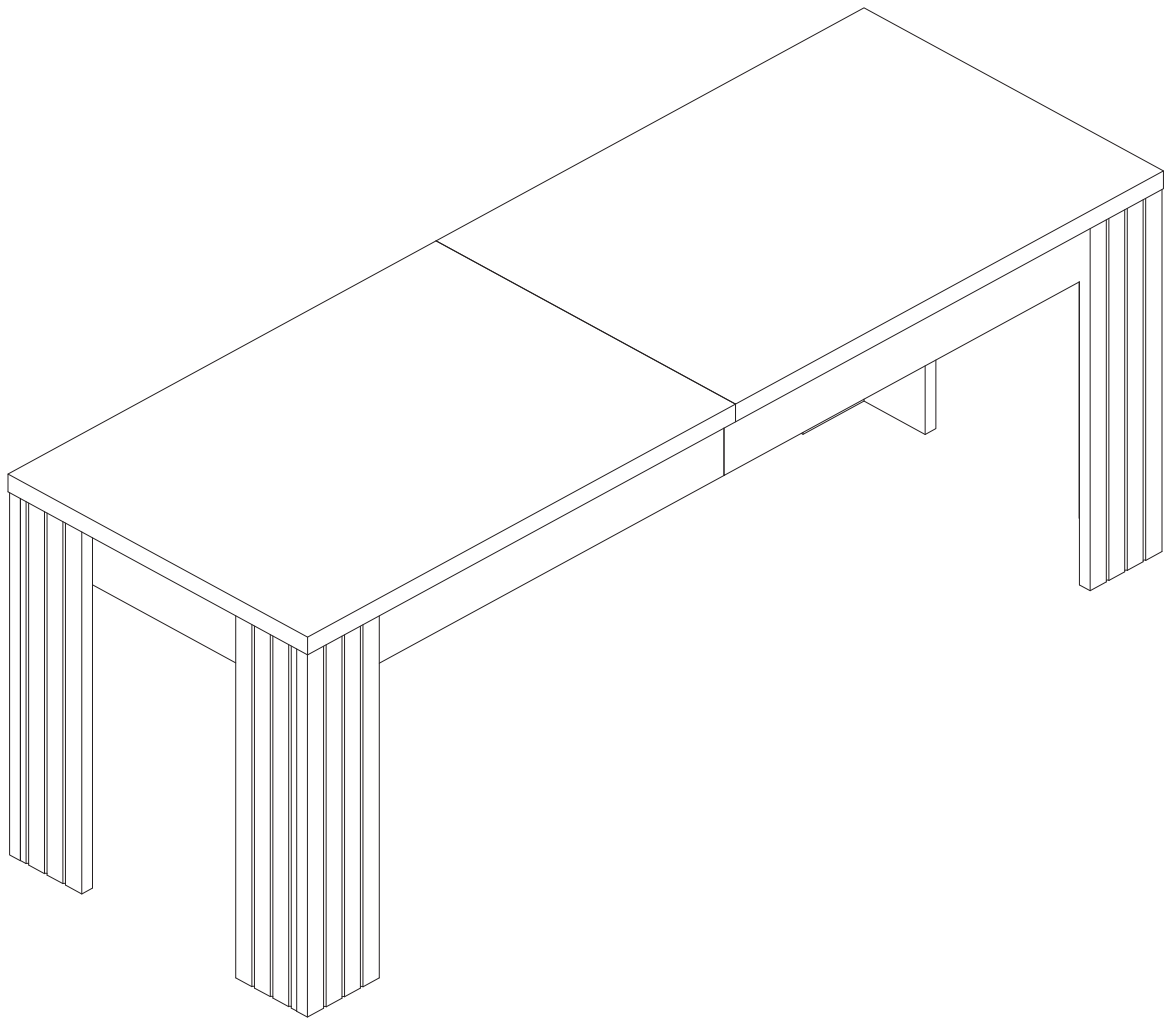

Long Table




Contact Us

We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

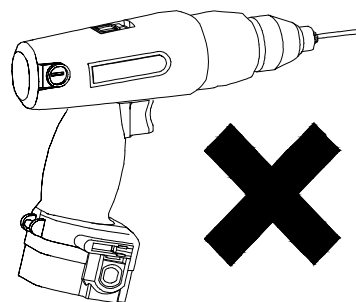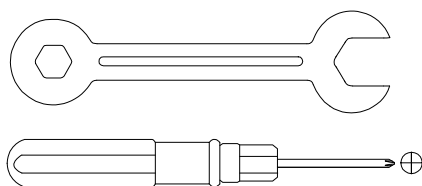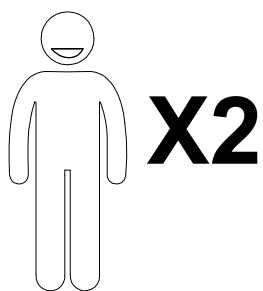



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

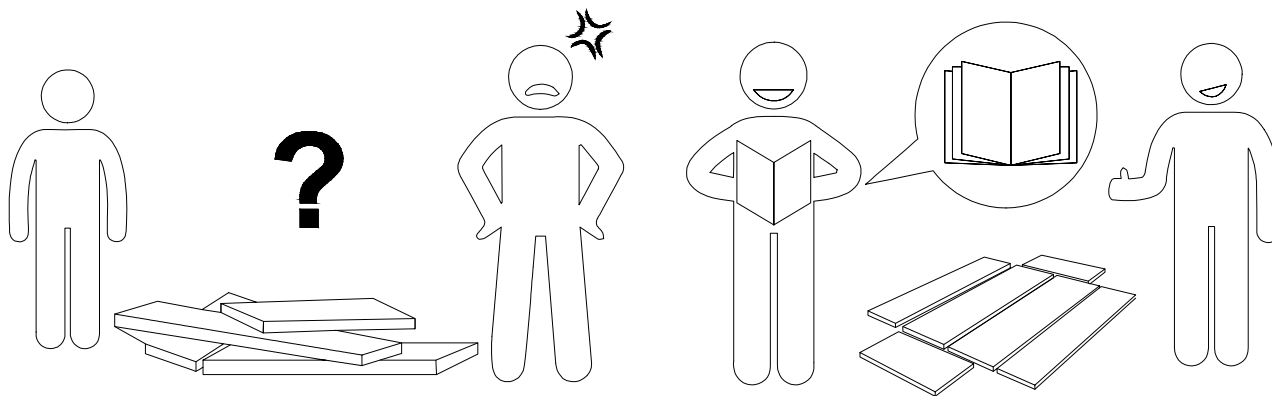

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.









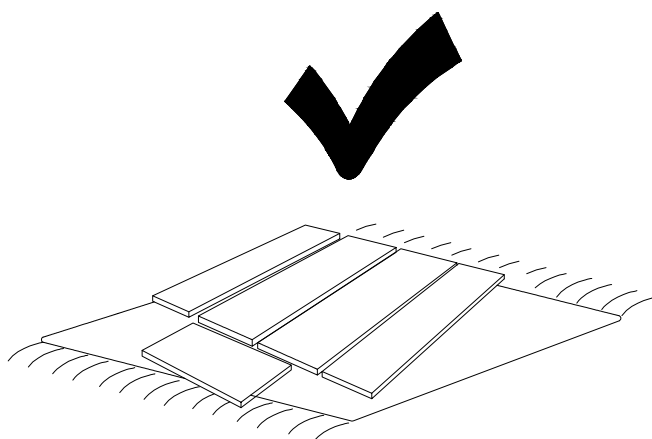
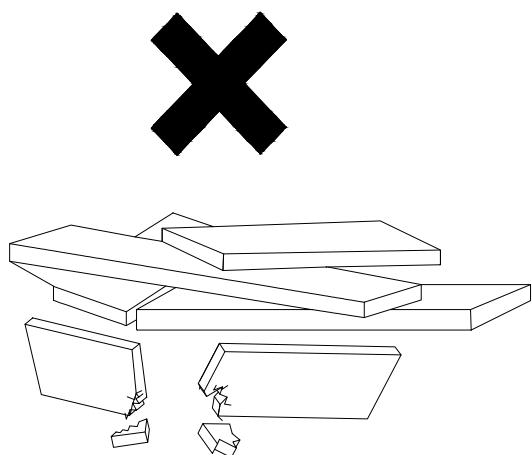


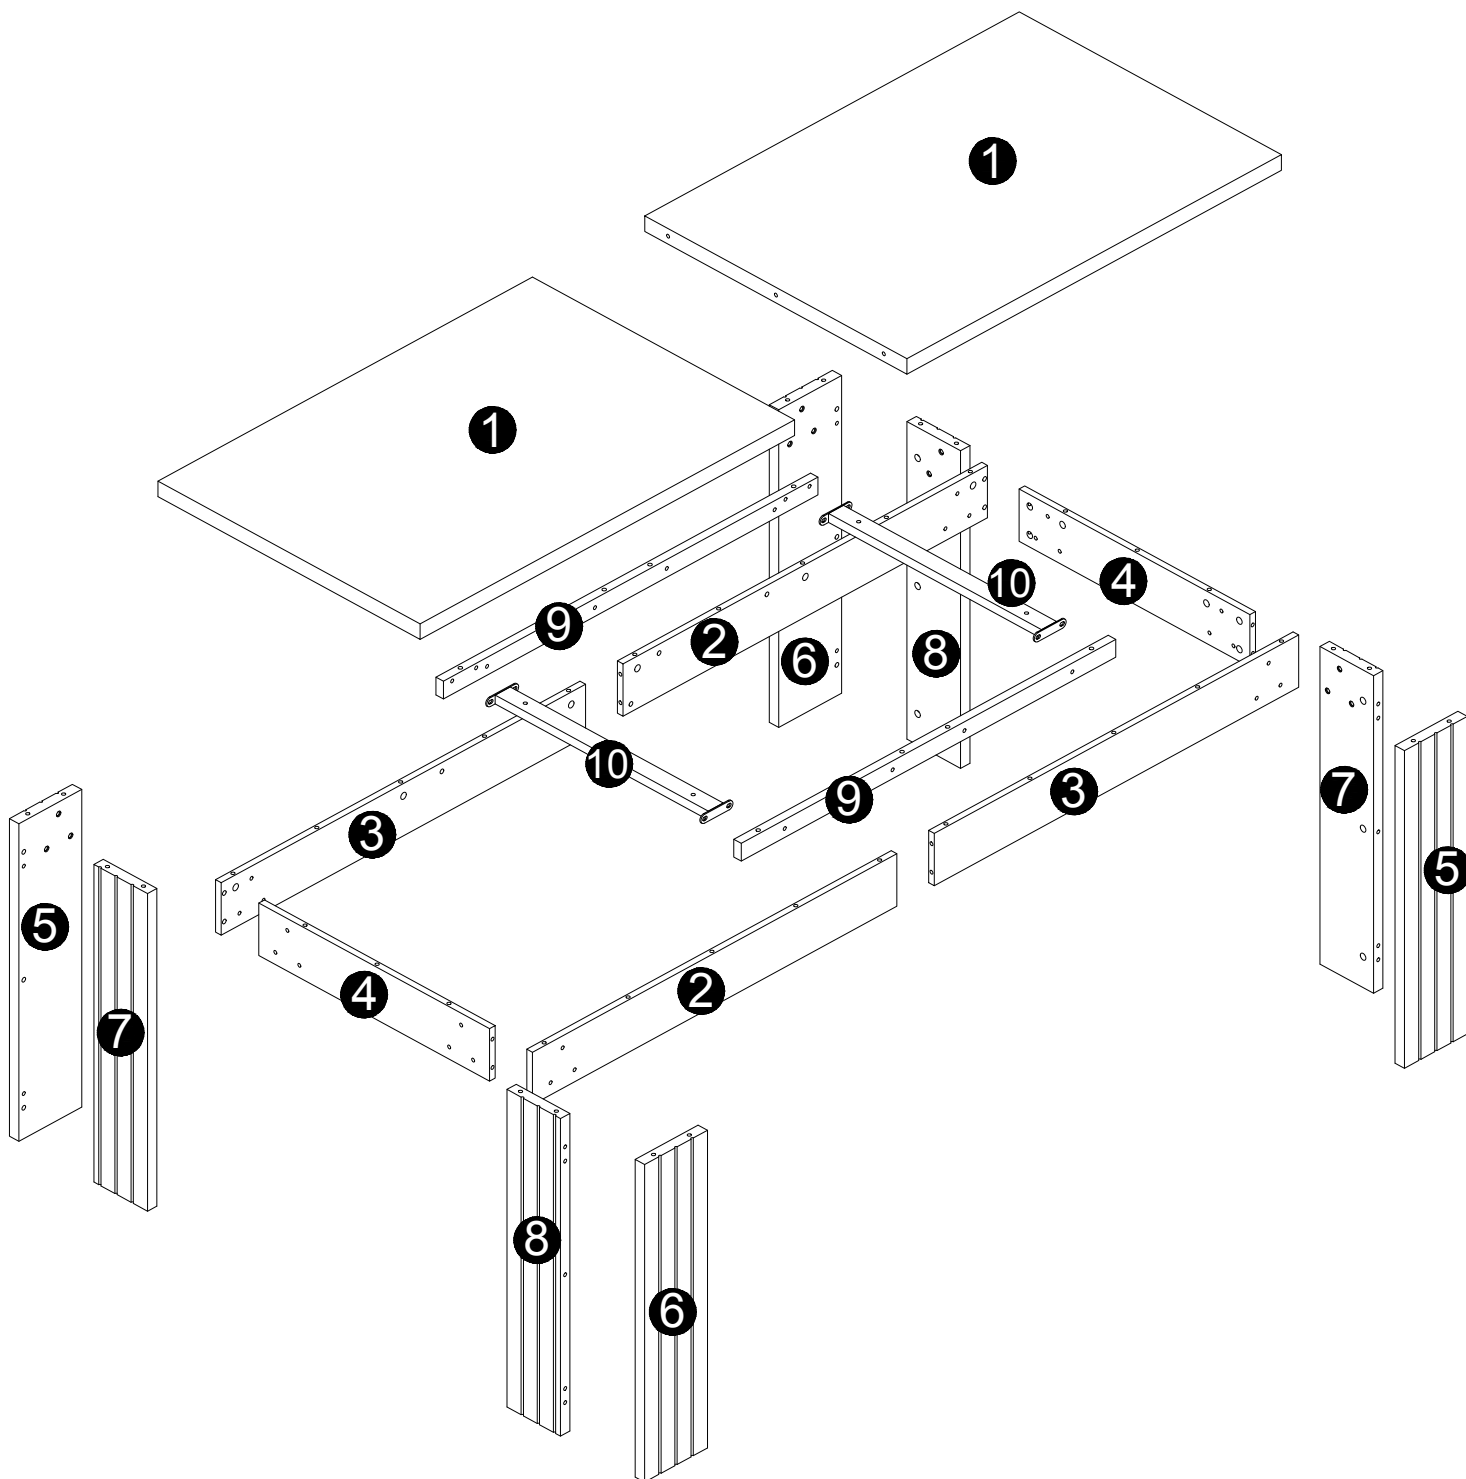







Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

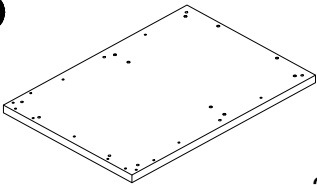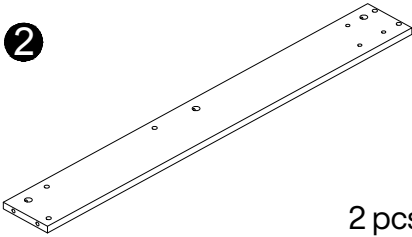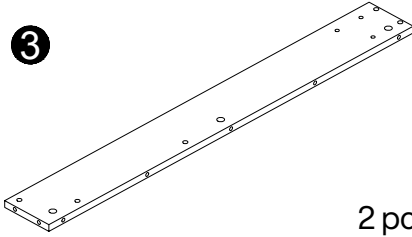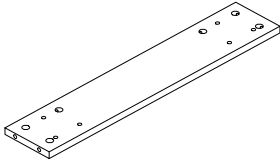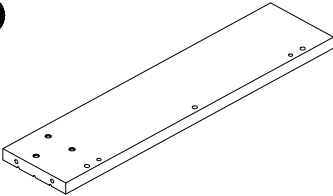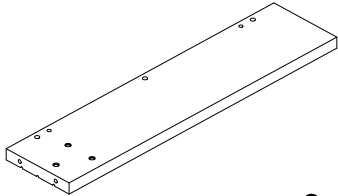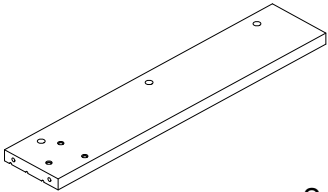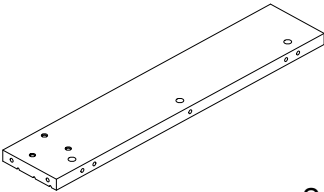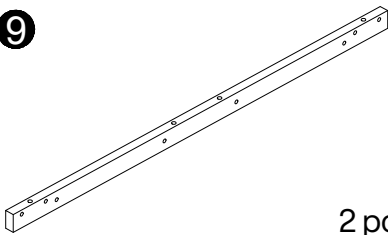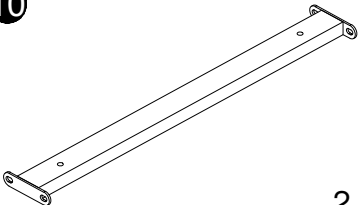
1  2 pcs	2  2 pcs	3  2 pcs
4  2 pcs	5  2 pcs	6  2 pcs
7  2 pcs	8  2 pcs	9  2 pcs
10  2 pcs		

Hardware List


A	B	C	D	E	F
 M6x40mm 36+1 pcs	 Ø15x12mm 36+1 pcs	 4 pcs	 Ø8x30mm 41 pcs	 Ø6x30mm 32 pcs	 Ø6x55mm 8 pcs
G	H	I	J	K	L
 Ø6x35mm 4 pcs	 Ø6x16mm 12 pcs	 Ø6x10mm 4 pcs	 Ø25x2mm 8 pcs	 36 pcs	  M 1 pc

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.


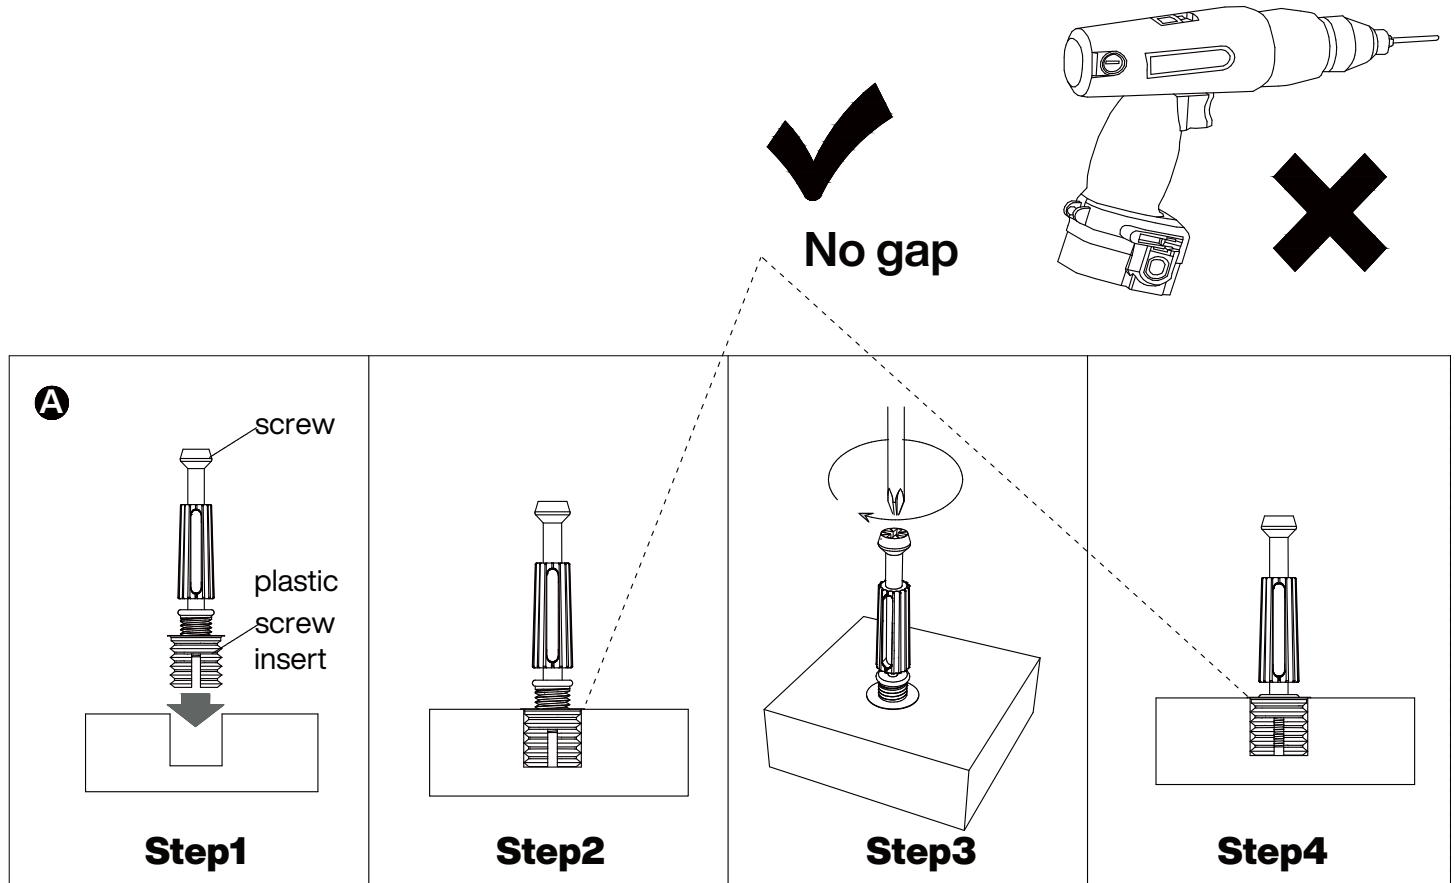


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

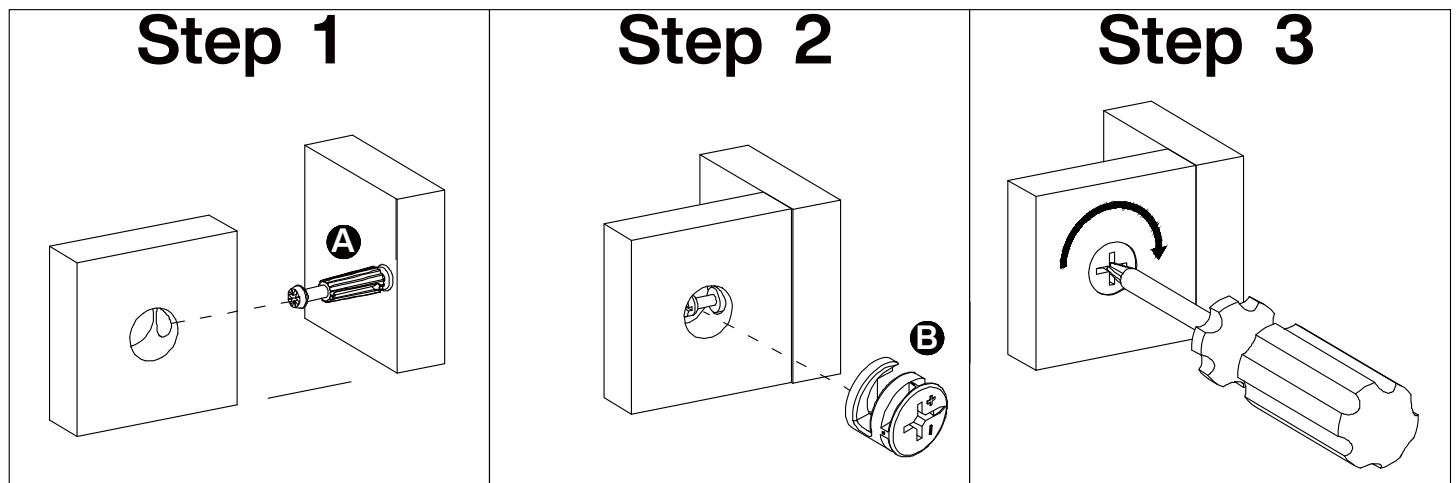




1

L	A
	
1pc	M6×40mm 8 pcs

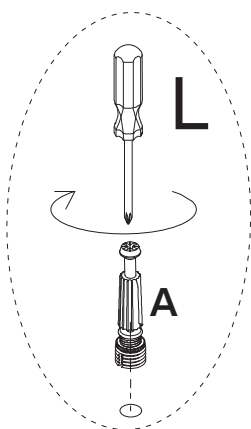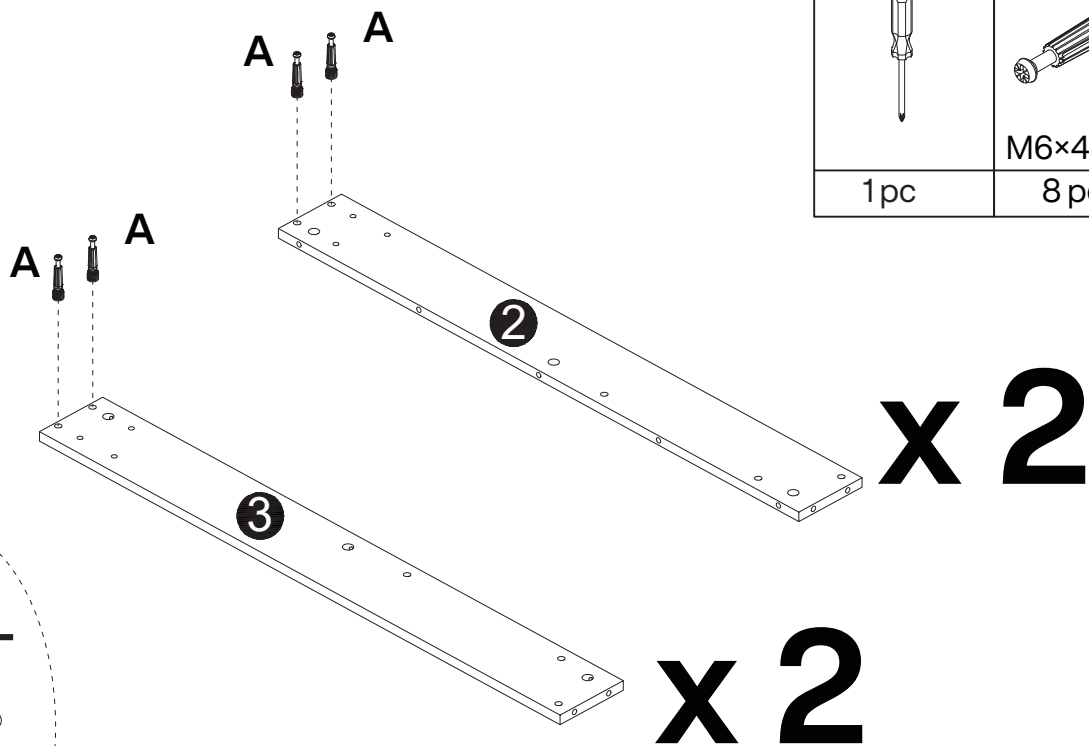


2

B

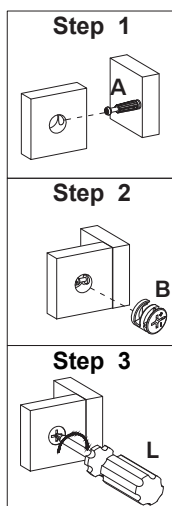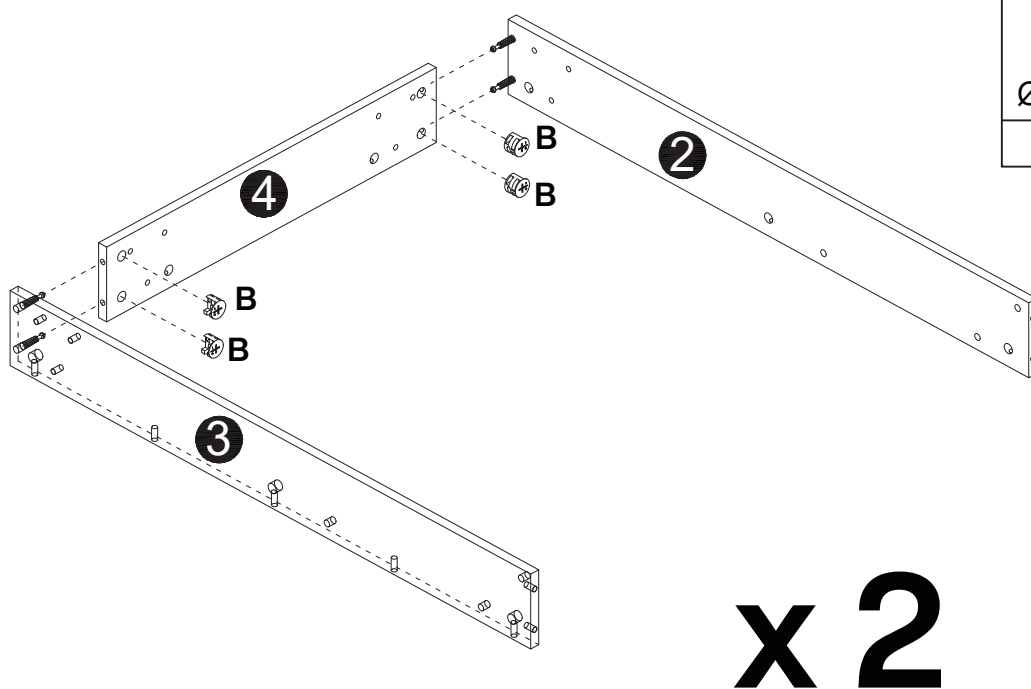Ø15×12mm 8 pcs

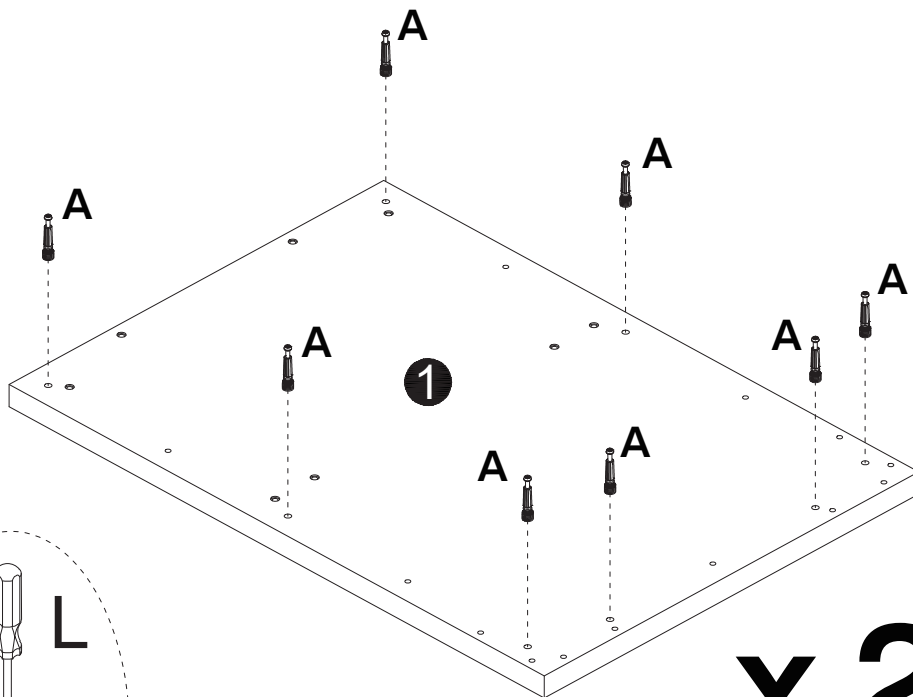


3



x 2


A



M6×40mm


16 pcs

4

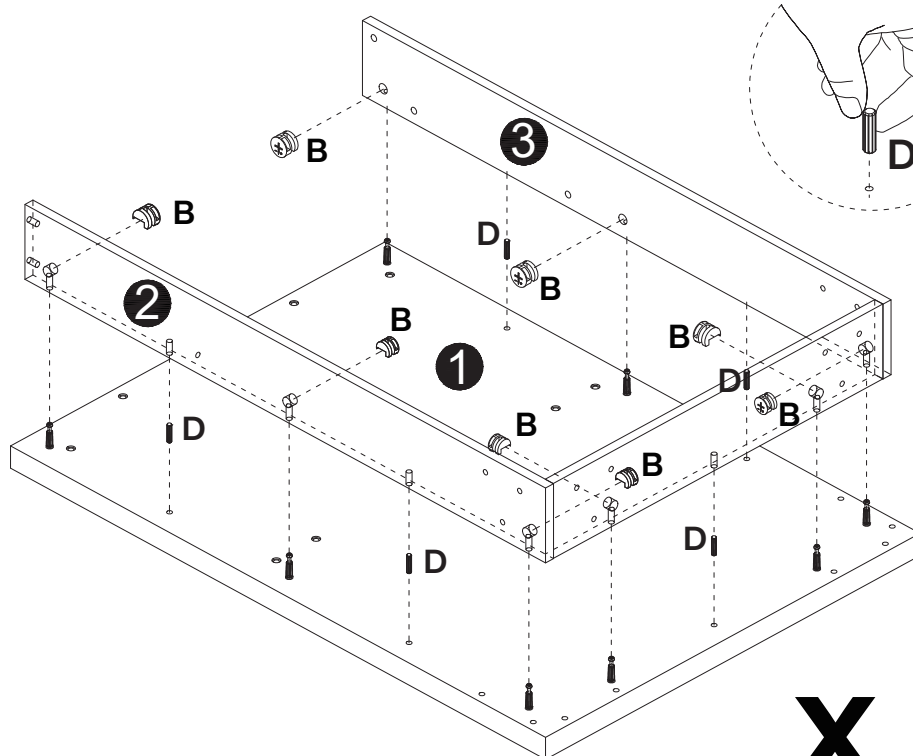

x 2


B



Ø15×12mm

16 pcs


D




Ø8×30mm

10 pcs


Step 1




Step 2

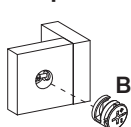


Step 3

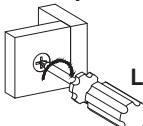


5

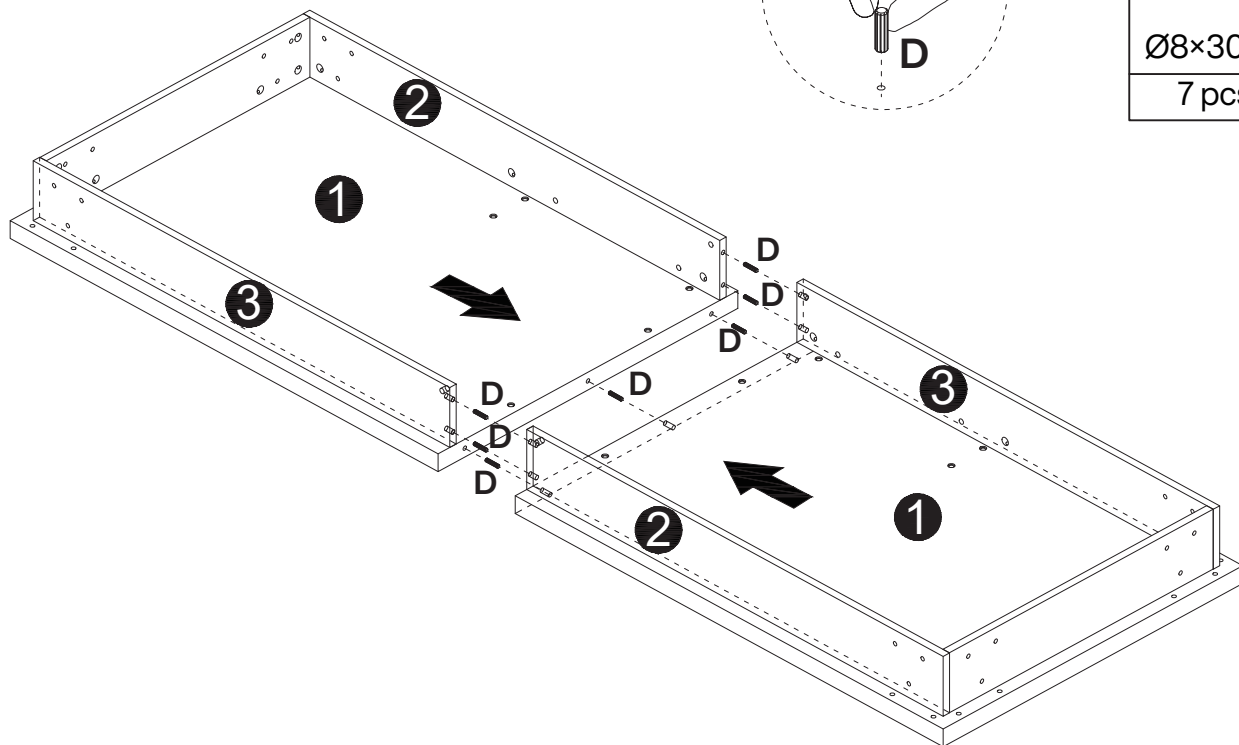


D

Ø8x30mm
7 pcs

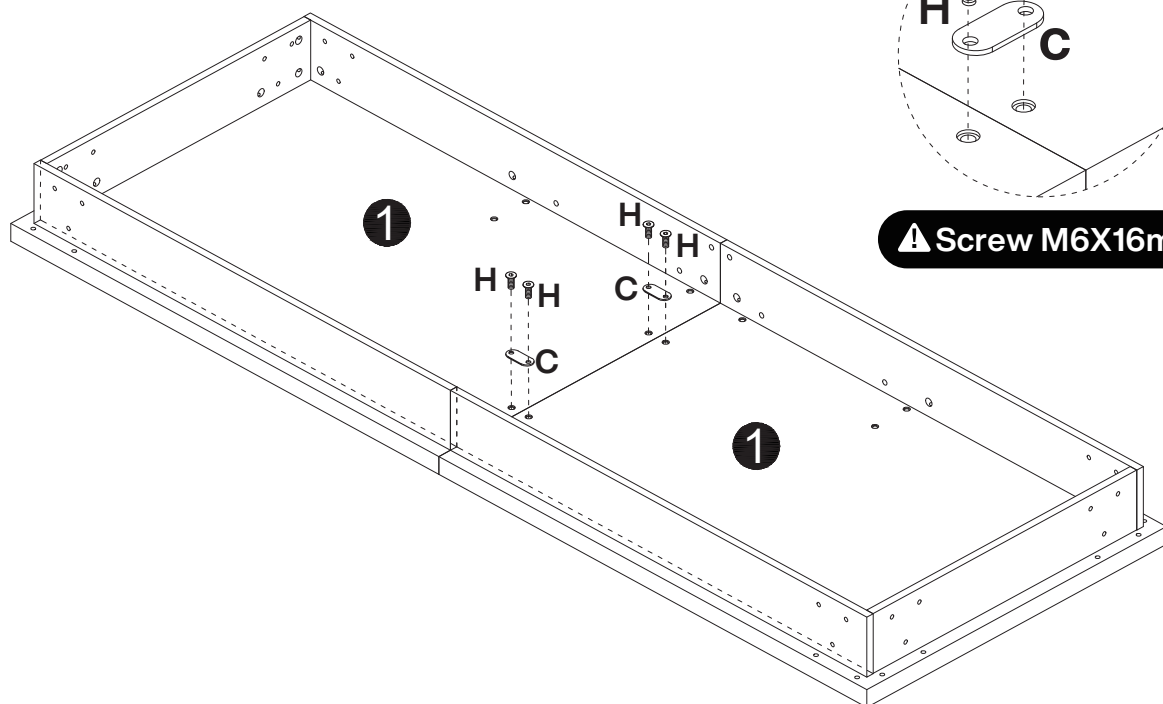6




H


Ø6x16mm
4 pcs
C

2 pcs

⚠ Screw M6X16mm

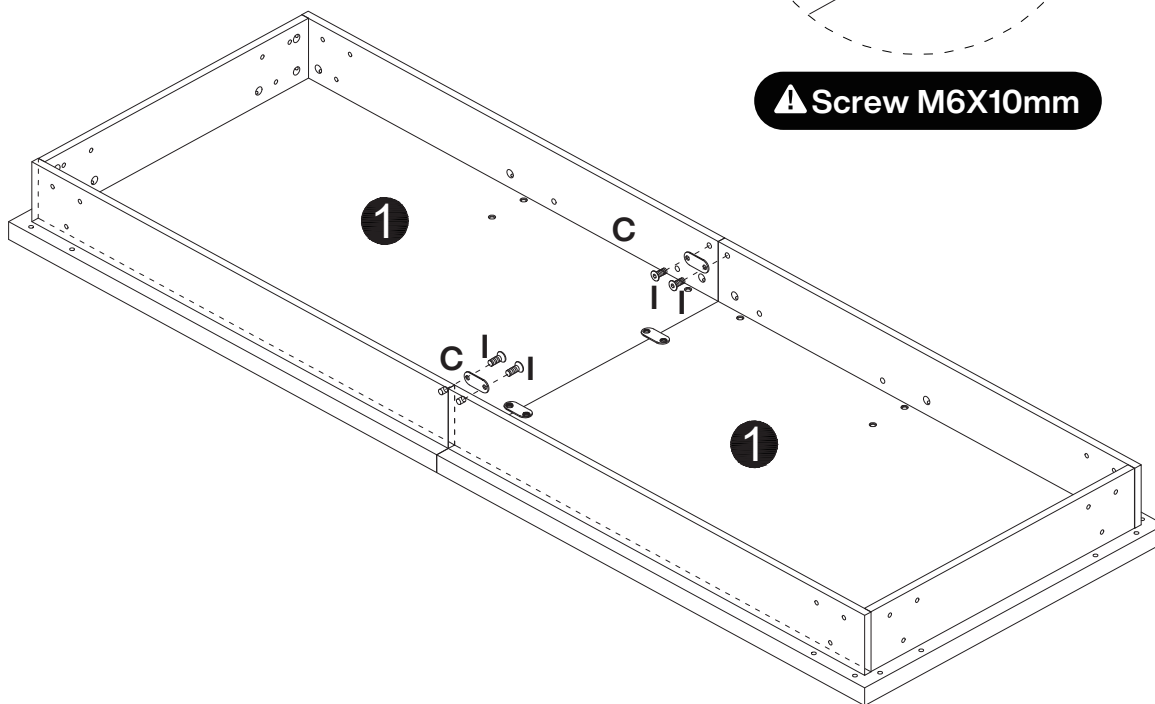
7




I

Ø6×10mm
4 pcs
C

2 pcs

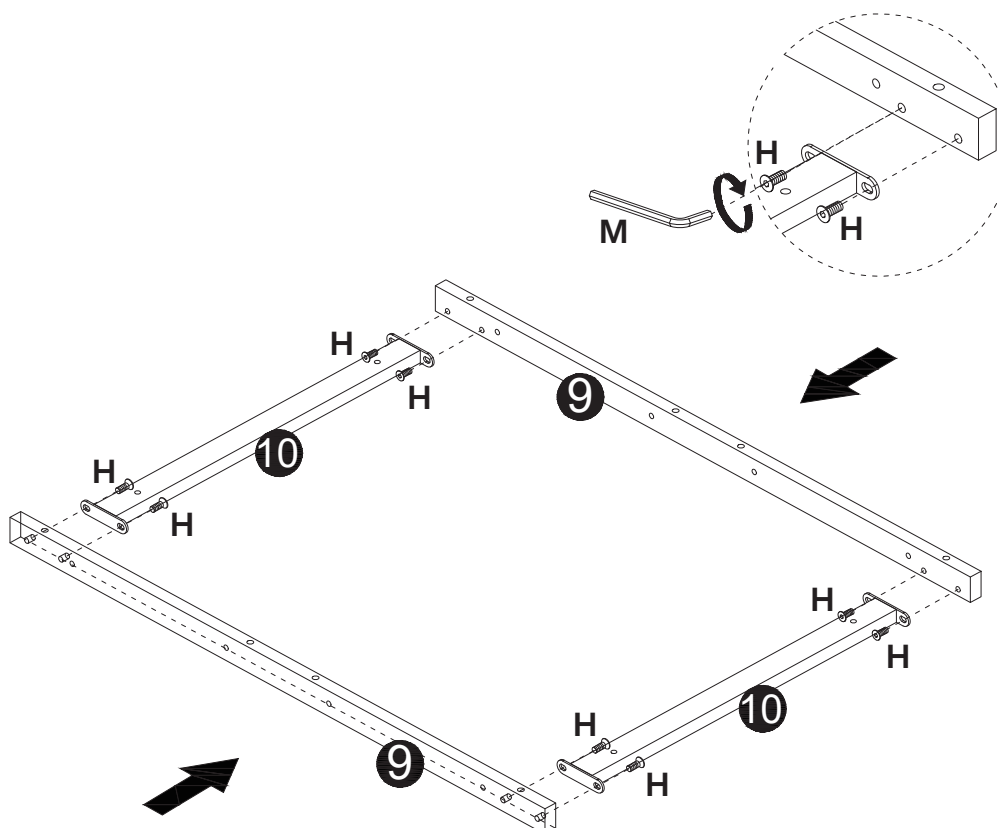
8




H

Ø6×16mm
8 pcs
M

M3
1pc

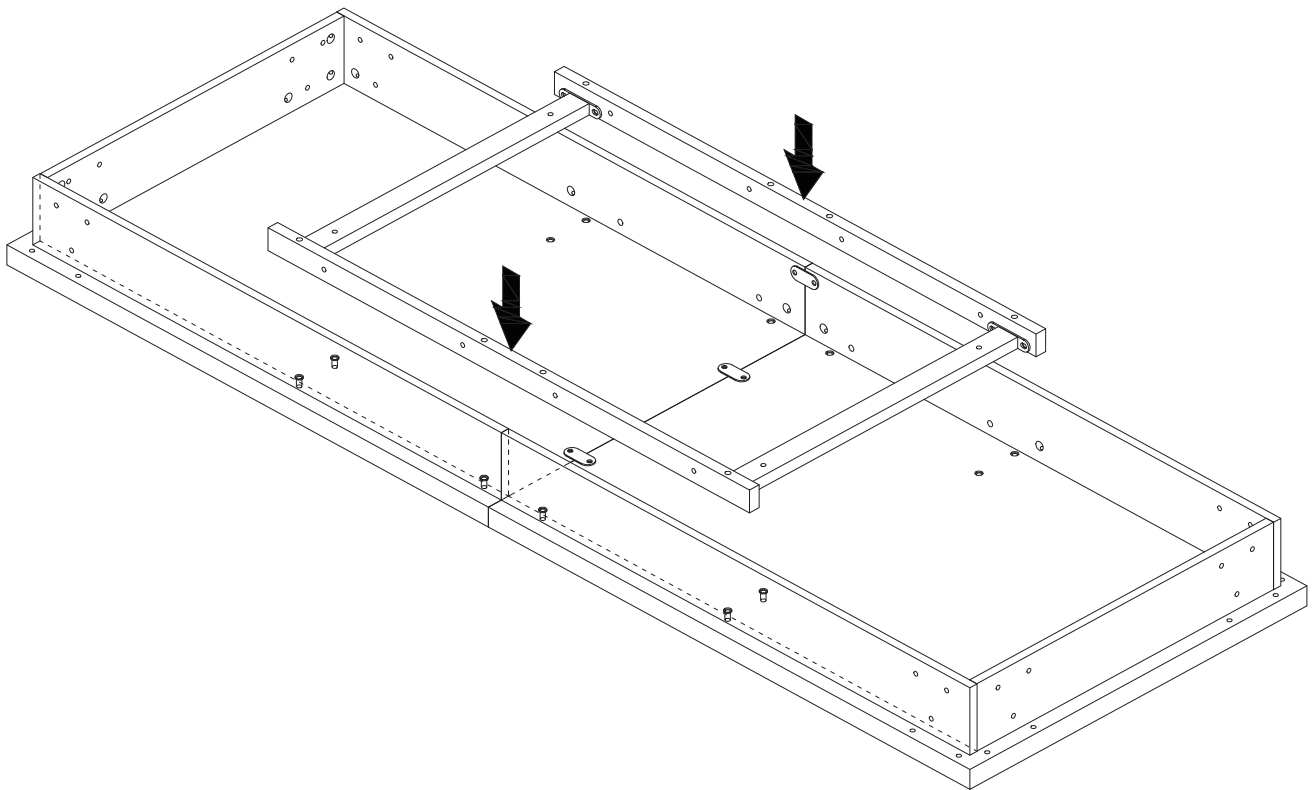9

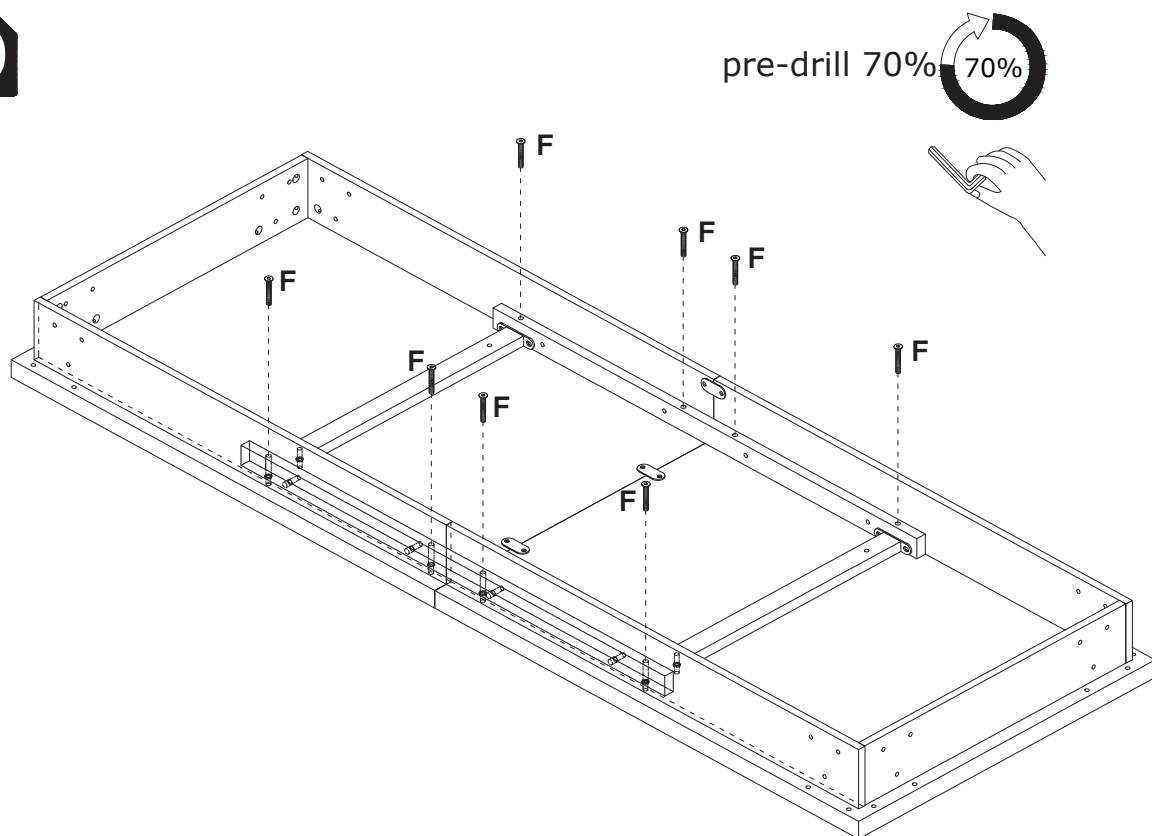


10



pre-drill 70% 70%

F




Ø6×55mm

8 pcs

11

pre-drill 70% 




G




Ø6×35mm

4 pcs

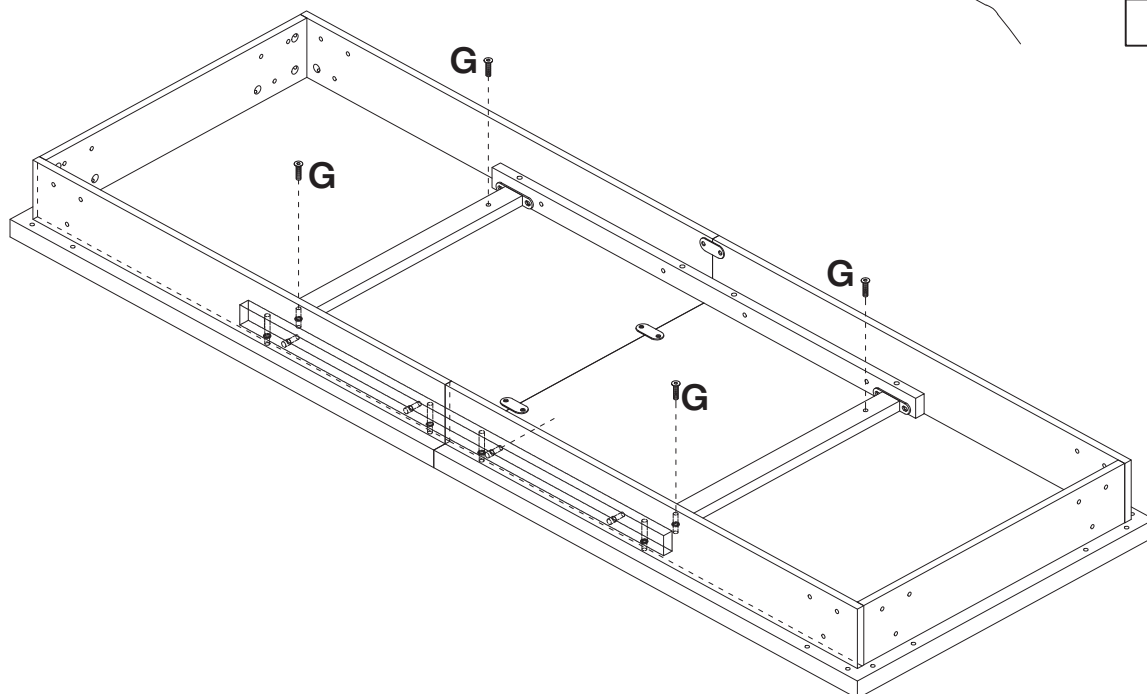

12

pre-drill 70% 




E




Ø6×30mm


8 pcs

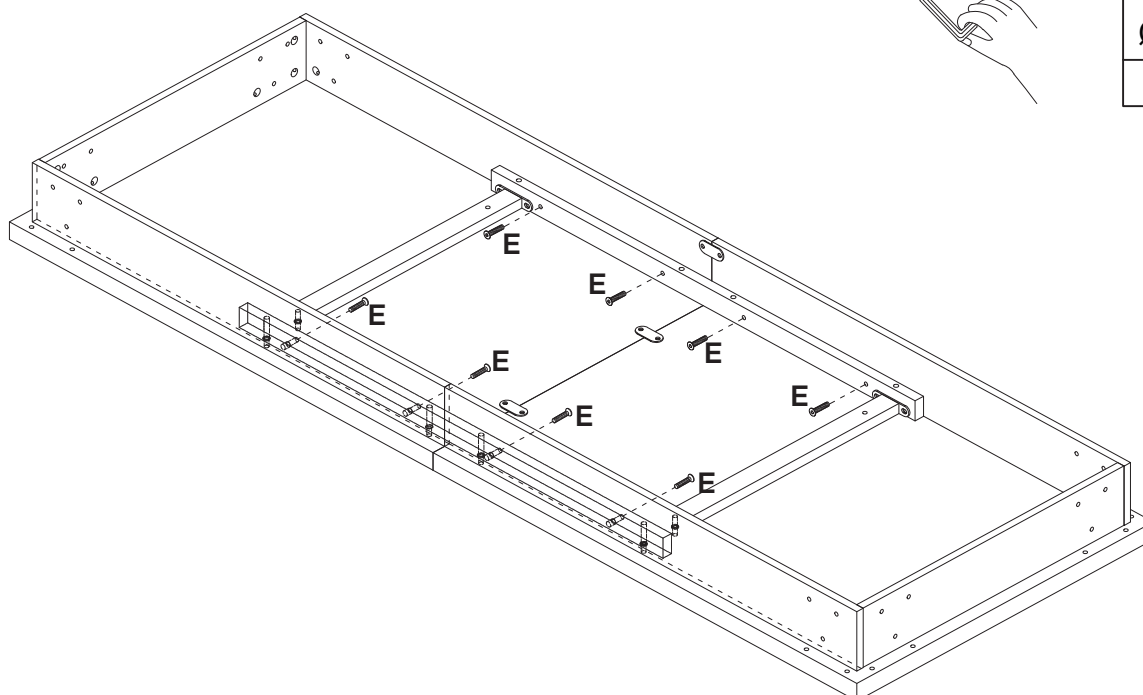



13


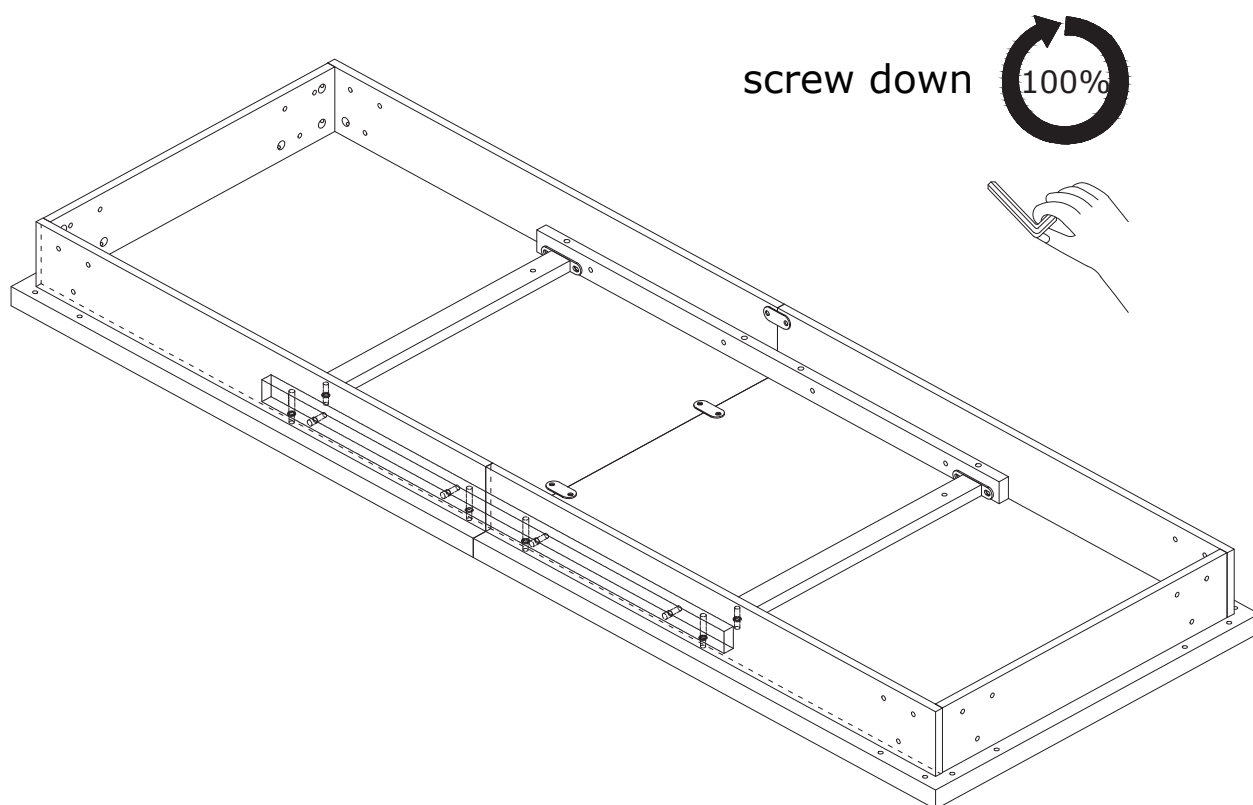


14

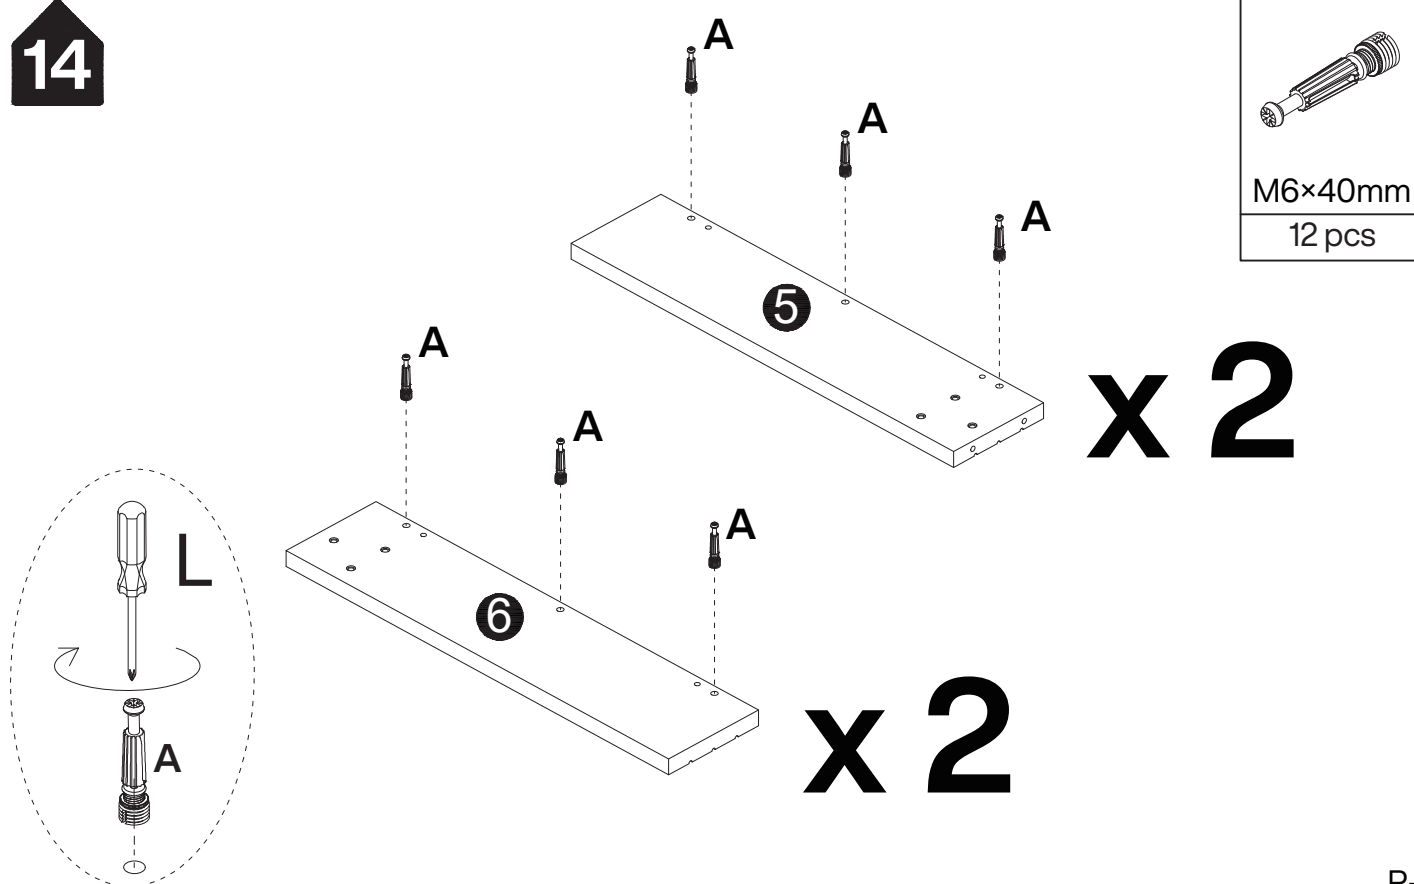


15

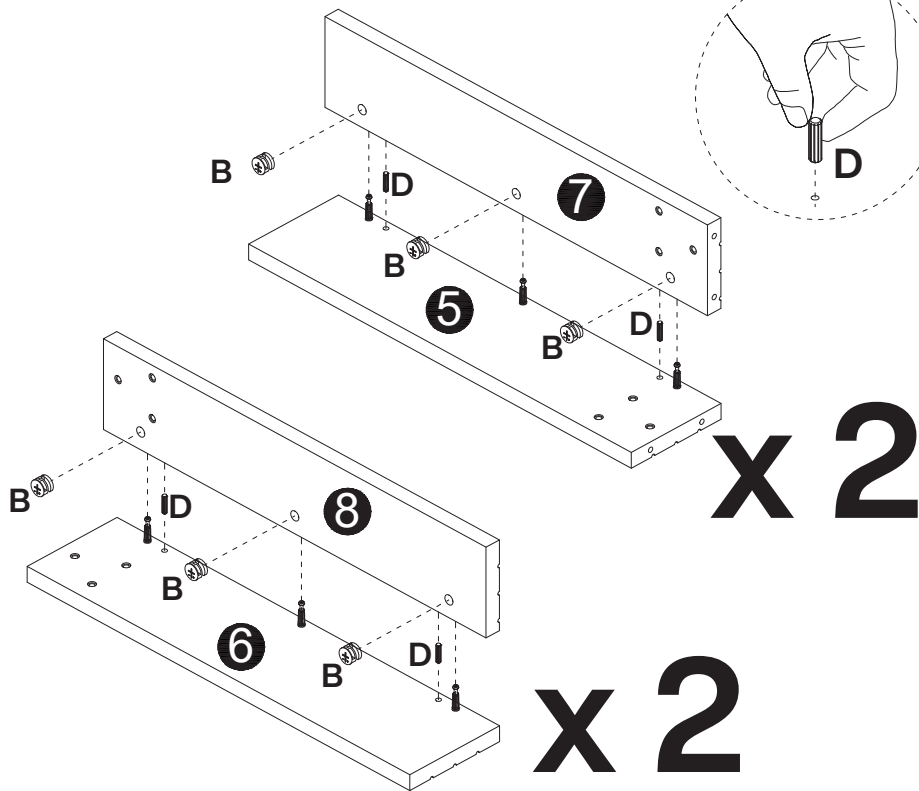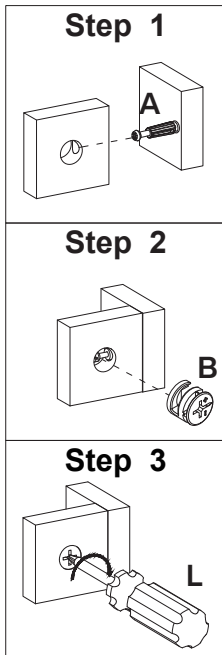


B

Ø15×12mm
12 pcs
D

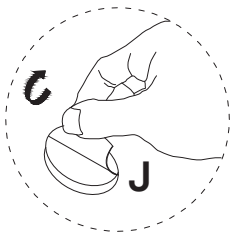Ø8×30mm
8 pcs

16

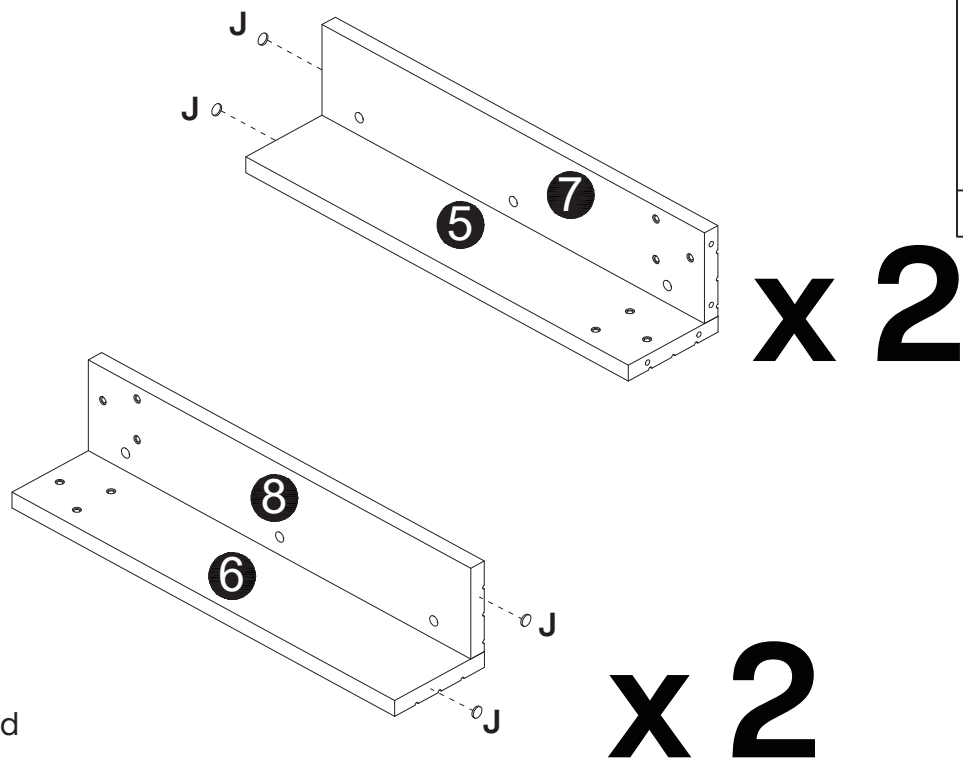


To prevent the table from scratching the floor, please peel off the tape on the #J and tape them to the corners of the table before use.




J

Ø25×2mm
8 pcs

17

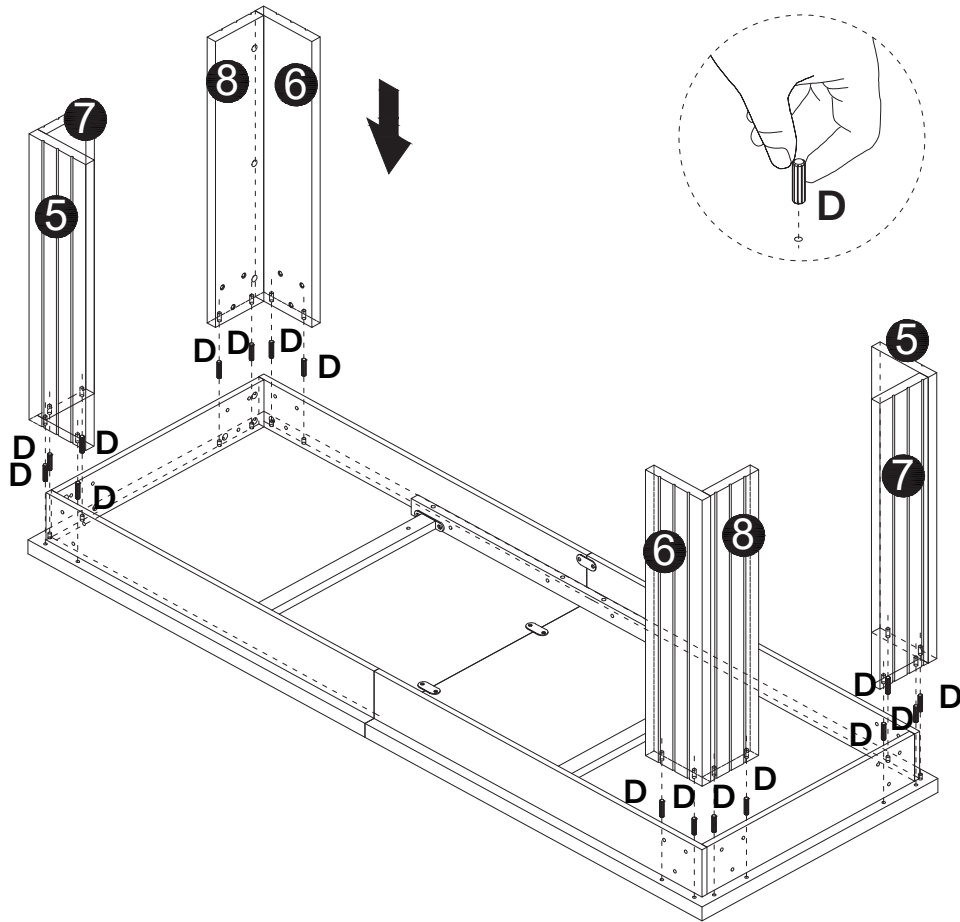


D



Ø8×30mm

16 pcs

18

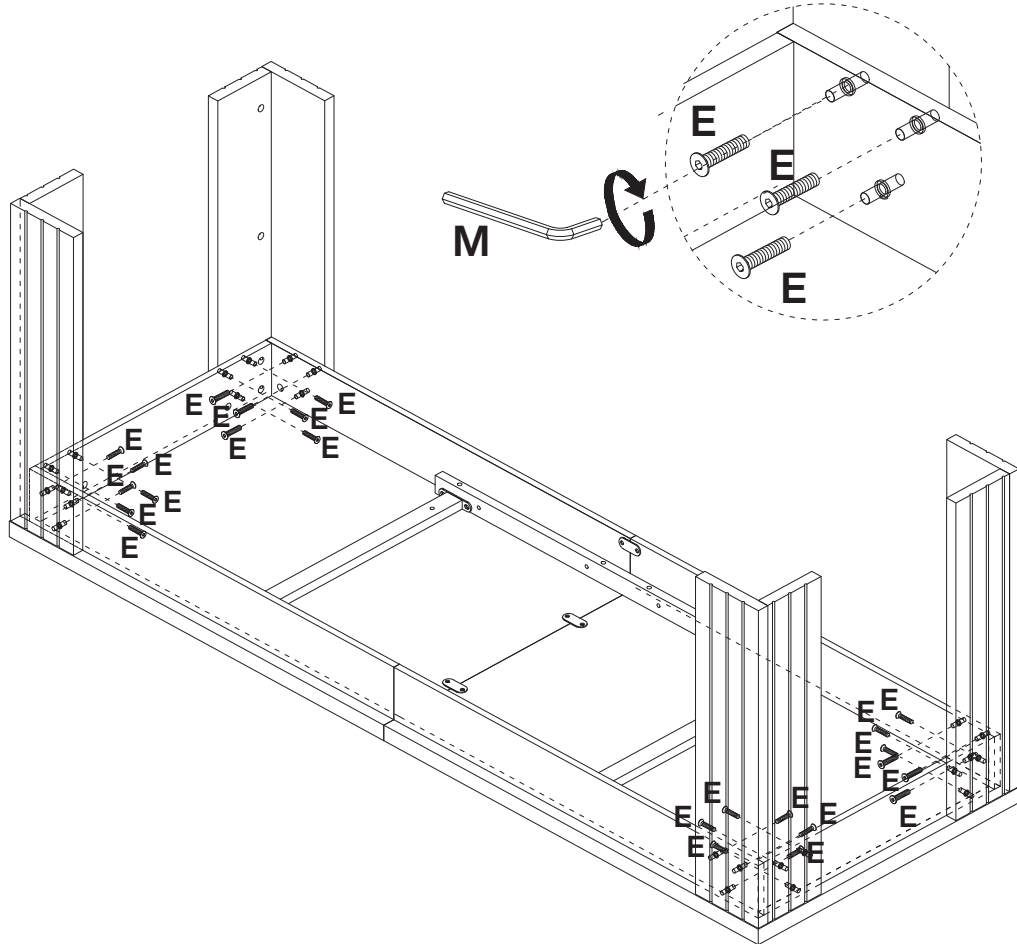

E



Ø6×30mm

24 pcs

Thank you for your support!

