
HALL TREE-ARBRE À HALL

Assembly Instructions-Instructions de montage - Please keep for future reference
Instructions de montage - Veuillez conserver pour référence ultérieure

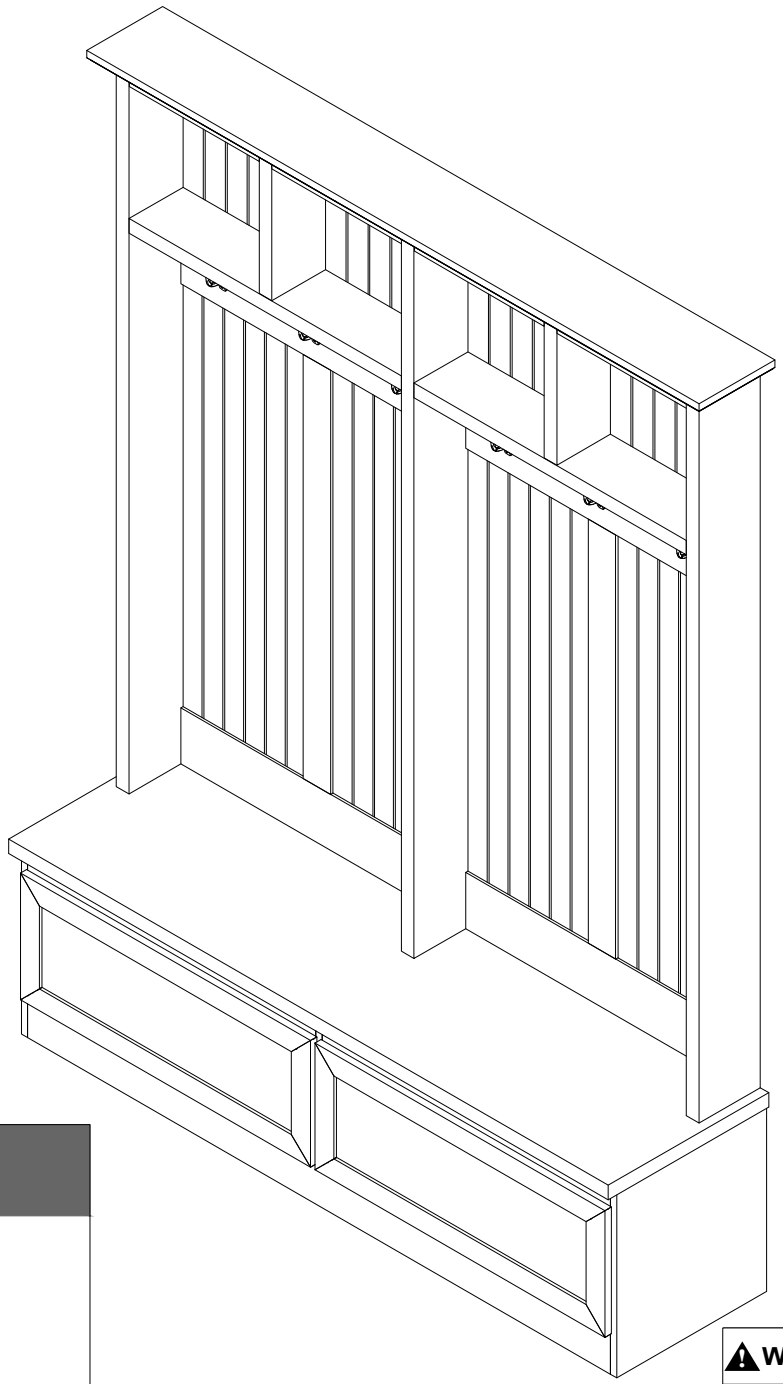

Dimensions

Width-55.9inch

Depth-15inch

Height-75.6inch

⚠ WARNING/AVERTISSEMENT



This product is NOT a Clothing Storage Unit (CSU).
Ce produit n'est PAS une unité de rangement pour vêtements (CSU).
DO NOT use it for clothing storage.
NE PAS utiliser pour ranger des vêtements.
Improper use may cause furniture tipover.
Une utilisation incorrecte peut entraîner le basculement des meubles.

Important-Please read these instructions fully before starting assembly
Important : Veuillez lire attentivement ces instructions avant de commencer l'assemblage.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittinas/N721P433346

Please check you have all the panels listed below
Veeuilleezz vérrifier quee vous disposeezz dee tous lees paanneeaaux listéés ci-dessous

Note : The quantitie below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required.

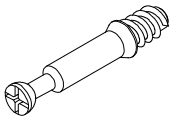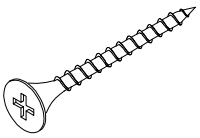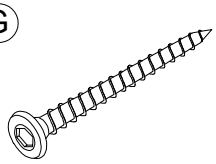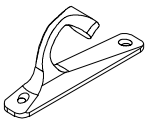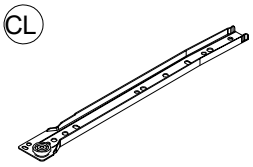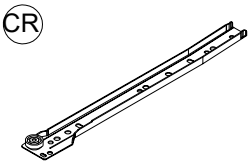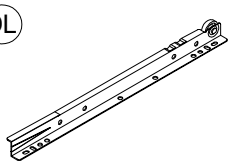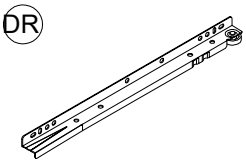A  Ø6*35mm Cam Bolt-Boulon à came x 58+1	B  Ø15*9mm Cam lock- Verrou à came x 58+1	C  4*40mm Screw-Vis x 10+1	D  6*30mm Dowel-Goujon x 56+2	E  3*12mm Screw-Vis x 24+1
F  6*50mm Dowel-Goujon x 2	G  5*45mm Screw-Vis x x 20+1	H  Clothes-Hook-Crochet à vêtements x 6	I  3.5*12mm Screw-Vis x 12+1	J  3*14mm Screw-Vis x 32+2
K  Plastic Nail-Clou en plastique x 32+1	L  30*12mm Non-Slip mat- Tapis antidérapant x 6	M  Anti-tip Hardware-Dispositif anti-basculement x2	N  Ø3.9*30mm Screw-Vis x 2	O  wrench-clé x 1
P  Huamei Patch-Huamei Patch x58 +1	CL  300mm Runner -Coureusex 2	CR  300mm Runner-Coureuse x 2	DL  300mm Runner-Coureuse x 2	DR  300mm Runner-Coureuse x 2

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

ATTENTION À NE PAS ENDOMMAGER LA POSITION DU TROU LORSQUE VOUS UTILISEZ DES OUTILS ÉLECTRIQUES !

Using Camlocks


Step 1

Connect the male camlock as diected in the Assembly Instructions- Instructions de montage using a scewdriver.

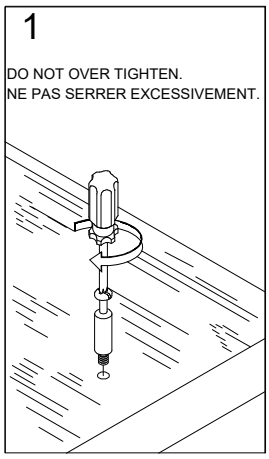

Step 2


Push the male camlock into the entry hole.

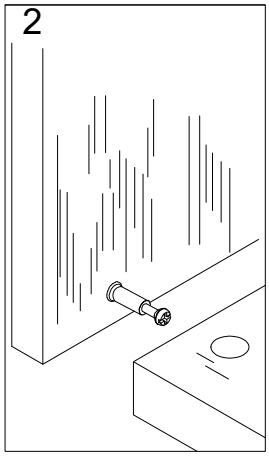

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

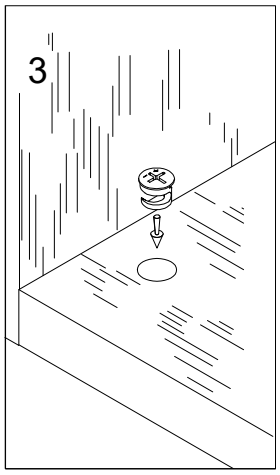


Step 4

Turn the female camlock clockwise with a screwdriver.









You should feel a click when the camlock is locked in place.

The joint is now secure.

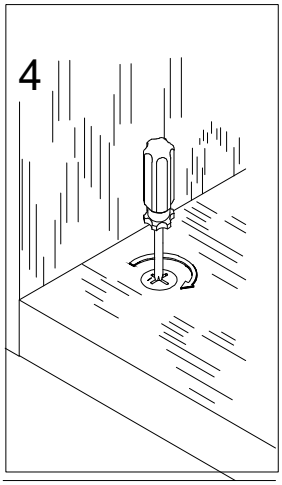




Components - Fittinas/N721P433346

Please check you have all the panels listed below
Veuillez vérifier que vous disposez de tous les panneaux listés ci-dessous

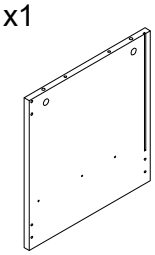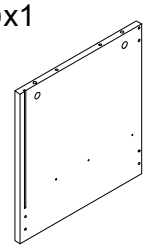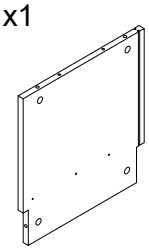
1 x1  1450x195x37mm	2 x1  1498x160x23mm	3 x1  1498x160x23mm	4 x1  1498x160x23mm	5 x2  655x160x23mm	6 x2  320x160x23mm
8 x4  316x50x14mm	9 x2  890x75x14mm	10 x2  655x100x14mm	12 x4  900x300x4.5mm	13 x1  1420x380x24mm	14 x1  386x355x12mm
15 x1  386x355x12mm	16 x1  386x355x12mm	17 x1  1393x80x14mm	18 x1  1393x80x14mm	19 x2  690.5*66*14mm	20 x2  316*699*4.5mm
21 x2  697x260x14mm	24 x2  641x180x12mm	Hardware kit kit de matériel x1			

Components - Fittinas/N721P433347

Please check you have all the panels listed below
Veuillez vérifier que vous disposez de tous les panneaux listés ci-dessous


(7) x2  655x165x14mm	(11) x4  330x326x4.5mm	(22) x2  300x180x12mm	(23) x2  300x180x12mm	(25) x2  651x297x4.5mm	(26) x2  287x60x12mm


Assembly Instructions-Instructions de montage

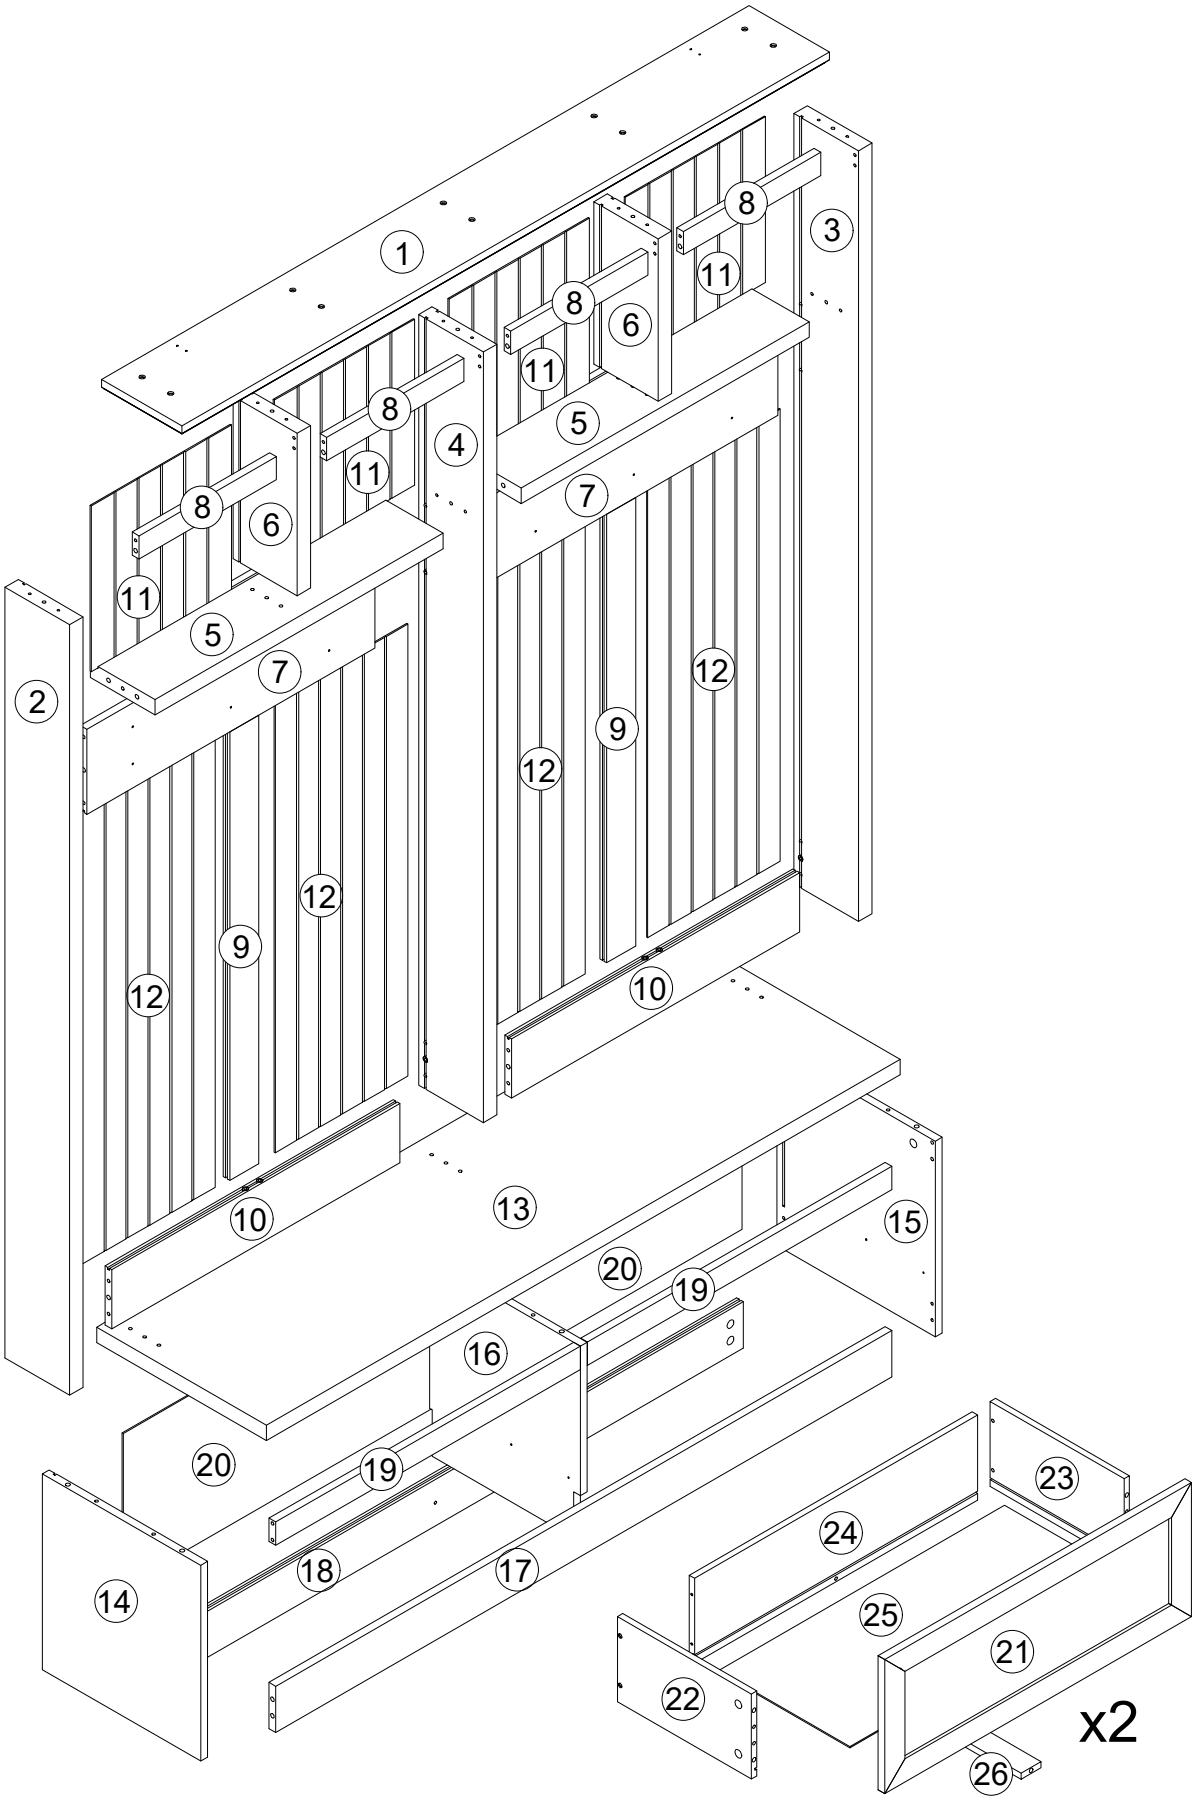





AssemblyInstructions-Instructions de montage

step/Étape 1

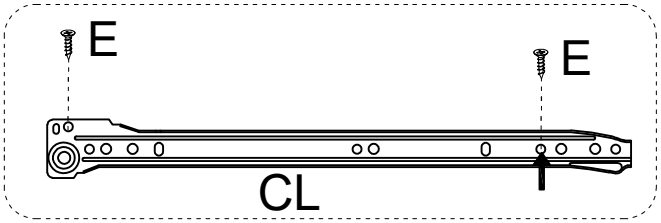

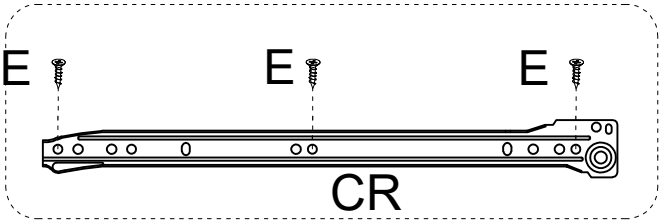


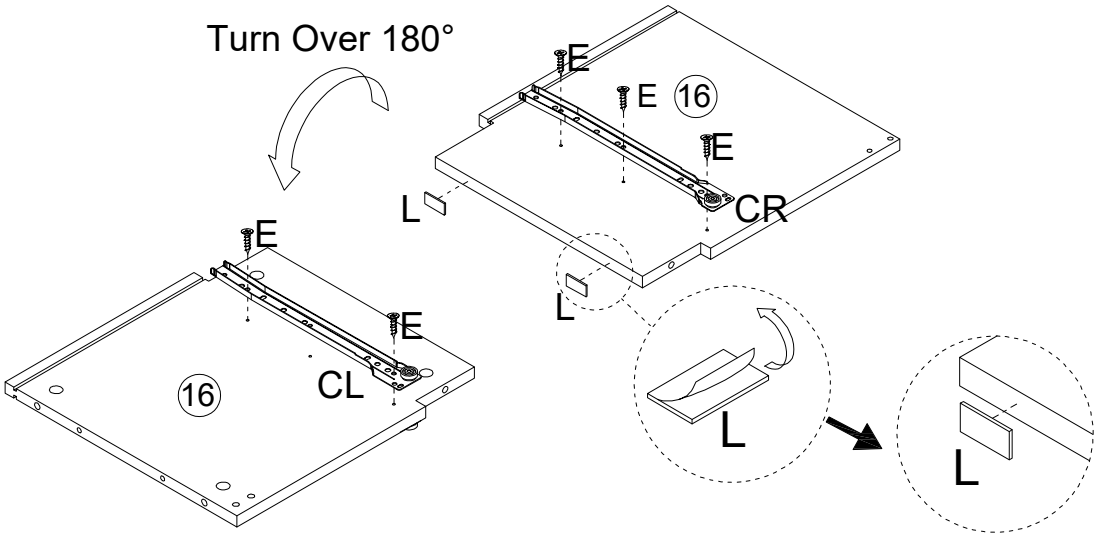



(E)  3*12mm Screw x 5	(L)  30*15mm Non-Slip mat x 2	(CL)  300mm Runner x 1	(CR)  300mm Runner x 1	(16)x1 


Assembly Instructions - Instructions demontage






step/Étape 2

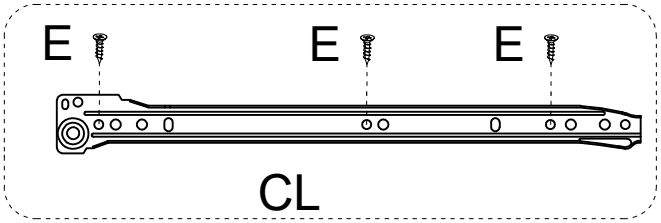

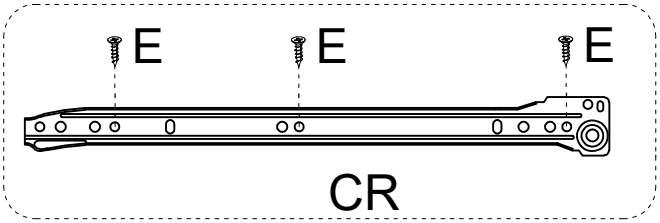

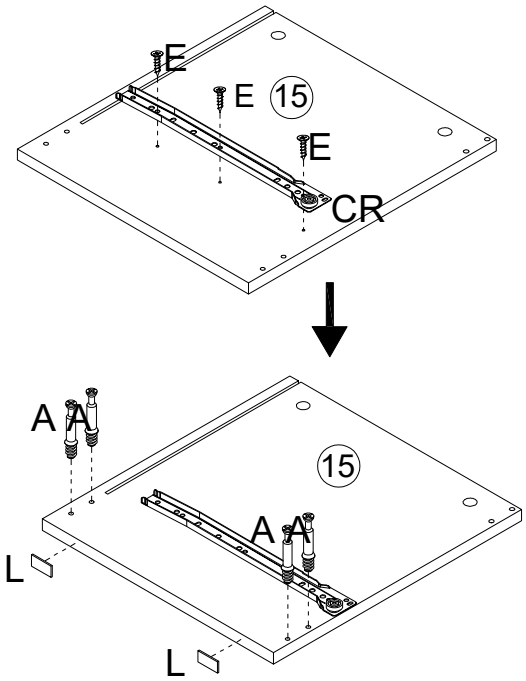






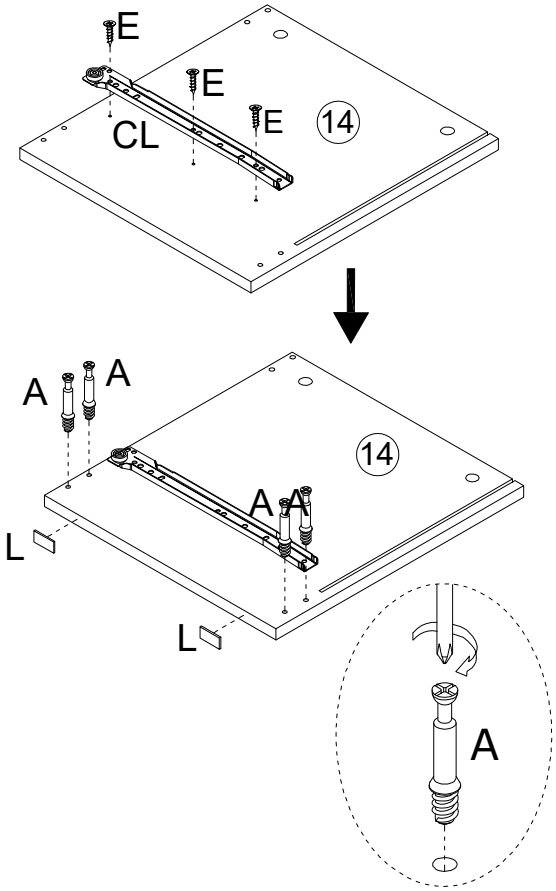


(A)  Ø6*35mm Cam Bolt x 8	(E)  3*12mm Screw x 6	(L)  30*15mm Non-Slip mat x 4	(CL)  300mm Runner x 1	(CR)  300mm Runner x 1	(14) x1 	(15) x1 


Assembly Instructions-Instructions montage

step/Étape 3

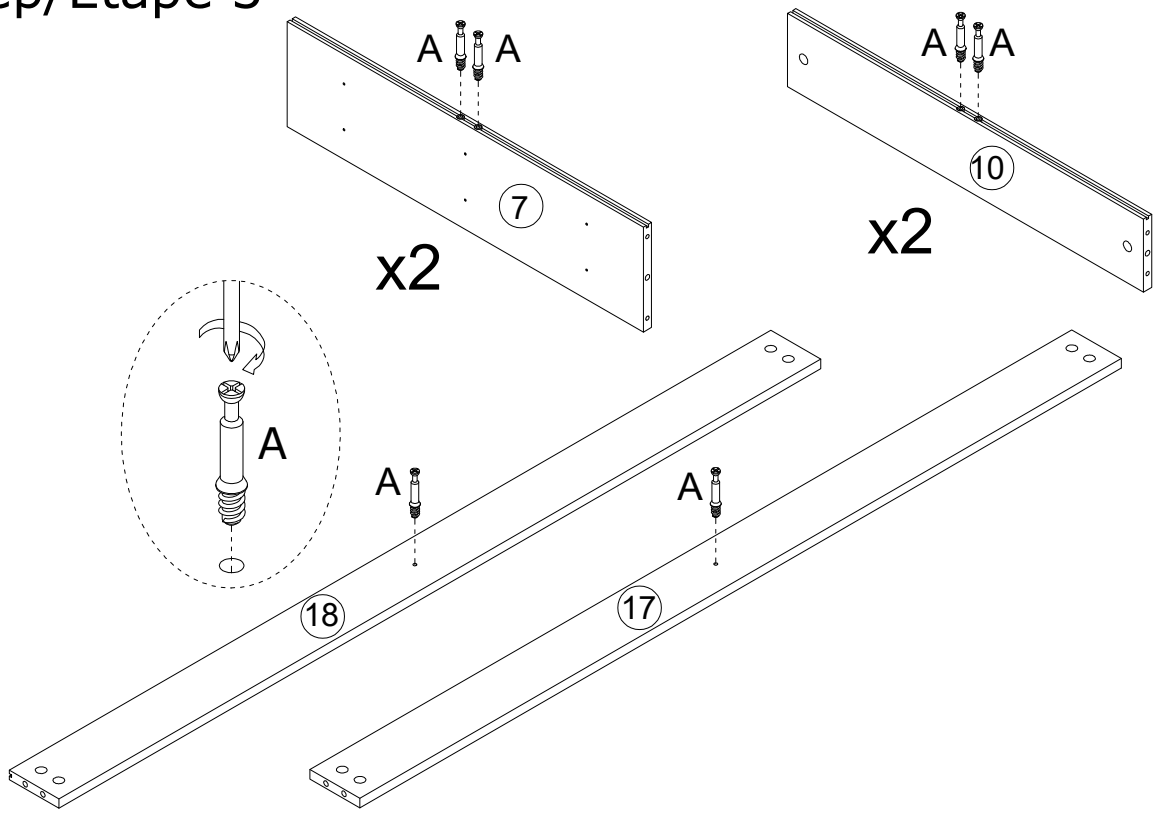

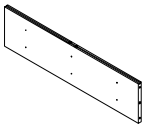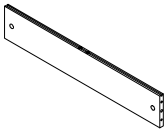7 x2	10 x2	17 x1	18 x1	A
				 Ø6*35mm Cam Bolt x 10


step/Étape 4

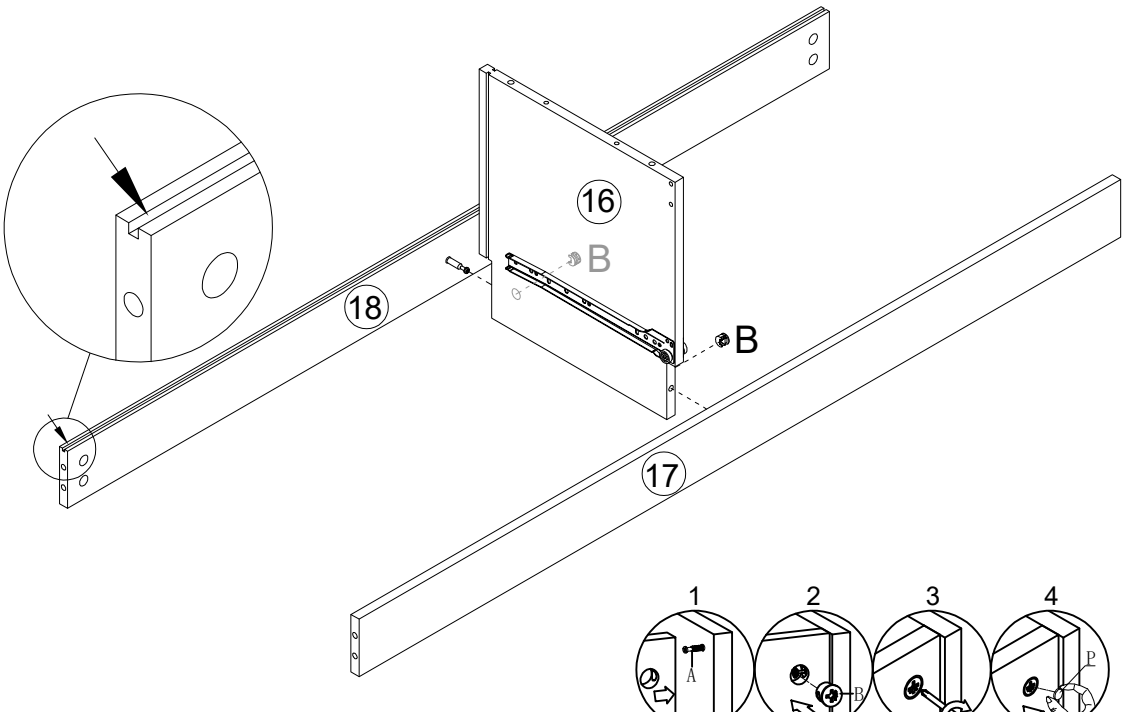

B
 Ø15*9mm Cam lock x 2


Assembly Instructions-Instructions montage

step/Étape 5

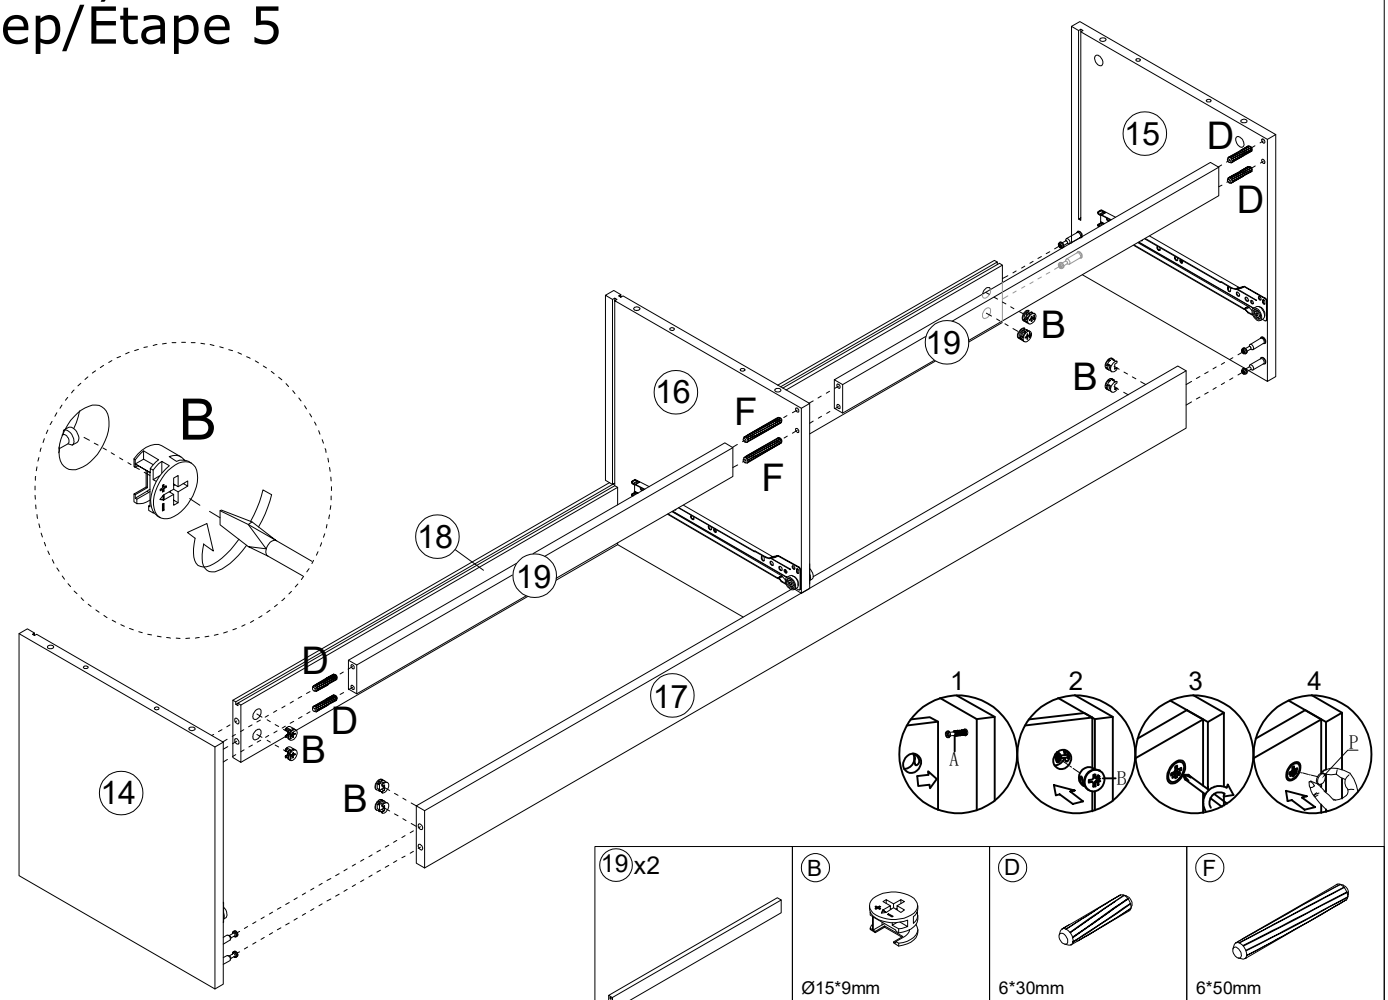

19 x2	B	D	F
	Ø15*9mm Cam lock x 8	6*30mm Dowel x 4	6*50mm Dowel x 2


step/Étape 6

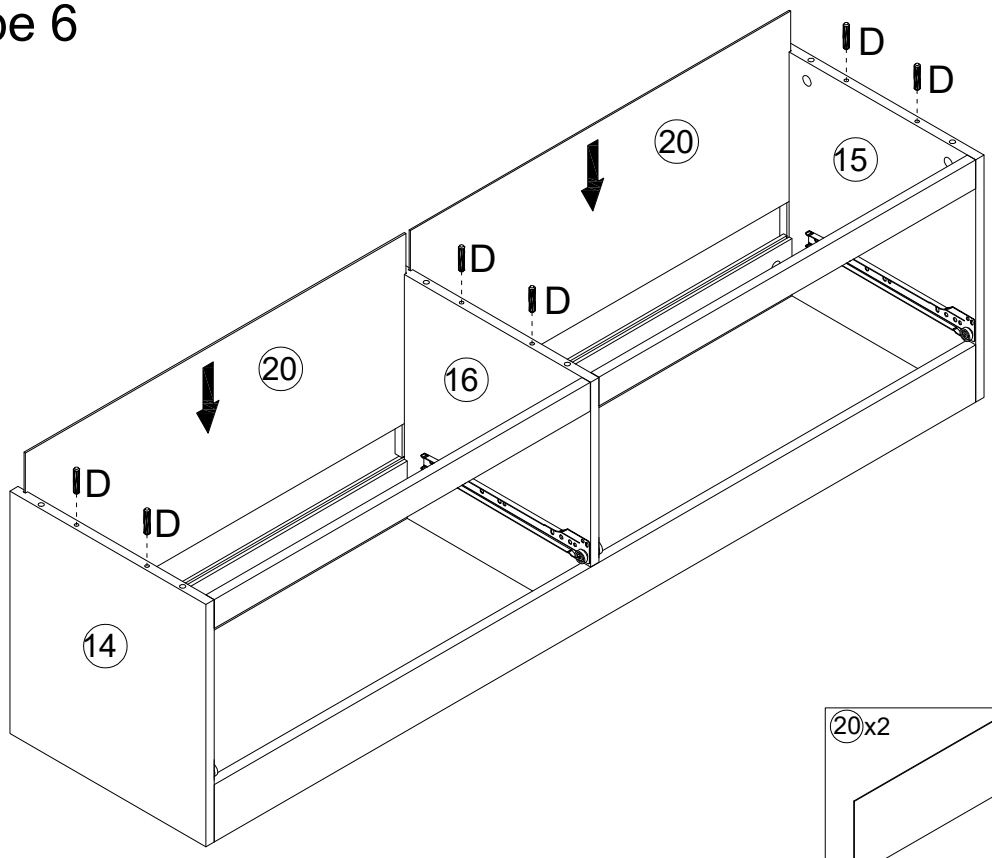


20 x2	D
	6*30mm Dowel x 6

Assembly Instructions-Instructions demontage

step/Étape 7

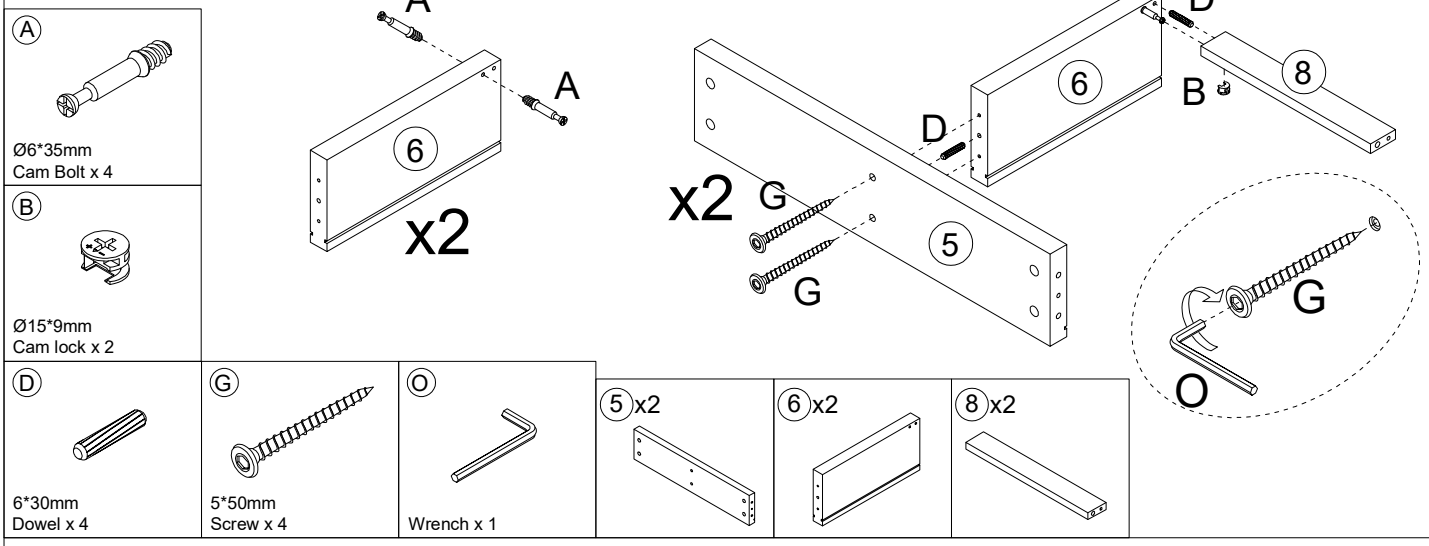



step/Étape 8

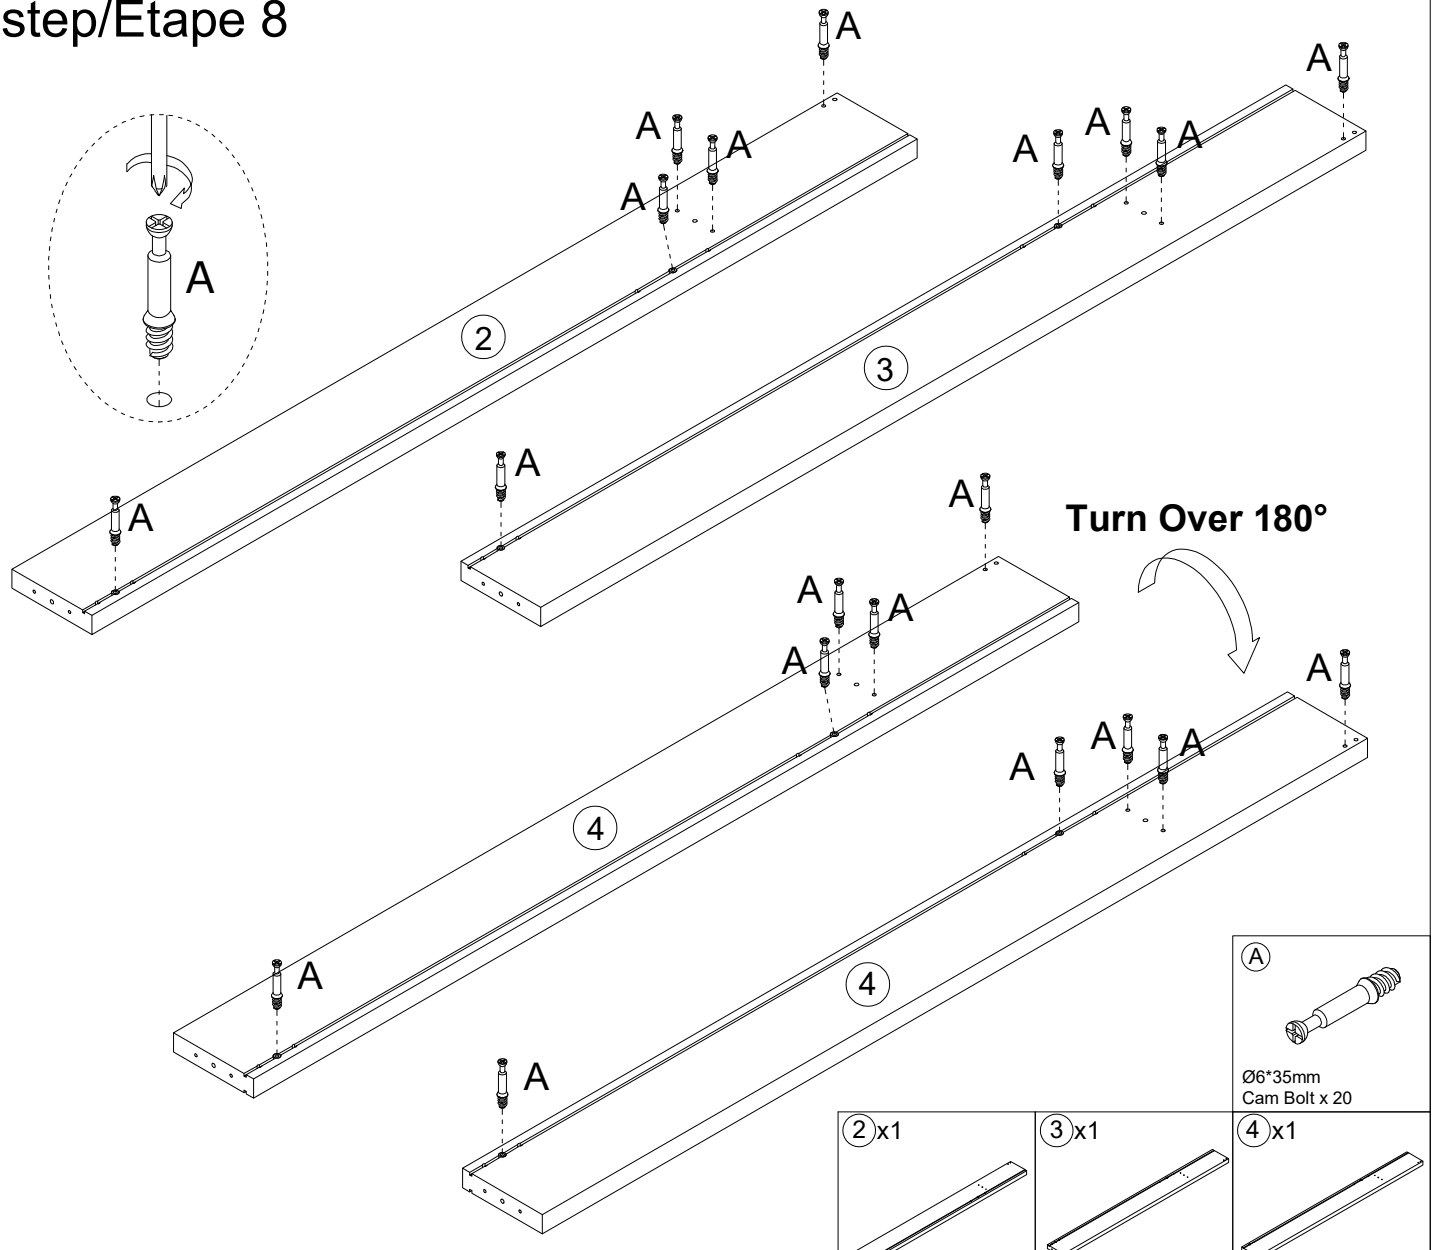

Assembly Instructions-Instructions montage

step/Étape 9

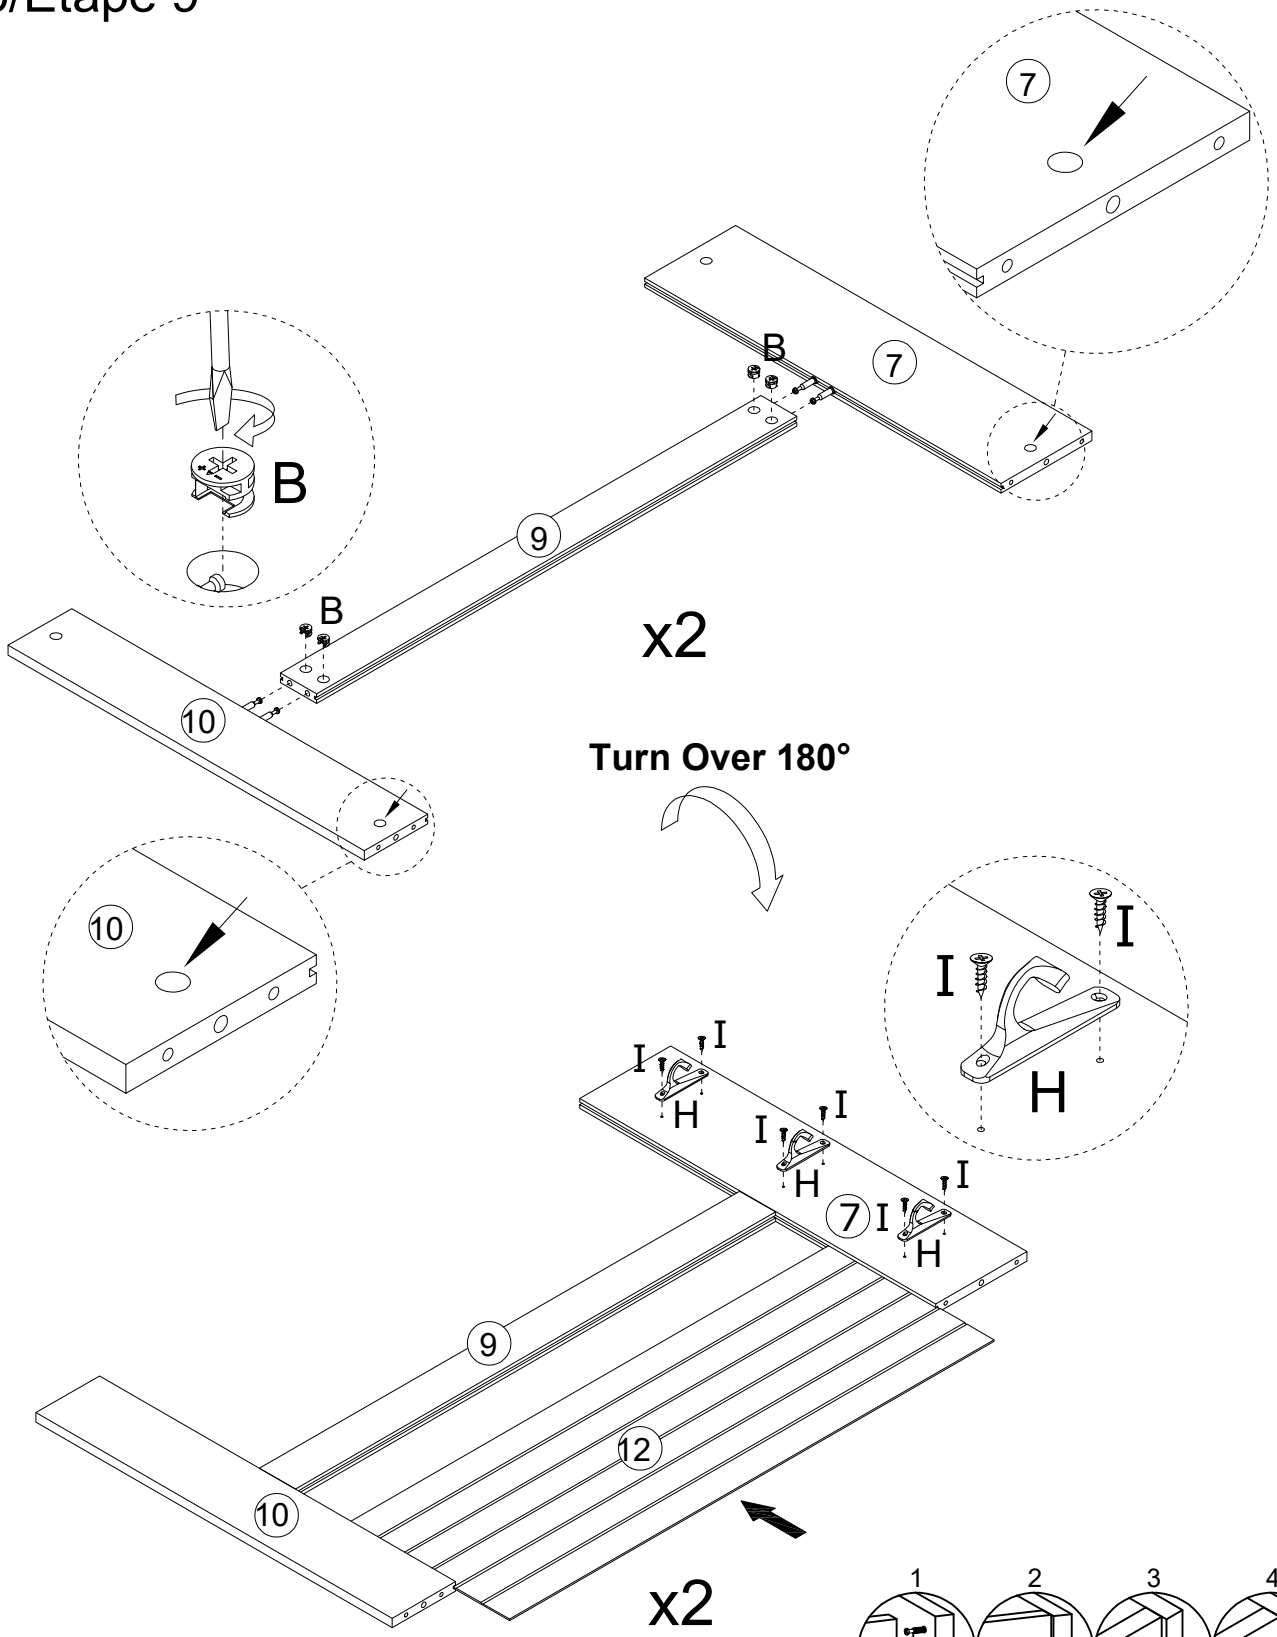


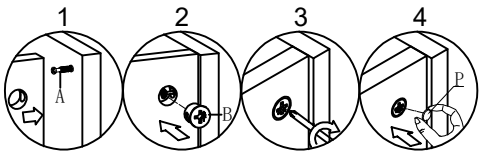

9 x2	12 x2	B	H	I
		Ø15*9mm Cam lock x 8	Clothes-Hook x 6	3.5*12mm Screw x 12


Assembly Instructions-Instructions montage

step/Étape 10

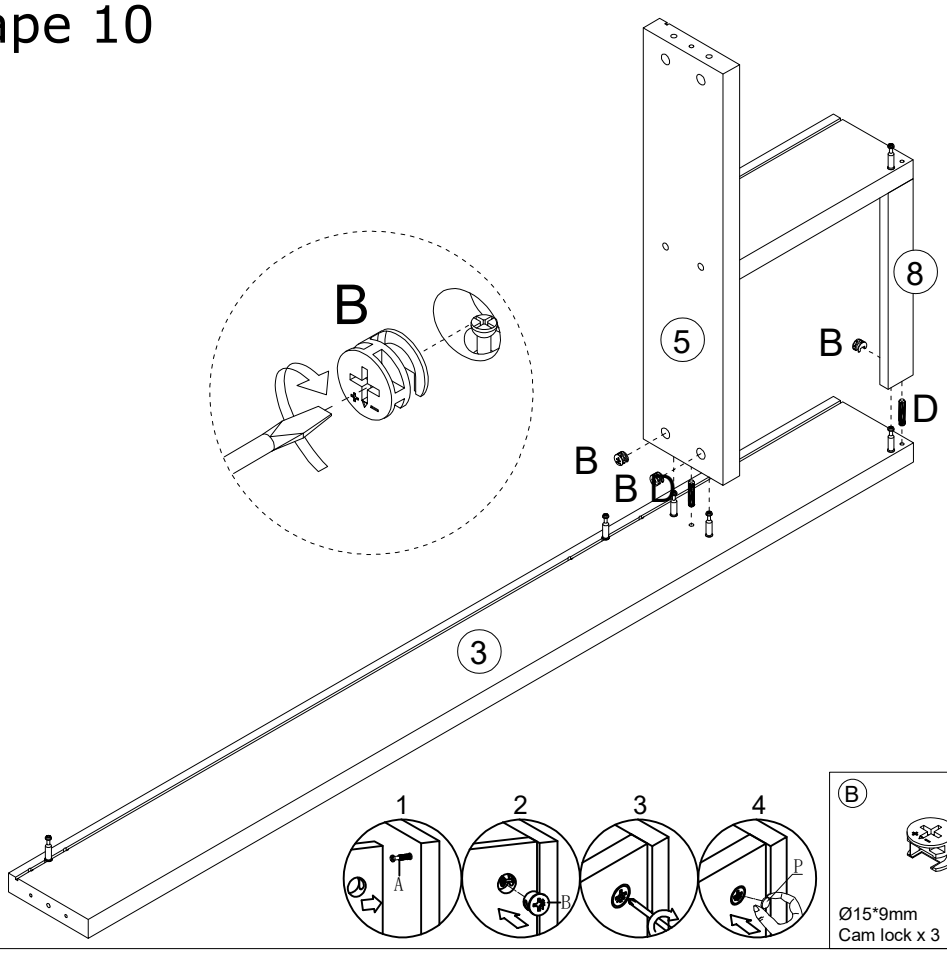

B	D
	
Ø15*9mm Cam lock x 3	6*30mm Dowel x 2


step/Étape 11

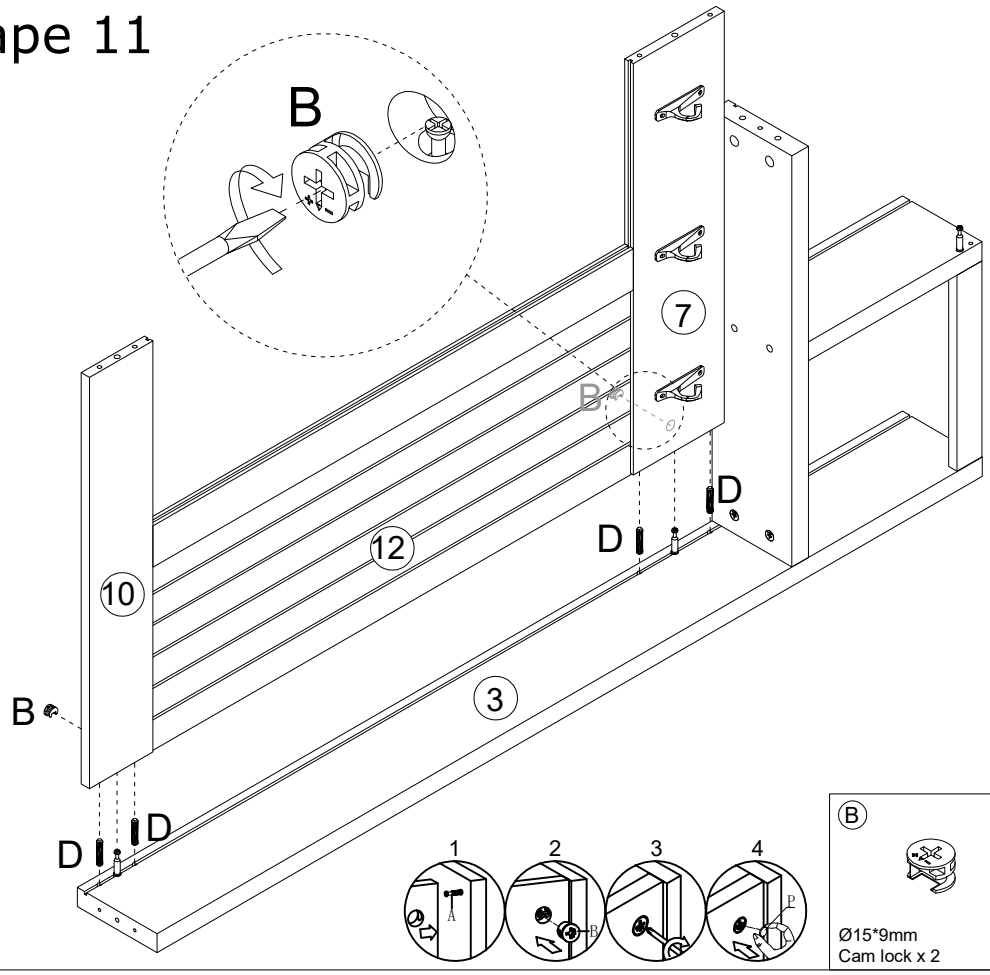


B	D
	
Ø15*9mm Cam lock x 2	6*30mm Dowel x 4

Assembly Instructions-Instructions montage


step/Étape 12

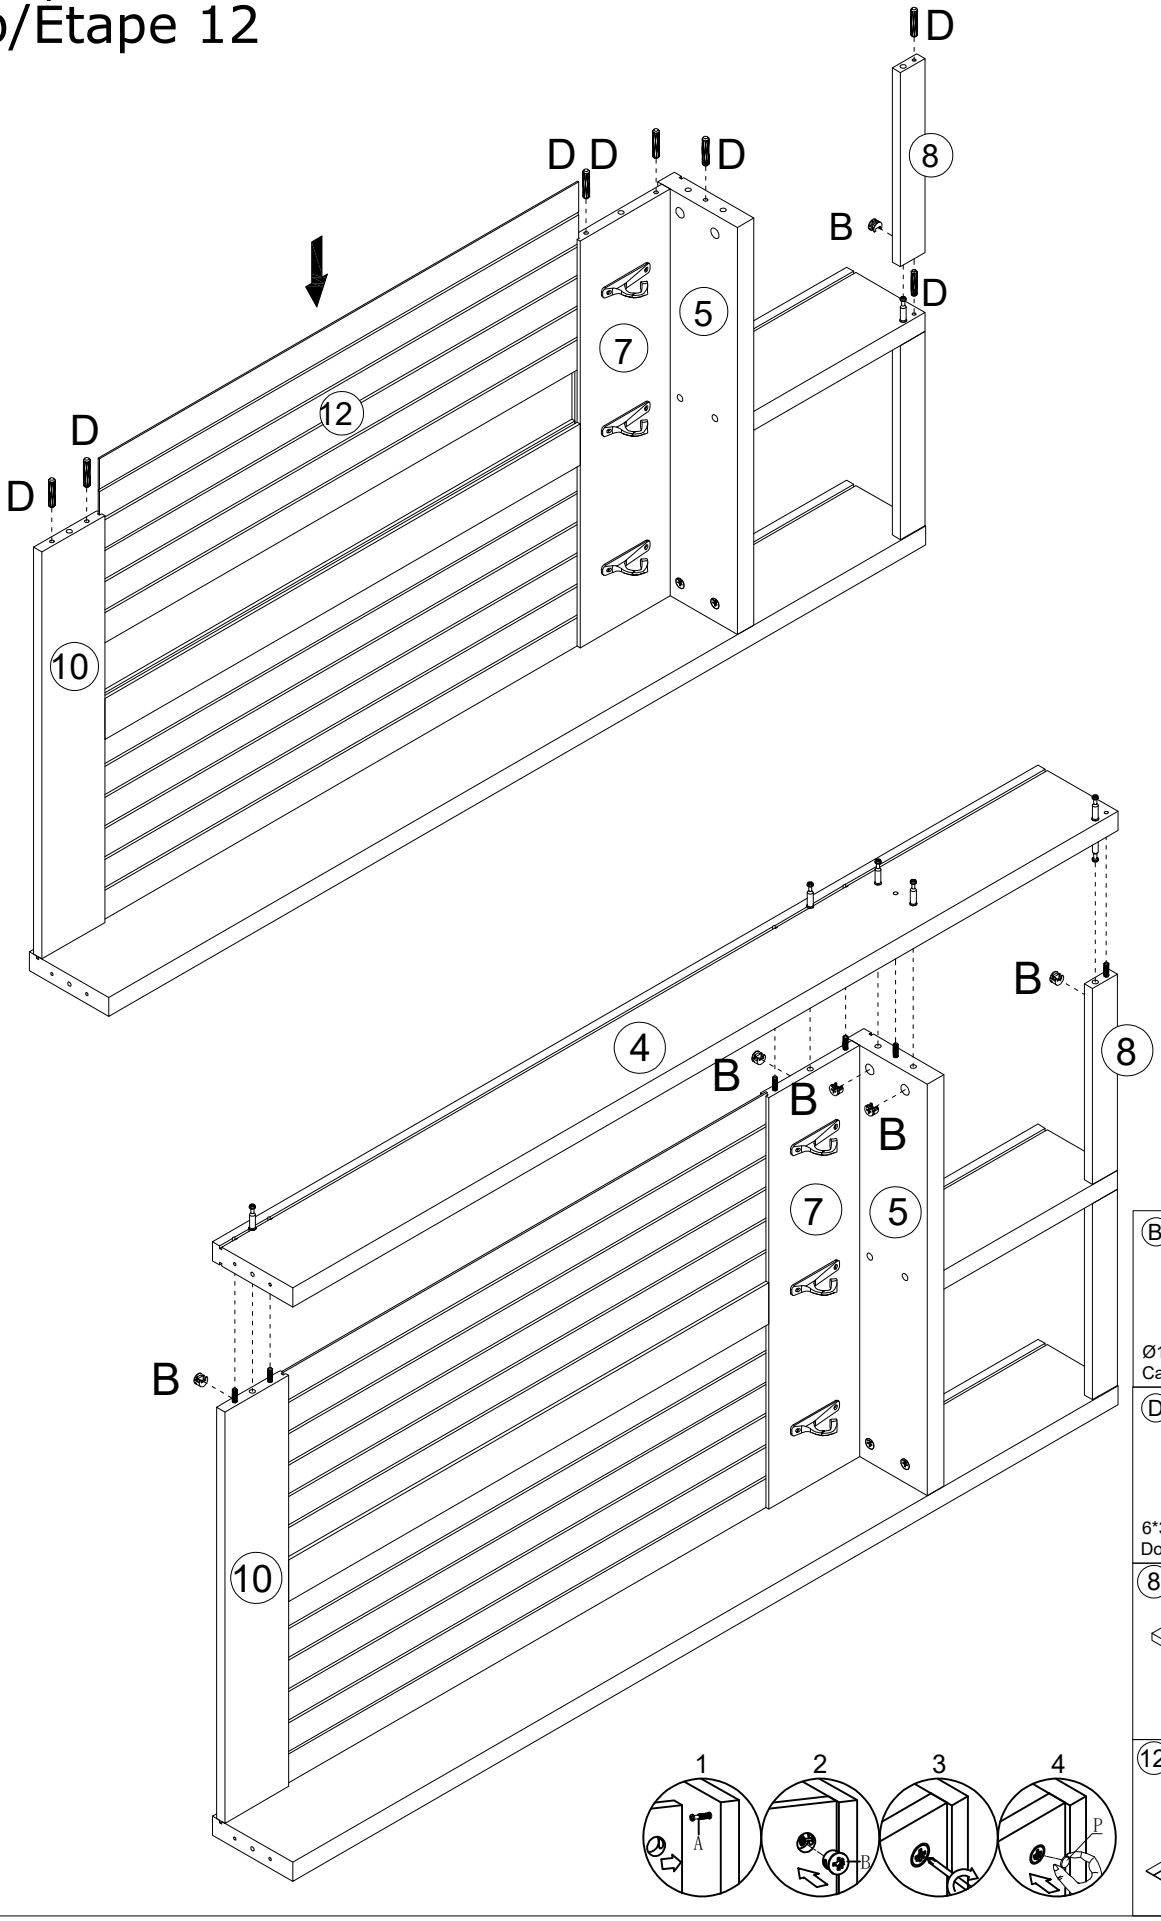

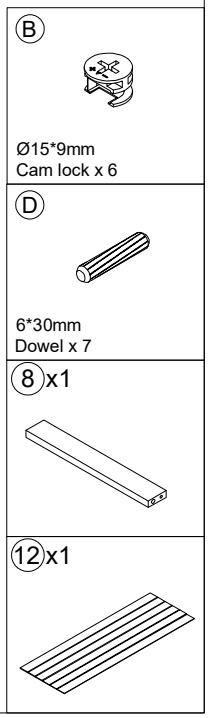

Assembly Instructions-Instructions montage

step/Étape 13

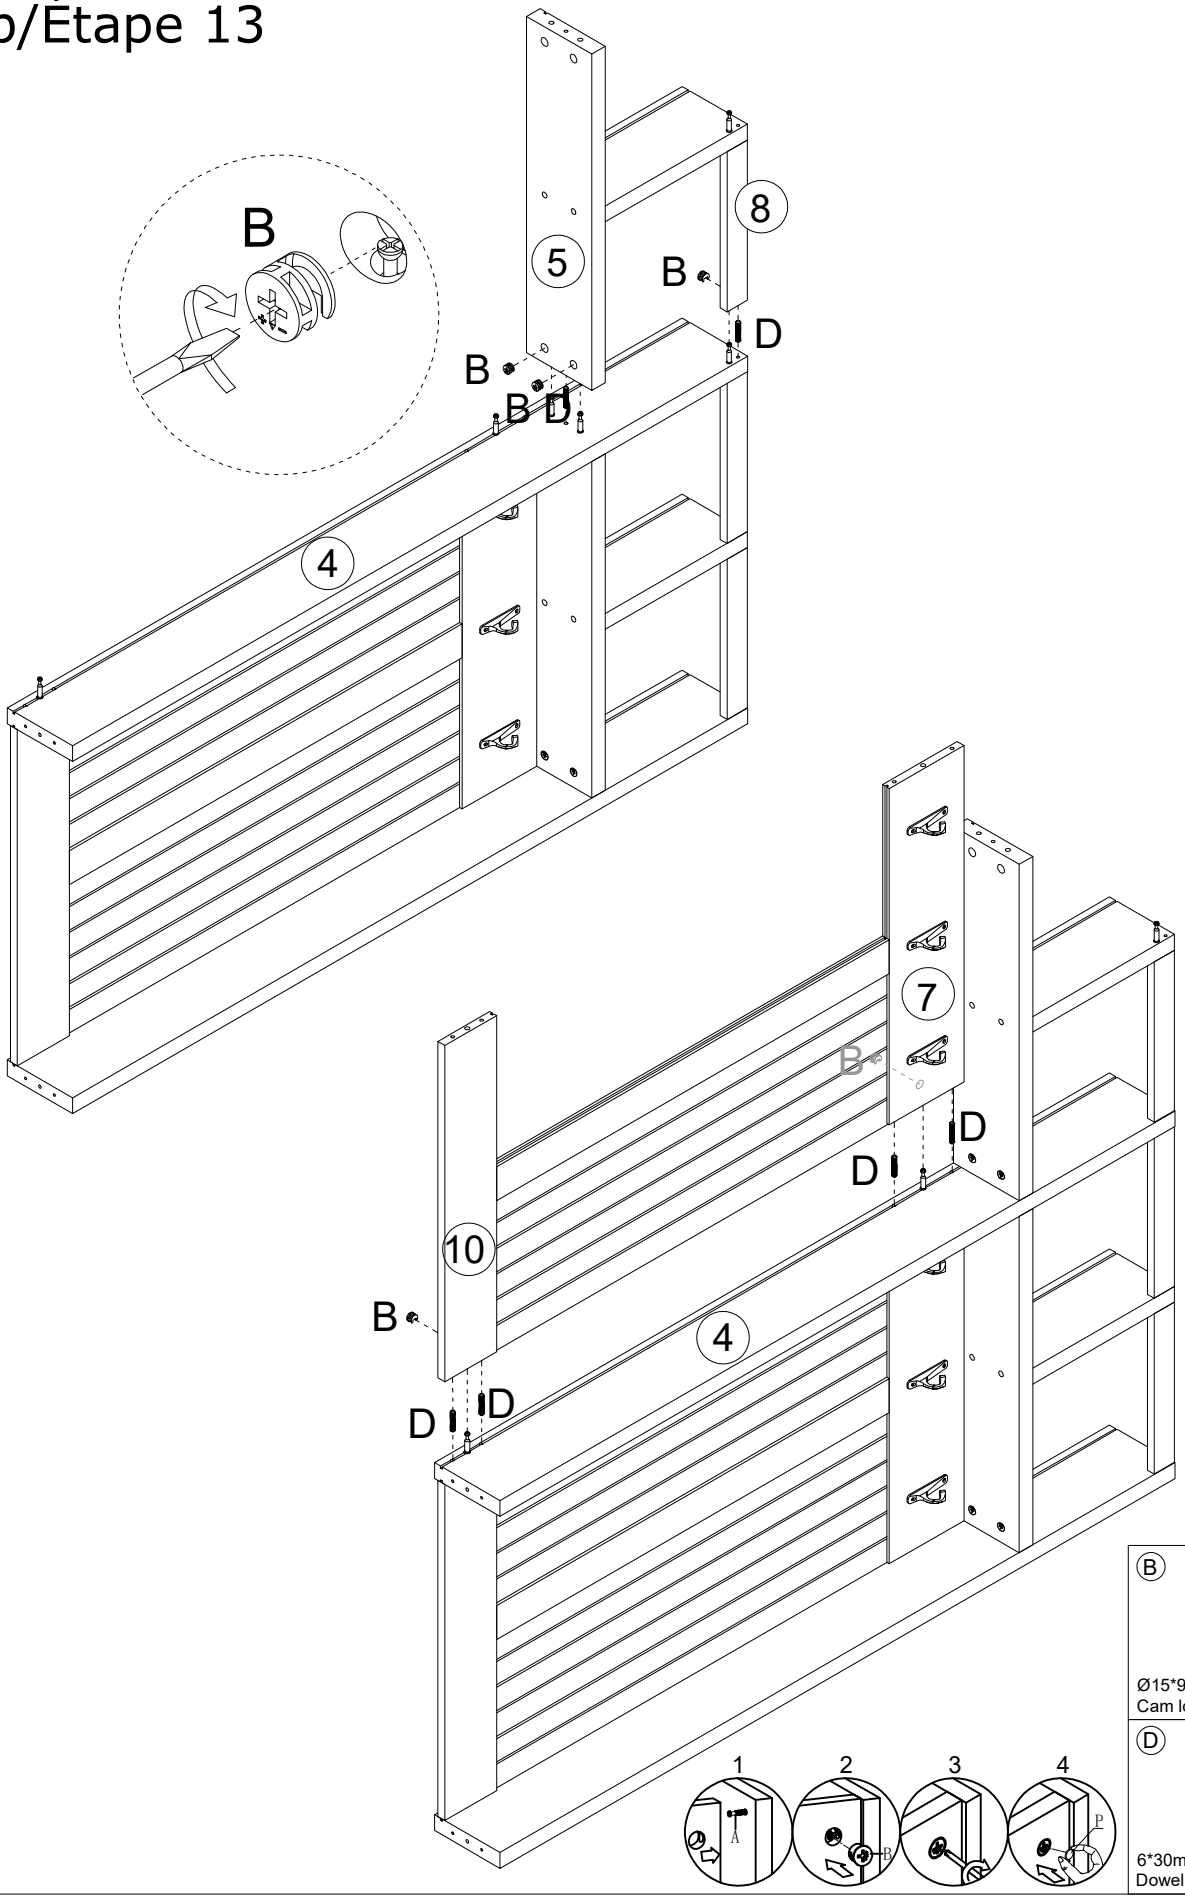

Ⓑ


Ø15*9mm
Cam lock x 5



Ⓓ

6*30mm
Dowel x 6

Assembly Instructions-Instructions montage


step/Étape 14

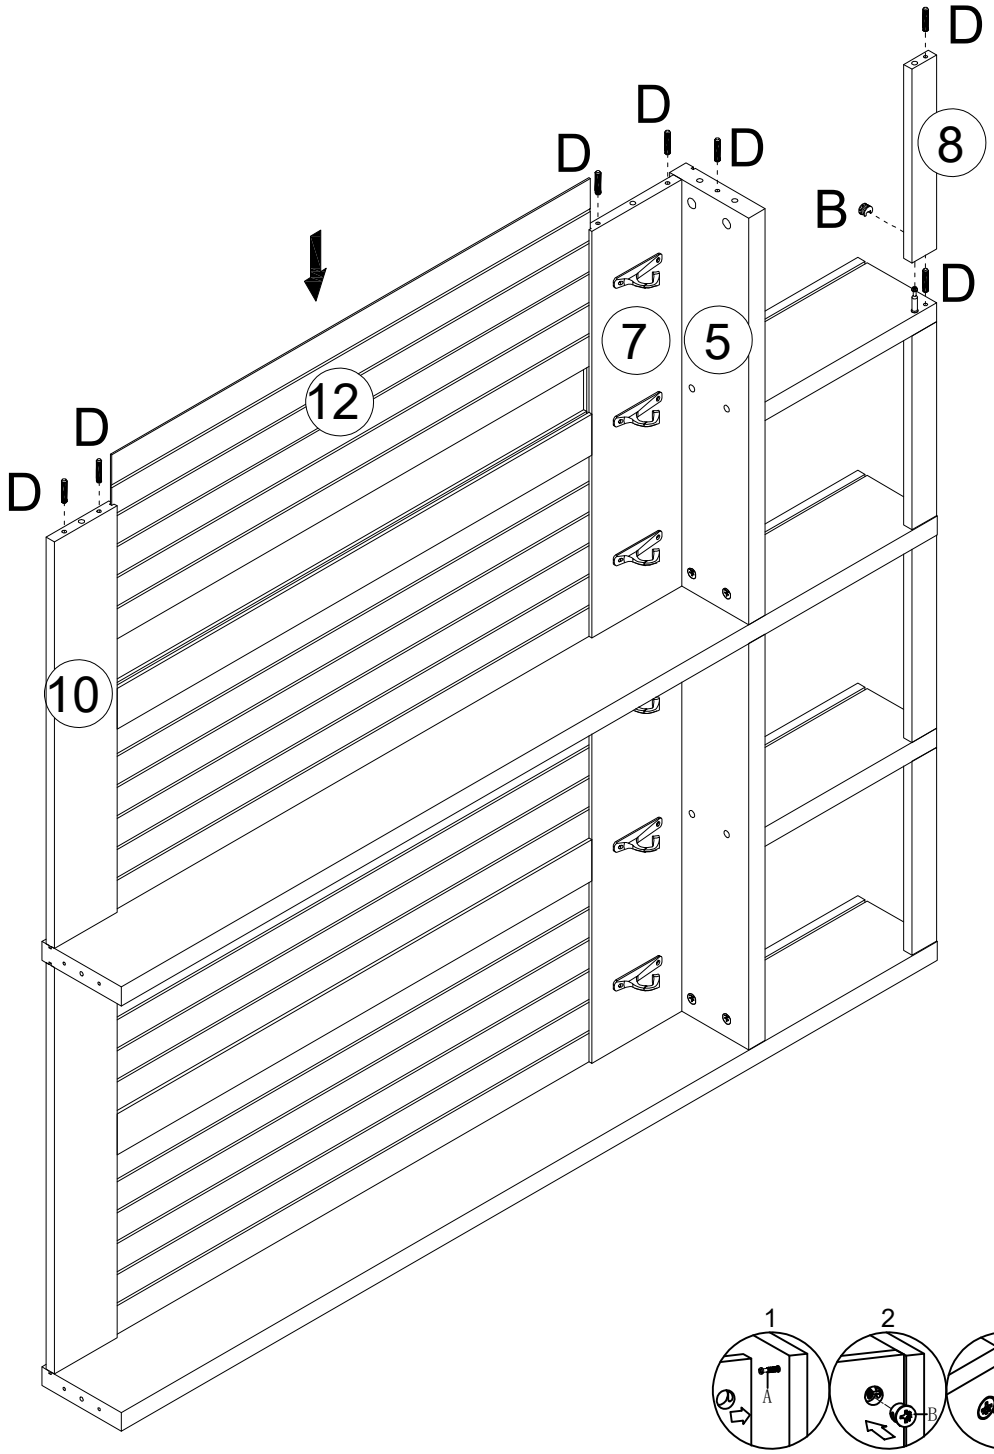


8 x1	12 x1	B	D
		 Ø15*9mm Cam lock x 1	 6*30mm Dowel x 7

Assembly Instructions-Instructions montage


step/Étape 15

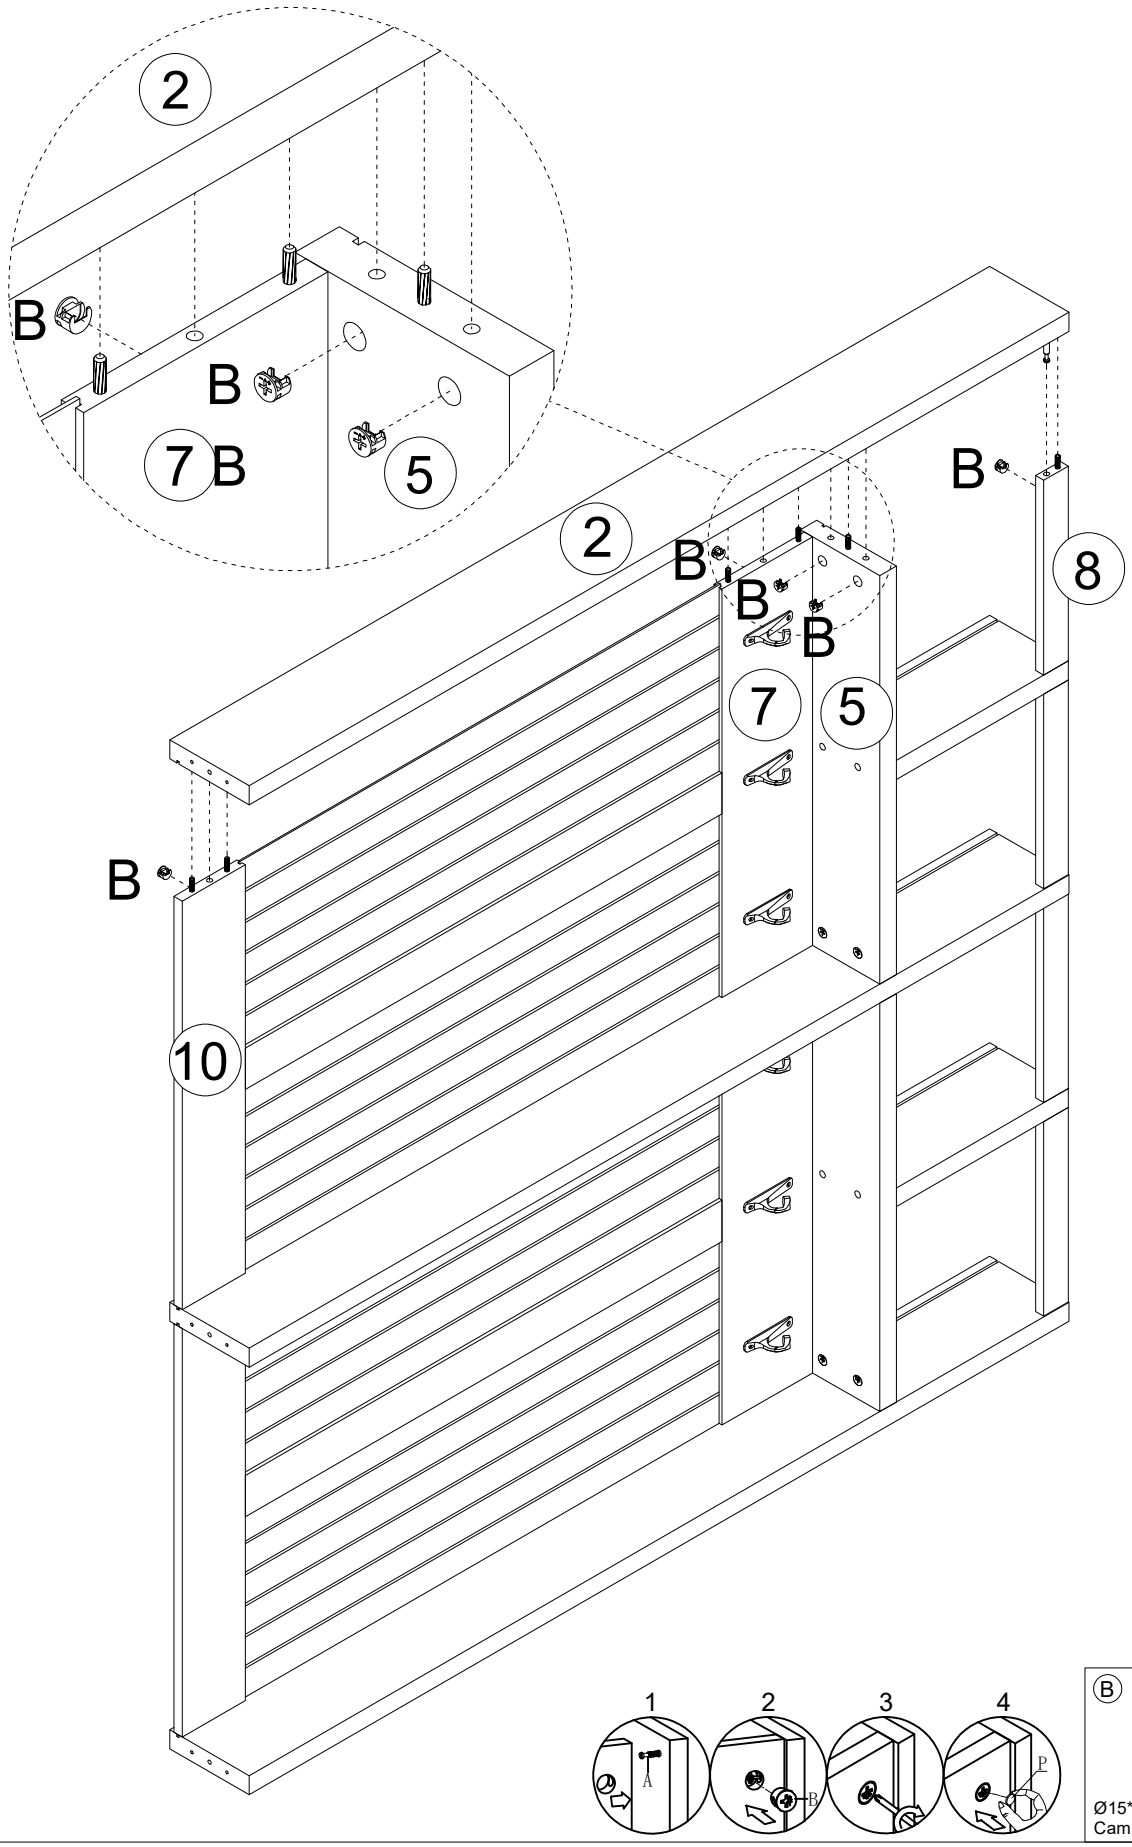


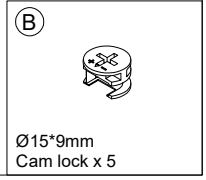


Assembly Instructions-Instructions montage


step/Étape 16

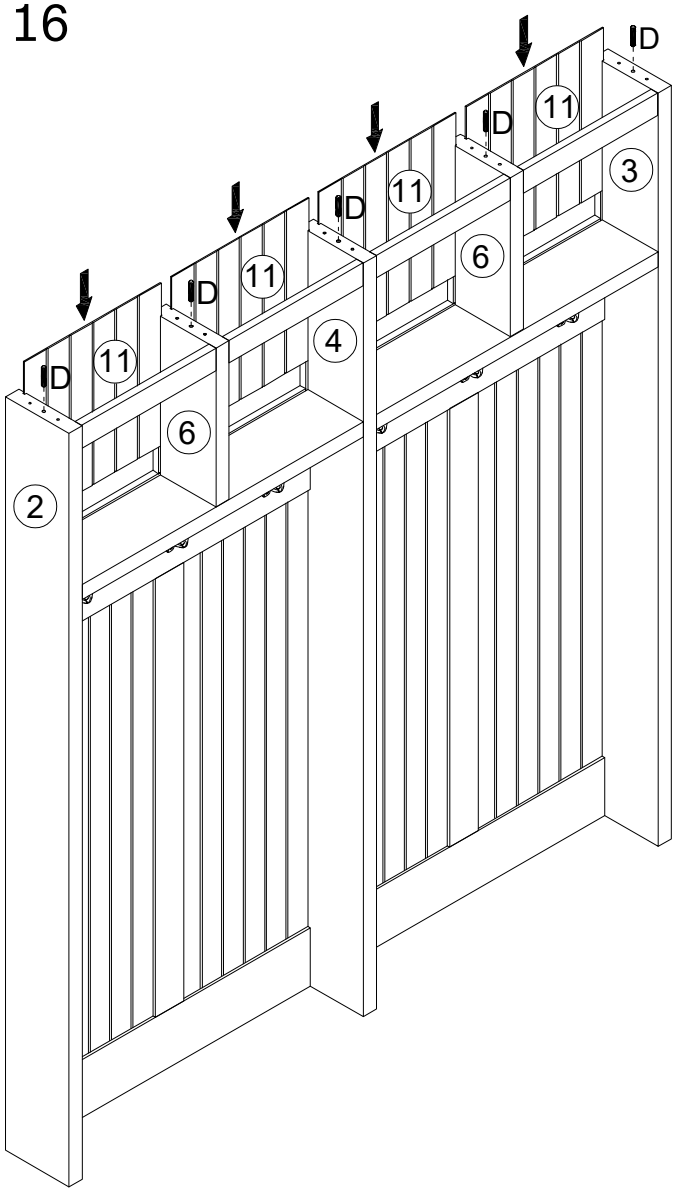

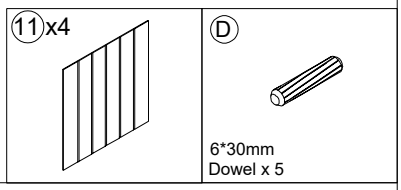


step/Étape 17

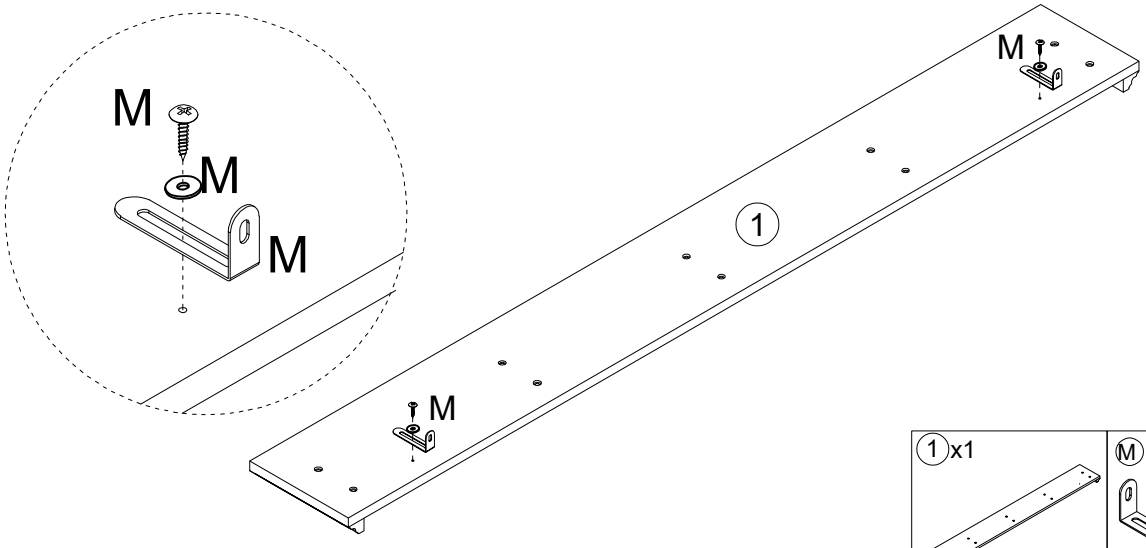

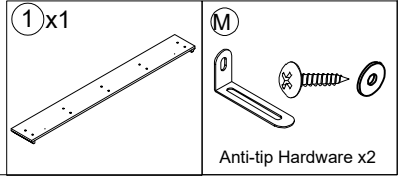

Assembly Instructions- Instructions demontage


step/Étape 18

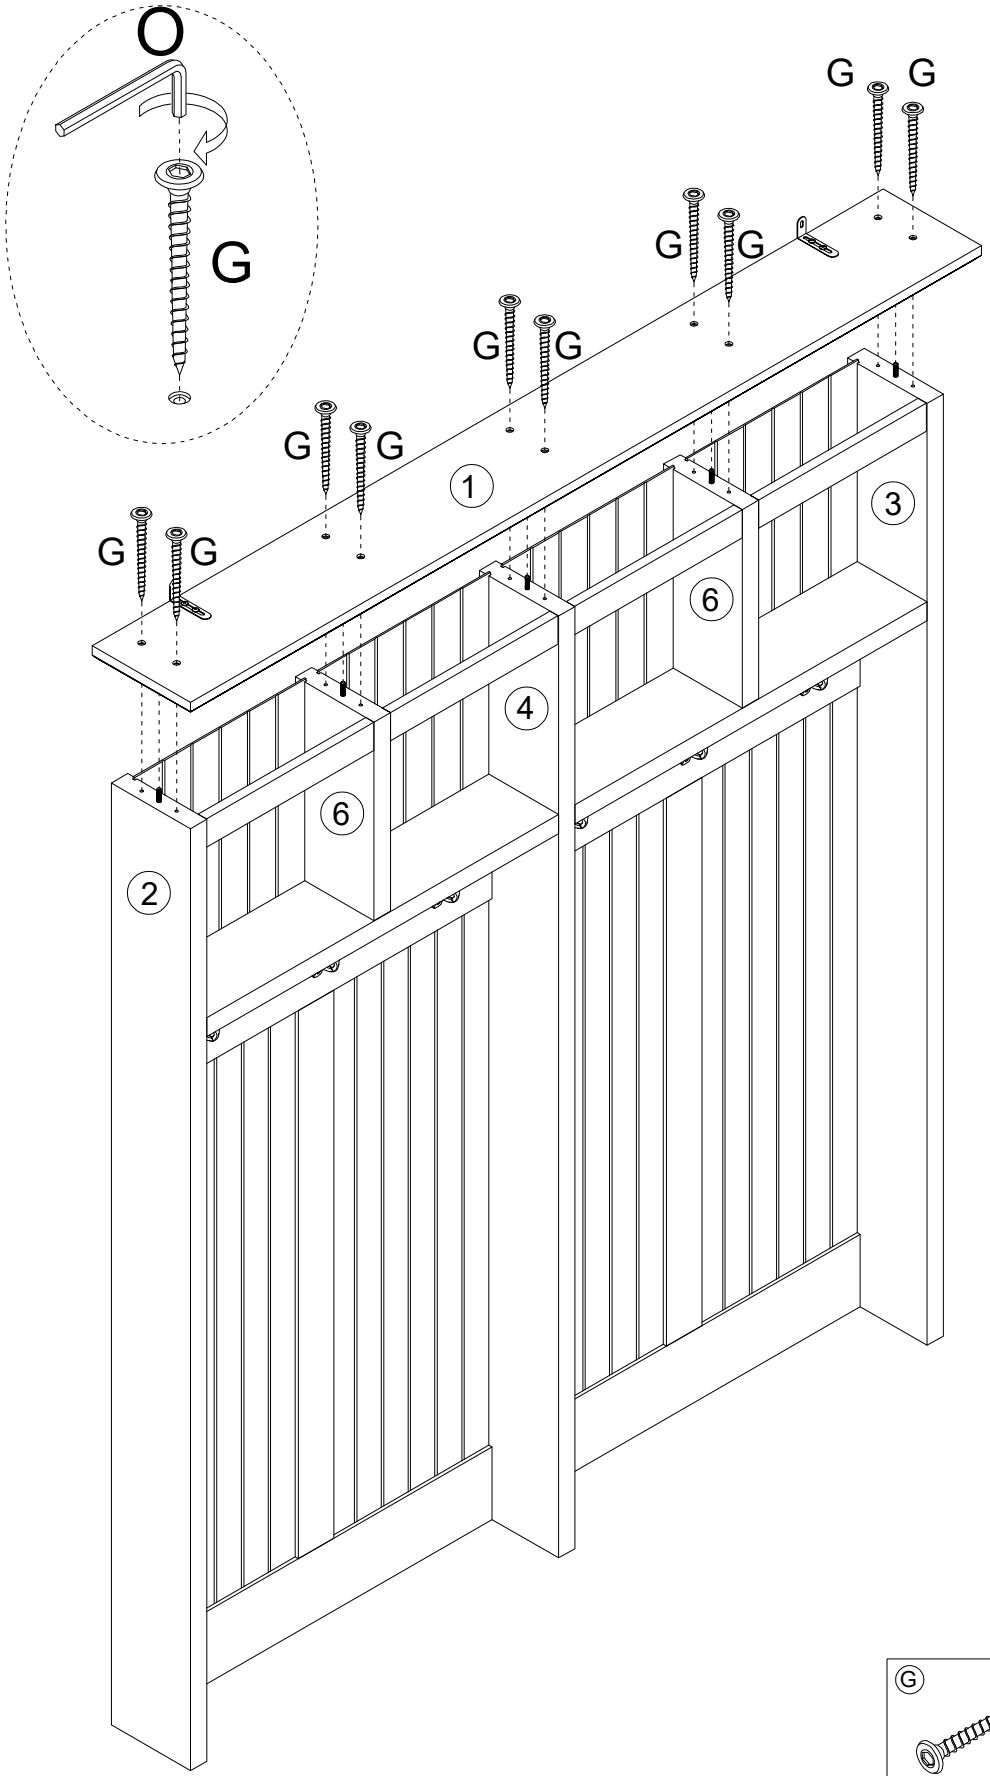

G	O
5*50mm Screw x 10	Wrench x 1

Assembly Instructions-Instructions de montage


step/Étape 19

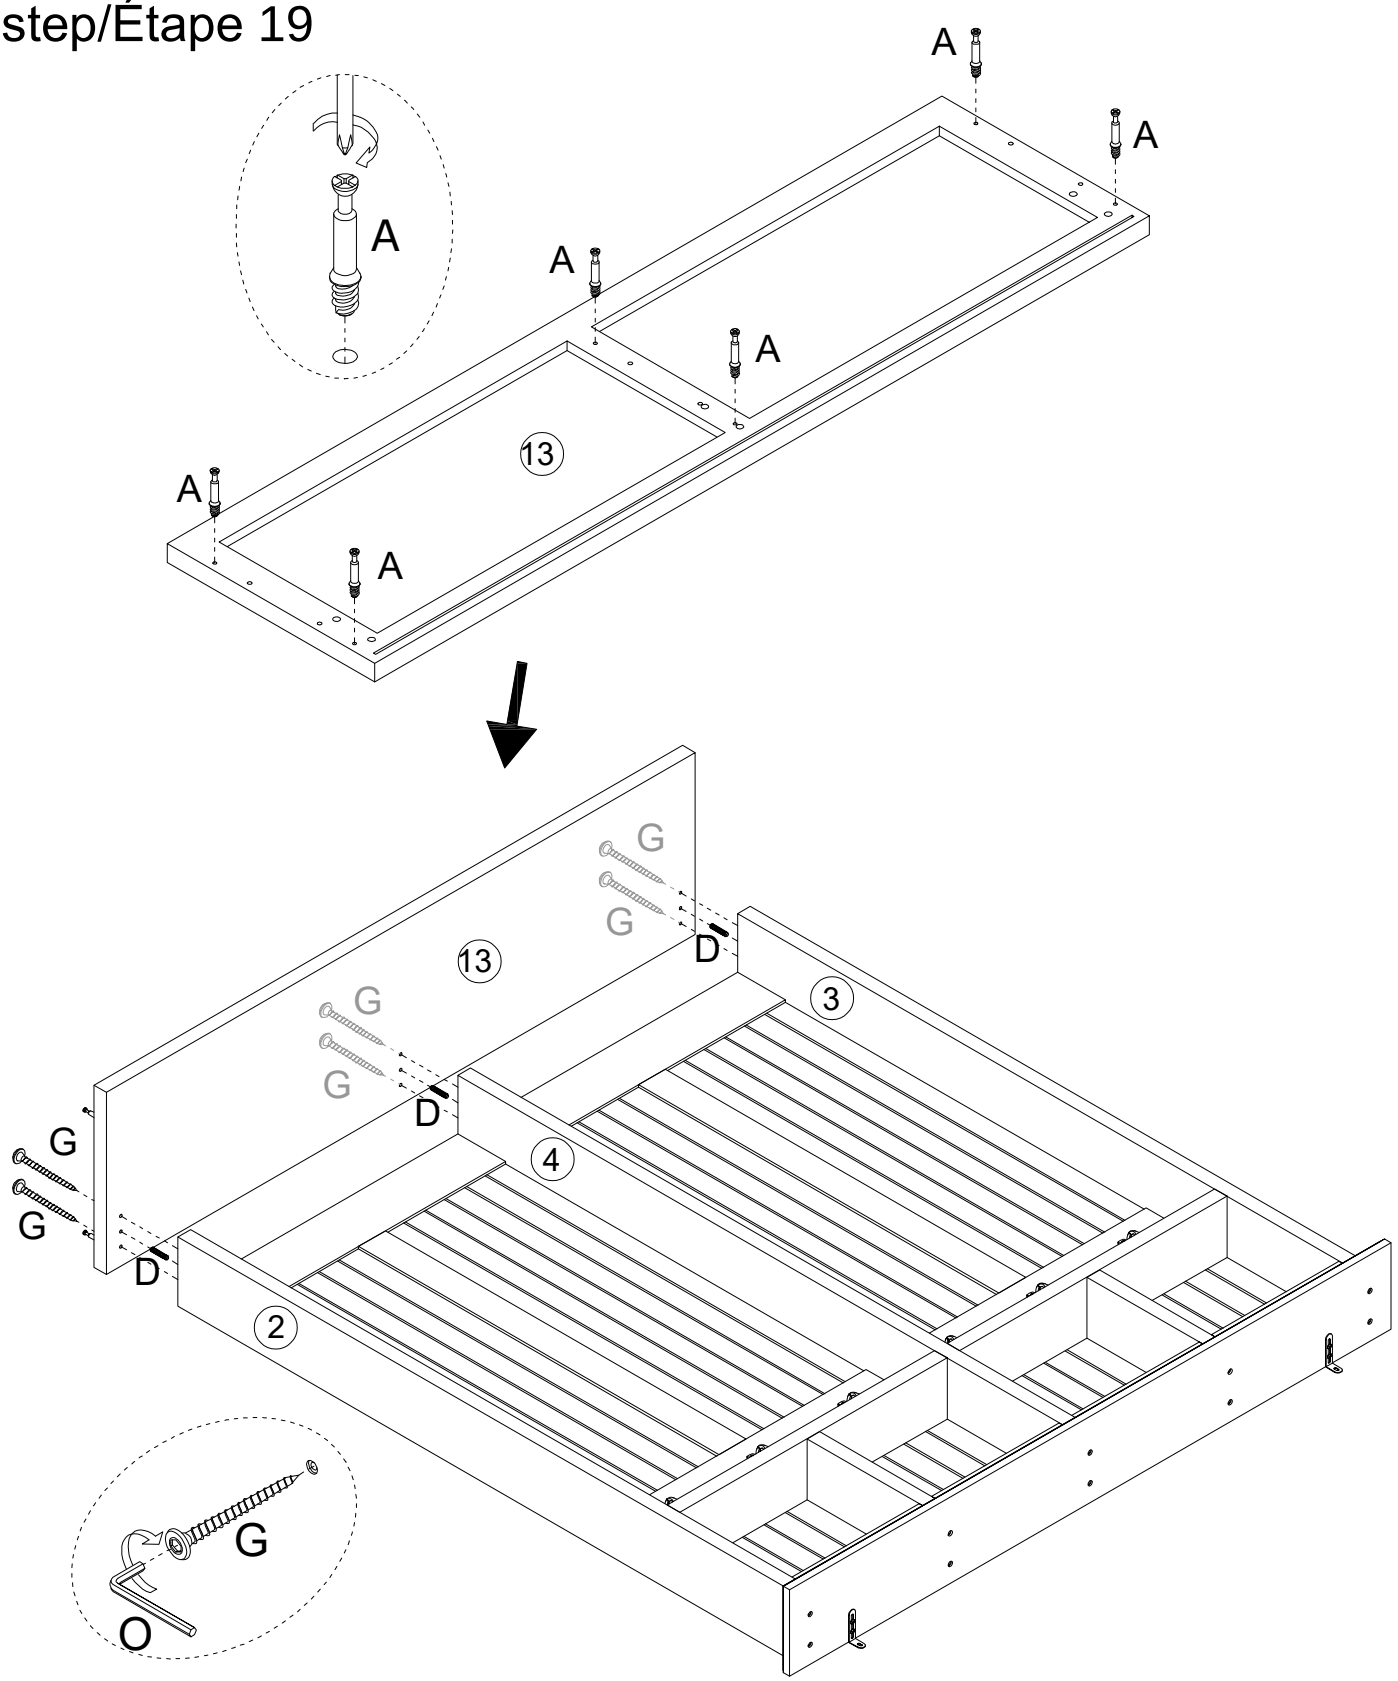

13 x1	A	D	G	O
	Ø6*35mm Cam Bolt x 6	6*30mm Dowel x 3	5*50mm Screw x 6	Wrench x 1

Assembly Instructions-Instructions montage

step/Étape 20

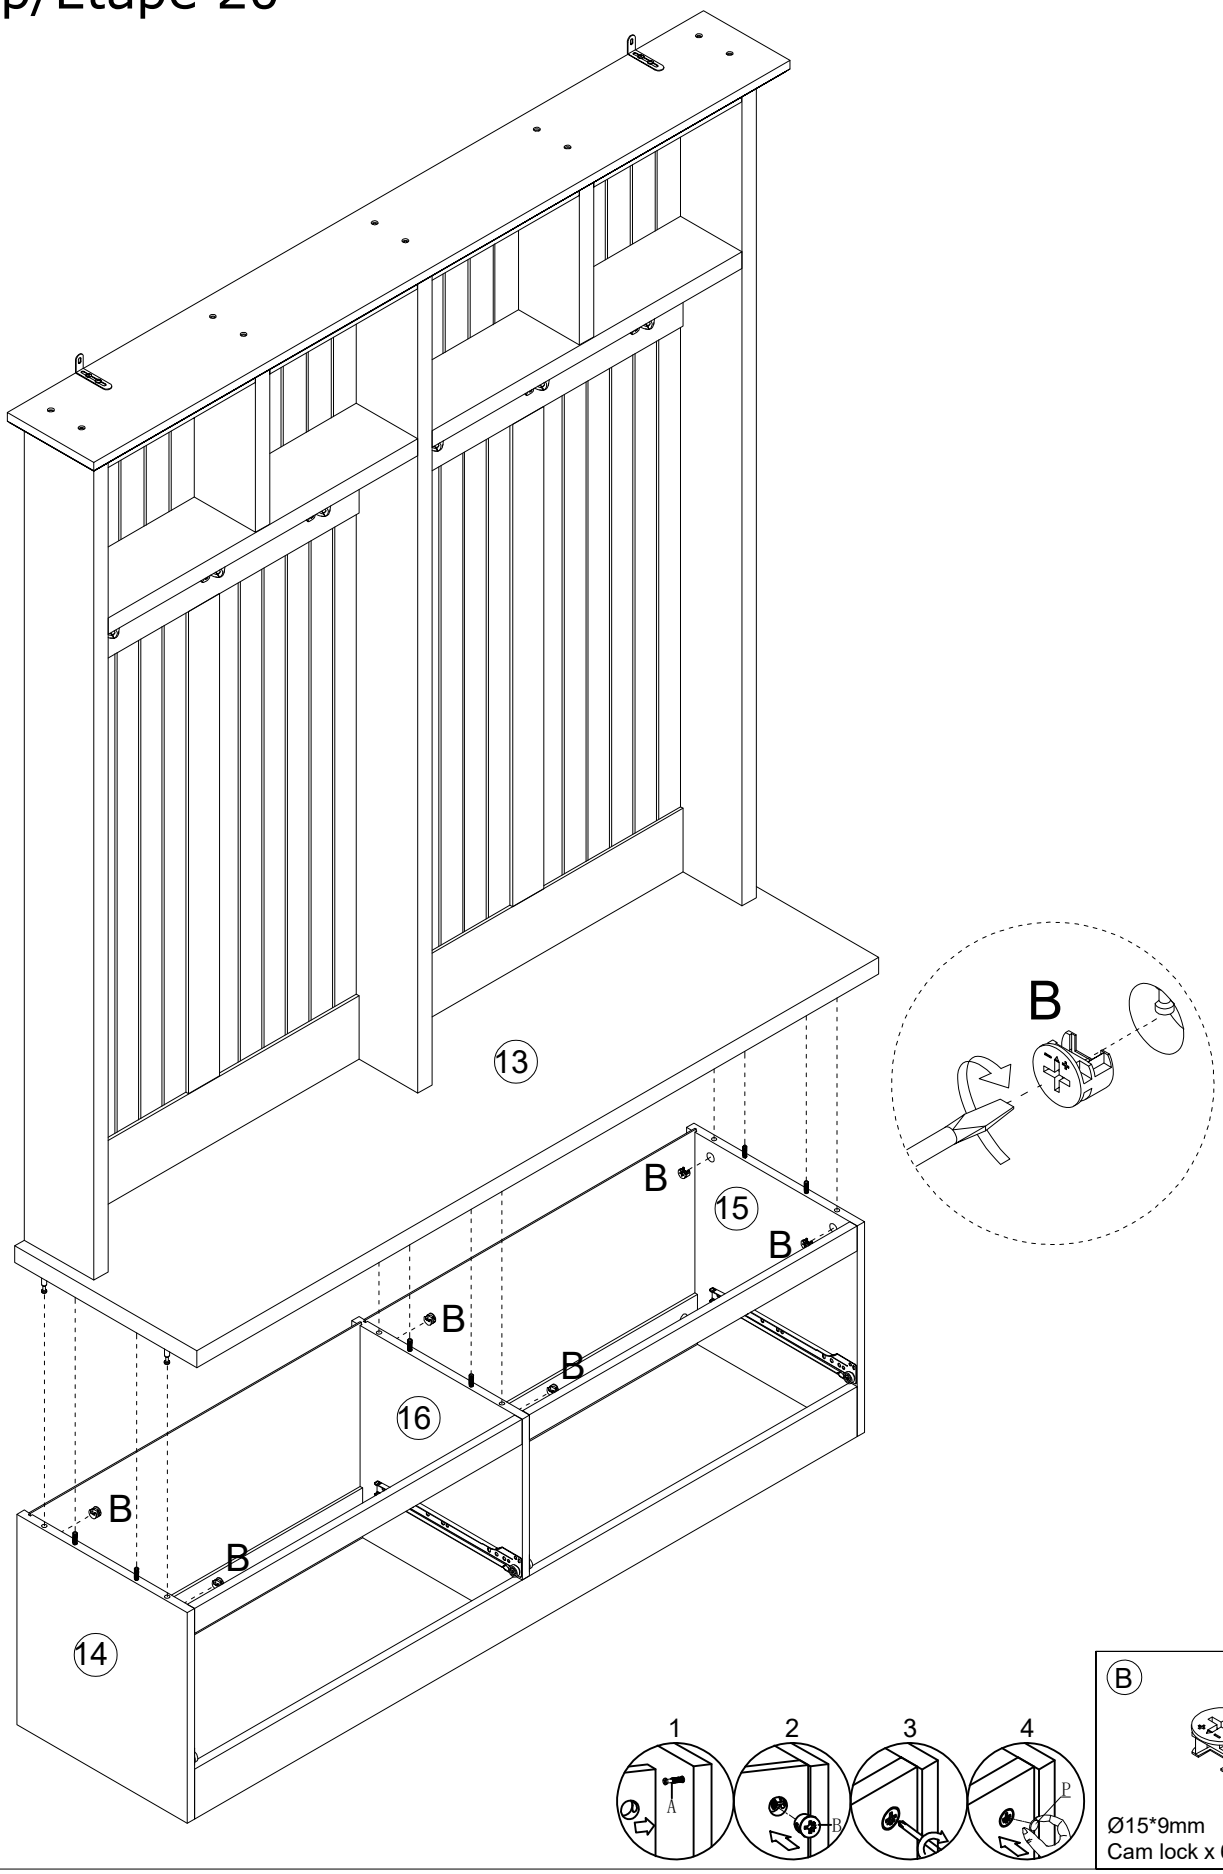


Ⓑ

Ø15*9mm
Cam lock x 6

Assembly Instructions-Instructions de montage


step/Étape 21

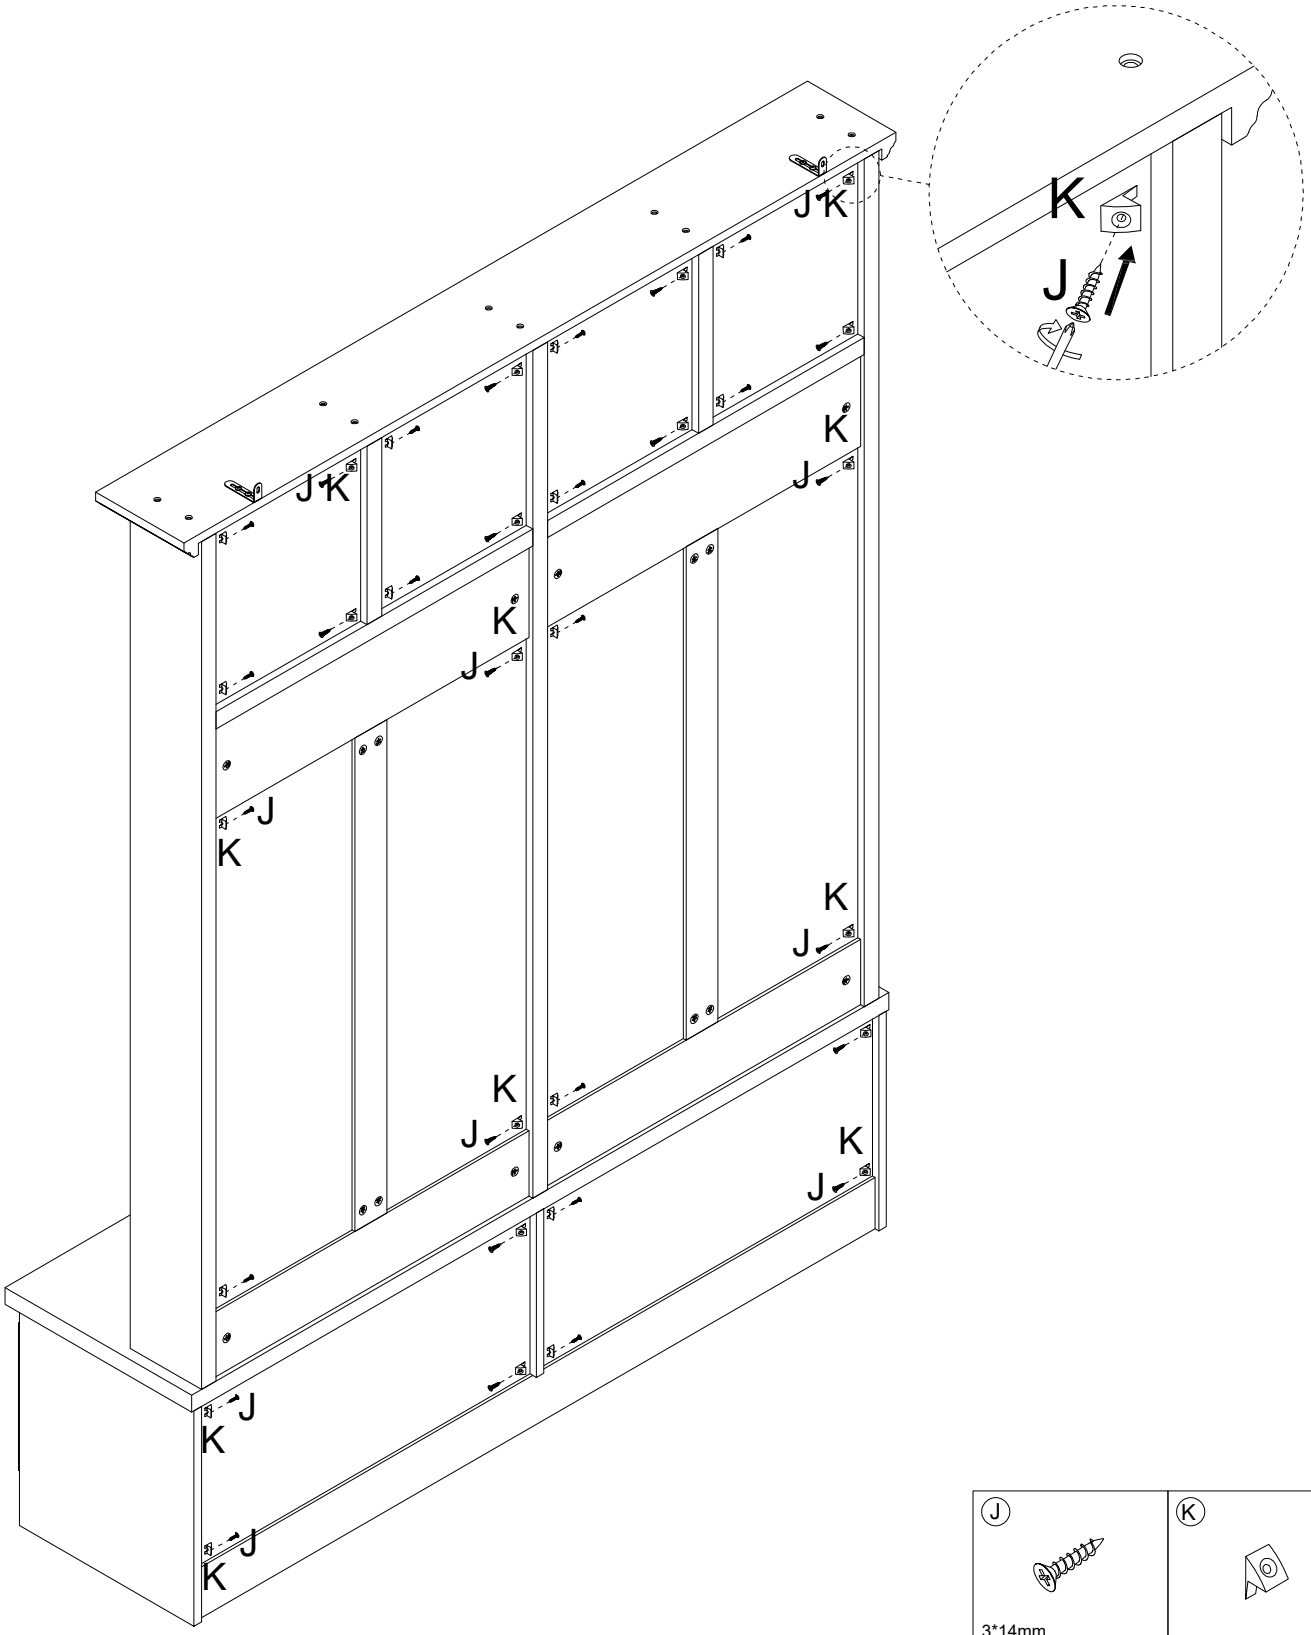

J	K
3*14mm Screw x 32	Plastic Nail x 32

Assembly Instructions-Instructions de montage


step/Étape 22

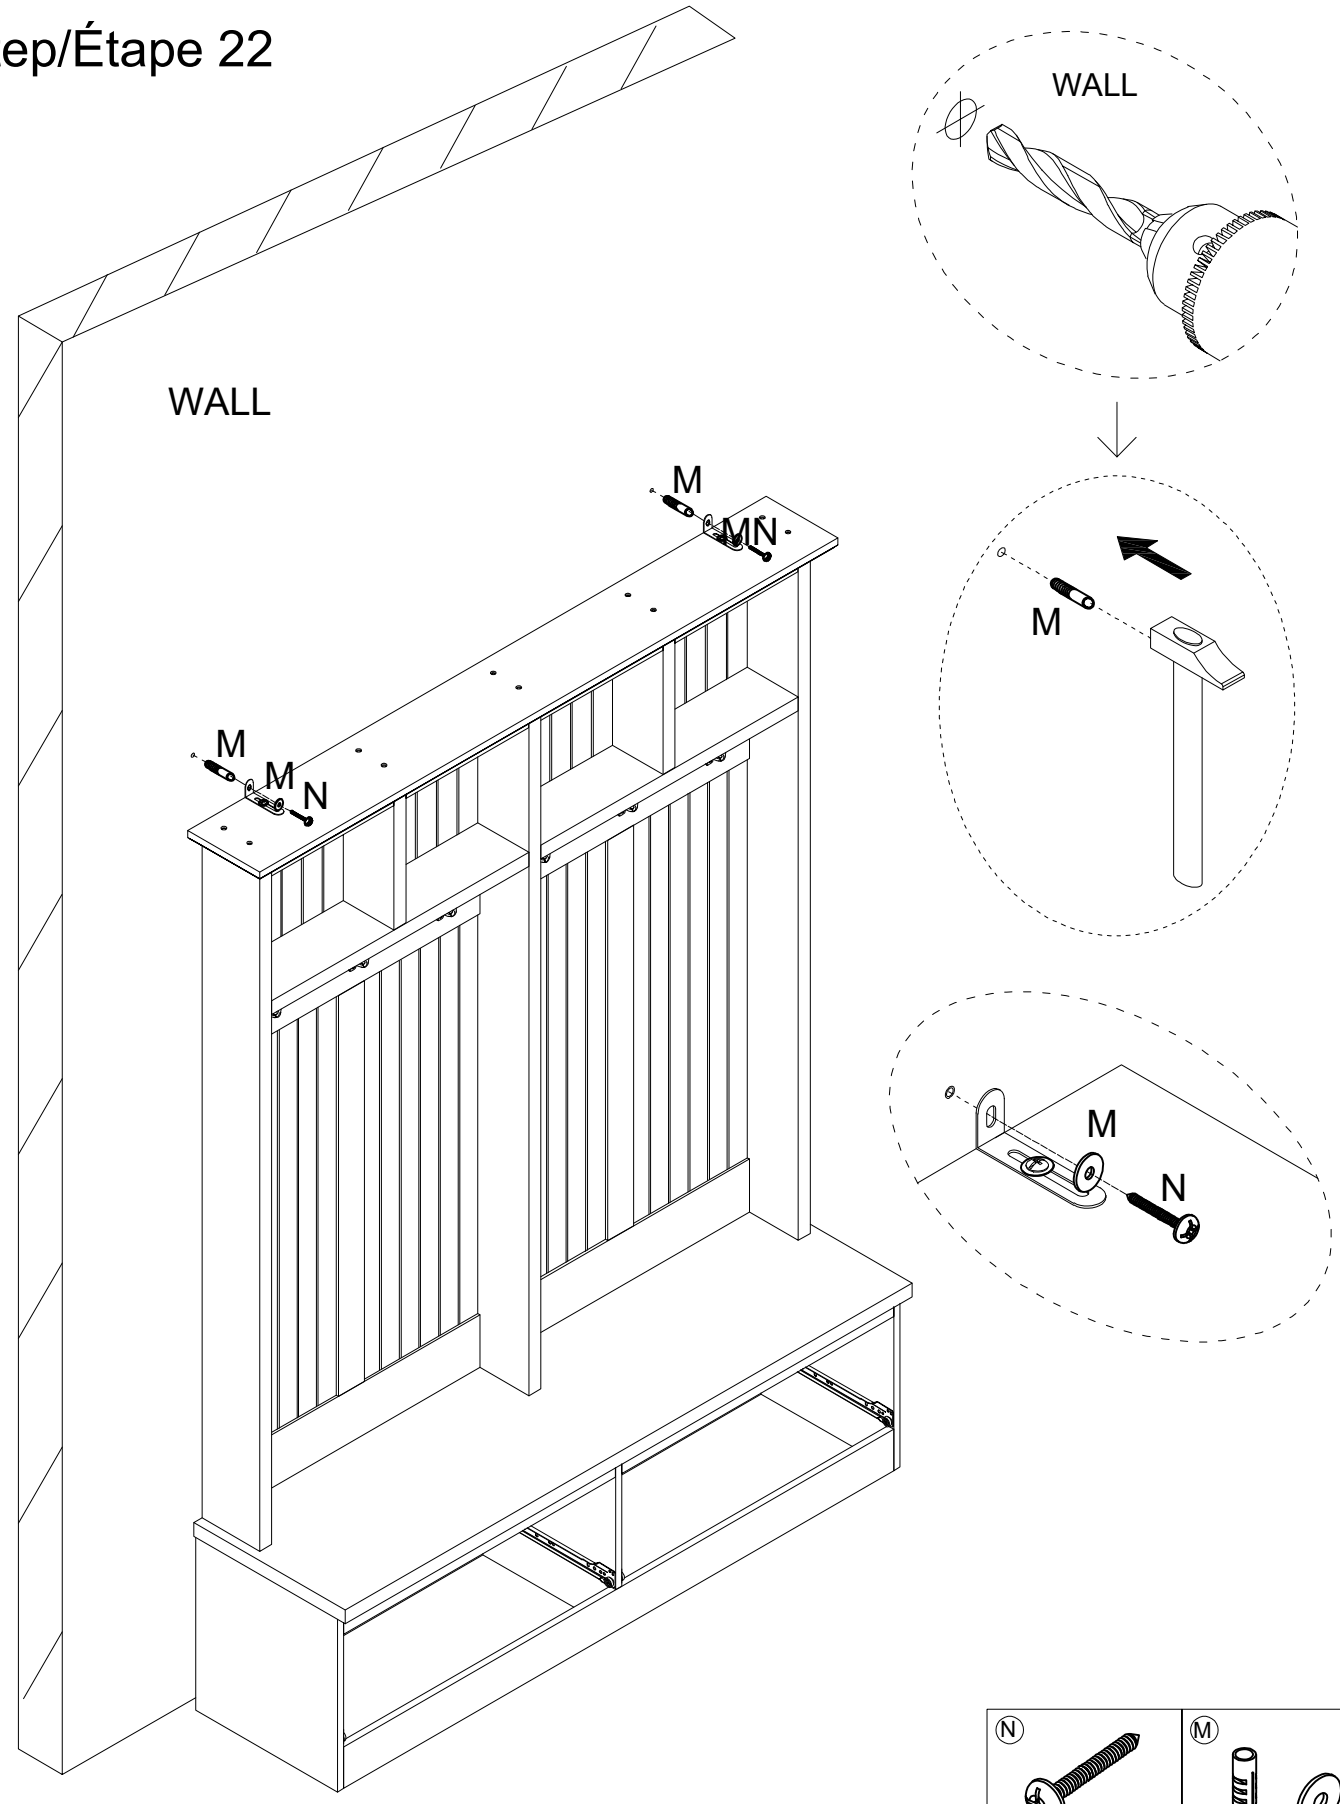


Ⓝ	Ⓜ
Ø3.9*30mm Screw x 2	Wall Anchor x 2

Assembly Instructions-Instructions montage


step/Étape 23

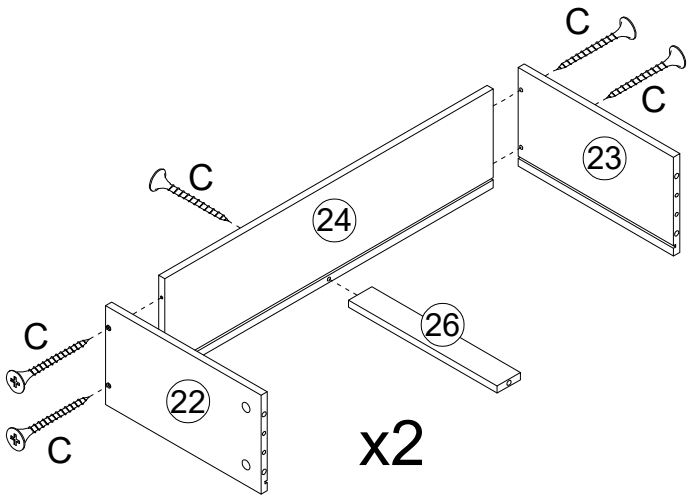


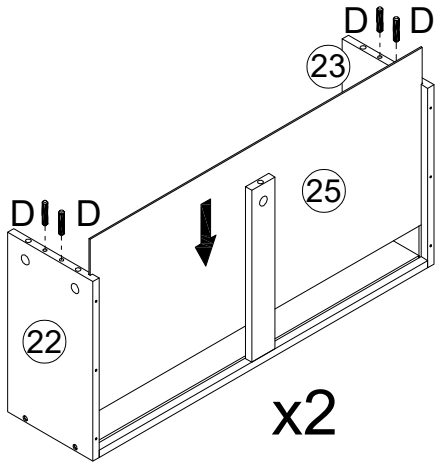


22 x2	23 x2	24 x2	25 x2	26 x2	C	D
					4*40mm Screw x 10	6*30mm Dowel x 8

step/Étape 24

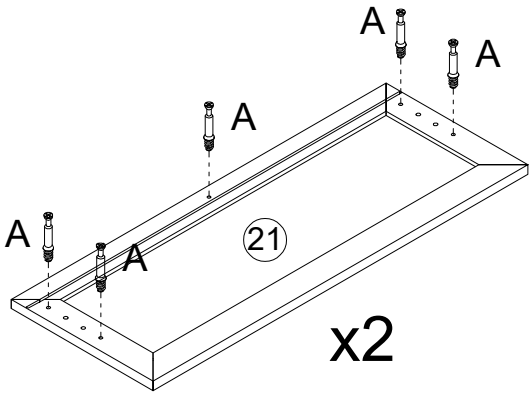

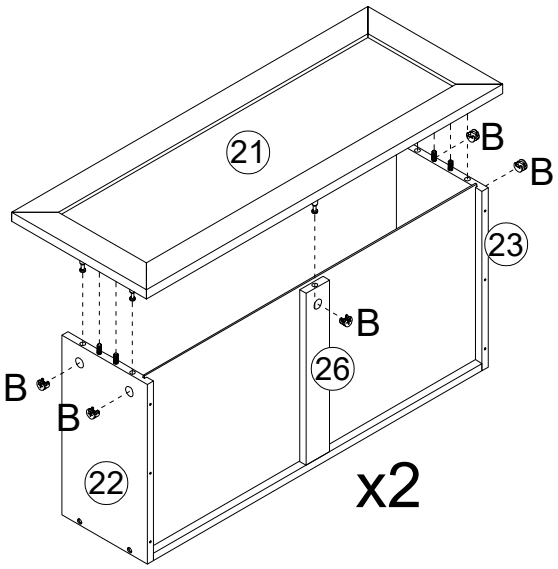


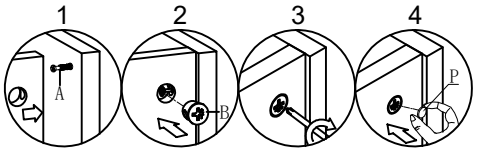



21 x2	A	B
	Ø6*35mm Cam Bolt x 10	Ø15*9mm Cam lock x 10



Assembly Instructions-Instructions montage

step/Étape 25

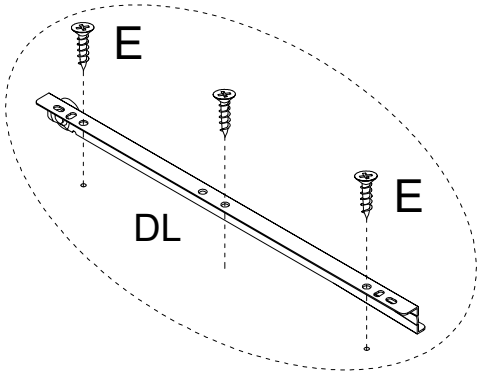

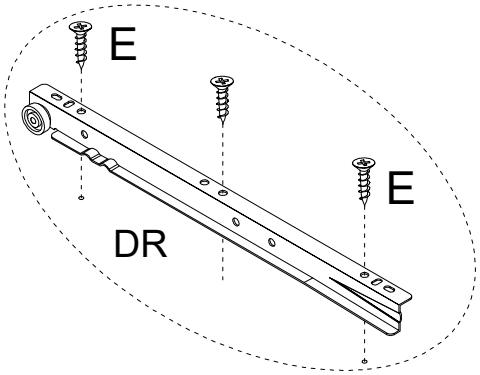


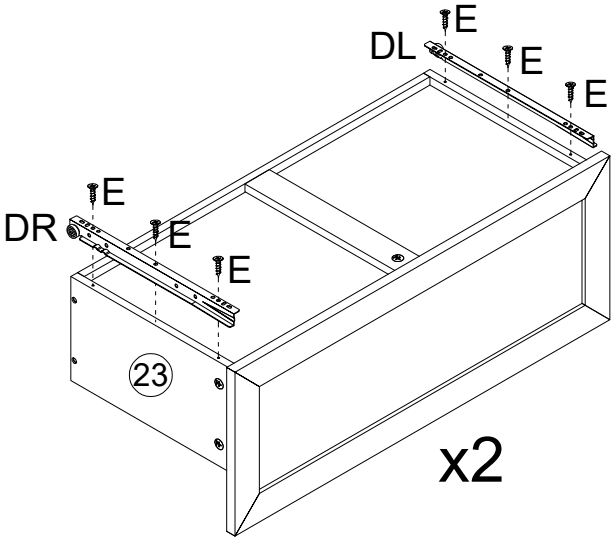

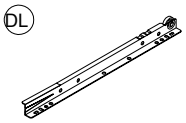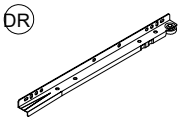(E) 	3*12mm Screw x 12
(DL) 	300mm Runner x 2
(DR) 	300mm Runner x 2

Assembly Instructions-Instructions montage

step/Étape 26

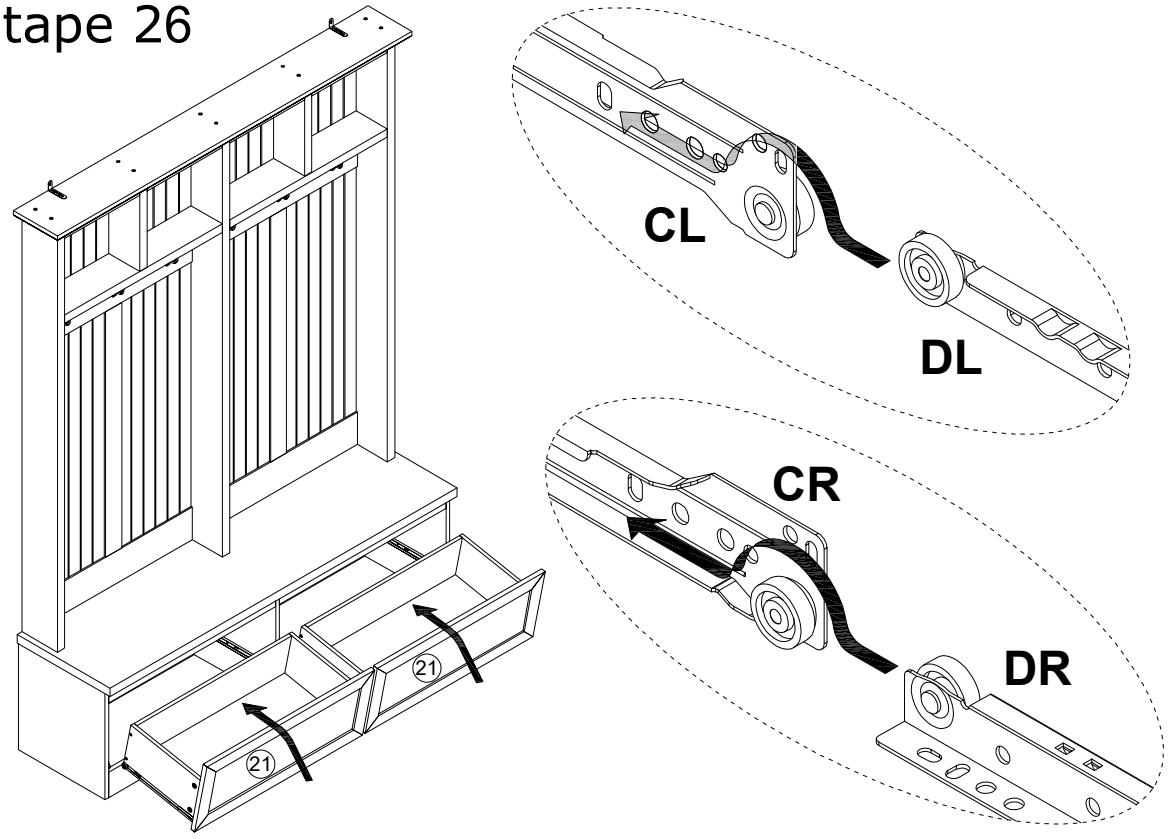

FINISH-FINITION

