






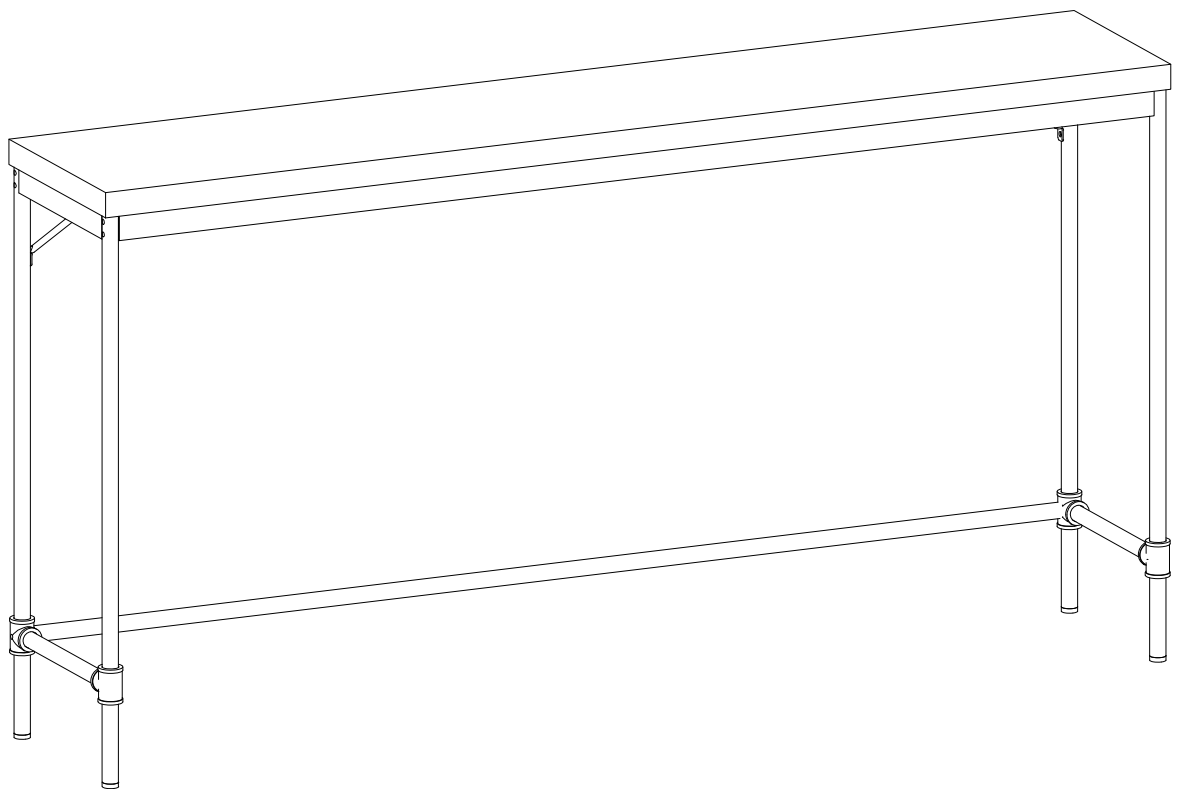

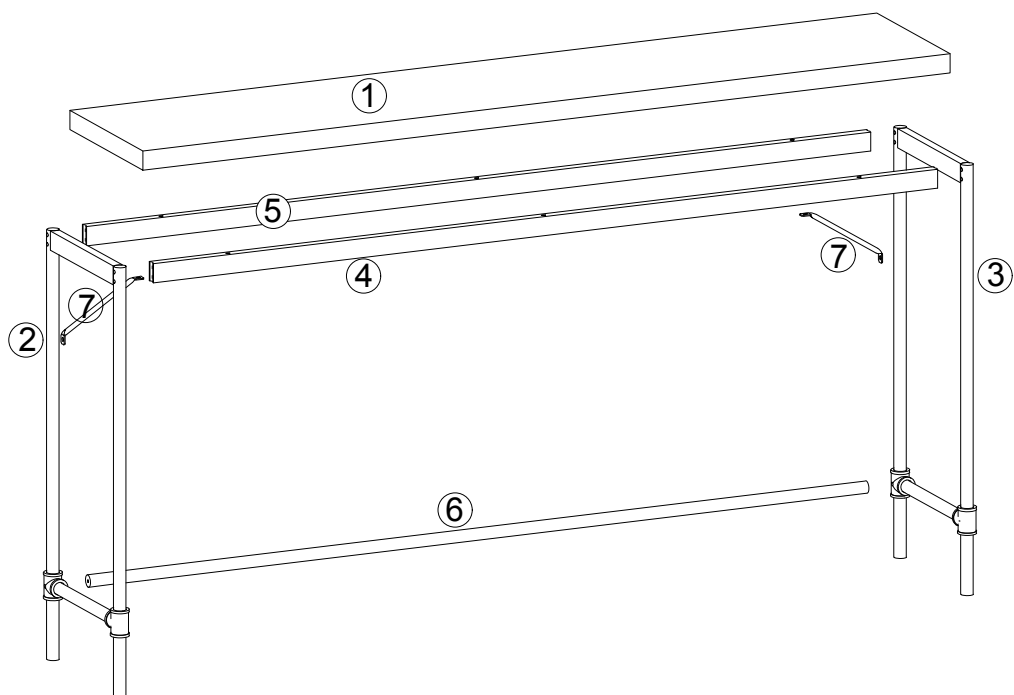


Installation Instructions





Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.




							
M6×12mm Ⓐ×4pcs+1pc	M6×45mm Ⓑ×10pcs+1pc	M6×55mm Ⓒ×6pcs+1pc	Ⓓ×4pcs	M4 Ⓔ×1pc	4×35mm Ⓕ×1pc+1pc	Ⓖ×1pc	Ⓗ×1pc

STEP 1

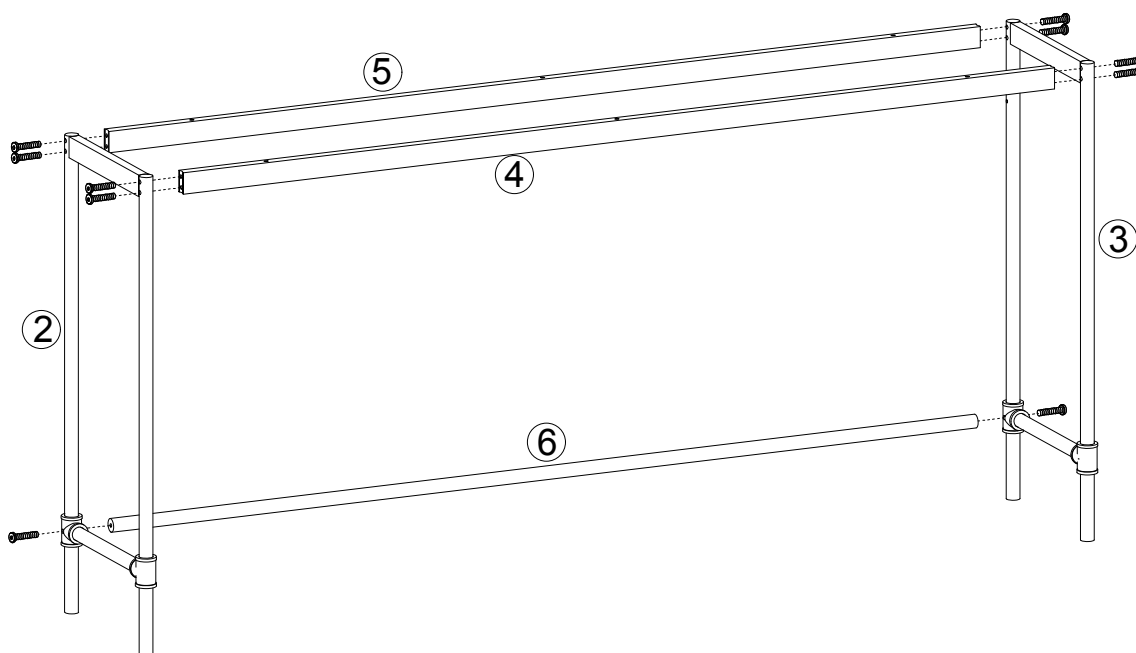



M6×45mm Ⓑ×10PC

STEP 2

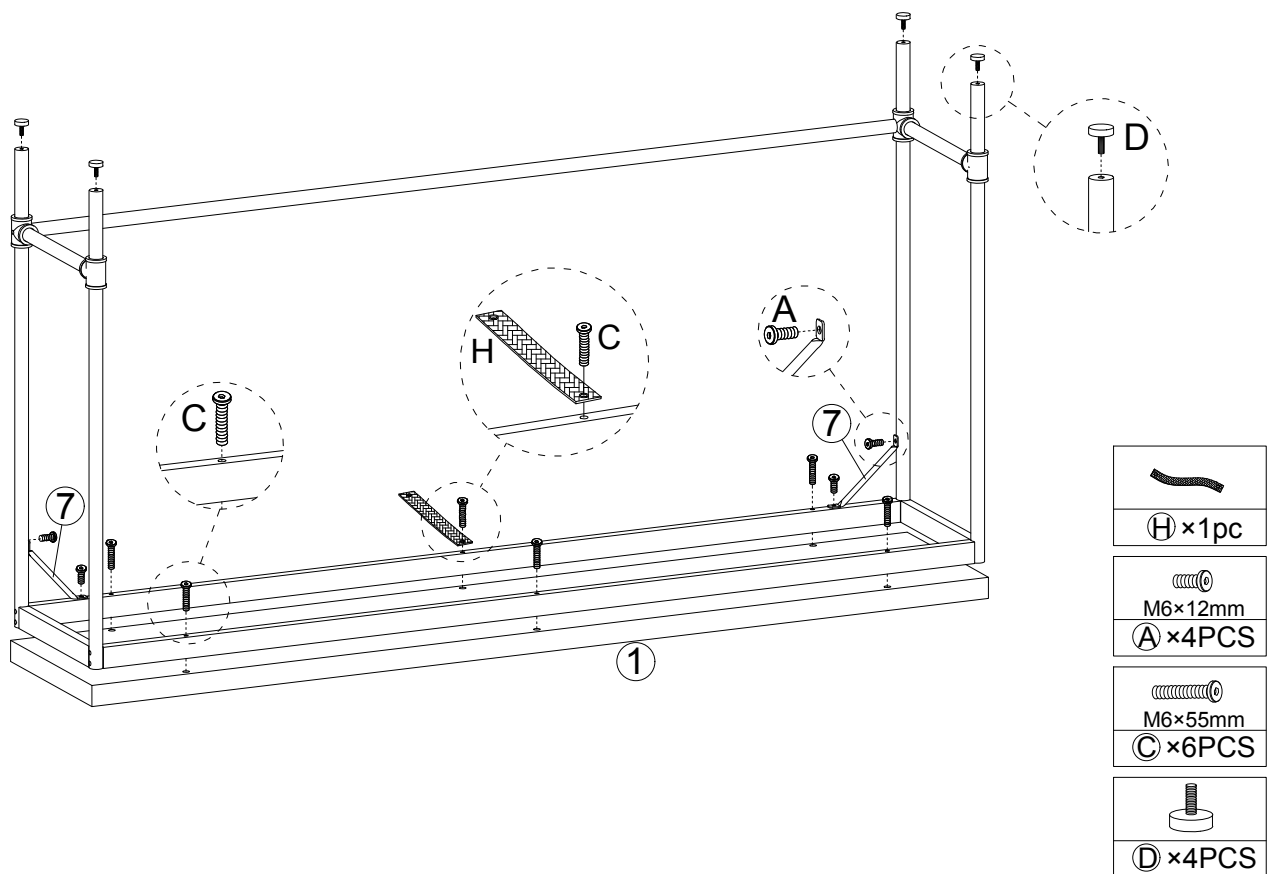

STEP 3

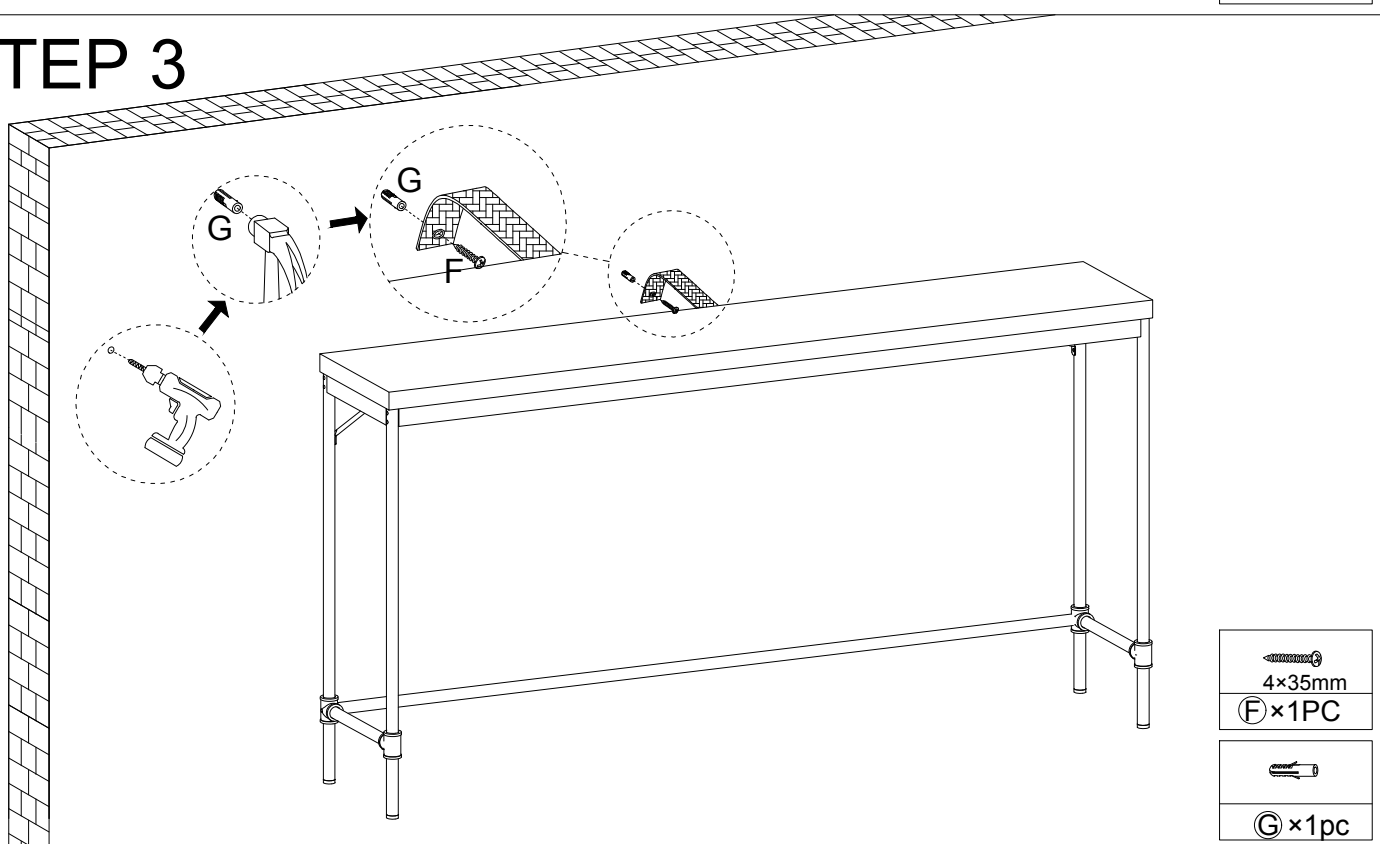

Thanks for choosing Tribesigns product, your satisfaction is our priority. If you have any installation problems or any damages caused by shipping, feel free to contact us and our friendly customer service will solve problem for you.