

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies.

Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills.

How often you apply the wax depends on how much wear the furniture receives


Part List

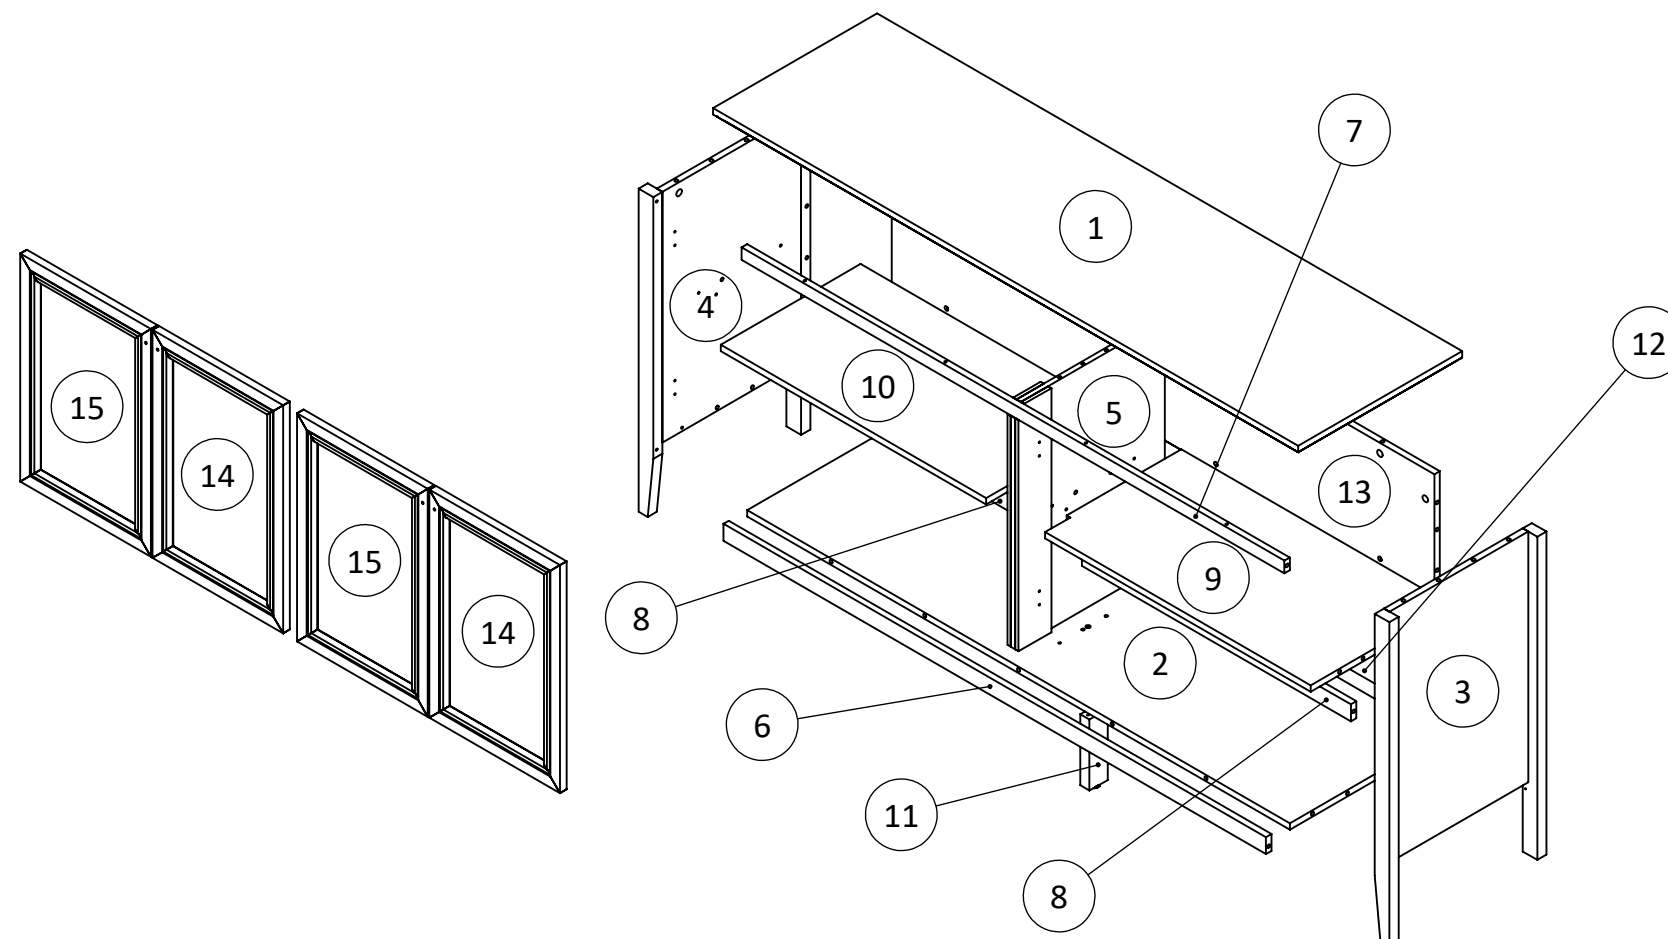

 **SAFAVIEH**
FURNITURE

Model# MED3128

Product Dimensions: W 63" X D 17.7" X H 31.5"

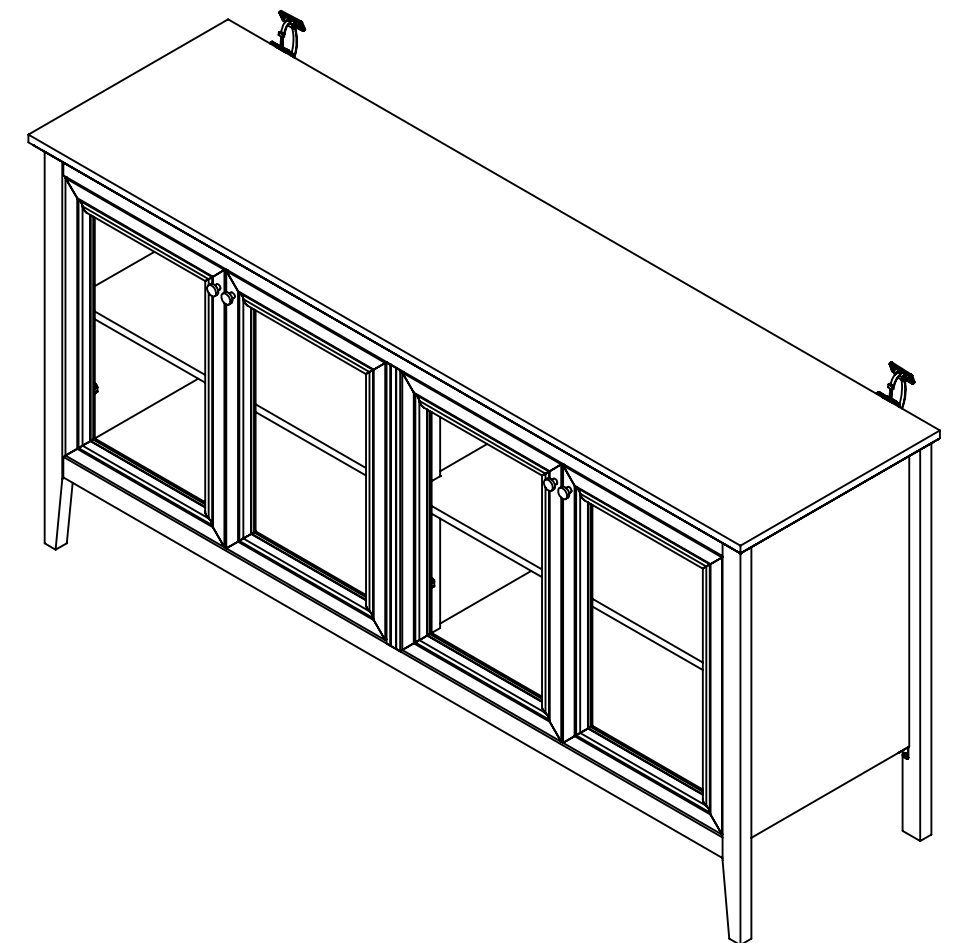

WARNING

Total Weight Capacity : 90 Lbs










Top Load Capacity : 70 Lbs





Shelf Load Capacity : 30 Lbs

Warning : do not stand on sideboard

Warning : do not over torque bolt.

Hardware List

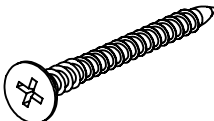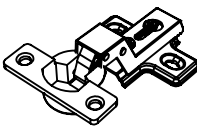HW1x41  Ø6x32 mm	HW2x4  Ø6x32 mm (Thread)	HW3x43  Ø15x12 mm	HW4x2  Ø15x9.5 mm	HW5x37  Ø8x32 mm	HW6x4  Ø6x30 mm
HW7x4  Ø9.5x11 mm	HW8x11  Ø6x50 mm	HW9x8  Ø26x83 mm Full curve hinge	HW10x32  Ø5x12 mm	HW11x4  Ø9x22 mm	HW12x4  Ø20 mm
HW13x2  30x30 mm	HW14x4  ØM3x12 mm	HW15x4  Ø8 mm	HW16x22  Ø20 mm		

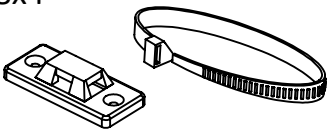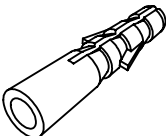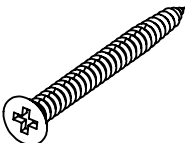ANTI-TIP Restrain pack	
HW17x4  Ø6x15 mm	HW18x4  300 mm
HW19x4  Ø8x35 mm	HW20x4  Ø10x50 mm


Part List & HW

Piece	Description	Qty	Carton Call
1	Top Panel	1	1 of 2
2	Bottom Panel	1	1 of 2
3	Side panel - right	1	2 of 2
4	Side panel - left	1	2 of 2
5	Center panel	1	2 of 2
6	Plint - lower	1	1 of 2
7	Plint - upper	1	1 of 2
8	Plint support shelf - right/left	2	2 of 2
9	Fixed shelf - right	1	2 of 2
10	Fixed shelf - left	1	2 of 2
11	Center leg	1	2 of 2
12	Back panel - lower	1	1 of 2
13	Back panel - upper	1	1 of 2
14	Door panel - right	2	2 of 2
15	Door panel - left	2	2 of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32 mm	41	1 of 1
HW2	Cambolt Ø6x32 mm (Thread)	4	1 of 1
HW3	Camlock Ø15x12 mm	43	1 of 1
HW4	Camlock Ø15x9.5 mm	2	1 of 1
HW5	Wooden dowel big 8x32 mm	37	1 of 1
HW6	Wooden dowel small 6x30 mm	4	1 of 1
HW7	Cross dowel Ø9.5x11 mm	4	1 of 1
HW8	Screw M6x50 mm	11	1 of 1
HW9	Full curve hinge Ø26x83 mm	8	1 of 1
HW10	Screw M5x12 mm	32	1 of 1
HW11	Panhead Ø9x22 mm	4	1 of 1
HW12	Handle Ø20 mm	4	1 of 1
HW13	Plate support 30x30 mm	2	1 of 1
HW14	Screw M3x12 mm	4	1 of 1
HW15	Bumpers Ø8 mm	4	1 of 1
HW16	Cover cap sticker Ø20 mm	22	1 of 1
HW17	Screw M6x15 mm	4	1 of 1
HW18	Anti-tip 300 mm	2	1 of 1
HW19	Fisher "S" 8 x 35 mm	4	1 of 1
HW20	Screw M10 x 50 mm	4	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

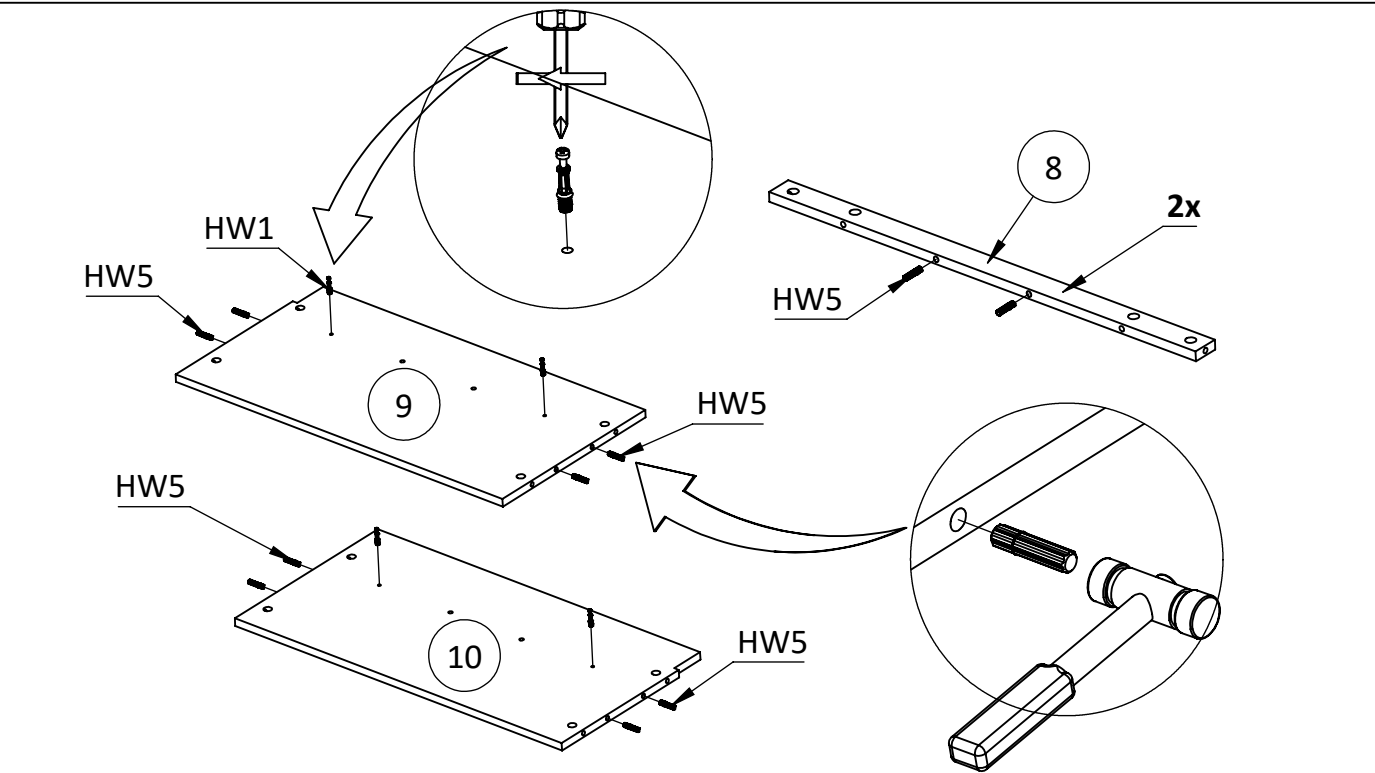


STEP1: Insert Cambolt (HW1) and Wooden Dowel big (HW5) Into fixed shelf - right (9), fixed shelf - left (10) and plint Support shelft (8).

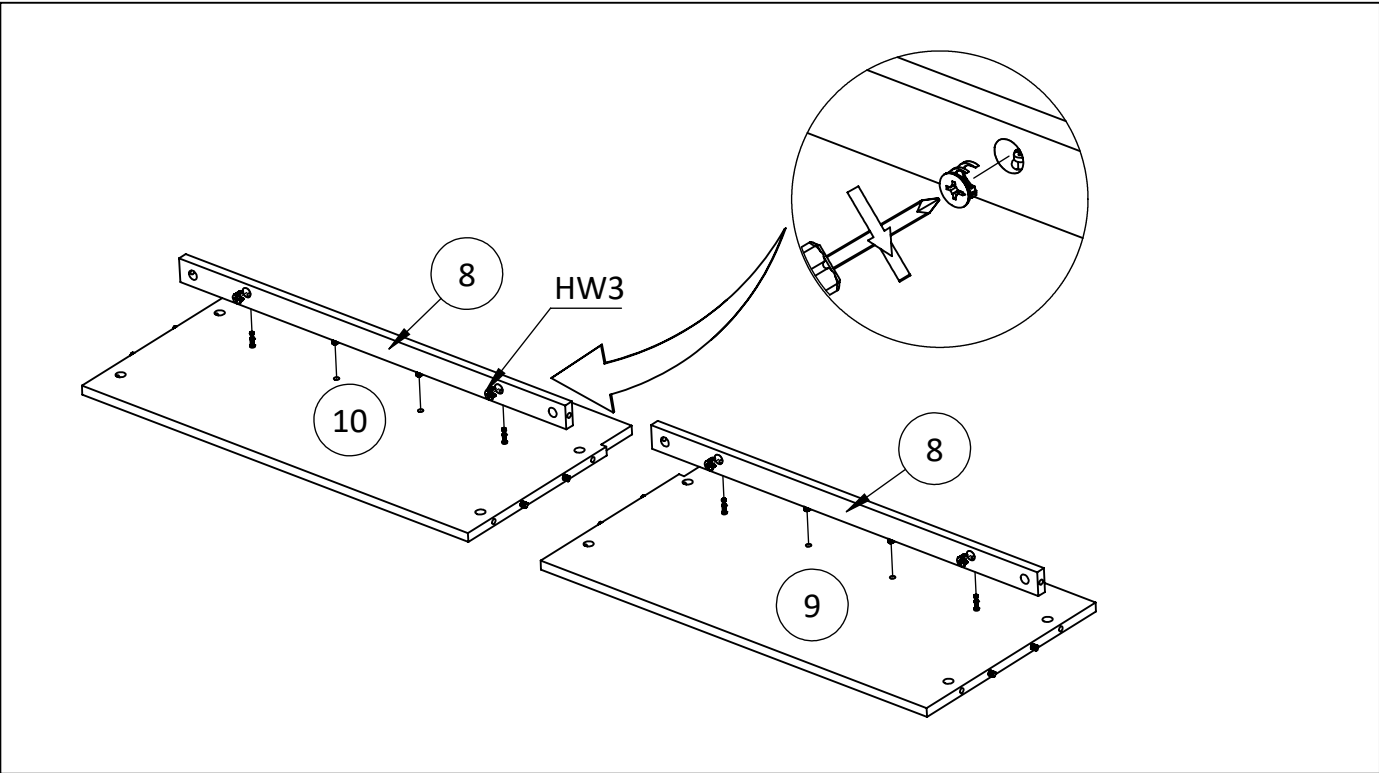


STEP2: Attach plint Support shelf right/left (8) into fixed shelf -right (9) and fixed shelf - left (10) Secure with Camlock (HW3) tighten it using screwdriver.

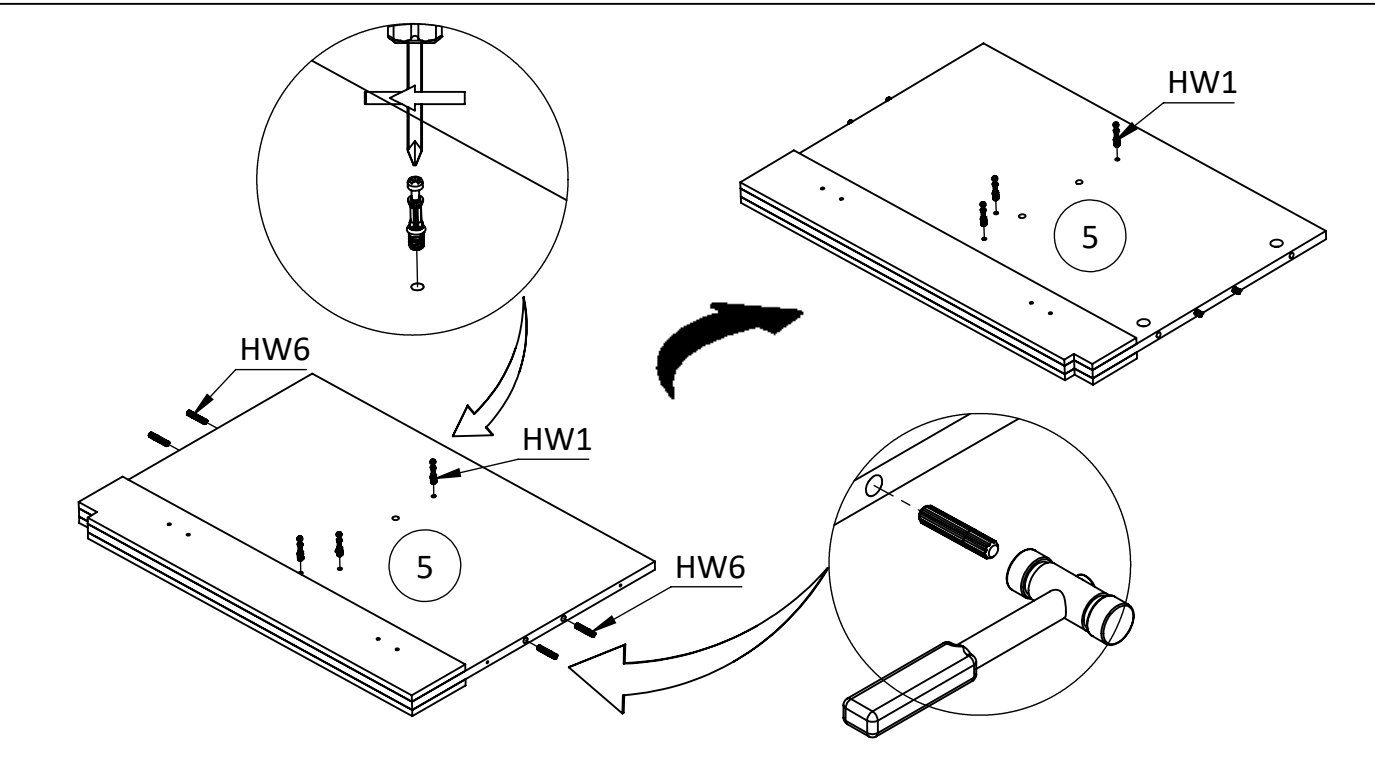


STEP3: Insert Cambolt (HW1) and Wooden Dowel small (HW6) Into center panel (5) tighten it using screwdriver.

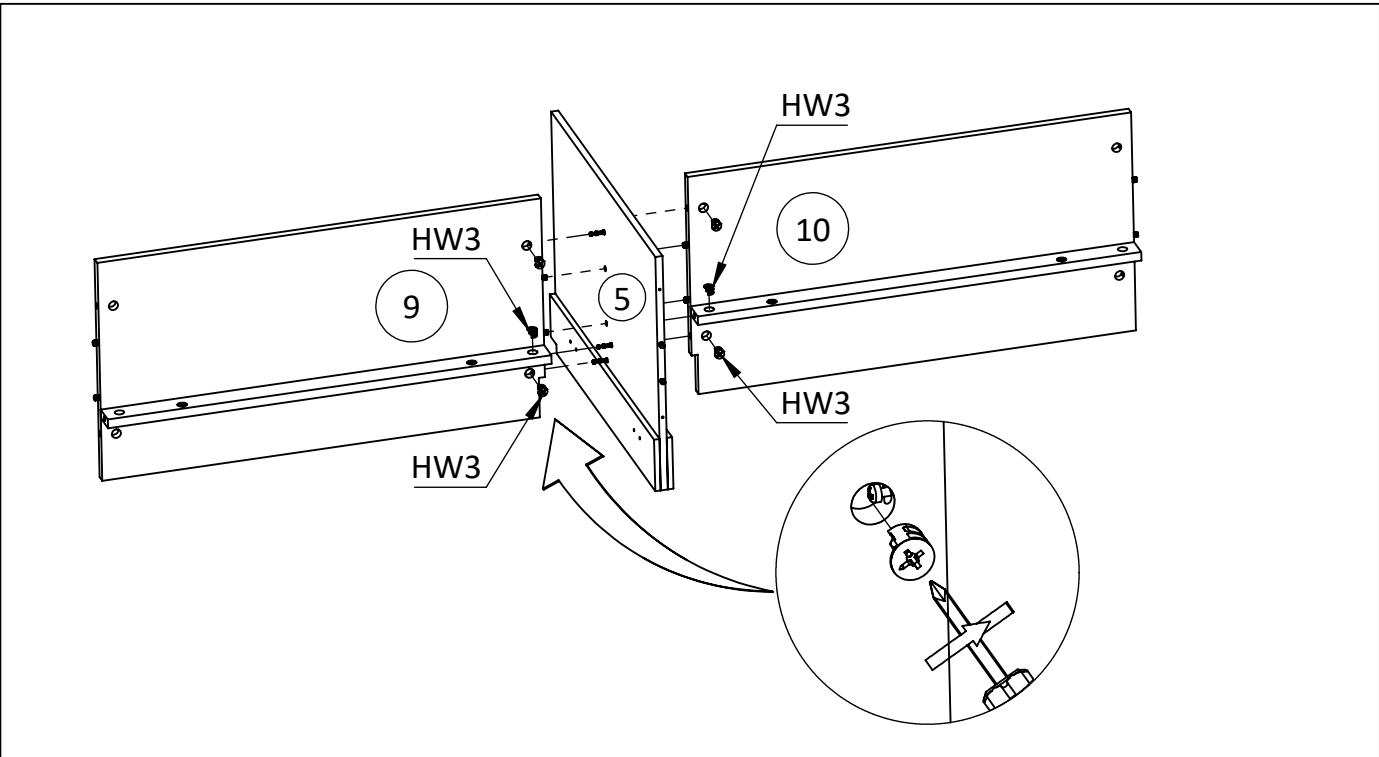


STEP4: Attach fixed shelf - right (9) and fixed shelf - left (10) into center panel (5) seure with Camlock (HW3) tighten it using screwdriver.

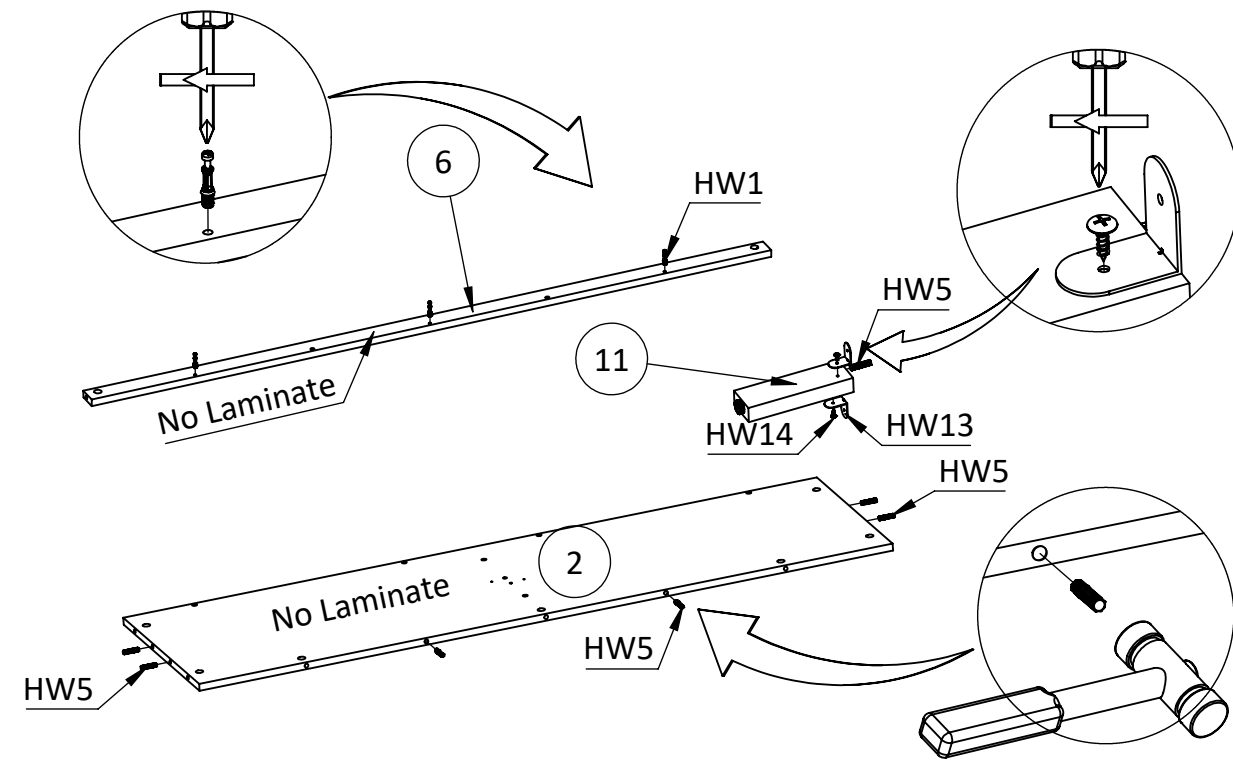


STEP5: Insert wooden dowel (HW5) into bottom panel (2) and center leg (11). insert cambolt (HW1) Into plint - lower (6). Insert plate support 30x30 mm (HW13) into center leg (11) secure with screw M3x12 mm (HW14) tighten it using screwdriver.

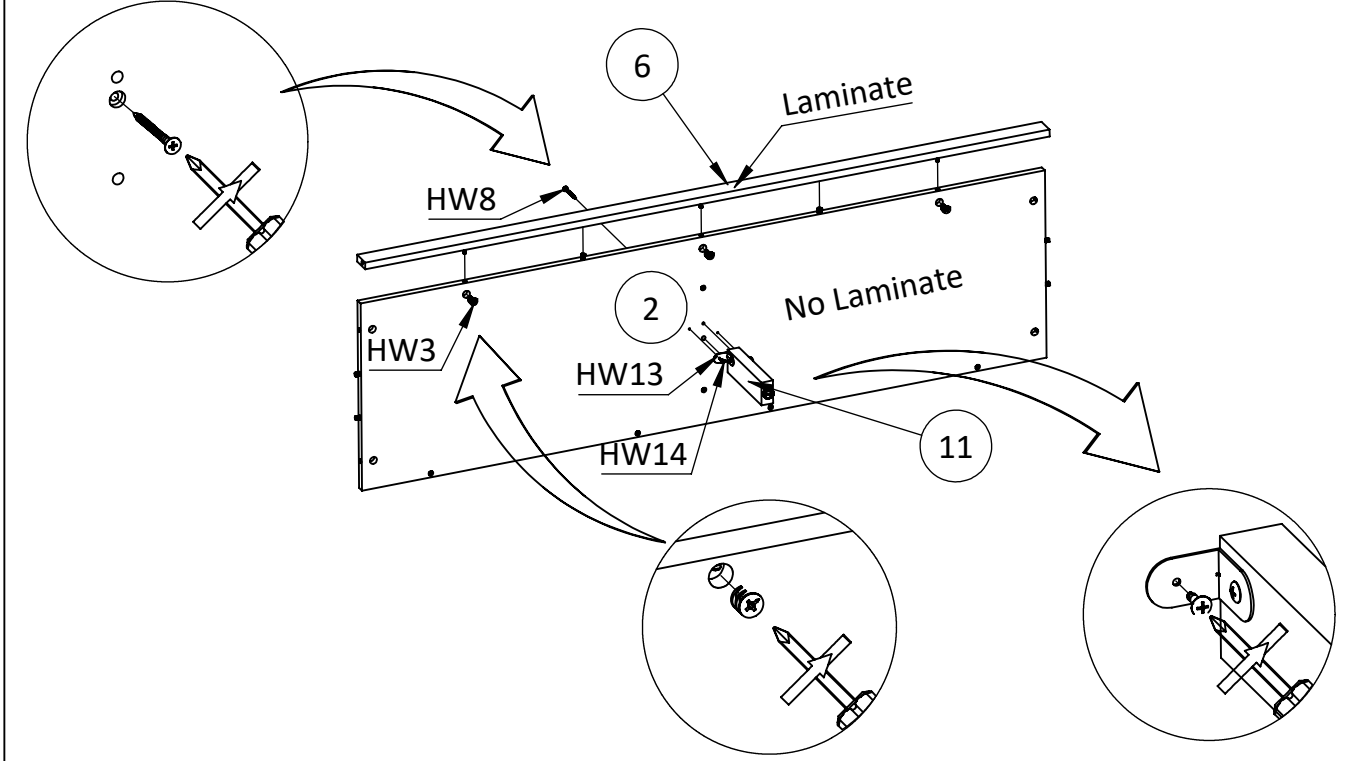


STEP6: Attach plint - lower (6) Bottom Panel (2) Secure with Camlock (HW3). attach center leg (11) into bottom panel (2) screw M6x50 mm (HW8). And secure with plate support 30x30 mm (HW13) with screw M3x12 mm (HW14) and tighten the second screw it using screwdriver.

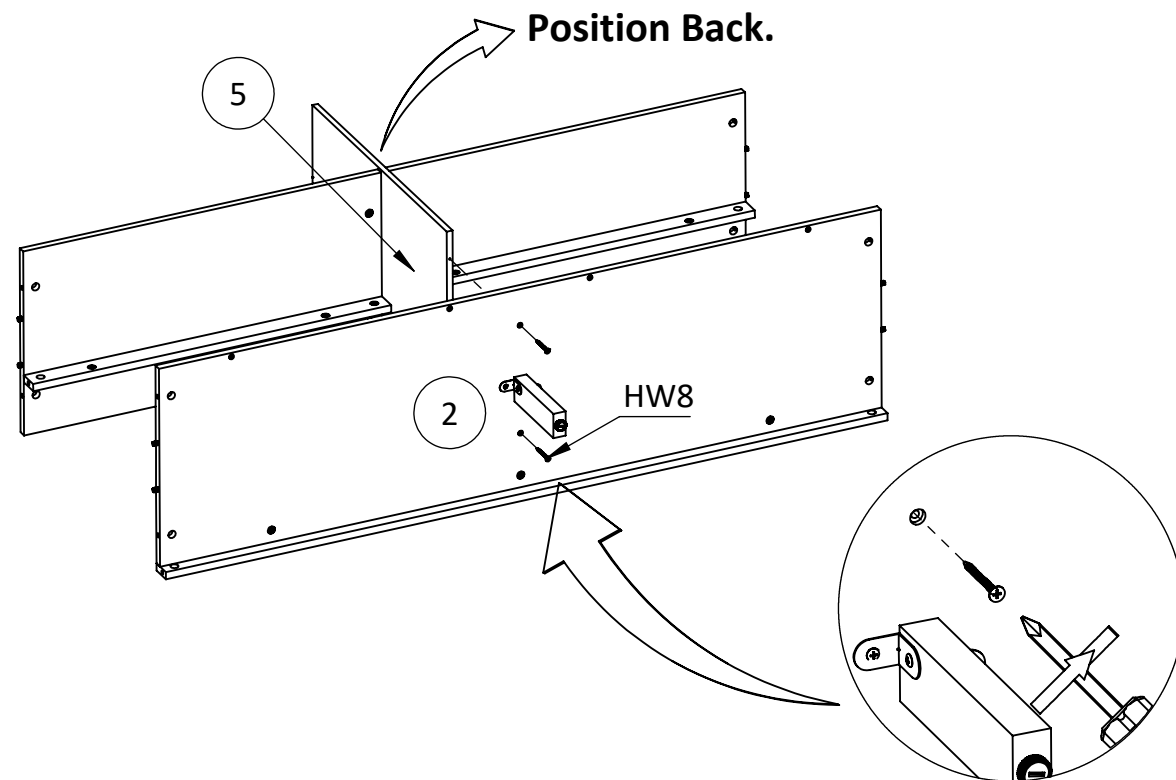


STEP7: Attach bottom panel (2) into center panel (5) secure with screw M6x50 mm (HW8) tighten it using screwdriver.

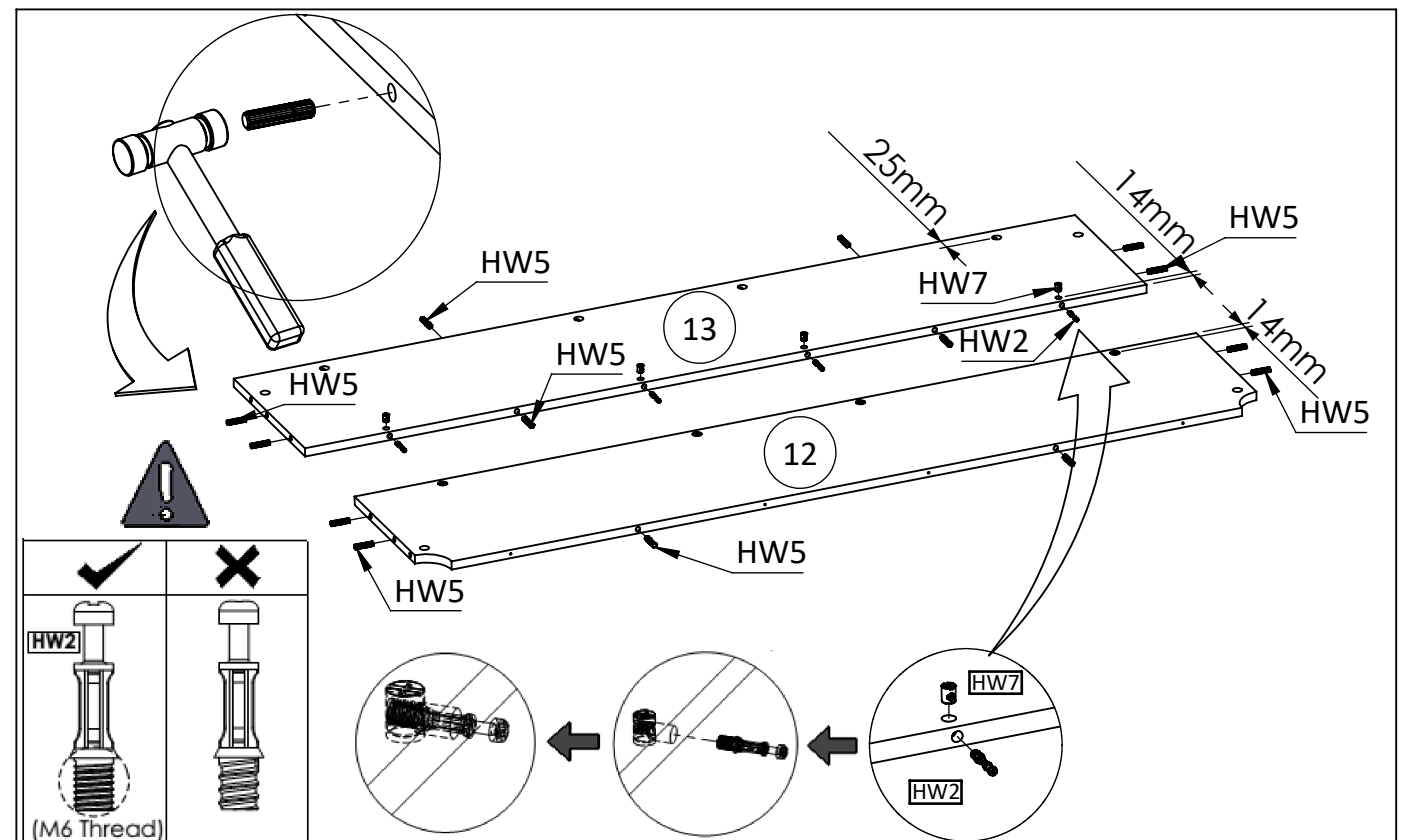


STEP8: Insert wooden dowel big (HW5) into back panel - upper (12) and back panel - lower (13) continue insert cross dowel (HW7) into back panel - lower (13) secure with cambolt (M6 thread) (HW2) tighten it using screwdriver.

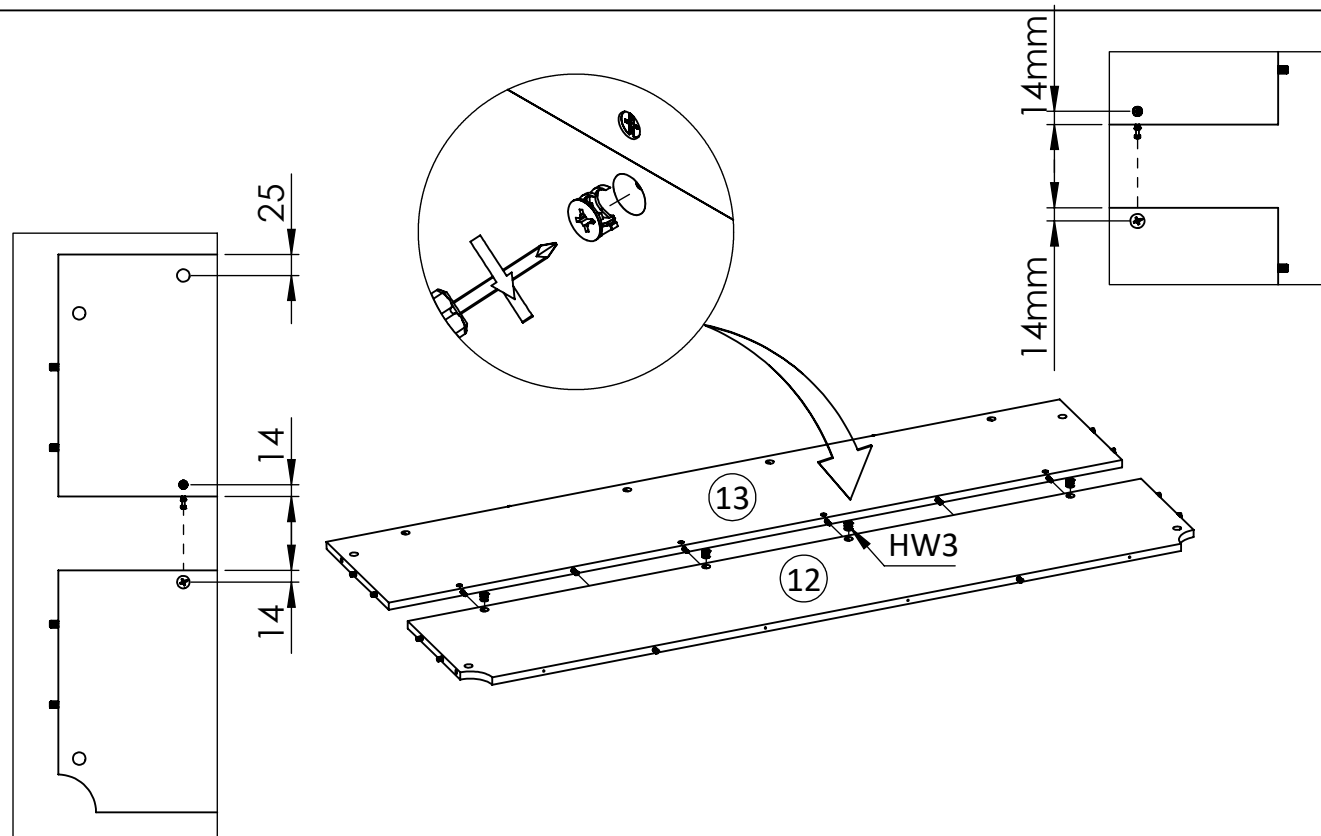


STEP9: Insert back panel - lower (12) into back panel - upper (13) secure with camlock (HW3) tighten it using screwdriver.

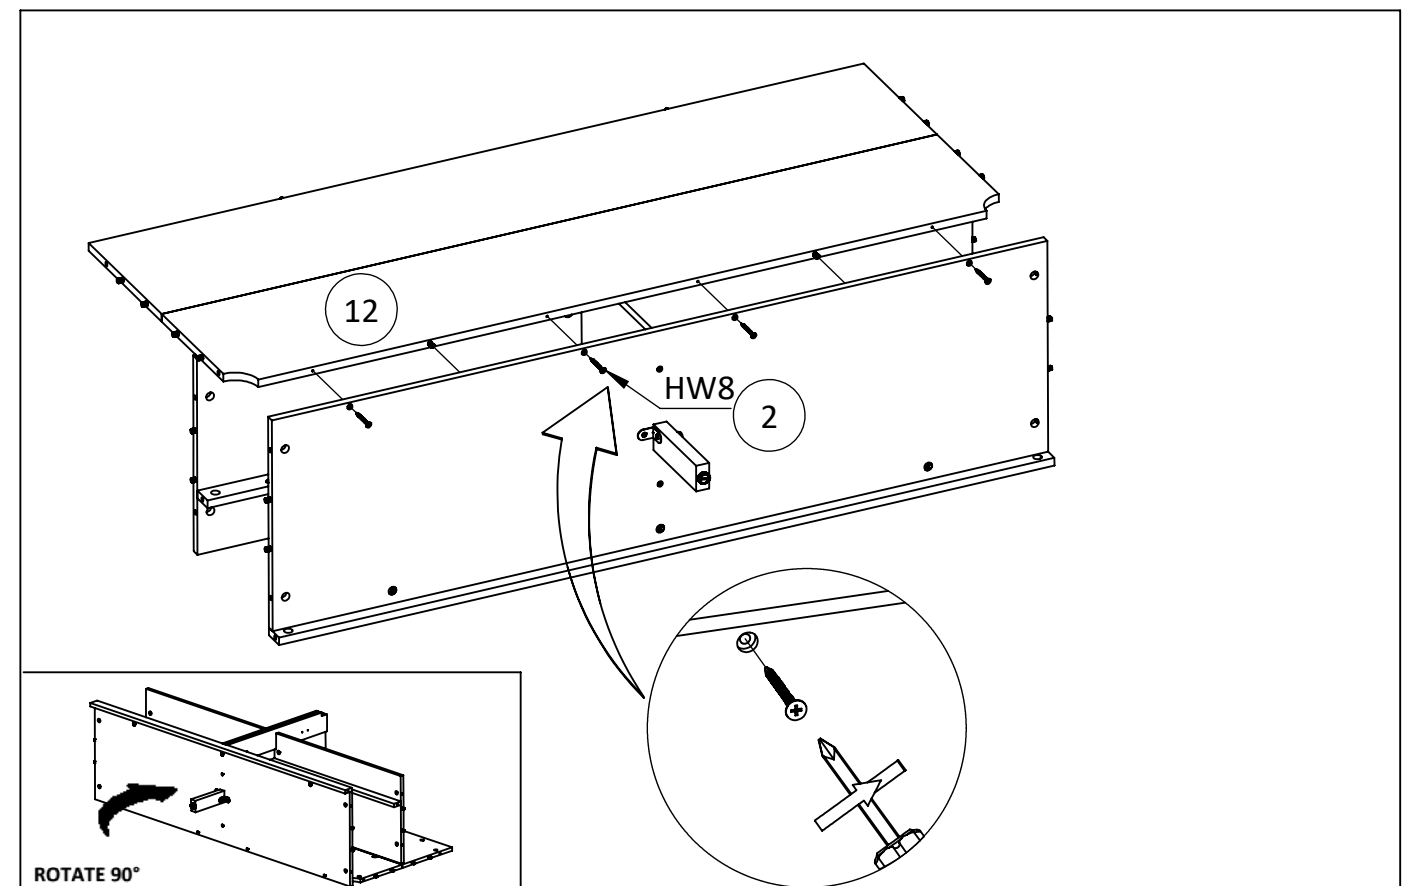


STEP10: Attach back panel - lower (12) into bottom panel (2) secure with screw M6x50 mm (HW8) Tighten it using Screwdriver.

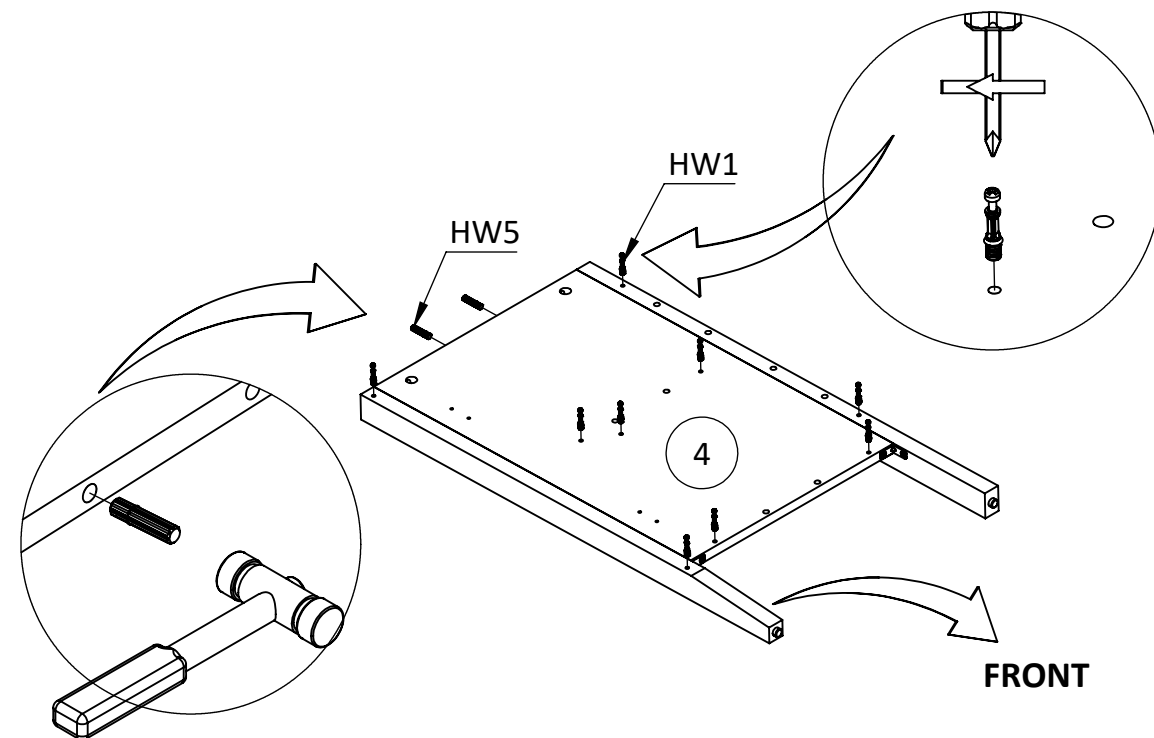


STEP11: Insert cambolt (HW1) into side panel - left (4) Tighten It Using Screwdriver.

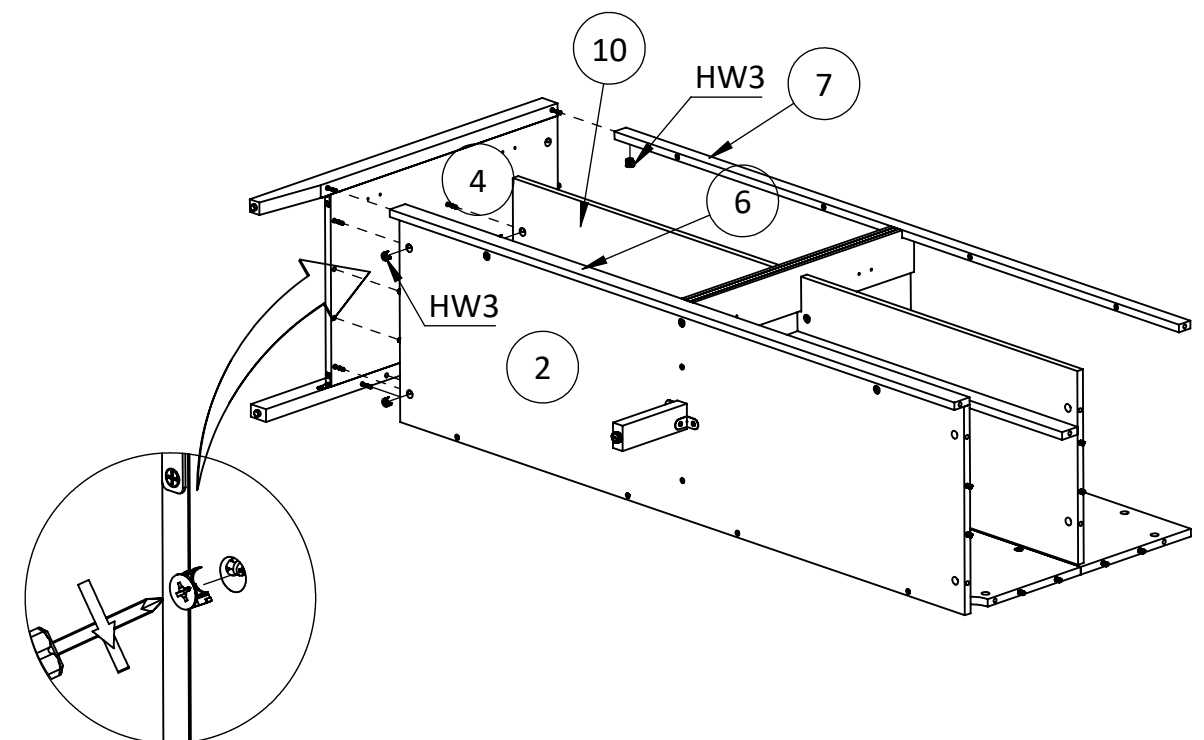

STEP12: Insert side panel - left (4) into bottom panel (2), fixed shelf - left (10), plint - upper (7), plint lower (6) and plint support shelf (8) secure with camlock (HW3) tighten it using screwdriver.

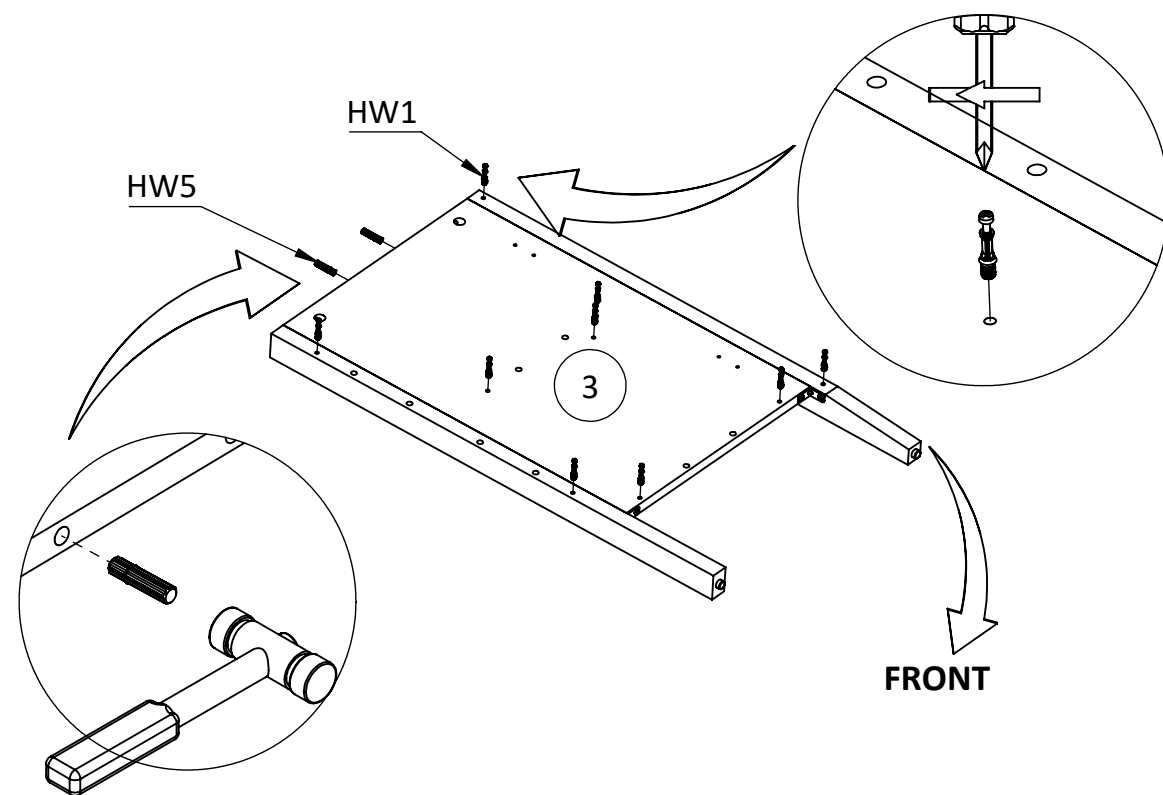


STEP13: Insert cambolt (HW1) into side panel - right (3) tighten it using screwdriver.

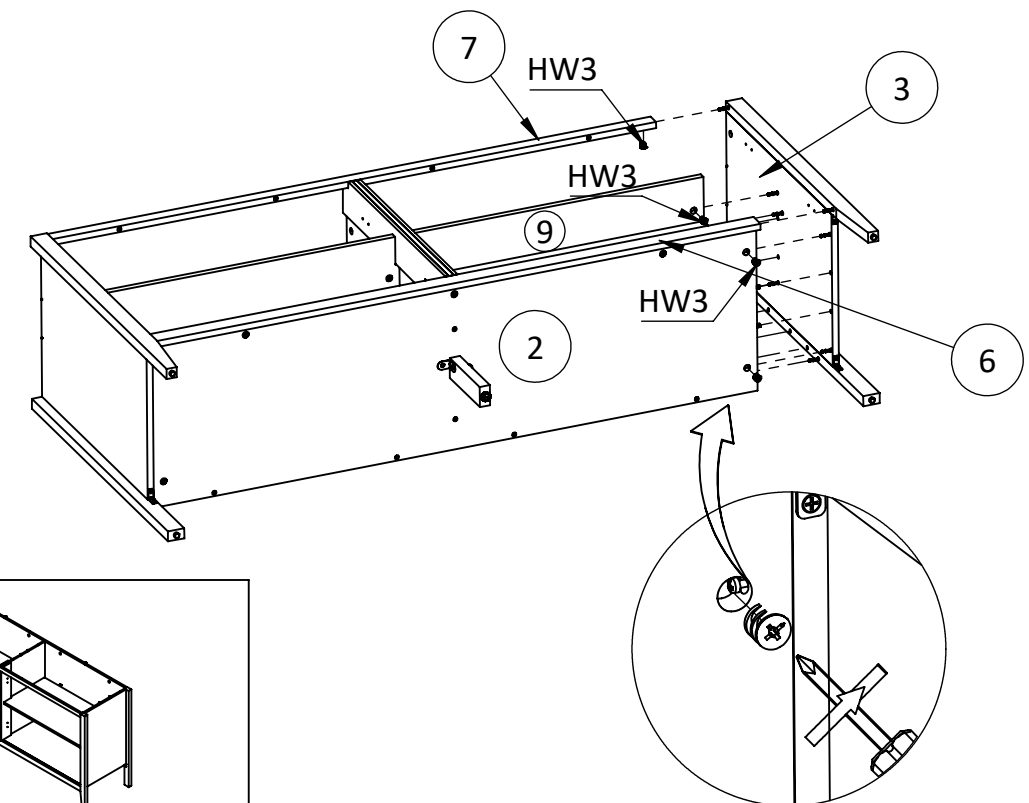


ROTATE 90°


STEP14: Insert side panel - right (3) into bottom panel (2), fixed shelf - right (9), plint - upper (7), plint lower (6) and plint support shelf (8) secure with camlock (HW3) tighten it using screwdriver.

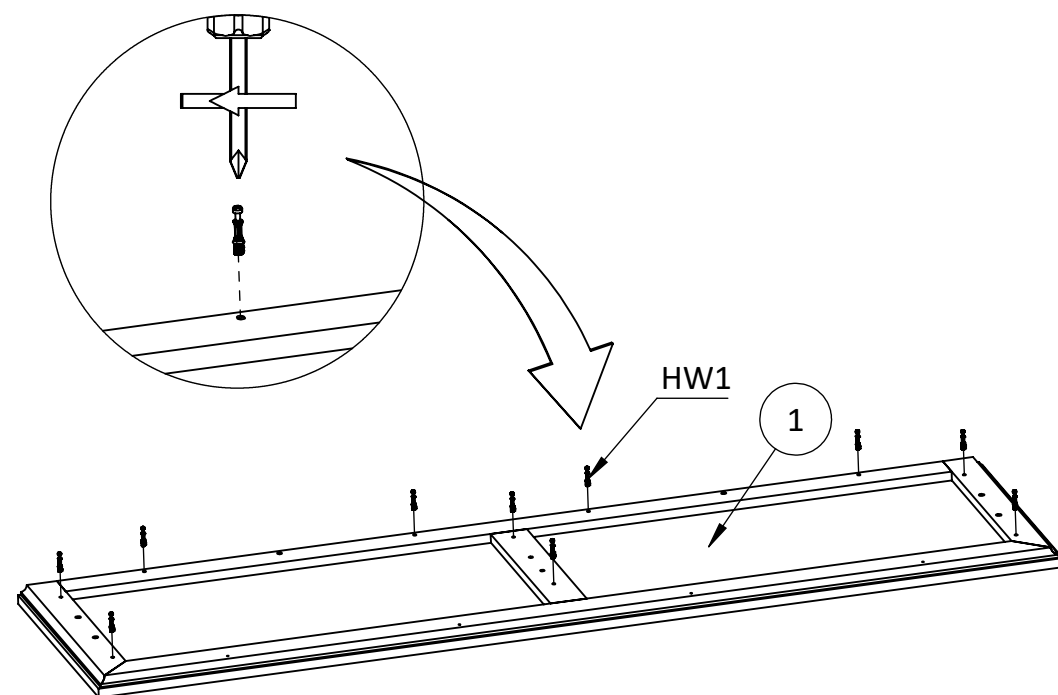


STEP15: Insert cambolt (HW1) into top panel (1) tighten it using screwdriver.

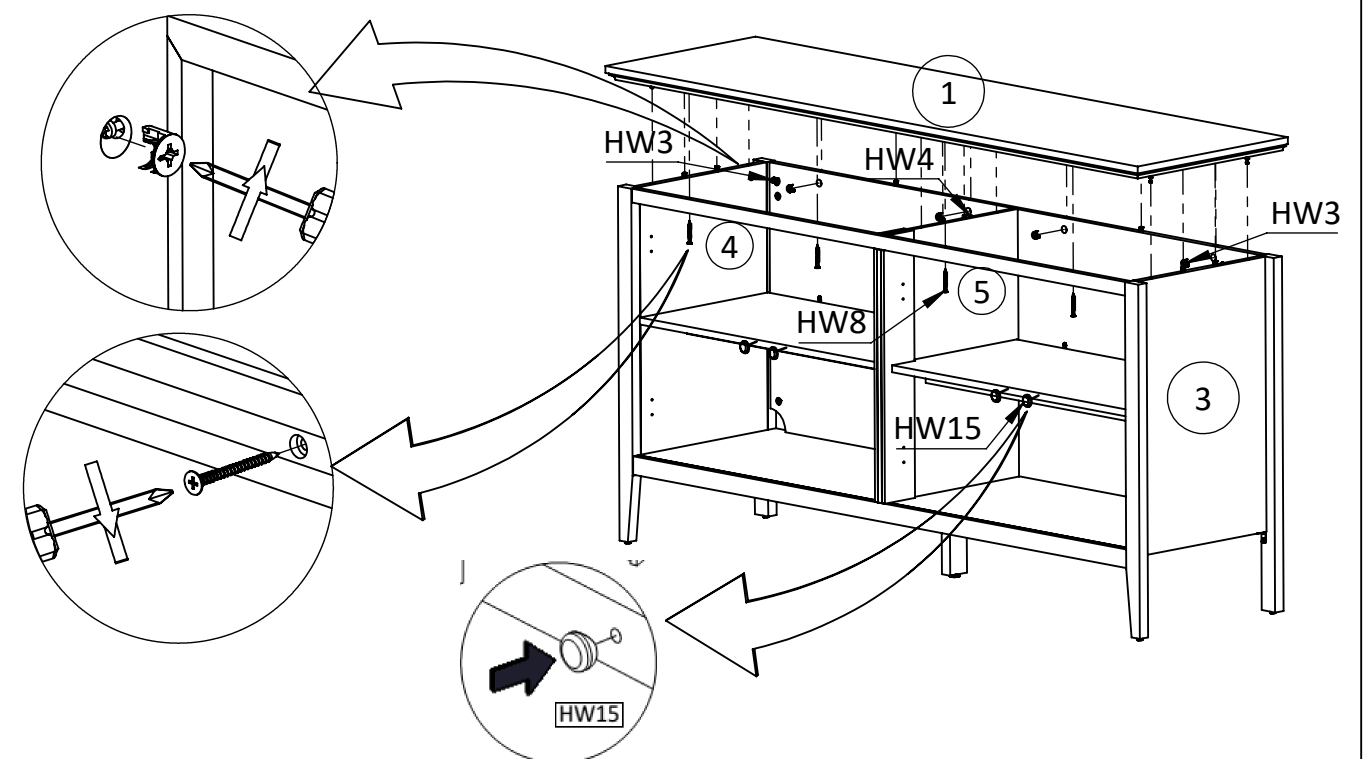


STEP16: Insert top Panel (1) secure with camlock (HW3) And screw M6x50 mm (HW8) into plint - upper (7). make sure camlock (HW4) is install on the center panel (5) tighten it using screwdriver. Continue attach bumppers (HW15) into fixed shelf - right & left (9&10) into position as shown in picture.

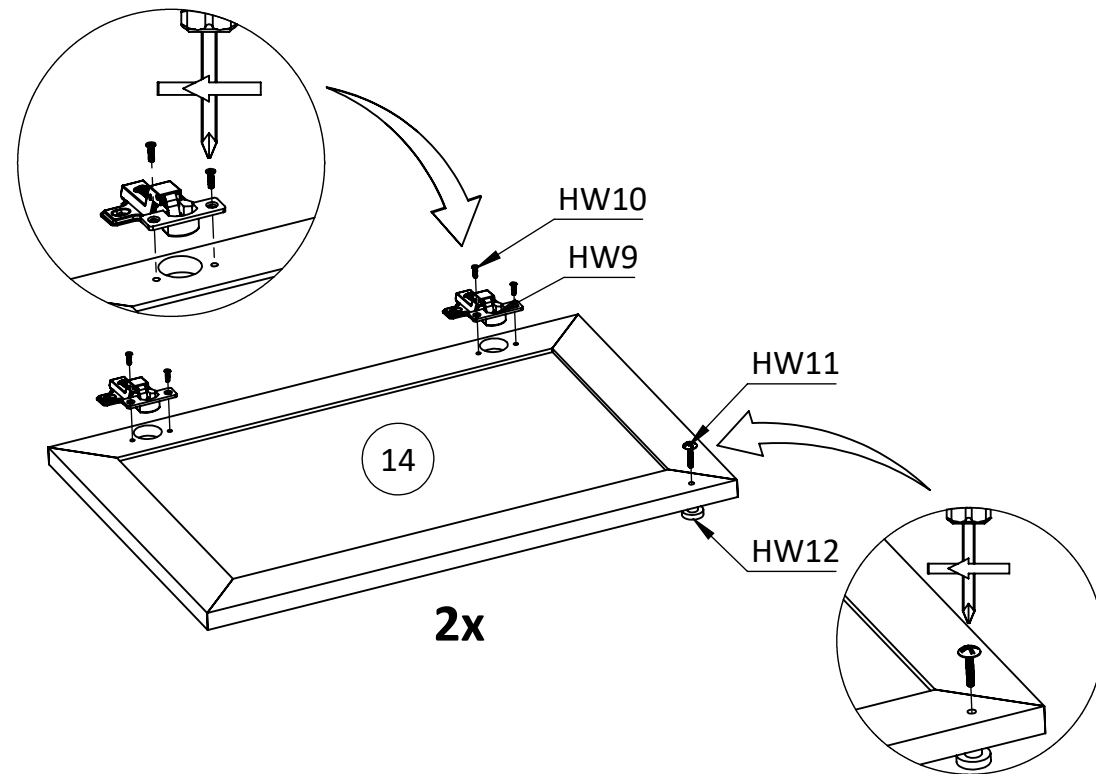


STEP17: Insert full curve hinge (HW9) into door panel - right (14) secure with screw M5x12 mm (HW10), panhead 9x22 mm (HW11) and handle Ø20 mm (HW12) tighten it using Screwdriver.

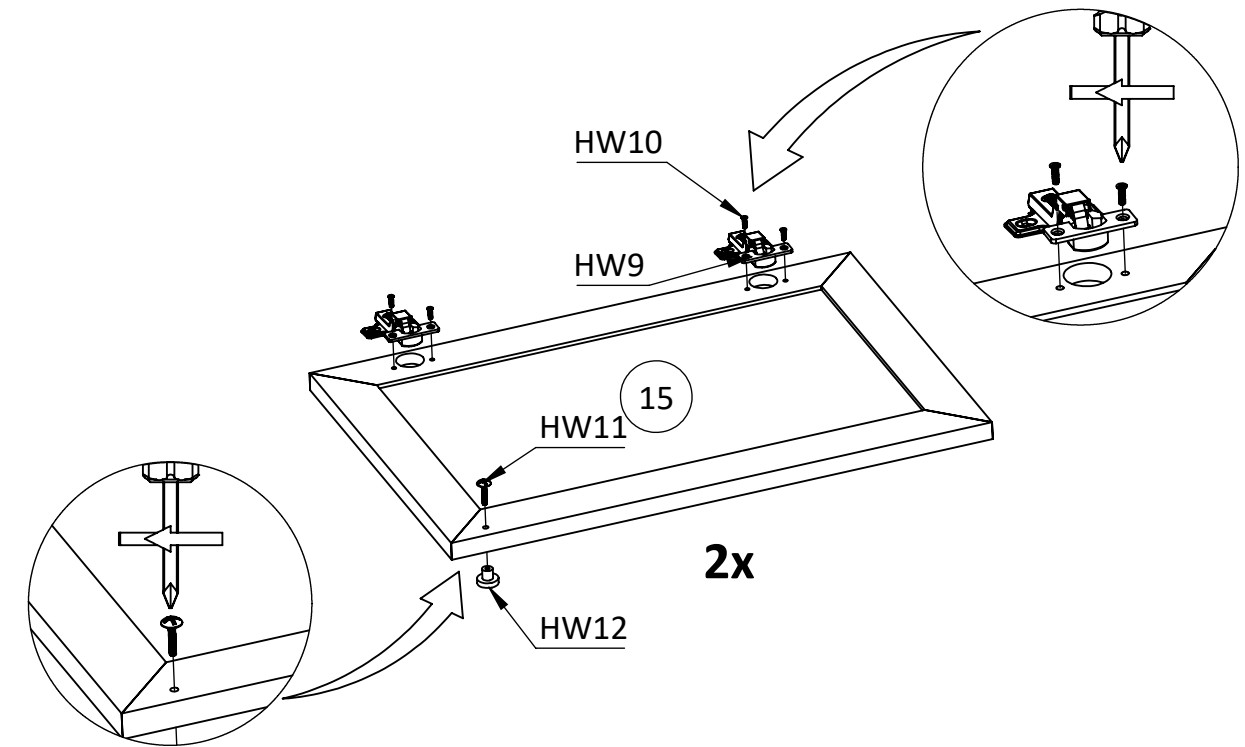

STEP18: Insert full curve hinge (HW9) into door panel - left (15) secure with screw M5x12 mm (HW10), pandead 9x22 mm (HW11) and handle Ø20 mm (HW12) tighten it using Screwdriver.

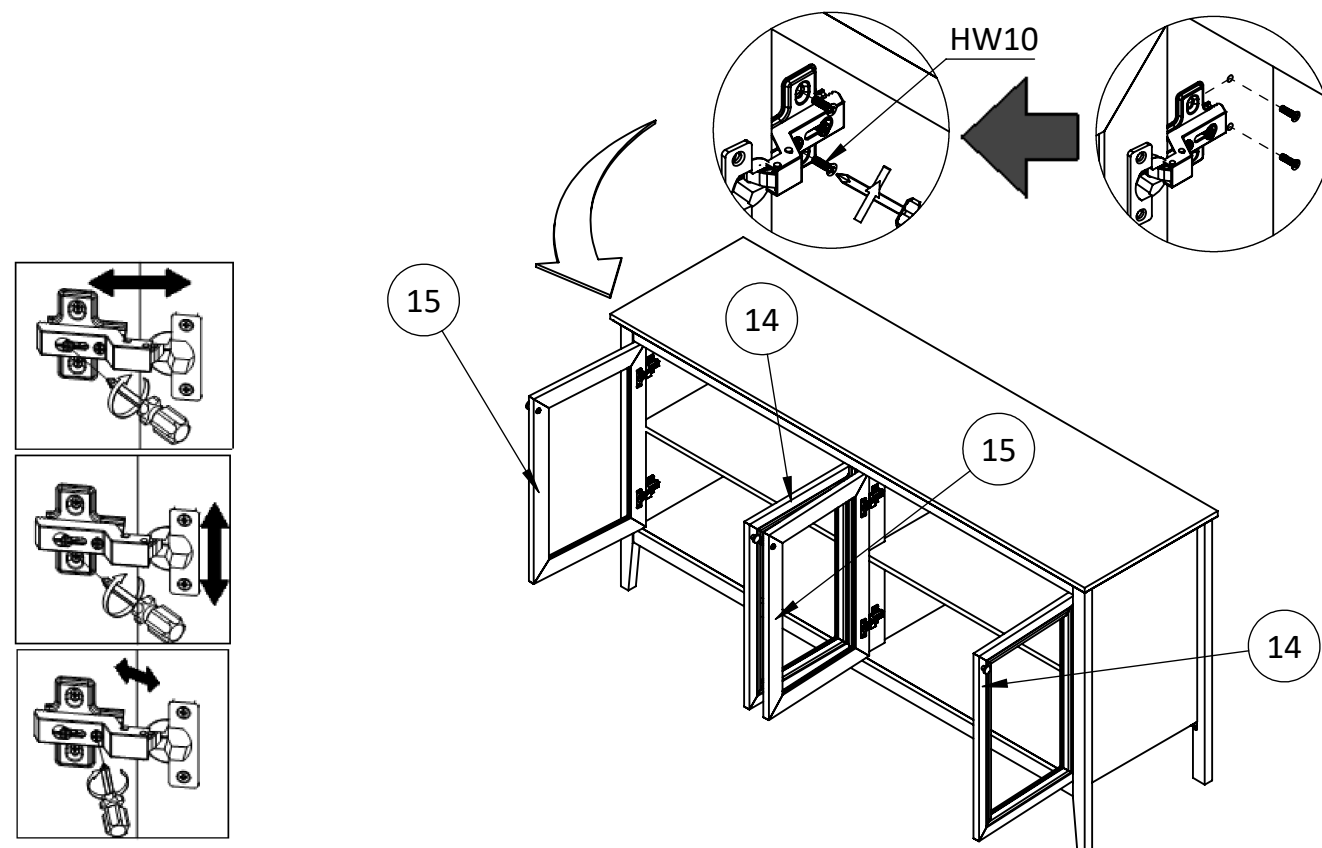

STEP19: Install the full curve hinge (HW9) into position as shown in picture. secure with screw M5x12 mm (HW10) tighten it using screwdriver.

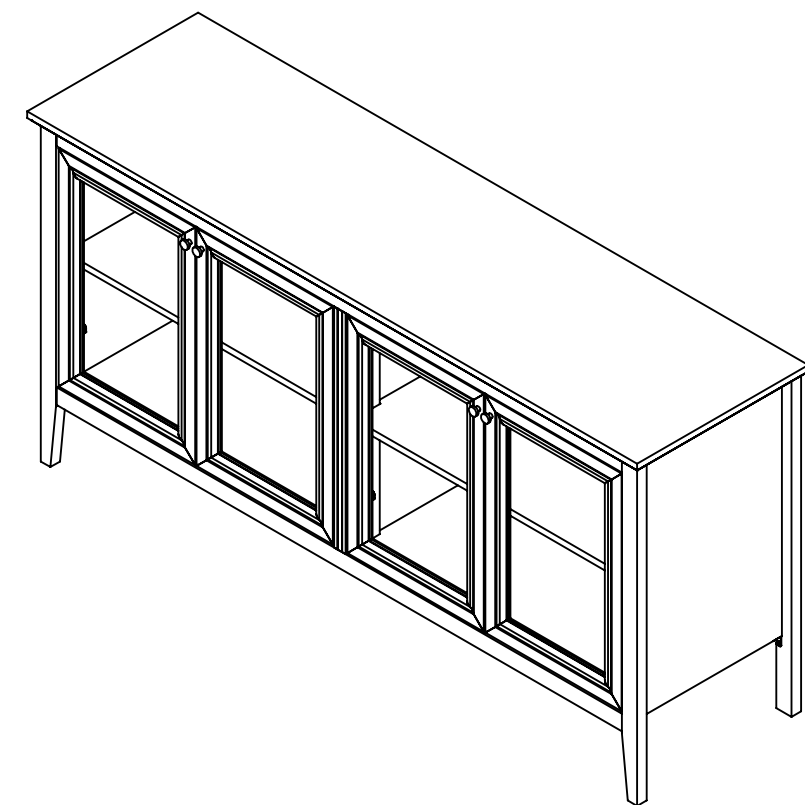

STEP20: Assembly is completed.




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

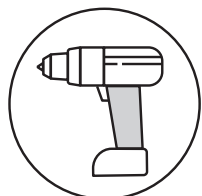


REQUIRED TOOL
8MM / 5/16" DRILL BIT

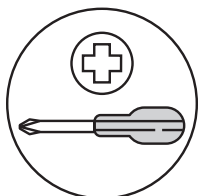

REQUIRED TOOL




Hardware (HW11 / HW7) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

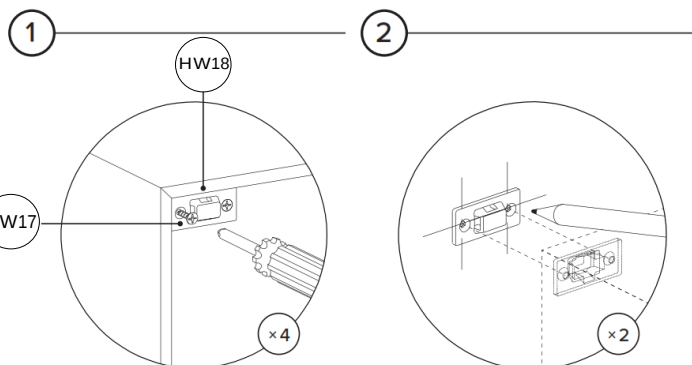


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

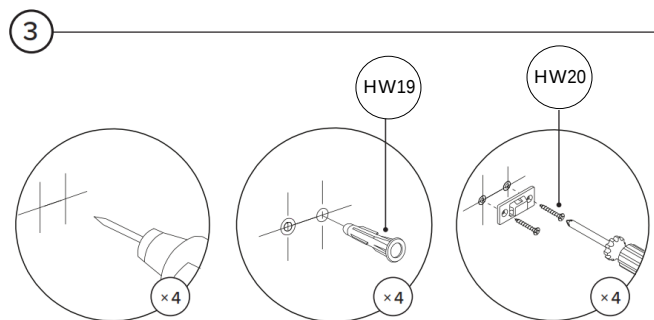

Drill holes in wall using 8mm / 5/16" drill bit.

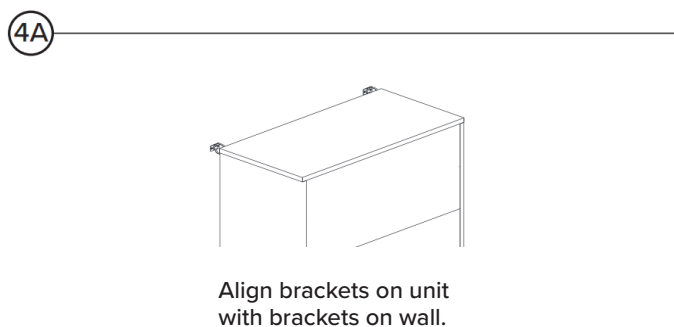

Align brackets on unit with brackets on wall.

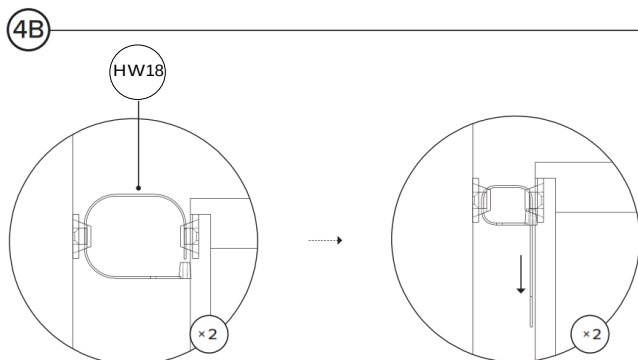

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW18	BRACKET 	4
HW17	M6 × 15MM SCREW 	4
HW19	M8 × 35MM 	4
HW20	M10 × 50MM SCREW 	4
HW18	STRAP 	2