










# OUTDOOR PATIO STEEL RECLINER CHAIR ASSEMBLY MANUAL

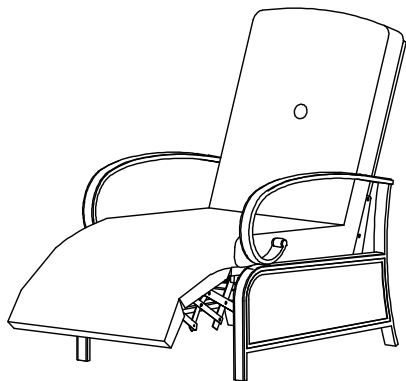


## ASSEMBLY INSTRUCTIONS


- Prior to assembly, make sure you lay out and identify all the parts listed below in the parts list.
- Tighten all nuts and bolts securely. All bolts should be hand tightened before use. Never use power tools or excessive force during assembly and tightening of bolts.

# Part list


Part	Description	Qty
A	 Armrest	1
B	 Armrest	1
C	 Back	1
D	 Seat	1
F	 Connecting bar	1
G	 Wahser	4
H	 Cushion	1
I	 Allen key	1

Part	Description	Qty
J	 <b>M6*15</b> Screws	8
L	 <b>M6*28</b> Screws	4


- 1.** Connect Back (Part C) to Seat (Part D) using Screws(J) as shown in diagram.

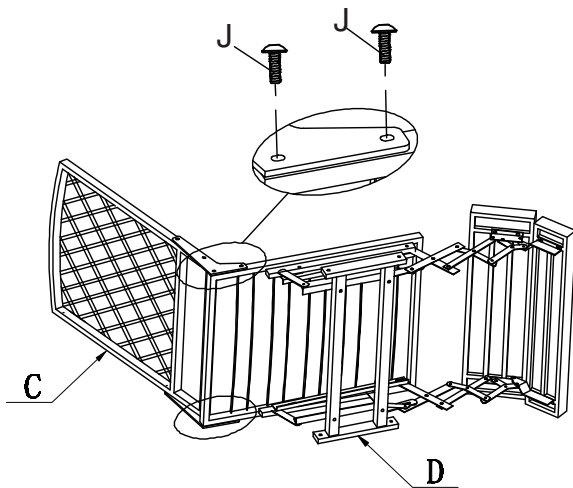


- 2.** Affix Armrest (Part A) to Seat (Part D) using Washer (Part G) and Screws (L).

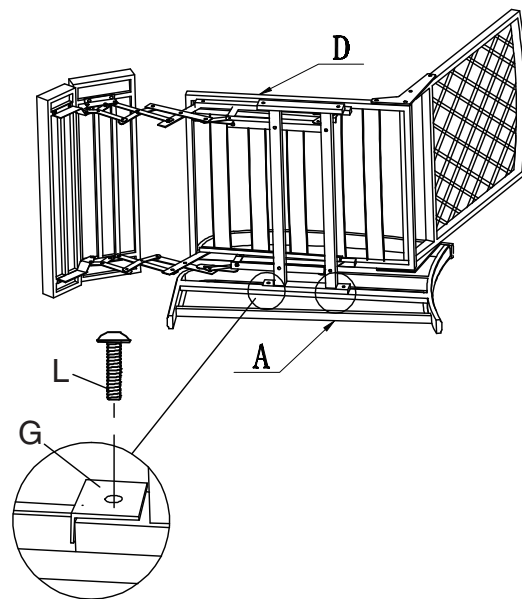



- 3.** Connect Armrest (Part B) to Seat (Part D) using Washer (Part G) and Screws(J) as shown in diagram.

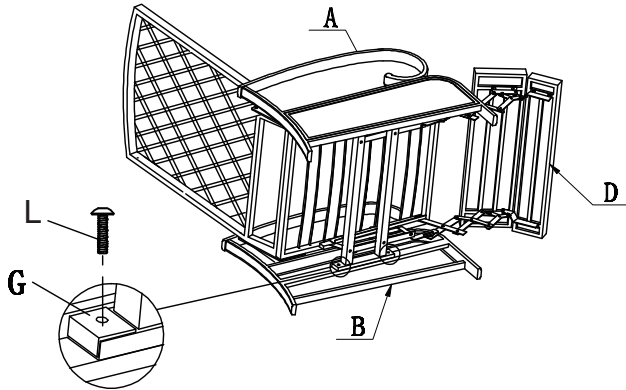

- 4.** Affix Connecting bar (Part F) to Seat (Part D) using Screws(J) as shown in diagram.

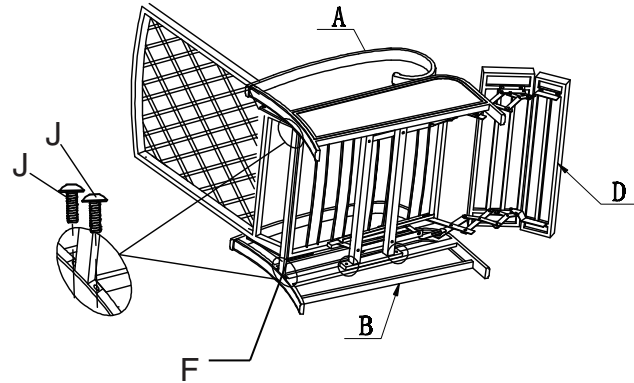

5. Put Cushion (Part H) to the complete Frame.

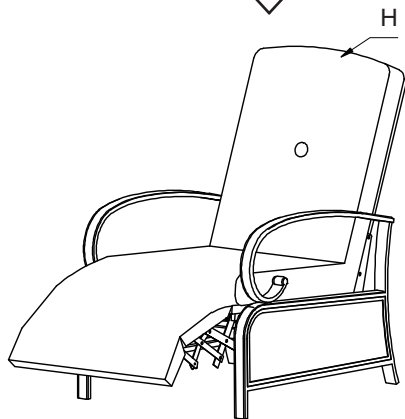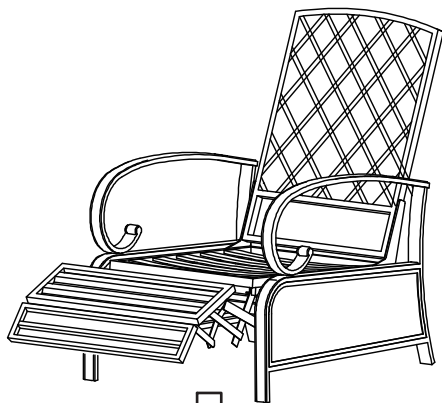

6. Finally ,make sure all screws are fixed tightly before using on the level ground.