

Queen Storage Bed


Assembly Installation Guide

DESCRIPTION:
Queen Headboard
Queen Footboard
Queen Side Rails
Queen Slat & Support Legs
Storage Drawer

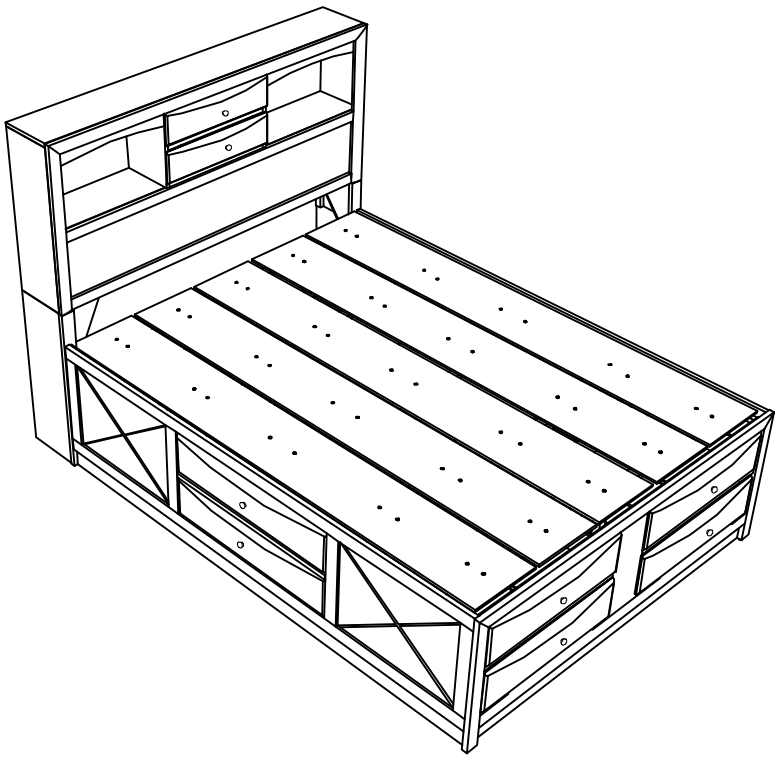

INSTALLATION AREA

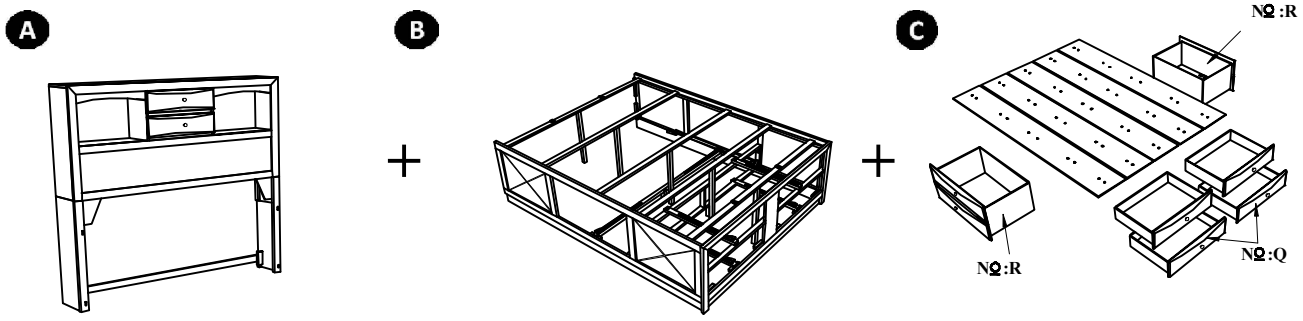

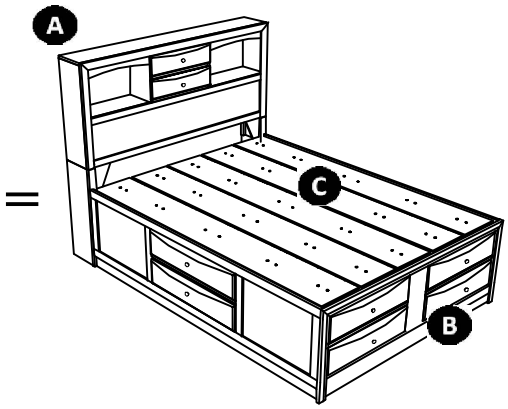

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly. and follow the assembly step to assemble your newly purchased product correctly and efficiently .

Drawer NOQ & NOR are identical & compatible, to each other regardless left or right.

During assembly, do not tighten any hardware until the complete unit has beeb assembled.


2 PERSON
installation recommended

20 - 25 mins

20 - 25
minutes for installation

BOX 1

Box of Headboard & Footboard



NO A

Headboard **x 1**
255 x 1420 x 1593 mm



NO B

Footboard **x 1**
42 x 570 x 1591mm



NO A1

Headboard Drawer **x 2**



NO C(L)

Headboard Leg (L) **x 1**



NO C(R)

Headboard Leg (R) **x 1**



NO D

Triangle Support Panel **x 2**
-9 x 200 x 200



NO E

Drawer Support Rail 2 **x 4**
20 x 40 x 633mm



NO F

Support Leg 2 **x 1**
30 x 30 x 95mm



NO G

Support Leg 3 **x 1**
30 x 30 x 107mm

Hardware List




NO 1
Flat Head Chipboard Screw **x 8**
m4 x 32mm RBW



NO 2
Pan Head Chipboard Screw **x 8**
m3.5 x 20mm BLK



NO 3
JCBC Bolt **x 4**
m6 x 35mm
BLK



NO 4
JCBC Bolt **x 2**
m6 x 50mm
BLK



NO 5
Spring Washer **x 6**
1/4" RBW



NO 6
Flat Washer **x 6**
1/4" ID x 13mm OD
BLK



NO 7
Allen Key **x 1**
m4 x 110mm BLK

BOX 2

Box of Side rail




NO H

Side Rail **x 2**
39 x 570 x 2060mm




NO I

Bed Slat **x 3**
18 x 45 x 1545mm



NO J

F/Board Drawer Frame **x 1**
40 x 220 x 1545mm



NO K

Concealed Panel **x 5**
9 x 295 x 2040mm



NO L

H/Board Back Support 1 **x 1**
19 x 30 x 1559mm



NO M

Drawer Support Rail **x 1**
30 x 30 x 1545mm



NO N

Supprt Leg 1 **x 5**
30 x 30 x 518mm



NO O

H/Board Back Support 2 **x 1**
18 x 45 x 1559mm



NO P

Bed Slat With Marking **x 2**
18 x 45 x 1545mm

Hardware List




NO 8
Flat Head Chipboard Screw **x 16**
m4 x 32mm RBW



NO 9
Pan Head Chipboard Screw **x 27**
m3.5 x 20mm BLK



NO 10
JCBC Bolt **x 15**
m6 x 35mm
BLK




NO 11
JCBC Bolt **x 6**
m6 x 50mm
BLK



NO 12
Spring Washer **x 15**
1/4" RBW



NO 13
Flat Washer **x 15**
1/4" ID x 13mm OD
BLK



NO 14
Z - Bracket **x 1**




NO 15
Allen Key **x 1**
m4 x 110mm BLK

BOX 3 & 4

Box of Parts & Hardware



NO Q
Drawer 1 **x 4**



NO R
Drawer 2 **x 2**



NO 16
Handle **x 8**



NO 17
Truss Head M. Screw Handle **x 4**
m4 x 48mm BLK



NO 18
Truss Head M. Screw Handle **x 4**
m4 x 50mm BLK

A




Headboard Assembly Installation

STEP 01

Rotate the Headboard (A) down and turn to back.


Box 1 : №A

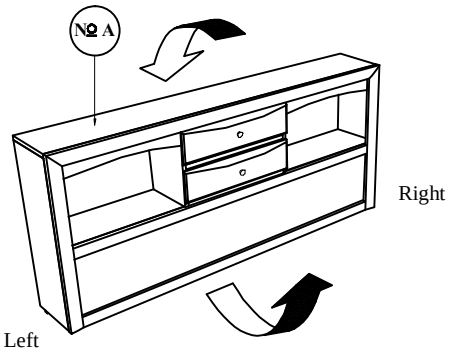

STEP 02

Attach and tighten the Headboard Leg L/R (C) to the Headboard (A).


Box 1 : № C(L) + № C(R)

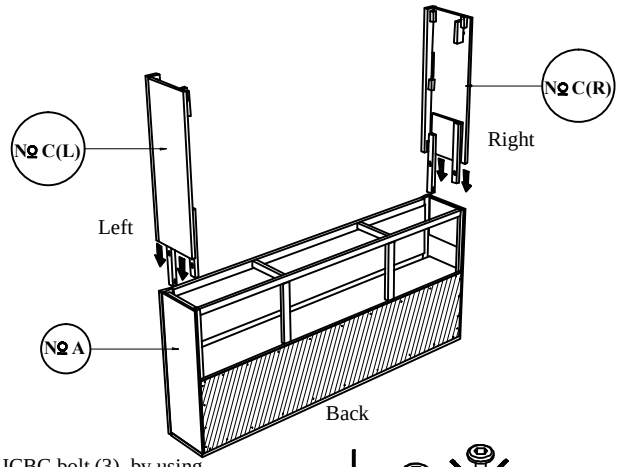


STEP 03

Insert Spring washer (5) , Flat Washer (6) , tighten JCBC bolt (3) by using an Allen Key (7).

Box 1 : № 3 + № 5 + № 6 + № 7




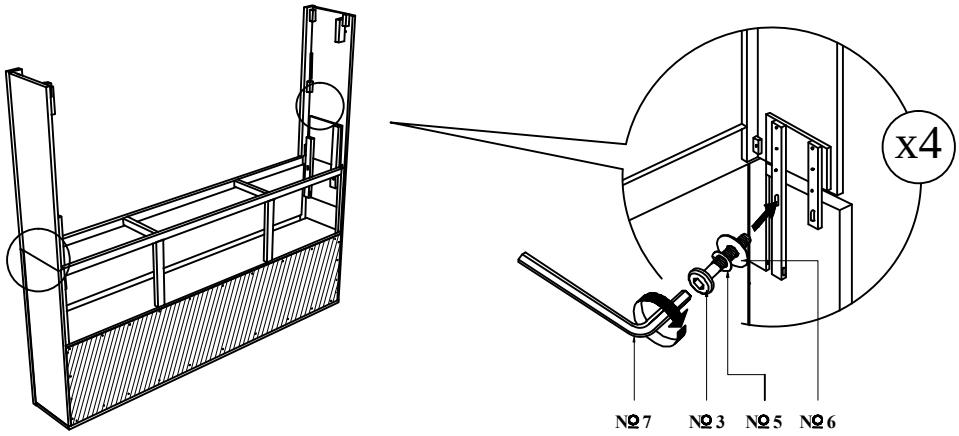


STEP 04

Insert Spring washer (5) , Flat Washer (6) , tighten JCBC bolt (4) by using an Allen Key (7).

Box 1 : № 4 + № 5 + № 6 + №7



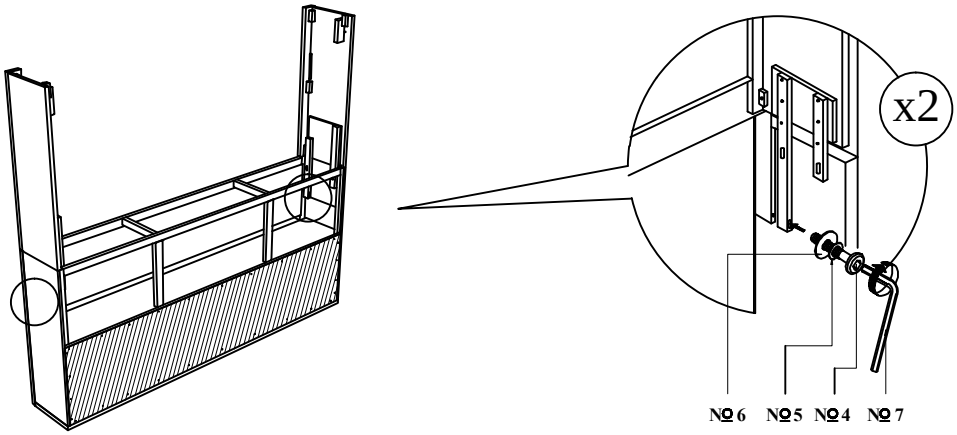

A





Headboard Assembly Installation

STEP 05

Attach and tighten the triangle Support Panel (D) to the Headboard and tighten the Panhead screw (2) using screw driver . (Not included)

Box 1 : № D + № 2




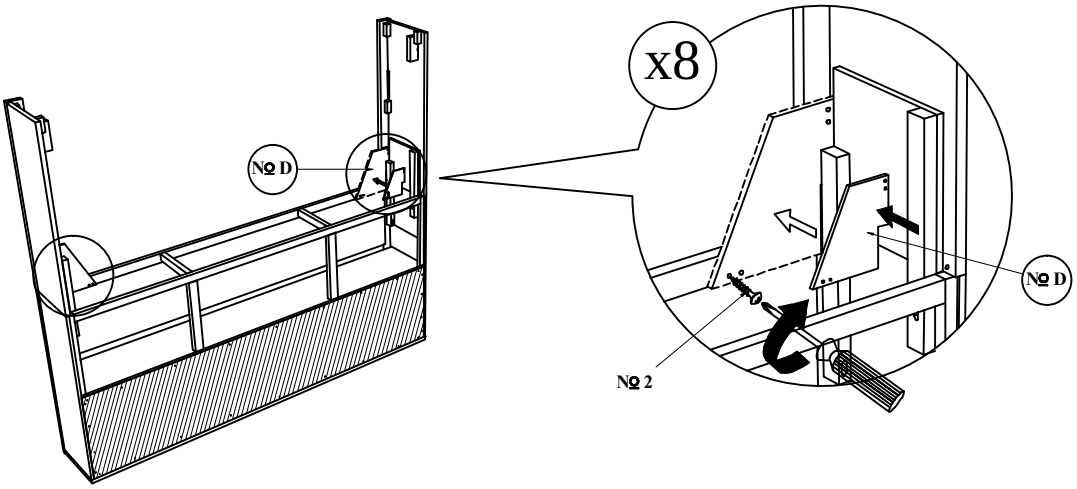


STEP 06

Attach Headboard Back Support (L) & (O) as picture shown. Tighten the CSK screw (1) using a screw driver. (Not included)

Box 1 : № 1
Box 2 : № L + № O

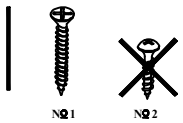

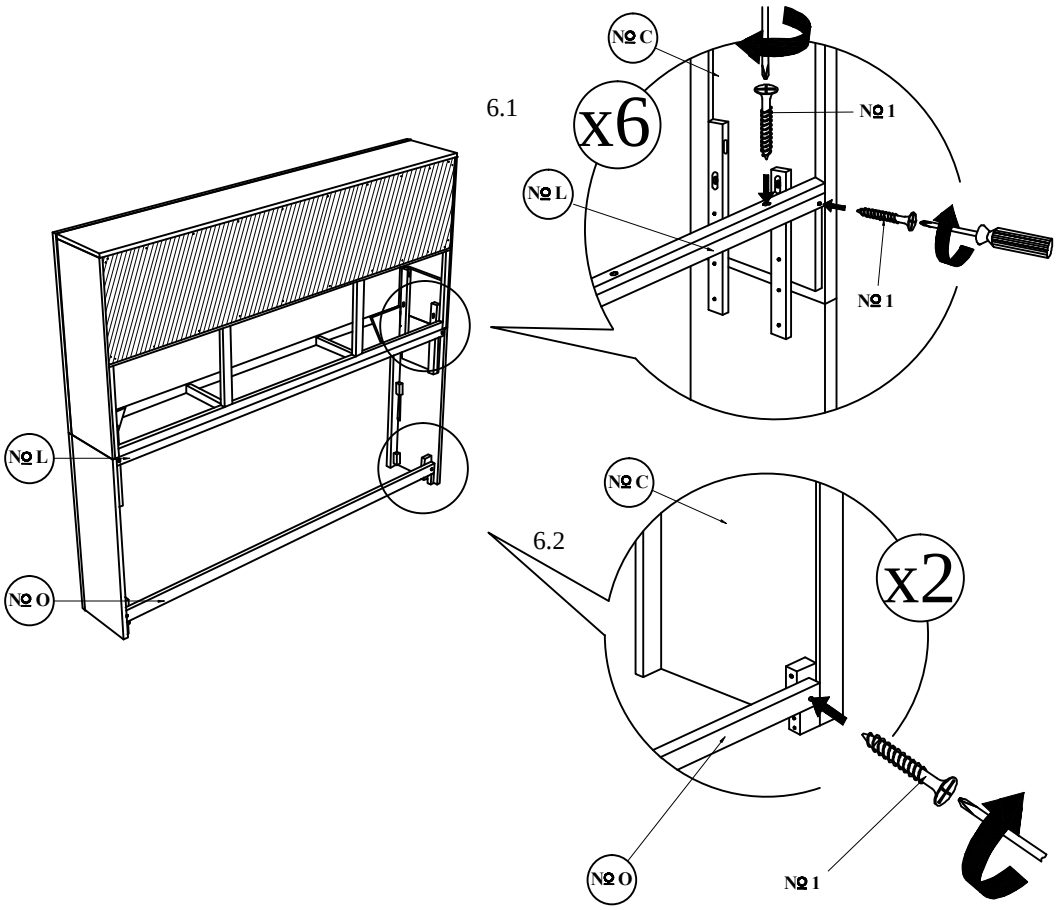


B


Footboard Structure Assembly Installation

STEP 07

Attach the Side Rail (H) to the Headboard Leg L/R (C). Insert Spring Washer (12) , Flat Washer (13) , tighten JCBC (10) using an Allen Key (15).

Box 2 : N° H + N° 10 + N° 12 + N° 13 + N° 15




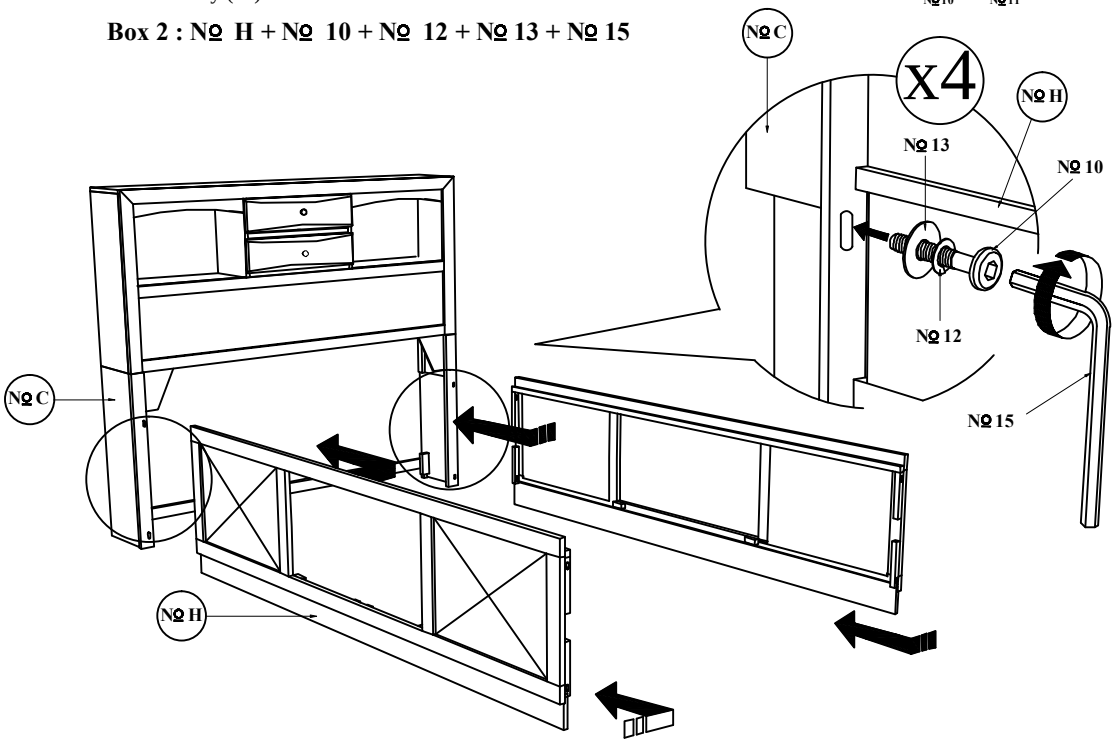


STEP 08

Attach the Side Rail (H) to the Footboard (B). Insert Spring Washer (12) , Flat Washer (13) , tighten JCBC (10) using an Allen Key (15).

Box 1 : N° B
Box 2 : N° 10 + N° 12 + N° 13 + N° 15



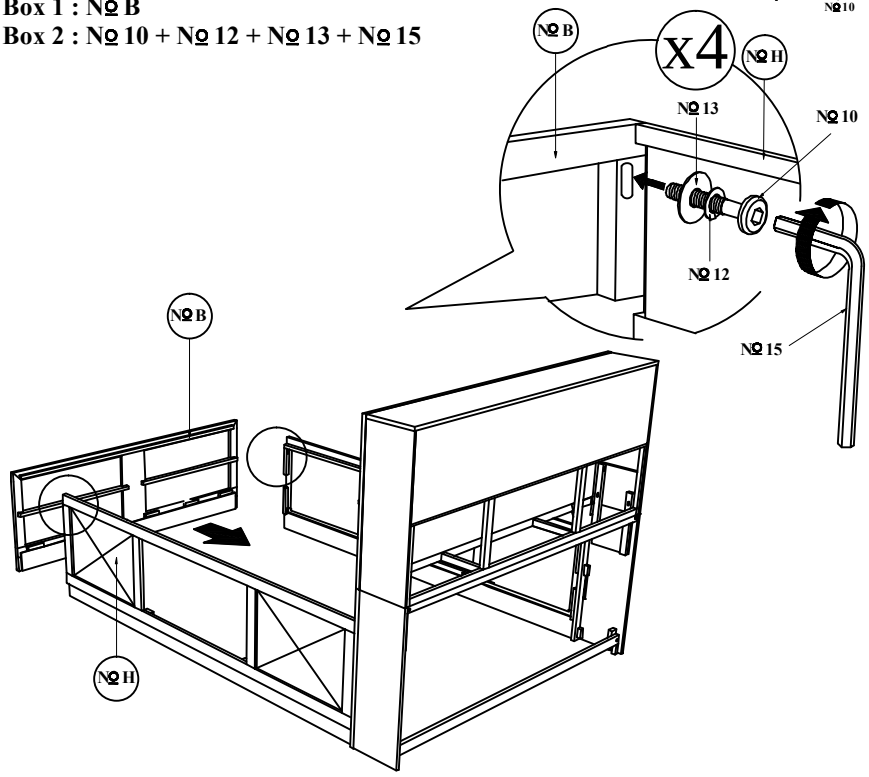

B


STEP 09


Attach Support Leg (G) to the Footboard Drawer Frame (J). Insert Spring Washer (12) , Flat Washer (13) , & tighten JCBC (10) using an Allen Key(15).

Box 1 : № G
Box 2 : № J + № 10 + № 12 + № 13 + № 15



Footboard Structure Assembly Installation




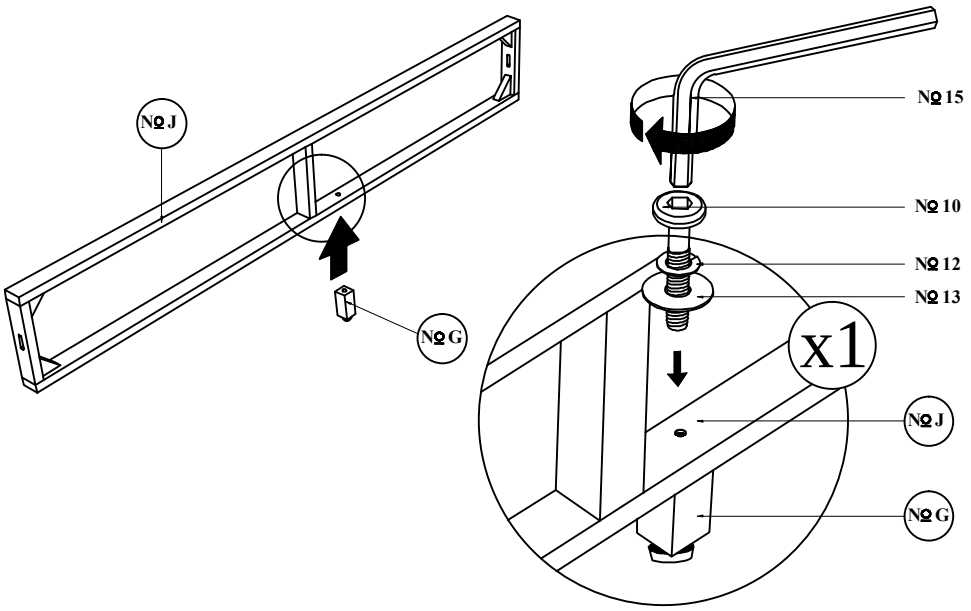


STEP 10

Attach the Footboard Drawer Frame (J) to the Side Rail (H). Insert Spring Washer (12) , Flat Washer (13) , tighten JCBC (10) using Allen Key (15).

Box 2 : № 10 + № 12 + № 13 + № 15



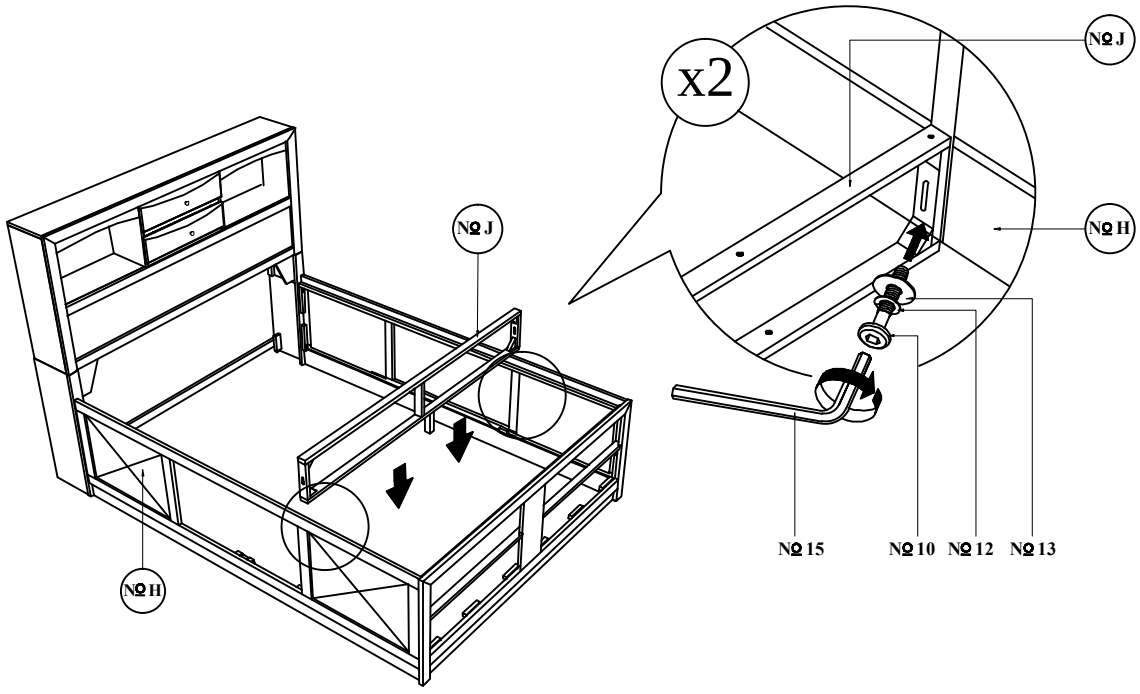

B





Footboard Structure Assembly Installation

STEP 11

Attach the Drawer Support Rail (E) to the Footboard (B) using CSK Screw (8) and tighten with Screw Driver. (Not included)

Box 1 : N⍰ E
Box 2 : N⍰ 8




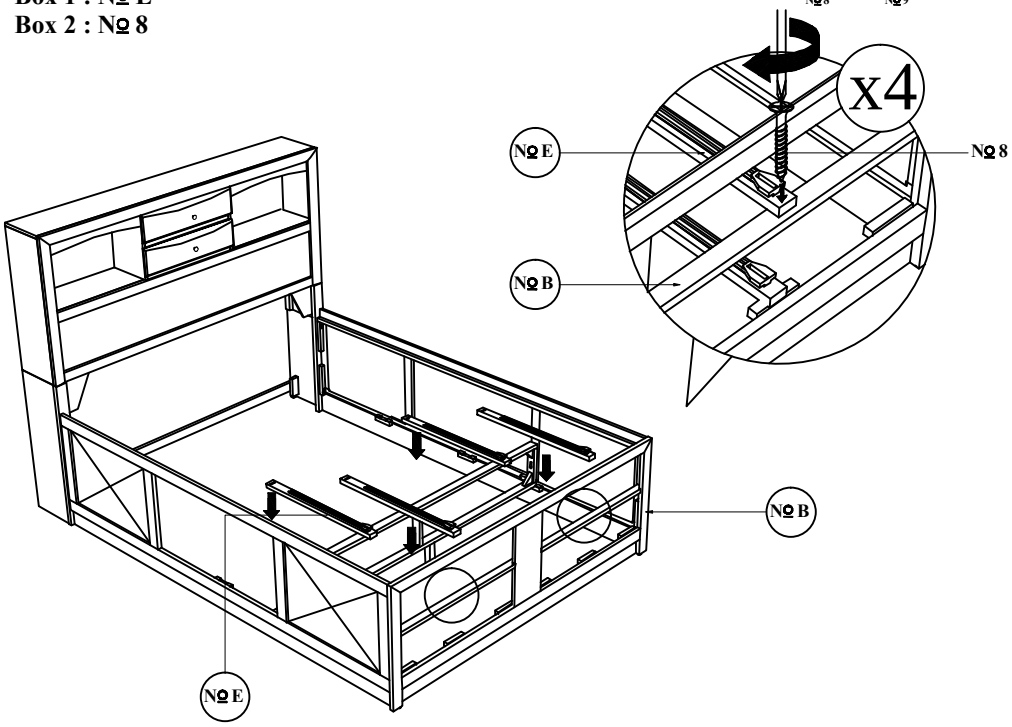


STEP 12

Attach the Drawer Support Rail (E) to the Footboard Drawer Frame (J). Insert Spring Washer (12), Flat Washer (13) & tighten JCBC Bolt (10) using an Allen Key (15).

Box 2 : N⍰ 10 + N⍰ 12 + N⍰ 13 + N⍰ 15



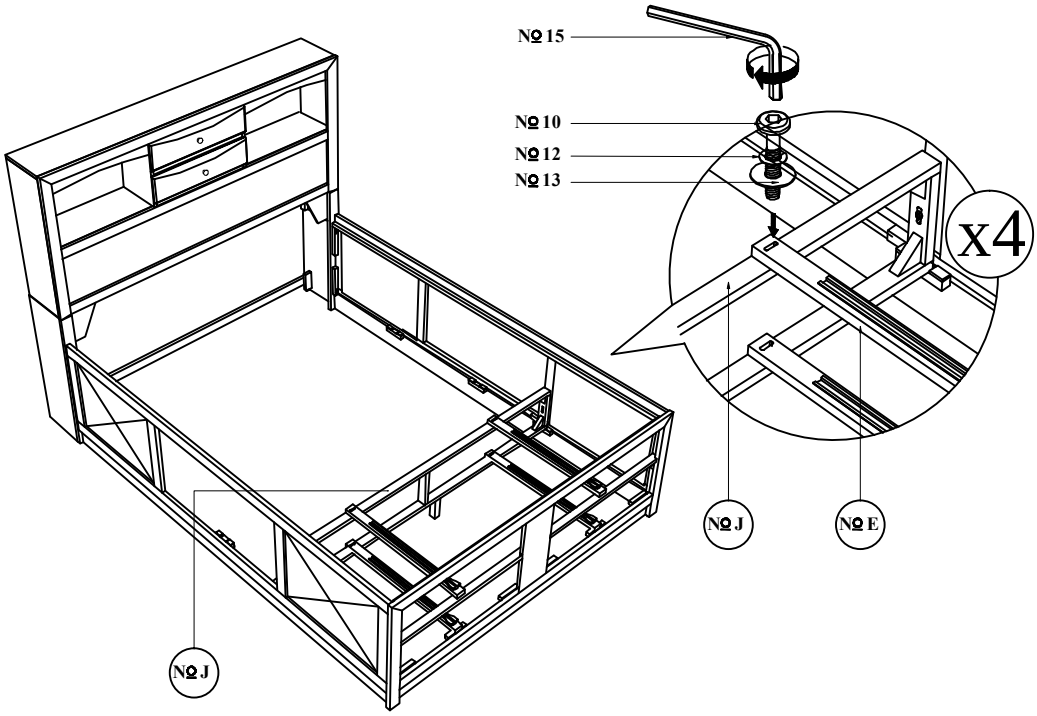


B

STEP 13


Attach Support Leg 2 (F) to the Drawer support Rail (M). Tighten JCBC Bolt (11) using an Allen Key (15)

Box 1 : N° F
Box 2 : N° M + N° 11 + N° 15






Footboard Structure Assembly Installation

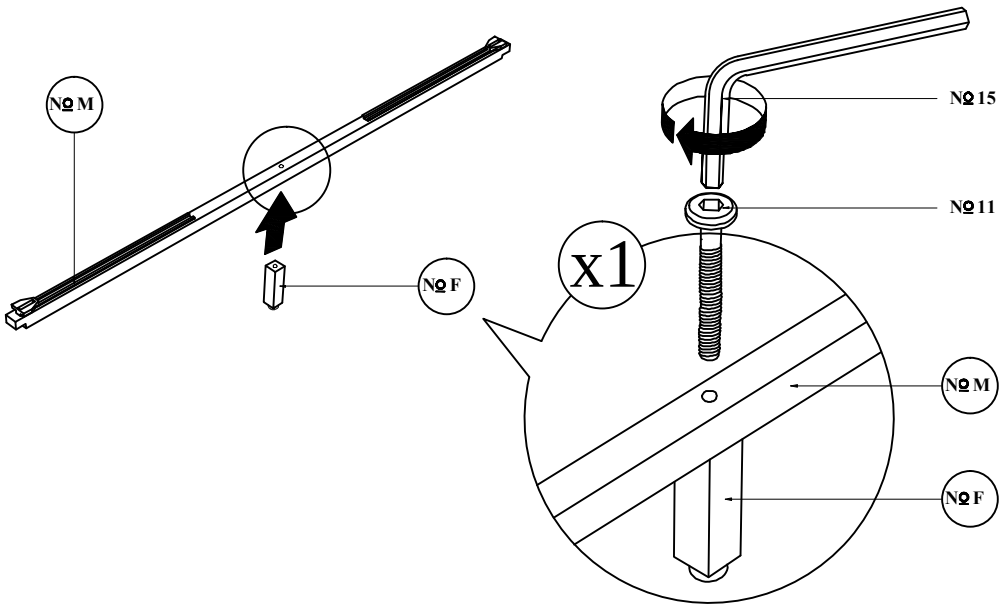


STEP 14

Attach Drawer Support Rail (M) to the Side Rail (H) using CSK Screw (8) and tighten with Screw Driver. (Not included)

Box 2 : N° 8



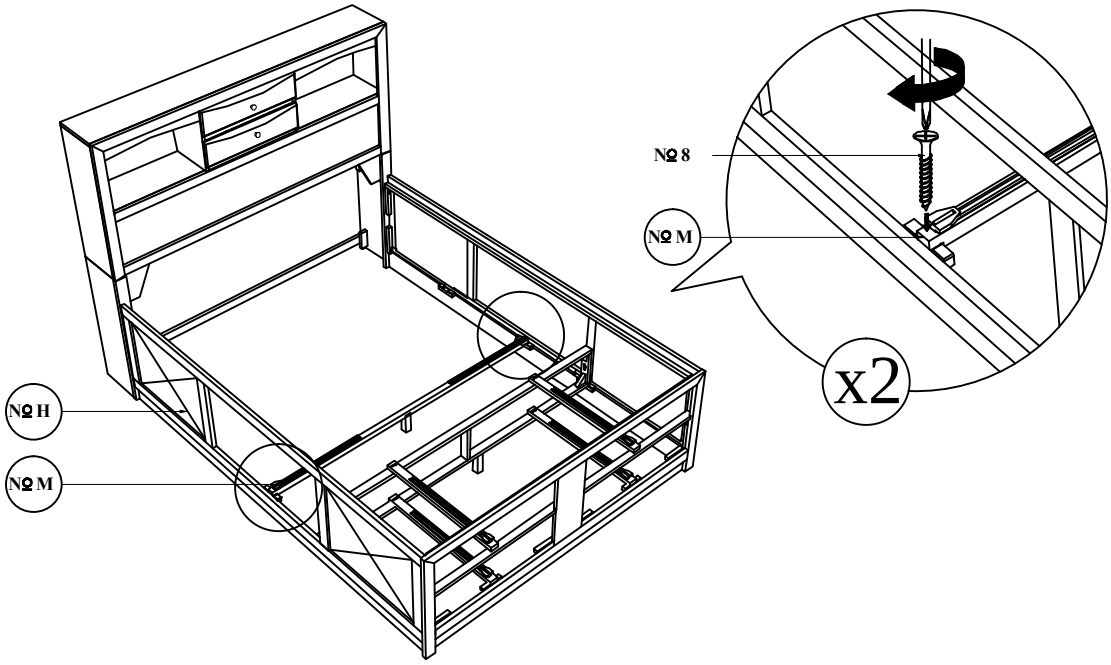

B





Footboard
Structure
Assembly
Installation

STEP 15

Attach Bed Slat (I) & (P) to the Bed Slat Support (N) . Tighten JCBC Bolt (11) using an Allen Key (15). (Loosen and tighten the Adjuster to stability of bed)

Box 2 : Nº I + Nº N + Nº O + Nº P + Nº 11 + Nº 15




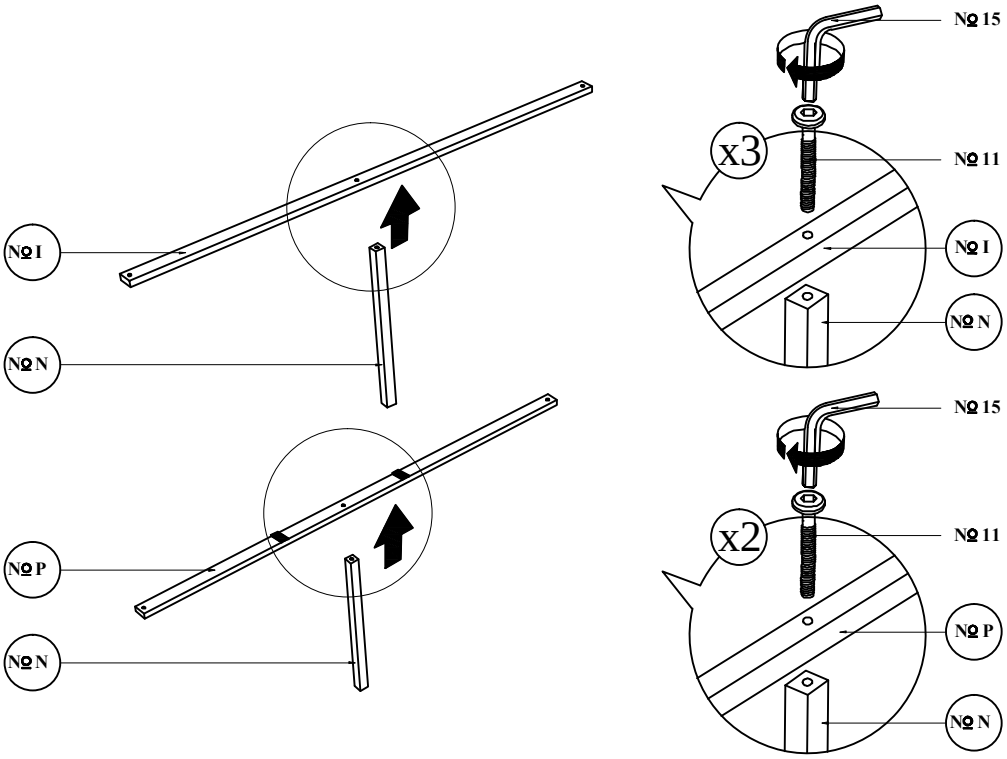


STEP 16

Attach Z-Bracket (14) to the Bed Slat Support (N) and Support Leg 2 (F). Use Panhead Screw (9) and tighten with Screw Driver. (Not included)

Box 2 : Nº 9 + Nº 14



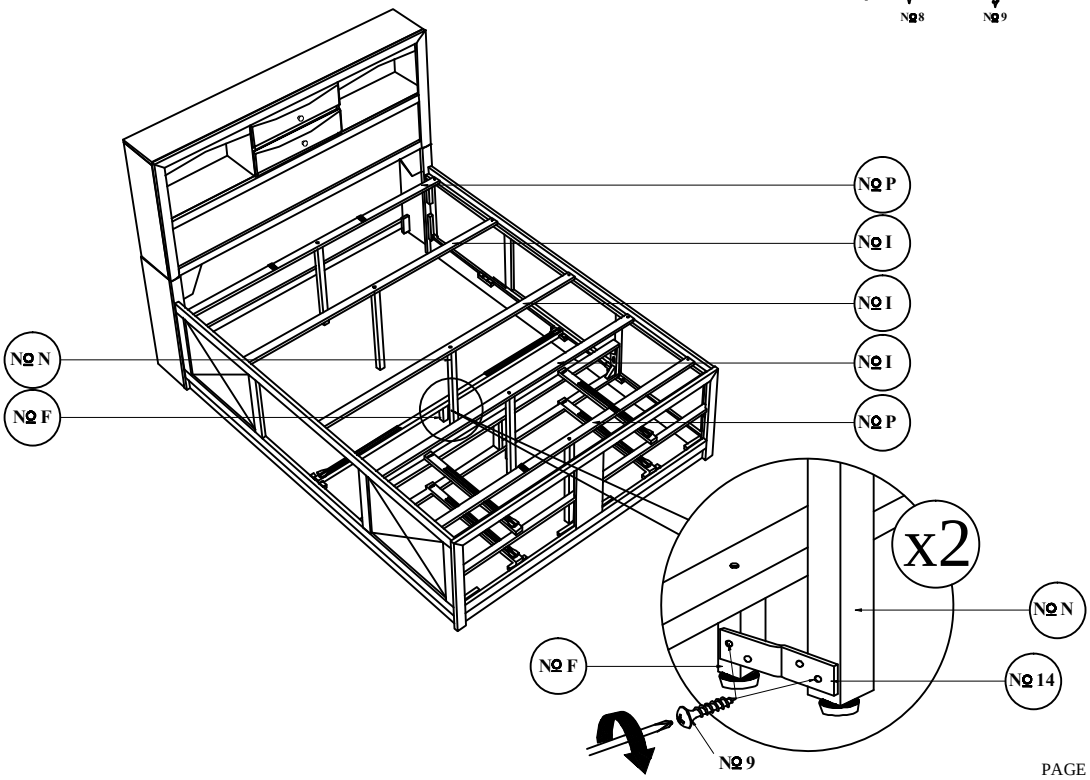


C


STEP 17

Slide Drawer - 2 (R) into position over Draer Support Rail -1 (M). Then slide Drawer - 1 (Q) into position over Drawer Support Rail - 2 (E). Adjust the adjuster for alignment of drawer box.

Box 3 : N₀ Q + N₀ R



Conceal Panel & Drawer Assembly Installation

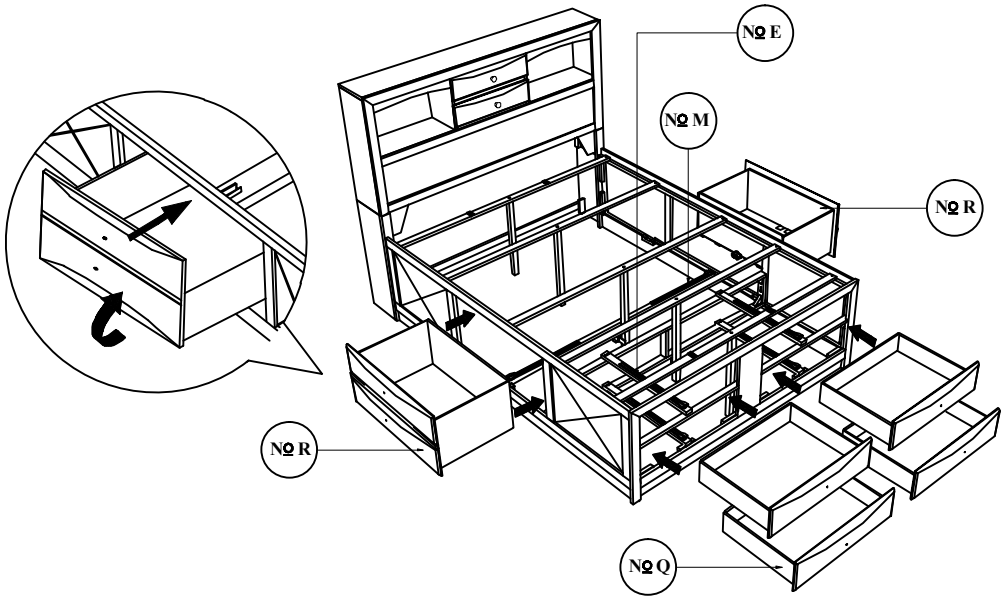


STEP 18

Install the handle (16) in the front or drawer (R). Tighten the Handle Screw (18) using Screw Driver. (Not included)


Install the Handle (16) in front of drawer (Q). Tighten the Handle Screw (17) using Screw Driver. (Not included)


Then Push together the Slide Rail (H) with Bed Slat (I) & tighten with CSK Screw (8) by using Screw Driver. (Make sure the center of Bed Slat (I) is aligned with the marked line as shown).

Box 2 : N₀ 8
Box 3 : N₀ 16 + N₀ 17 + N₀ 18








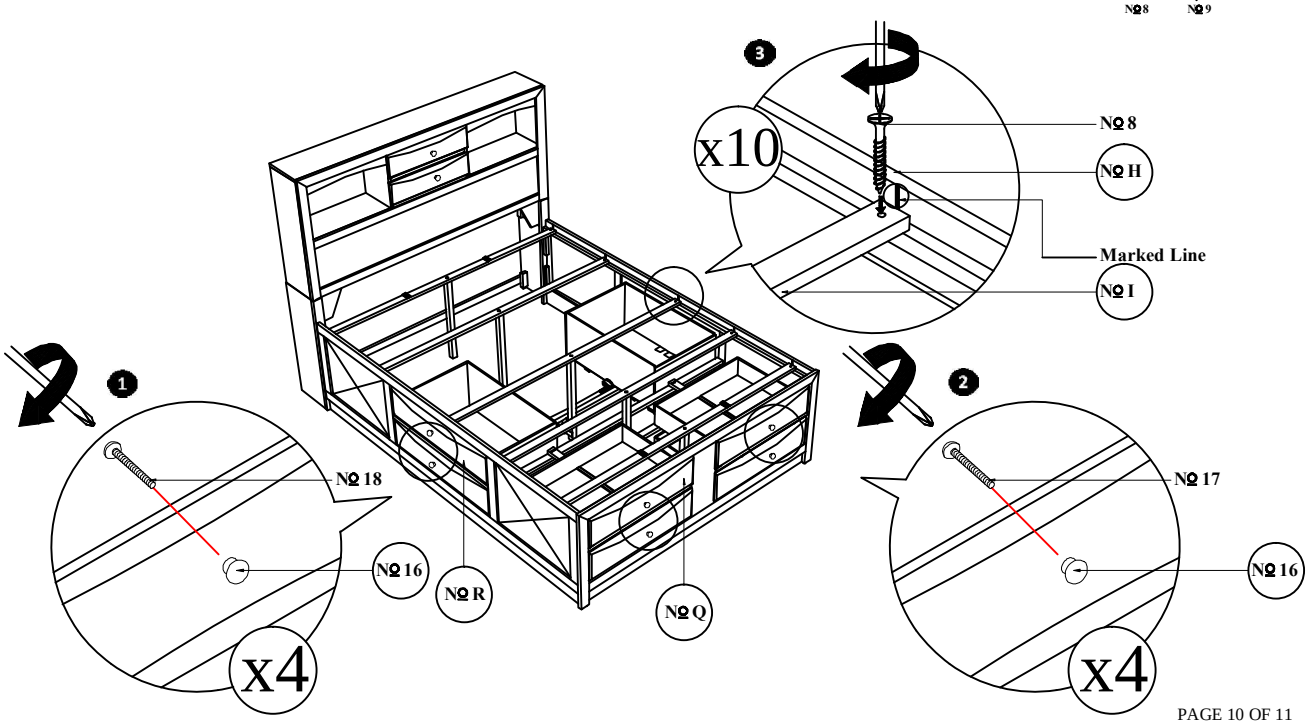


C

STEP 19

Attention! Screw on this markings on concealed panel slat (K).




Conceal
Panel & Drawer
Assembly
Installation

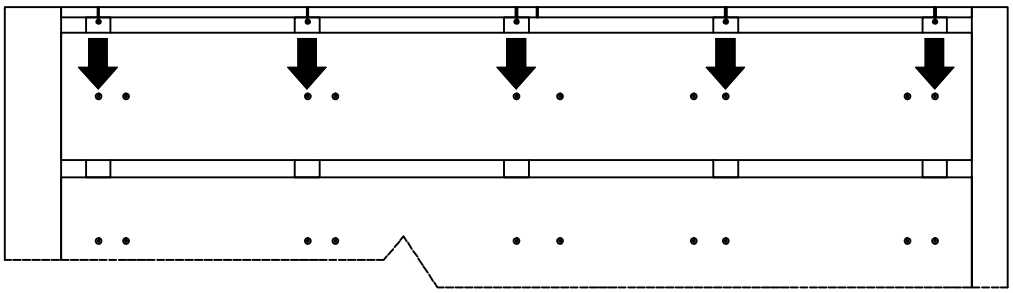

STEP 20

Realign the Concealed Panel Slat (K) as shown.

Box 2 : № K

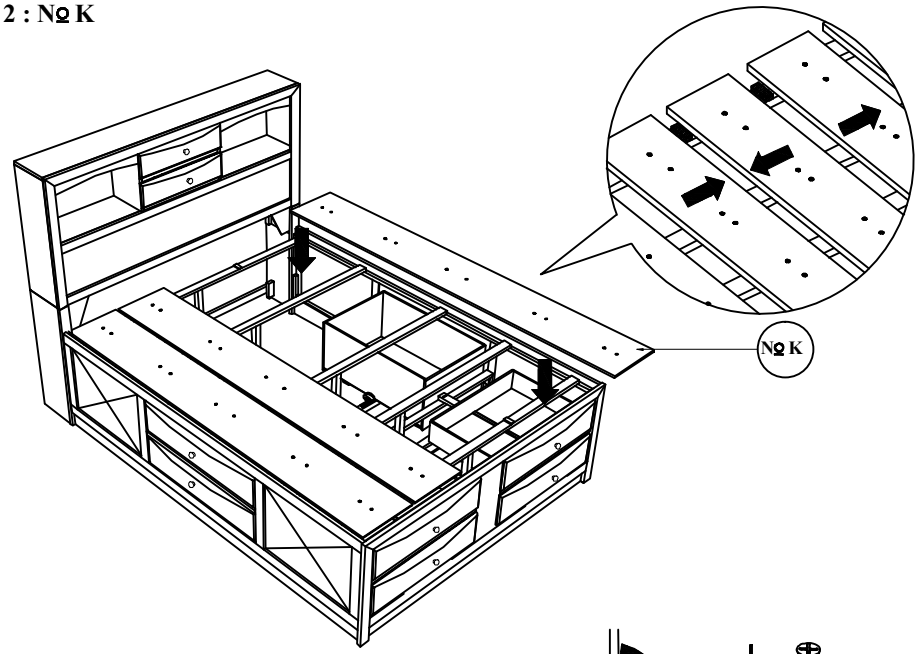

STEP 21

Attach Concealed Panel (K) over the Bed Slat (I) using Panhead Screw (9) and tighten with Screw Driver. (Not included)

Box 2 : № 9

