


# Tommy Bahama®

## HOME

### ASSEMBLY INSTRUCTIONS

570-173FB/174FB/175FB Coral Gables Poster Bed Footboard

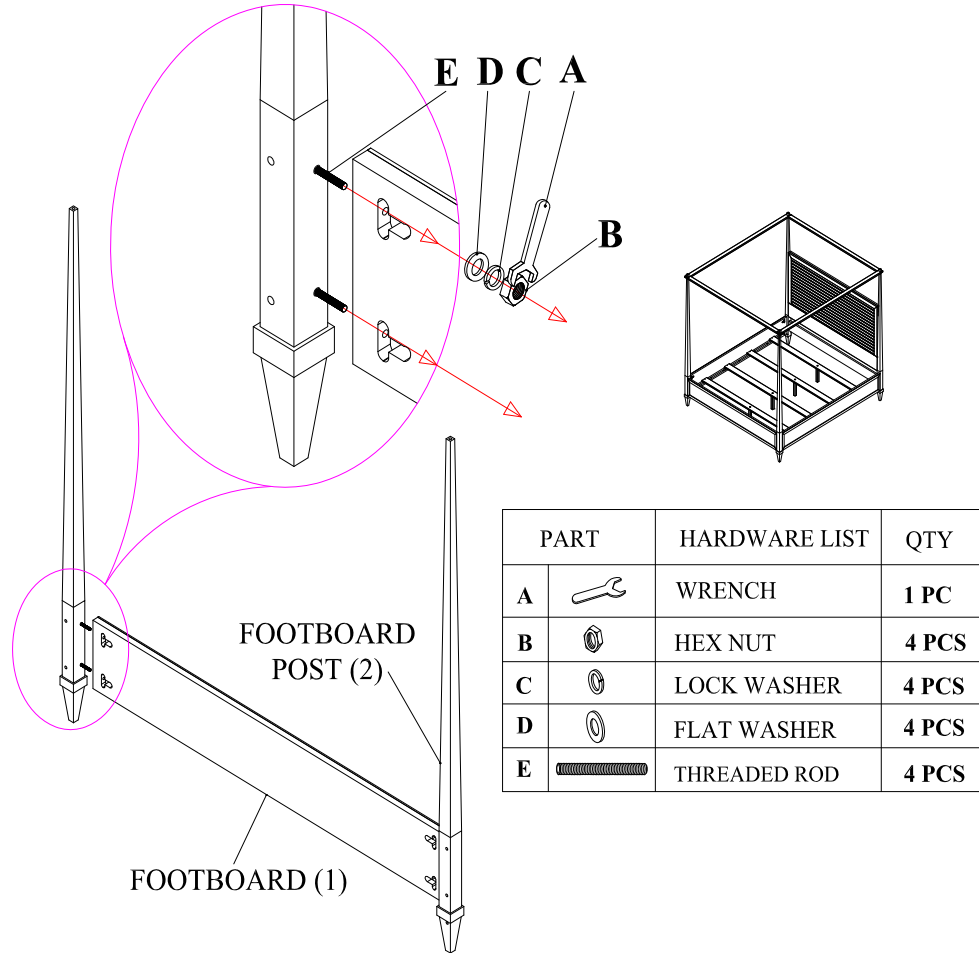

### *Assembly will require two people!*

1. Lay footboard panel front-side-down on flat, clean, non-marring surface.
2. Lay one post front-side-down beside footboard panel so that holes on inside of post align near holes on edge of footboard panel. (Holes on post for side rail attachment should be facing up.)
3. Insert (1) Threaded Rod (E) into each metal dowel in post thru open holes. Twist clockwise until tight.
4. Guide threaded rods on posts into holes on edge of footboard panel.
5. Add (1) Flat Washer (D), (1) Lock Washer (C), and (1) Hex Nut (B) to each threaded rod accessible through t-slot on footboard panel. Hand-tighten hardware.
6. Repeat steps 2-5 for other post on other side of footboard panel.
7. *With the help of another person*, carefully move assembled footboard to its upright position.
8. Use Wrench (E) to fully tighten all (4) threaded rods.

*Refer to "570-173HB series" and "570-173SRCA series" instruction sheets to fully assemble bed.*

LEXINGTON®  
HOME BRANDS

For additional consumer assistance please contact your Lexington dealer or call our Consumer Services Department at 1-336-474-5300, Monday-Friday, 8-5 EST. [www.lexington.com](http://www.lexington.com)

10/24/19