


Assembly Instructions

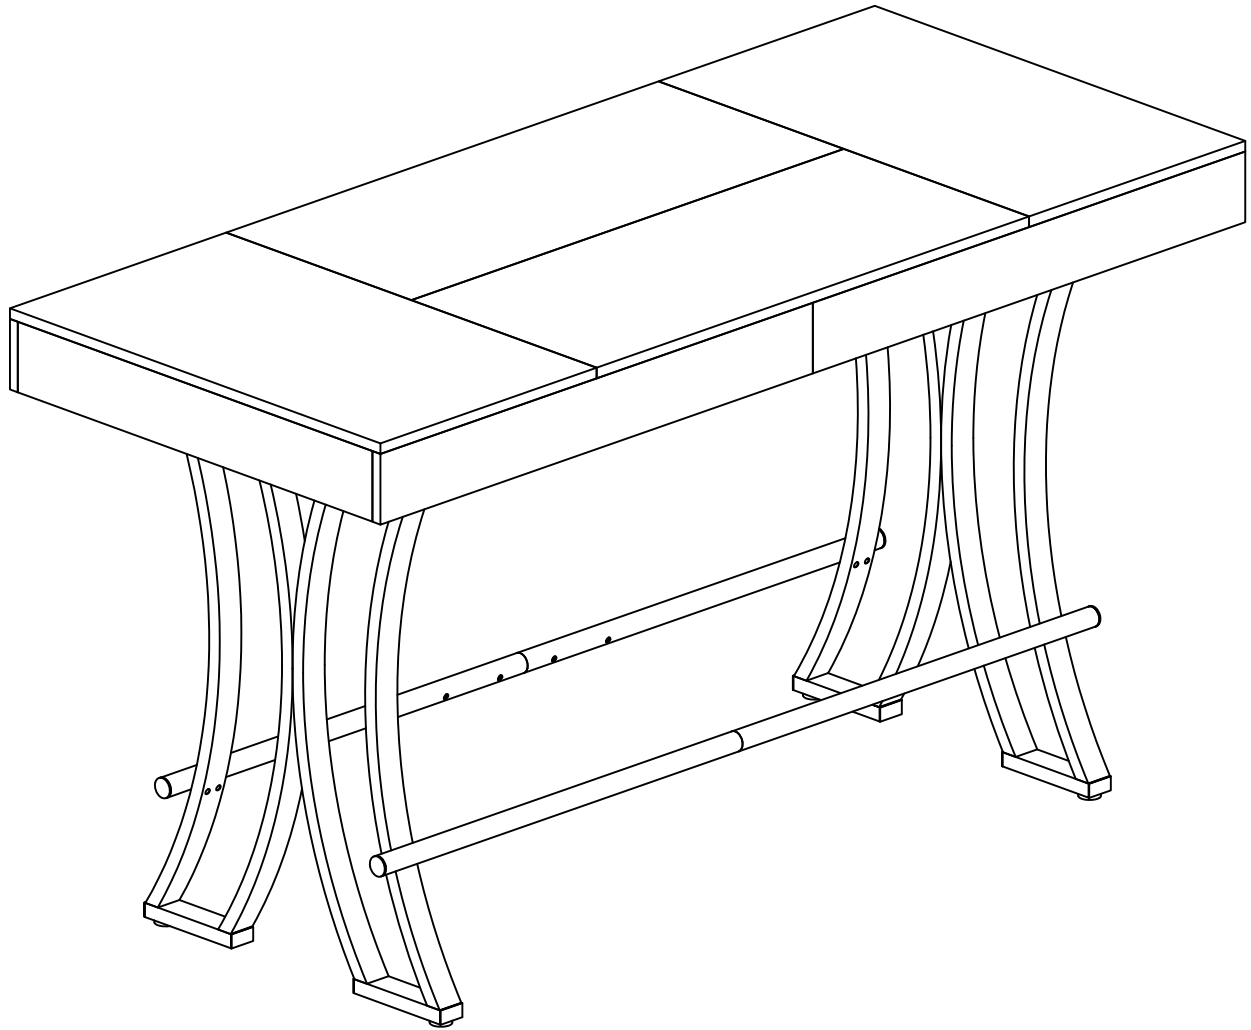


Bar Table

Model No.
HOGA-LD0037

Contact Us




We're here to help you.

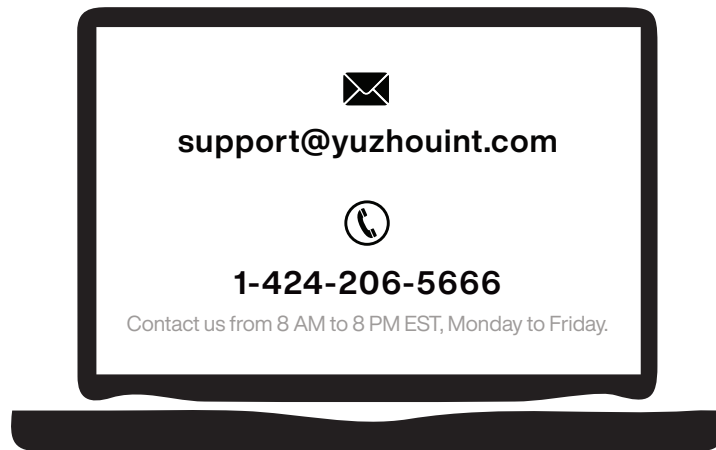

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

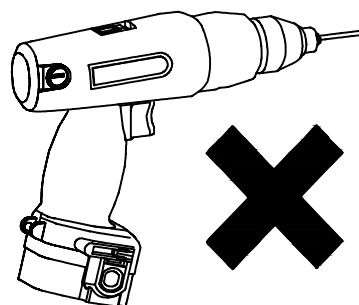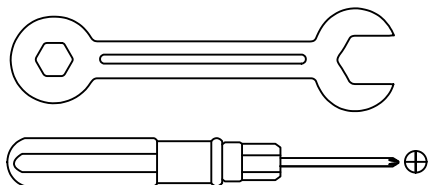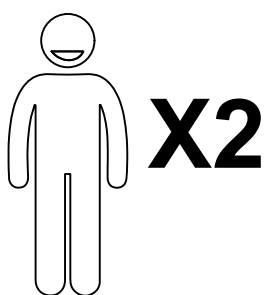



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

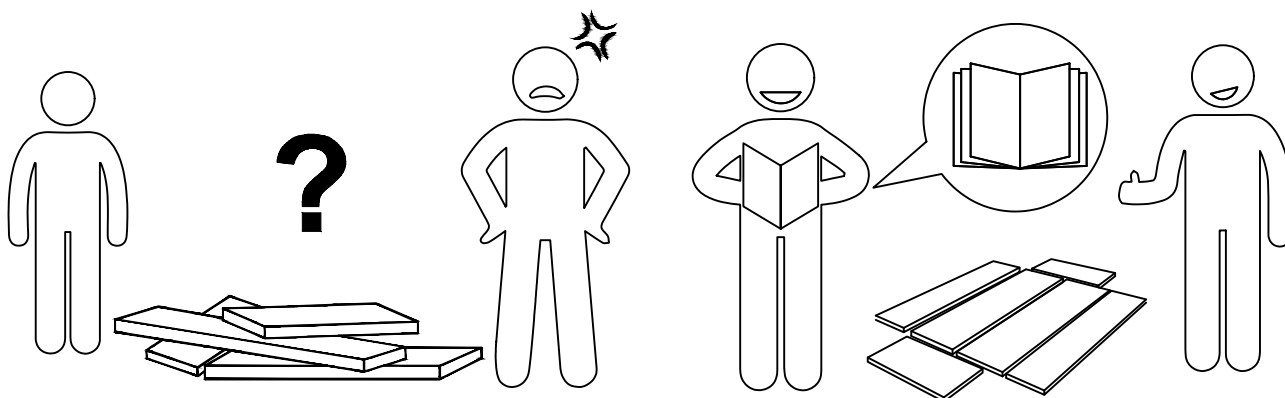

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.







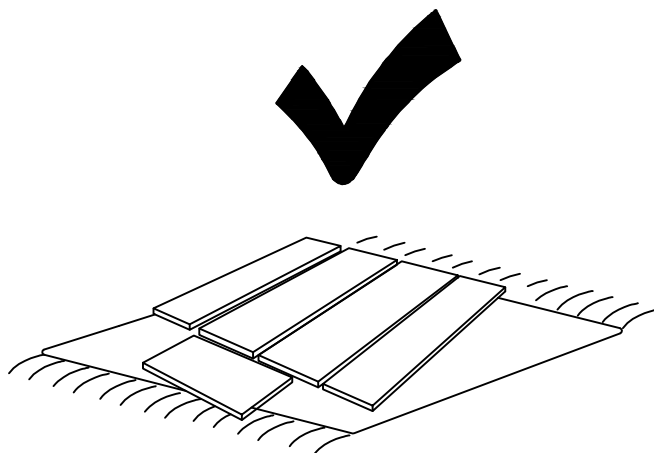
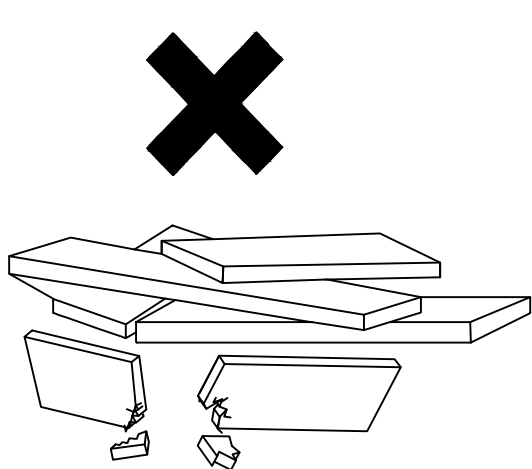


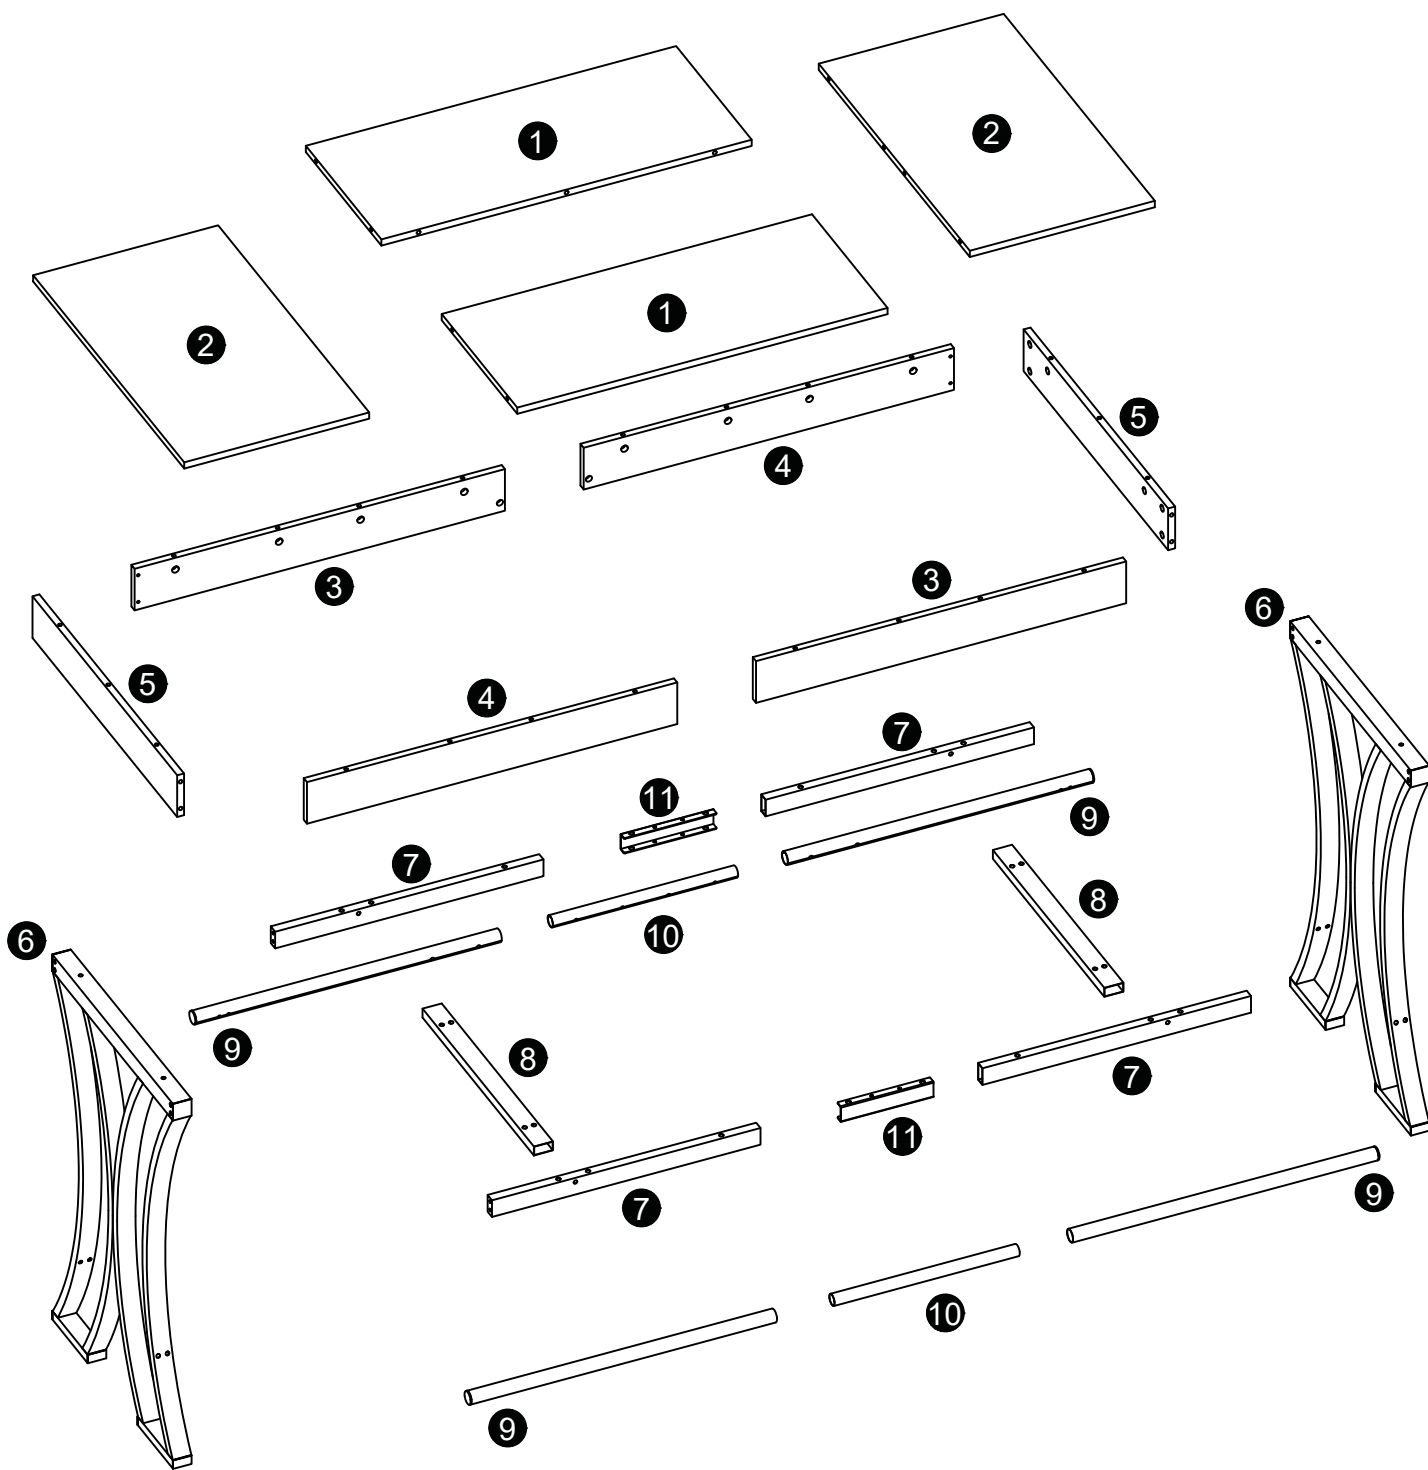




⚠ Caution



Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

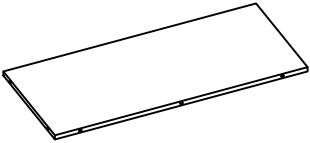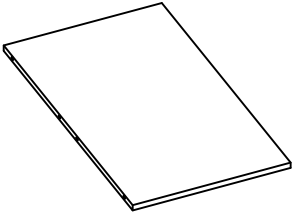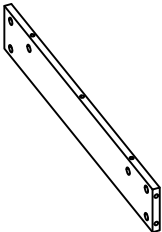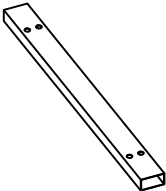1  2 pcs	2  2 pcs	3  2 pcs	4  2 pcs
5  2 pcs	6  2 pcs	7  4 pcs	8  2 pcs
9  4 pcs	10  2 pcs	11  2 pcs	

Hardware List



A	B	C	D
			
M6x12mm	M6x30mm	M6x50mm	M6x60mm
16 pcs+1pc	16 pcs+1pc	20 pcs+1pc	8 pcs+1pc

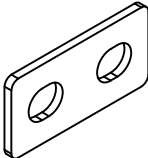E	F	G	H
			
Ø6x35mm	Ø15x12mm	Ø8x30mm	
28 pcs+1pc	28 pcs+1pc	13 pcs+1pc	2pcs


I	J	K
		
	M4	
4 pcs	1 pc	1 pc

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

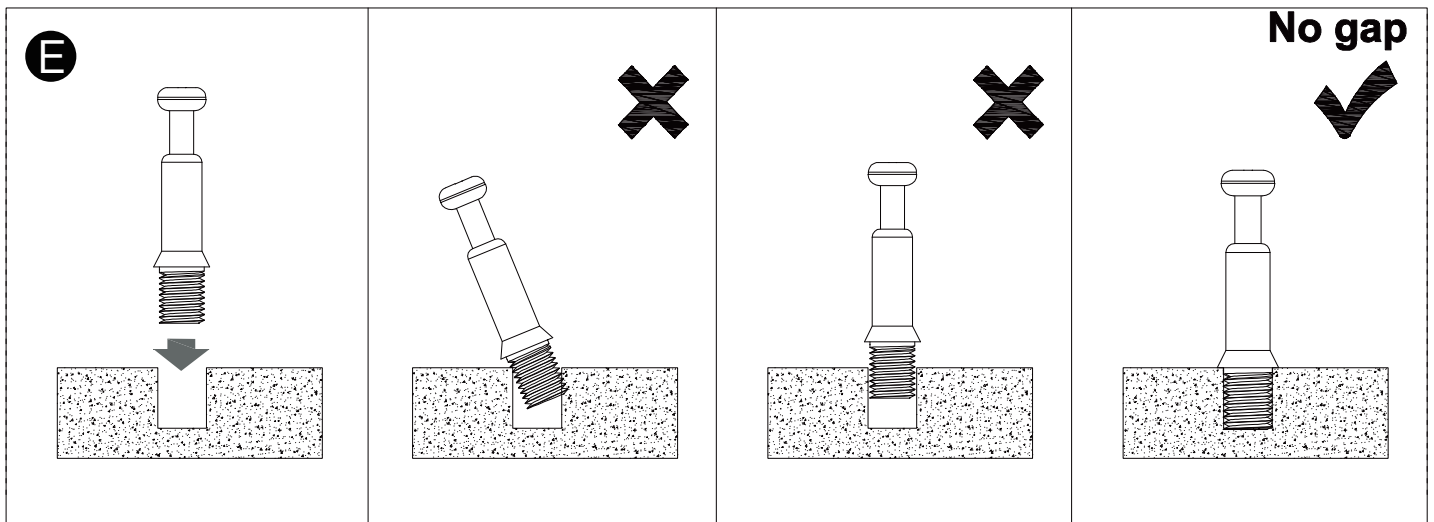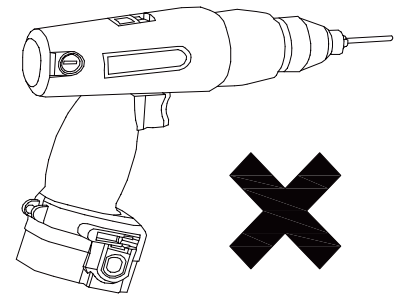

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

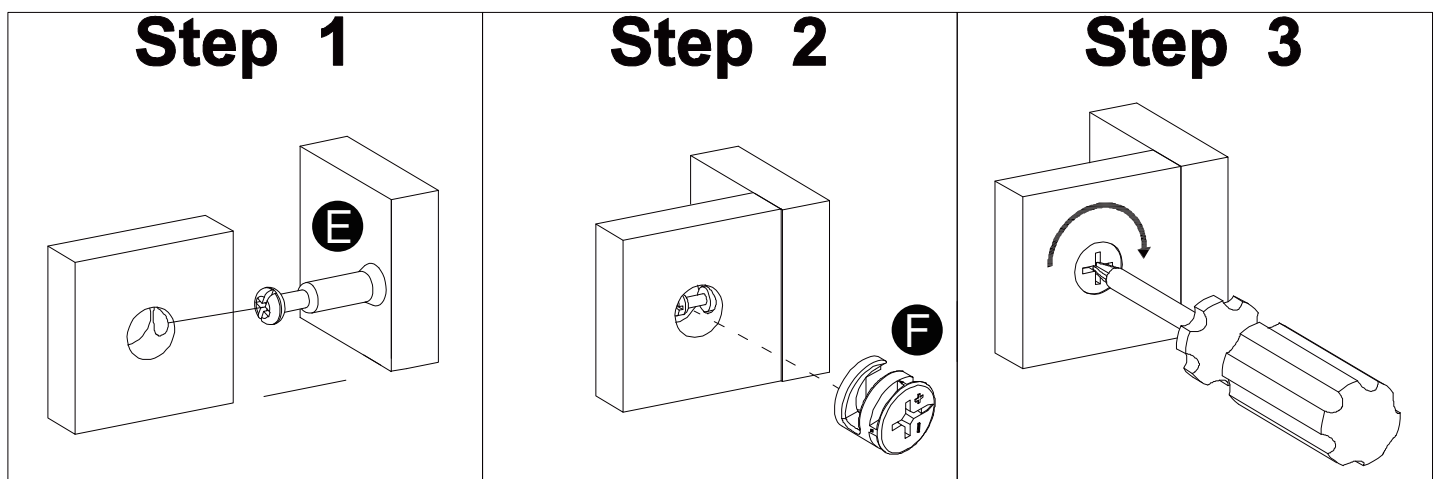


1

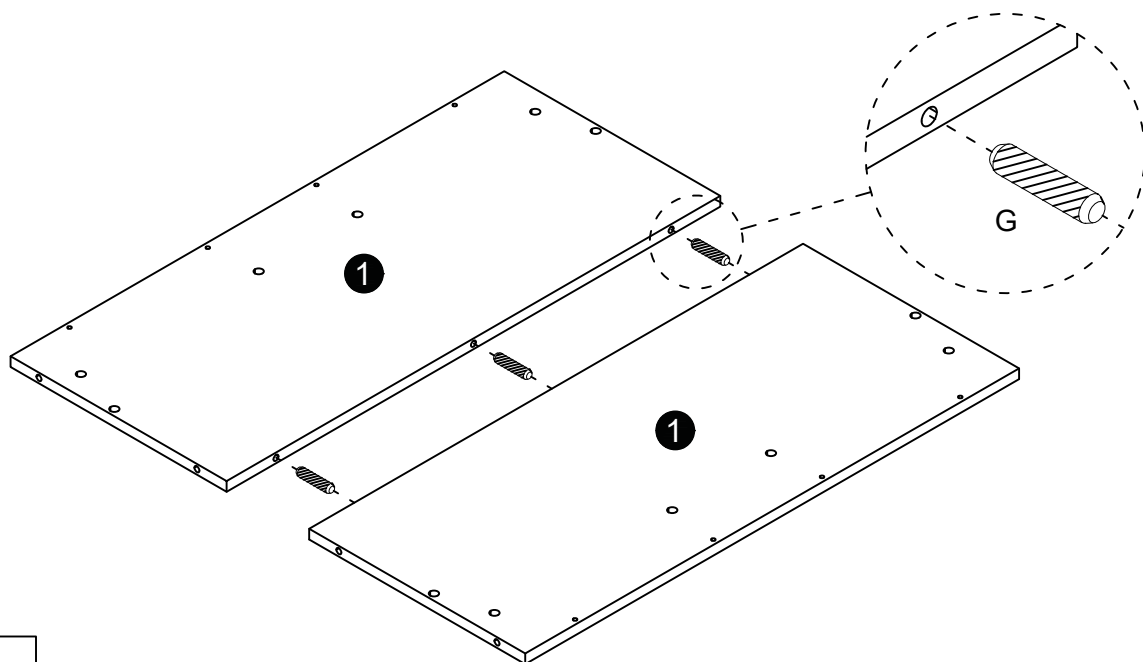

G

Ø8x30mm
3 pcs


2

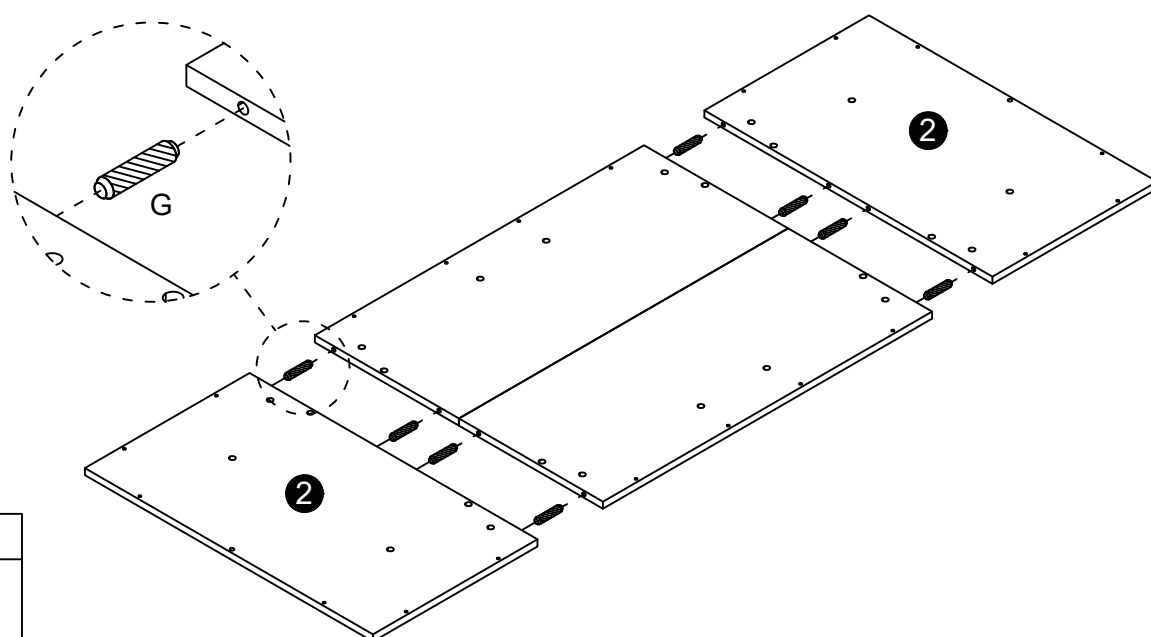

G

Ø8x30mm
8 pcs


3

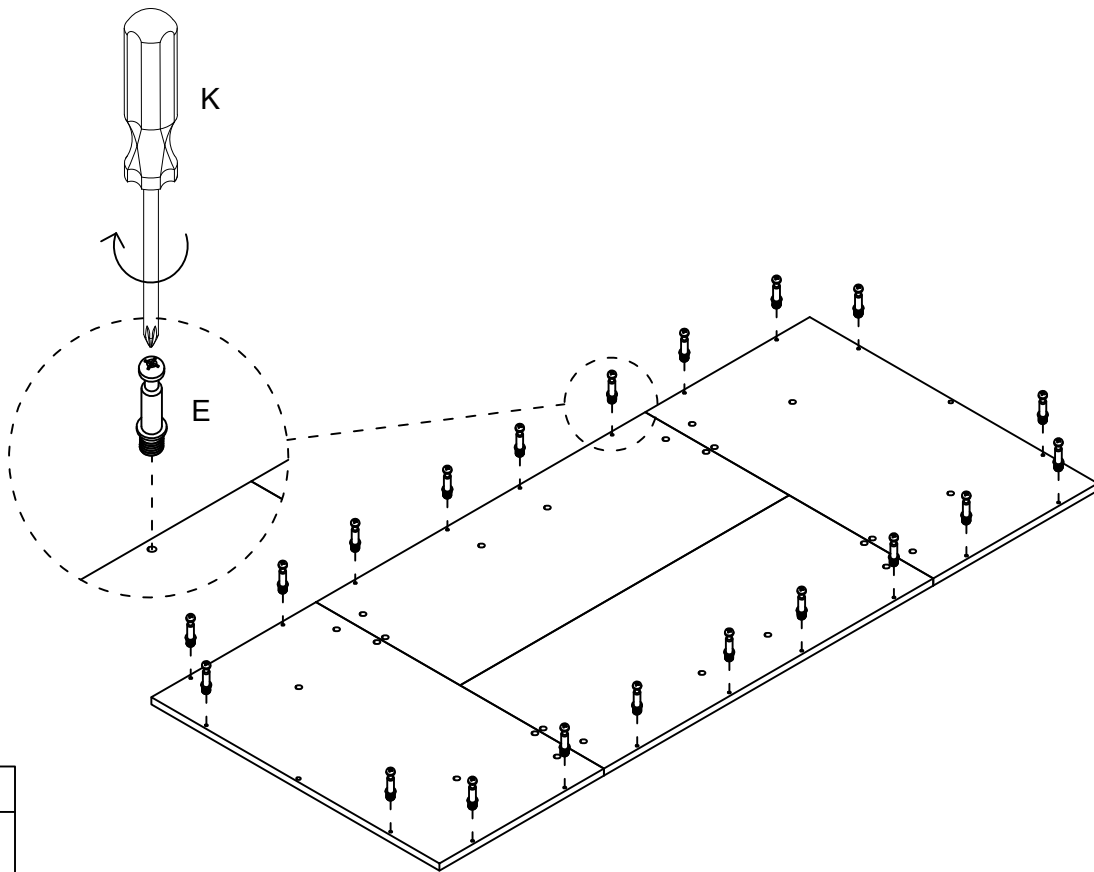

E

Ø6x35mm
20 pcs


4

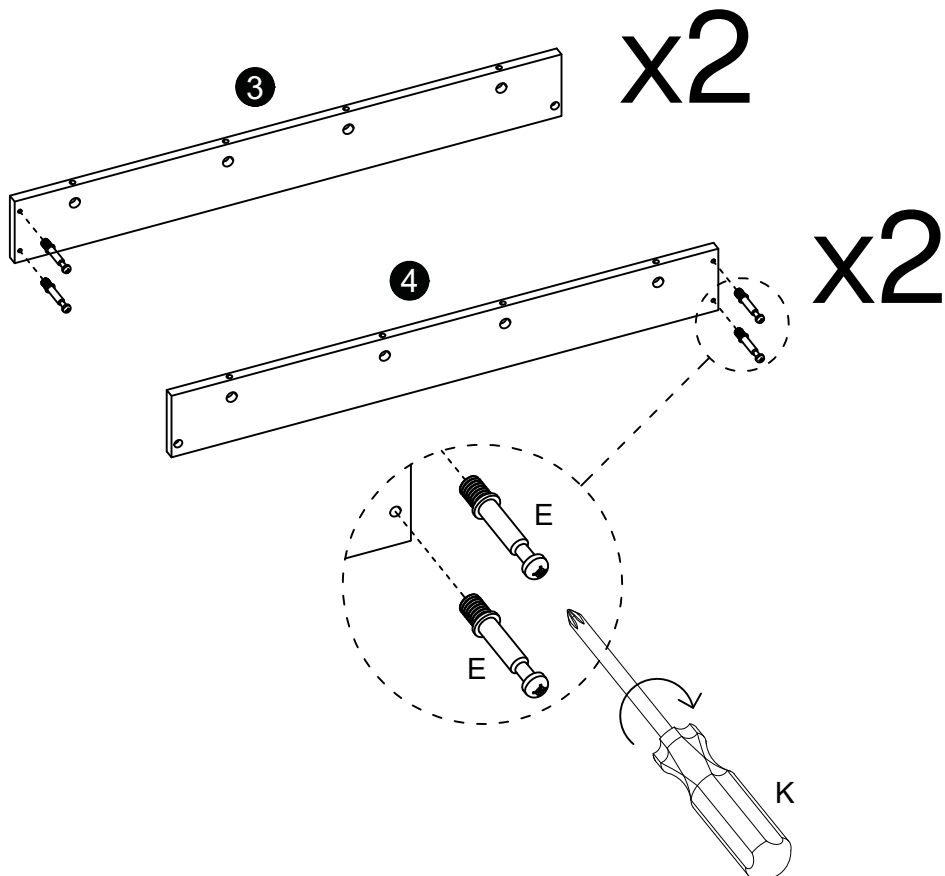

E

Ø6x35mm
8 pcs


5

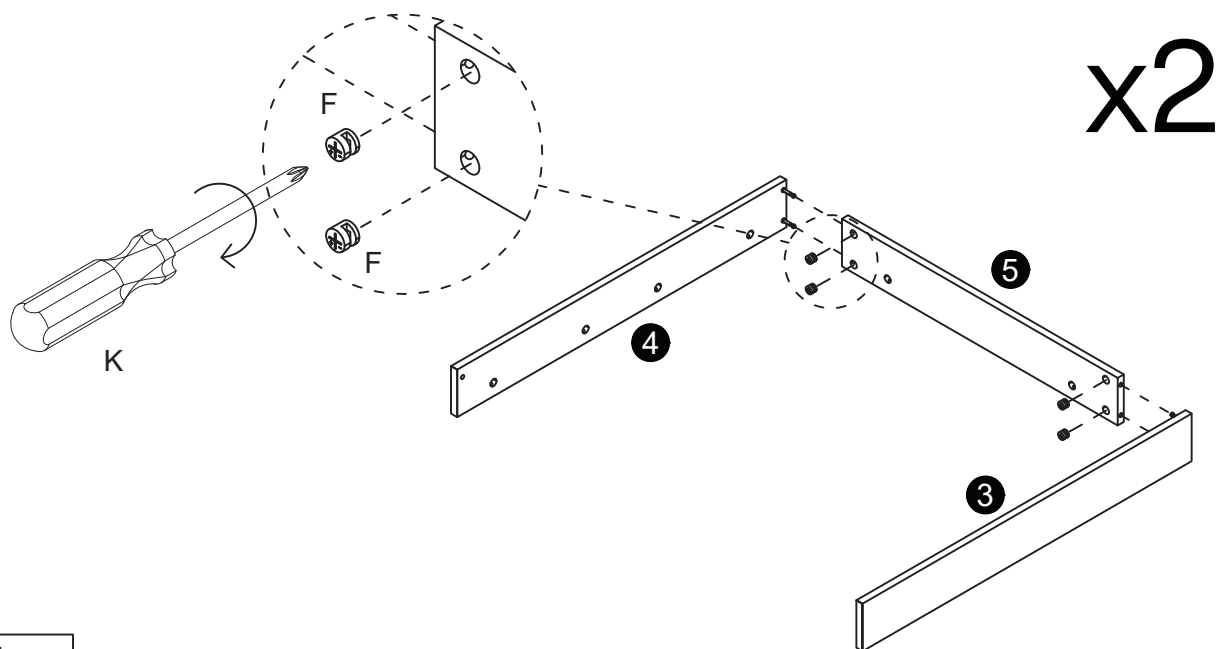

F


Ø15x12mm
8 pcs

6

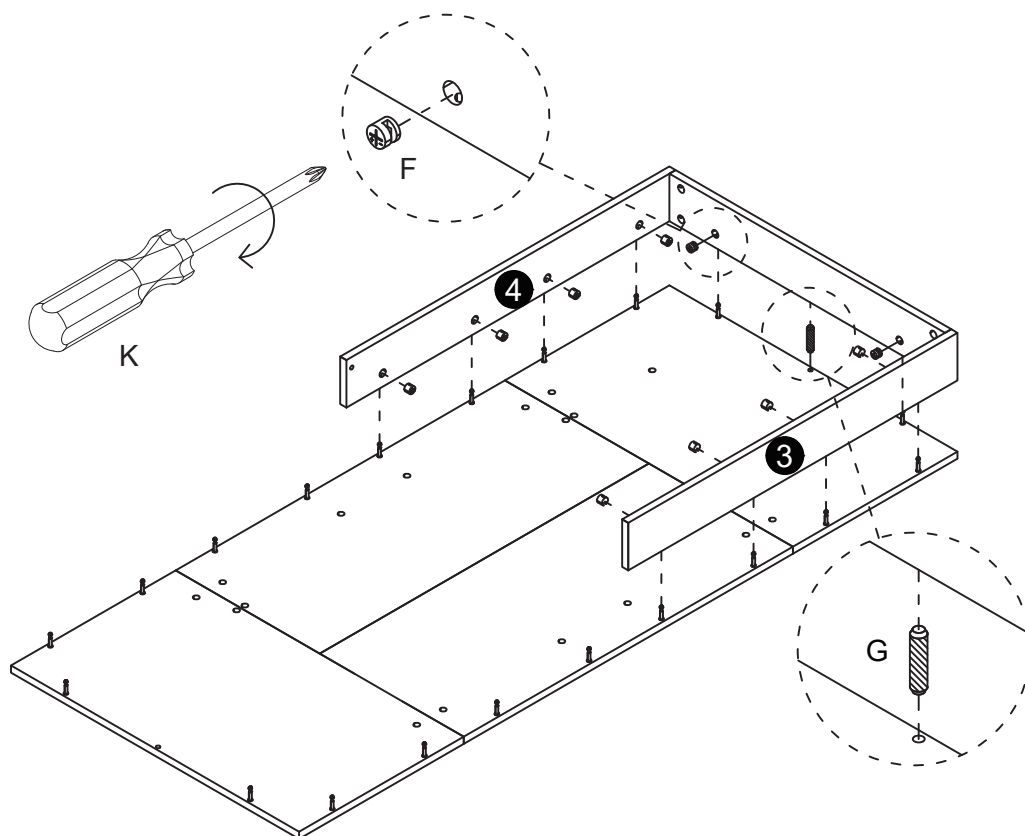


F	G
	
Ø15x12mm	Ø8x30mm
10 pcs	1 pcs


7

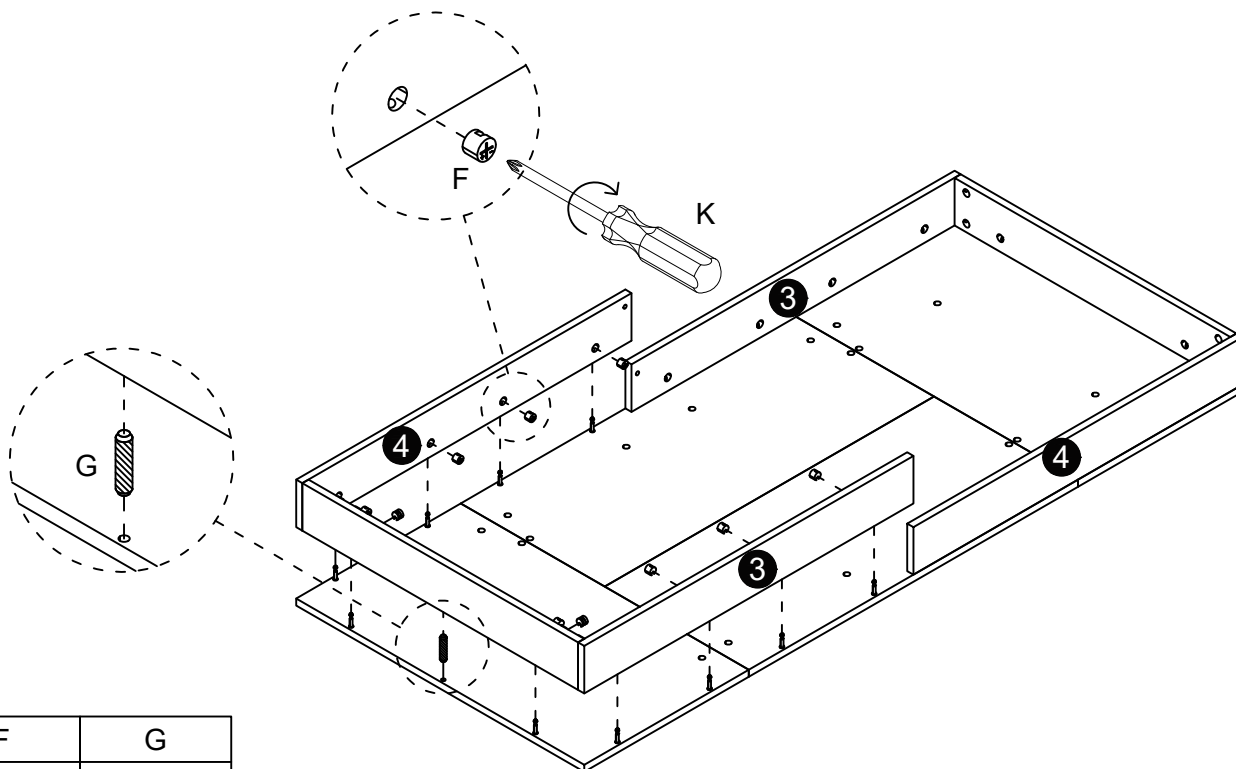



F	G
	
Ø15x12mm	Ø8x30mm
10 pcs	1 pcs

8

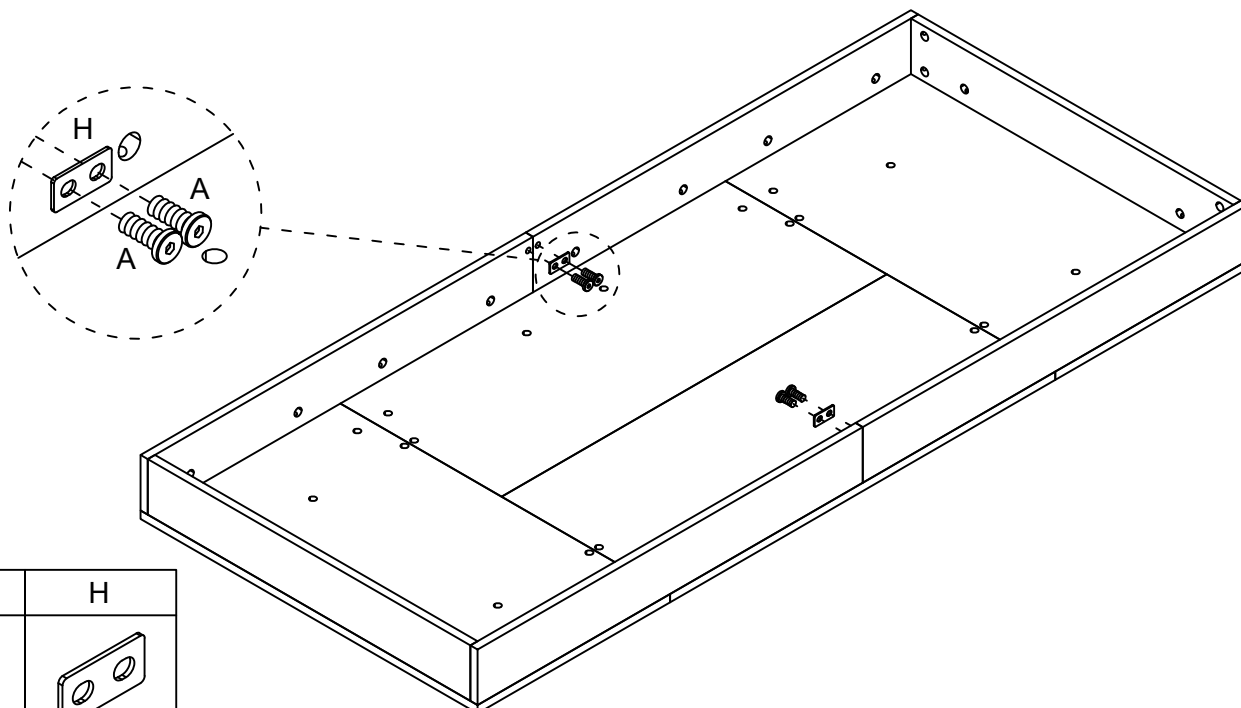

A	H
	
M6x12mm	
4 pcs	2 pcs



9

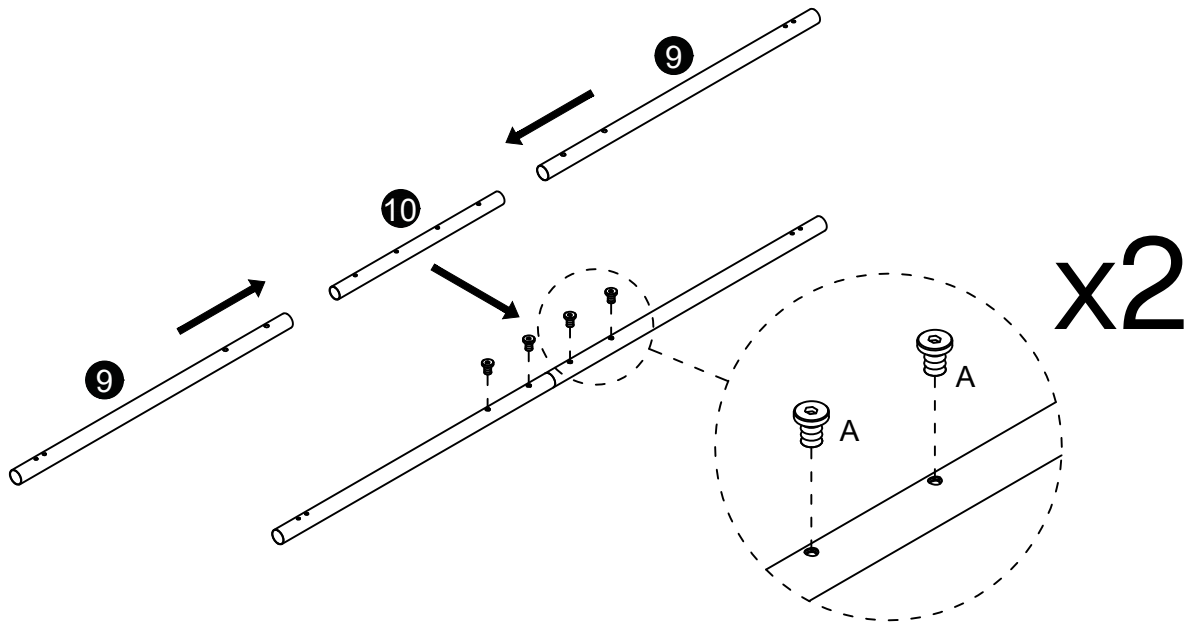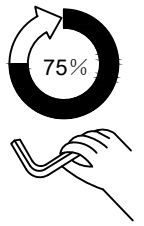

A

M6x12mm
8 pcs



10

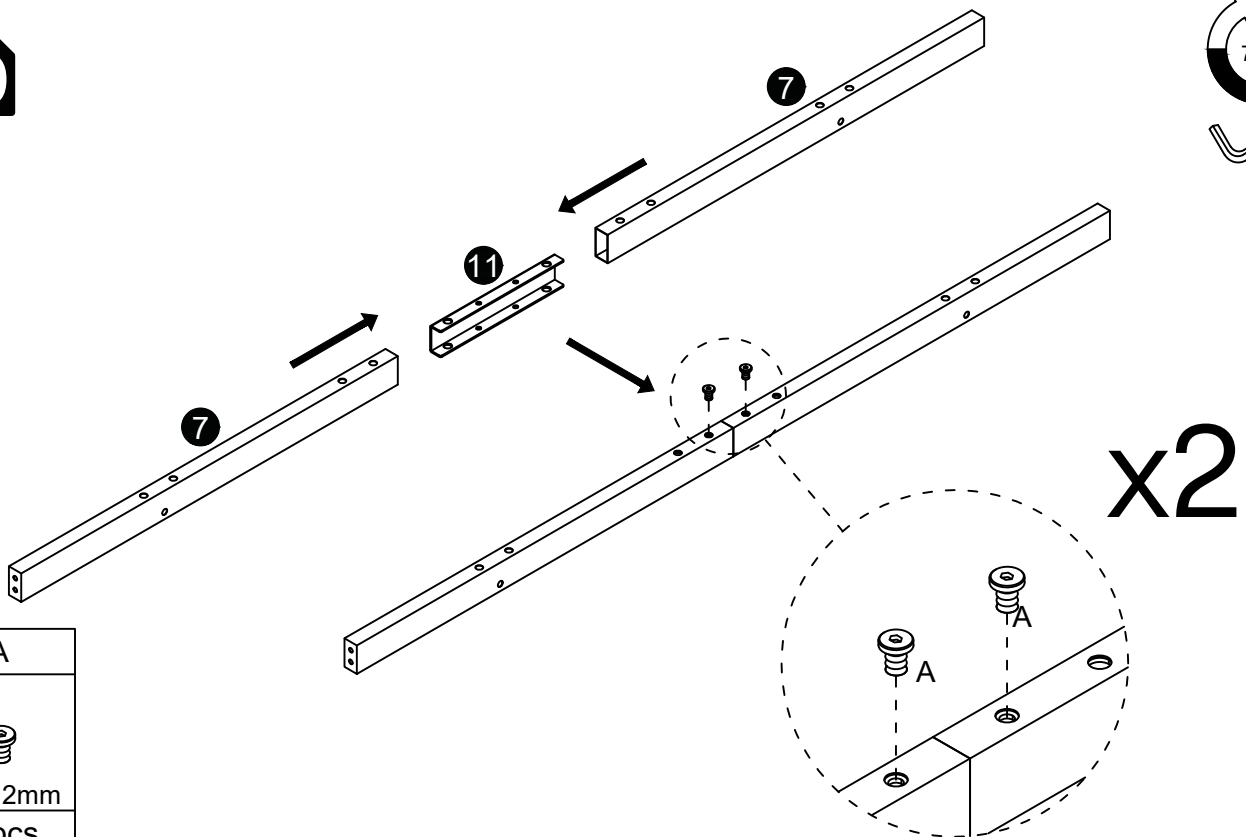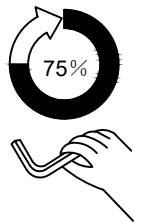

A

M6x12mm
4 pcs



11

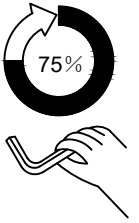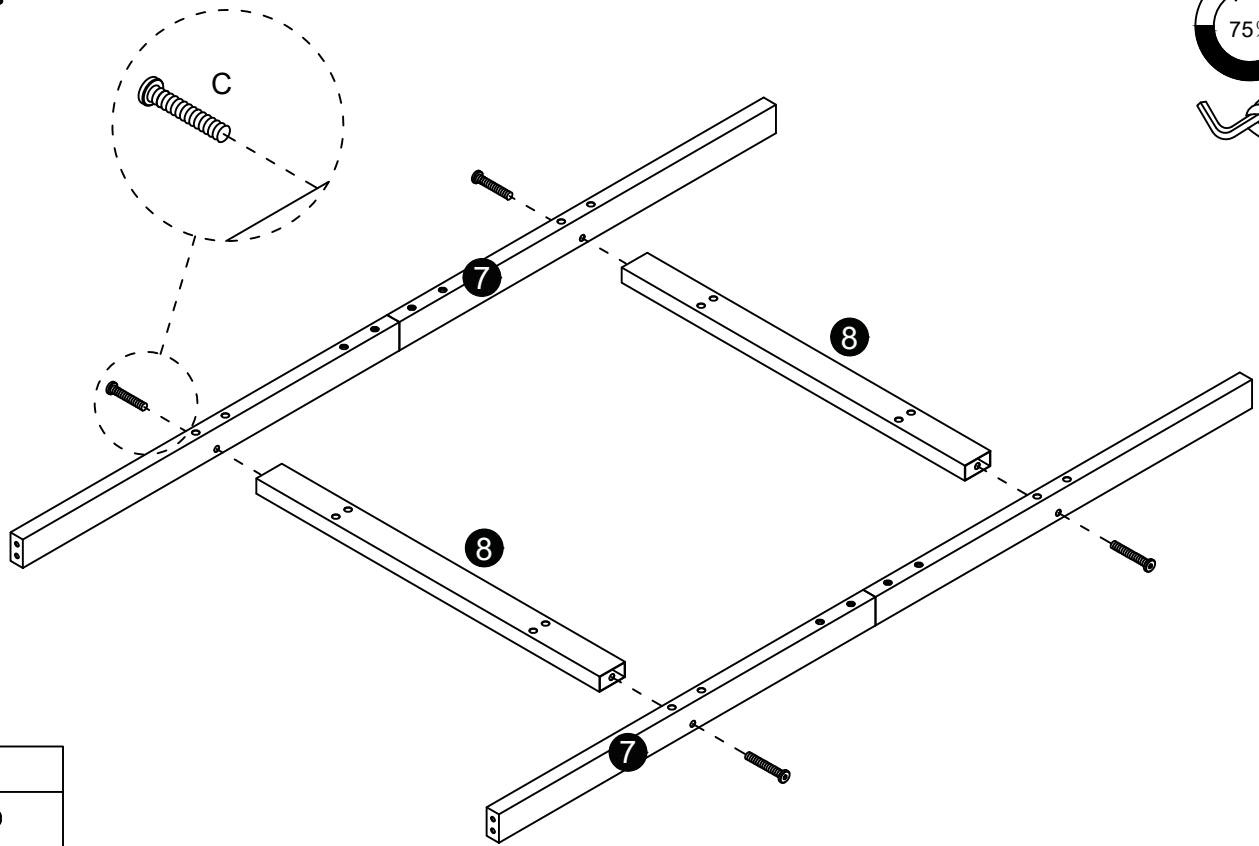

C

M6x50mm
4 pcs




12

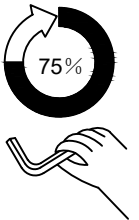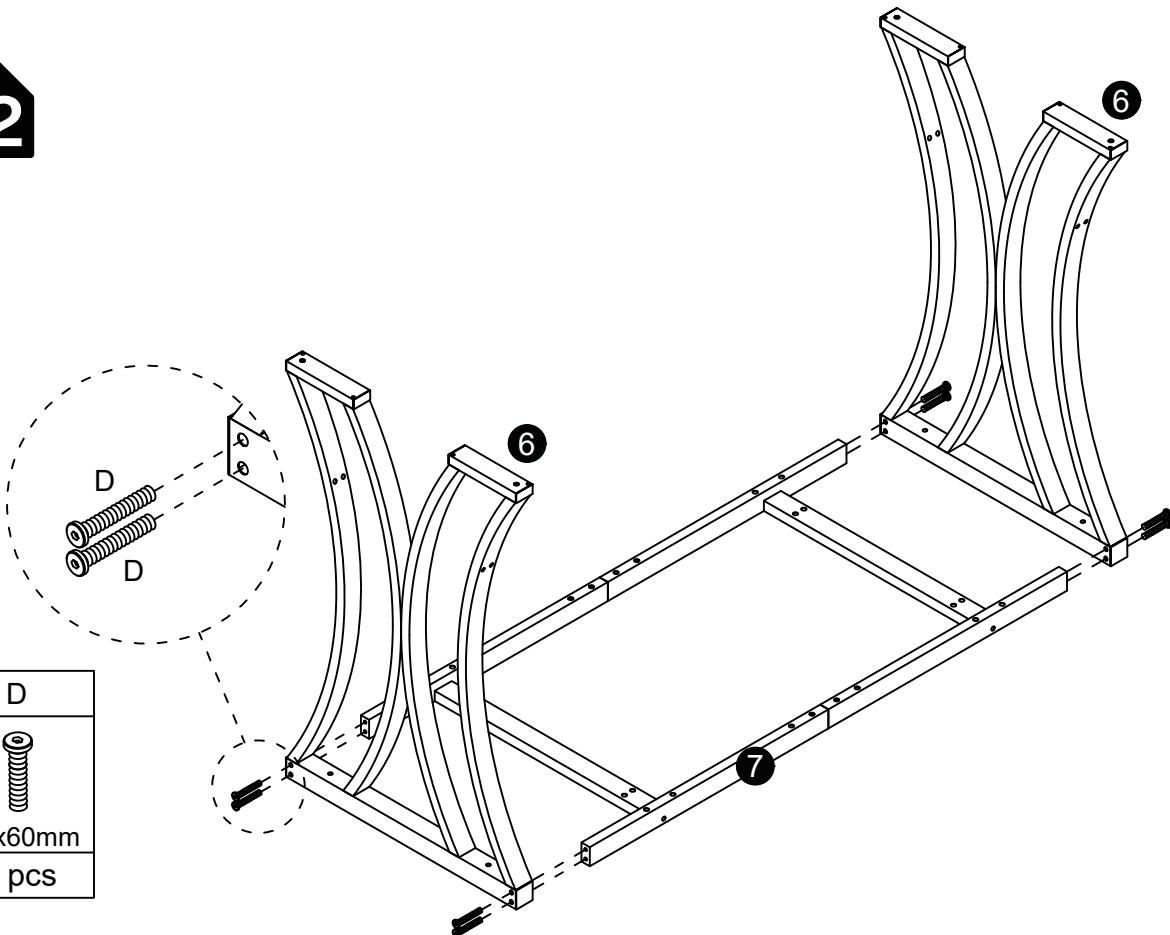

D

M6x60mm
8 pcs



13

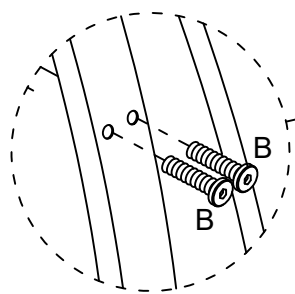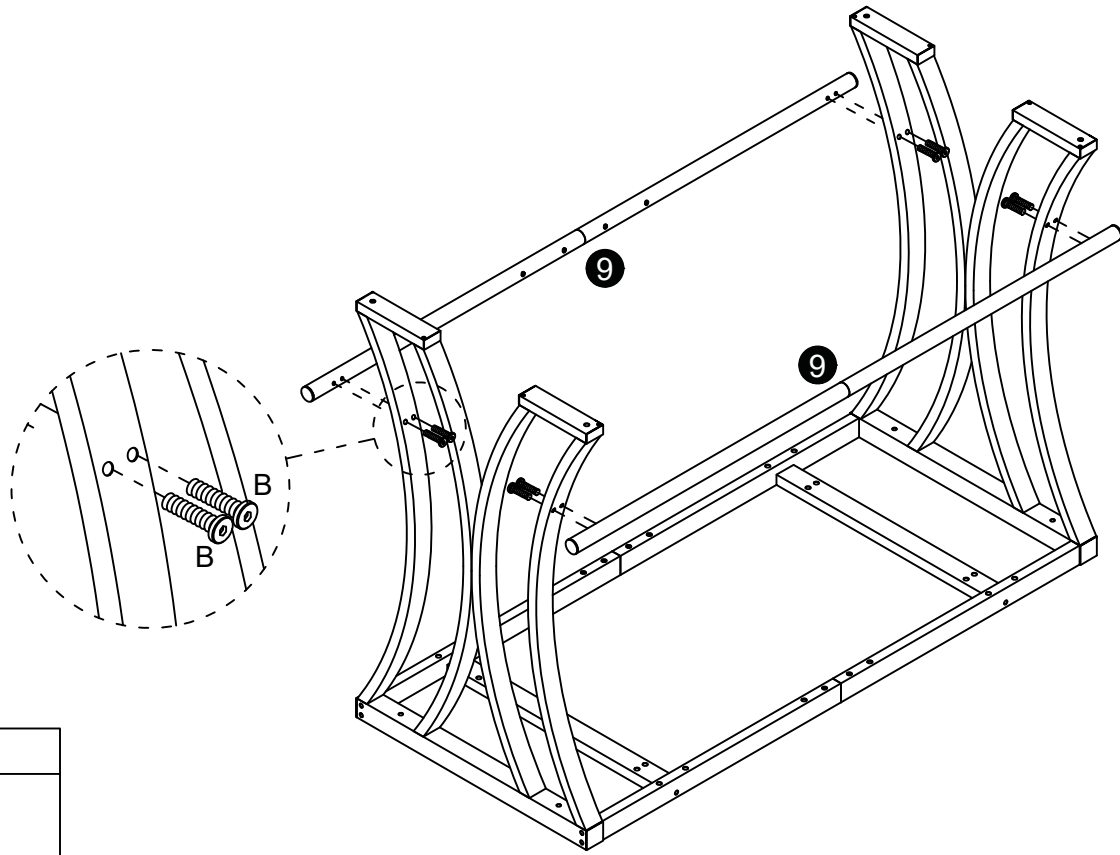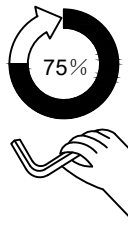


B

M6x30mm
8 pcs



14

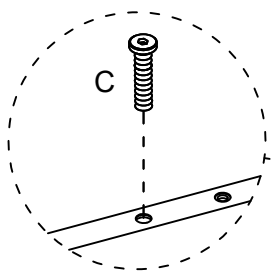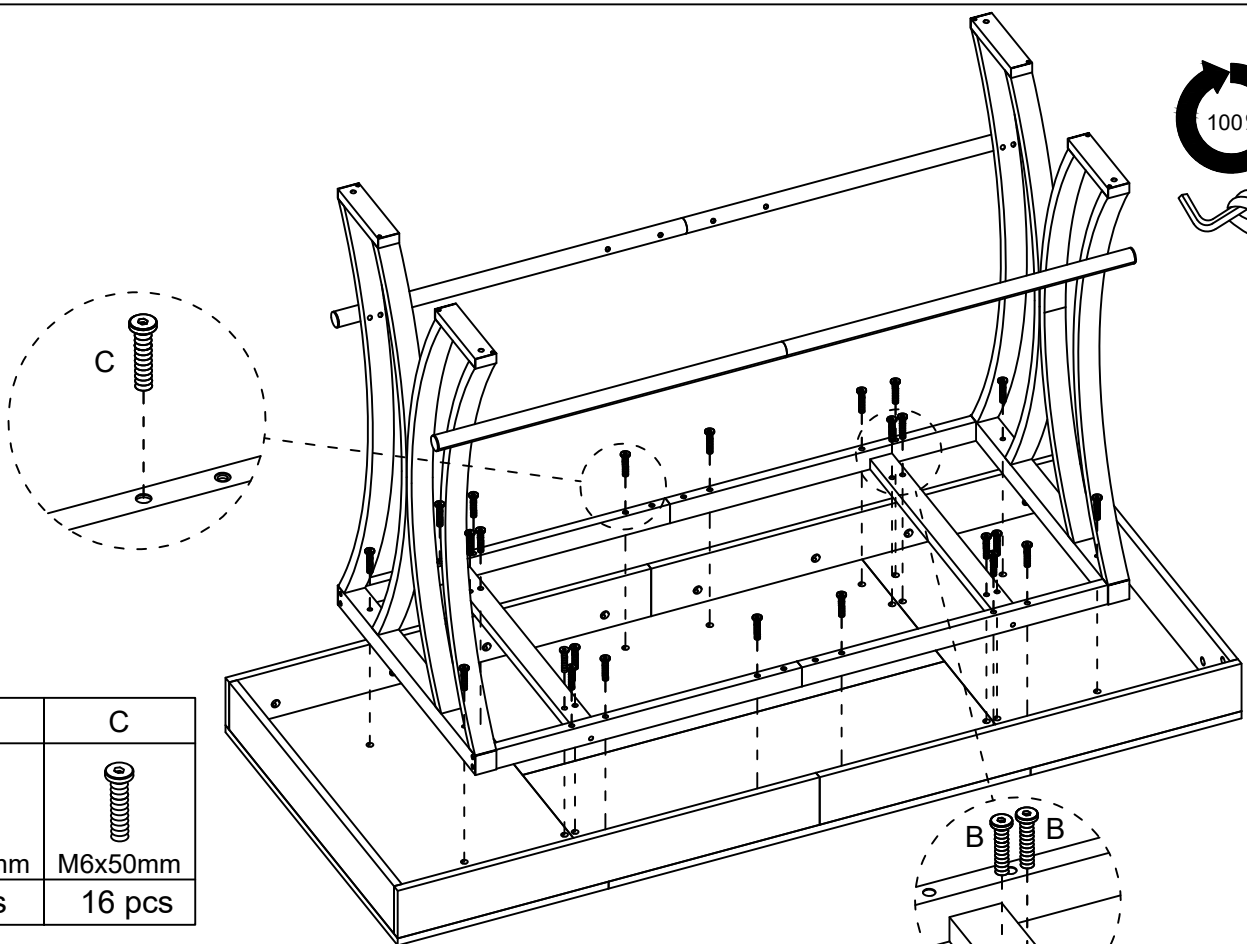


B	C
	
M6x30mm	M6x50mm
8 pcs	16 pcs

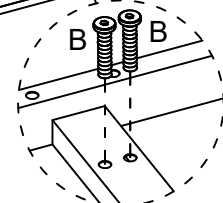

15

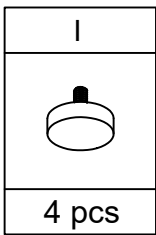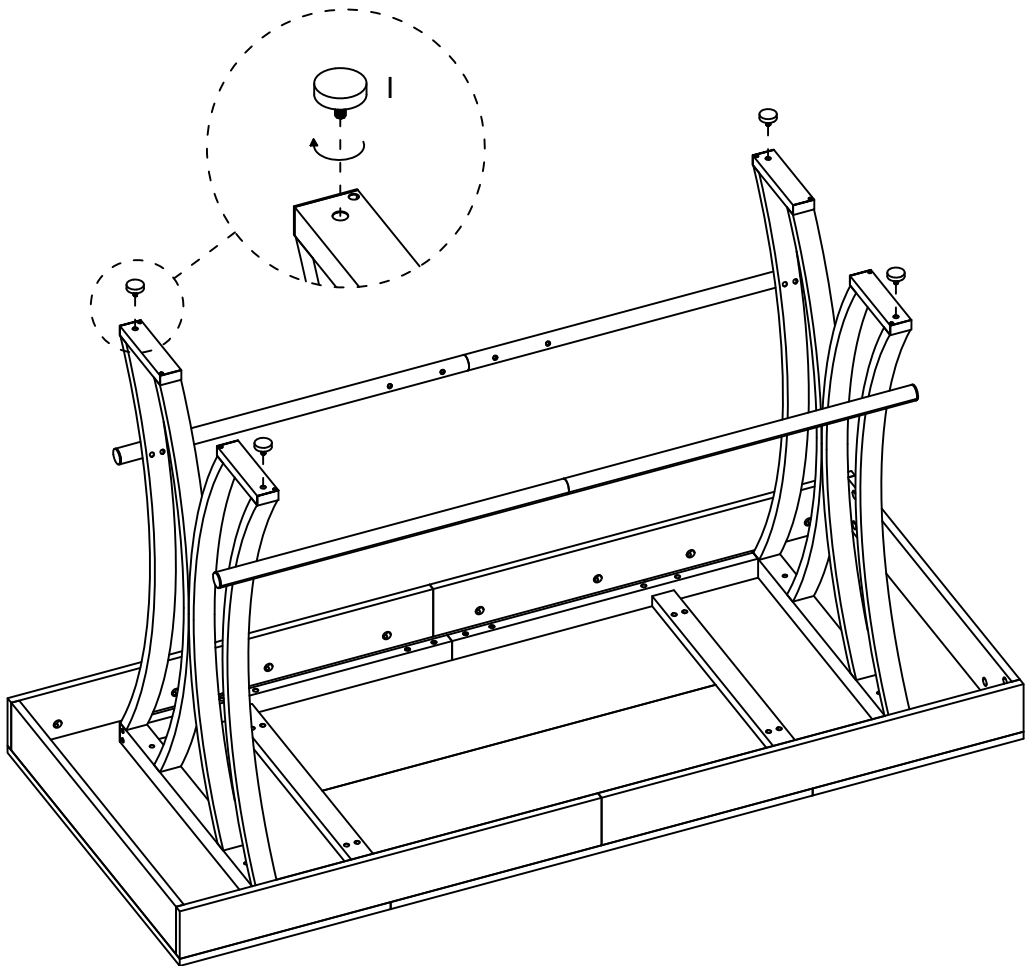

16

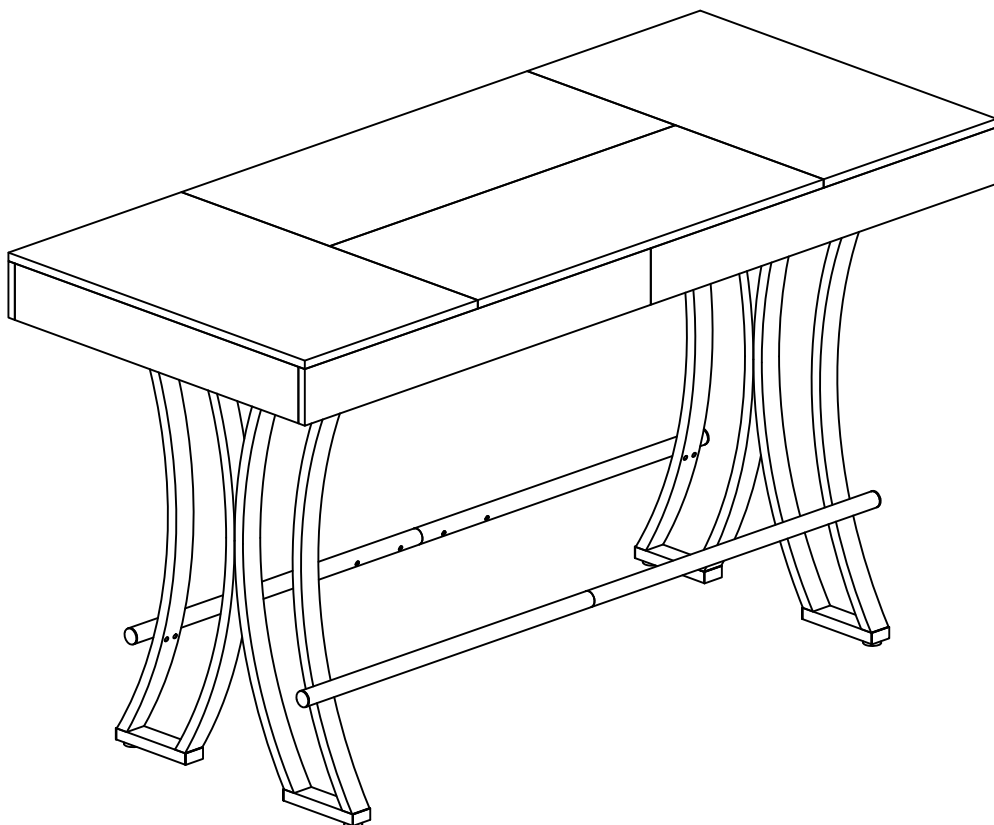

Thank you for your support!

