

V-CB25-0819 PF030

















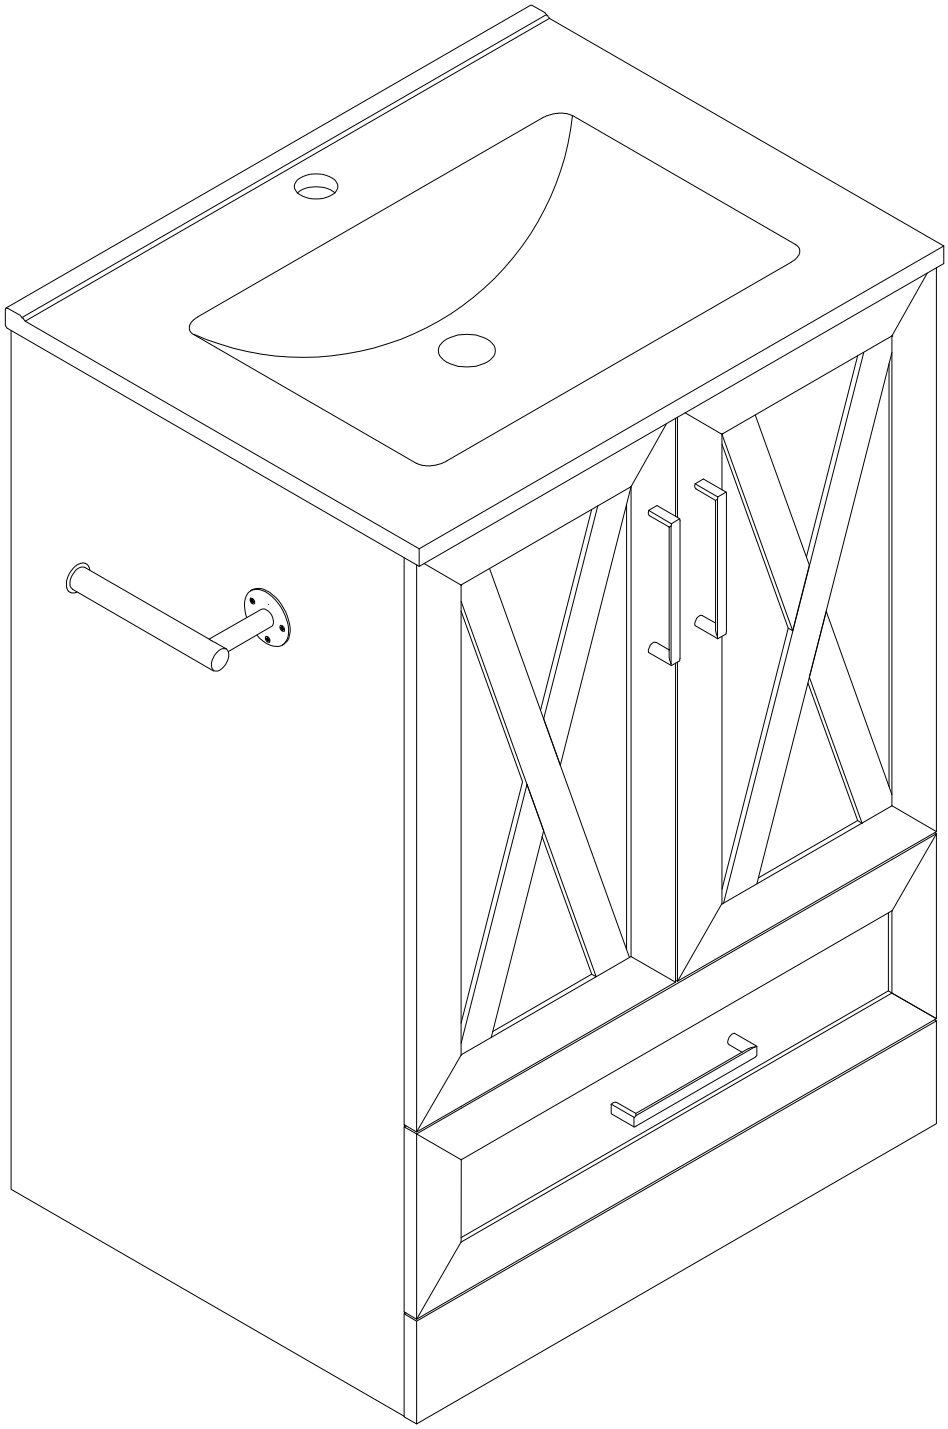


PF030

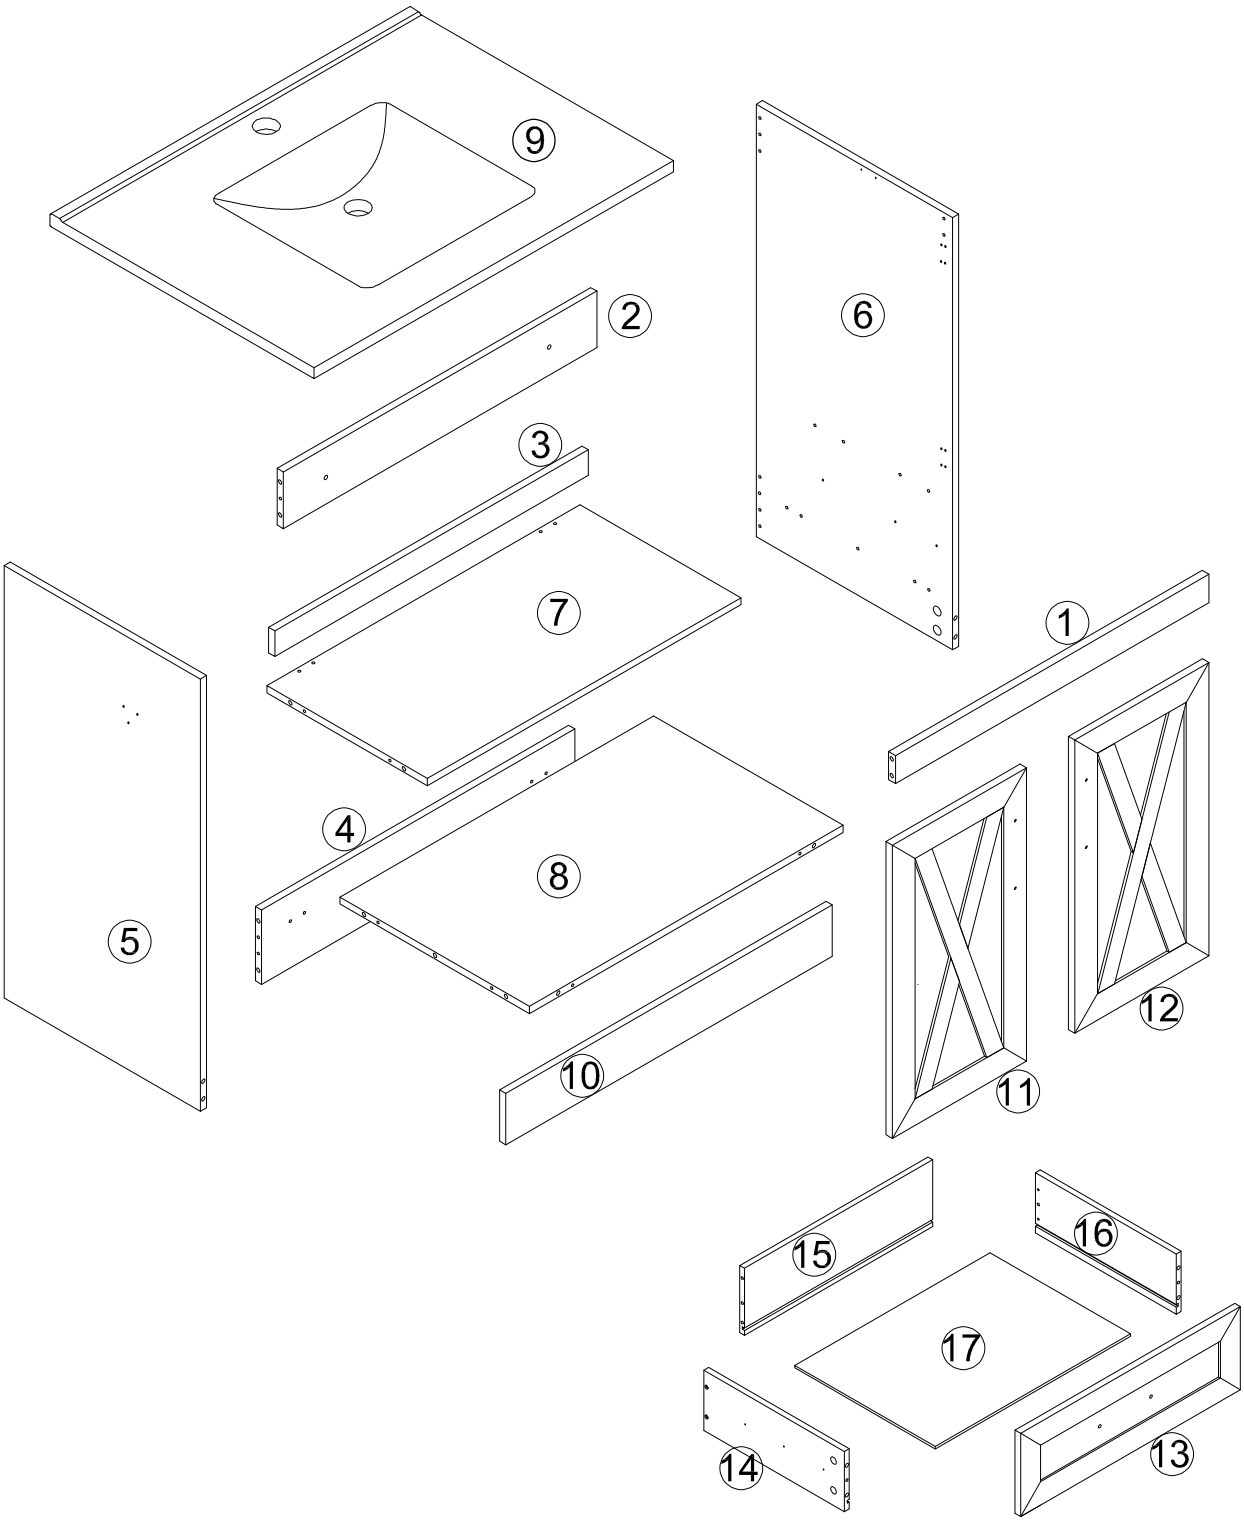

PARTS:

PF030

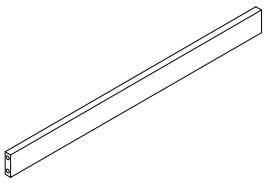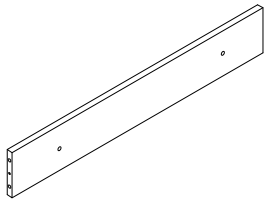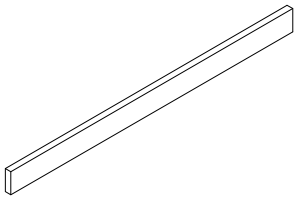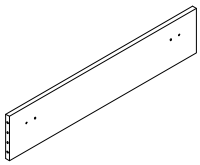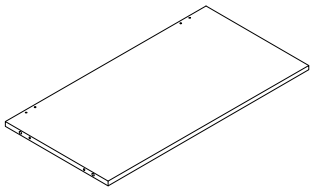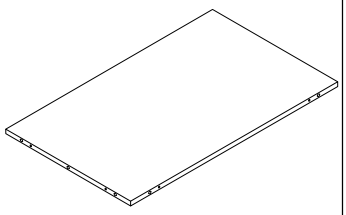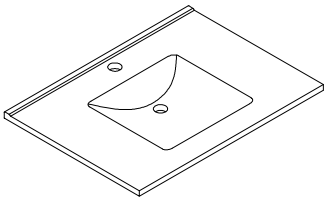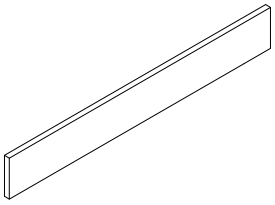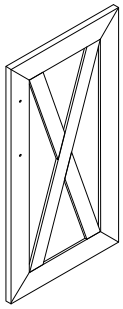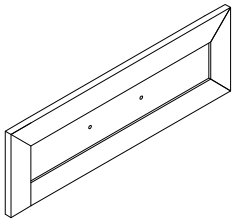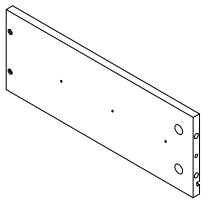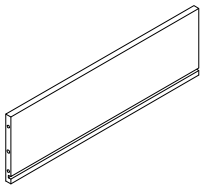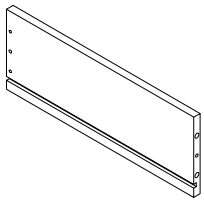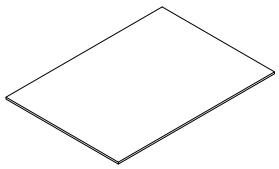① x1 	② x1 	③ x1 	④ x1 
⑤ x1 	⑥ x1 	⑦ x1 	⑧ x1 
⑨ x1 	⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 	⑯ x1 
⑰ x1 			


Hardware

PF030

A	x36+1
	
Ø6x34mm	

B	x36+1
	
Ø15x9.5mm	

C	x24+1
	
Ø6x30mm	

D	x1SET
	
12"x45mm	

E	x4
	
Ø8x35mm	


F	x4
	
5/32"x19mm	


G	x2
	
5/32"x10mm	


H	x24+1
	
Ø8x15mm	

I	x12
	
Ø4X10mm	

J	x7
	
Ø8x12mm	


K	x1
	


L	x3
	

M	x4
	
Ø35mm	

N	x2
	
Ø8x50mm	

O	x2
	
Ø8x40mm	


P	x1
	


Q	x2
	

R	x4
	
Ø13x4mm	

1


PF030

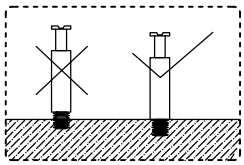

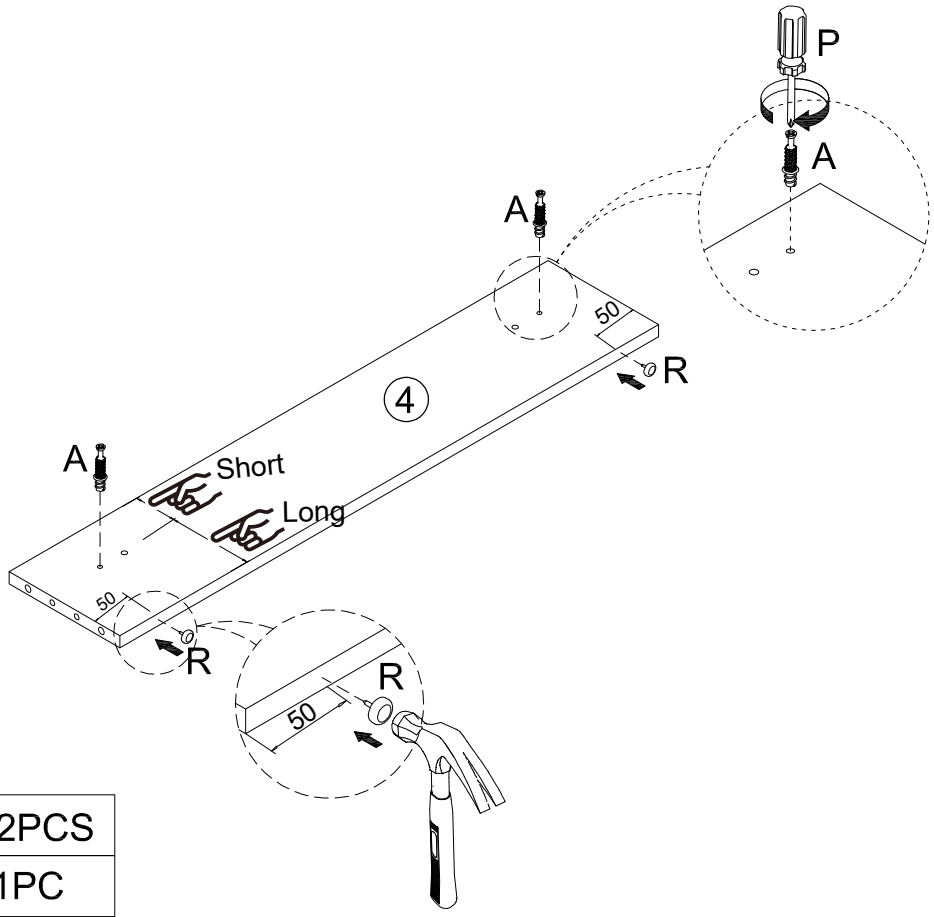

	A. x2PCS
	P. x1PC
	R. x2PCS


2

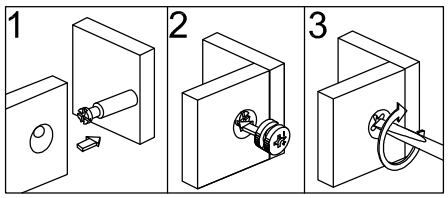


	B. x2PCS
	C. x2PCS

3


PF030

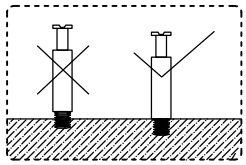


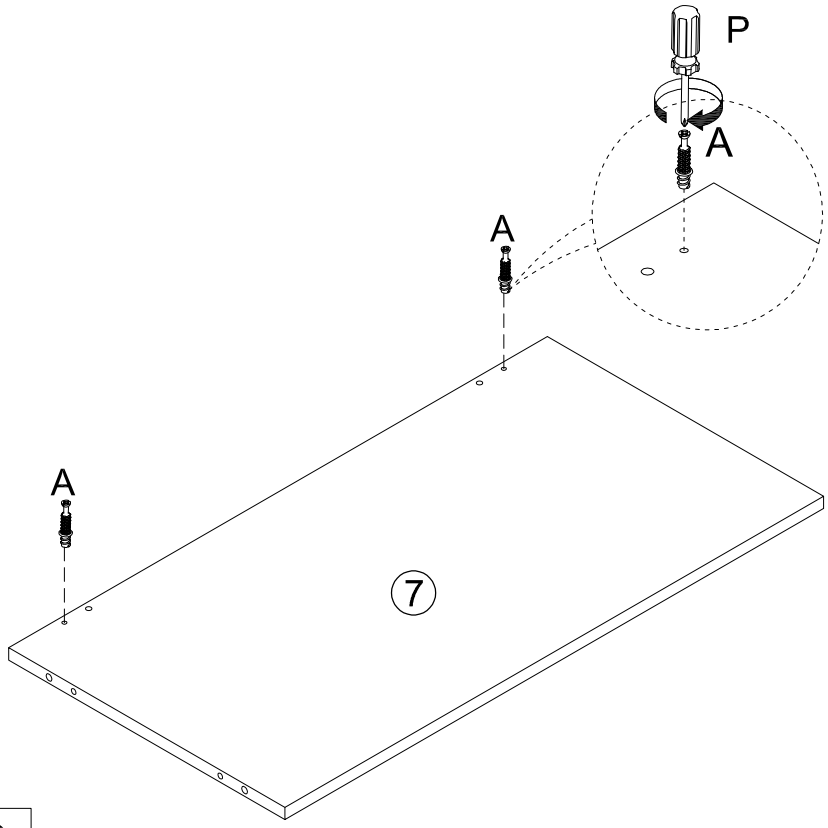

	A. x2PCS
	P. x1PC

4

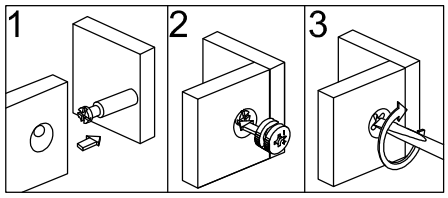

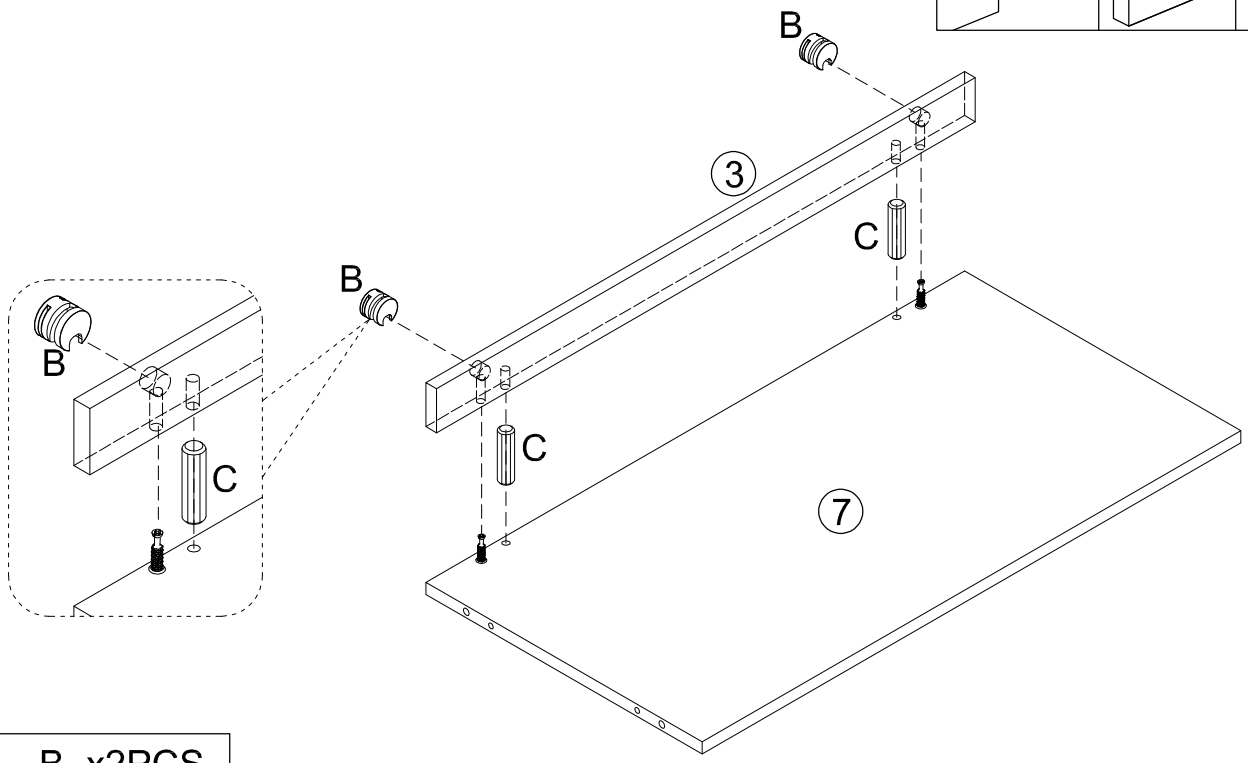


	B. x2PCS
	C. x2PCS


5

INSTALLATION STEPS

Press the plastic part in the indicated direction to separate drawer runner **D1** and **D2** before assembling.


REMARK:
Please grip the **D1** part while sliding the **D2** part

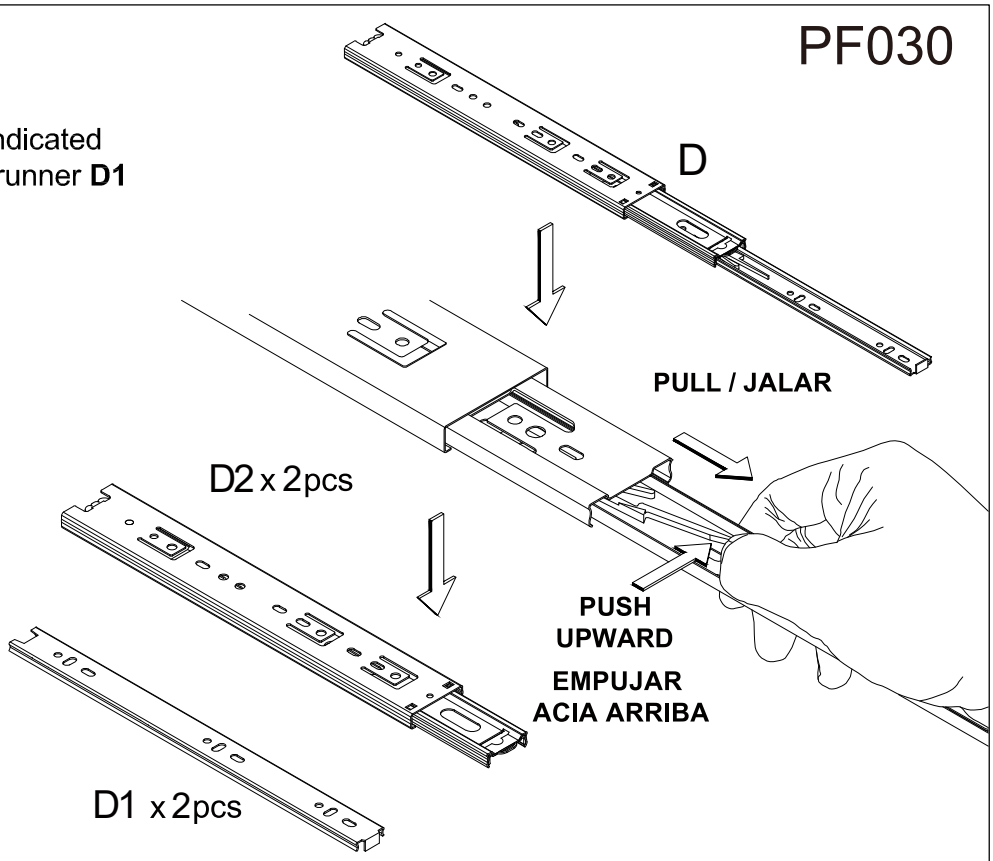

 Ⓓ x1 set

6

ATTENTION:
Please locate the holes on the back of part **D2**

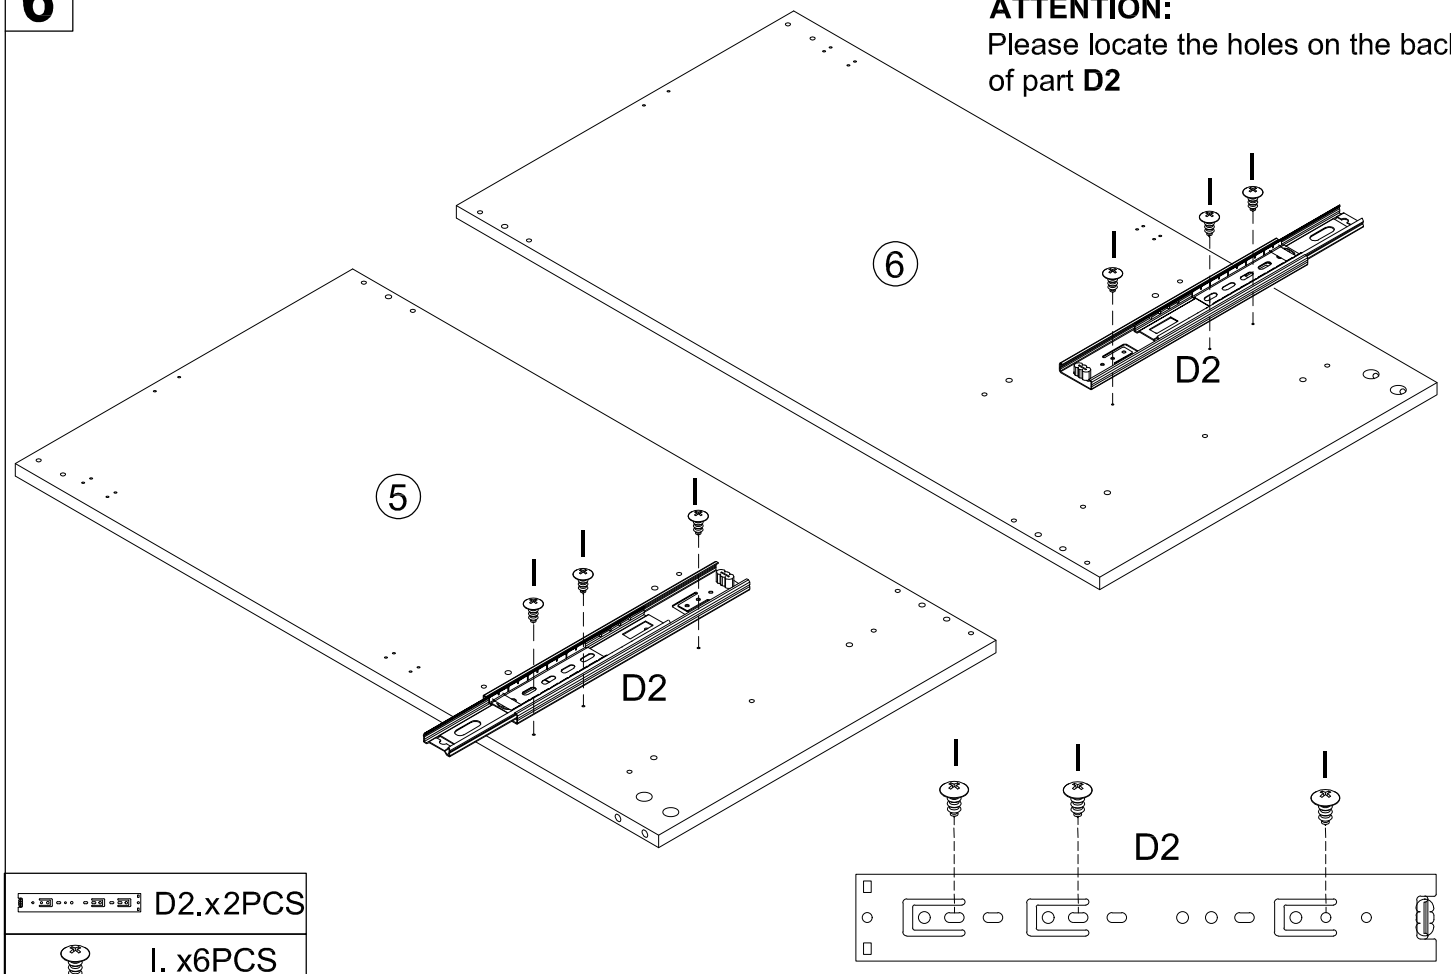


 D2.x2PCS

 I. x6PCS


7

PF030

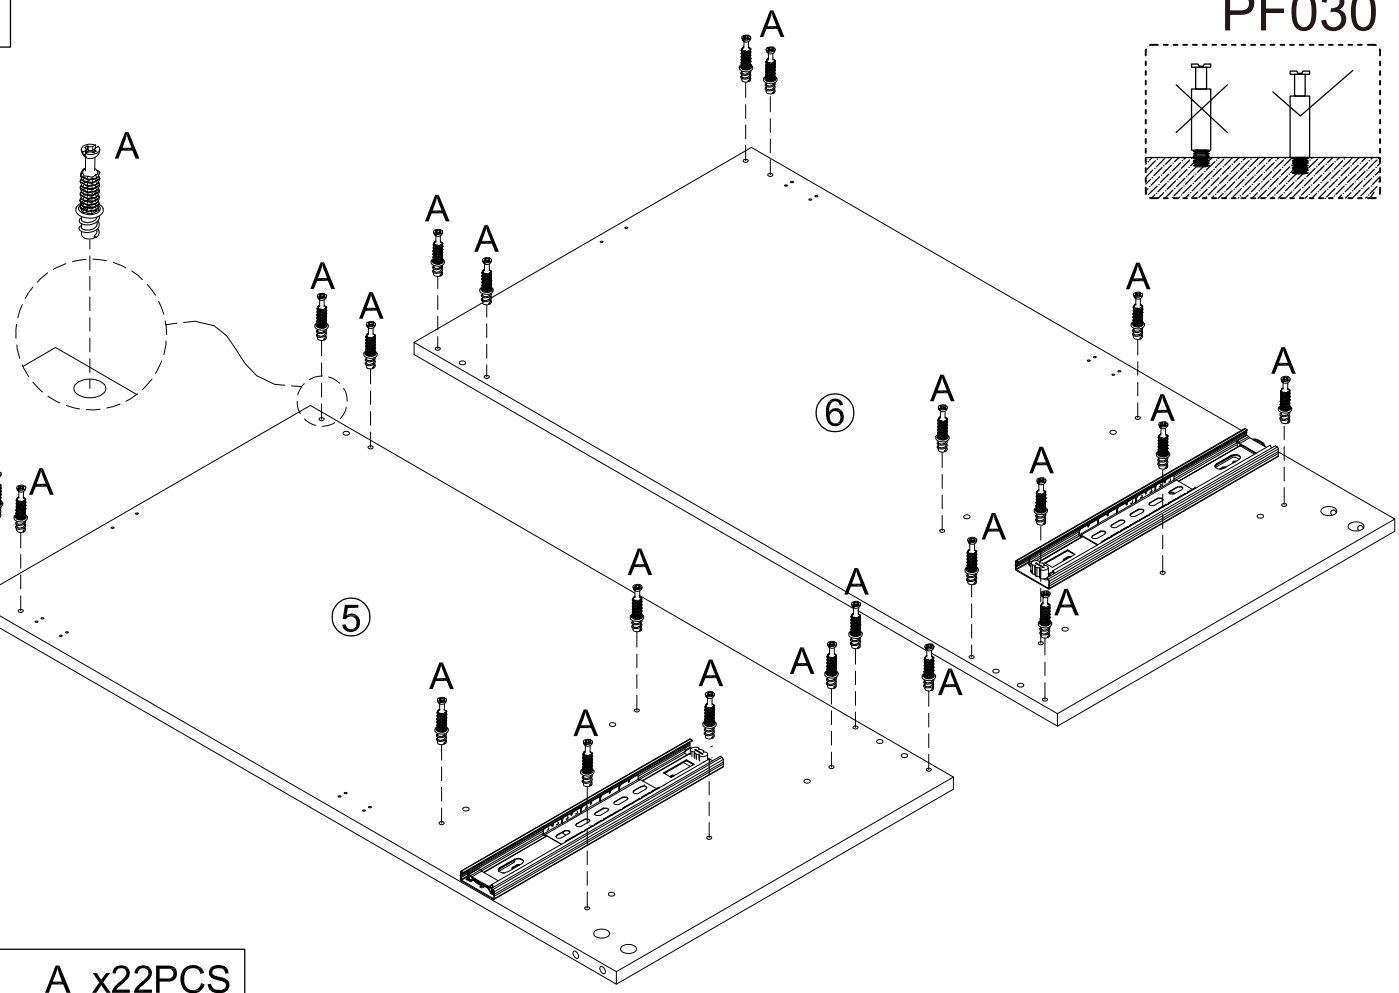

A x22PCS

8

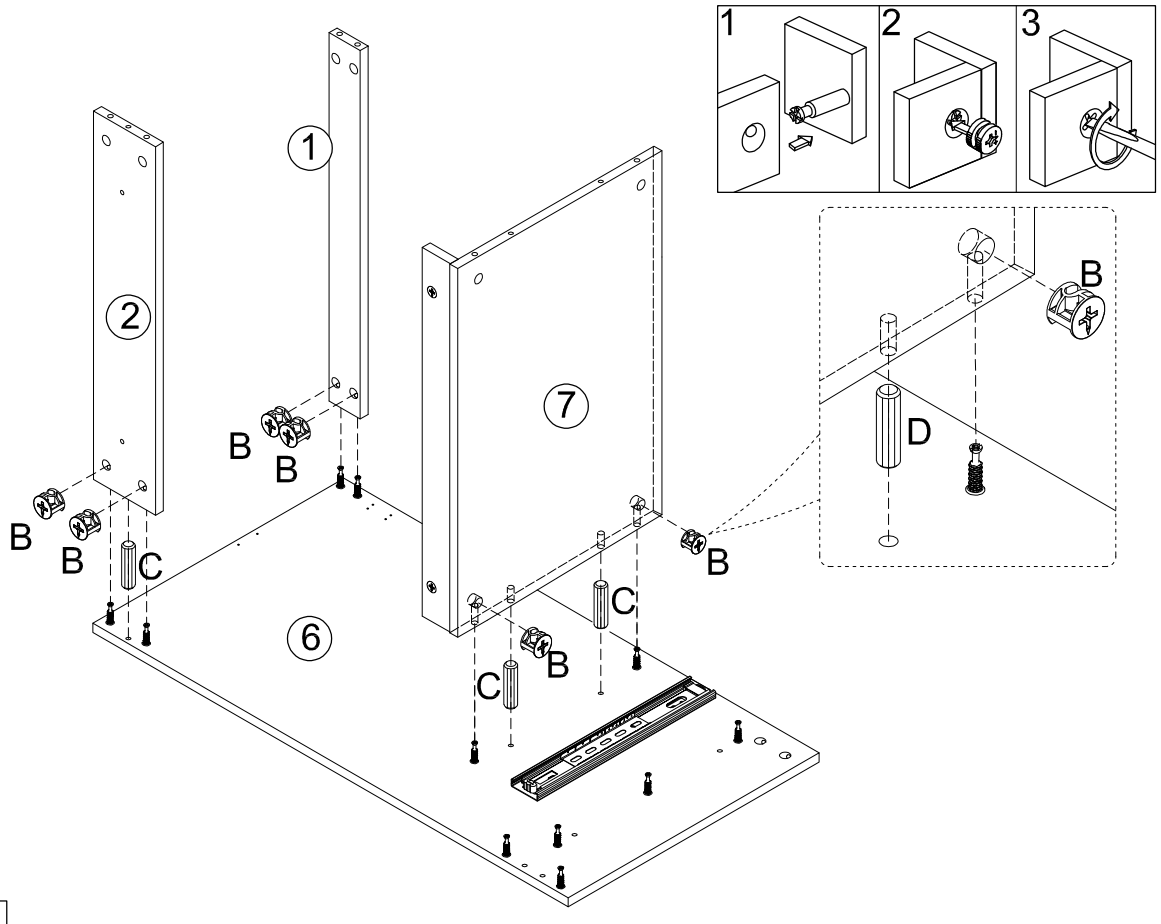



B. x6PCS

C. x3PCS

9


PF030

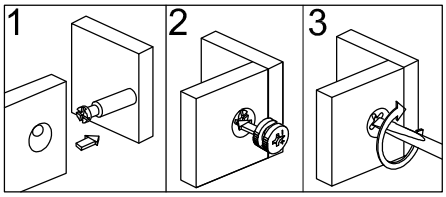


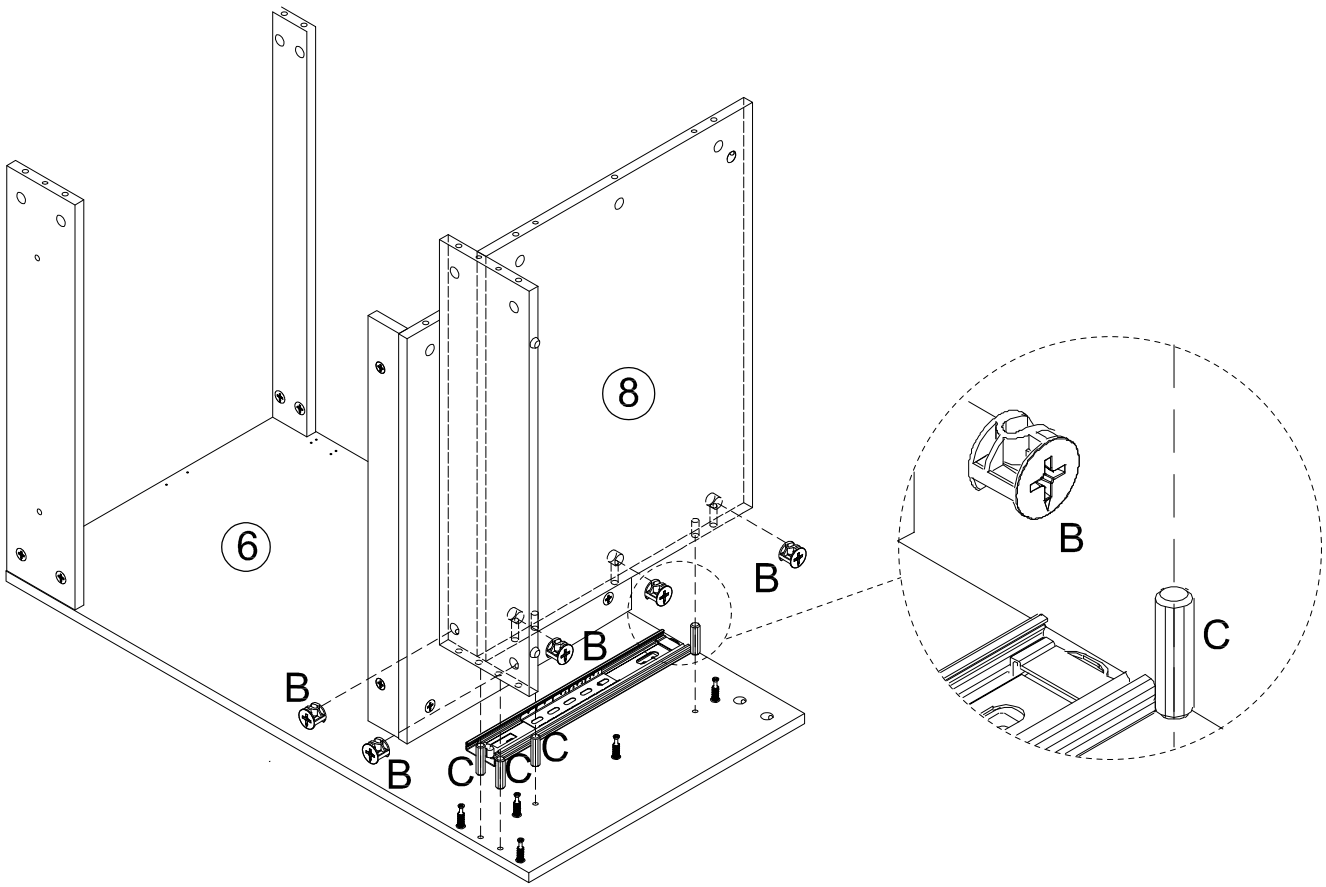

B. x5PCS	
C. x4PCS	

PF030

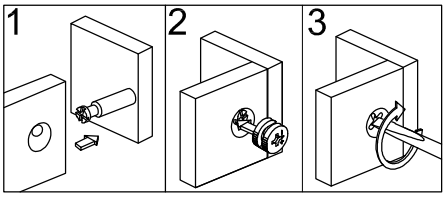


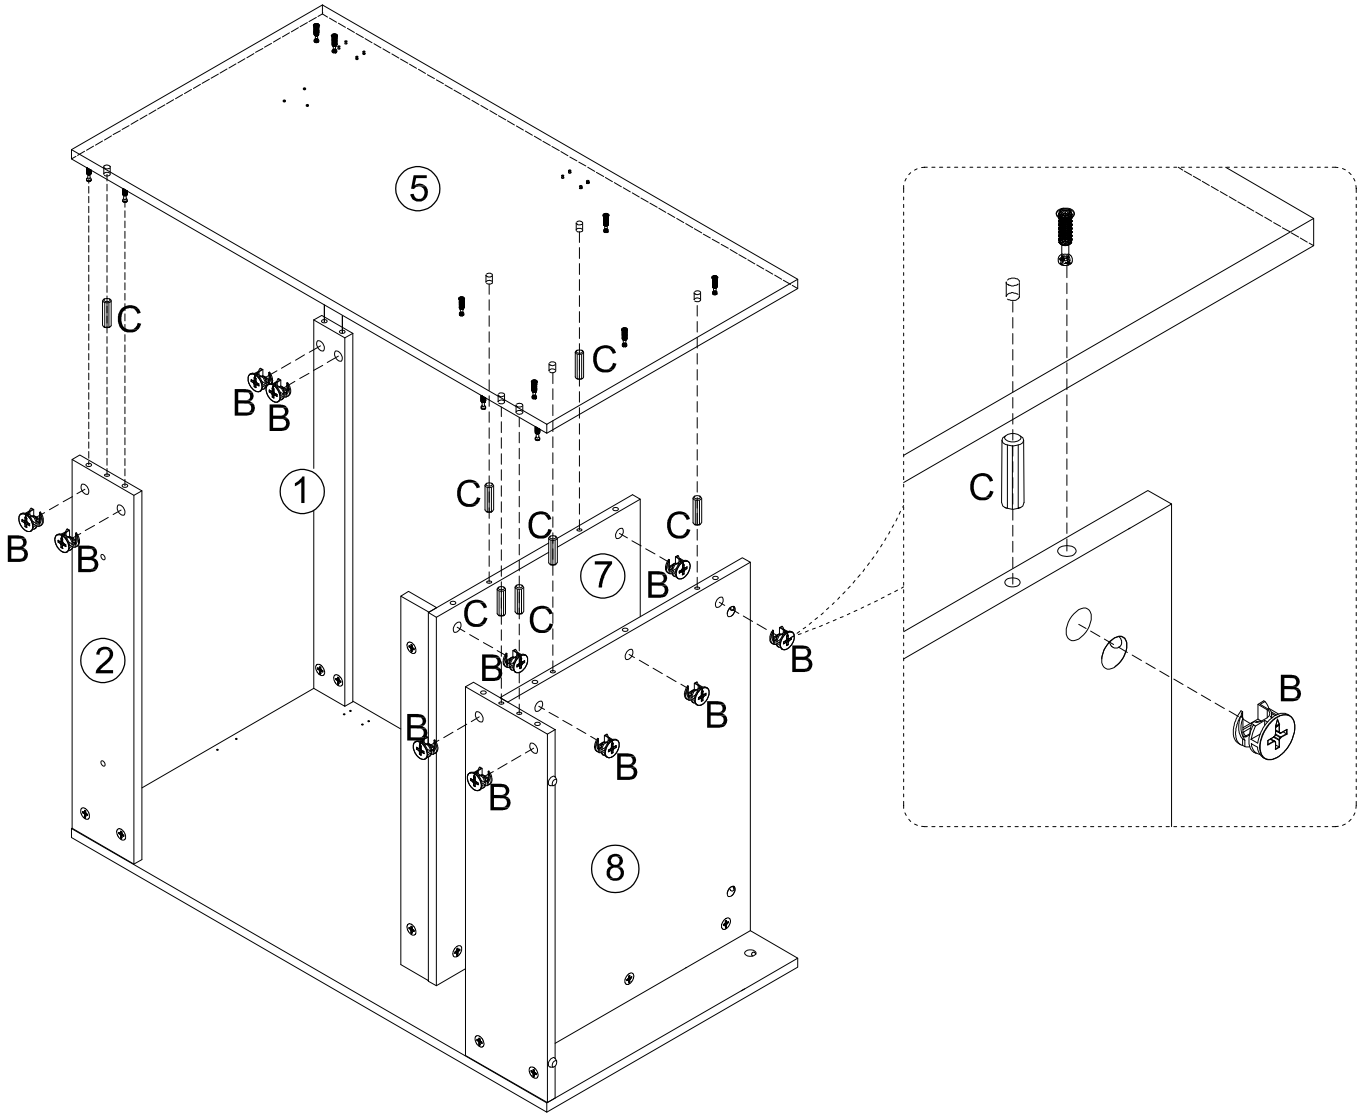


B. x11PCS	
C. x7PCS	

11


PF030

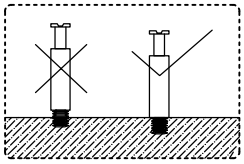


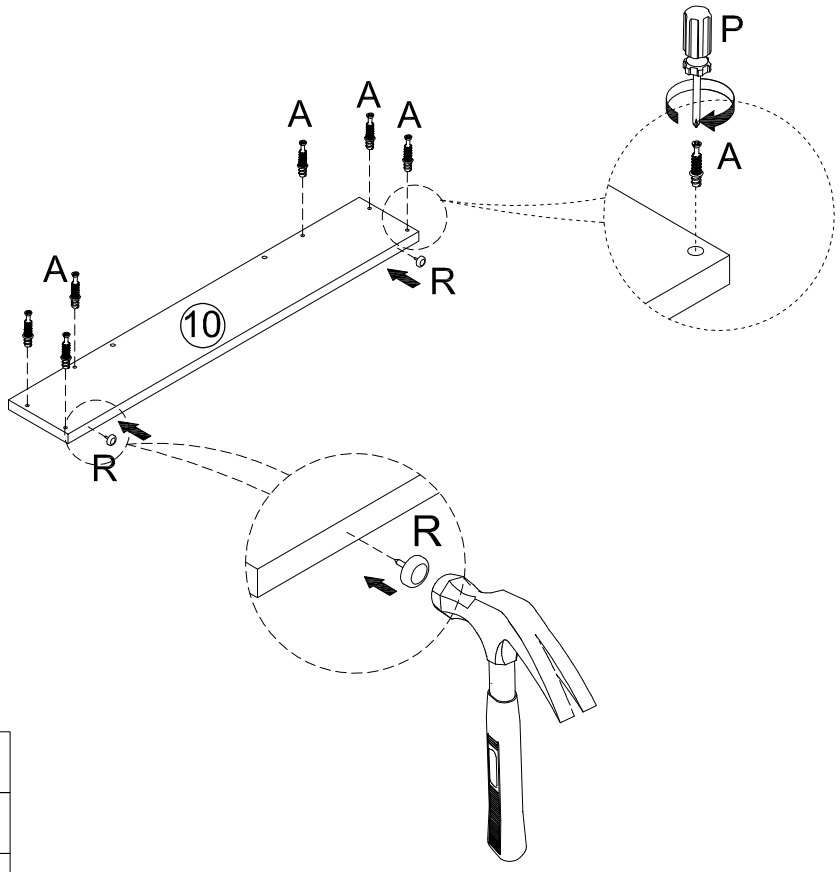

	A. x6PCS
	P. x1PC
	R. x2PCS


12

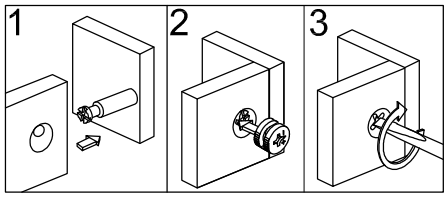


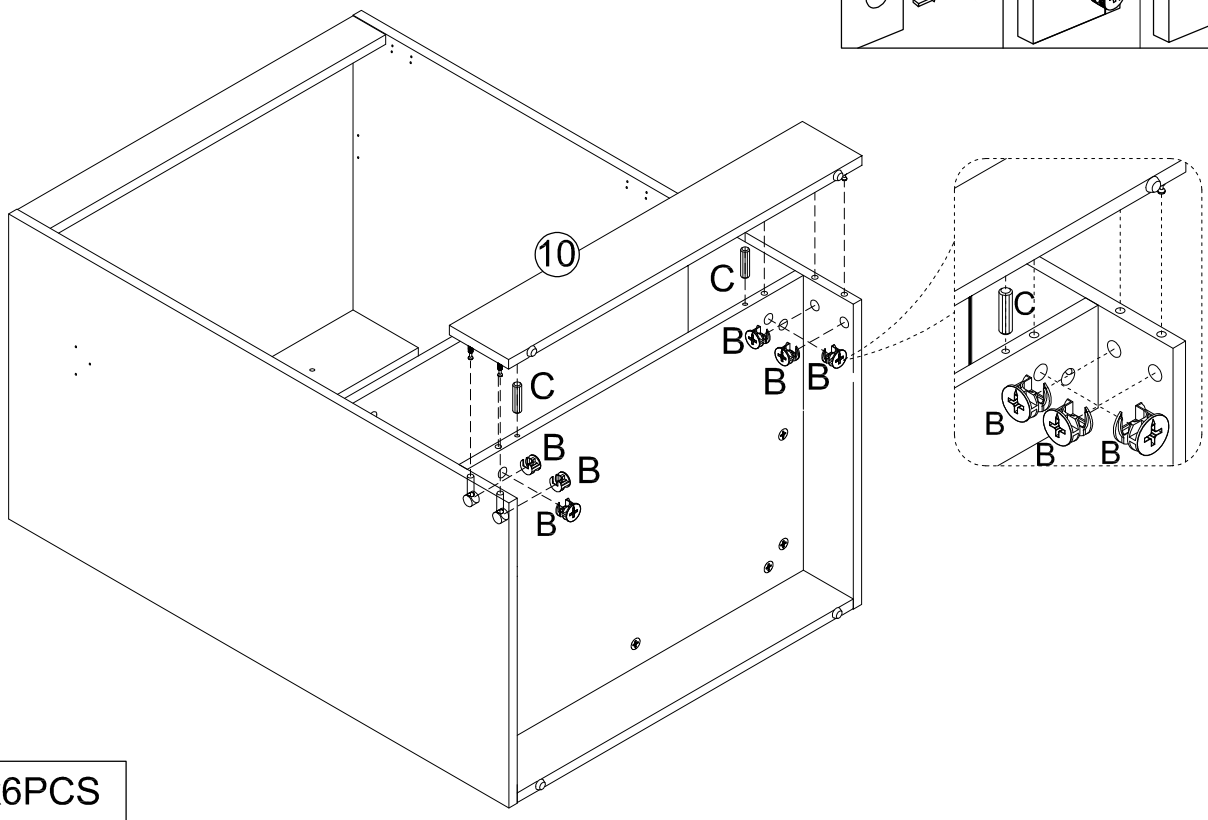

	B. x6PCS
	C. x2PCS

13

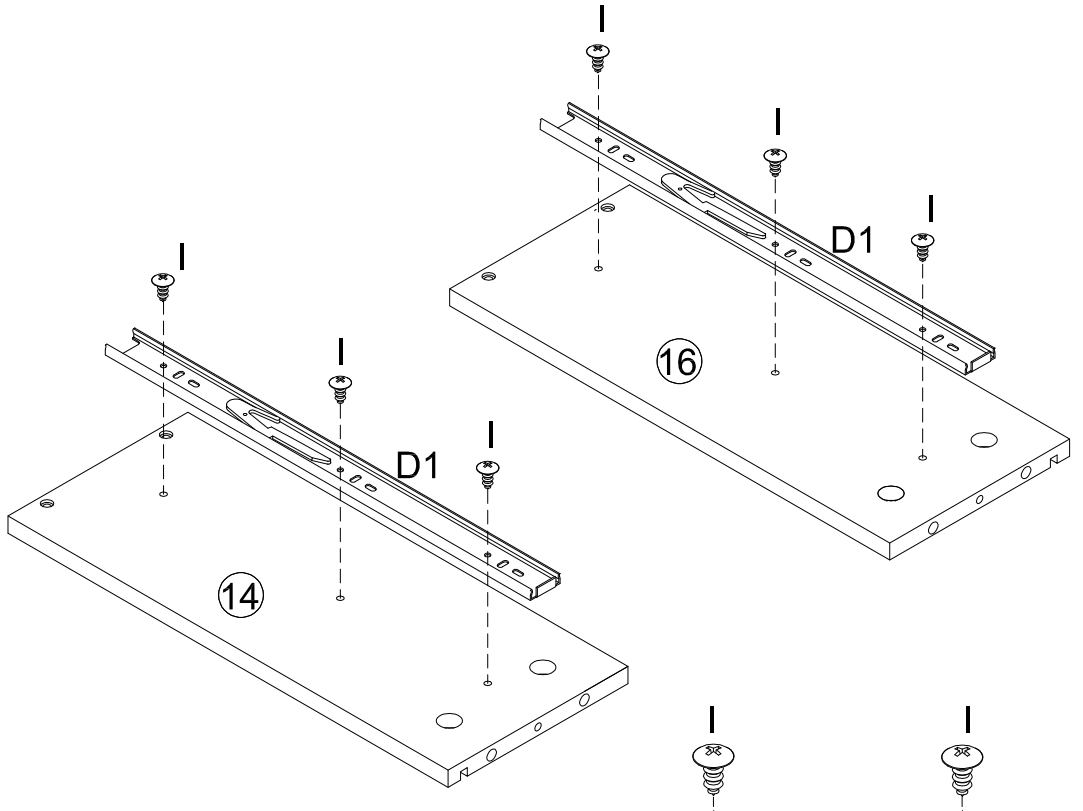


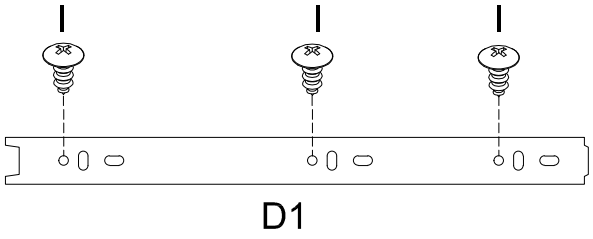

D1.x2PCS

I x 6PCS


14

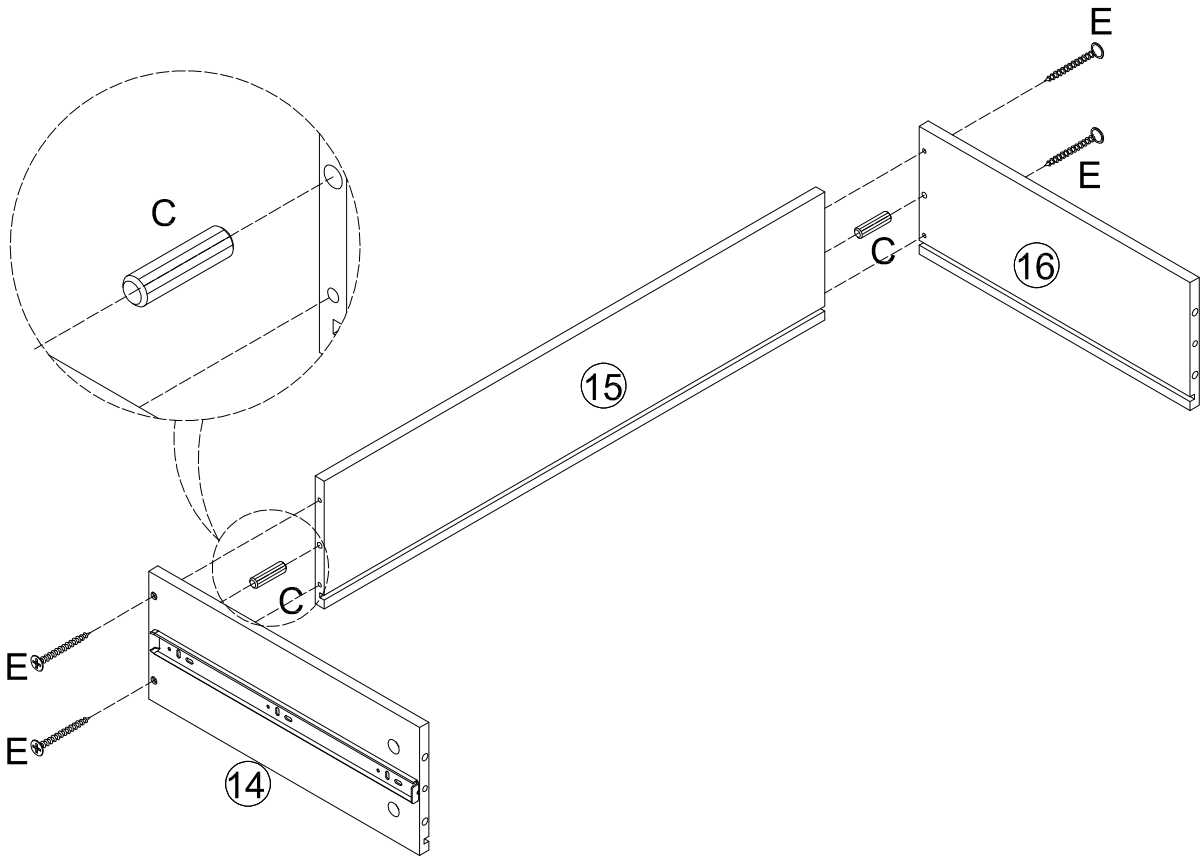


C. x2PCS

E. x4PCS

15

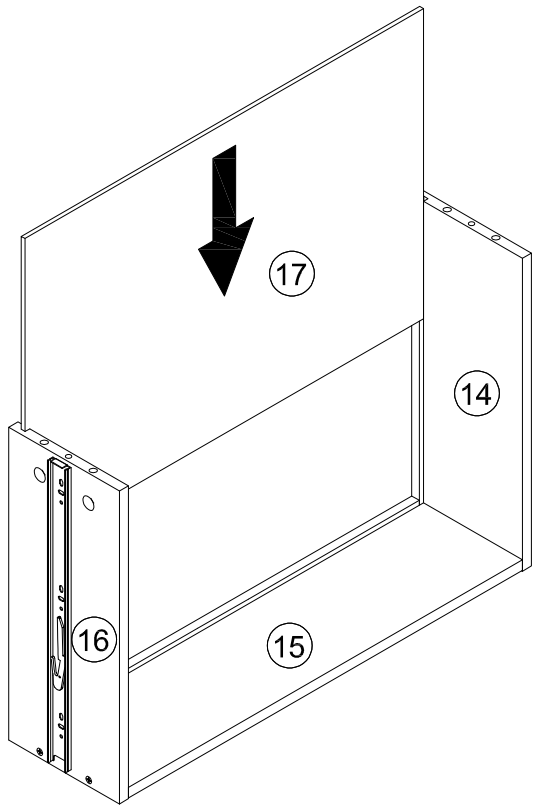



16

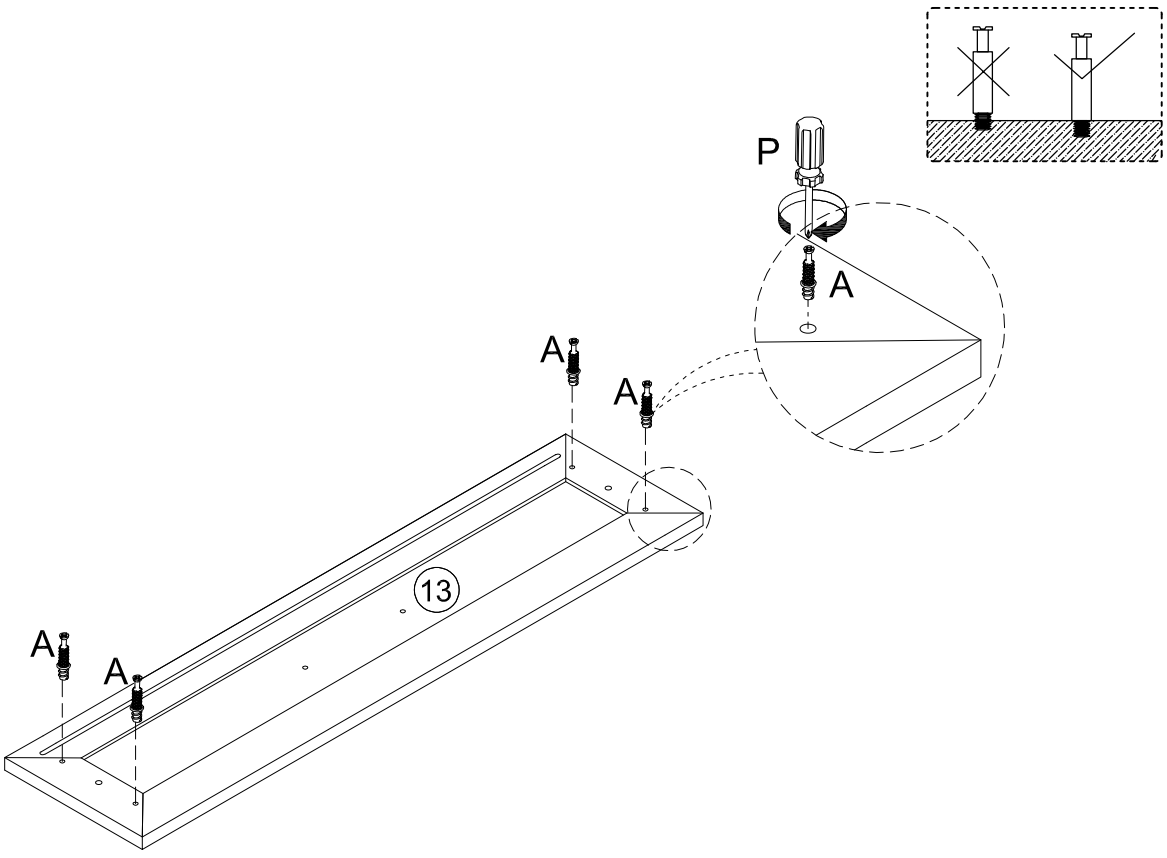

	A. x4PCS
	P. x1PC

17

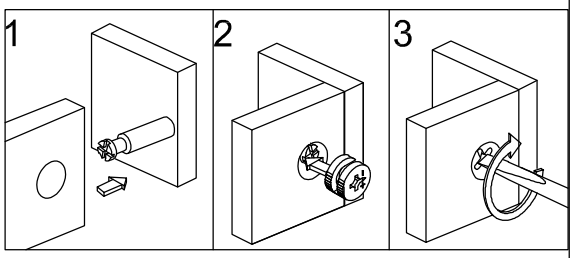


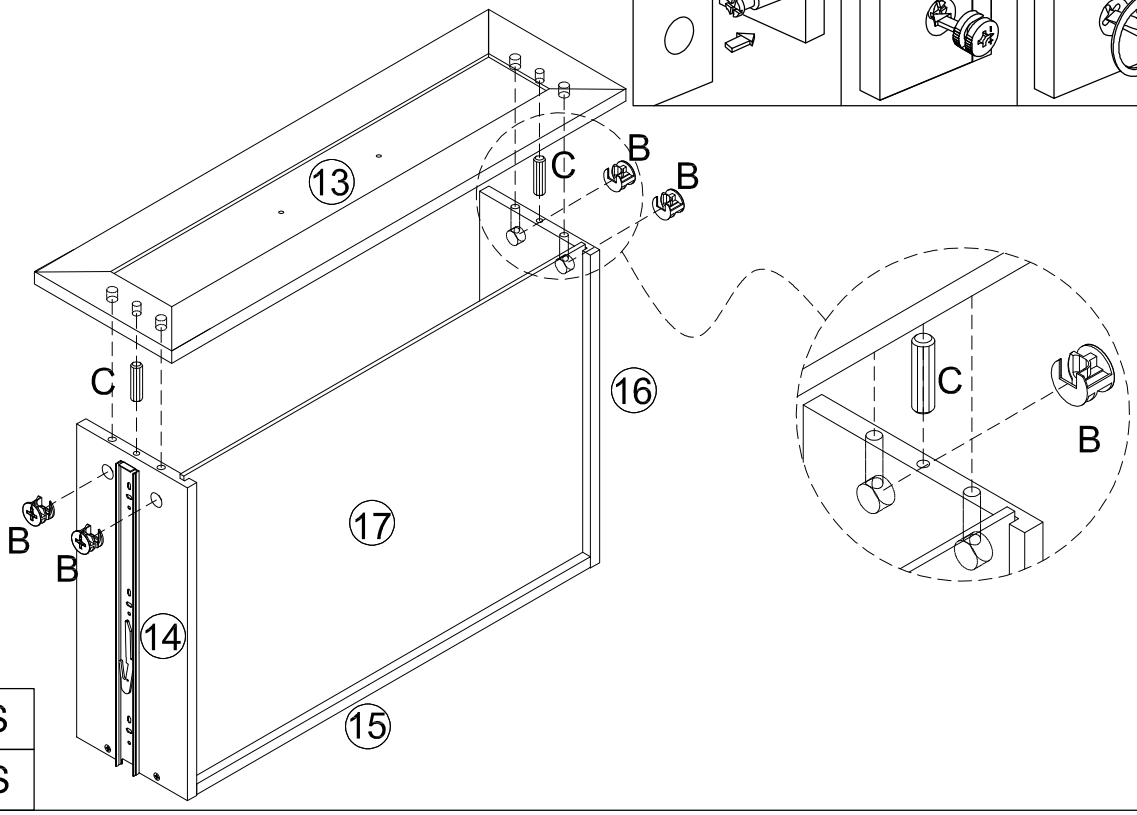

B. x4PCS

C. x2PCS

18

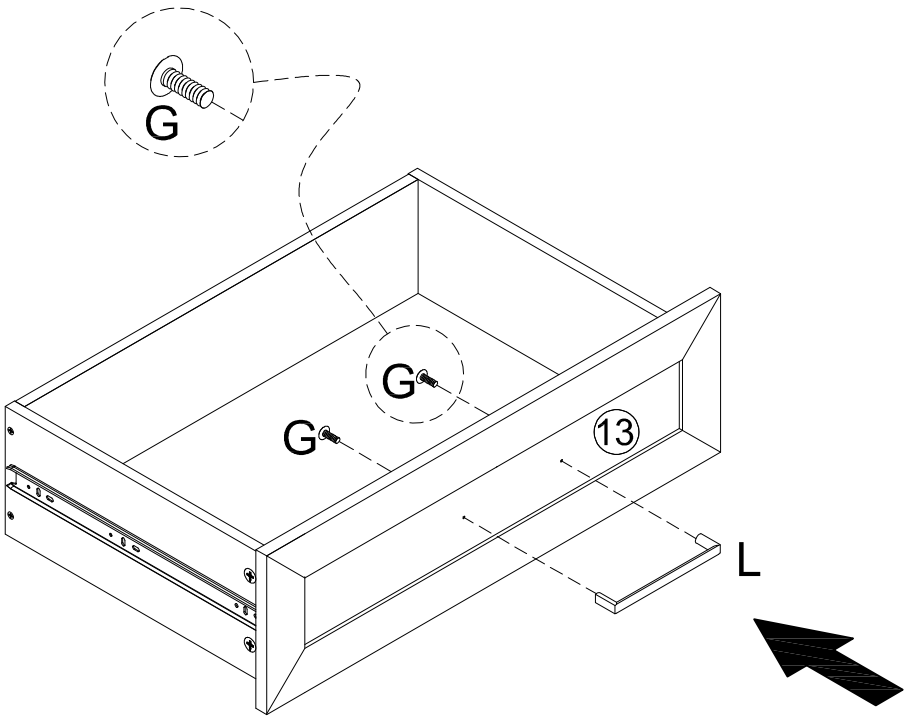


G. x2PCS


L. x1PC

19


PF030

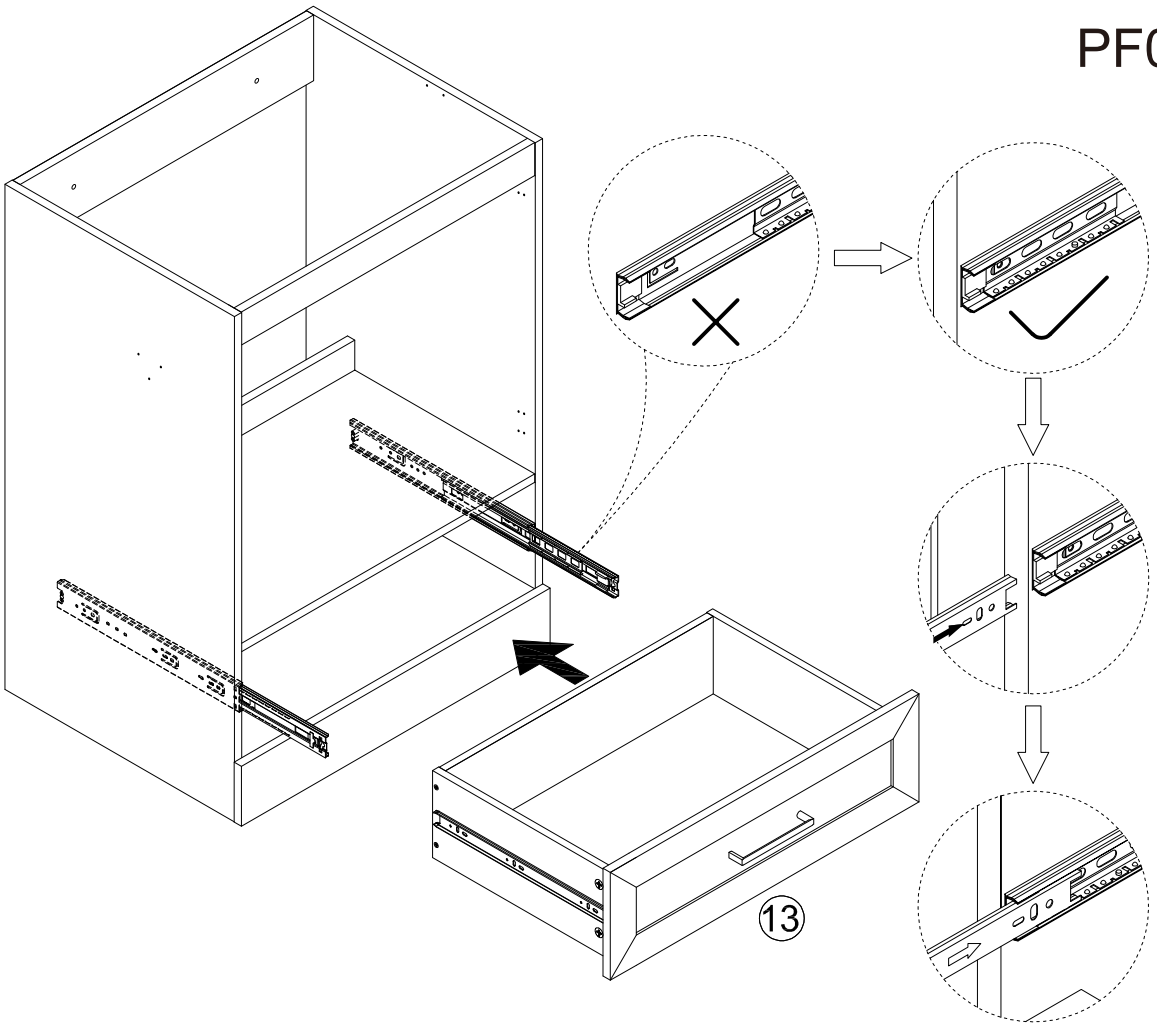

20

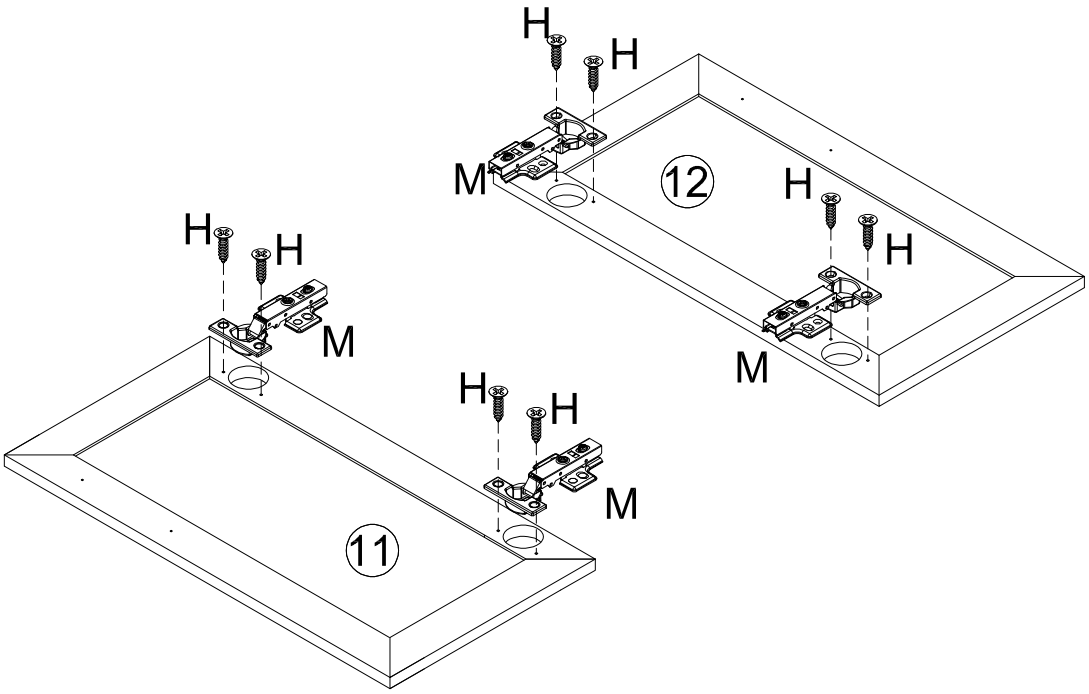


H. x8PCS	
M. x4PCS	

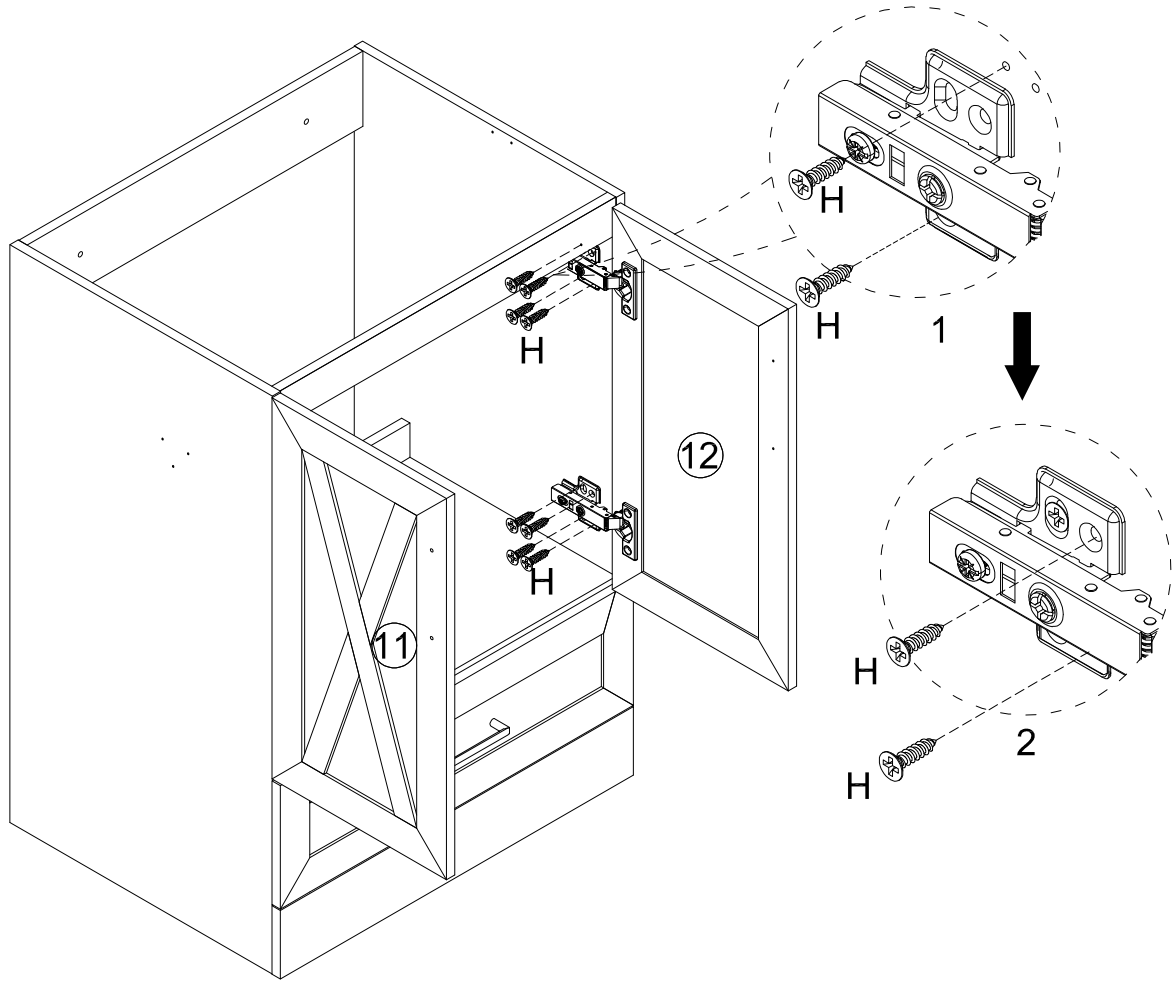

H. x16PCS


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

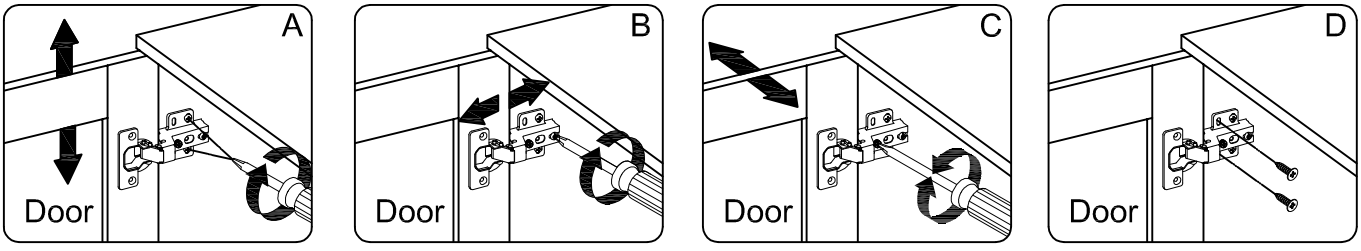

1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)

22


PF030

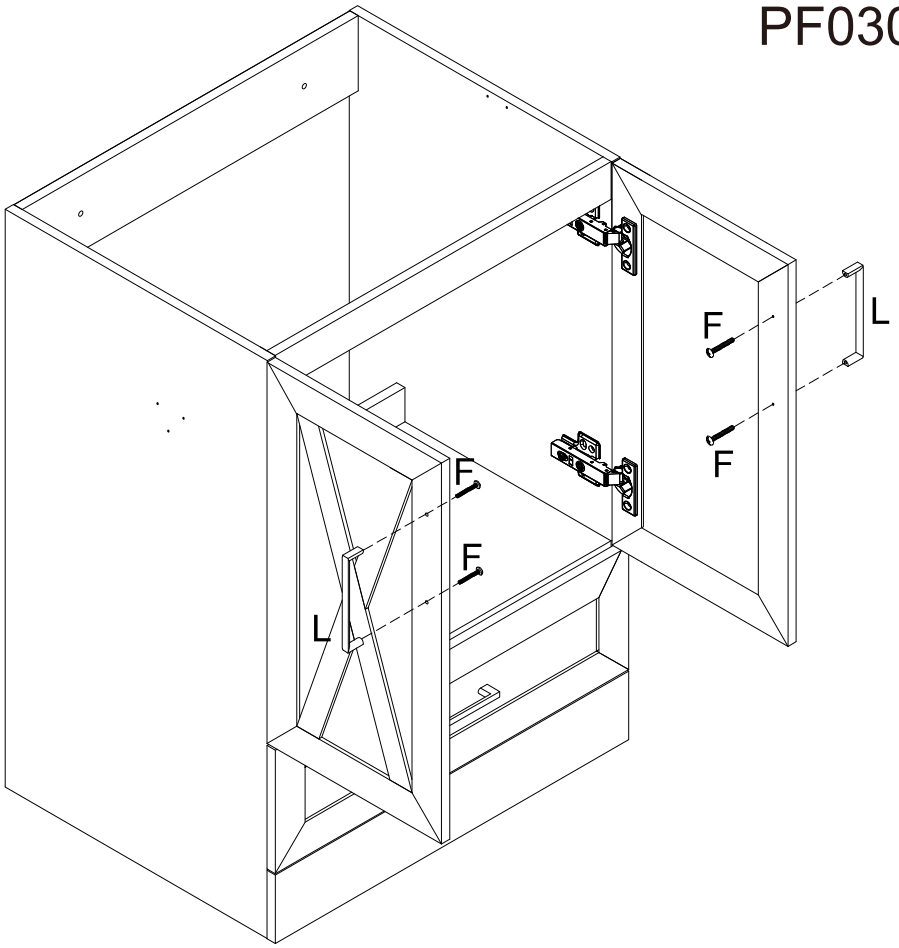

F. x4PCS

L. x2PCS

23

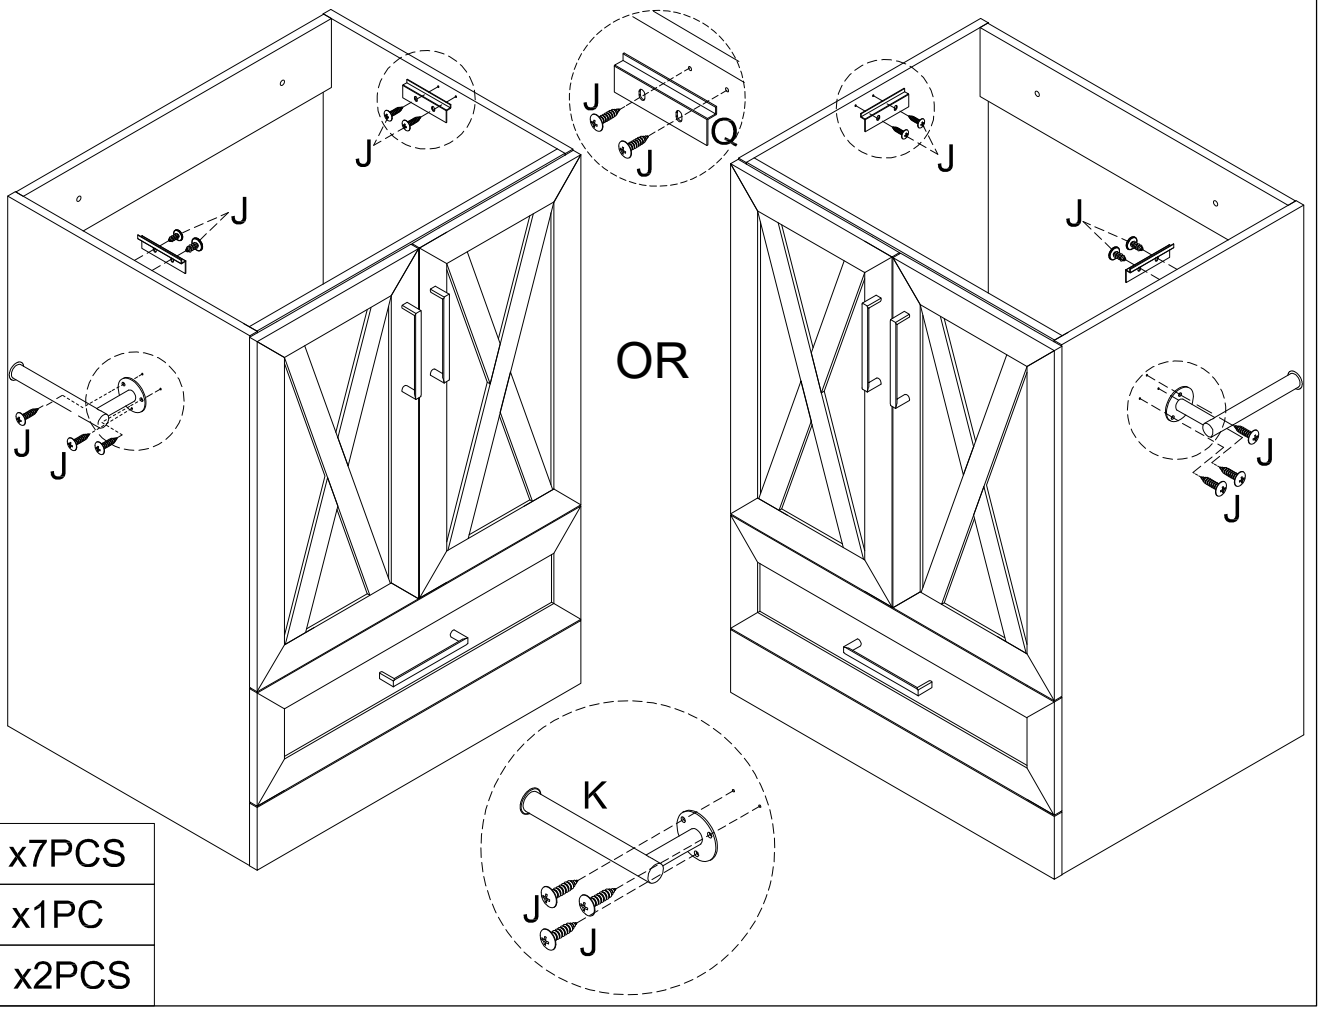

J. x7PCS


K. x1PC

Q. x2PCS

***Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.

* With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs. Using mounting hardware (**O**) appropriate for your installation site, secure vanity to wall stud

* **WARNING**
Vanity **MUST** be secured to wall

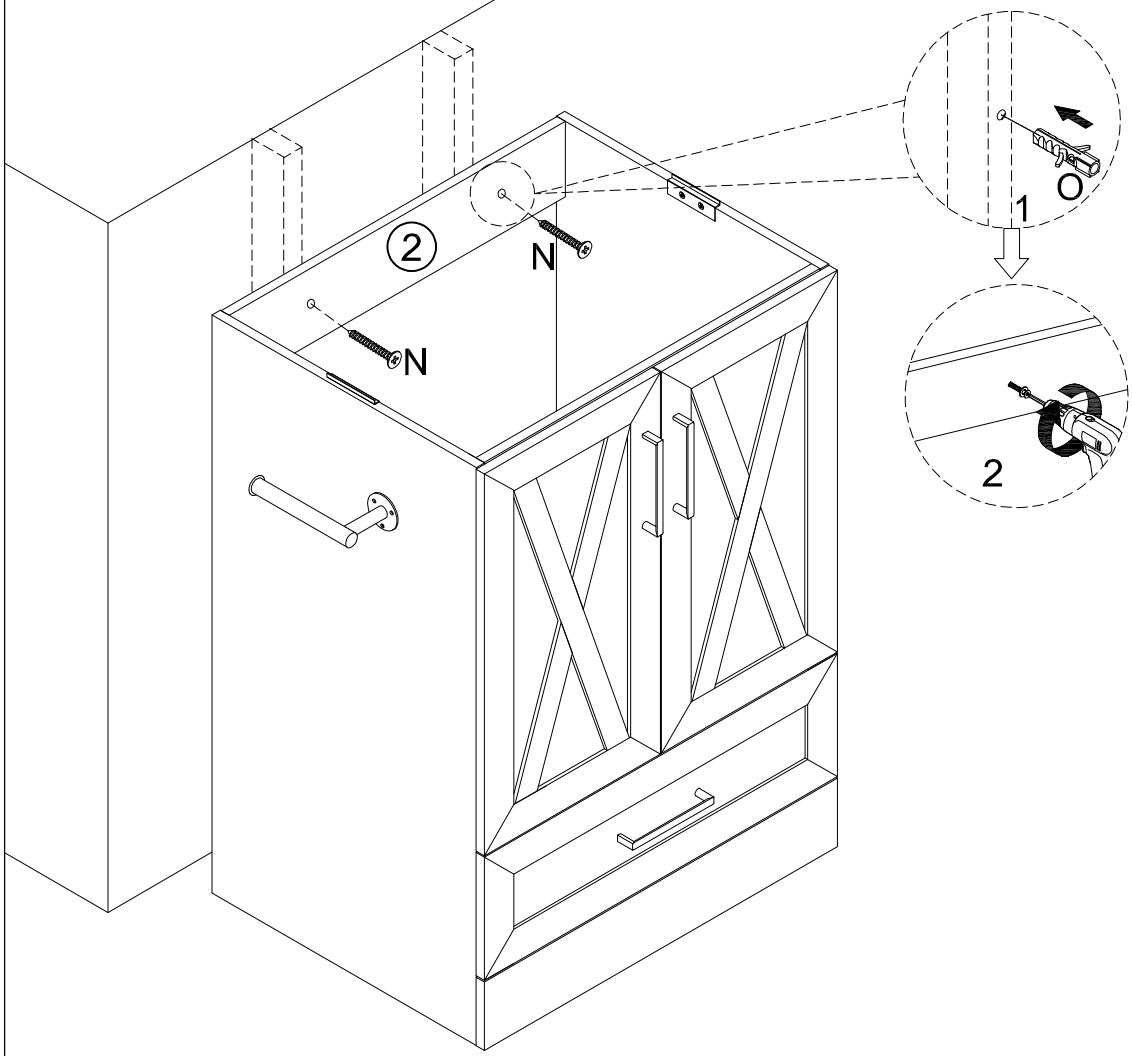


N. x2PCS	
O. x2PCS	

25


PF030

Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (9) per the manufacturer's instructions.

* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (9) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

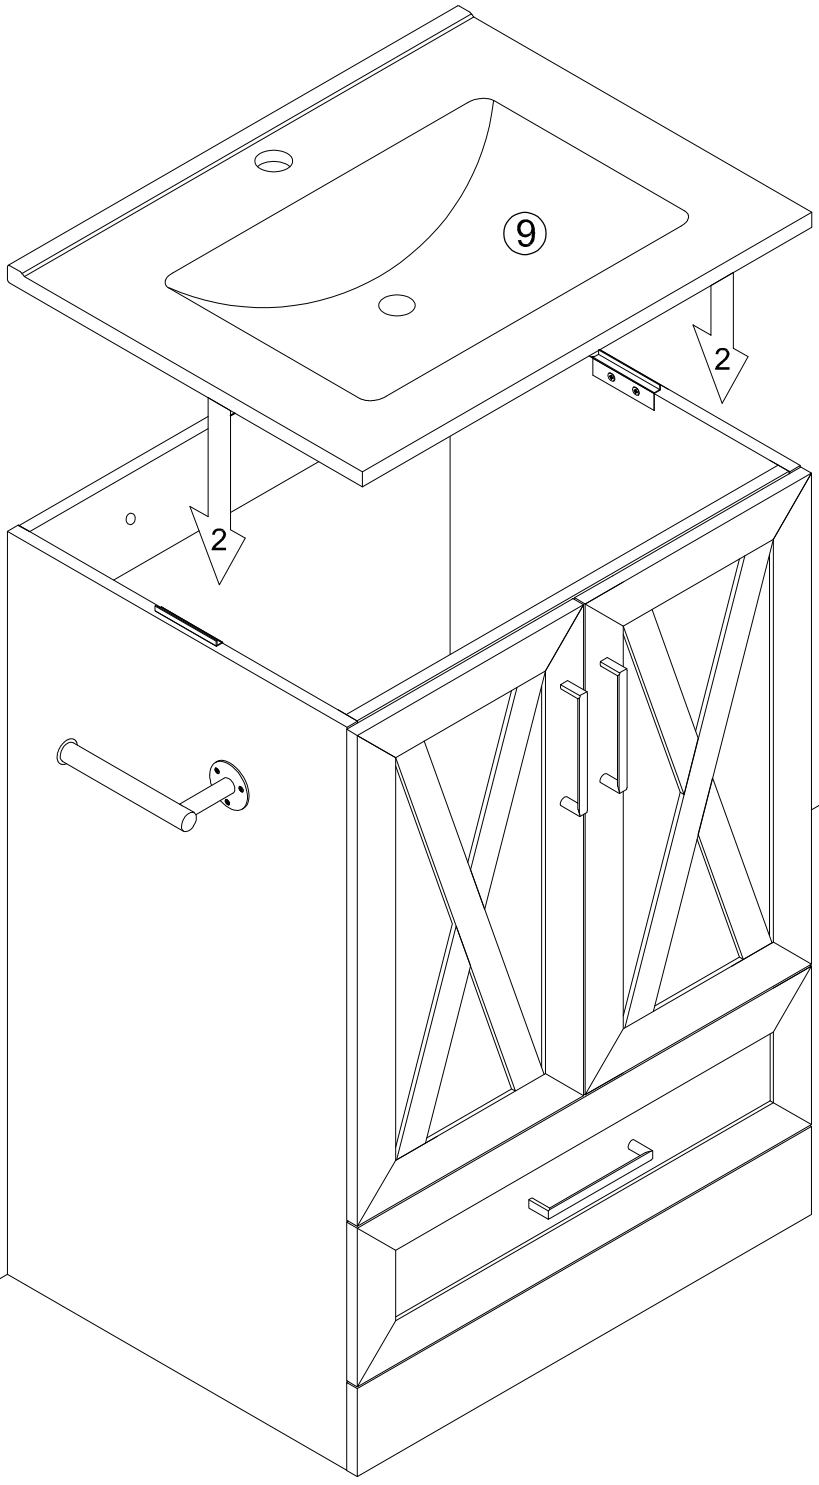

PF030

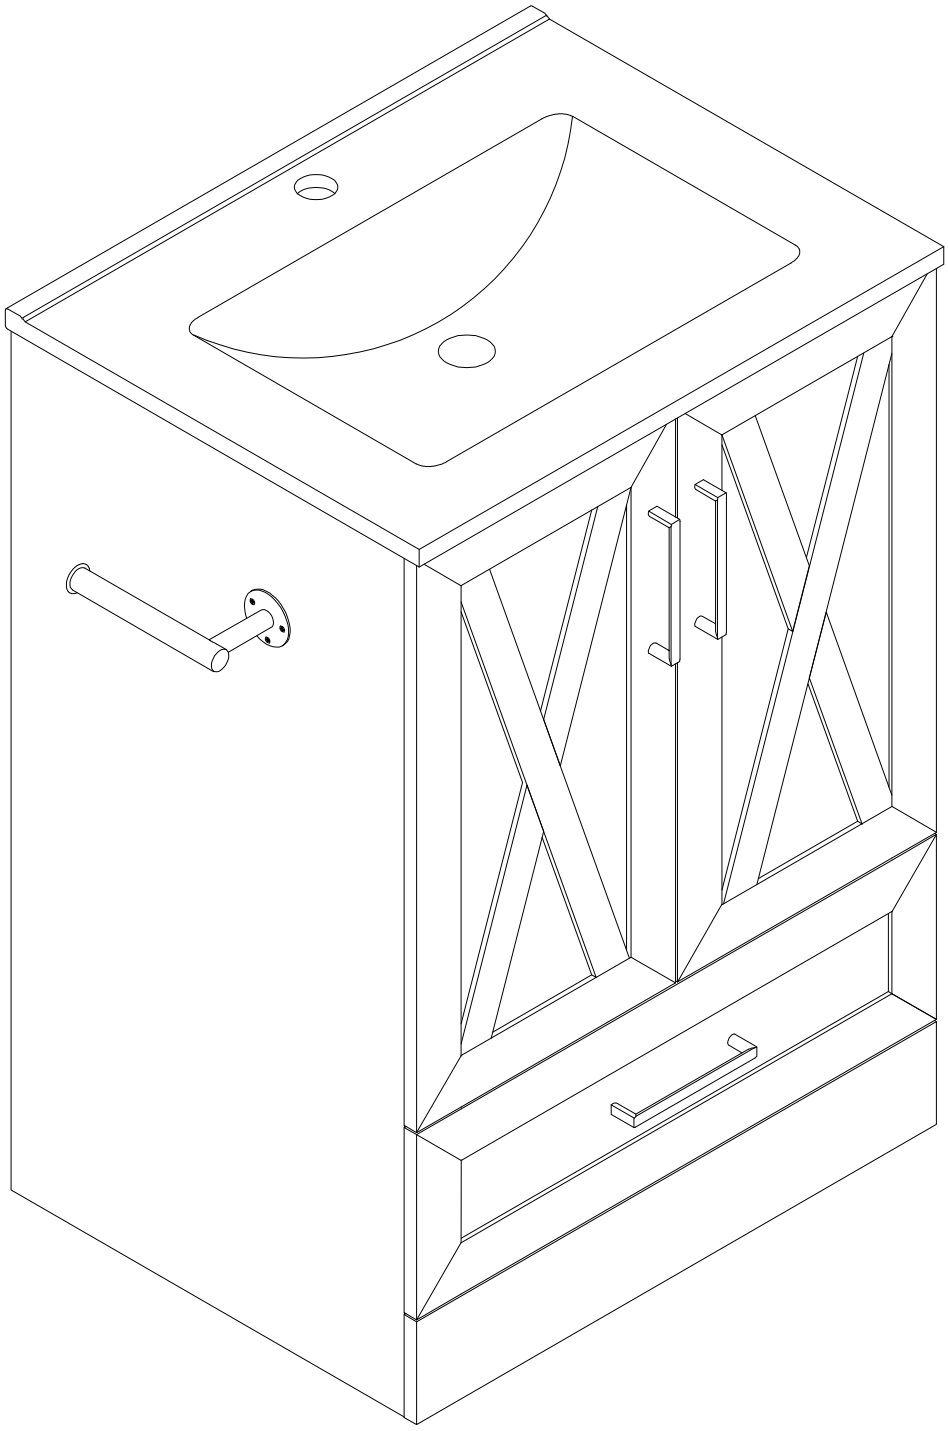

FURNITURE CARE AND MAINTENANCE

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

Tighten all bolts and screws again within the first 2 weeks of assembly
Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

Clean the surface of the MDF and PB (medium - density fiberboard) with a lightly dampened cloth.
Small amount of mild soap can be used if necessary

- **Dry the surface immediately after cleaning.**

⚠ **DO NOT use bleach or alcohol detergent to clean the surface.**
⚠ **DO NOT apply wood treatment on parts made with MDF/PB.**

Medium - density fiberboard and PB will swell and distort when suffer from water damage. Make sure to dry the furniture immediately after cleaning