

Assembly Instructions


Caution: You must read this before you proceed

Care & Maintenance

	● Not for commercial use. For residential use only.
	● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
	● Do not put hot items directly on furniture surface.
	● Do not clean furniture with harsh cleansers or polish.
	● Do not place furniture under direct sunlight.
	● Do not place furniture near heating or cooling vents.
	● Do not write on furniture without a padded barrier to protect the surface.
	● Do not place furniture outside . For indoor use only.
	● Stains may be removed with mild soap solution and damp cloth.
	● Children should not climb or jump on the furniture.
	● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in the magic tape pouch for hardware packs and legs.

SOFA

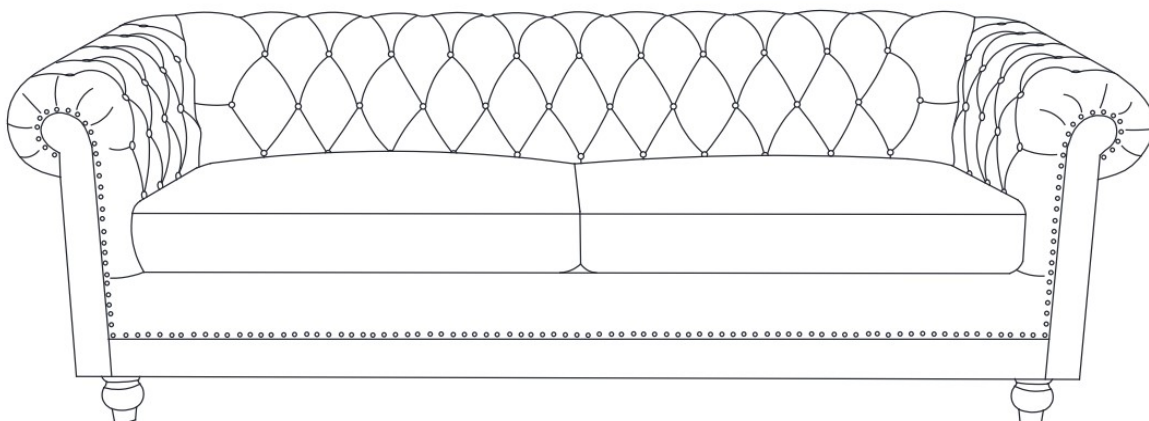


PARTS LIST N760P531448

Label	Picture	Description	QTY
A		Backrest	1
B		Left Armrest	1
C		Right Armrest	1
D		Seat Plate	1
E		Front Rail	1
F		Seat Cushion	2
G		Leg	4
①		Plastic Washer	7
②		Bolt(M8*30MM)	4
③		Allen Wrench(S5)	1

Assembly Preparation

Before Beginning Assembly:

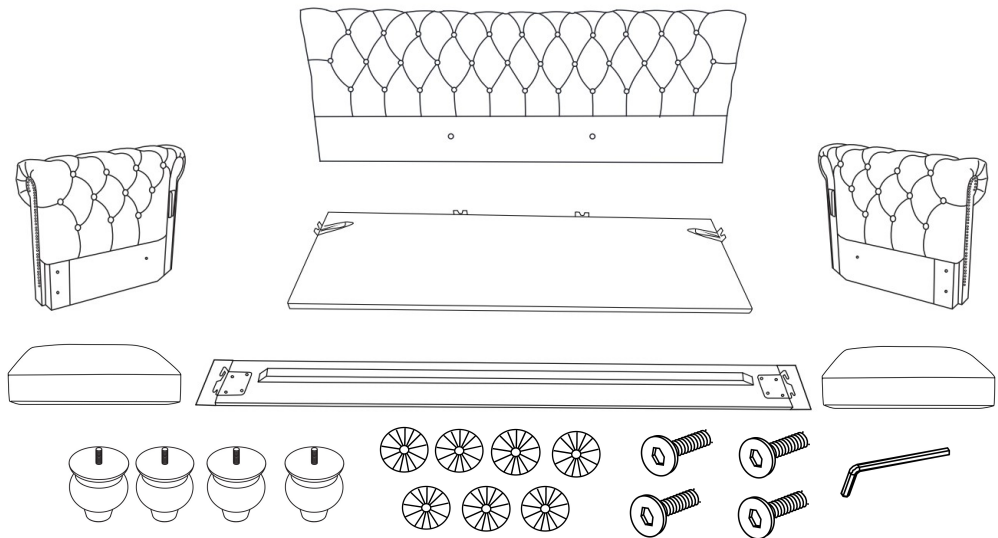

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

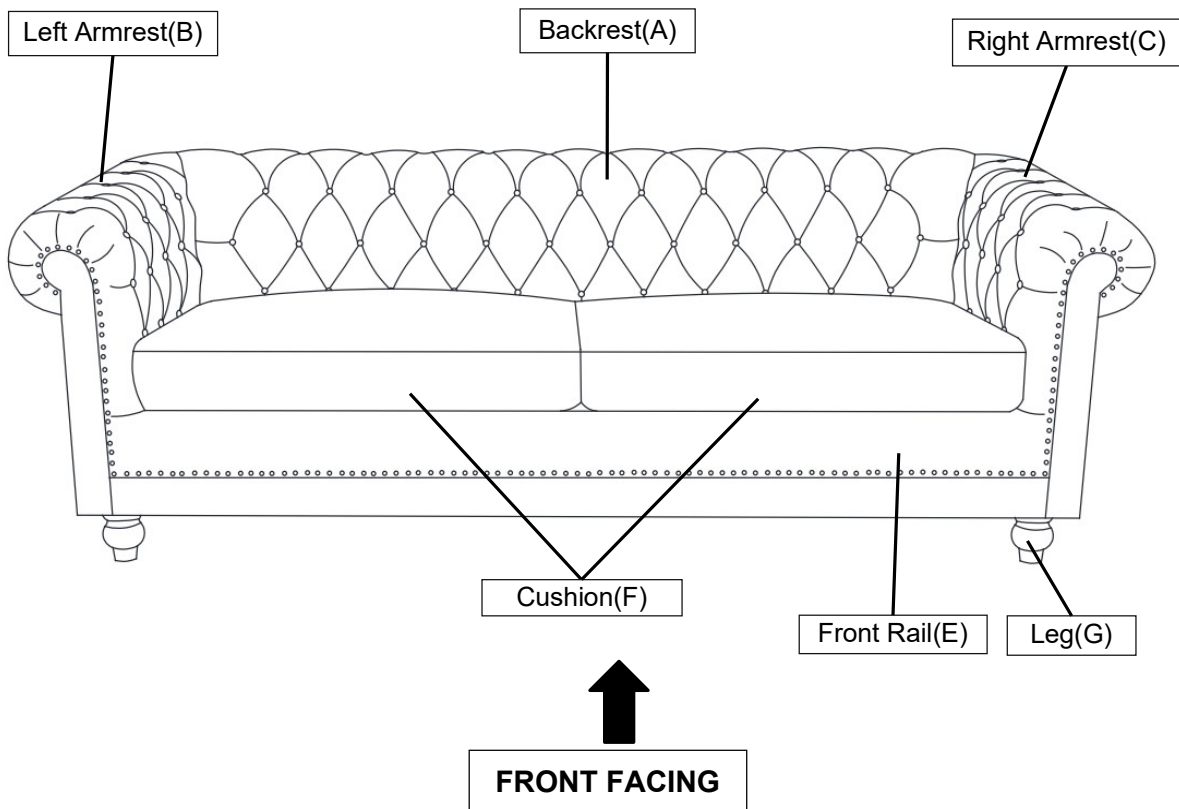

This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

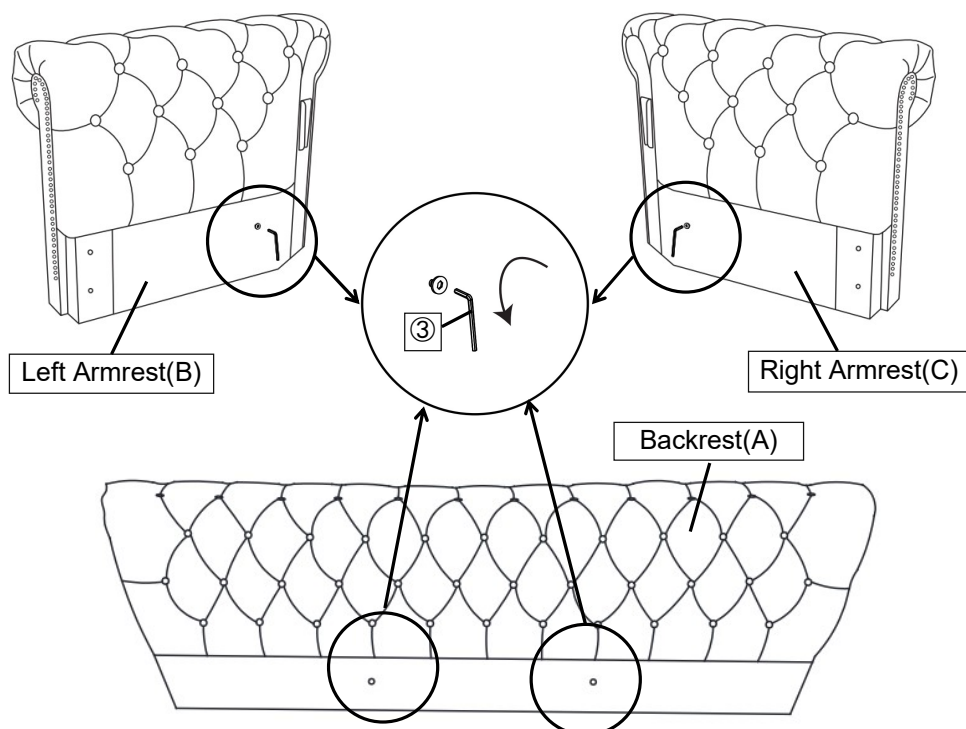


Loosen the screws on the Backrest(A), Left Armrest(B) and Right Armrest(C) by 50%.

Step 2

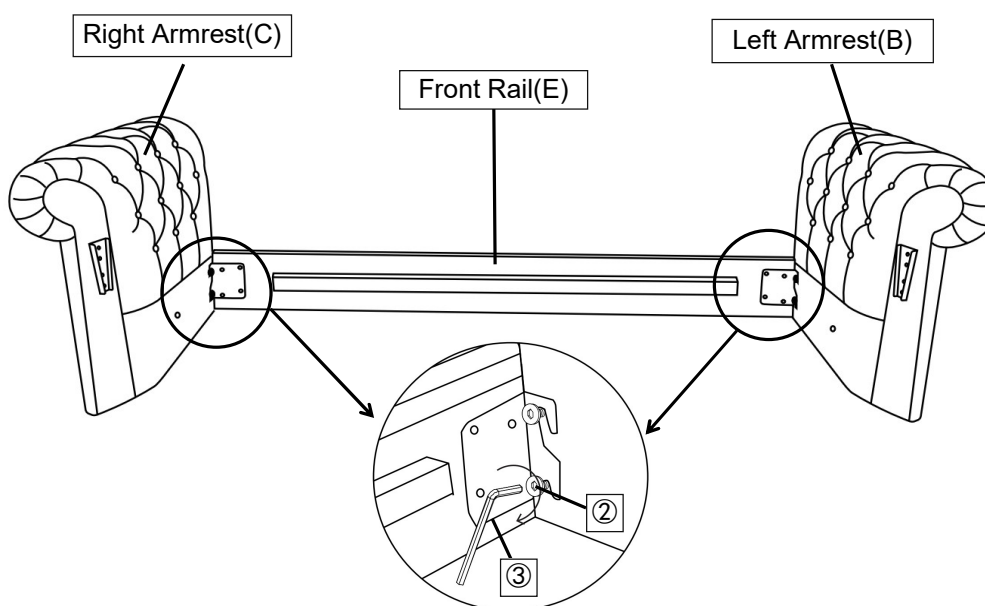

Fit Bolt(2) to Front Panel(E), then mount onto Left Armrest(B) and Right Armrest(C) respectively, tighten 50% clockwise with Allen Wrench(3). Note: Do not fully tighten the bolts.

Step 3

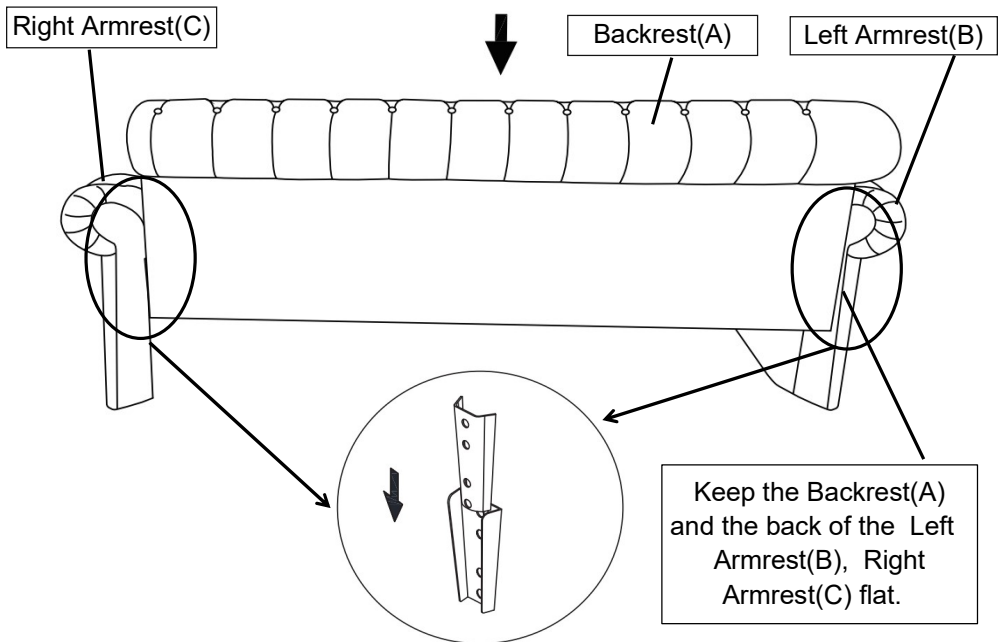

Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C), as shown in the picture.

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C).


Keep the Backrest(A) and the back of the Left Armrest(B), Right Armrest(C) flat.

Assistance from an adult partner is necessary for this assembly process.

During this assembly process - do exercise caution. You may need to use your hand to press down and or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

Step 4

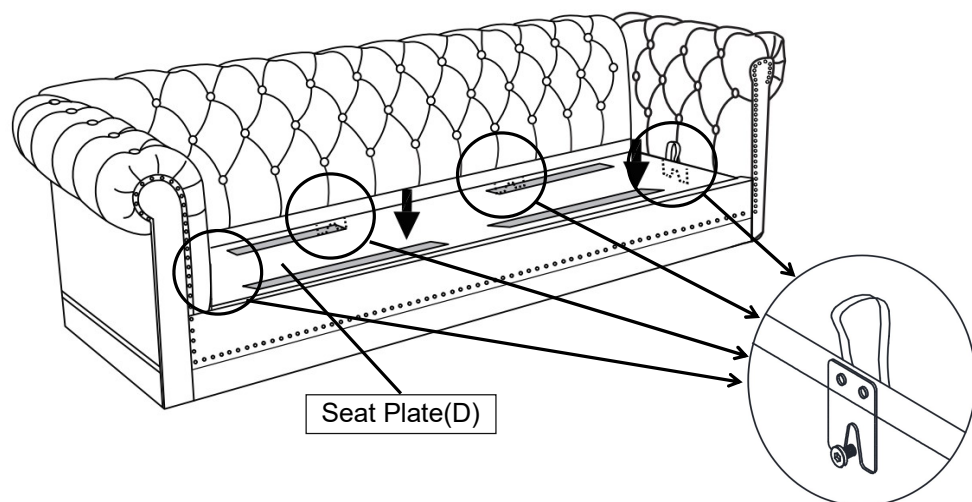


With the assistance of your partner, lift the rope on the two sides of Seat(D) by hand.

Put the Seat(D) on the sofa frame and then slowly place it down as shown above.

Note: All the u-shaped iron sheet need clamped to the bolt.

Step 5

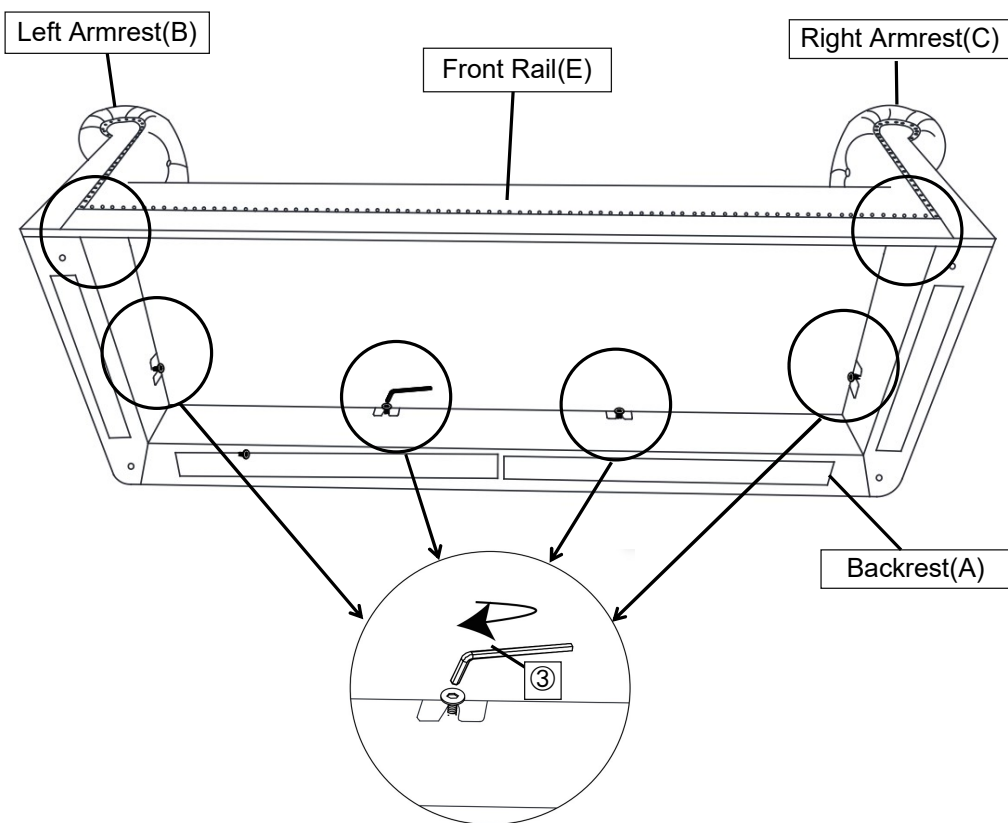


Tilt and lay the sofa onto a flat surface.

Tighten the Bolts in the bottom of Backrest(A), Left Armrest(B) and Right Armrest(C) by Allen Wrench(3) as pictured above.

Tighten the Bolts fully in a sequential manner.

Step 6

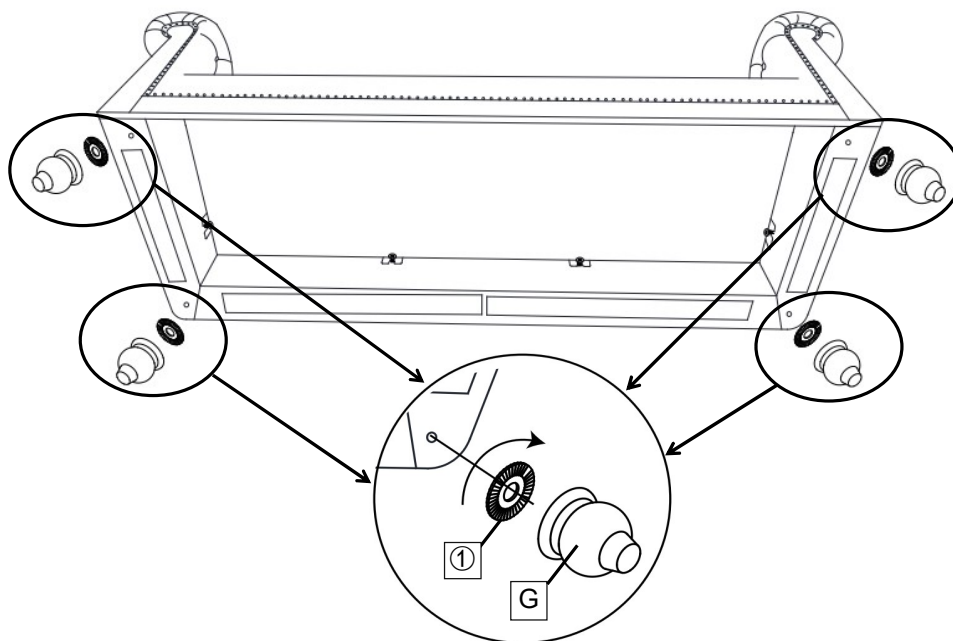


Install the Leg(G) at the bottom of Left Armrest(B) and Right Armrest(C) by placing Plastic Washer(1) on the threaded stem.

Then insert threaded stem into the threaded mounting position at the bottom of Left Armrest(B) and Right Armrest(C).


Tighten by turning the Leg clockwise.

Step 7

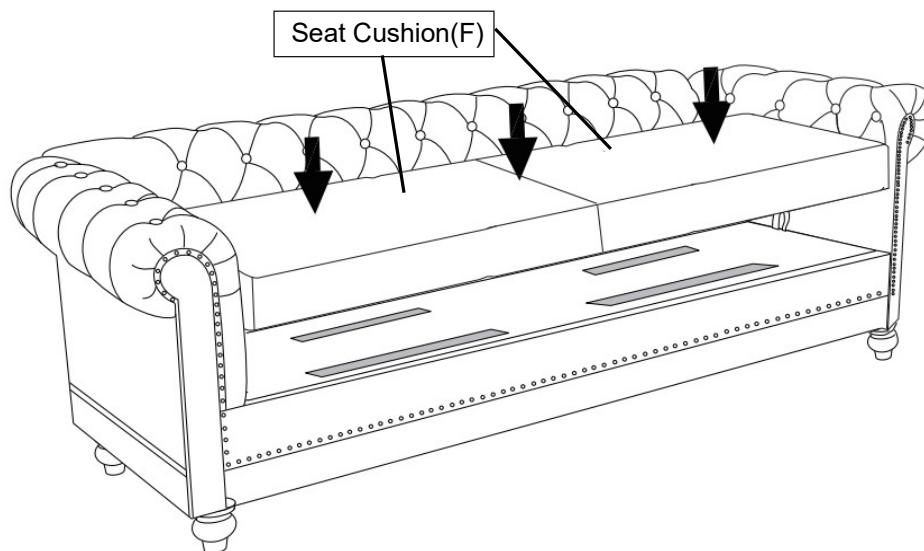

Place Seat Cushion(F) onto the assembled sofa.

Step 8

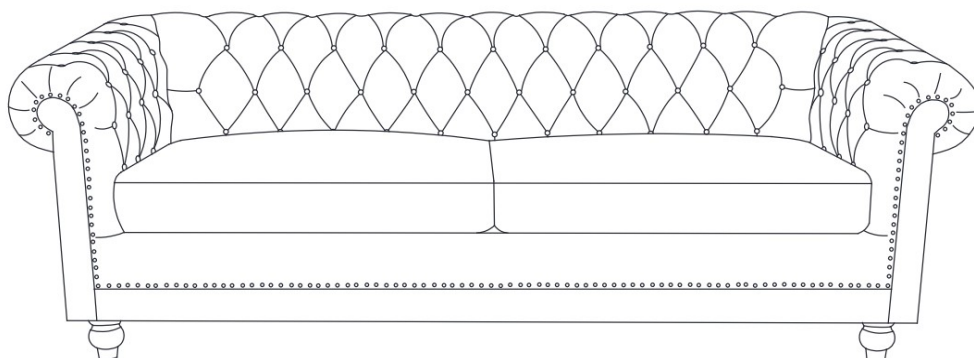

Your Sofa is ready for use.
This Sofa can only be used on a flat, level surface.