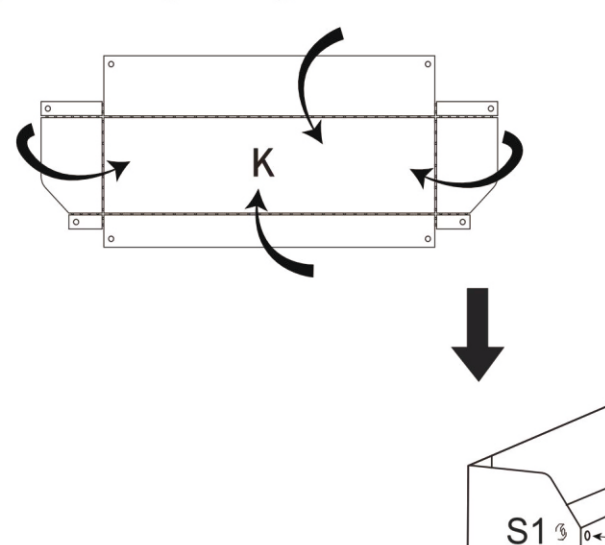


12


Folding storage box



Sx2

S1x2

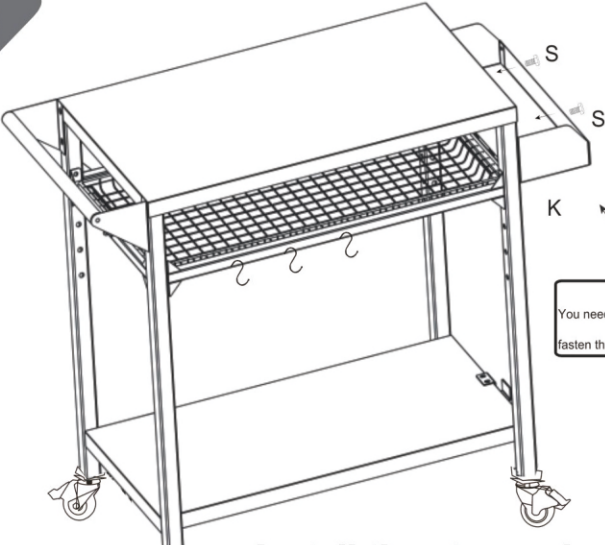13




Sx2

CAUTIONS:
You need to remove two "S" screws
and
fasten them again with the "K" box

Install the storage boxes, and place the
wire baskets and hooks in them.

NEW

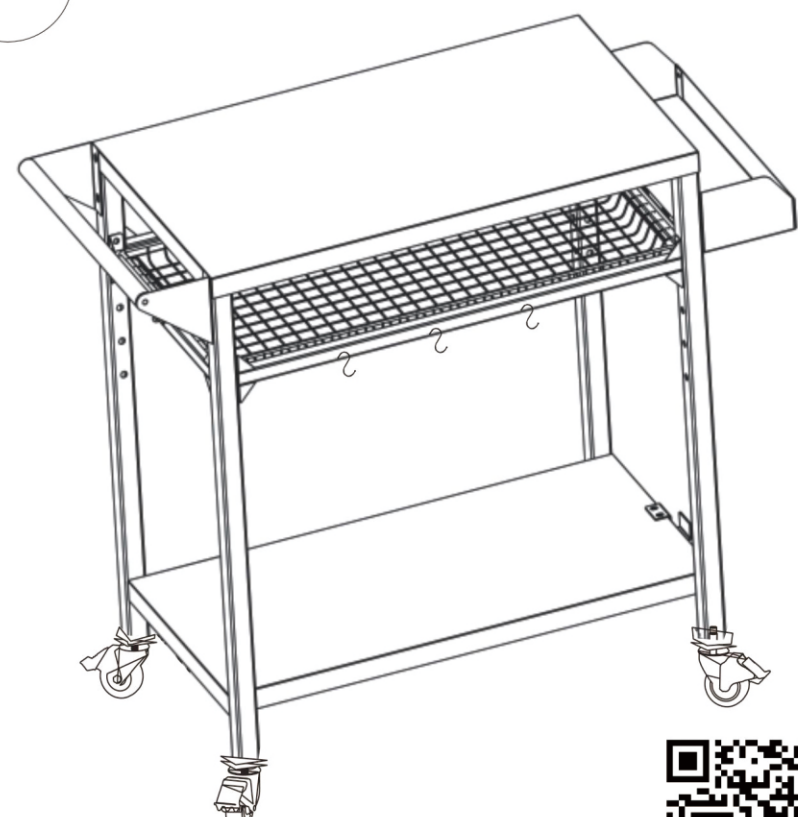SKU: DHW082BN100A
20053





Follow our assembly video

WARNING

1. The manual contains very important safety information. Please read it carefully before assembly.

2. Carefully inspect the box upon receipt. If there is any damage, please take photos for documentation and contact our service team for assistance.

3. This product can be dangerous if not properly installed. Fasten all bolts, nuts, and screws before use.

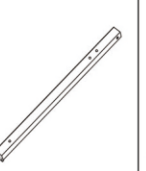
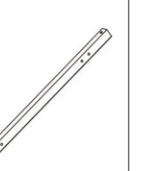
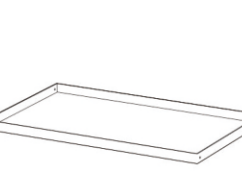
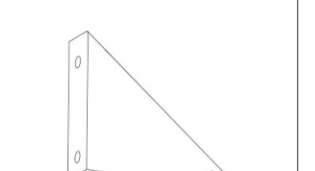
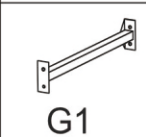
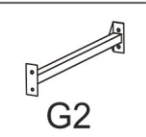
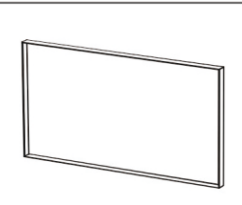
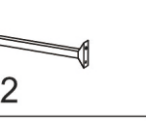
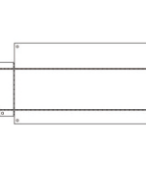
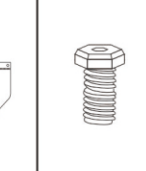
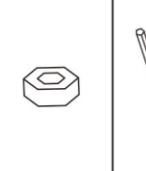
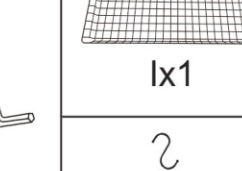
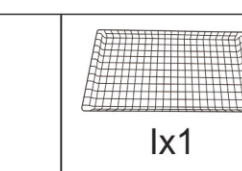
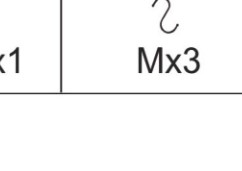
4. Do not overload this product. The maximum load capacity is 200 LBS.

5. When using this product, ensure all casters are locked; otherwise, it may be extremely dangerous.

6. Keep this product out of children's reach. It is dangerous for children to play on it.

7. Keep this product away from water and moisture.


PART LIST

				
A1x1	A2x1	B1x1	B2x1	Cx1
				
Dx1	Ex1	Fx1		
				
G1	G2	N1x1	Lx1	
				
Hx2	N2x1			
				
Jx4	Kx1	Sx36	S1x2	Yx1
				
				Ix1
				
				Mx3

TIPS:
1. Do not fully tighten all bolts and nuts initially; you may need to rework if you make any mistakes.
2. We recommend that one adult is required to complete the installation.


9

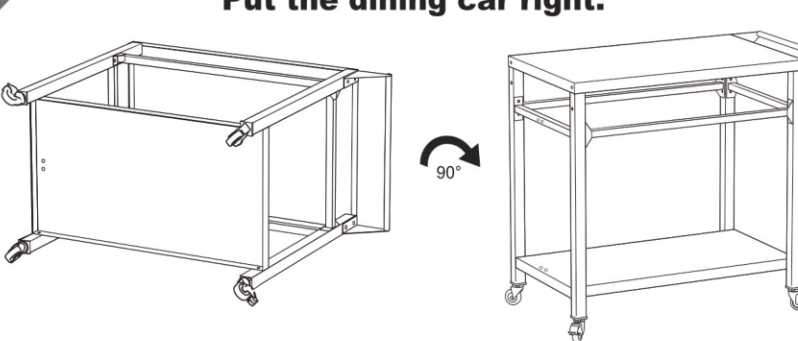Put the dining car right.




10

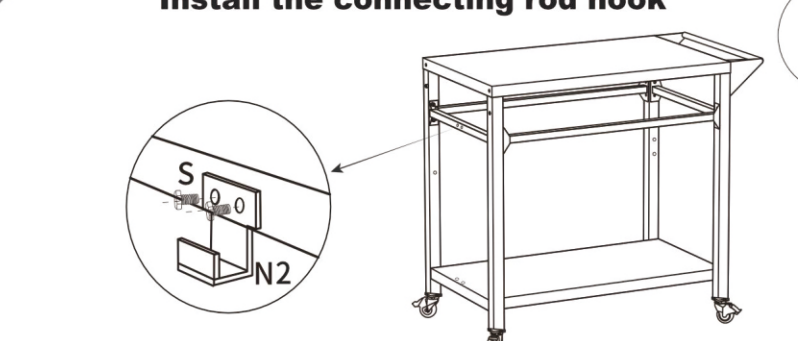Install the connecting rod hook




11

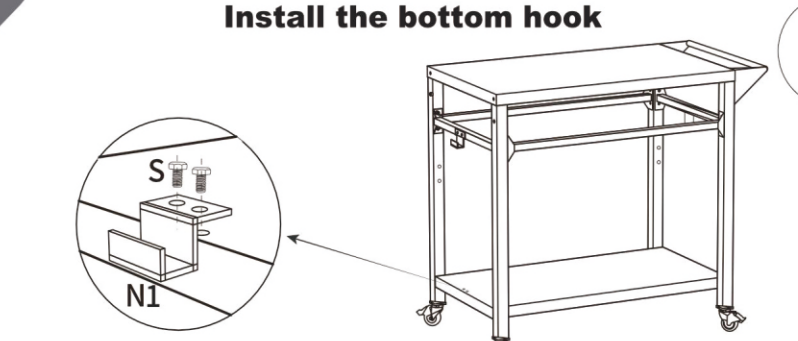Install the bottom hook




7

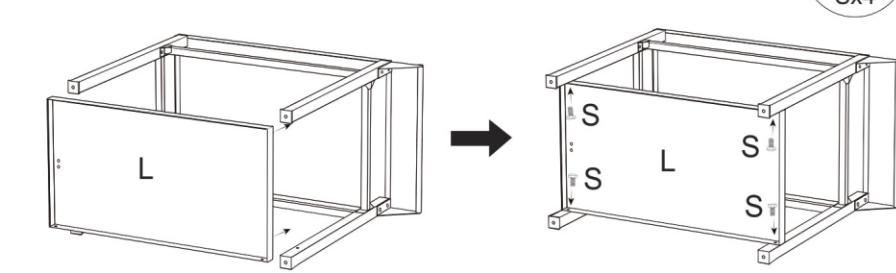Install the bottom plate




8

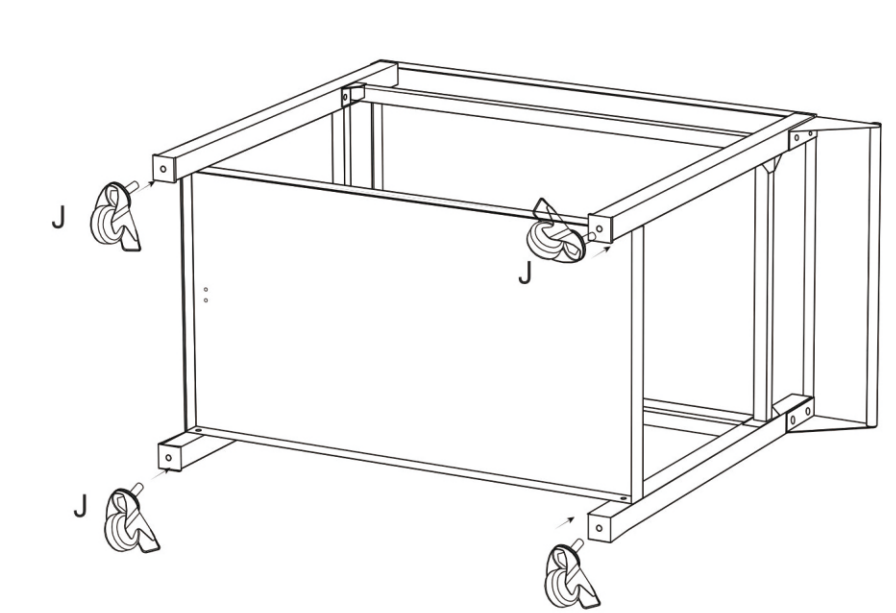Install casters




1

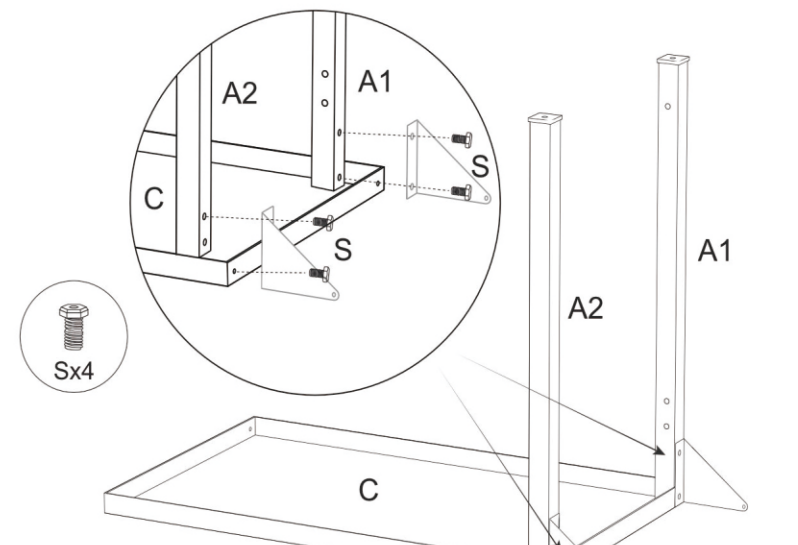Install A1 and A2 feet and handle support.




2

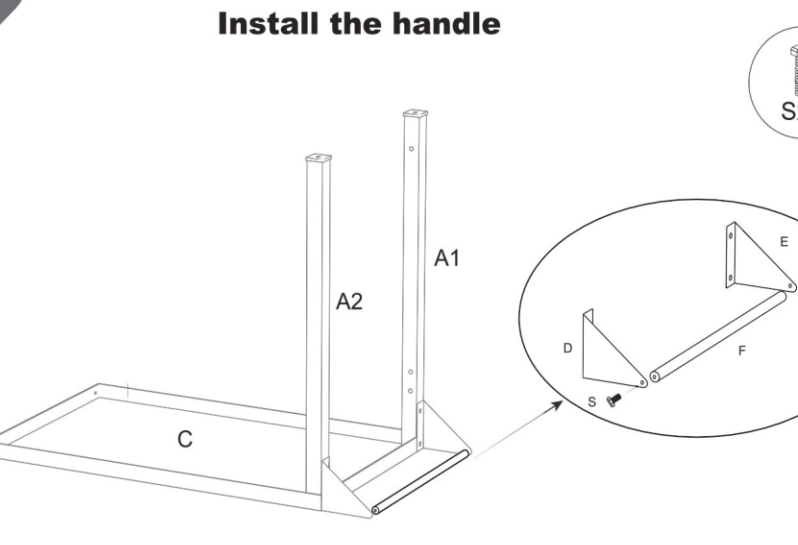Install the handle




3

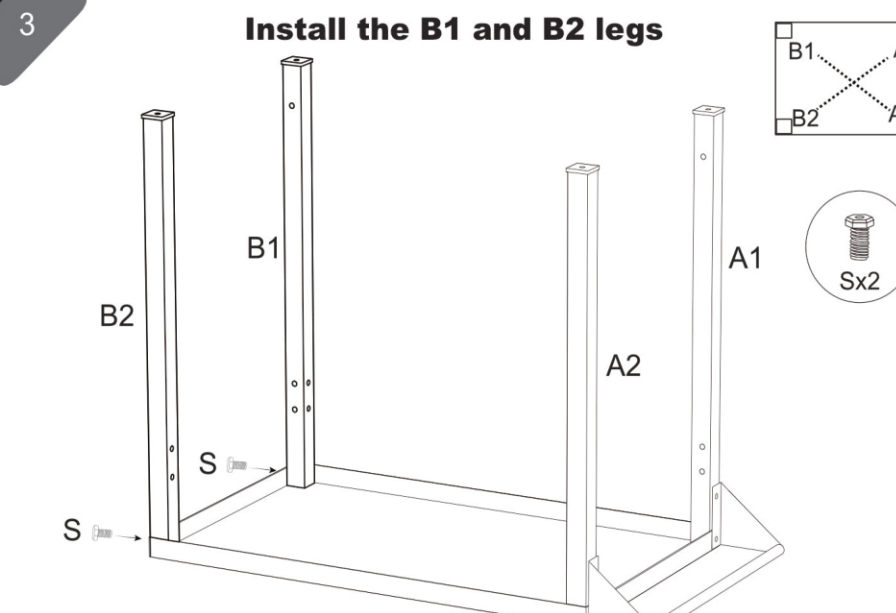Install the B1 and B2 legs




4

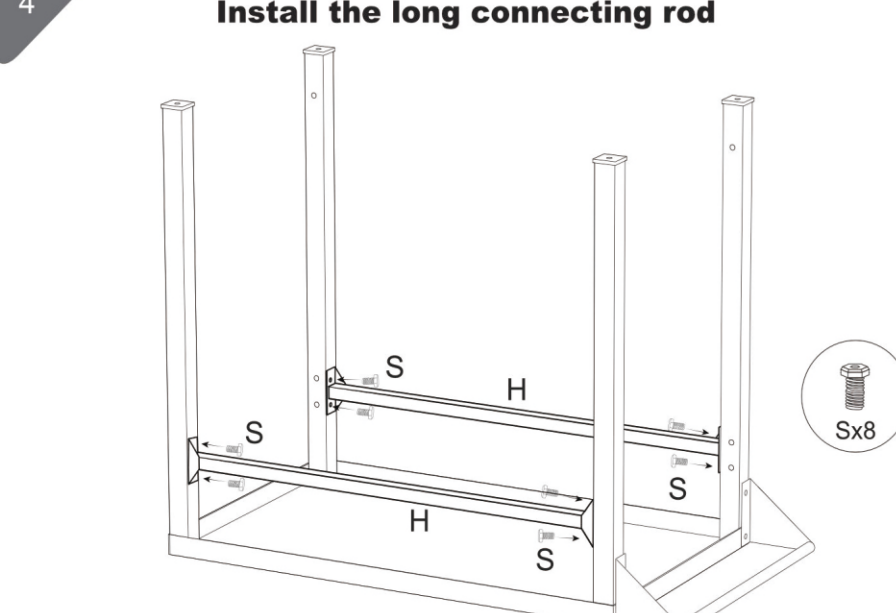Install the long connecting rod



5

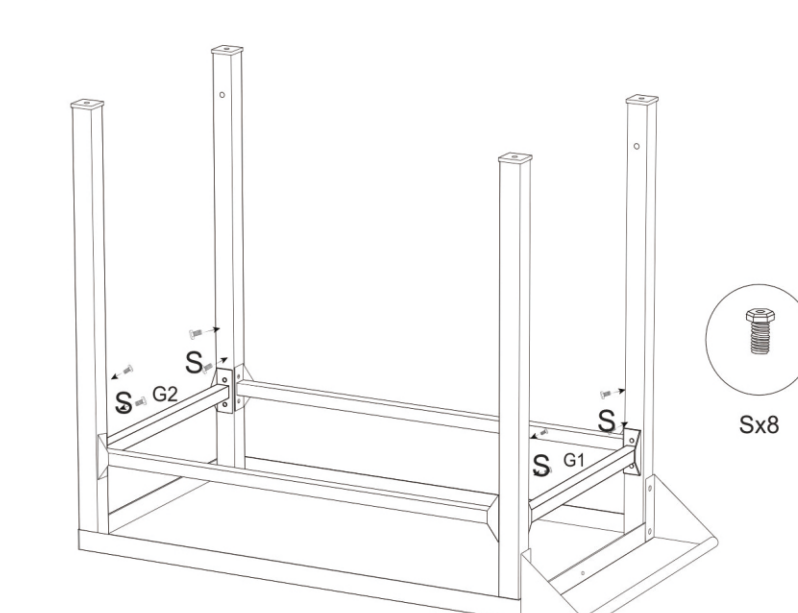Install G1 and G2 connecting rods The height of the connecting rod can be adjusted according to the position of the screw holes.



6

Put the dining car on its side

