

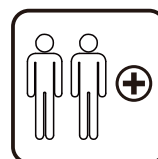
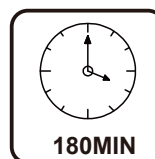
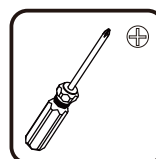
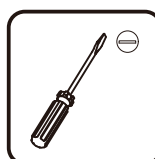



Installation & Assembly

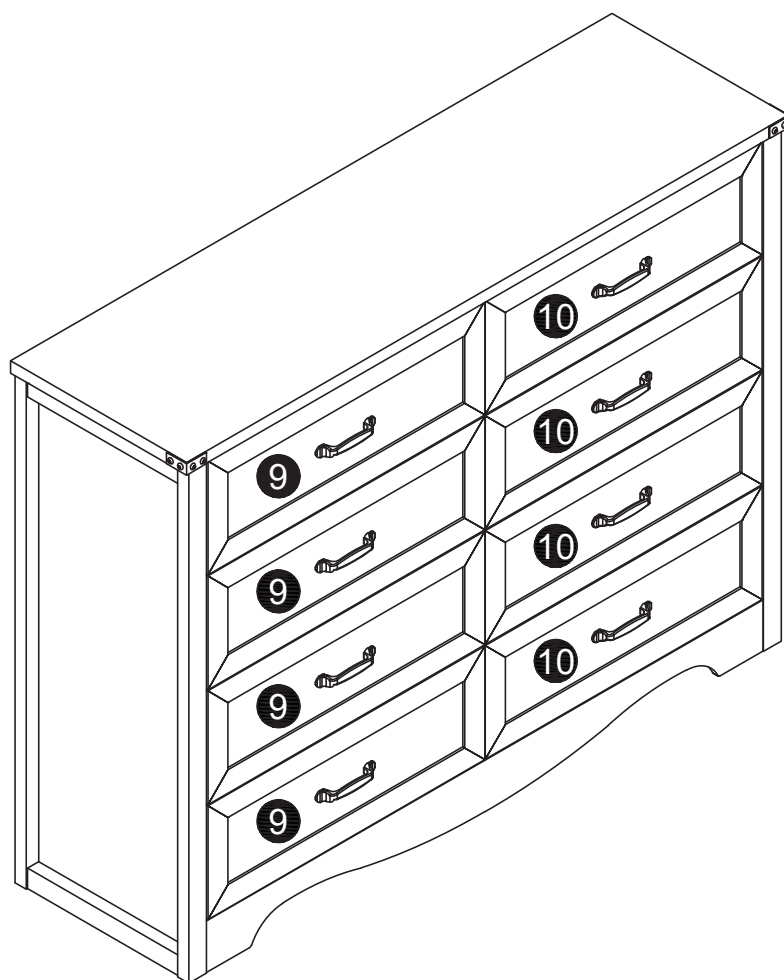


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

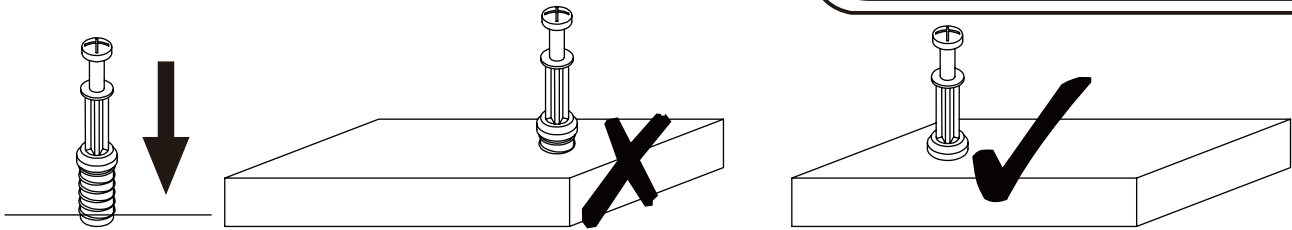


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

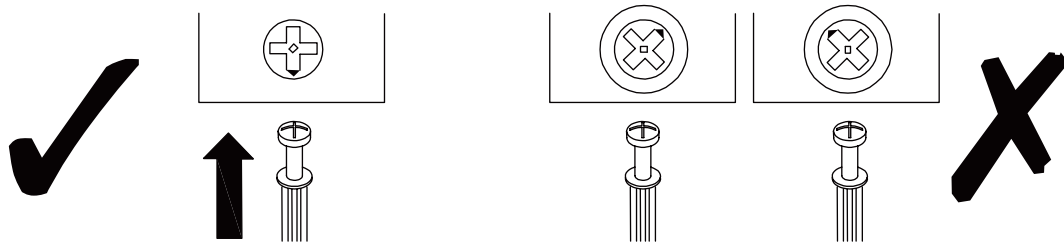











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






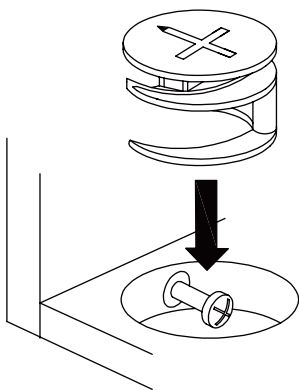



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

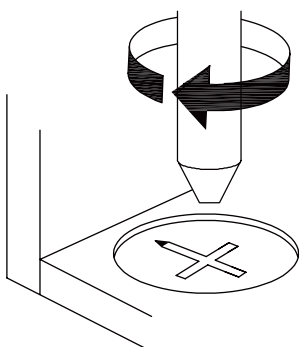


EN_Turn cam lock clockwise to tighten.

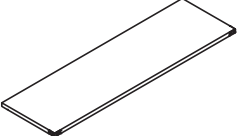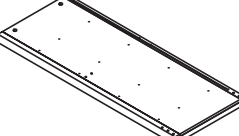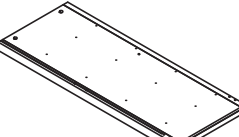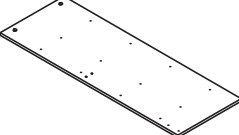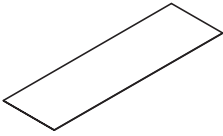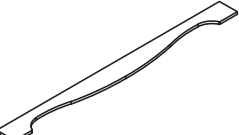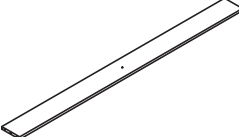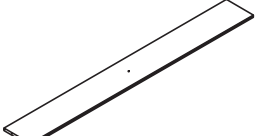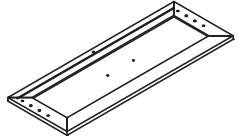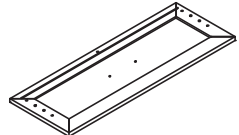NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x2	
6		x1	
7		x1	
8		x1	
9		x4	
10		x4	

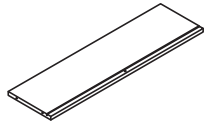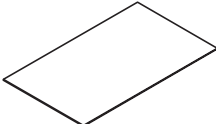
NO.	PARTS	QTY	SPARE
11		x8	
12		x8	
13		x8	
14		x8	
15		x8	
16		x2	
	 Hardware Kit	x1	










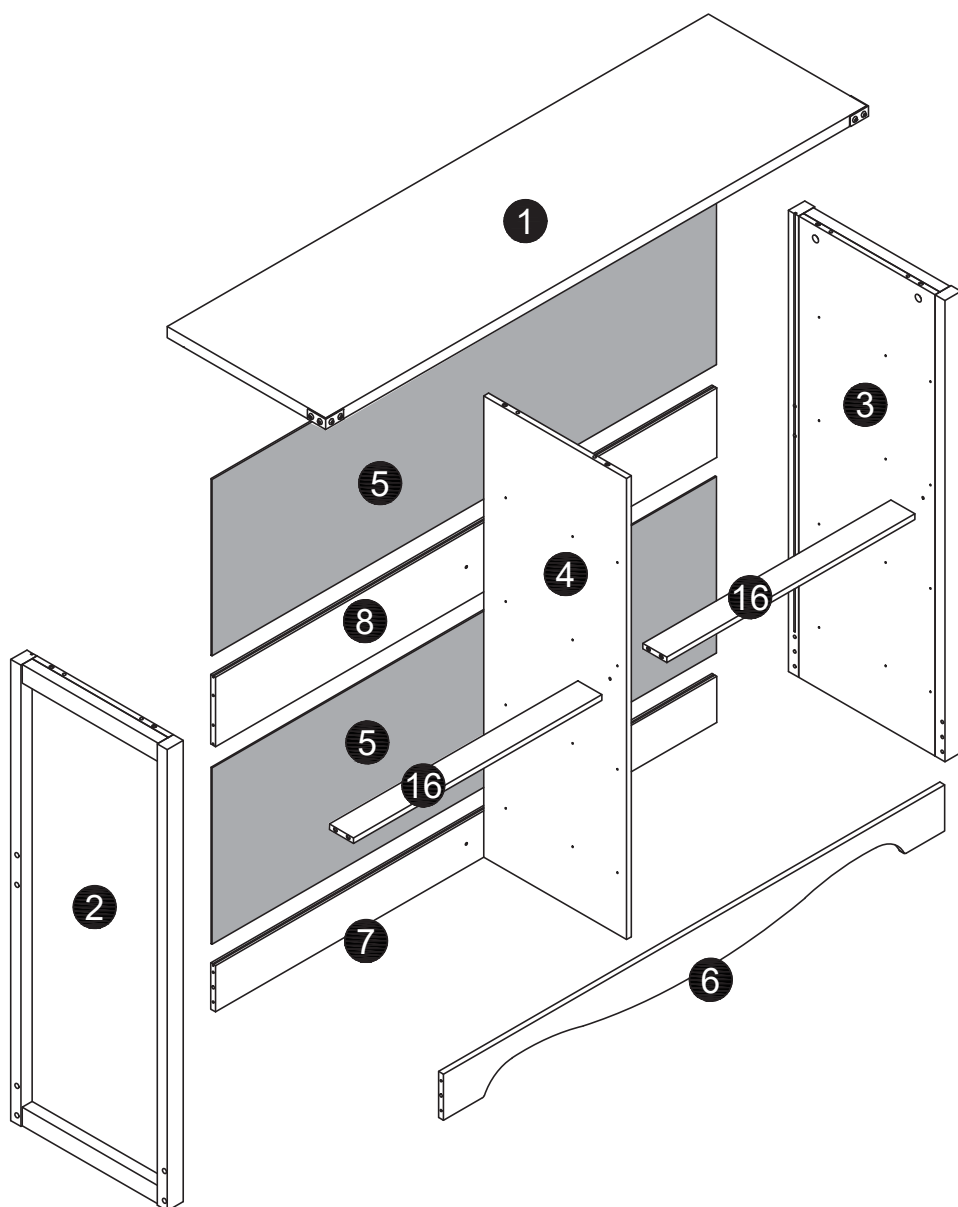



Left drawer


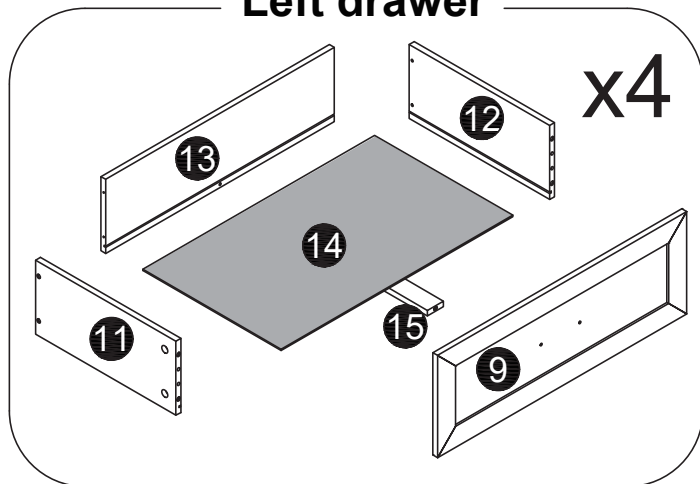


Right drawer

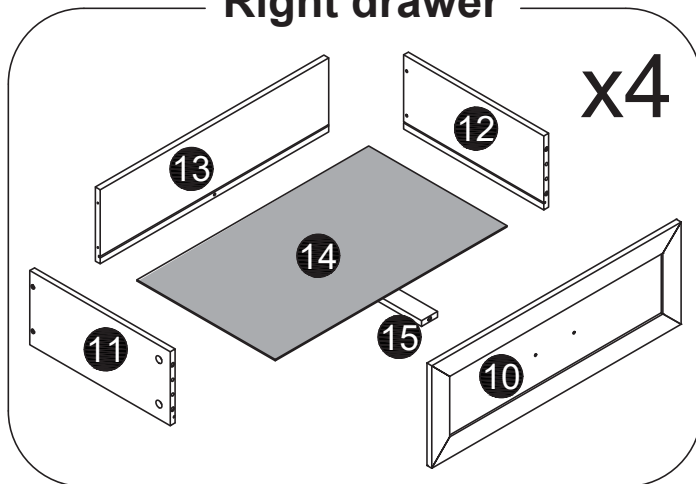

 A x52 Ø6x35mm +3(spare)	 B x52 Ø15x10mm +3(spare)	 C x42 Ø6x30mm +4(spare)	 D x44 Ø4x35mm +5(spare)	 E x96 Ø3.5x12mm +8(spare)	 F x8
 G-1	 G-2	 H x2	 I x4 Ø4x12mm	 J x2 Ø4x14mm	 K x2
 L x2 Ø6x30mm	 M x12 Ø5x50mm +1(spare)	 N x12 Ø15mm +3(spare)	 CL x8 L350mm	 CR x8 L350mm	 DL x8 L350mm
 DR x8 L350mm					


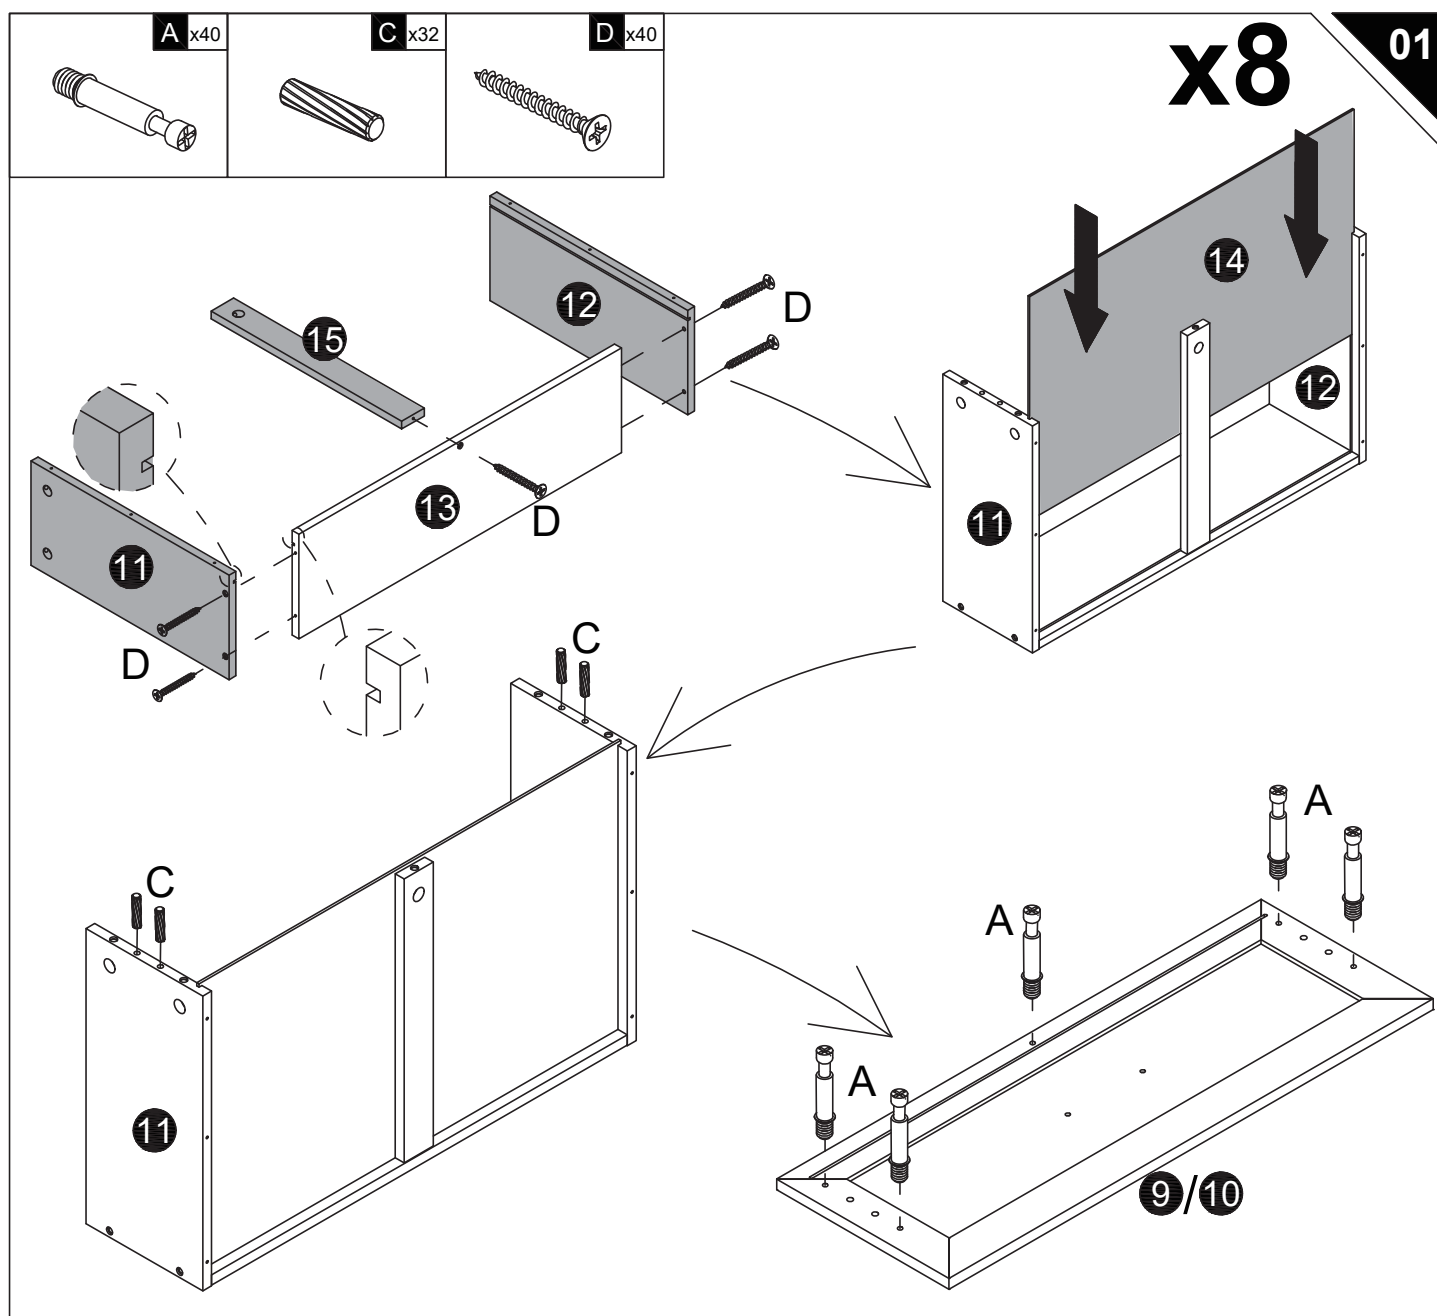


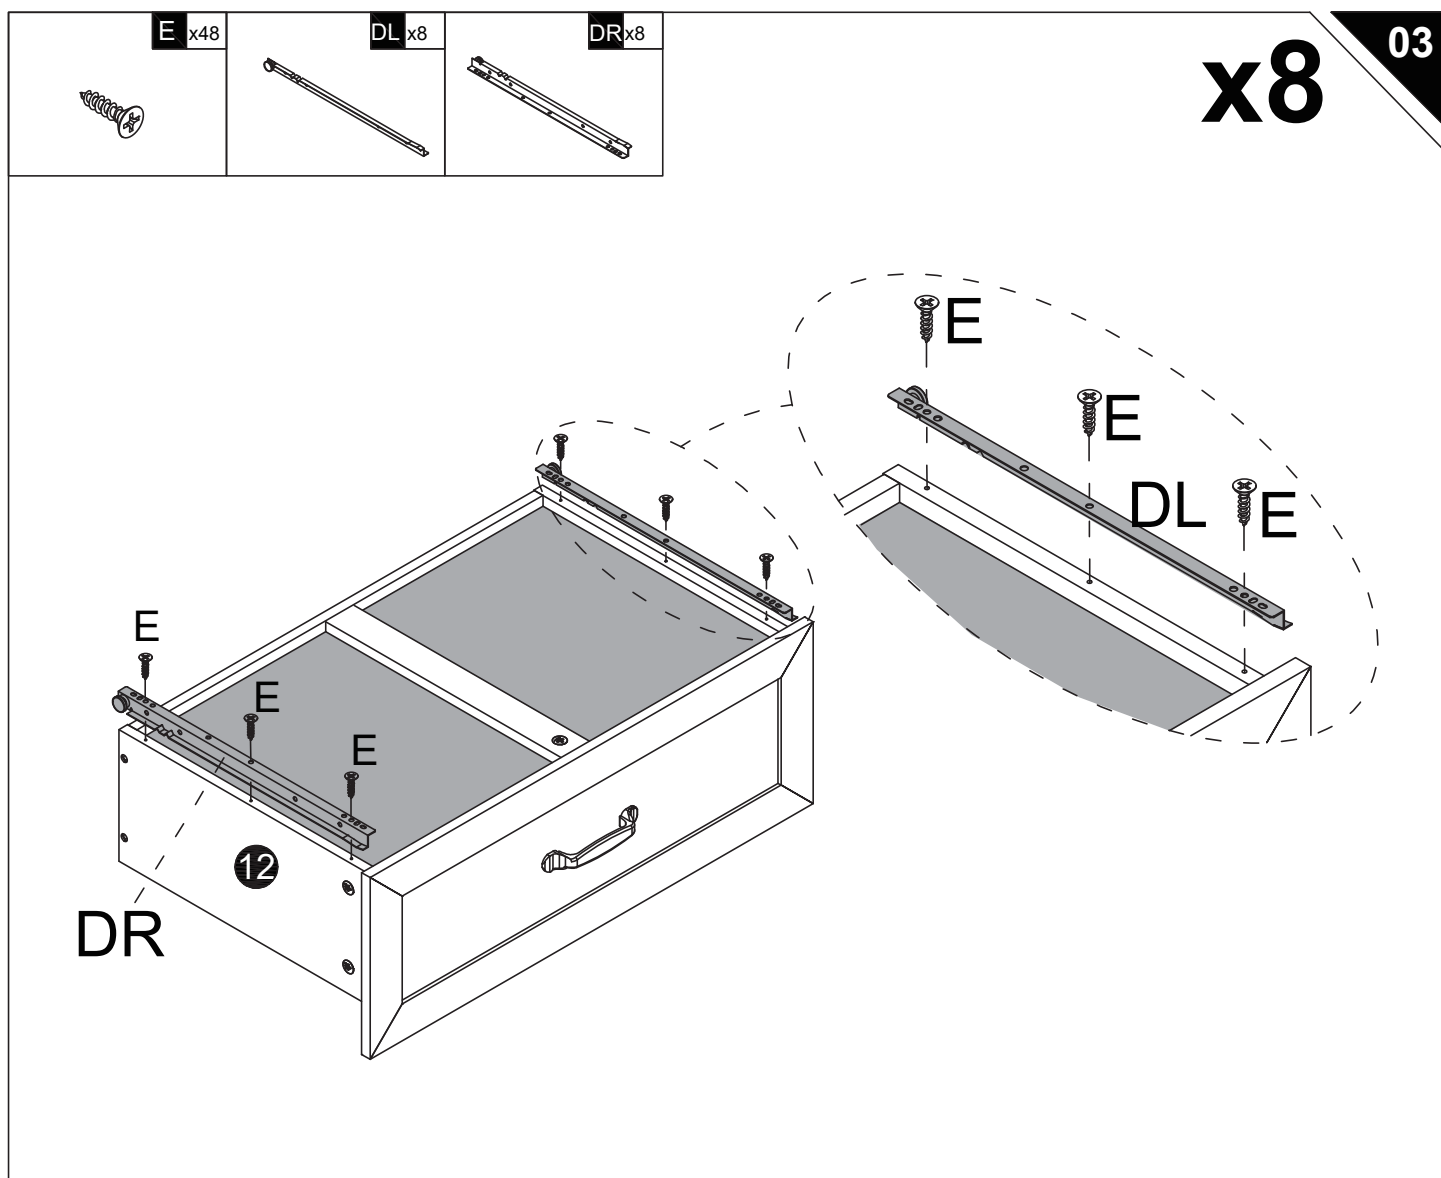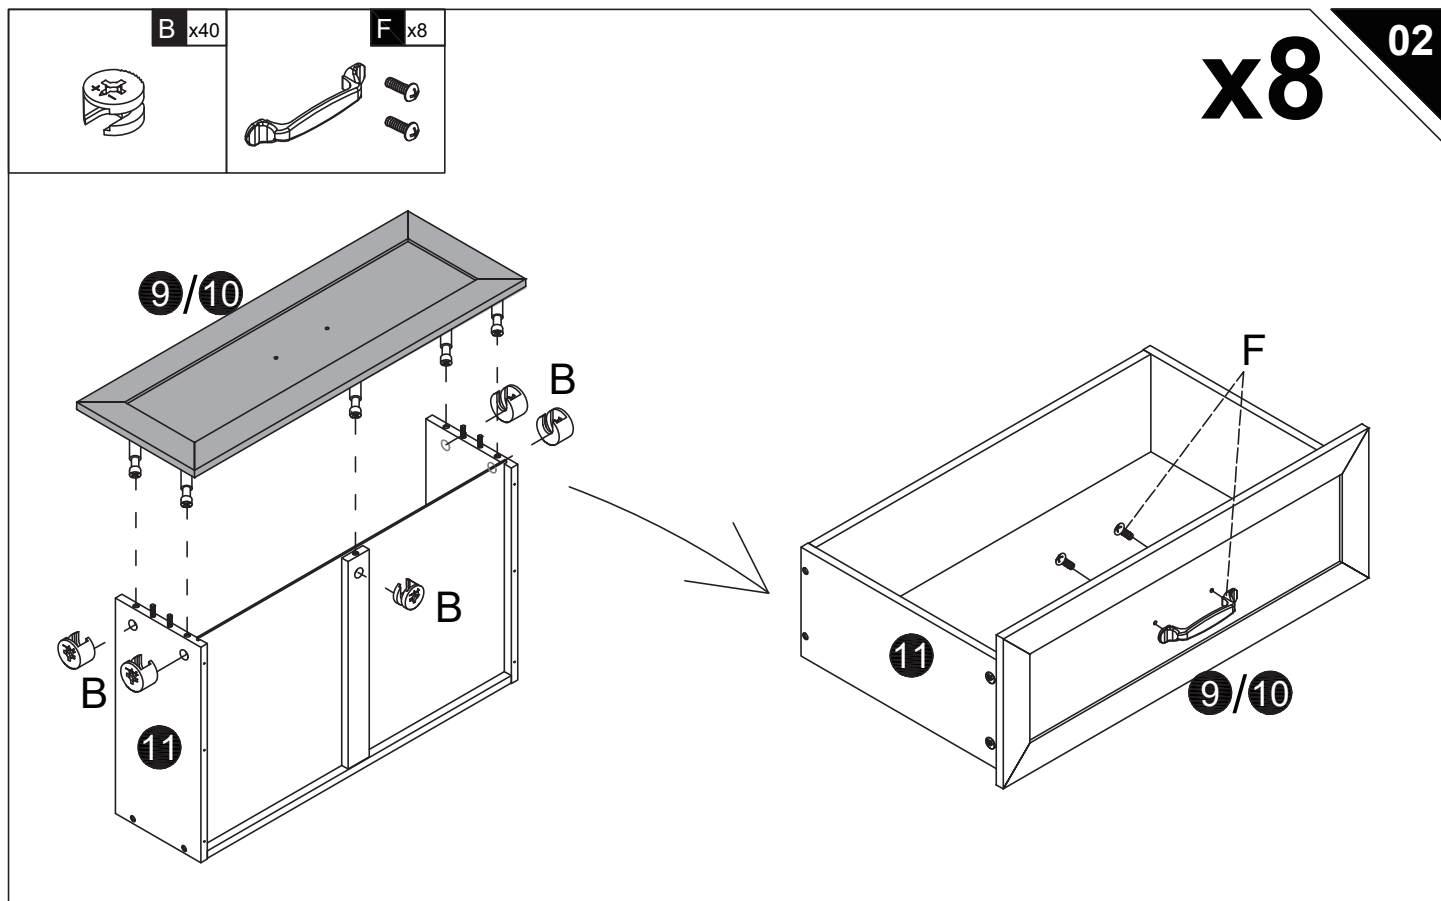


E x24

CL x4

CR x4

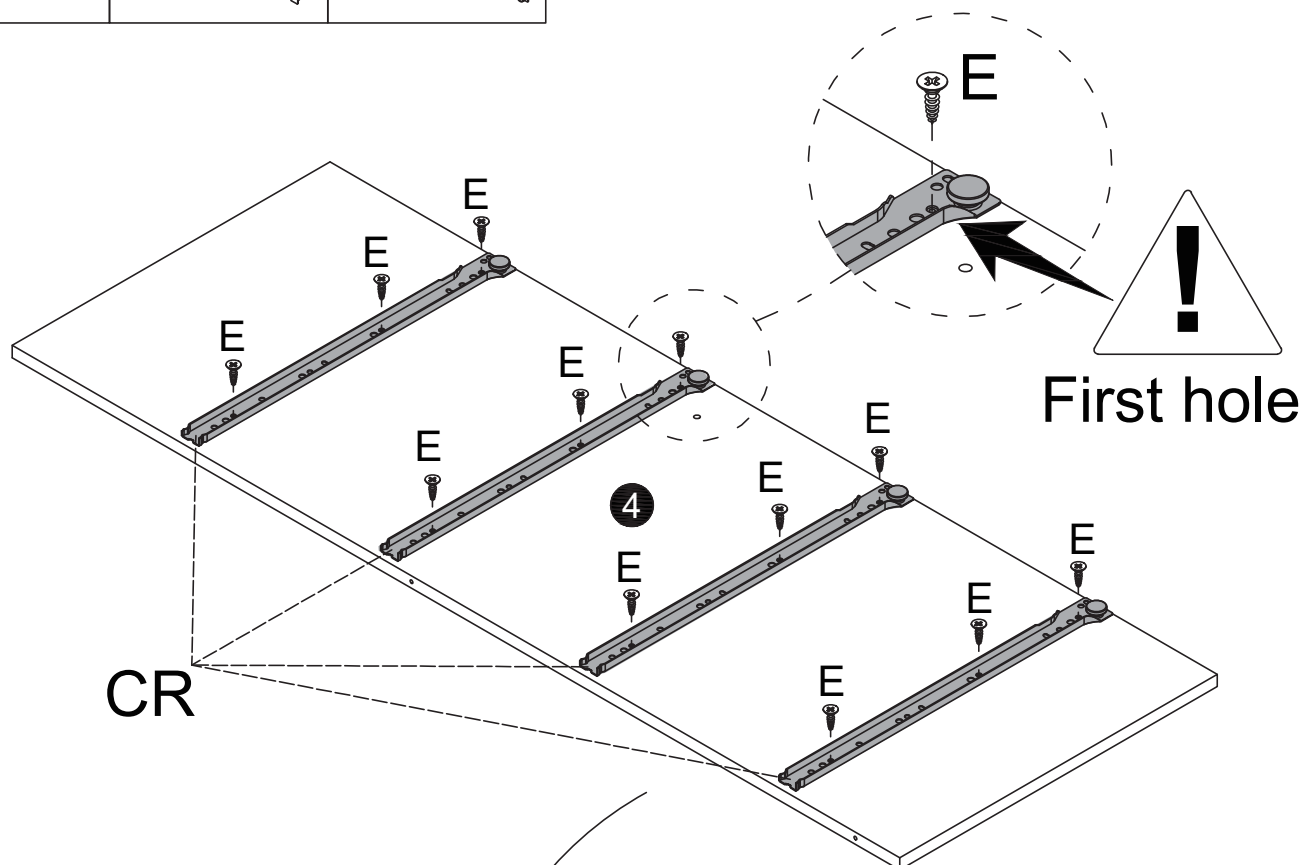

180°

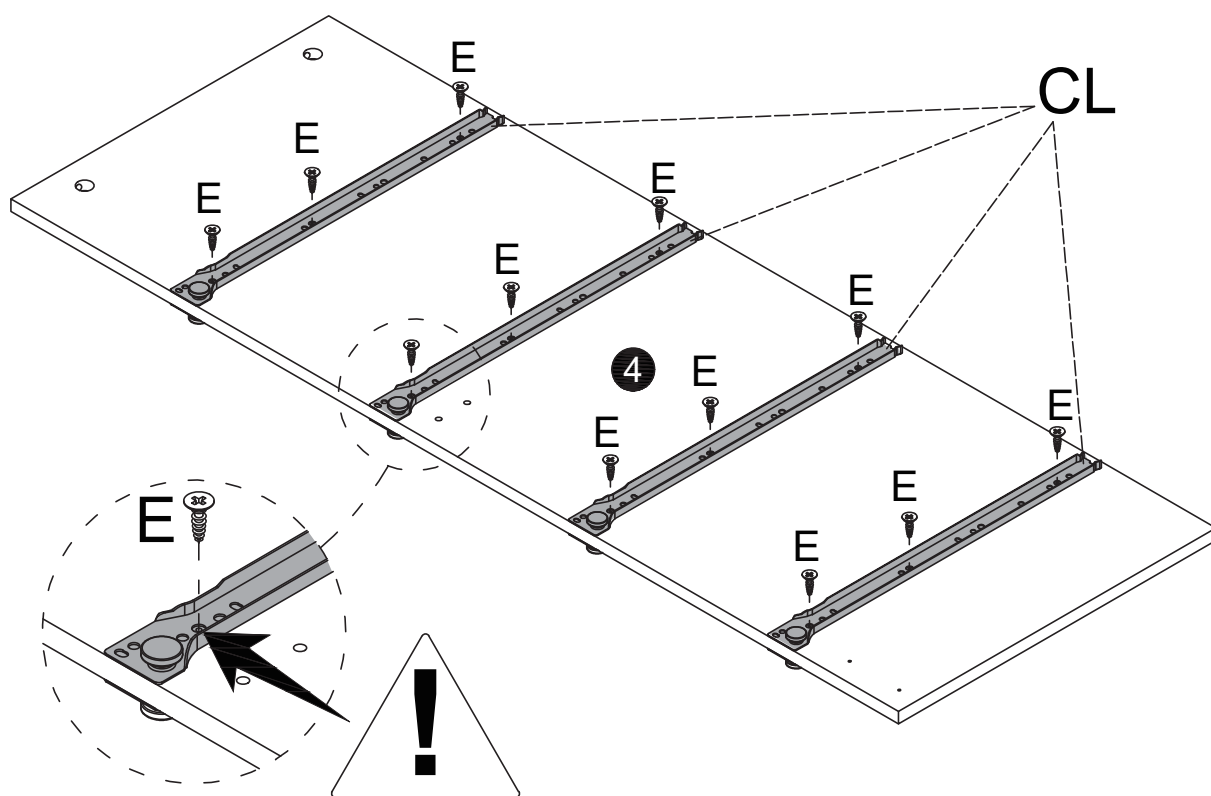


Second hole

E x12

CL x4


05

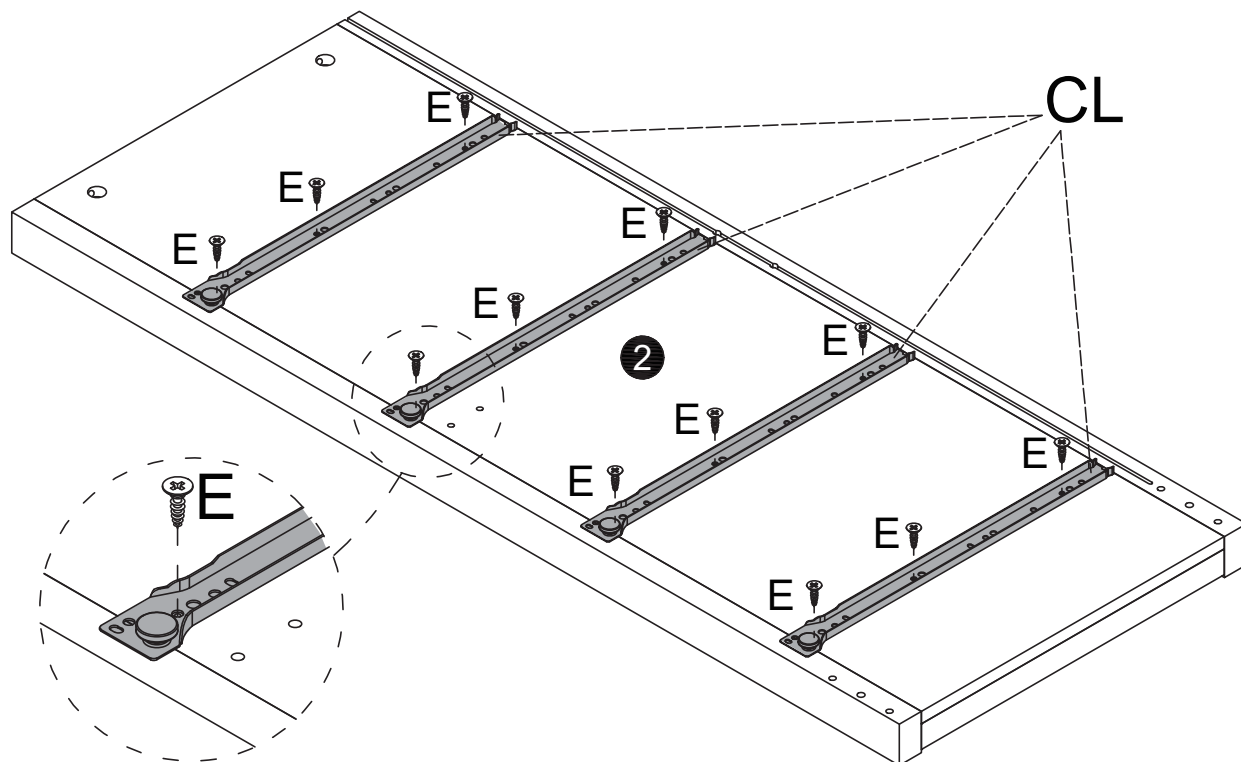


E x12

CR x4


06

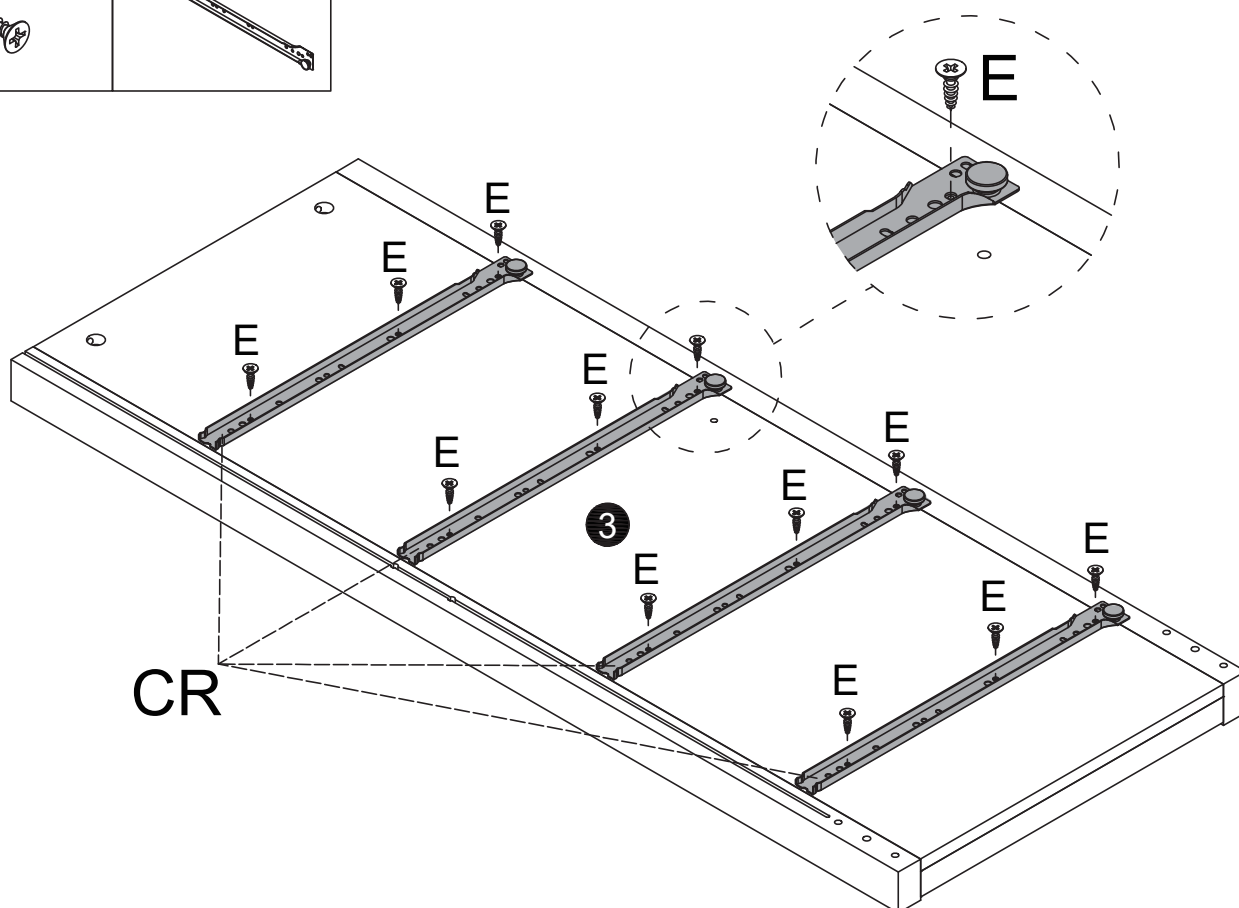


A x2




07

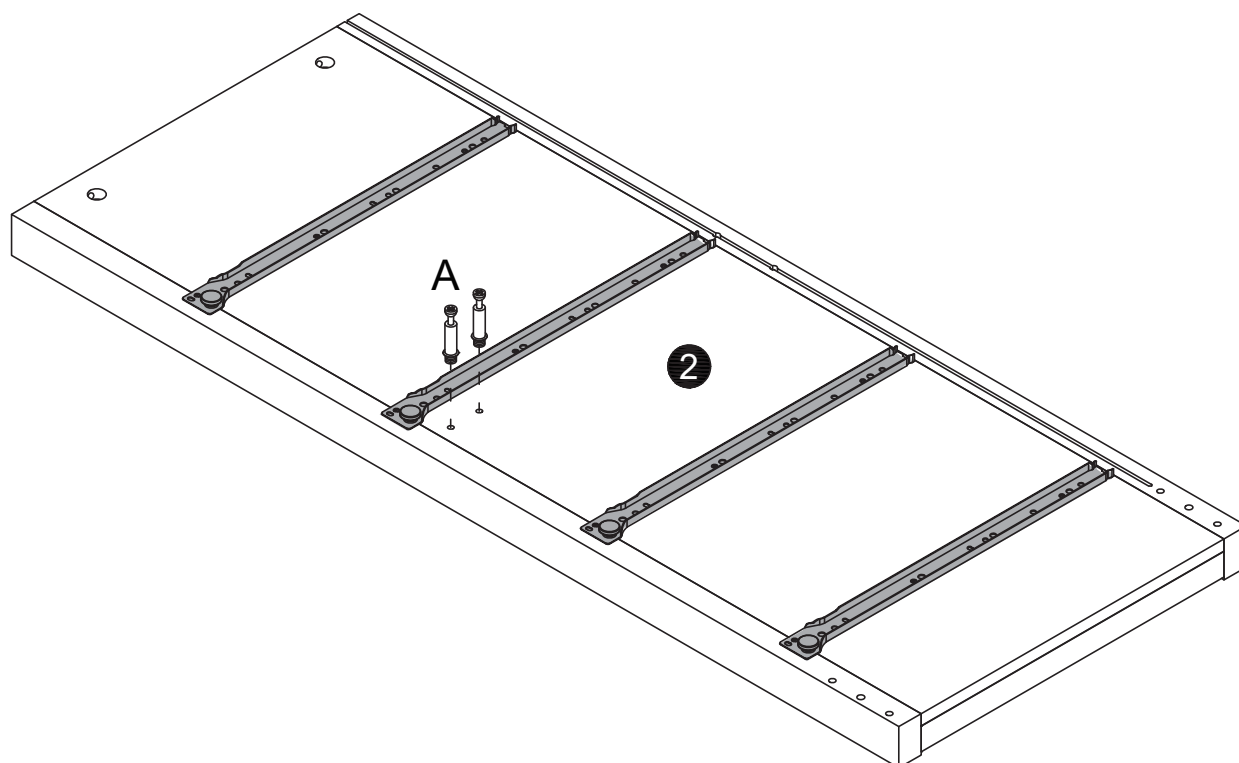

A x1





08

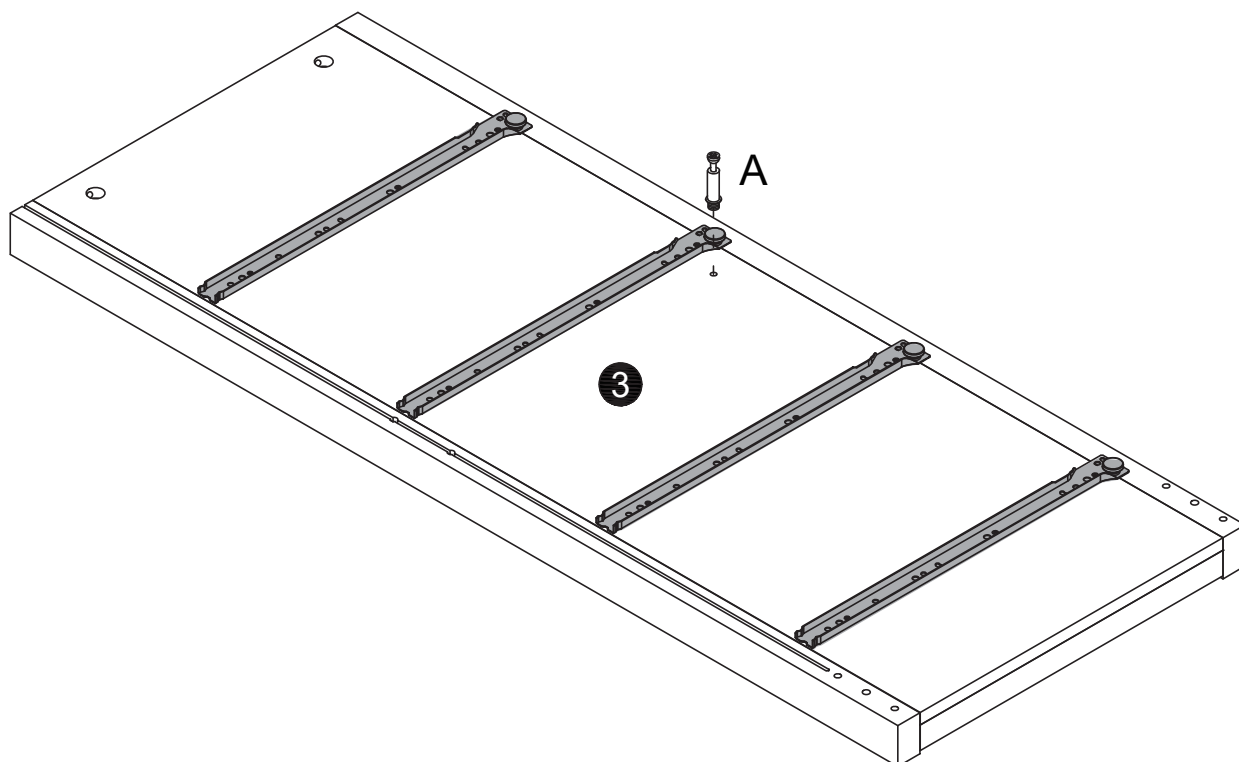



A x2

H x2



I x2

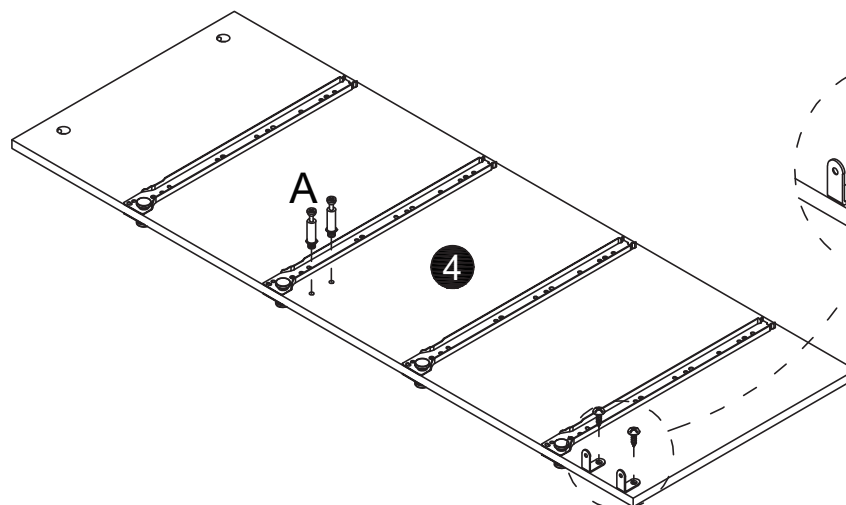




I x2

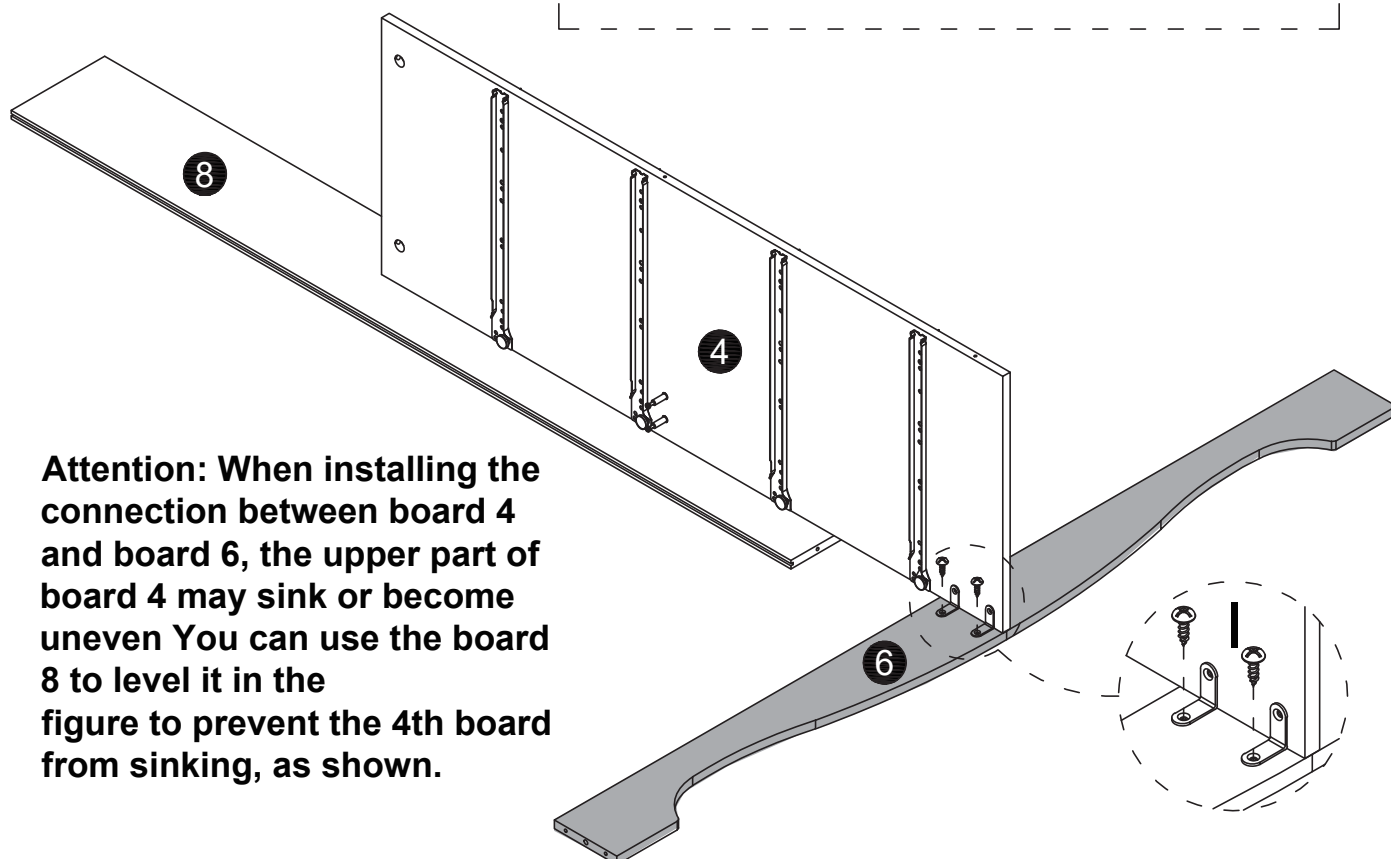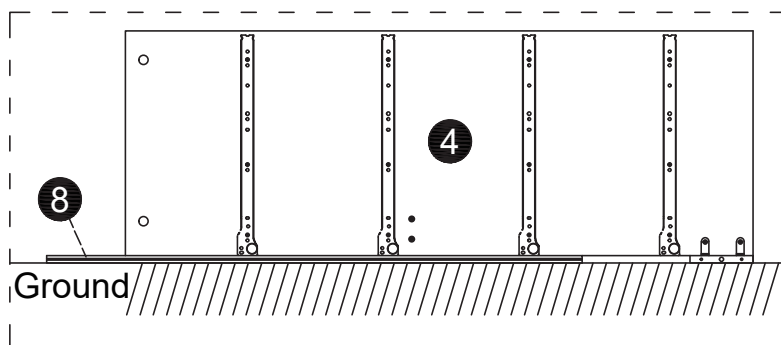


Attention: When installing the connection between board 4 and board 6, the upper part of board 4 may sink or become uneven. You can use the board 8 to level it in the figure to prevent the 4th board from sinking, as shown.

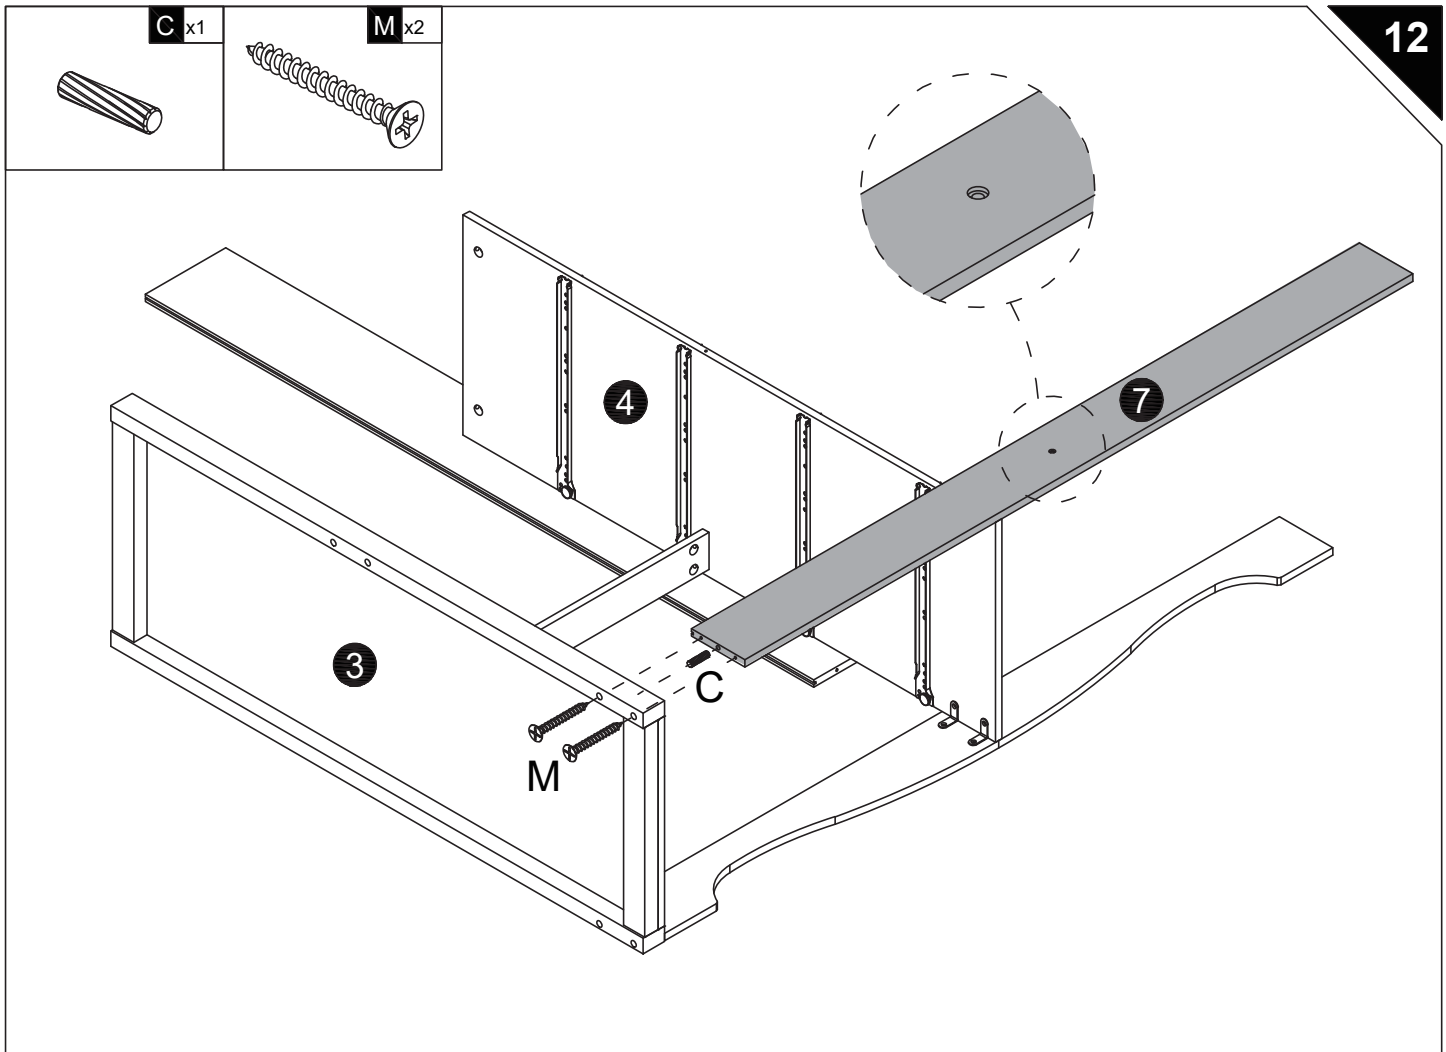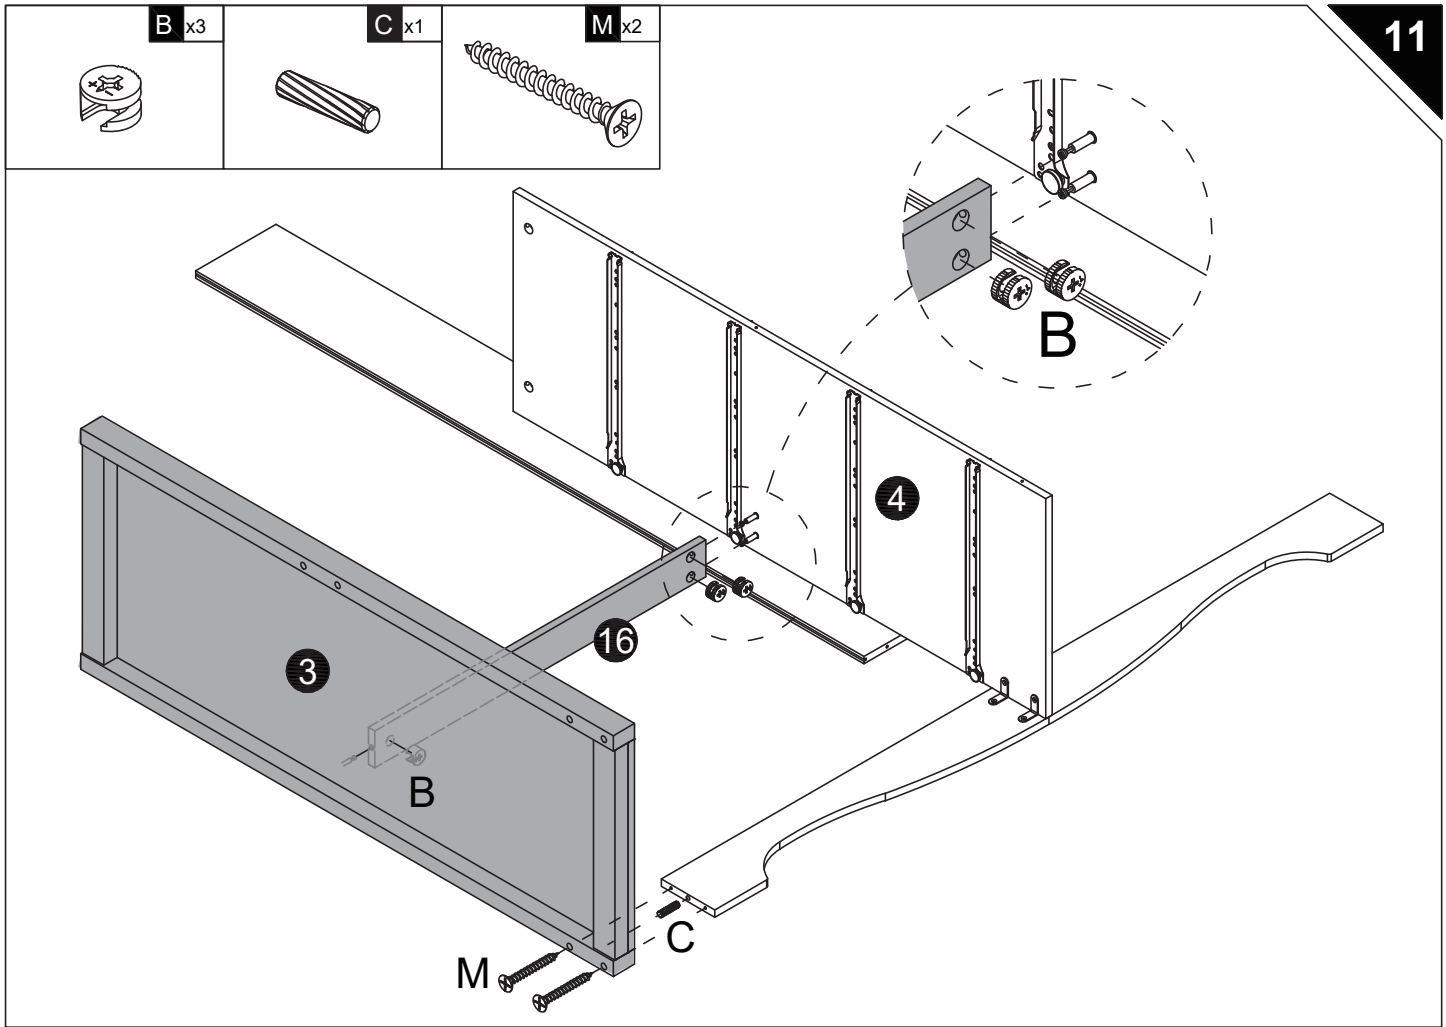

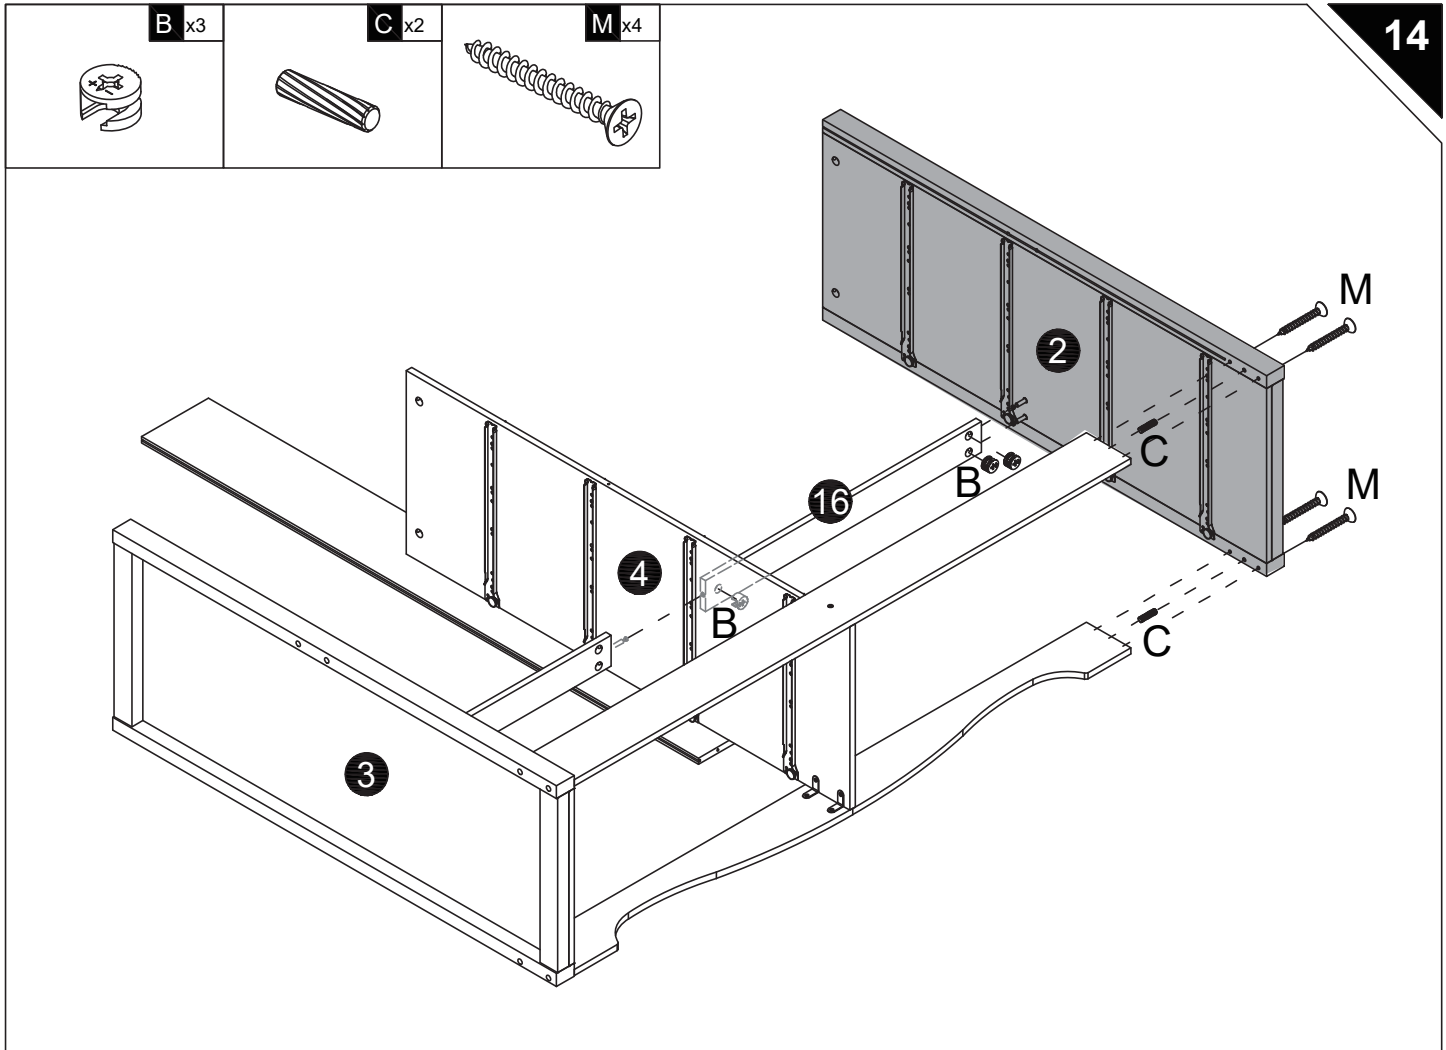
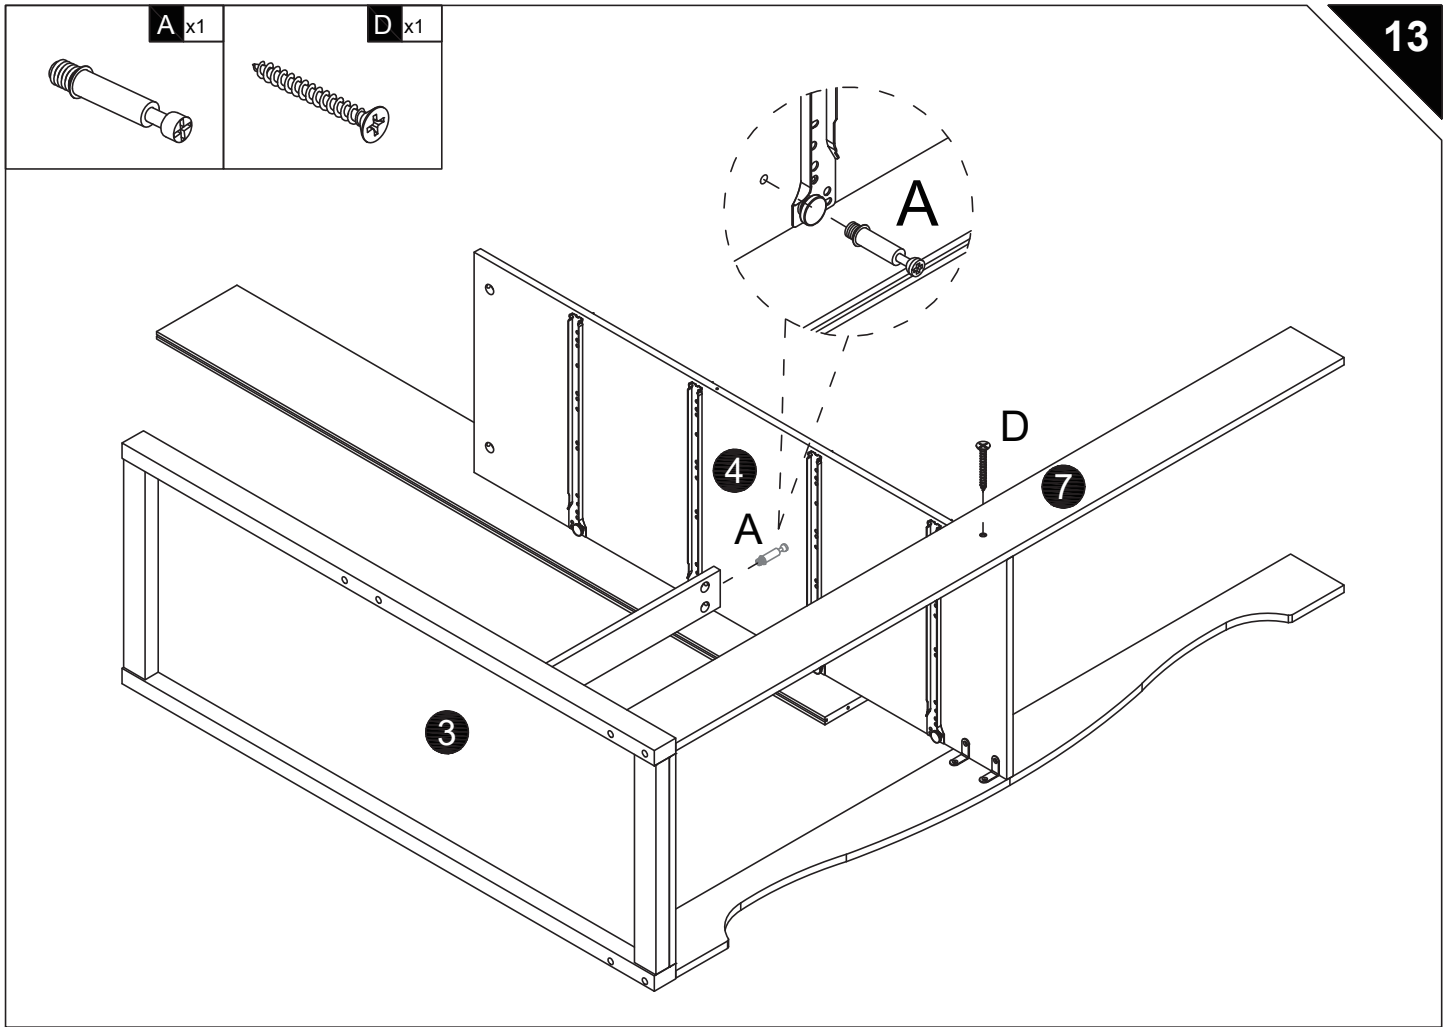


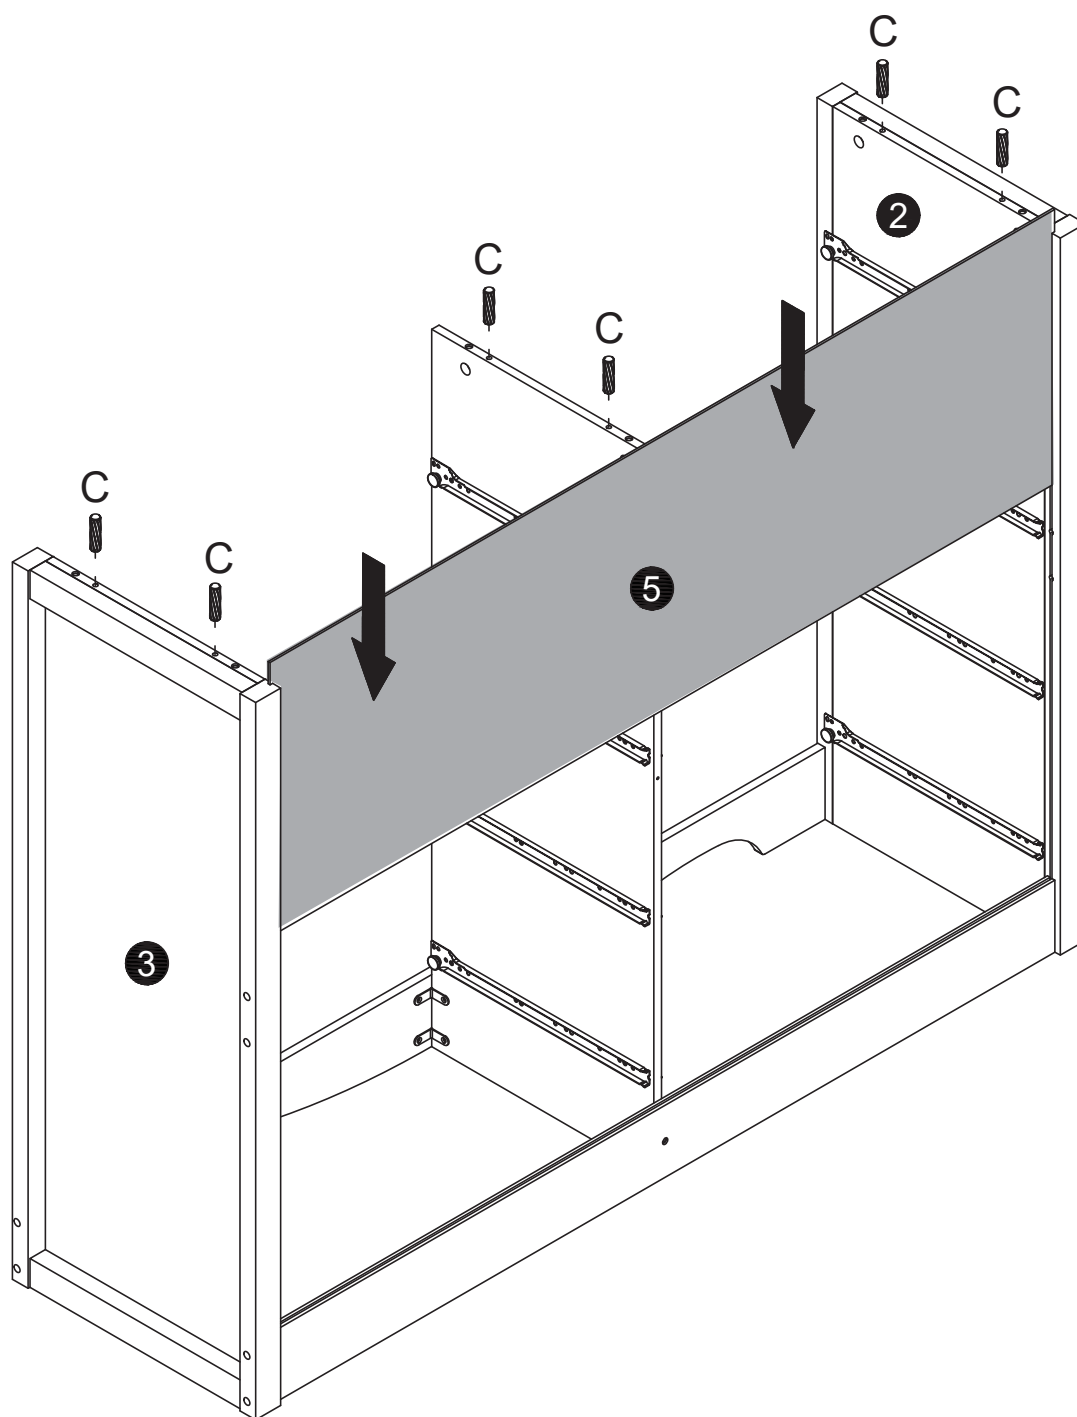




D x1





M x4

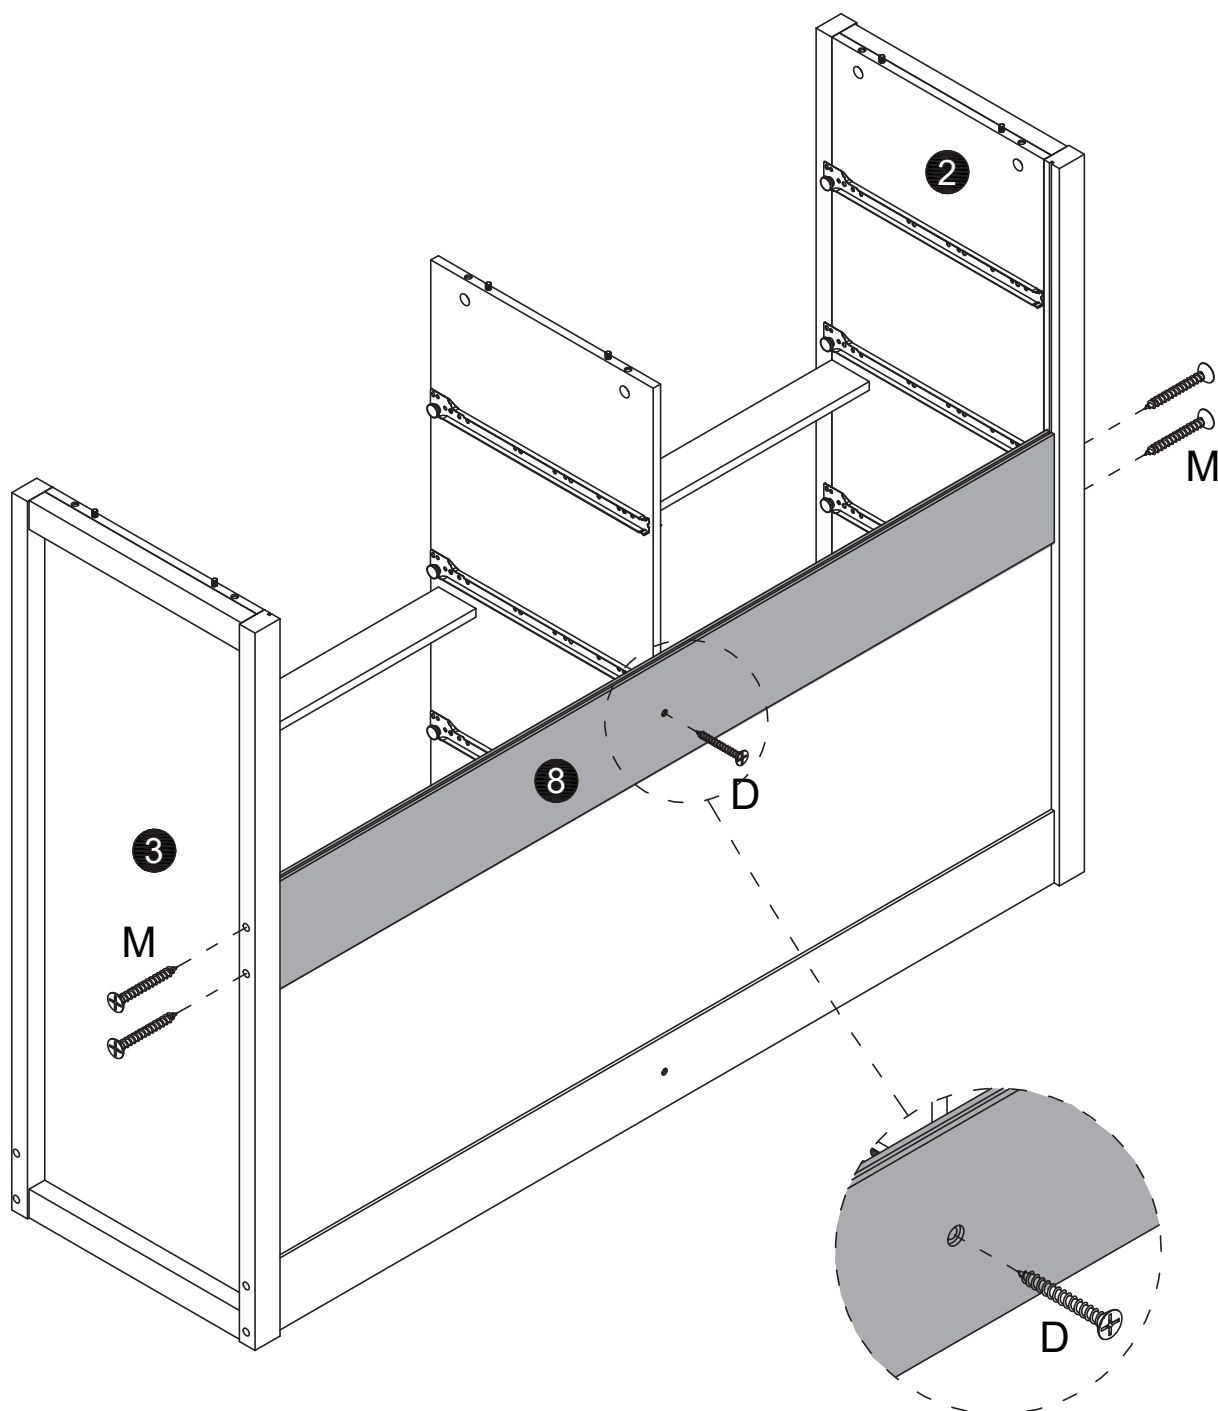


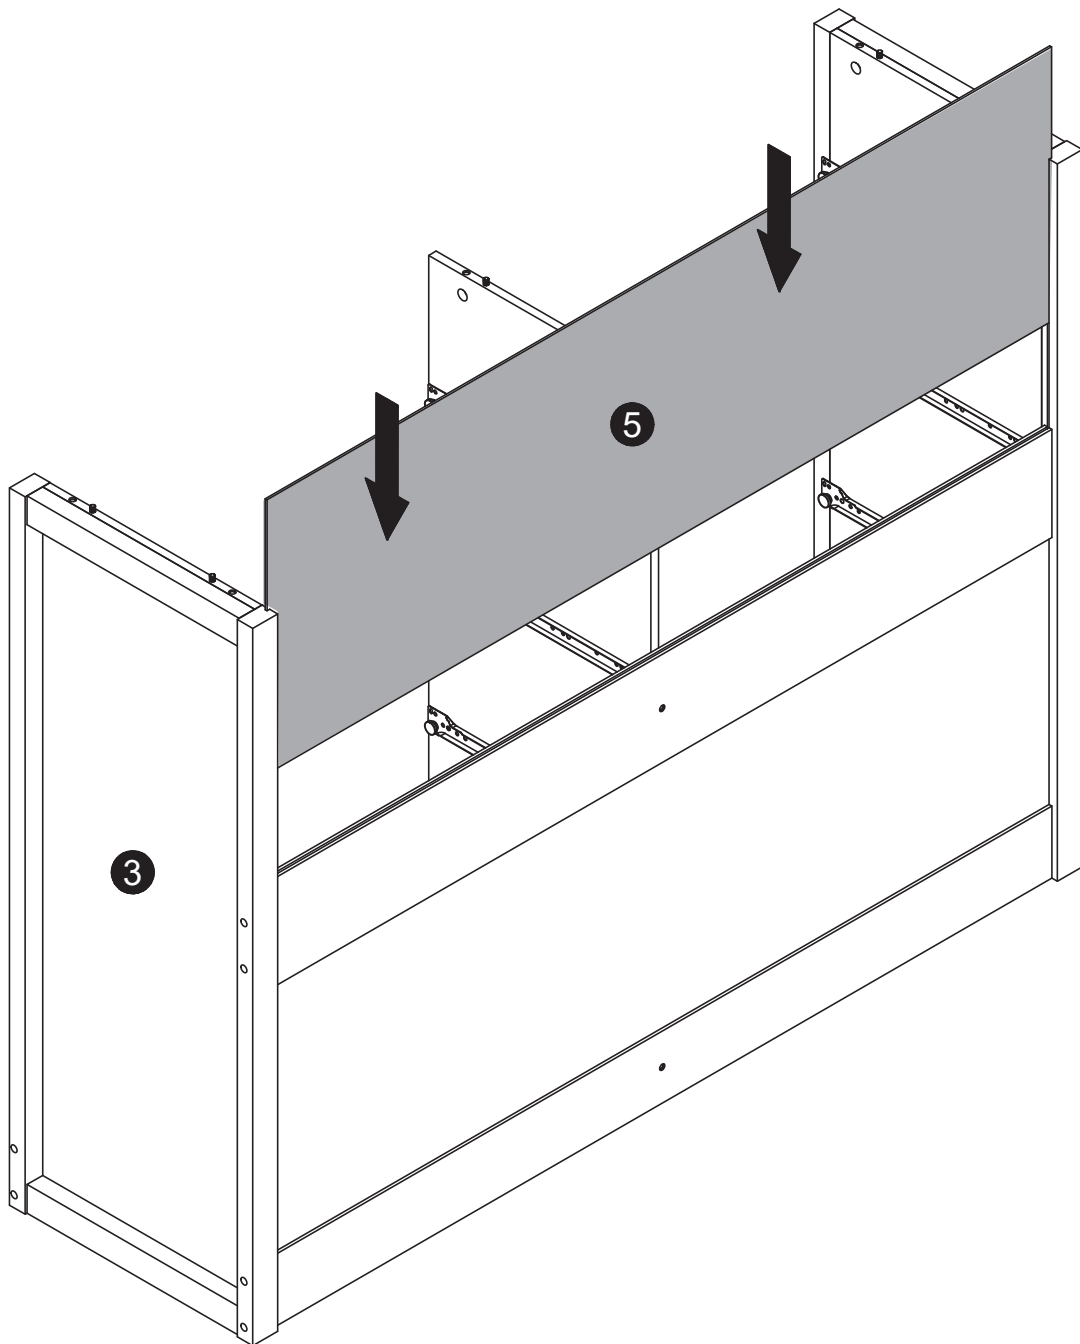

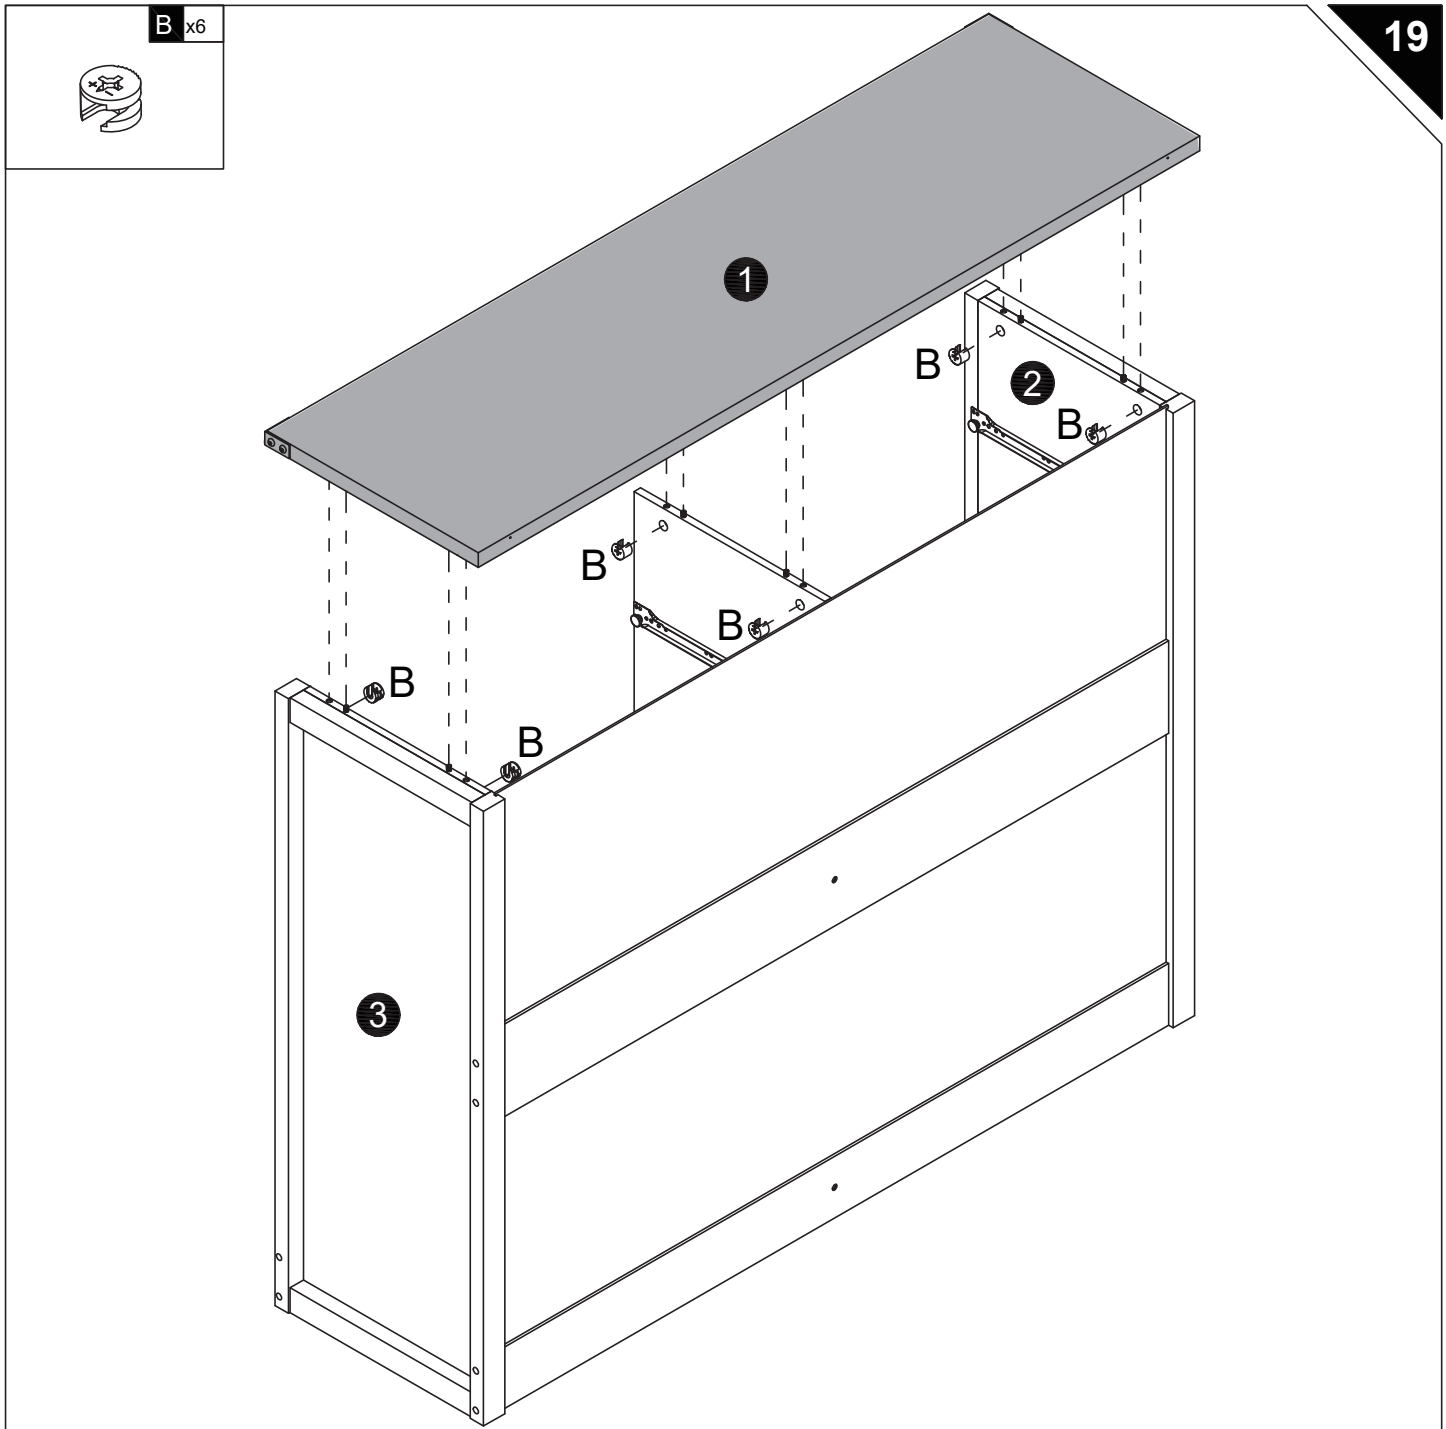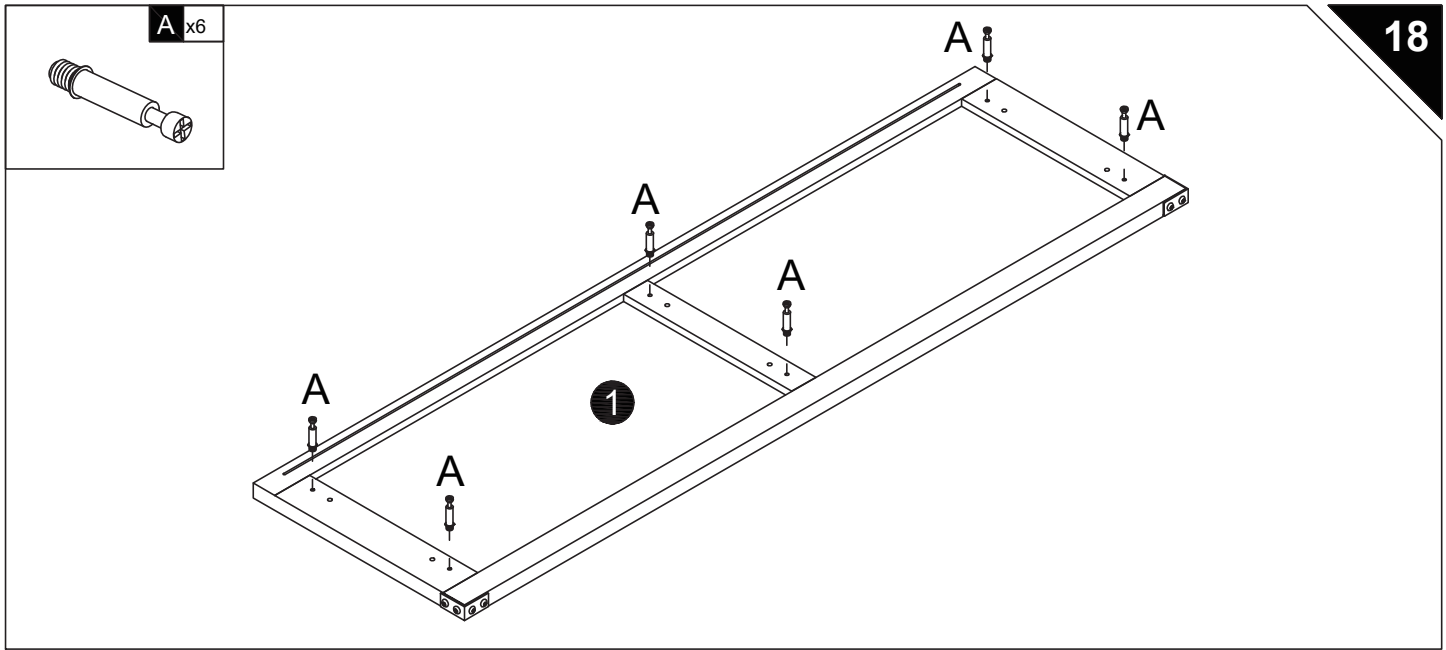


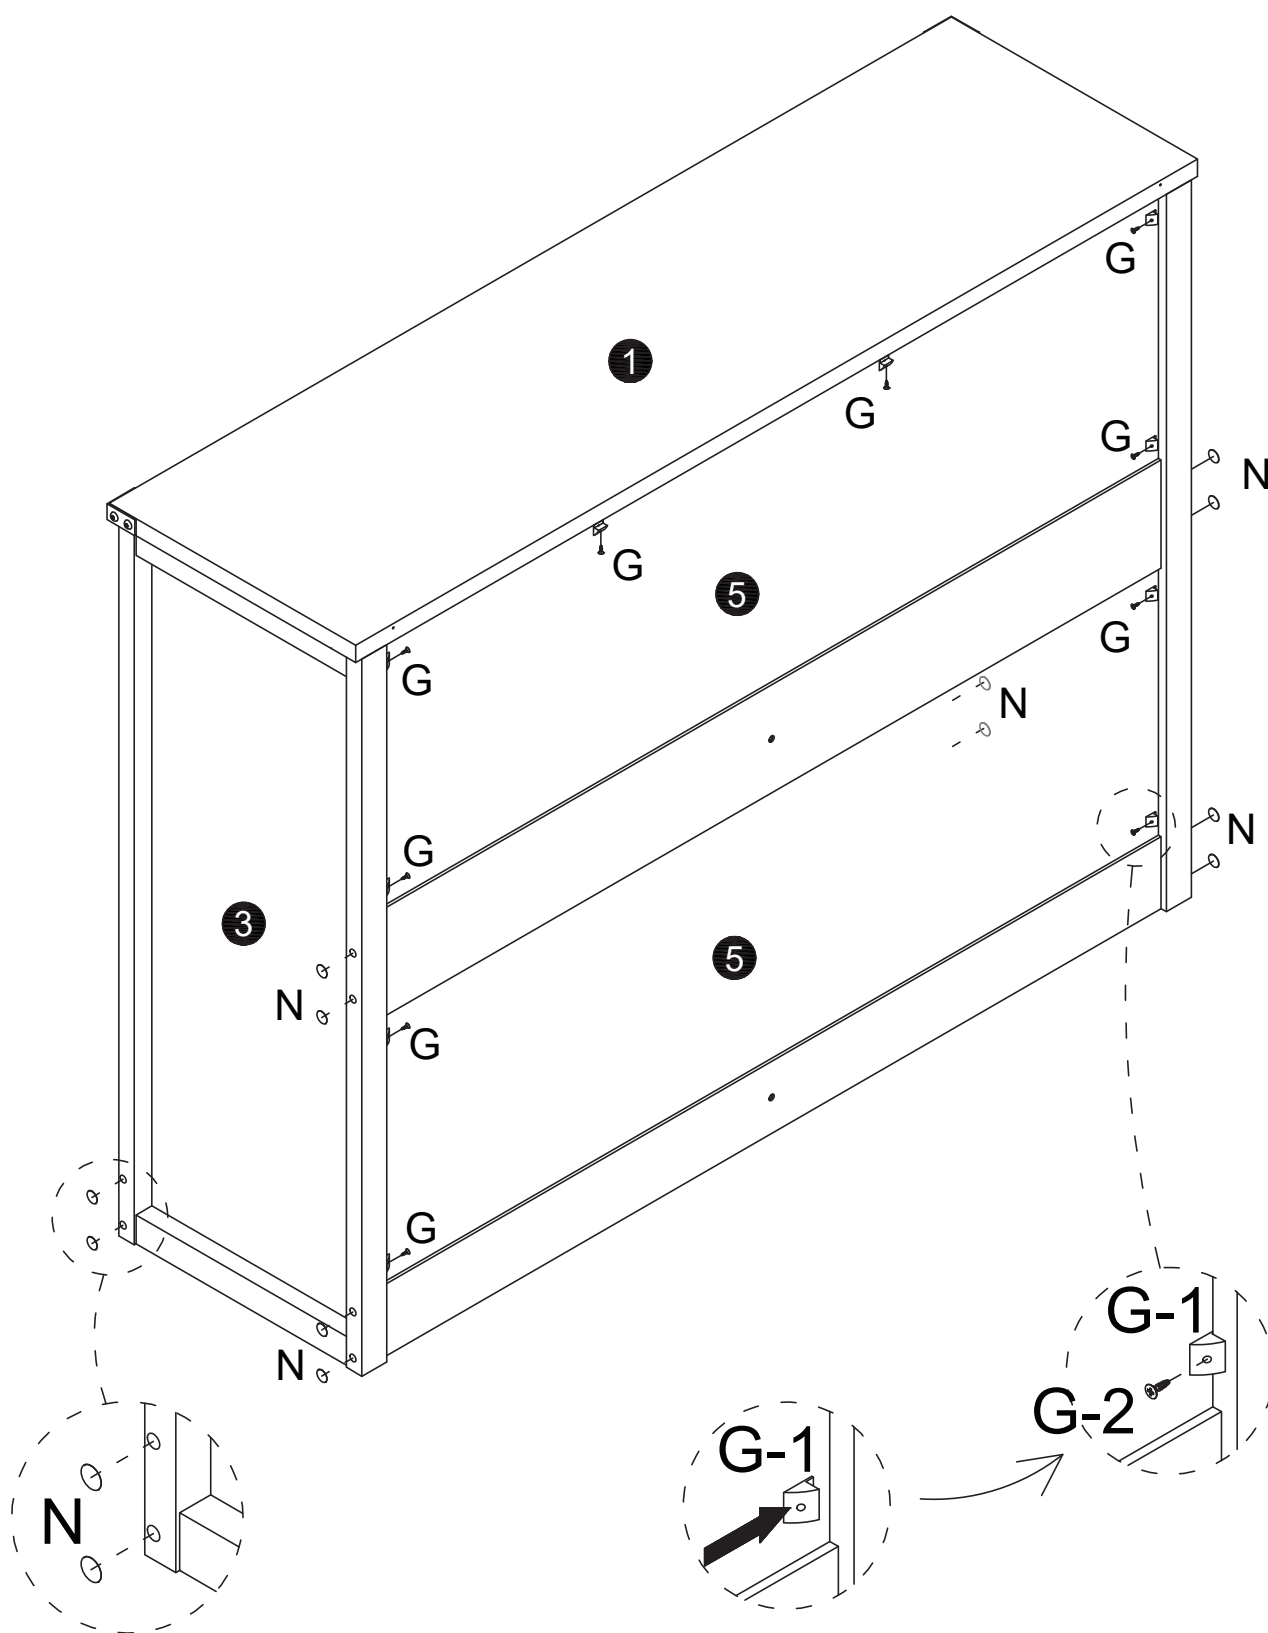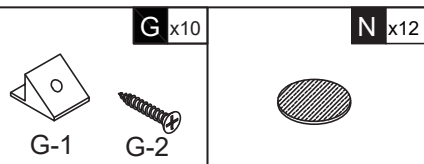


Attention: The drawer is divided into a 9th drawer on the left and a 10th drawer on the right. The diagram shows three 9th drawers installed in the cabinet.

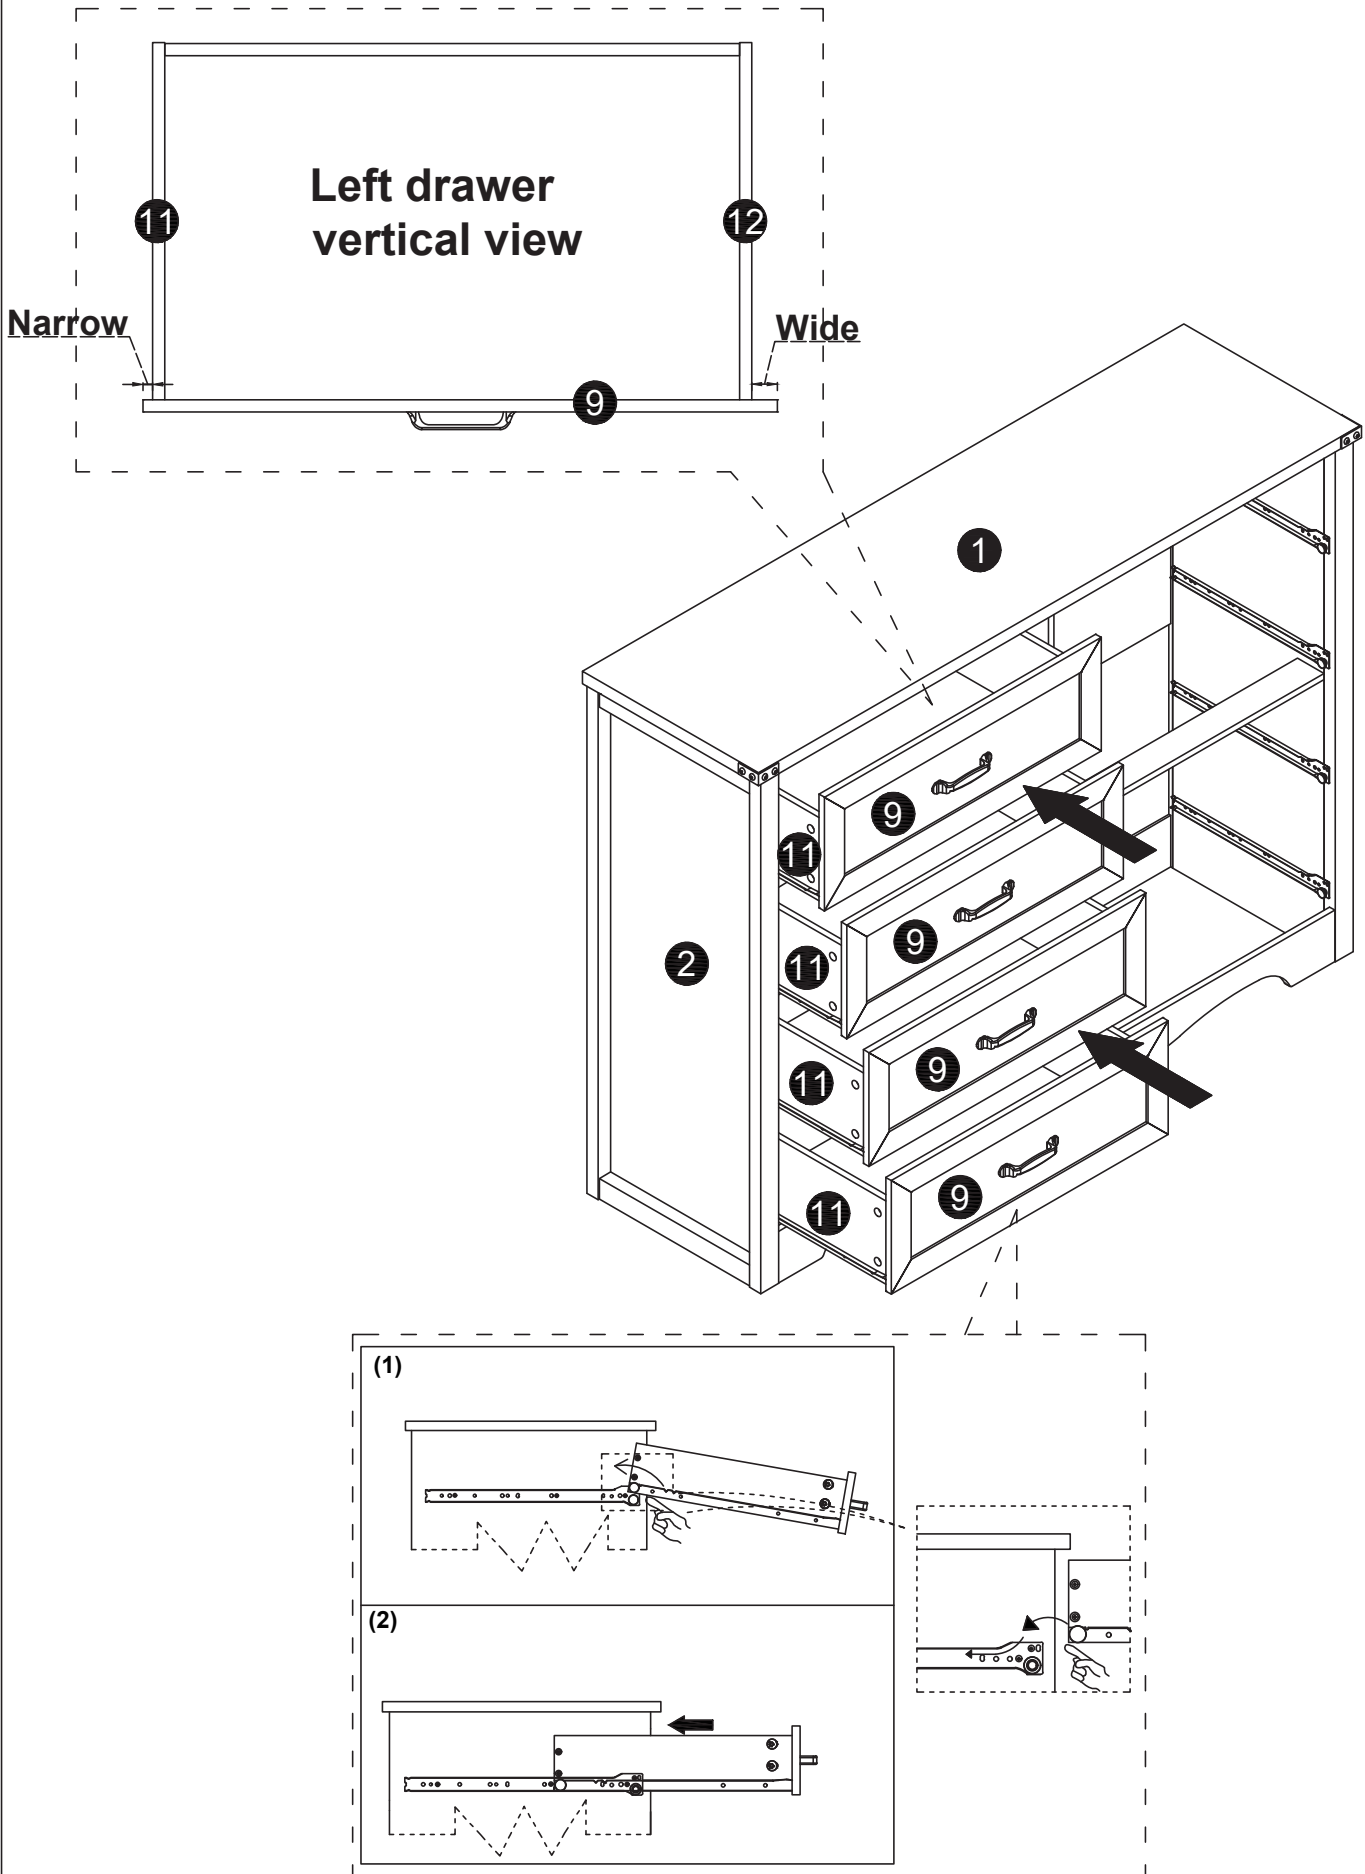

Attention: The drawer is divided into a 9th drawer on the left and a 10th drawer on the right. The diagram shows three 10th drawers installed in the cabinet.

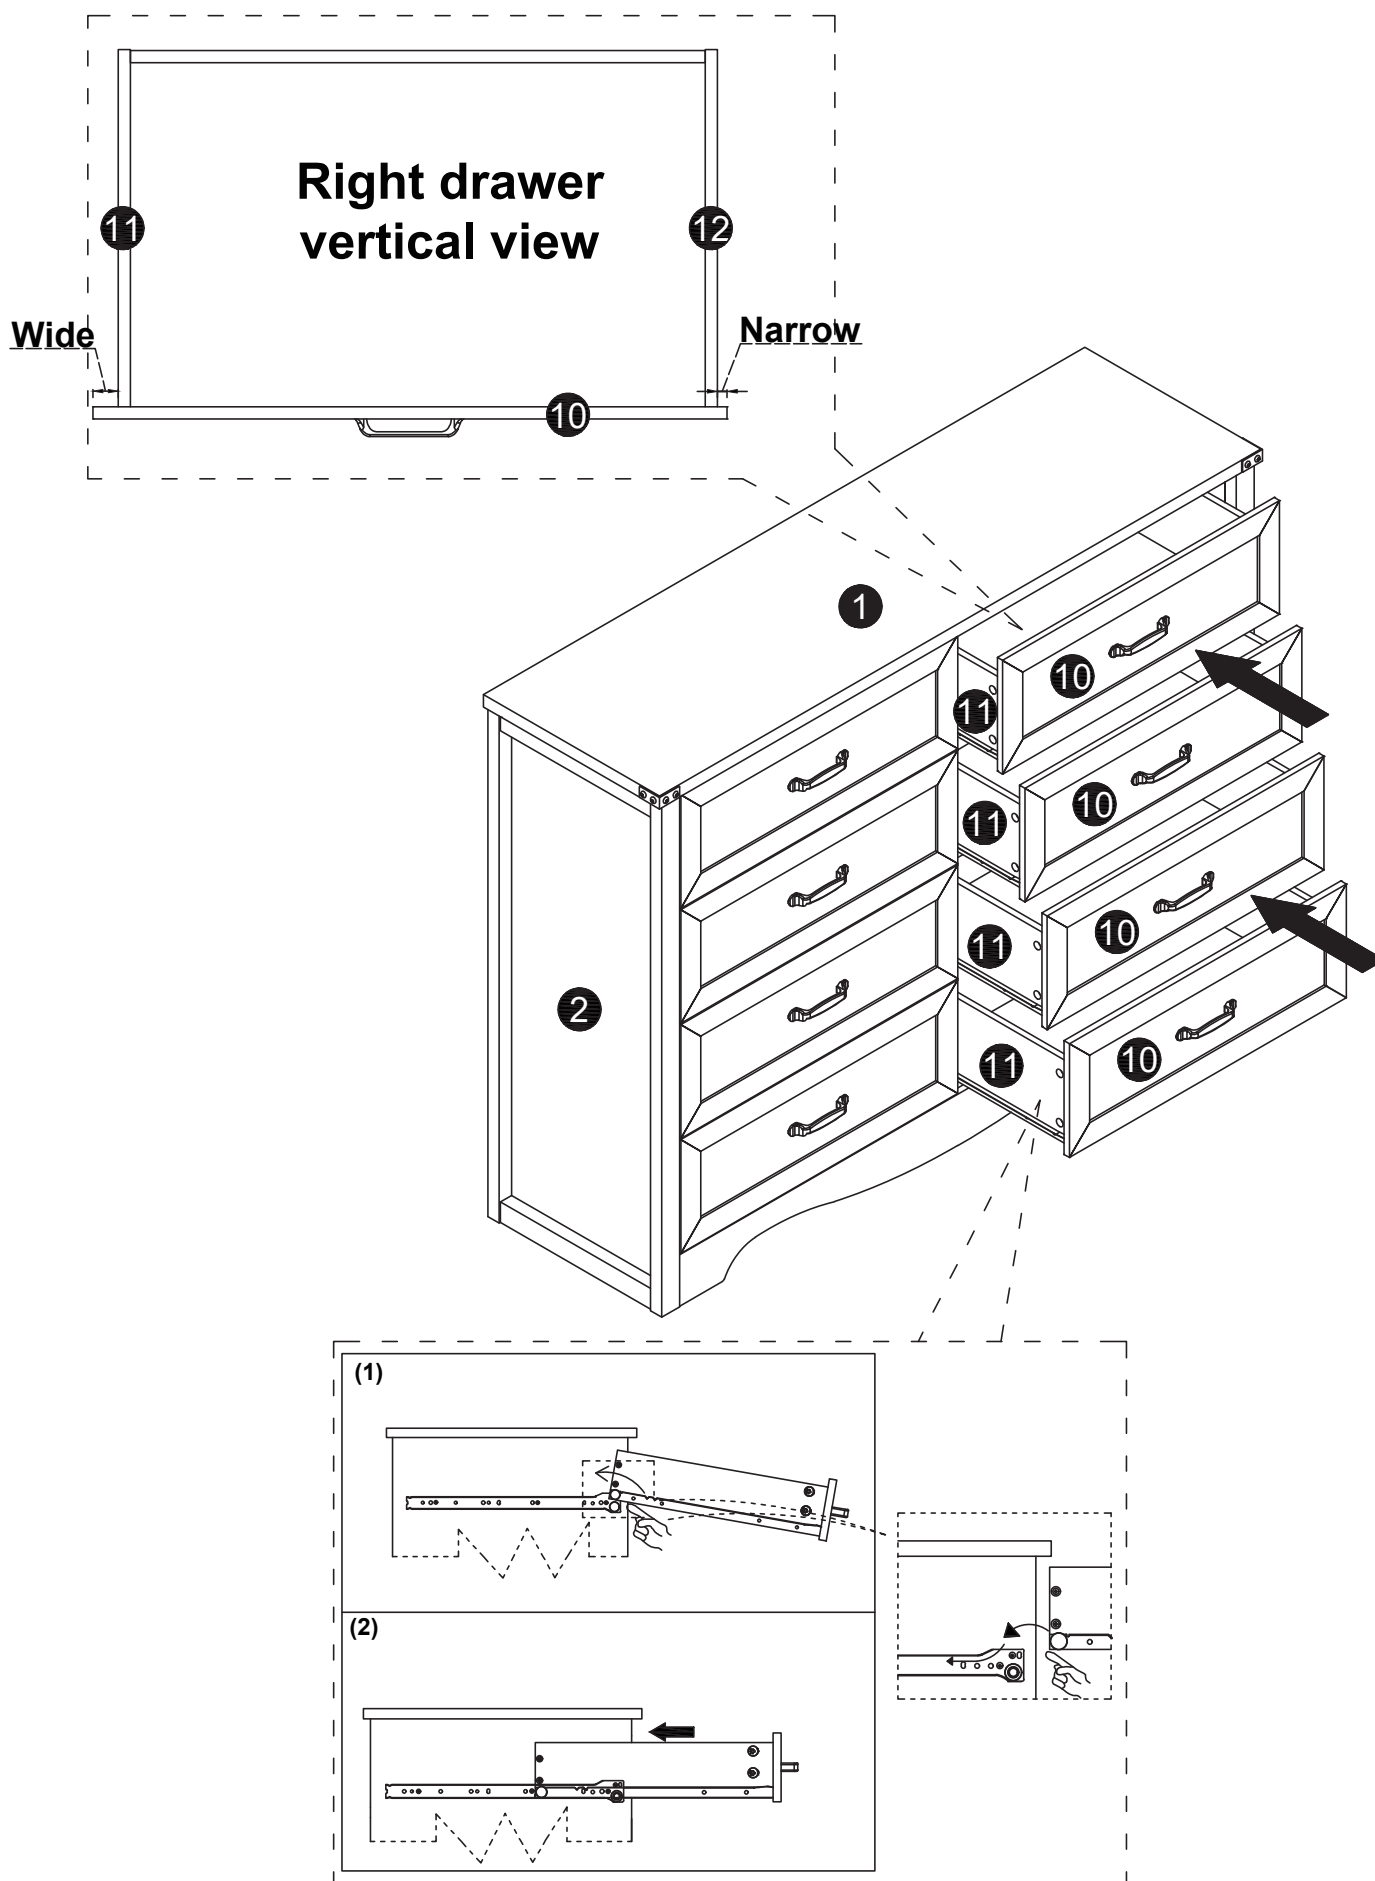

D x2




J x2



K x2



L x2



K



(1)x2

First fix the anti-rewind screw in the reserved hole of the product.



(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL


+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

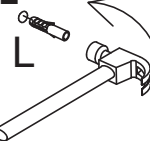

(4)x2

Then, put the expansion bolt into the hole

WALL

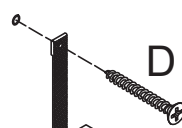

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

WALL

