


HOW TO INSTALL



- Cut PEX pipe squarely, leaving a clean, even edge. Remove burrs.

1

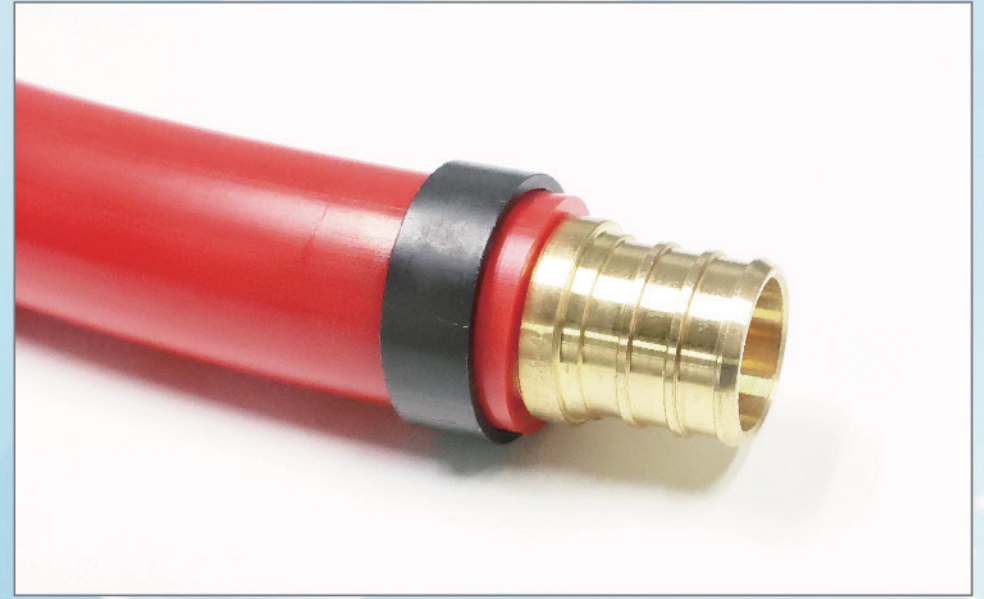

- Slip the PEX copper ring over the pex pipe, then slip pipe onto insert fitting.

2



- Use crimping tool cinching the PEX copper ring. Squeeze the handle, until the tool handle fully closed.

3



- Pressure test the tubing and inspect before use. Repeat the total procedure if there are any leaks. There will be a slight gap after crimping. Some springback is normal.

4