



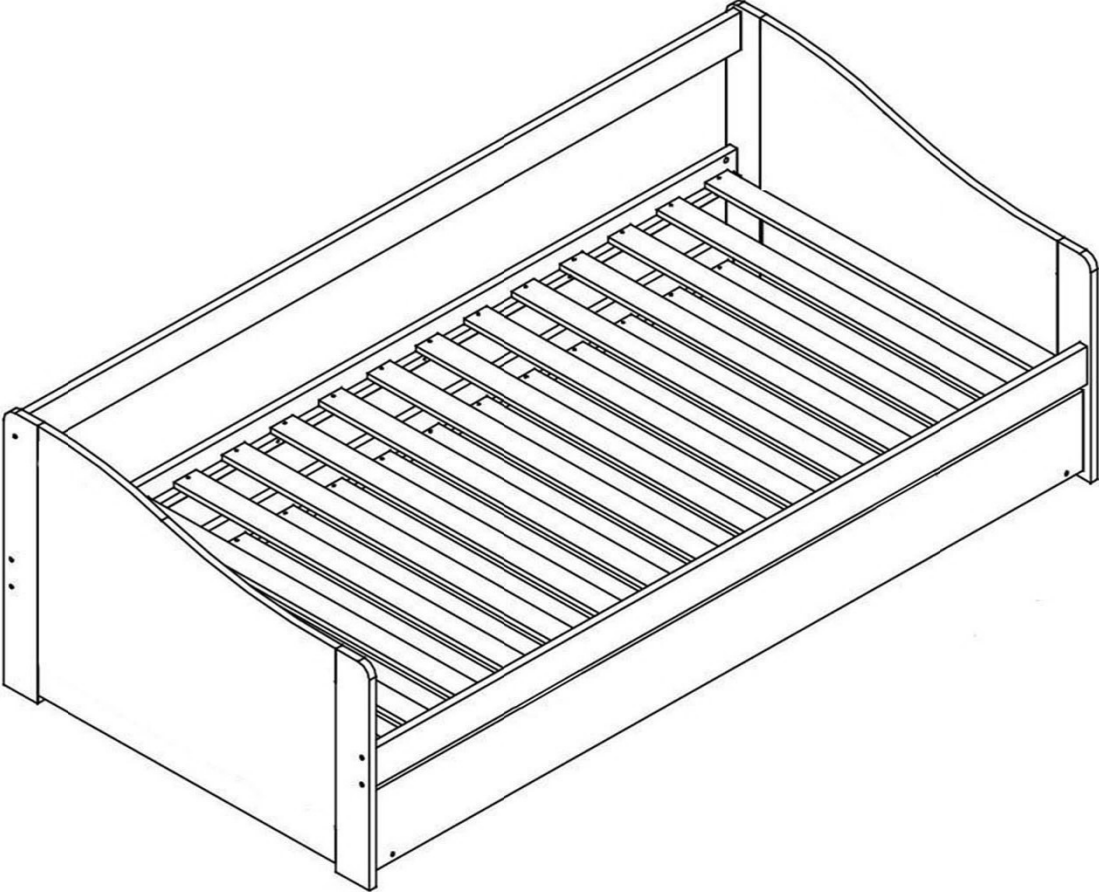

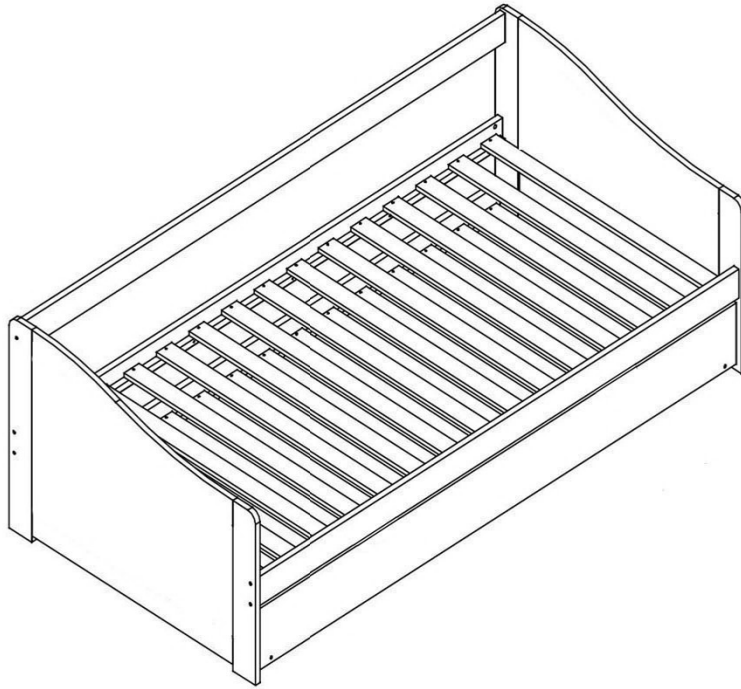


# Dreamer Daybed With Underbed Trundle









# ASSEMBLY INSTRUCTION




## LIST OF PARTS


<b>A</b>	 15mm	 M6x70mm	<b>14</b>
<b>B</b>			<b>14</b>
<b>C</b>	 Ø8x30mm		<b>16</b>
<b>D</b>			<b>01</b>

<b>E</b>		<b>4</b>	
<b>F</b>	 7mm	 Ø4x16mm	<b>8</b>
<b>G</b>	 8mm	 Ø4x30mm	<b>60</b>

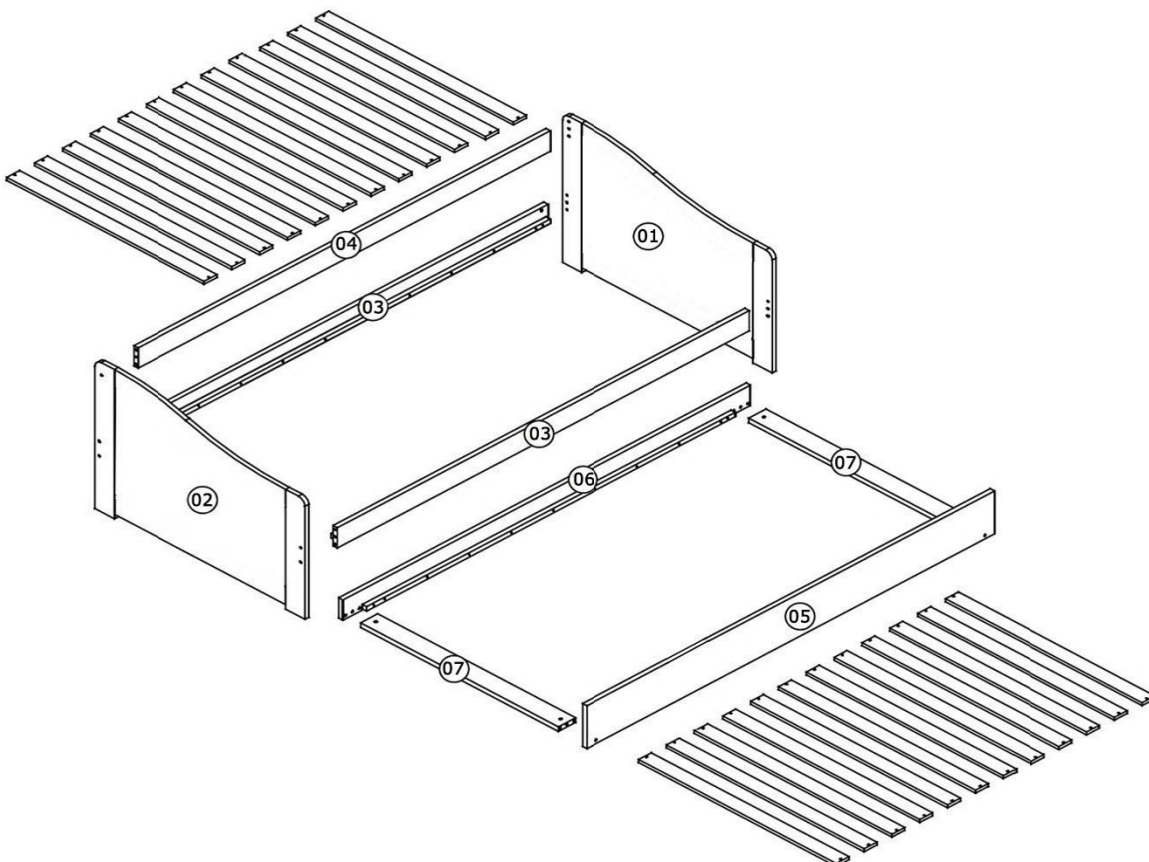




01

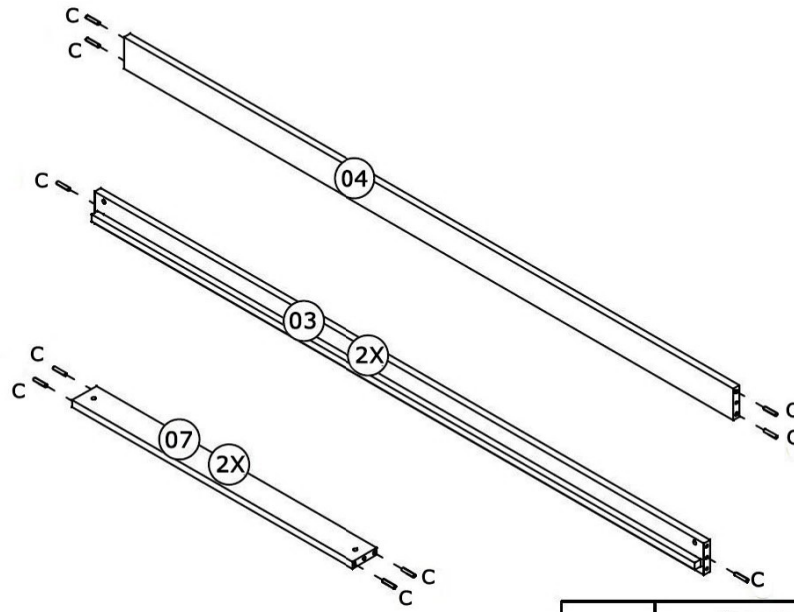


C		16
Ø8x30mm		


02

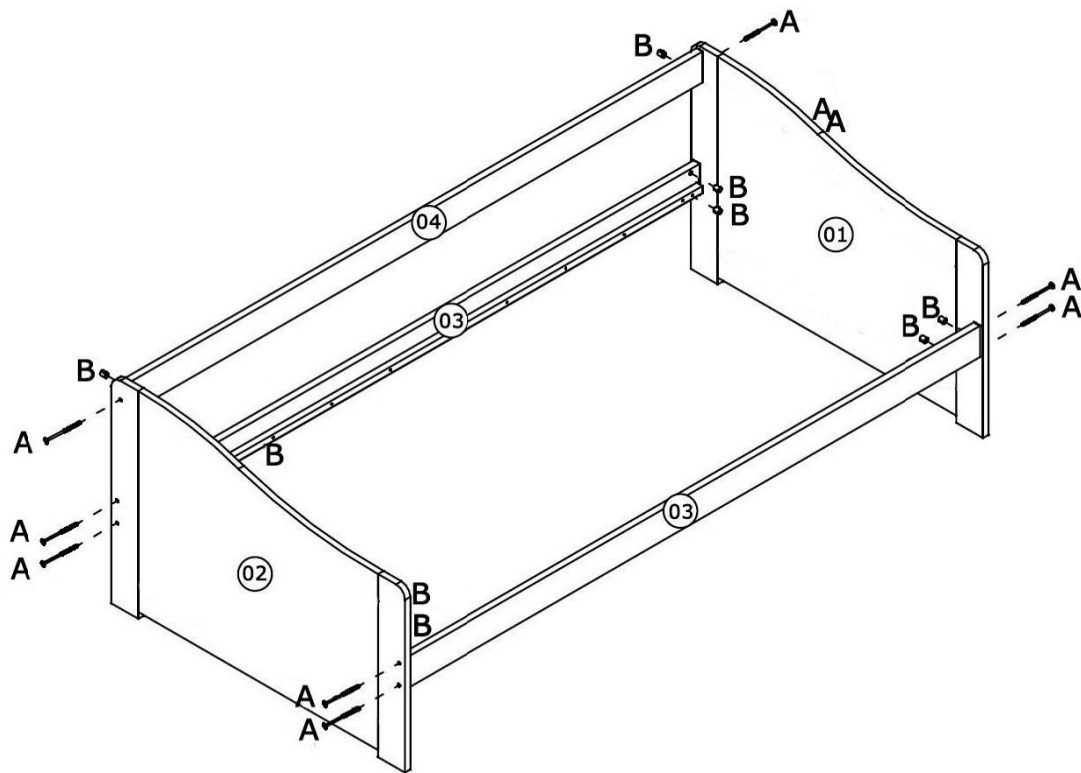


A	 15mm M6x70mm	10
B		10

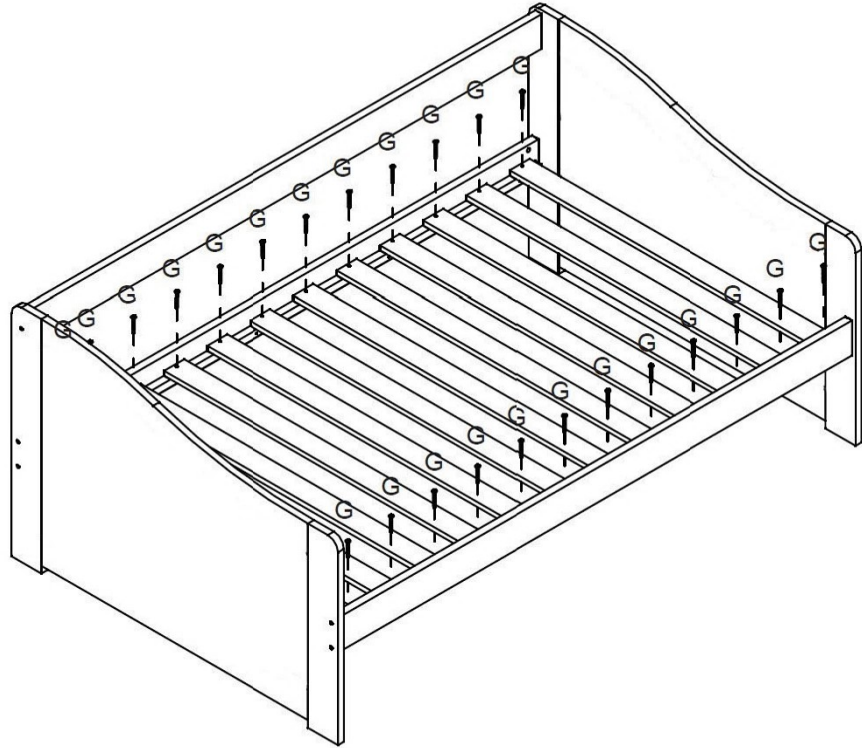

03




<b>G</b>	 8mm Ø4x30mm	<b>30</b>
----------	--	-----------

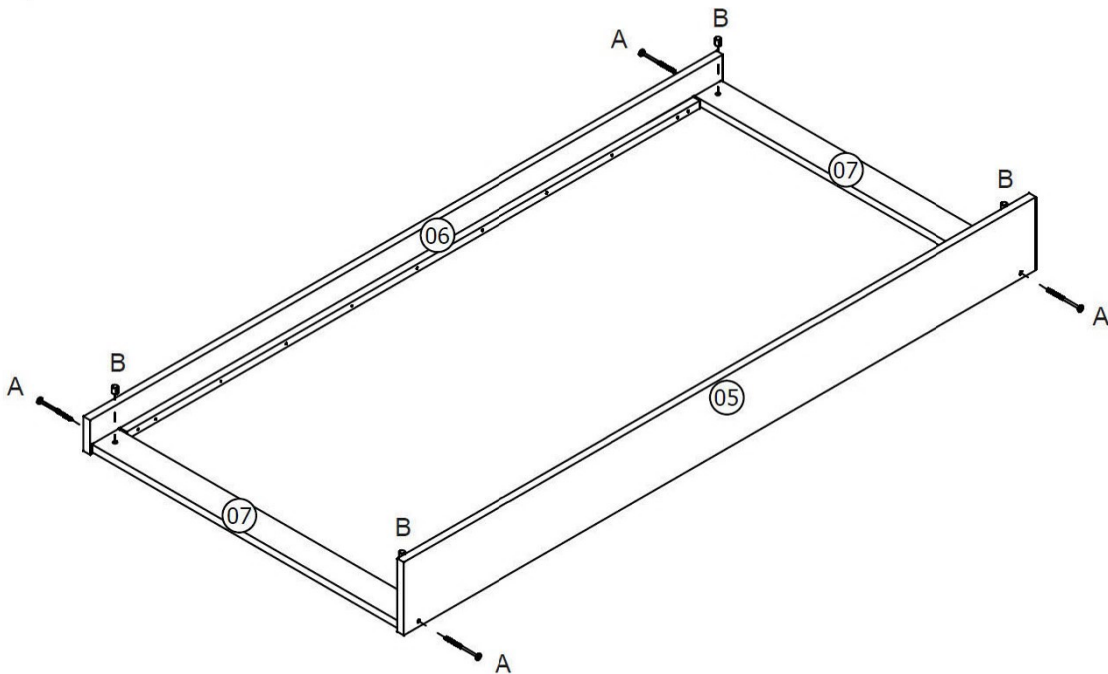




04

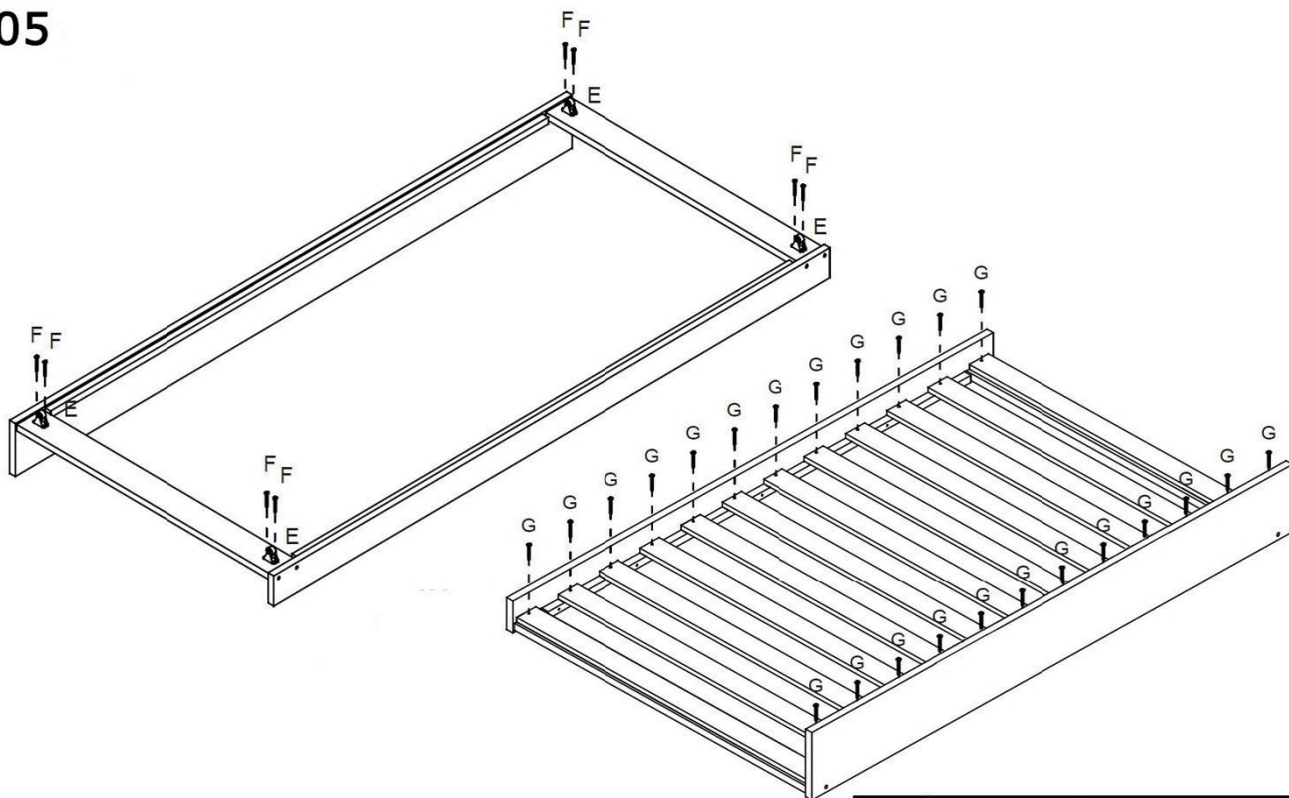

<b>A</b>	 15mm M6x70mm	<b>04</b>
<b>B</b>		<b>04</b>

05



E		04
F	 7mm 	08
G	 8mm 	30

06

