
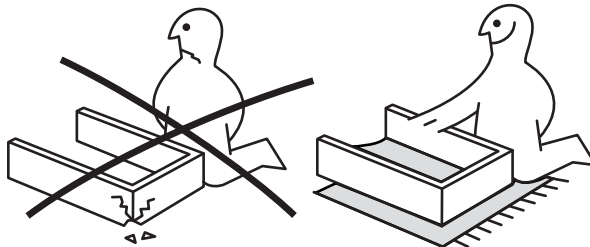
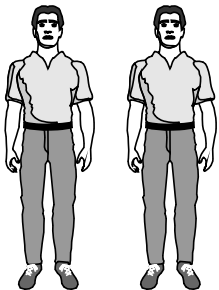



ASSEMBLY GUIDE

SMART 2-DOOR WARDROBE

SKU 5921 - White
SKU 5922 - Mahogany
SKU 5923 - Mocha
SKU 5924 - Honey Pine
SKU 5926 - Java

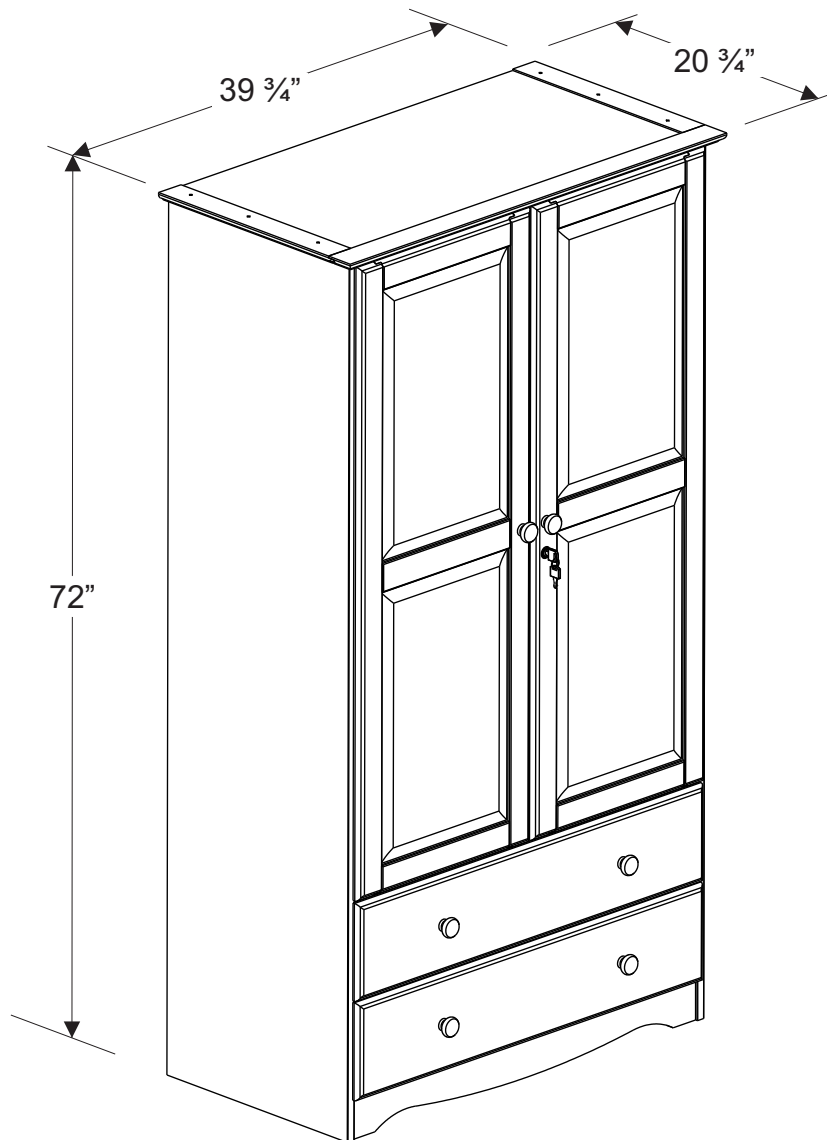

REV - 04/2023

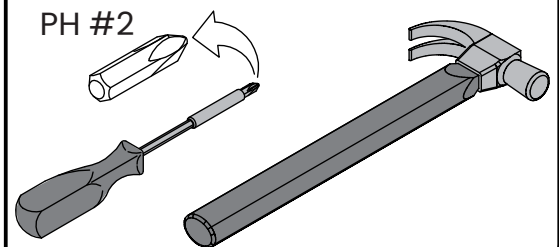


page 2/18











PRE-ASSEMBLY PREPARATION



- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceImportsInc.com
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.



PARTS DIAGRAM

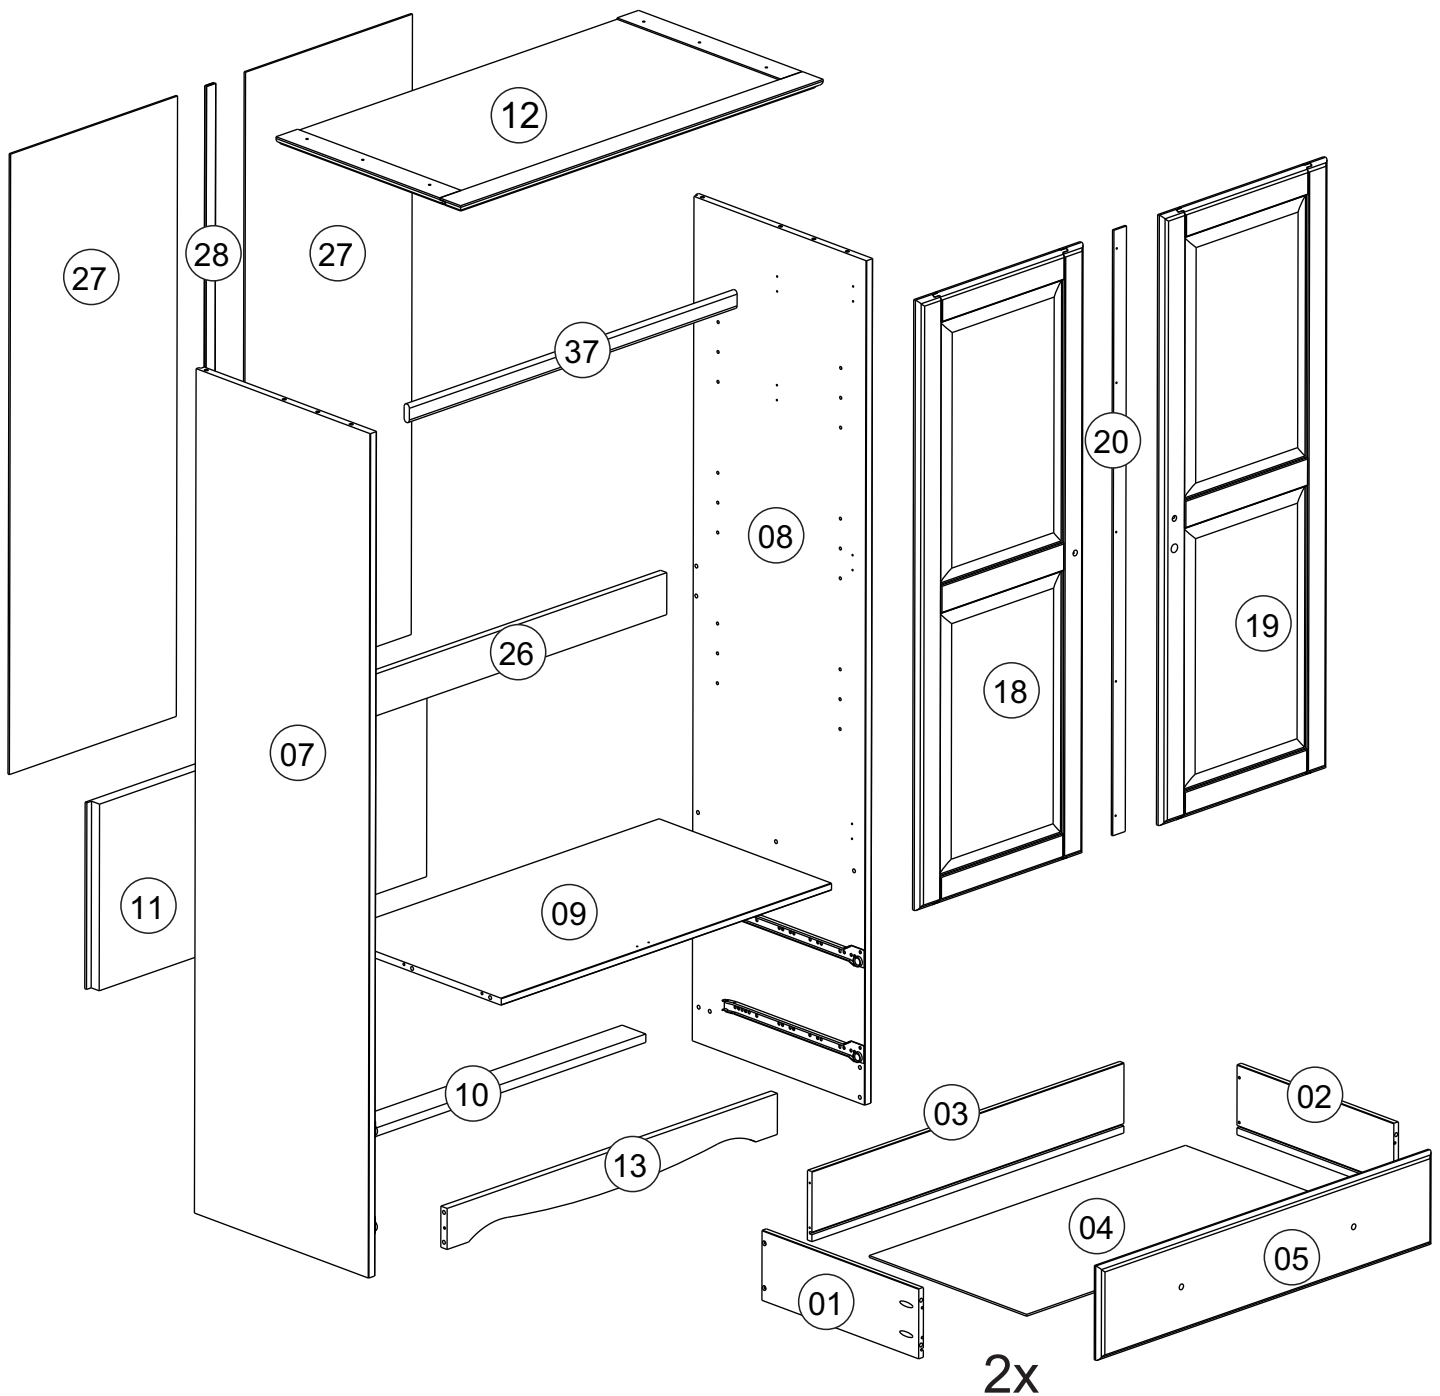

SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	32+1
A8	 3,0x20	02+1
A16	 4,0x40	06+1
A41	 4,0x30	06+1
A42	 4,0x14	12+1
A44	 3,5x14	41+2
C2	 8,0x25	32+1
D3		02
D10		02
E17	 450mm - 17 3/4"	02
E18	 450mm - 17 3/4"	02
F1		01
F2		01
F3		02
F10		06

G1	 10x10	50
H1		06


FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01

WARNING:
 **CHOKING HAZARD**
 Small Parts.
 Adult Supervision Required.
 Not for children under 3 years old.


WARNING:



**FURNITURE TIPOVER CAN RESULT
 IN SERIOUS INJURY OR DEATH**
 This wardrobe includes tipover-
 prevention hardware that
MUST BE ATTACHED TO THE WALL
 per the assembly instructions.

01)

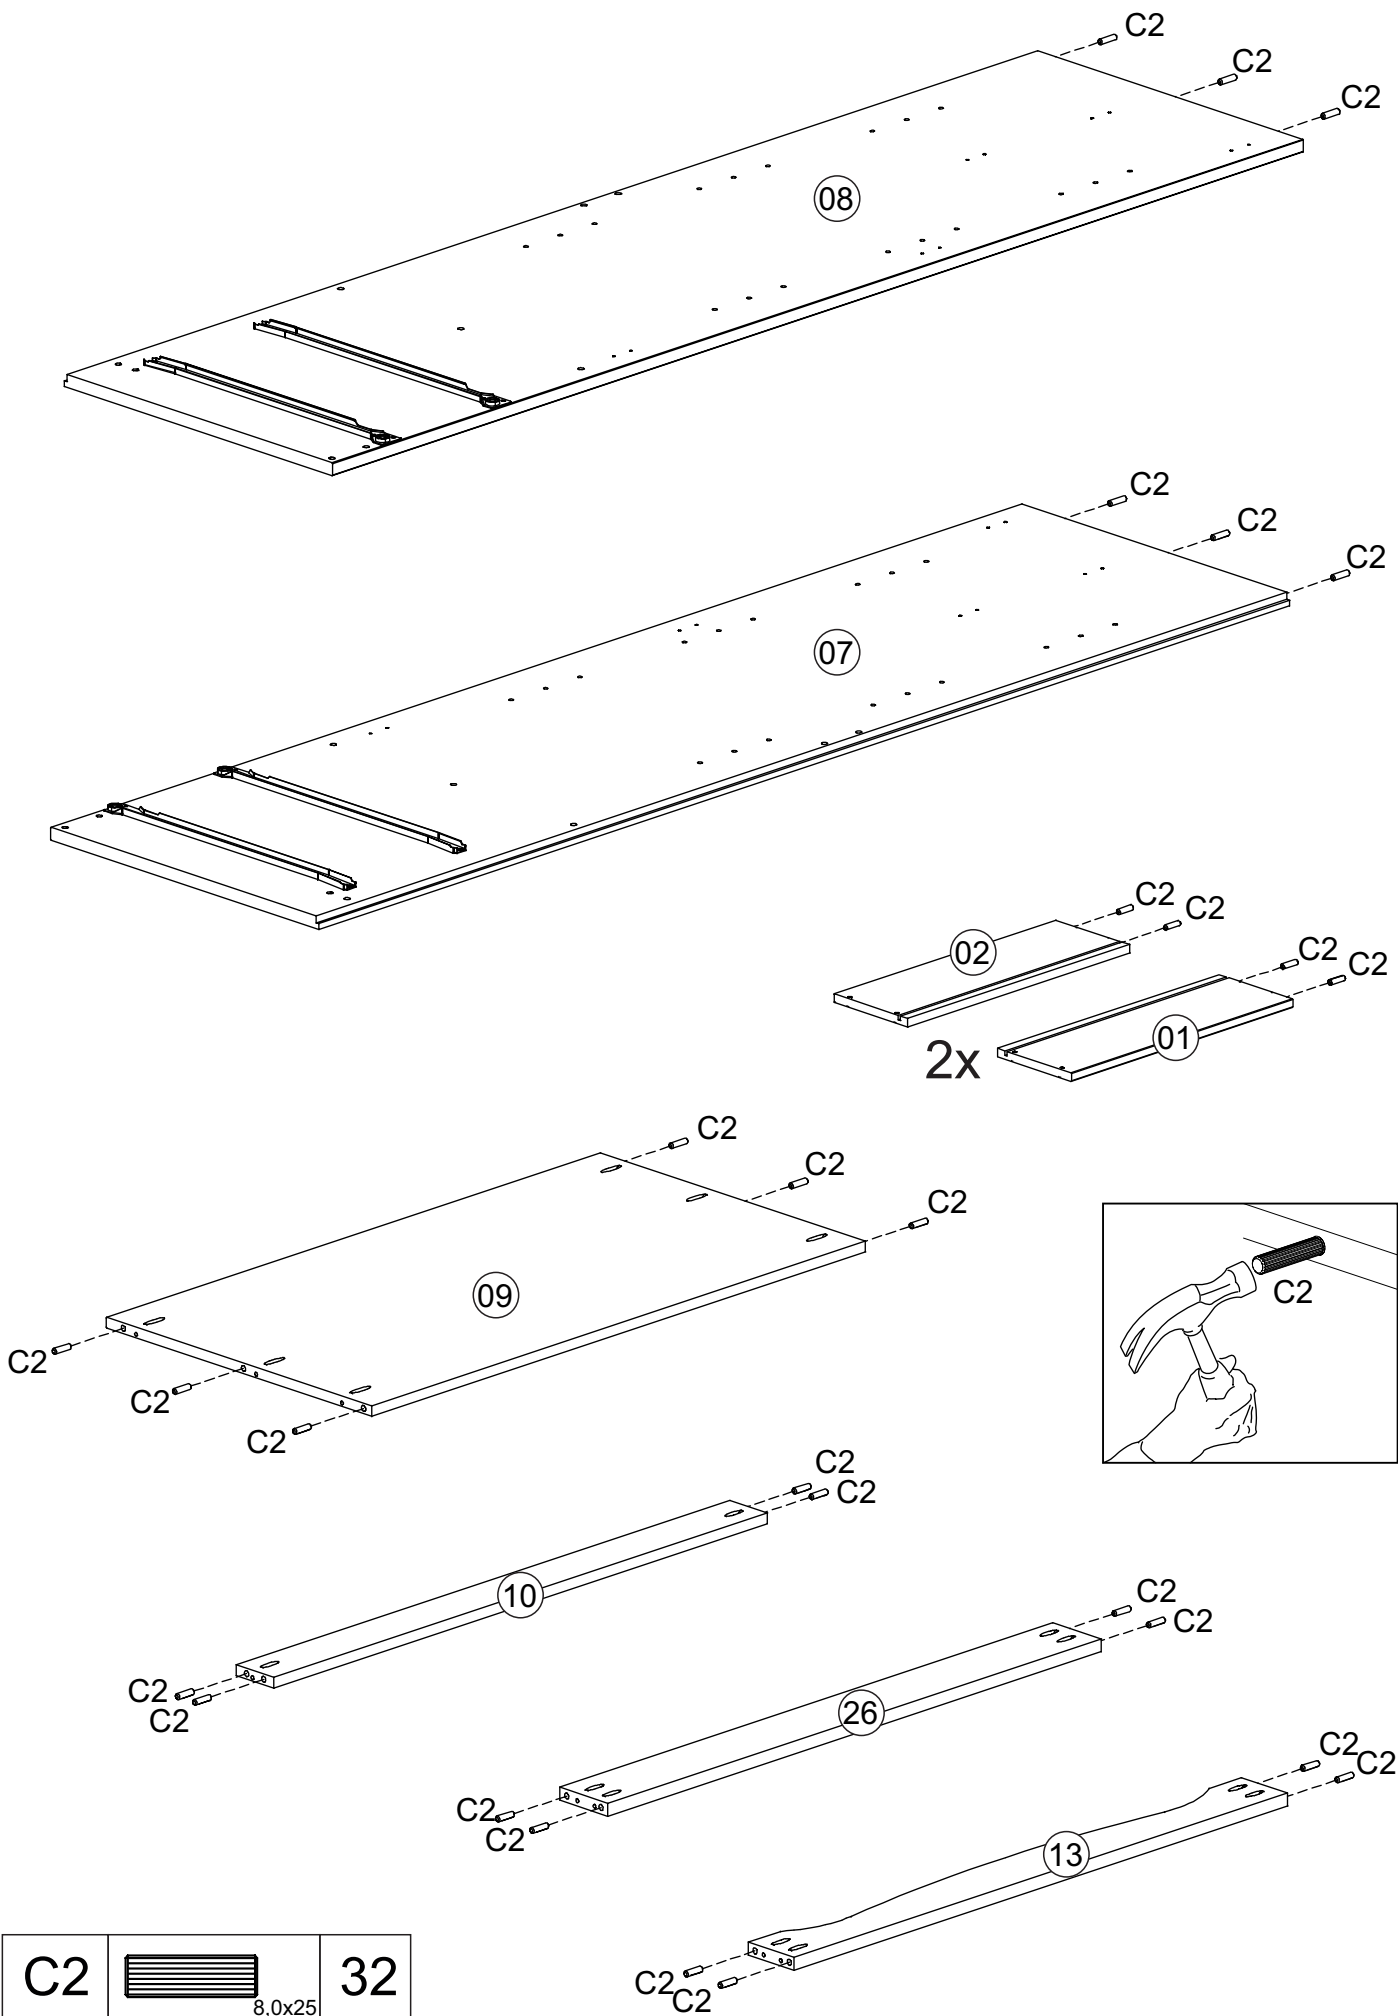


02)

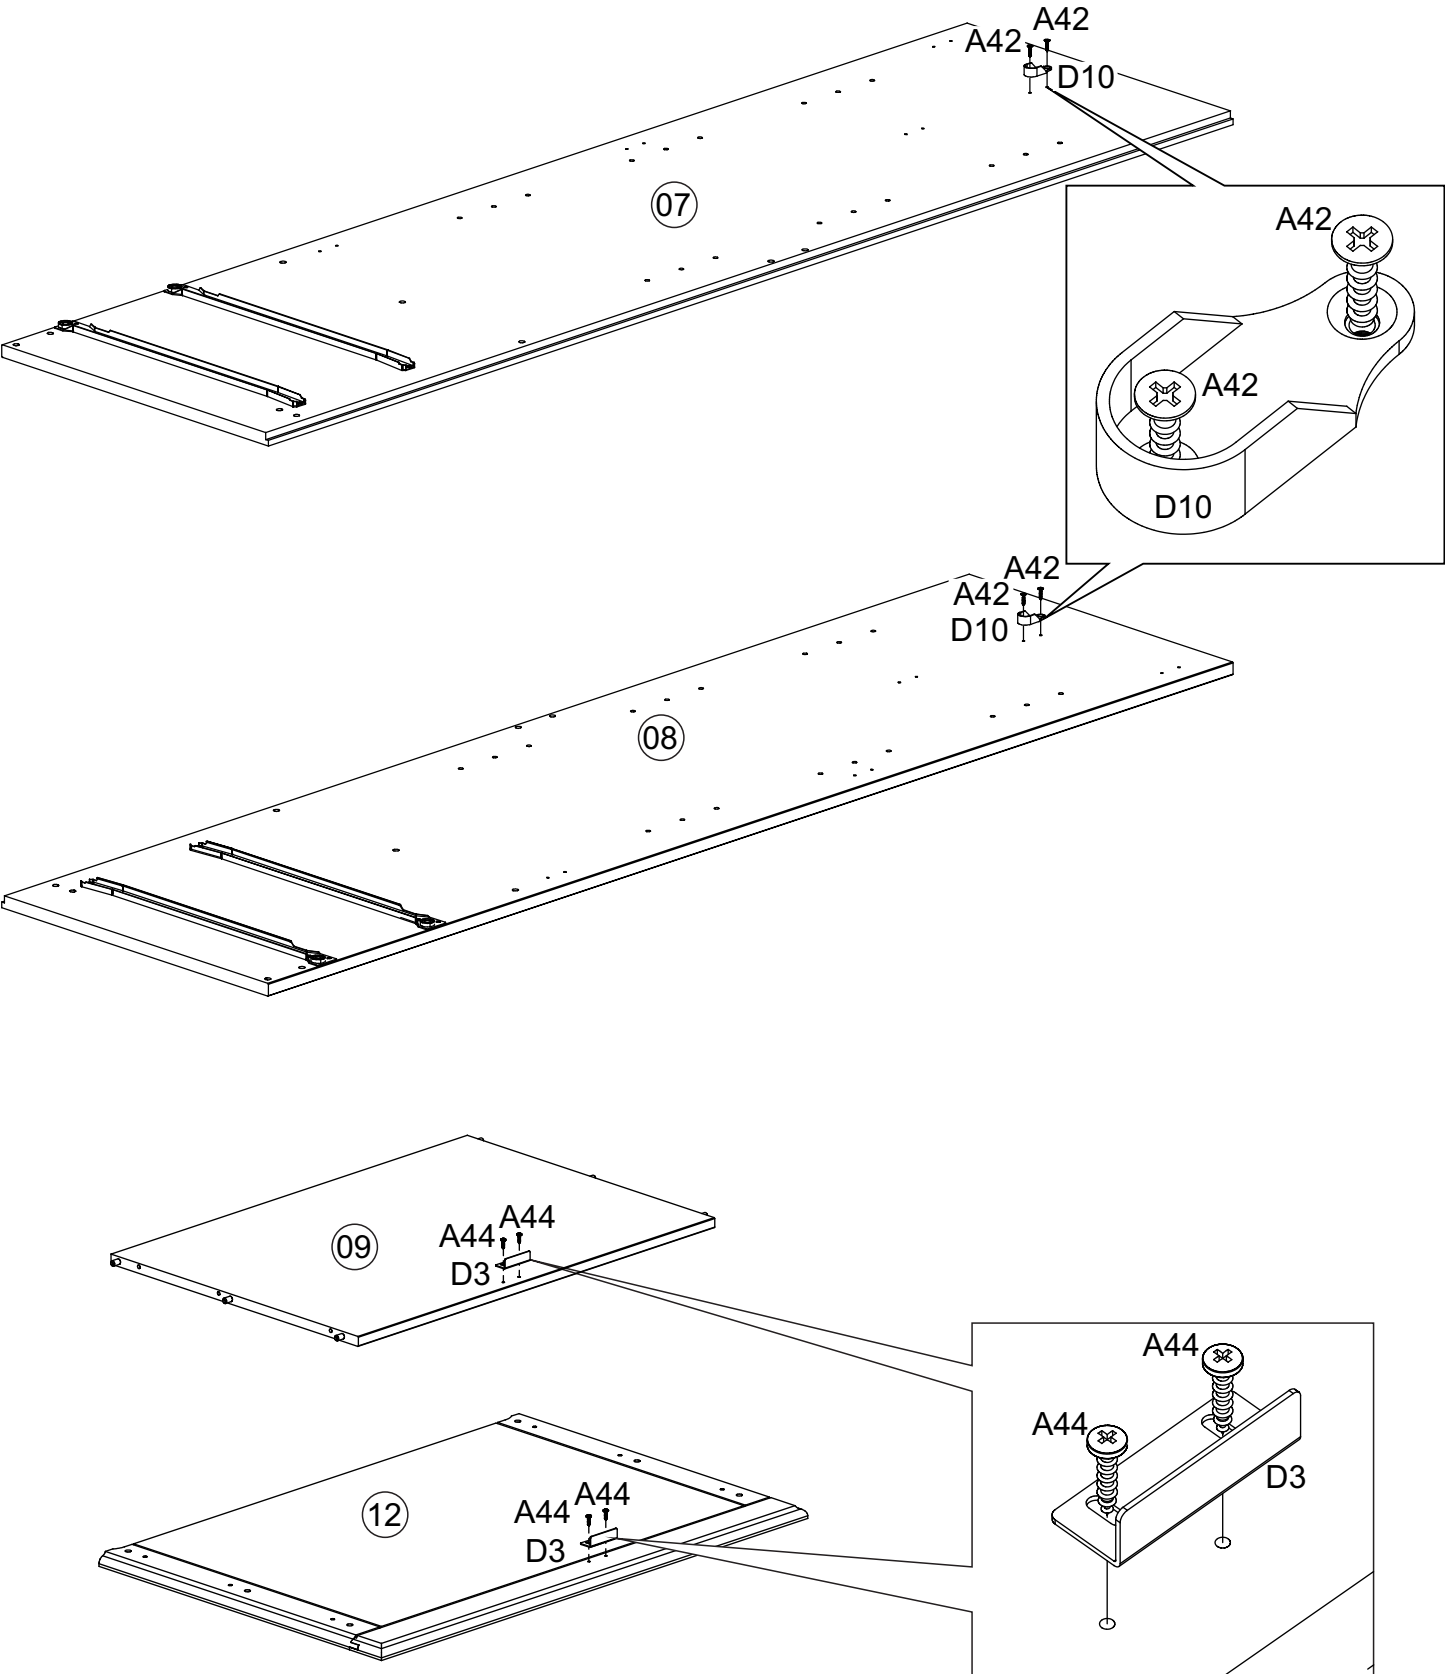


A42		04	D3		02
	4,0x14				
A44		04	D10		02
	3,5x14				


03)

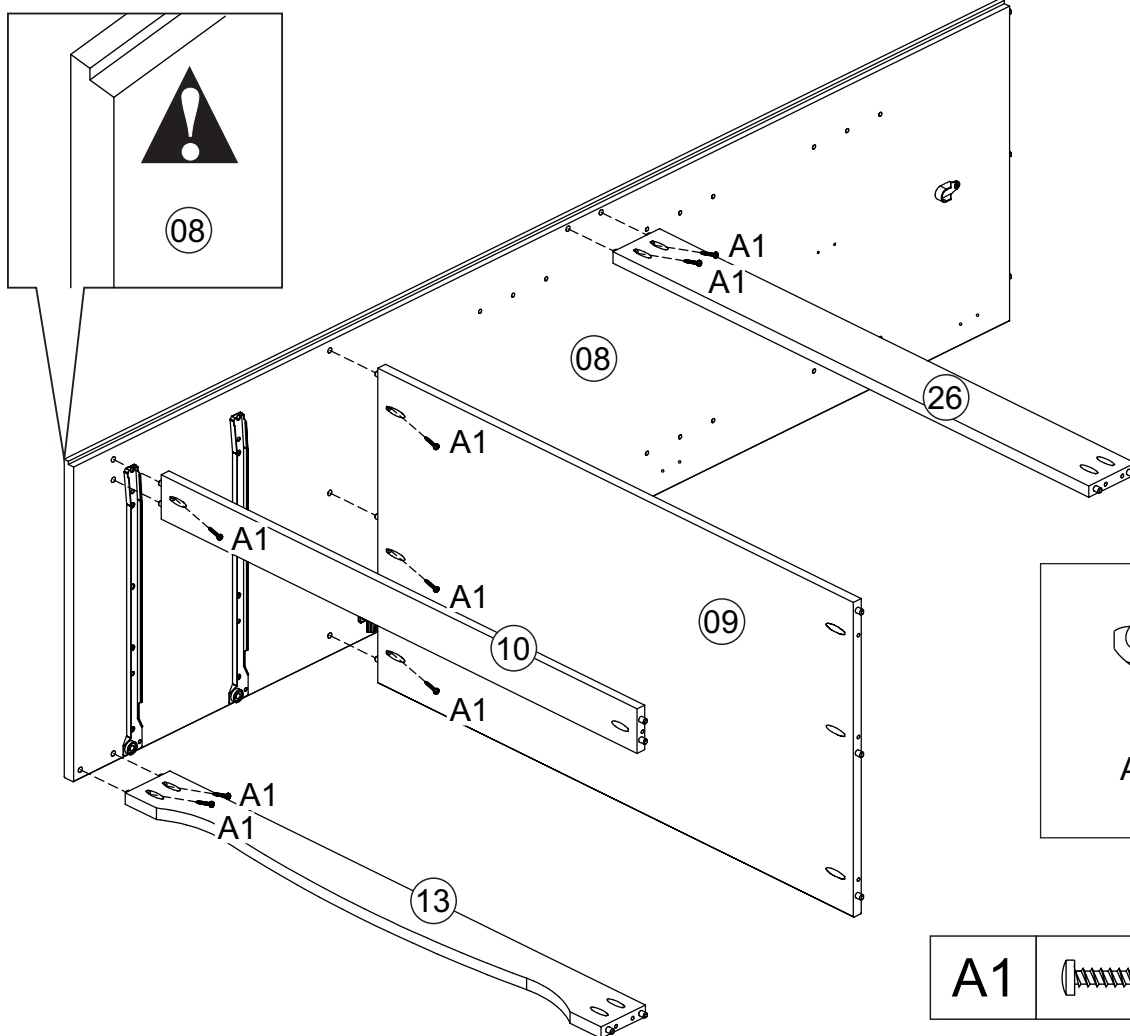

04)



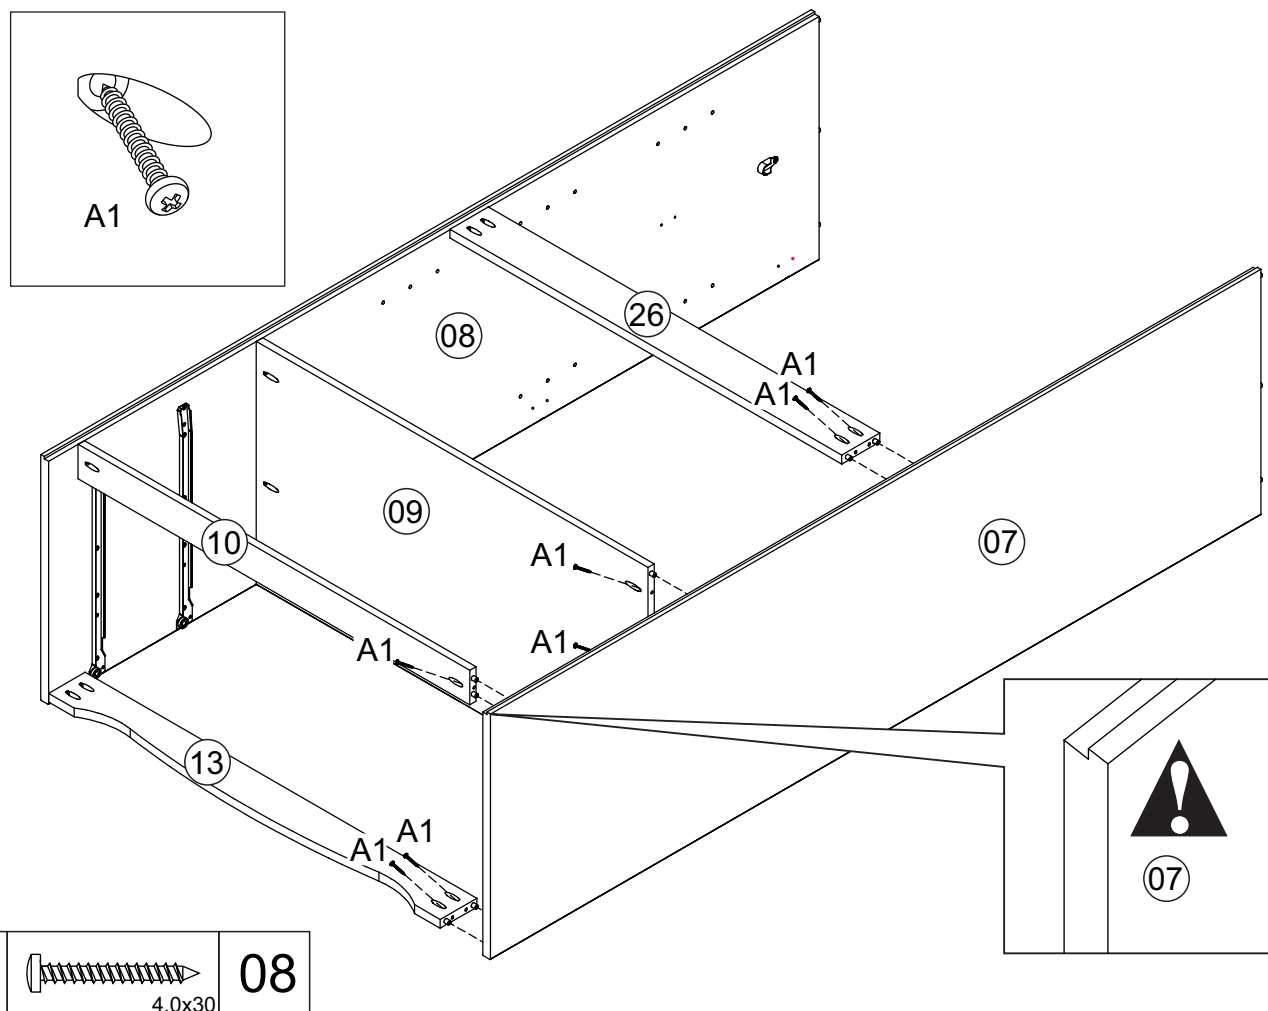



05)

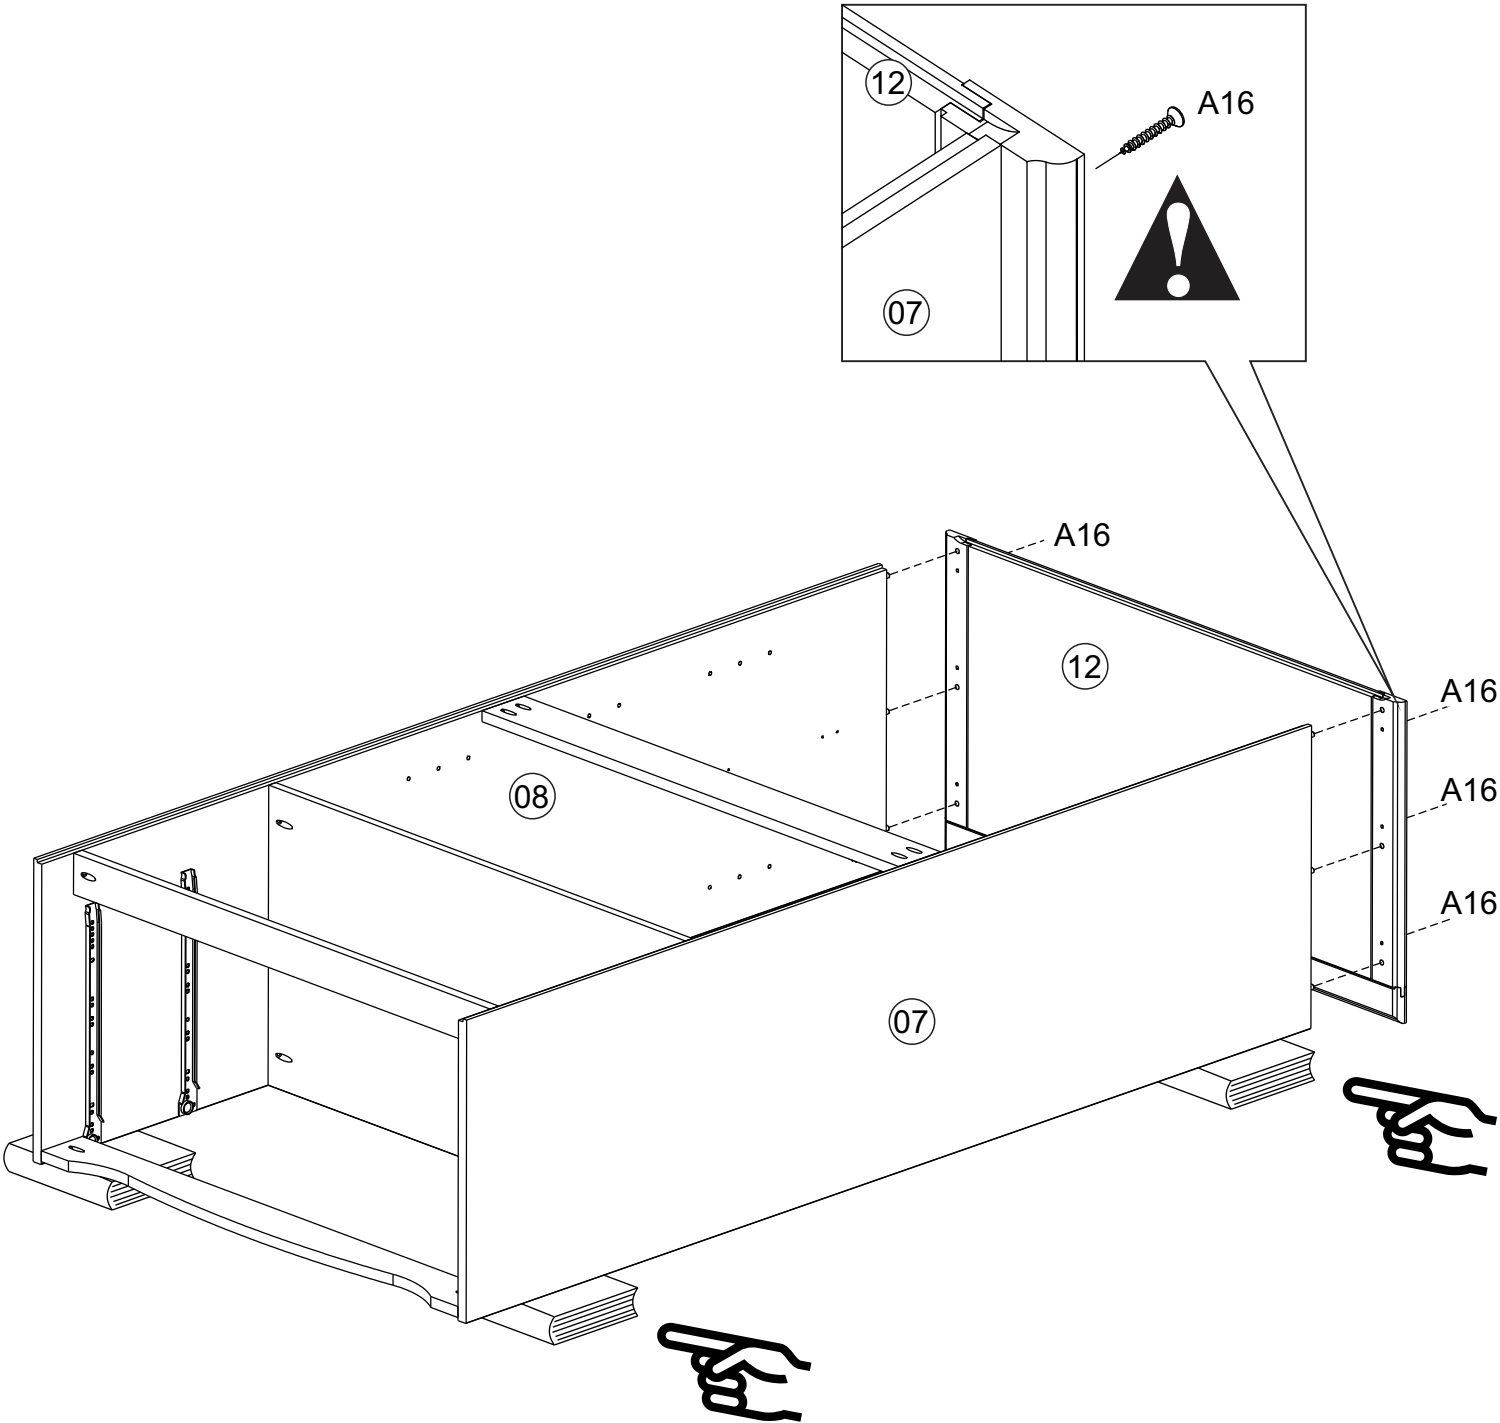


A16		06
4,0x40		

06)

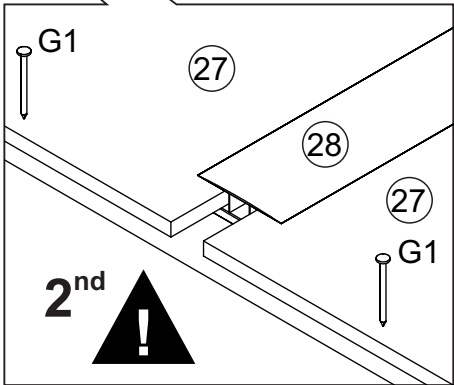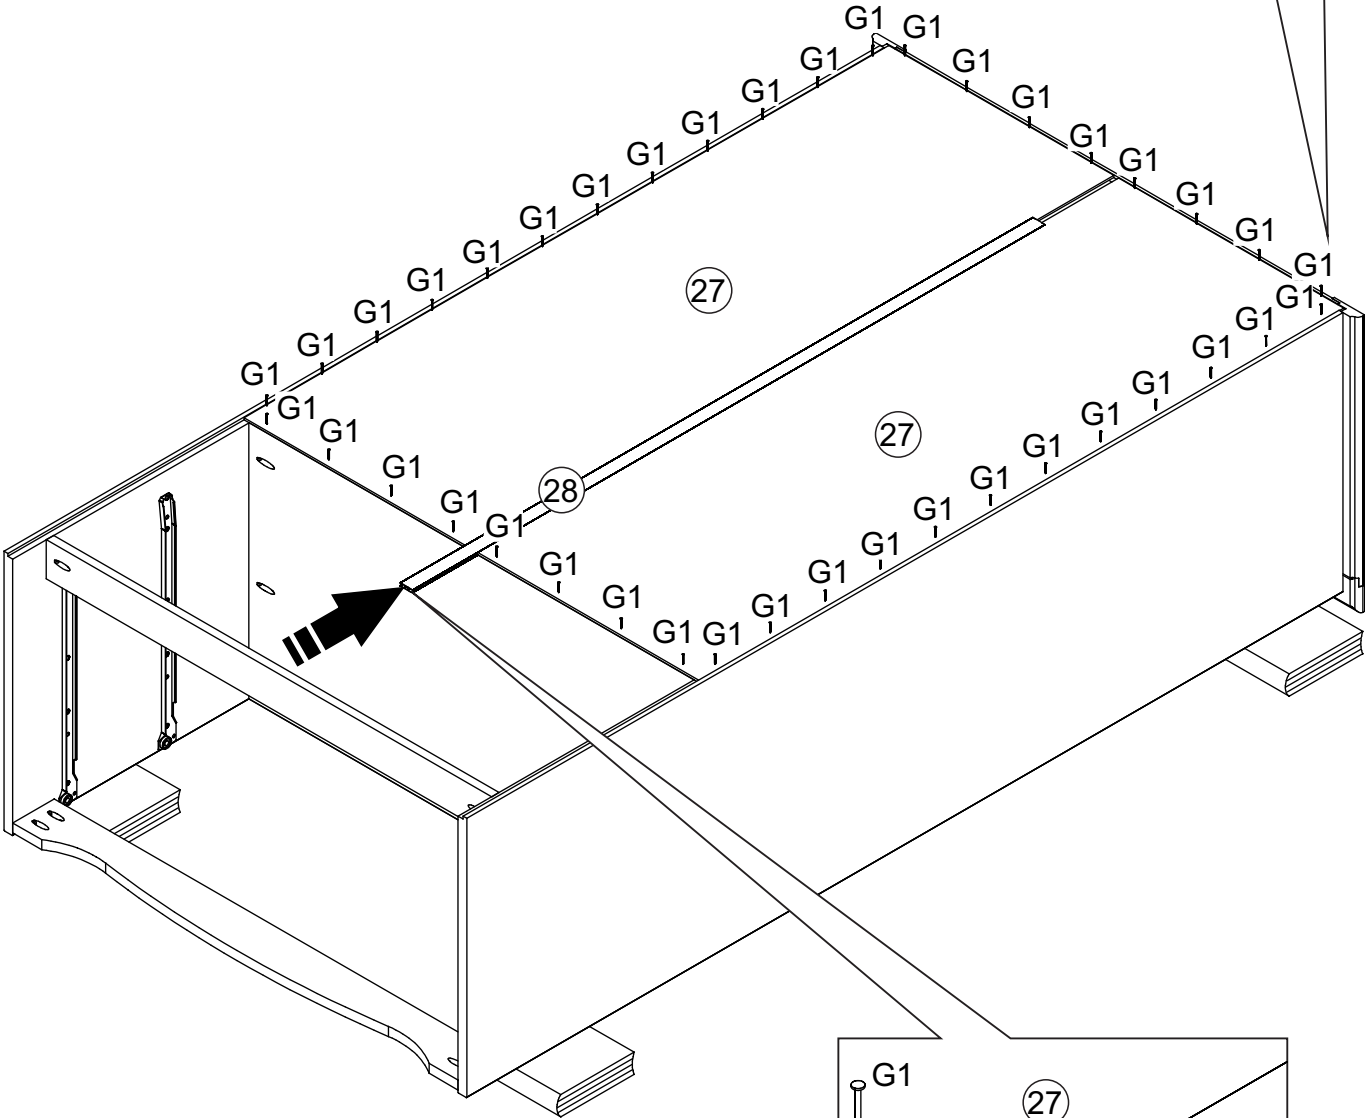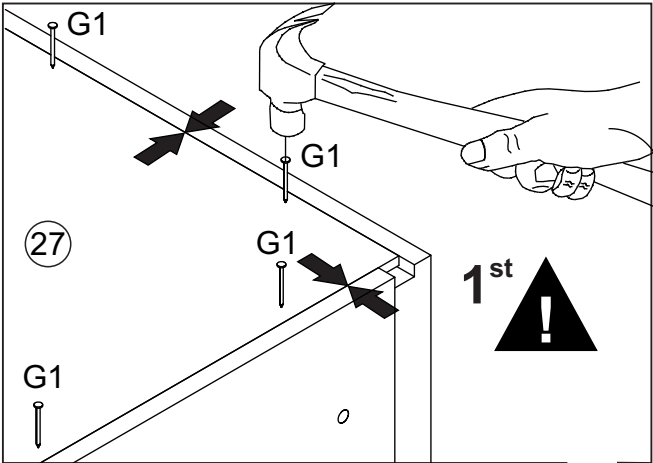


G1		40
10x10		

07)

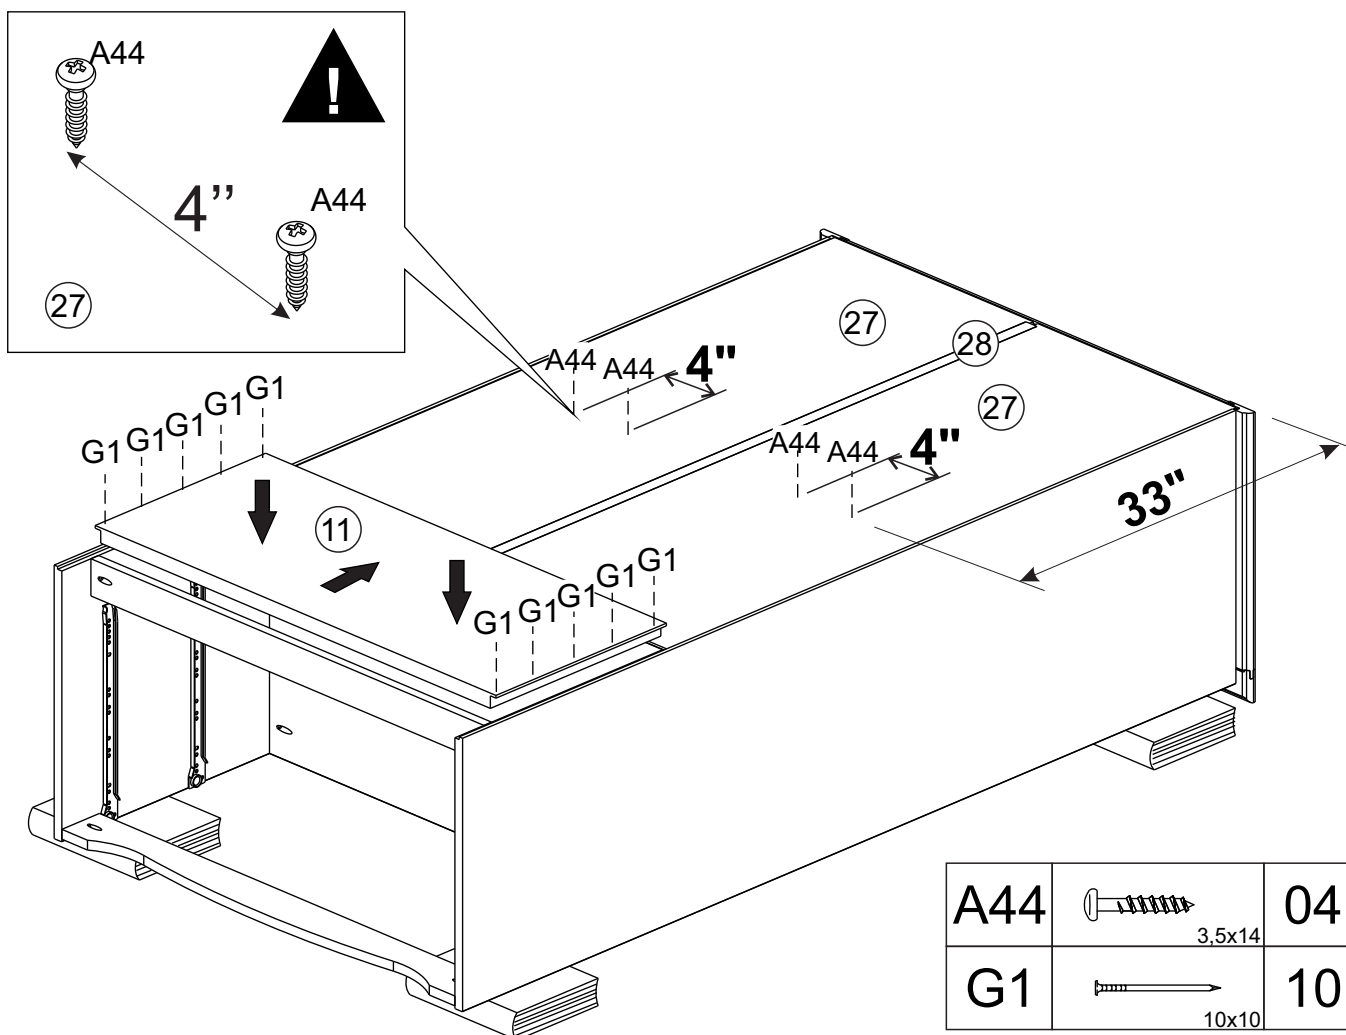


08)


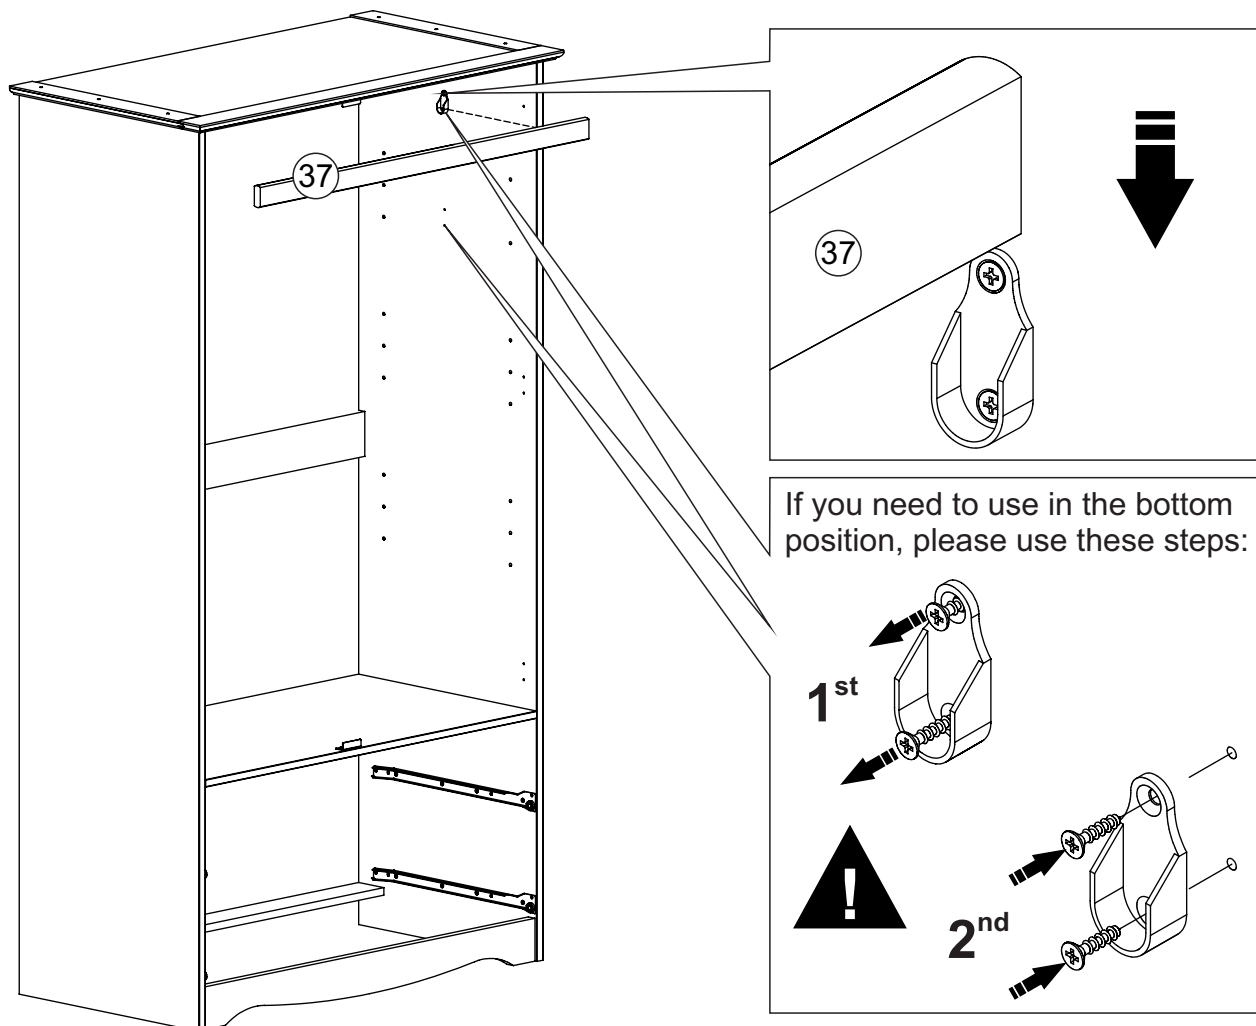




09)

Attach hinge (F10) to hinge plate if it comes separated.
Push hinge against plate until it clicks.

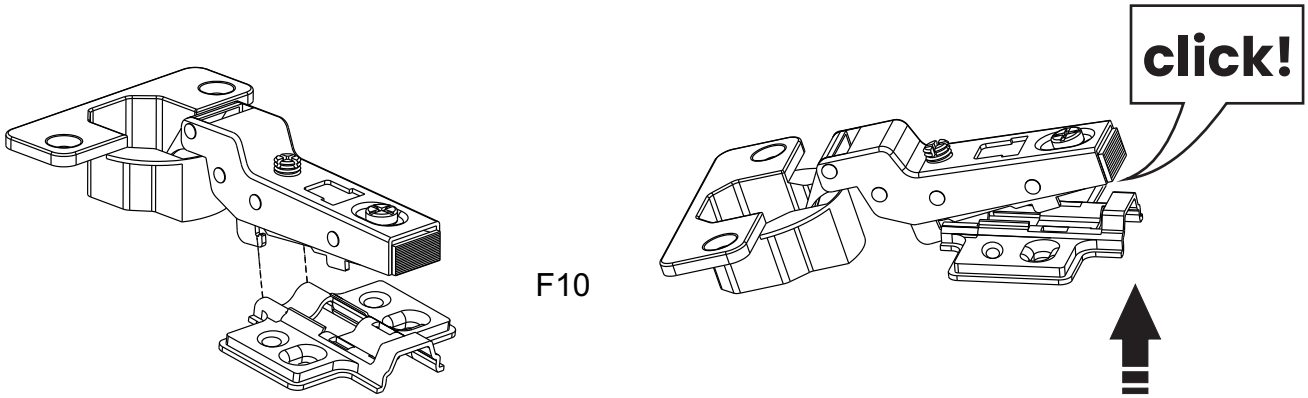


10)

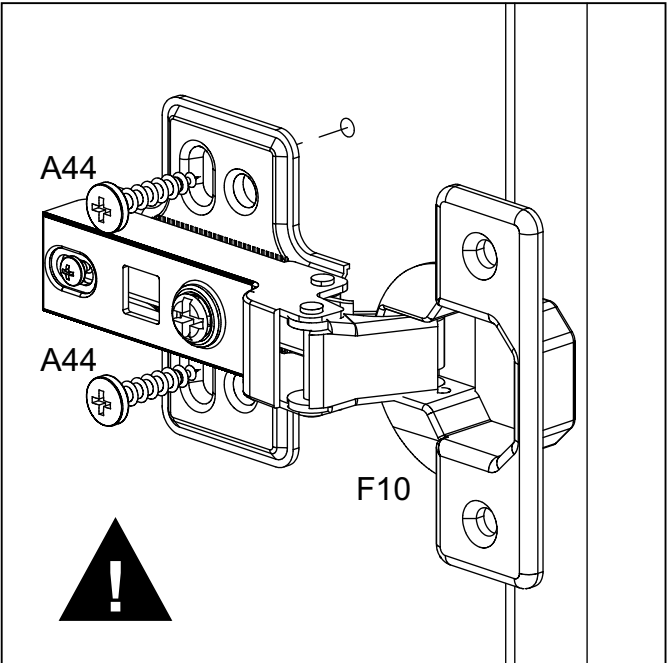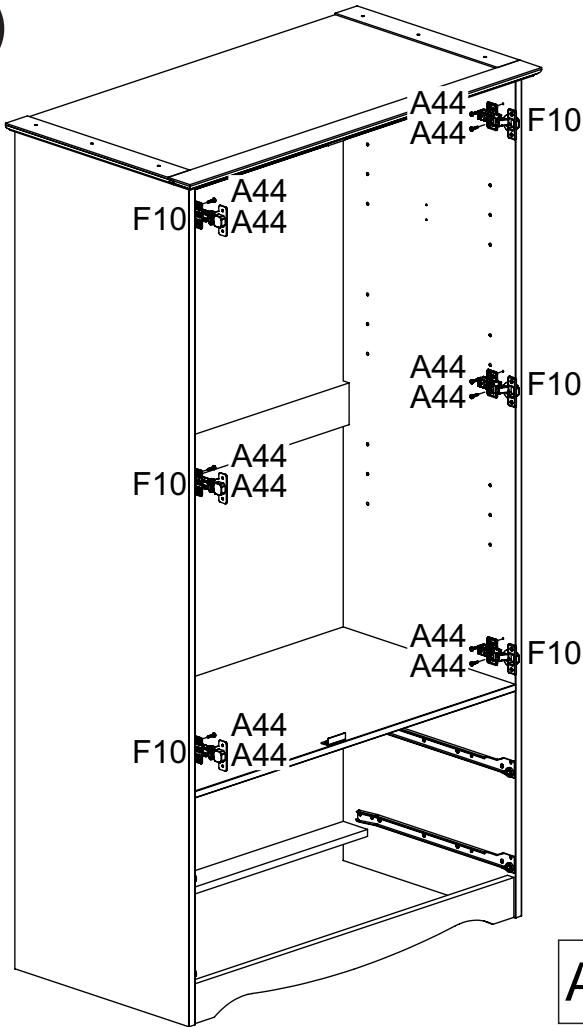


A44		12	F10		06
		3,5x14			

11)

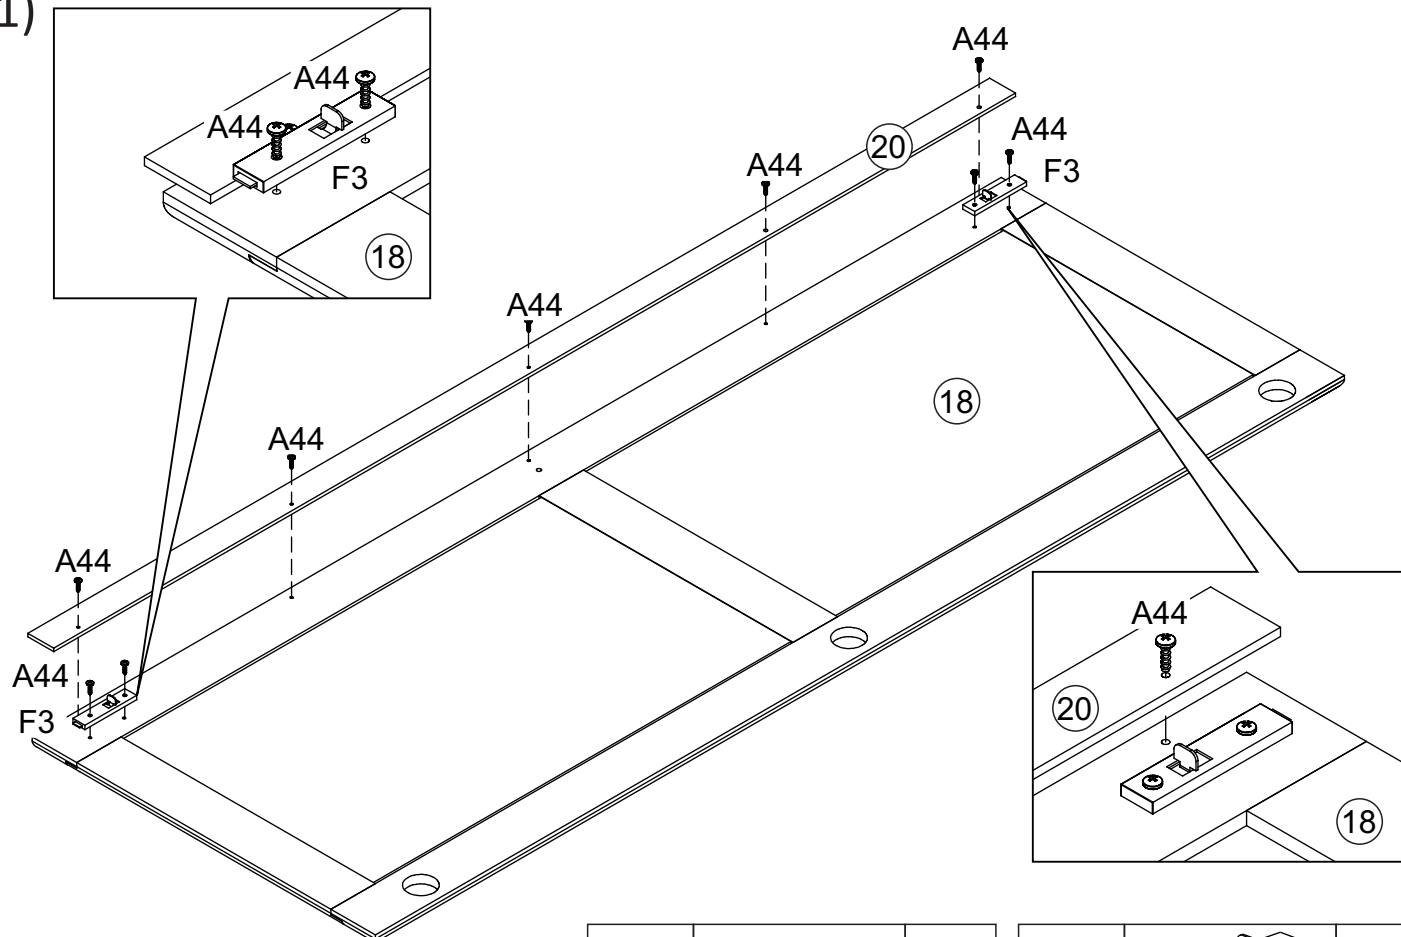


A44



3,5x14


09

F3




02

12)

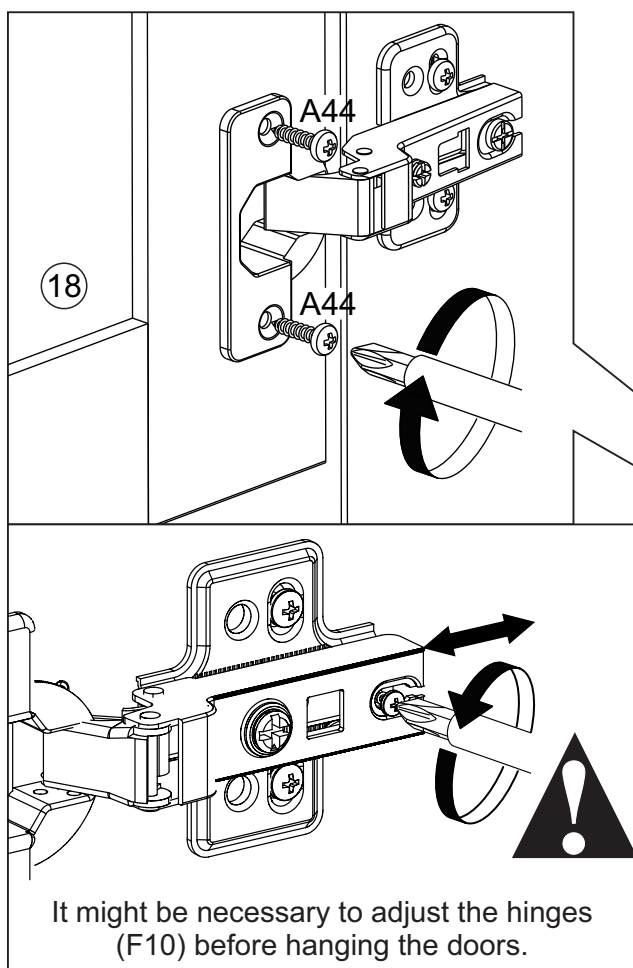


A44






3,5x14

06

13)



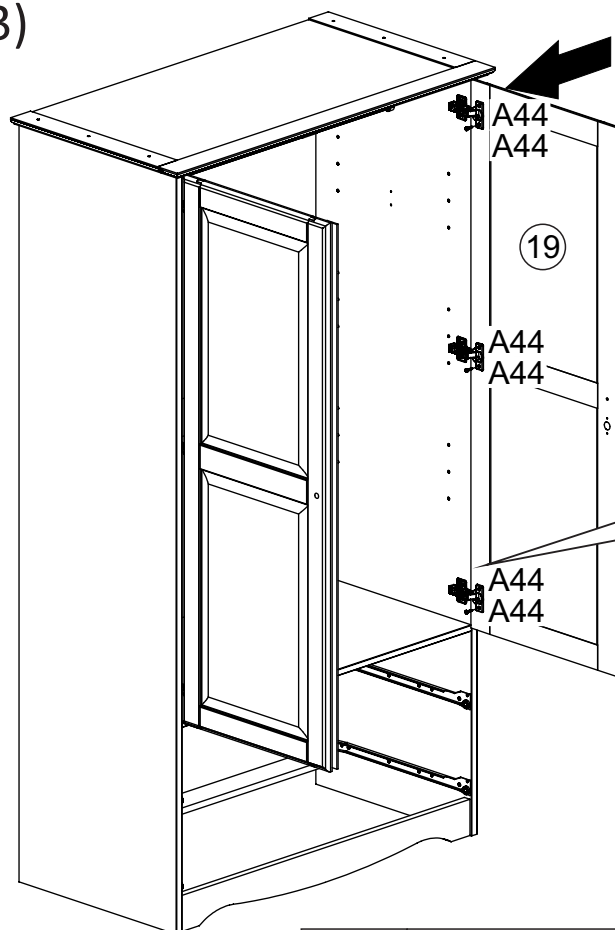




A44		06
3.5x14		

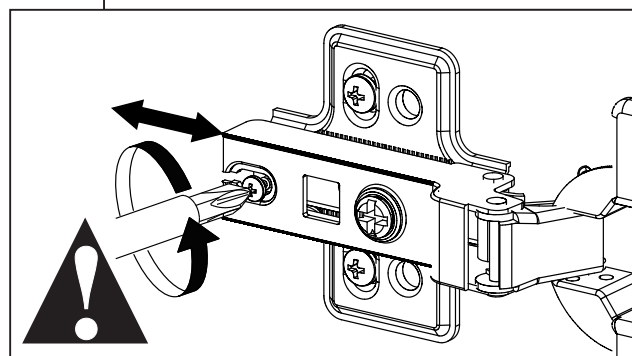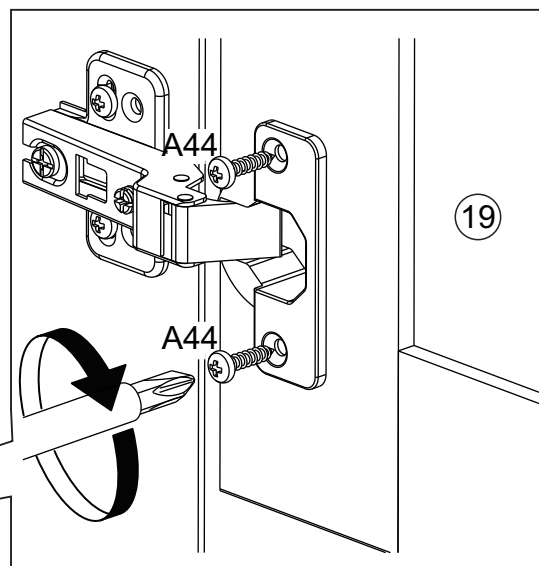


It might be necessary to adjust the hinges (F10) before hanging the doors.












14)

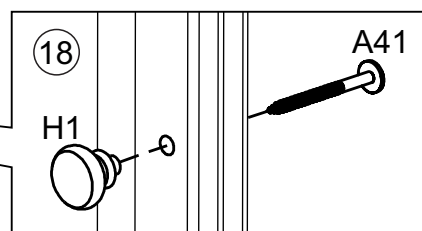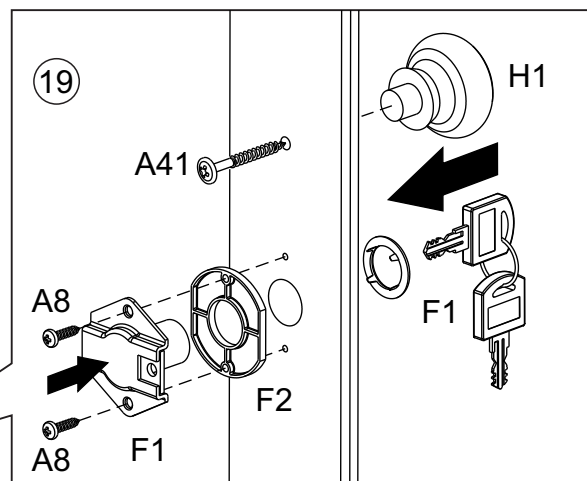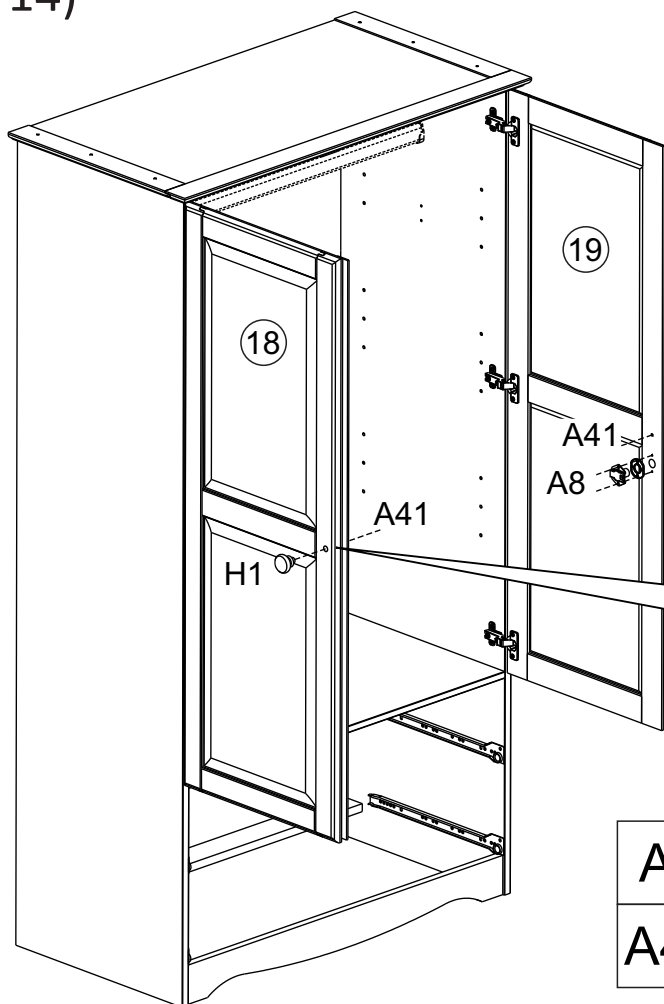






A8		02
3.0x20		
A41		02
4.0x30		



F1		01
F2		01
H1		02

15) HINGE ADJUSTMENT GUIDE.

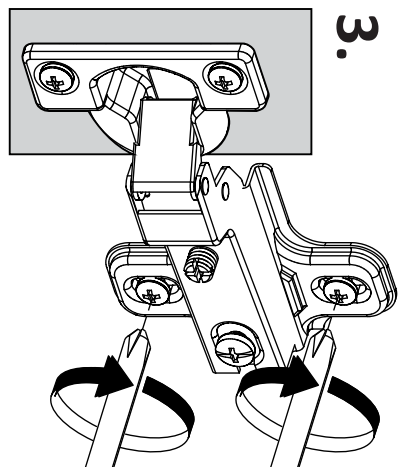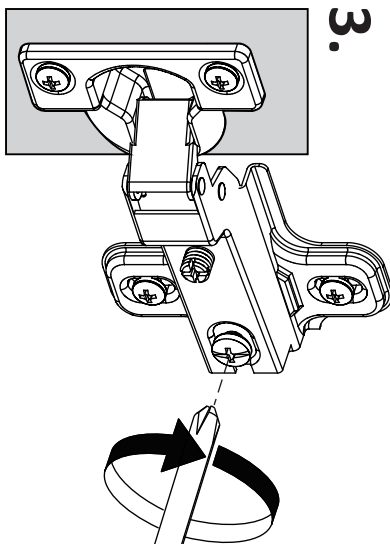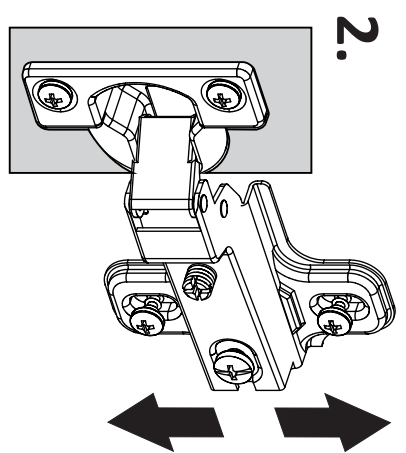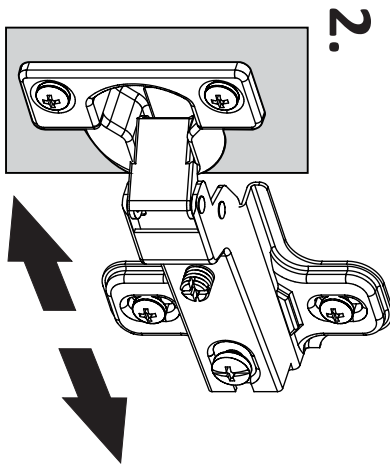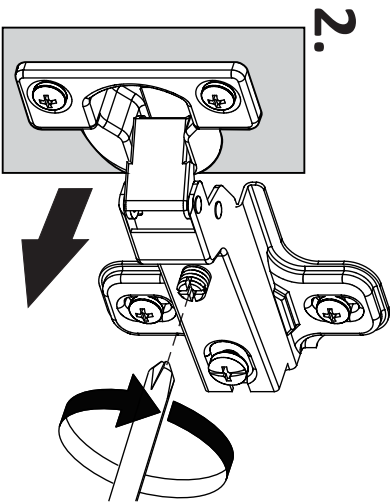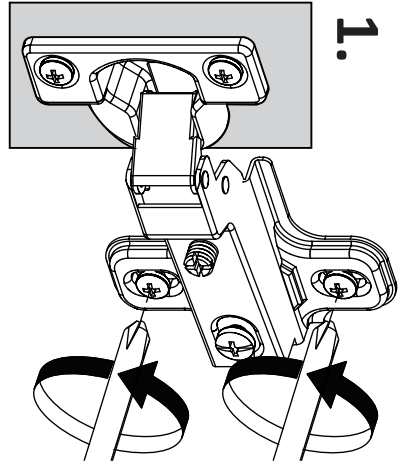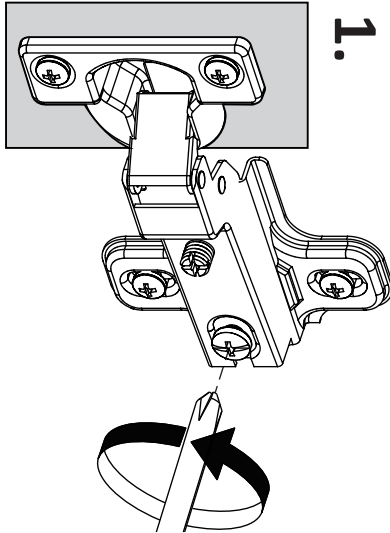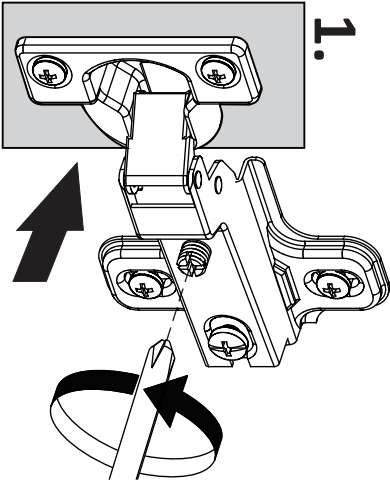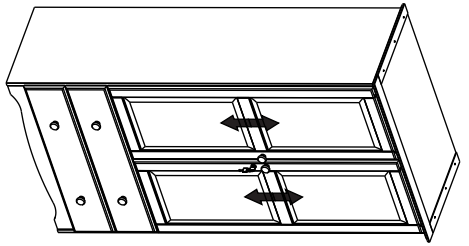
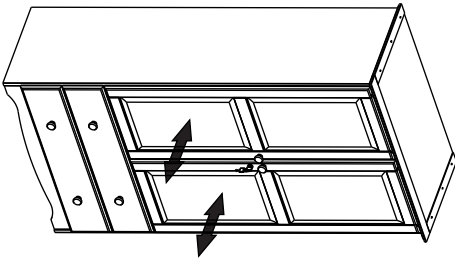
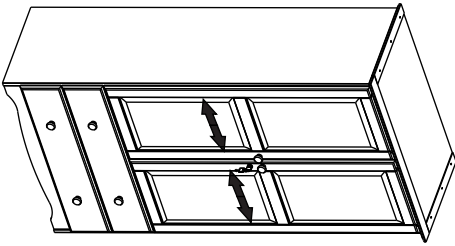


16) 2x

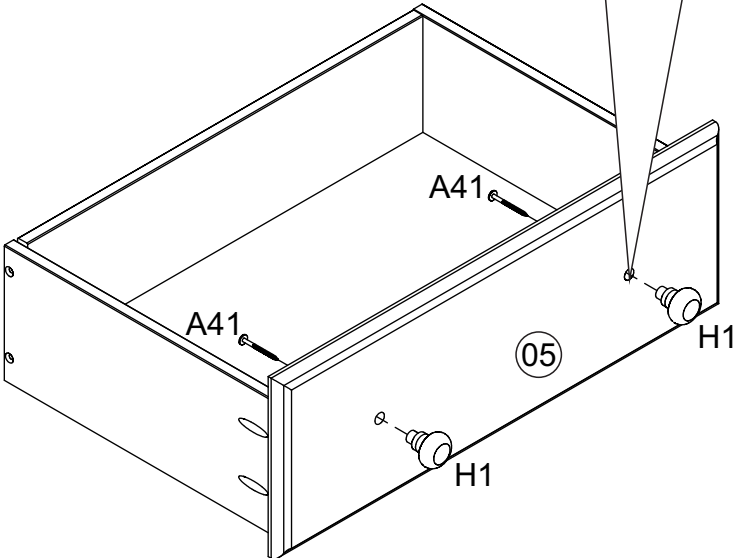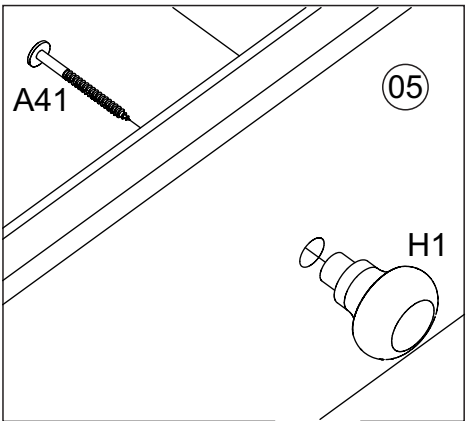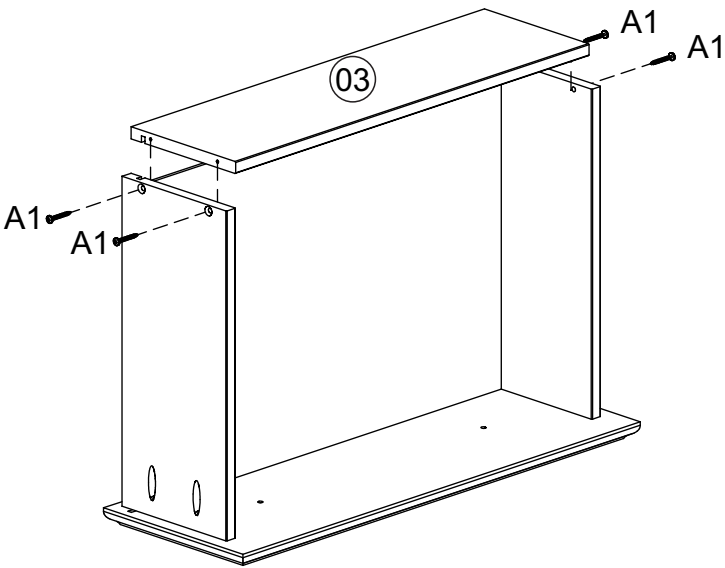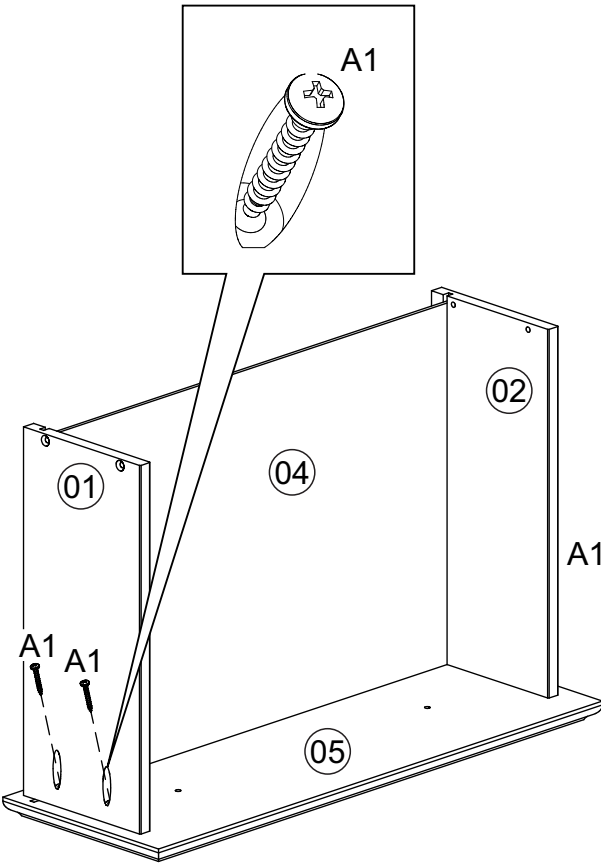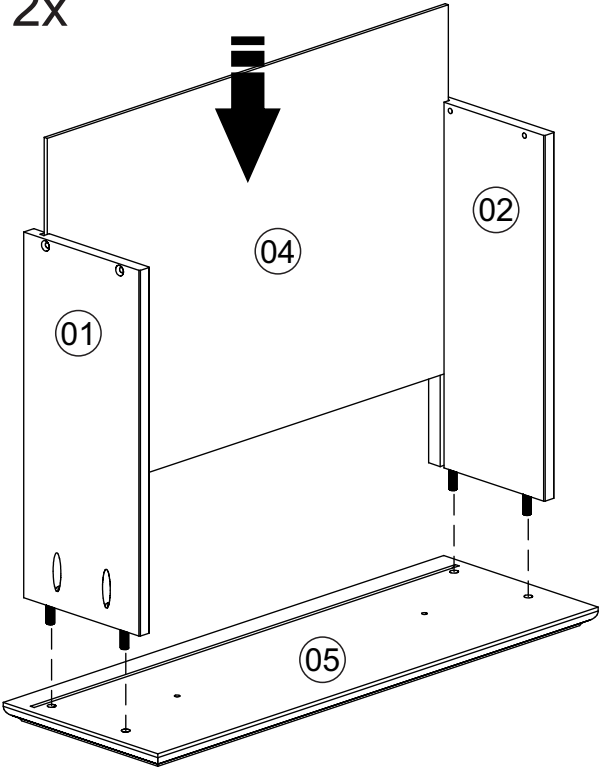


A1	 4,0x30	16
A41	 4,0x30	04
H1		04

17) 2x

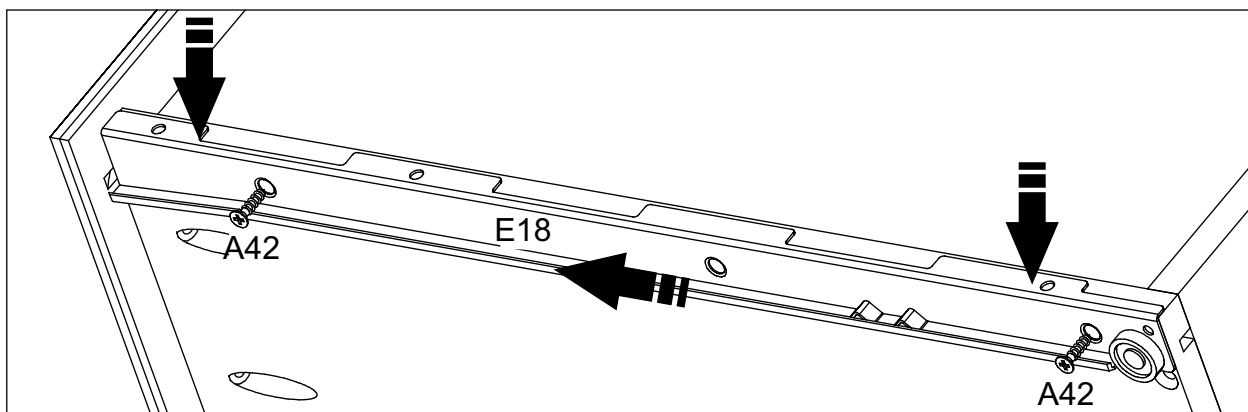
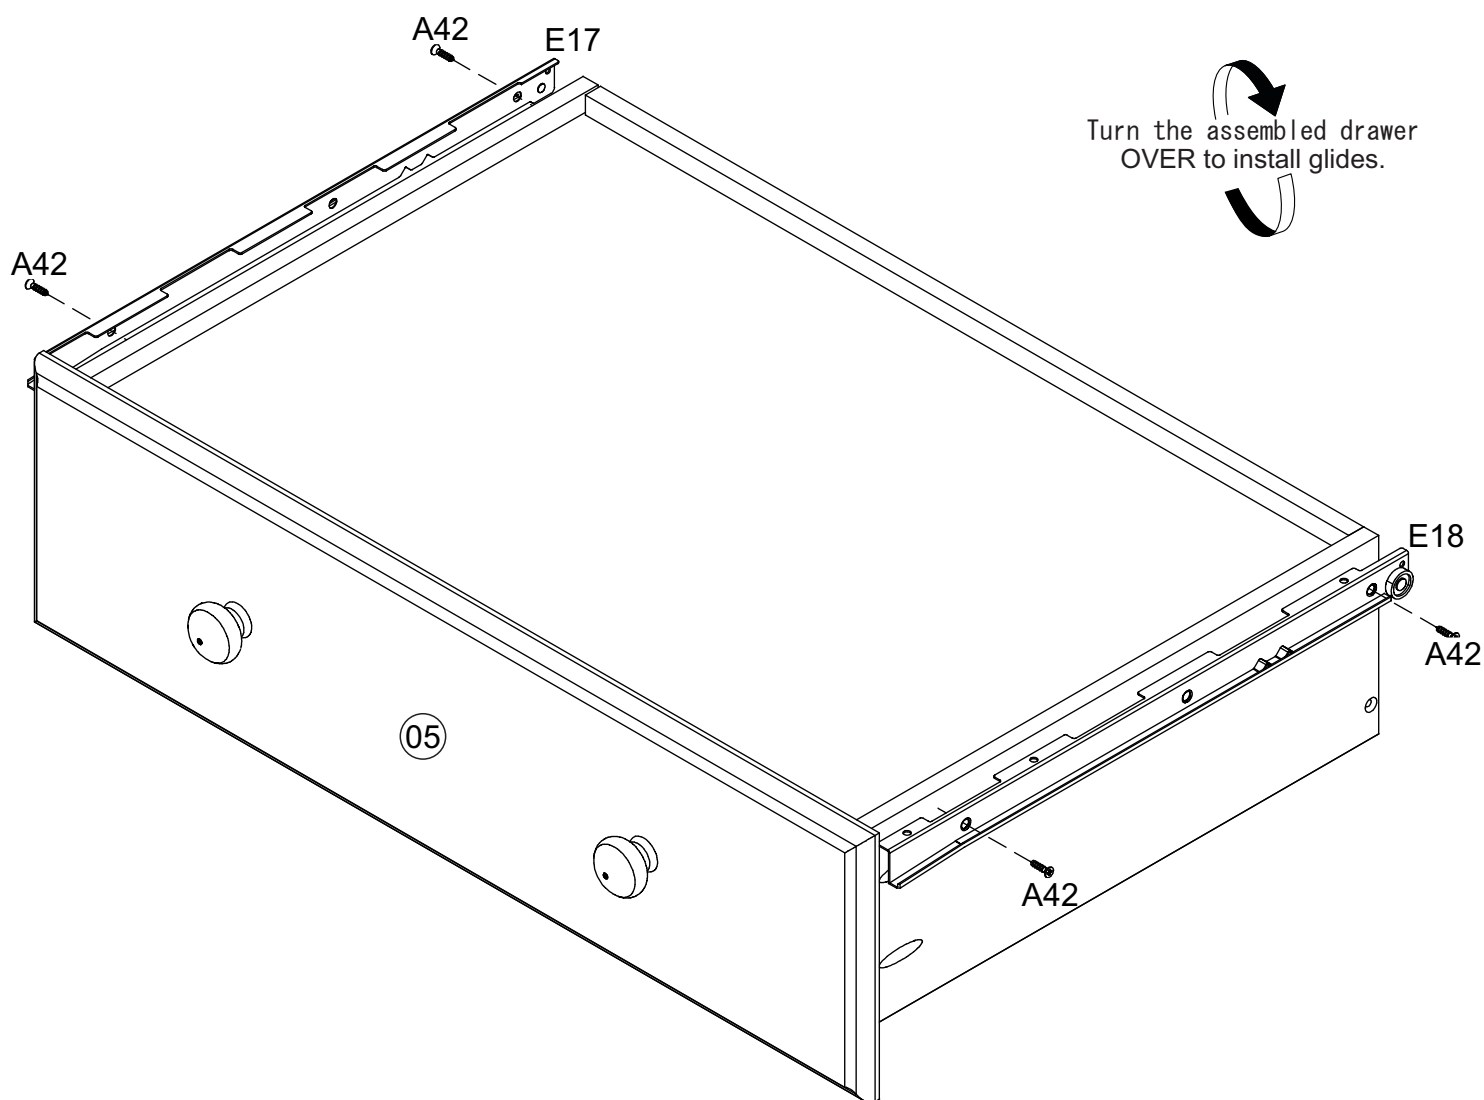
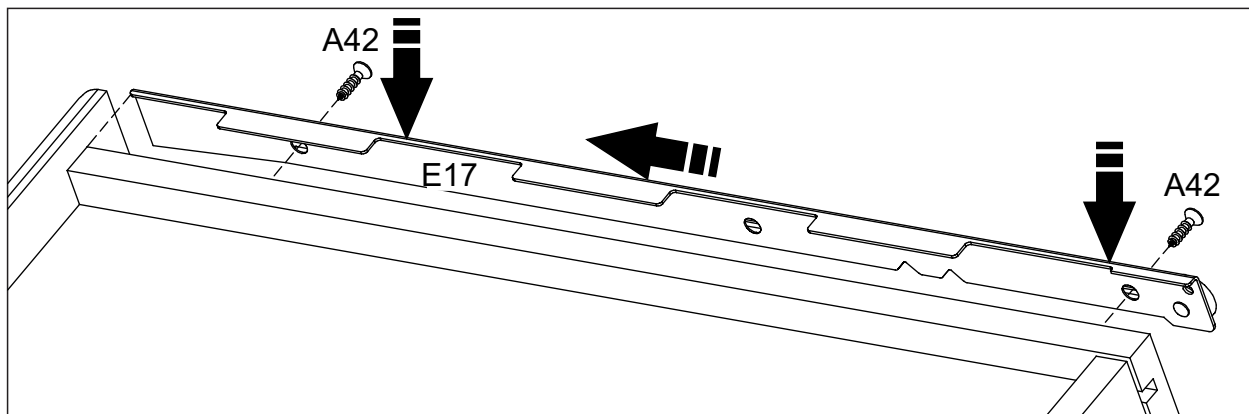


A42		08	E17	Drawer RIGHT 450mm - 17 3/4"	02	E18	Drawer LEFT 450mm - 17 3/4"	02
	4,0x14							







18)

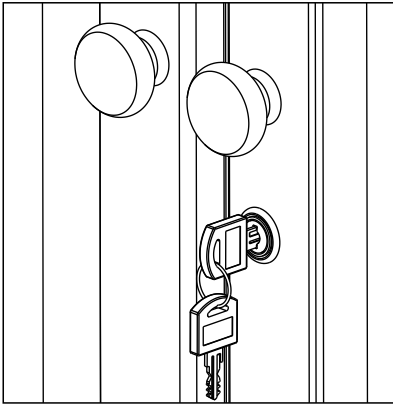


Place the labeled drawer at the top.

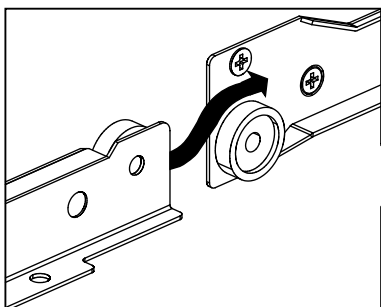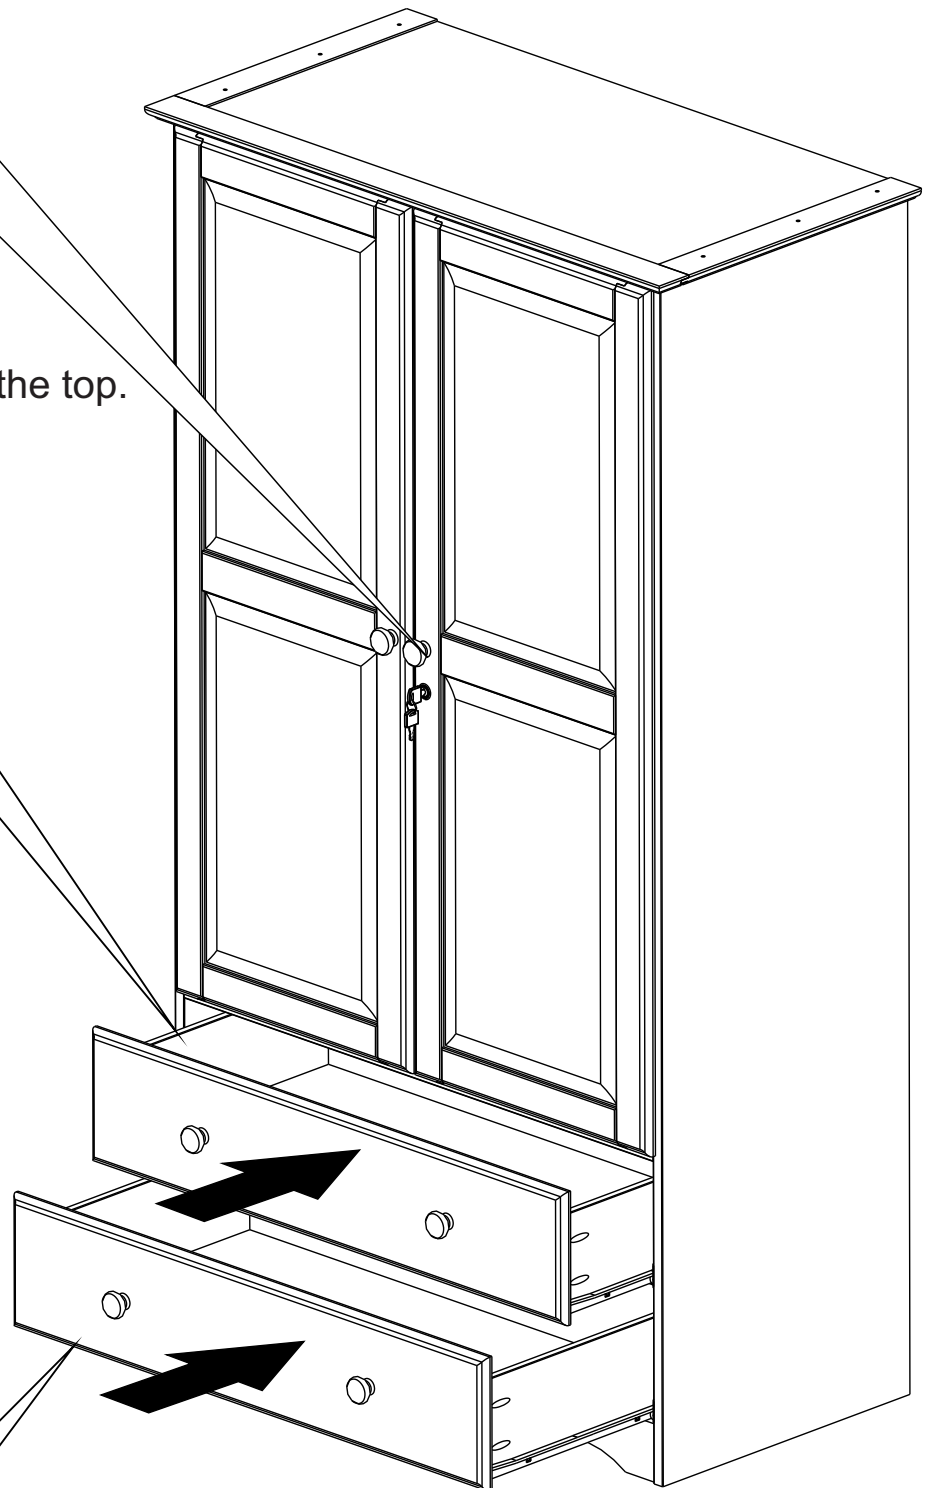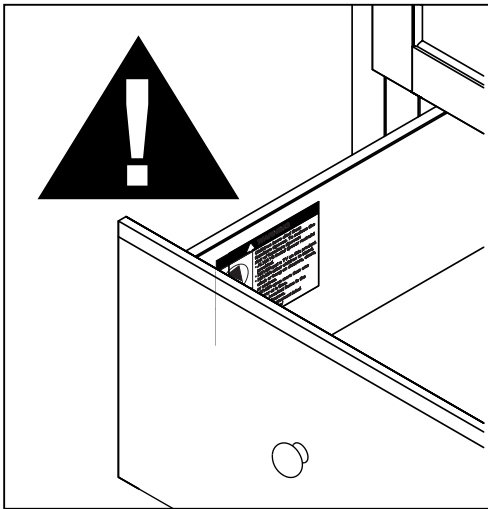

19) **FURNITURE TIPOVER PREVENTION KIT INSTALLATION**

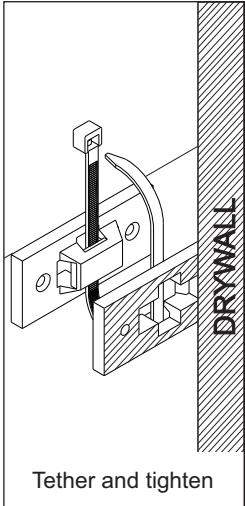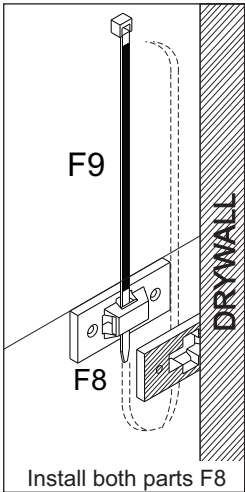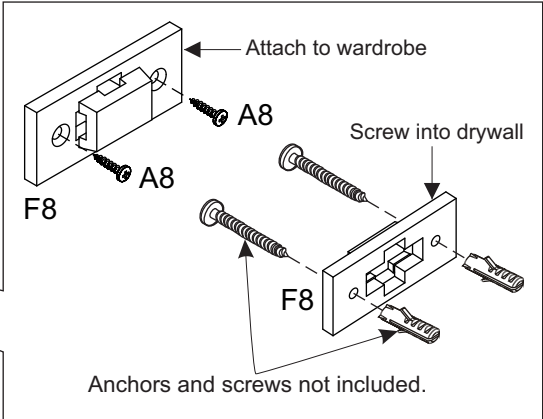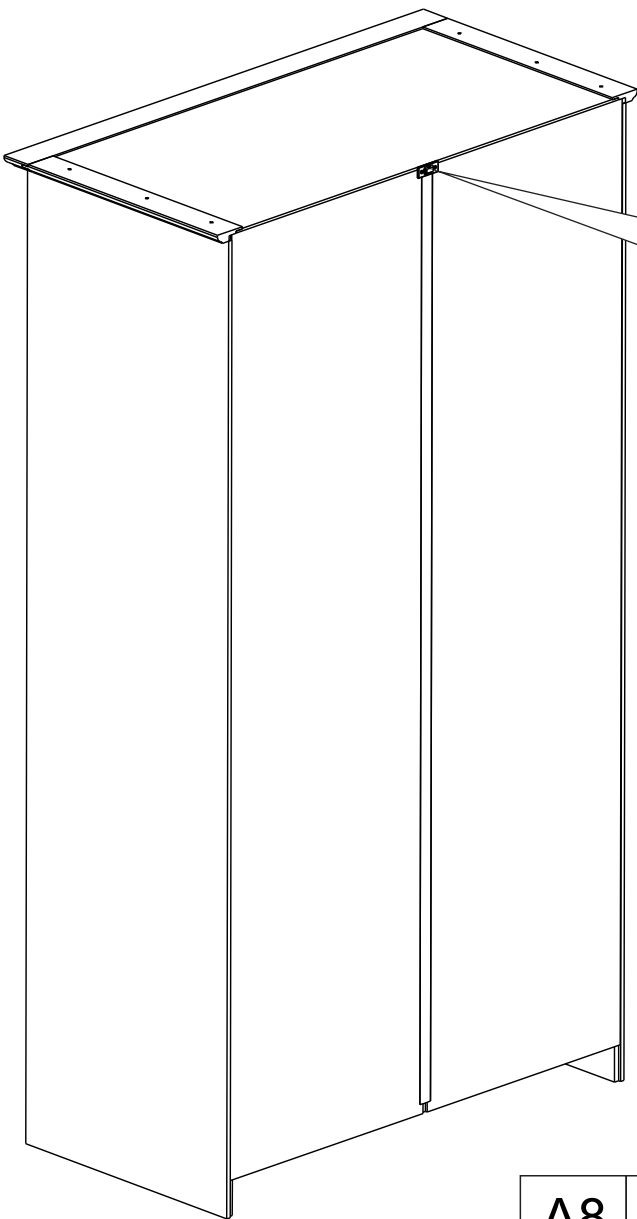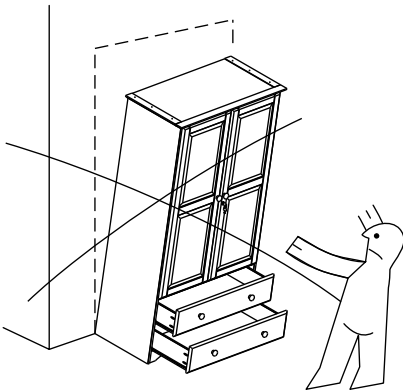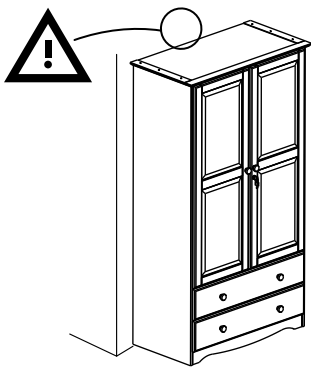

A8	 3,0x20	02
F8		02
F9		01