


ASSEMBLY INSTRUCTIONS

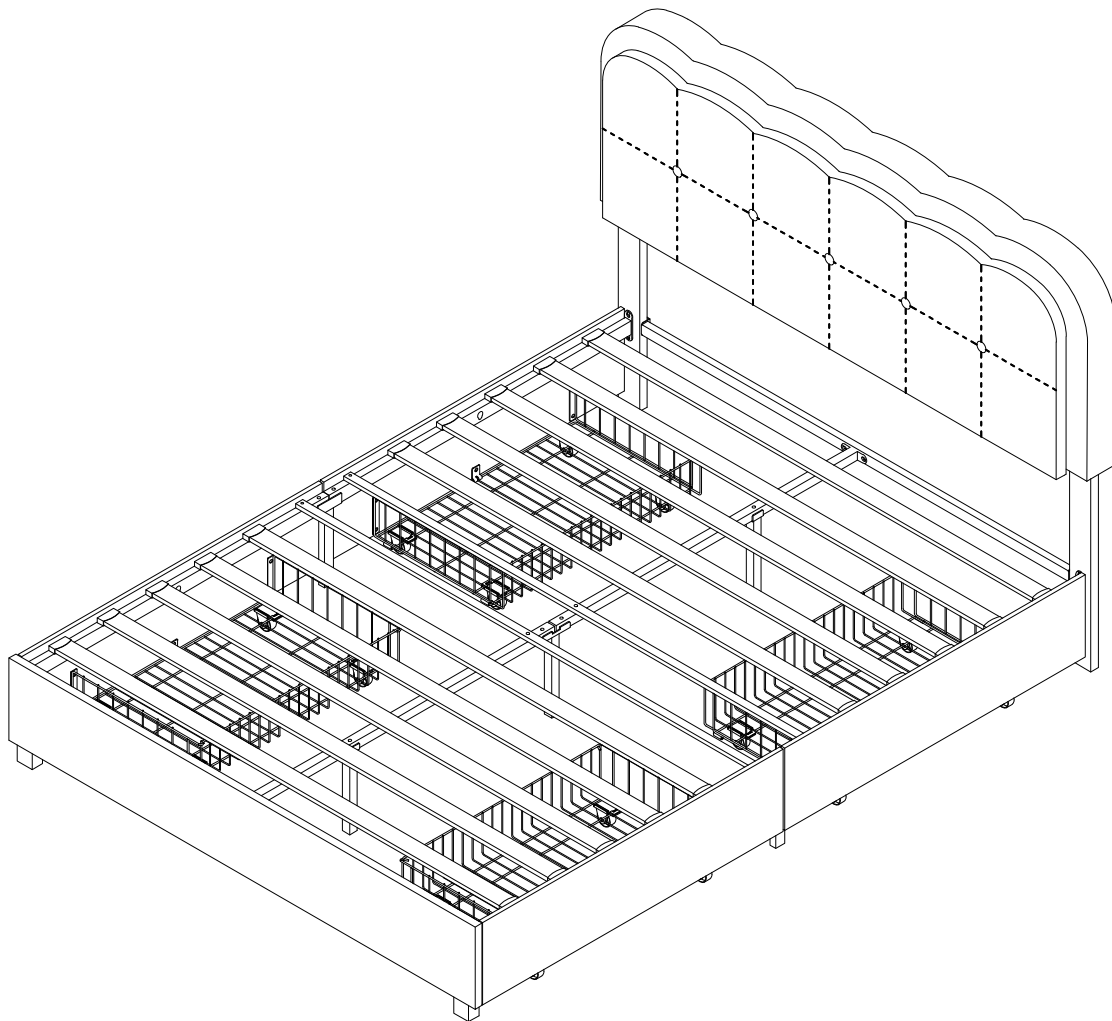


Note:

Should be assembled on flat ground to keep balance.

It needs at least two people to install.


Before starting the assembly, you must read the whole manual and follow the instructions.

EXPLODED VIEW

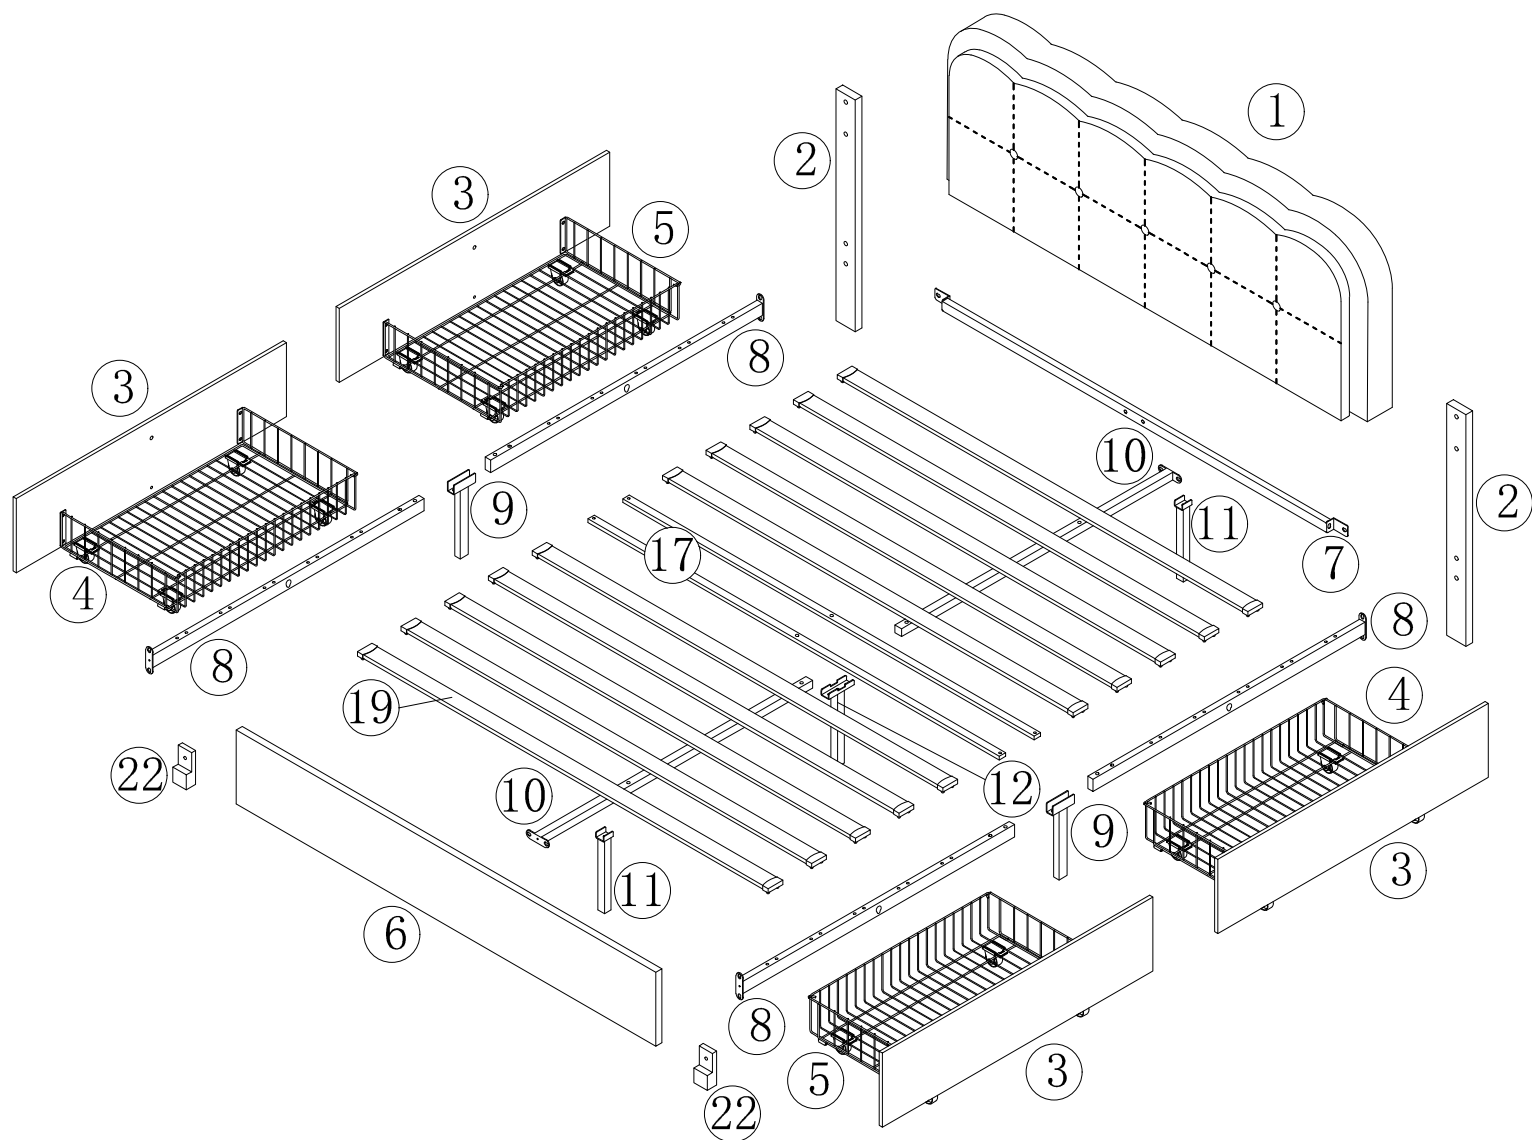





Pls make sure all the accessories are complete!

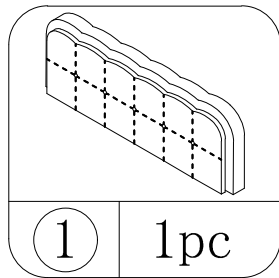


① 1pc

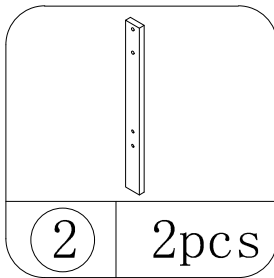


② 2pcs

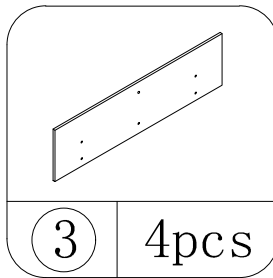


③ 4pcs

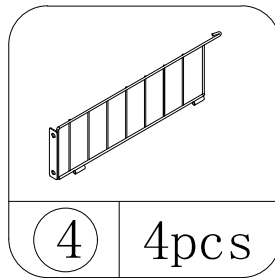


④ 4pcs

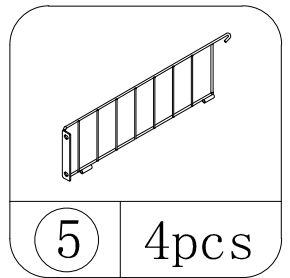


⑤ 4pcs

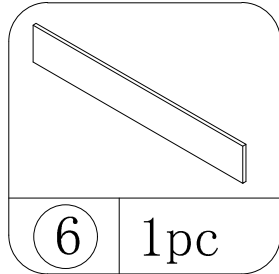


⑥ 1pc

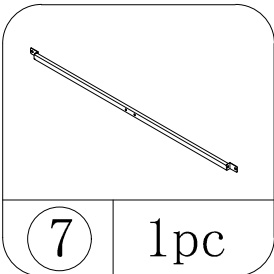


⑦ 1pc

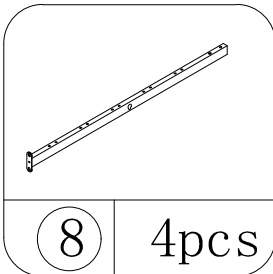


⑧ 4pcs

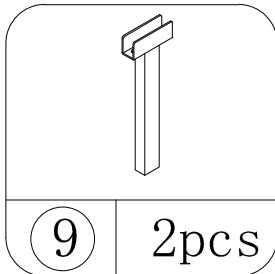


⑨ 2pcs

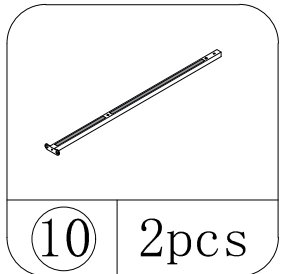


⑩ 2pcs

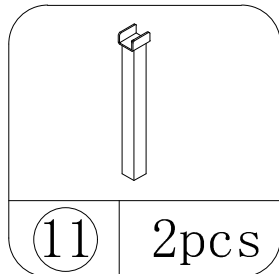


⑪ 2pcs

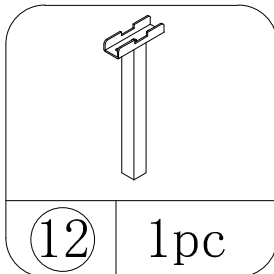


⑫ 1pc

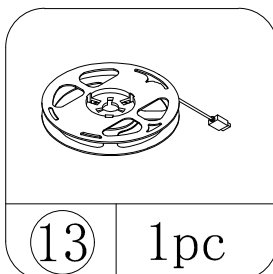


⑬ 1pc

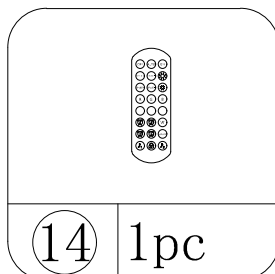


⑭ 1pc

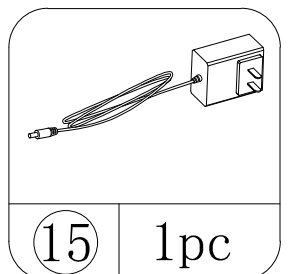


⑮ 1pc

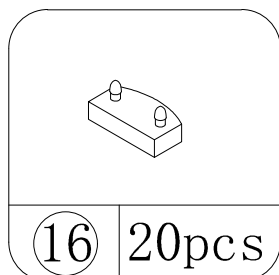


⑯ 20pcs

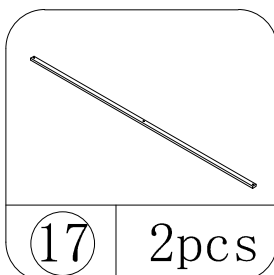


⑰ 2pcs

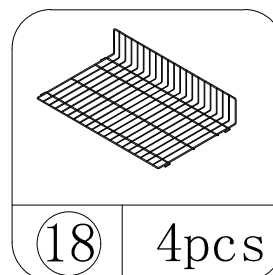


⑱ 4pcs

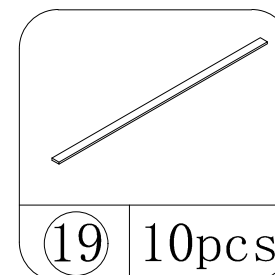


⑲ 10pcs

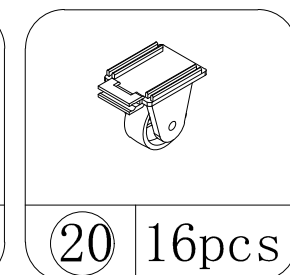

⑳ 16pcs

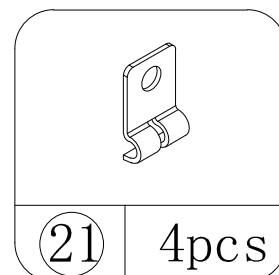

㉑ 4pcs

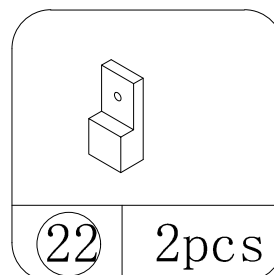

㉒ 2pcs



M8x50mm

Ⓐ 4pcs



M8x40mm

Ⓑ 8pcs



M8x16mm

Ⓒ 14pcs



M8x25mm

Ⓓ 2pcs



M6x30mm

Ⓔ 6pcs




M6x12mm

Ⓕ 20pcs



M8x18mm

Ⓖ 4pcs



S5


1pc




S4

1pc

Step1

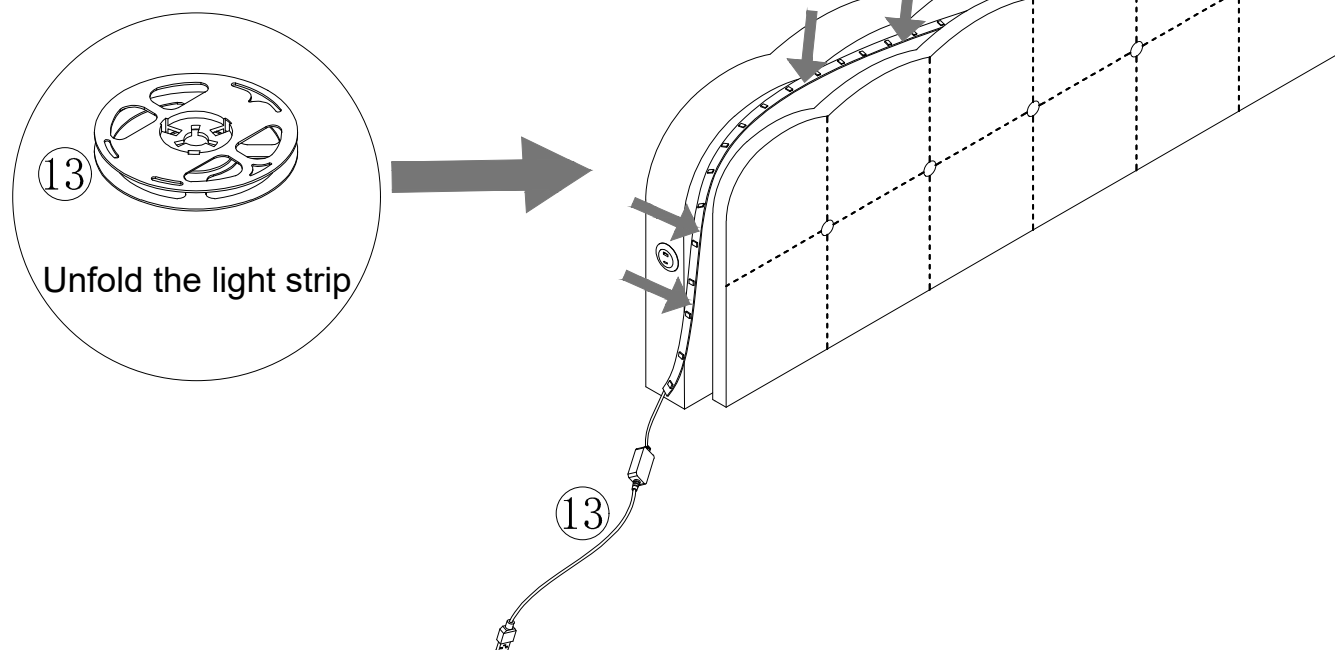

Step2

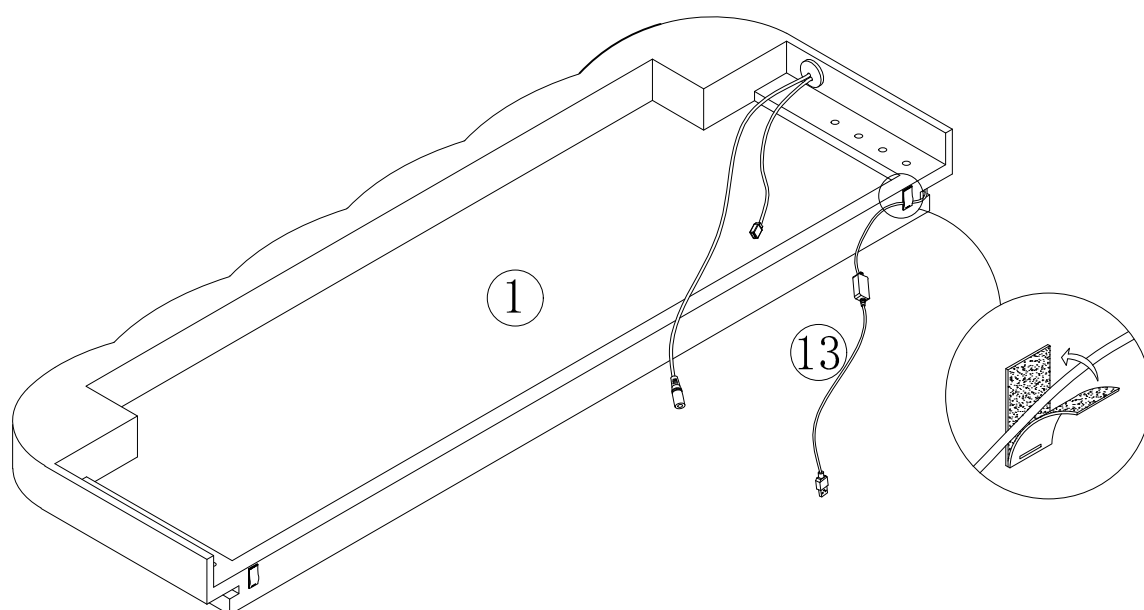


Step3

B



M8x40mm

4pcs

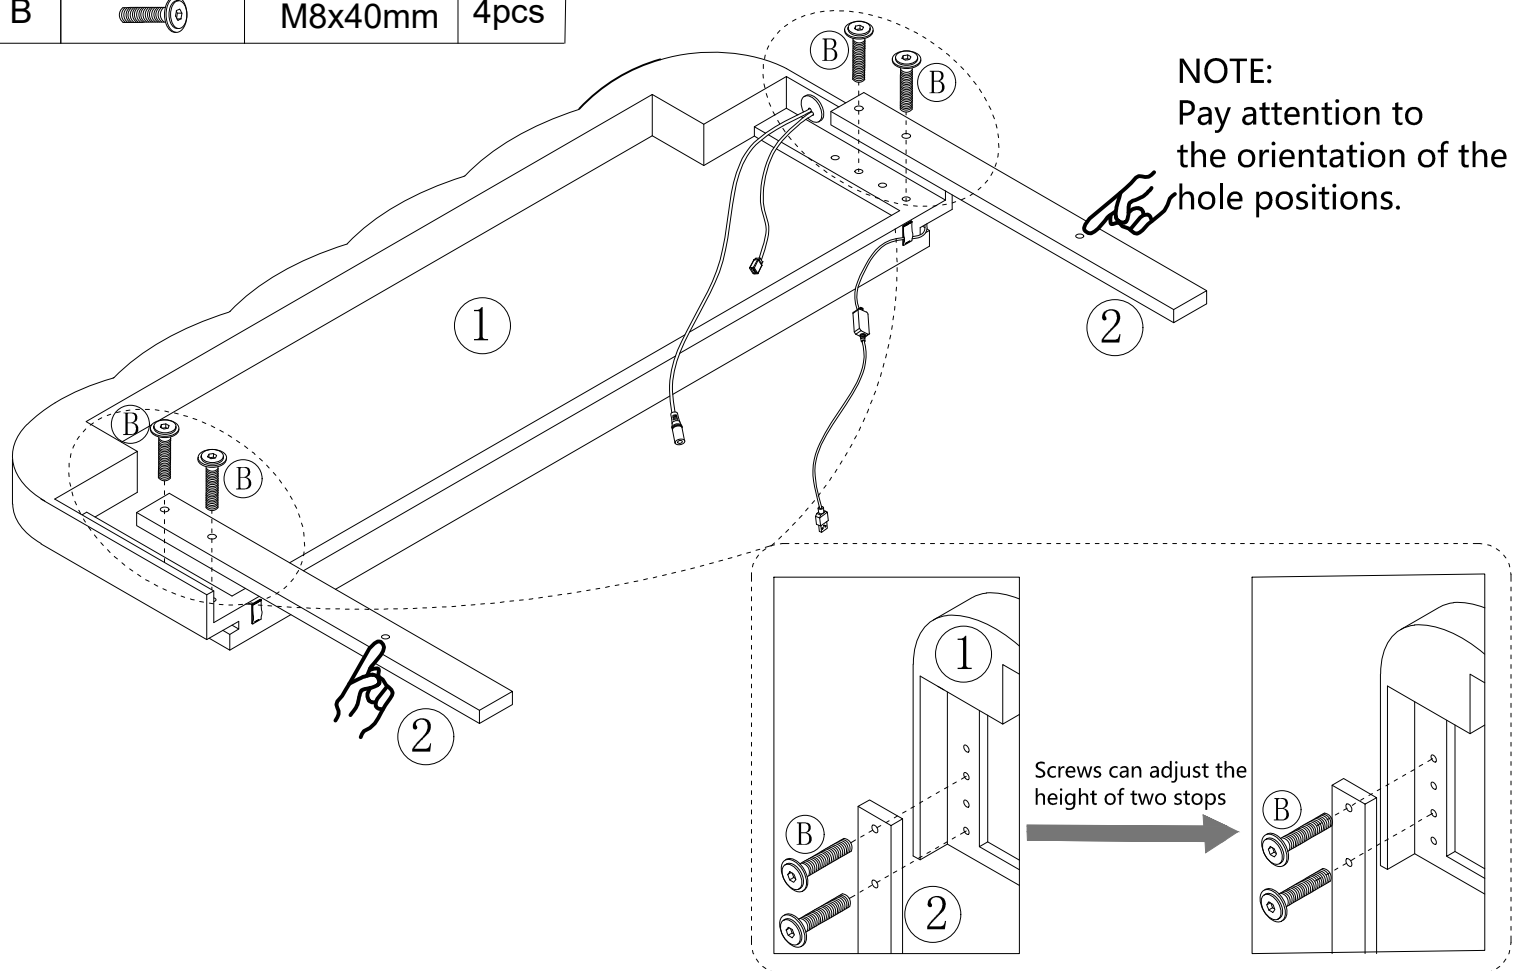


Step4

C



M8x16mm

2pcs

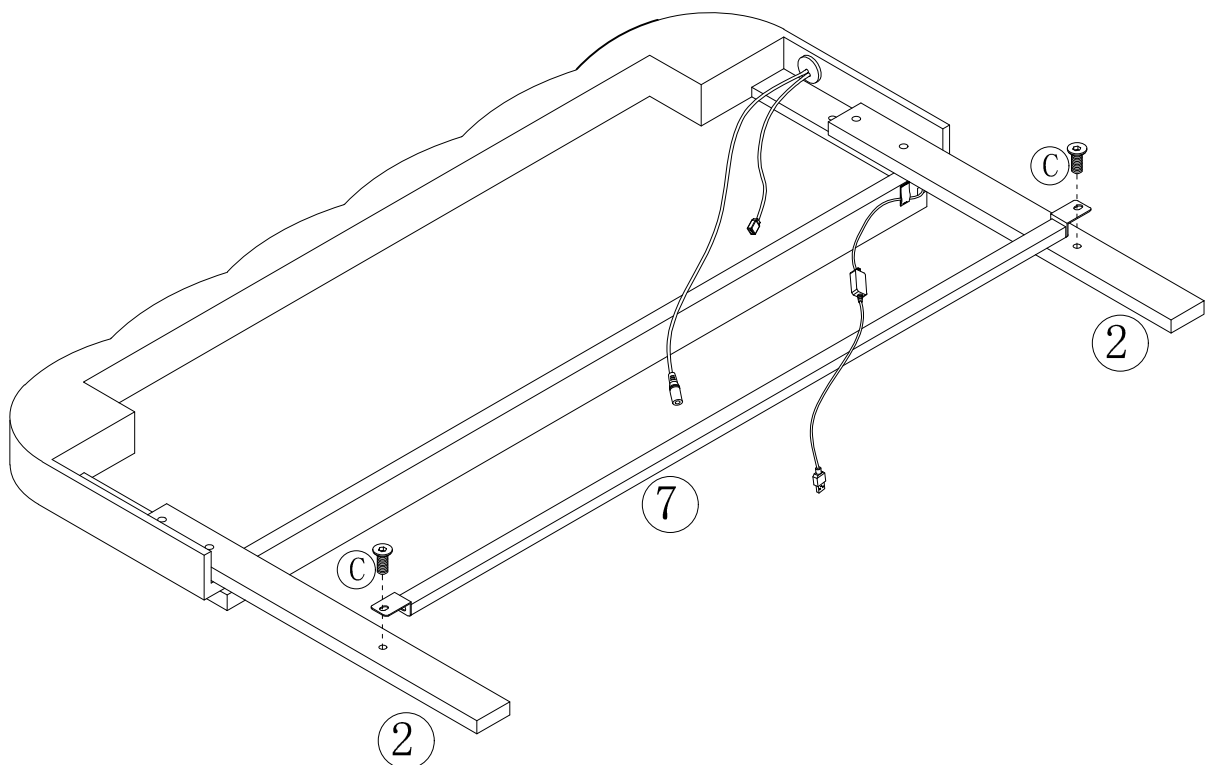


Step5

A



M8x50mm

4pcs

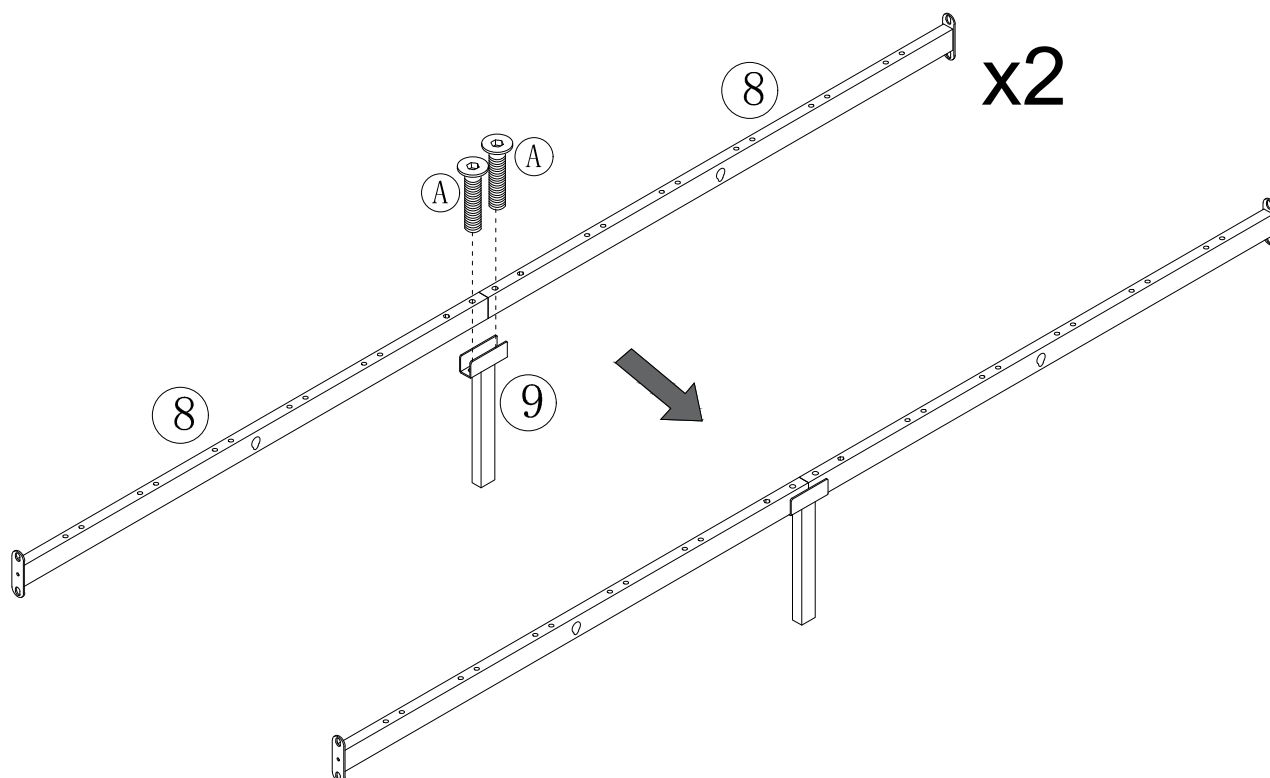

x2


Step6

B



M8x40mm

4pcs

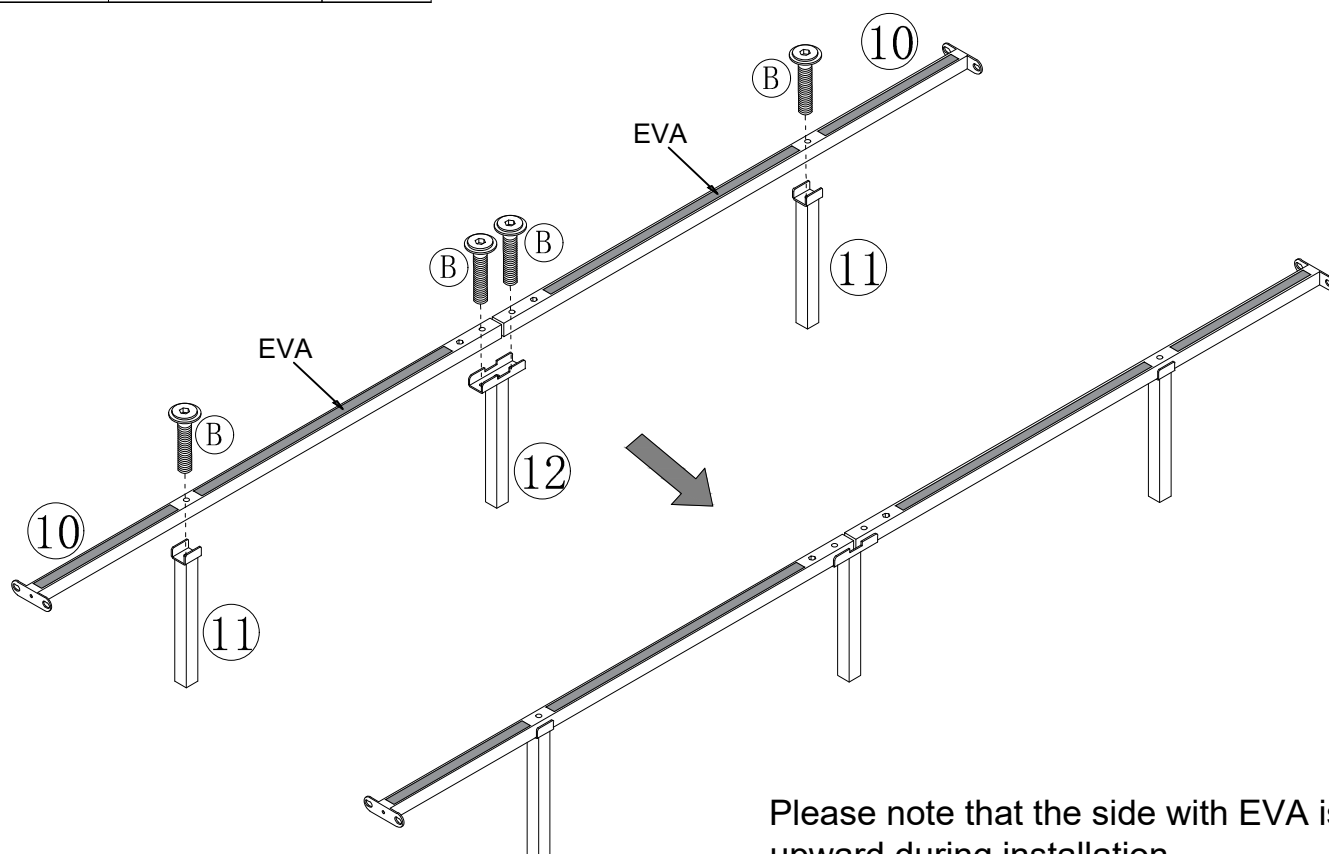


Please note that the side with EVA is upward during installation.

Step7

C



M8x16mm 6pcs

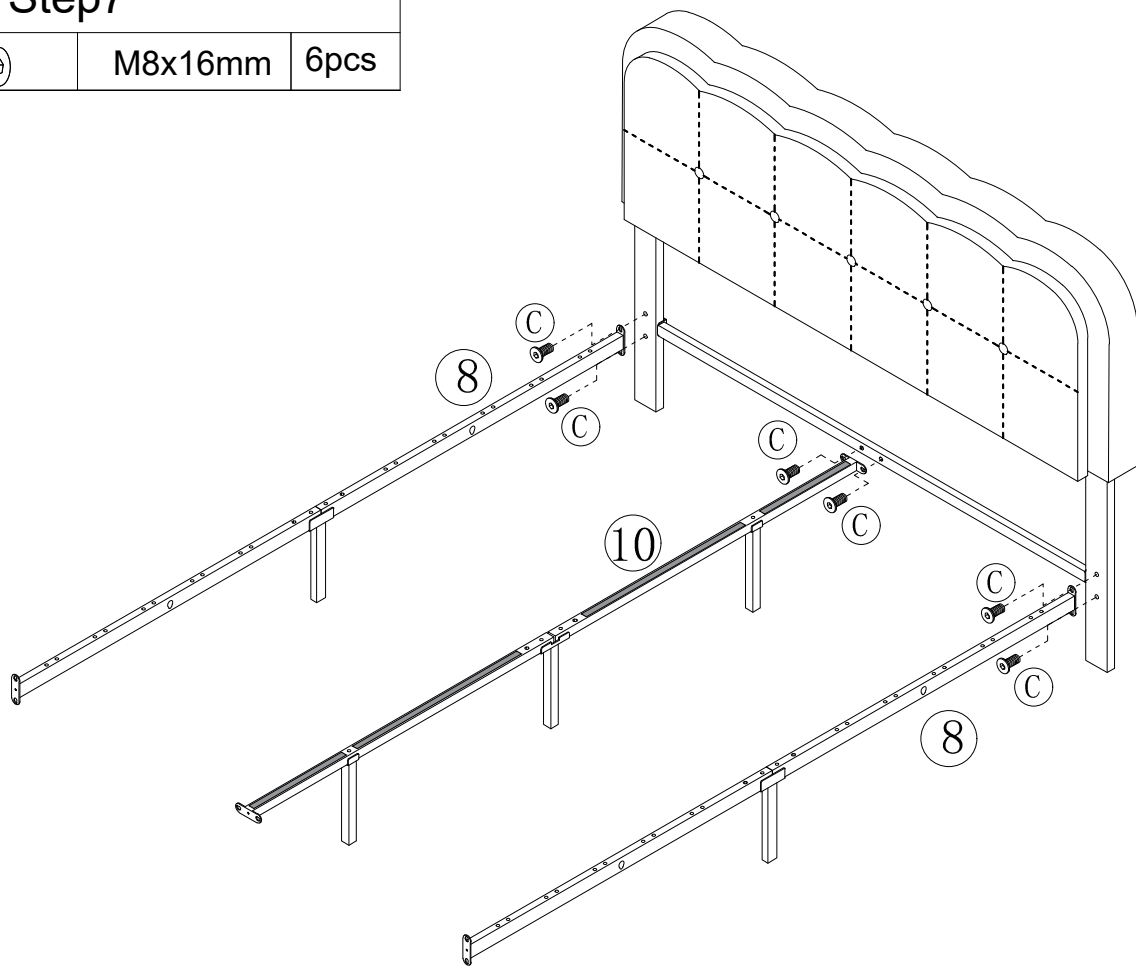


Step8

D



M8x25mm 2pcs

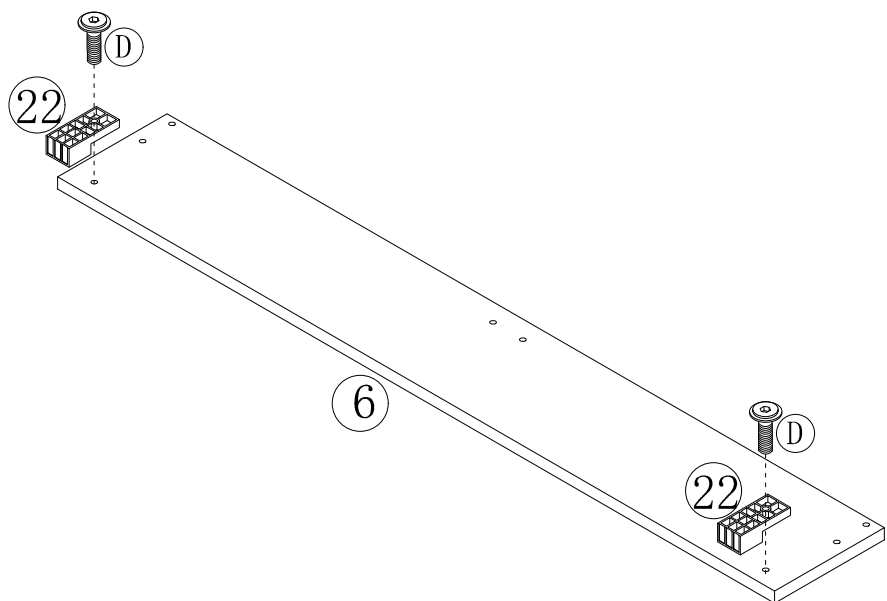


Step9

C



M8x16mm 6pcs

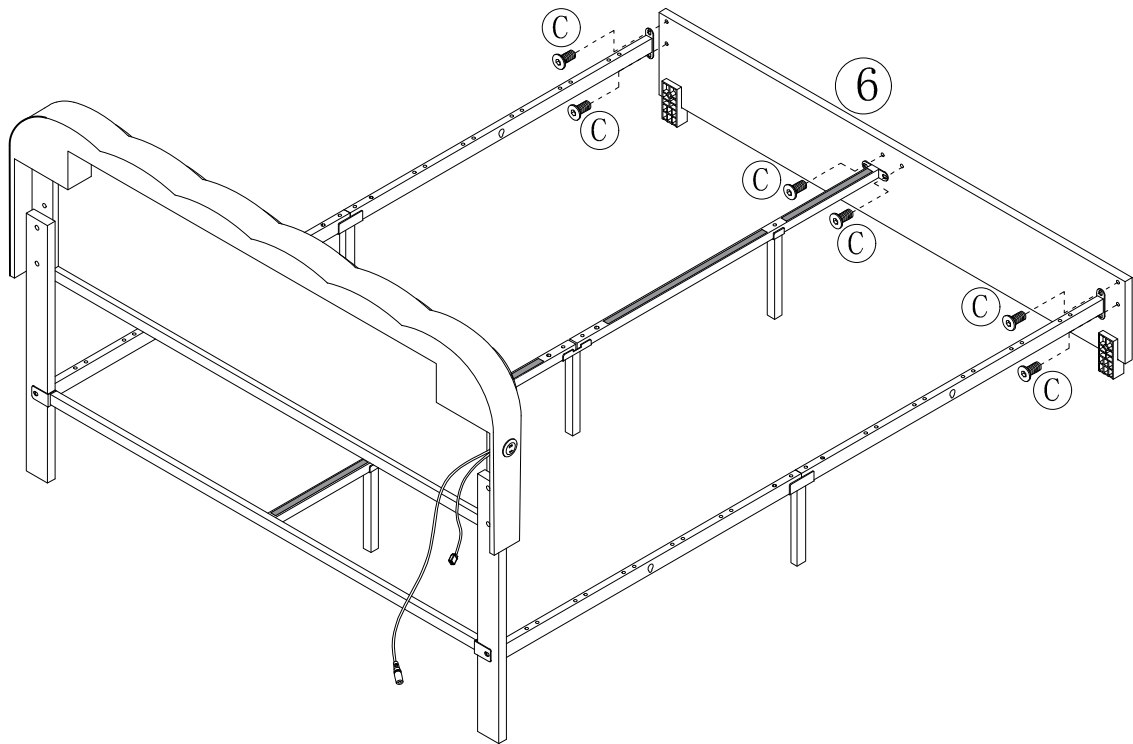


Step10


E




M6x30mm 6pcs

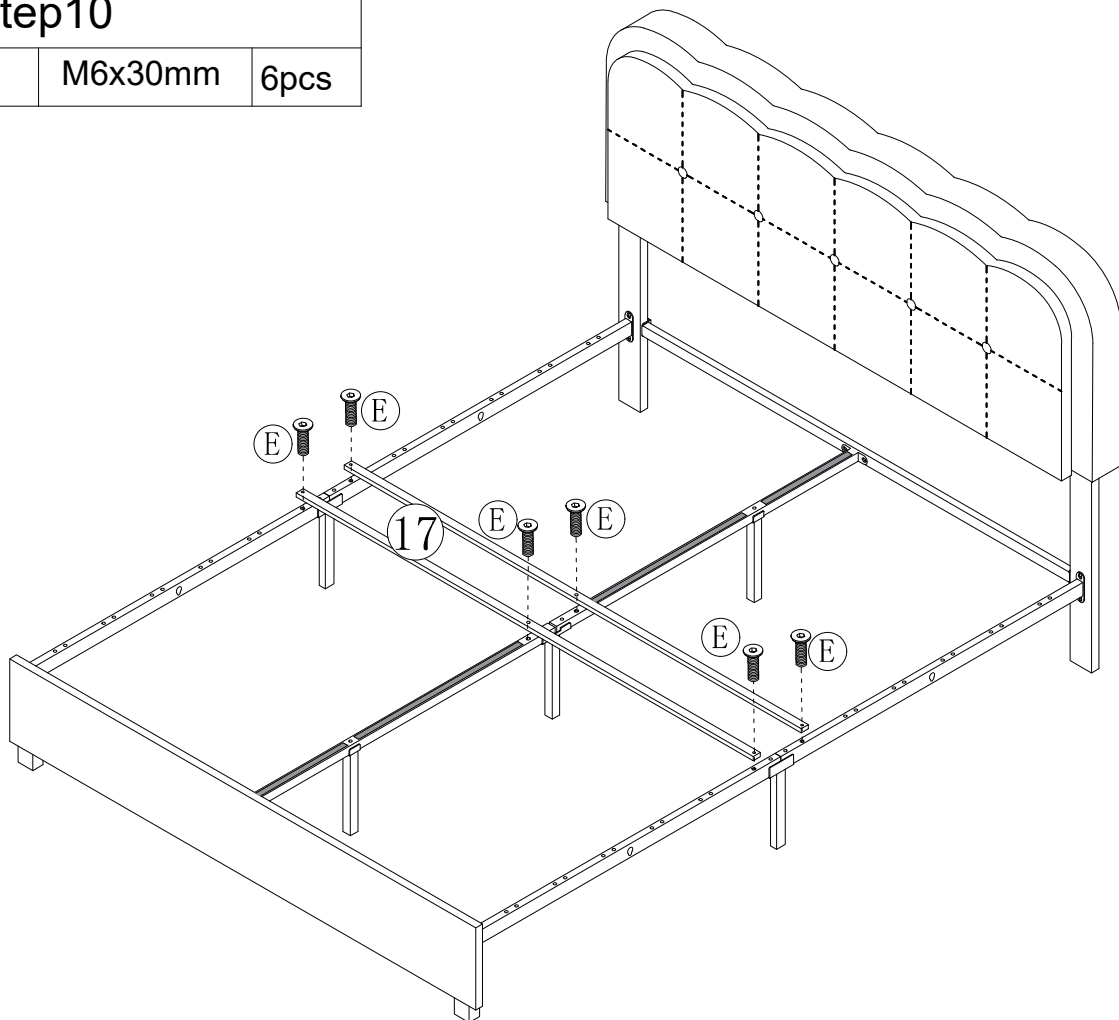


Step11

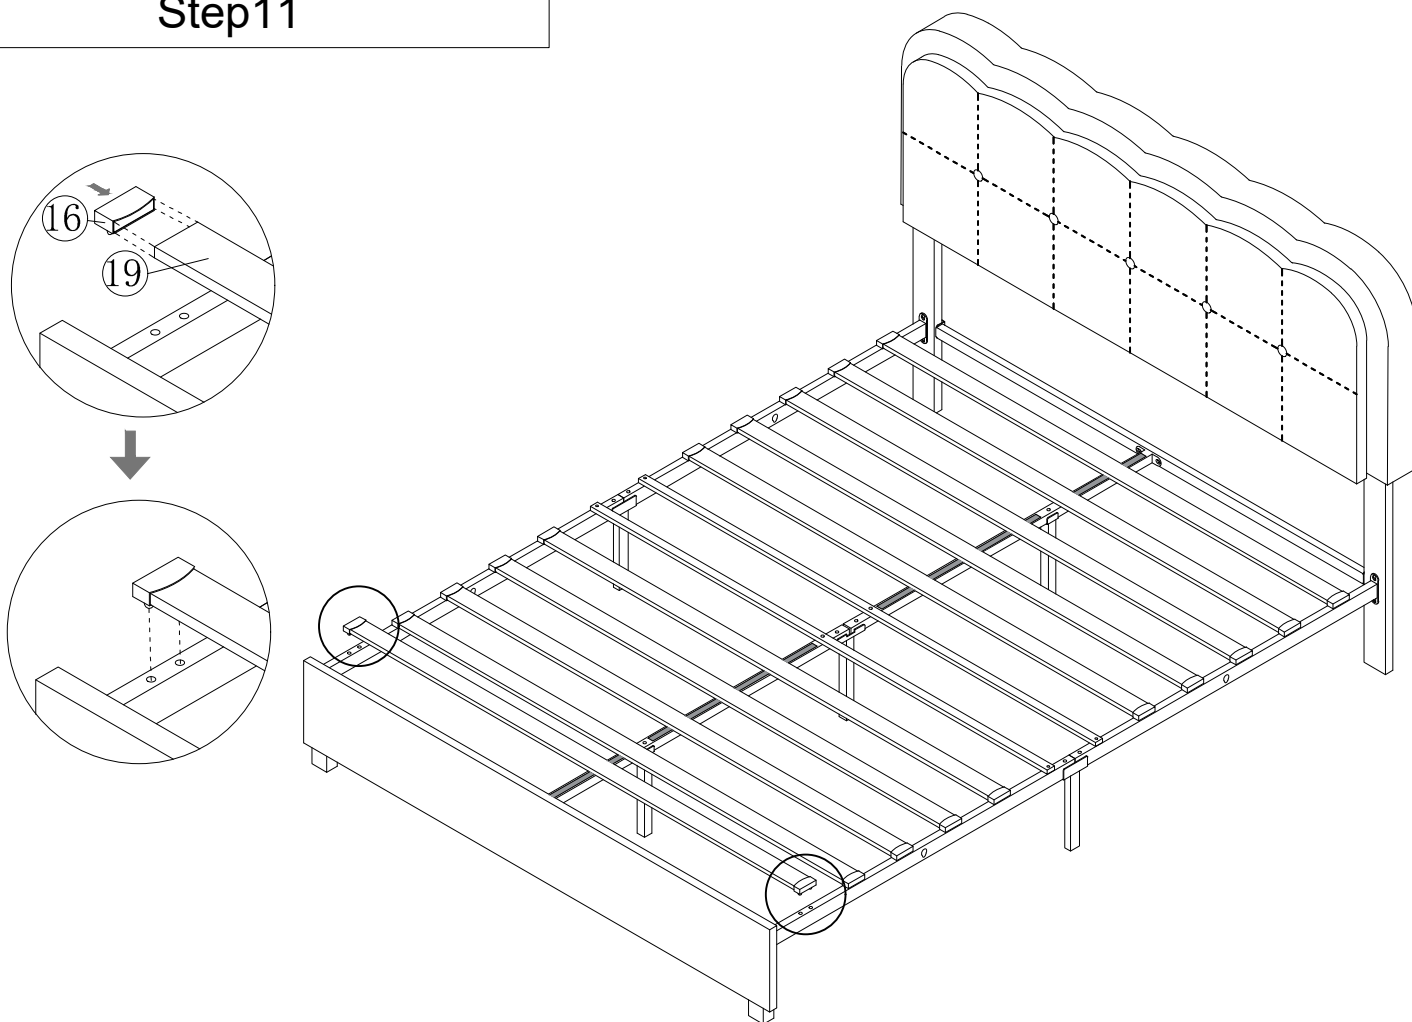


Step12

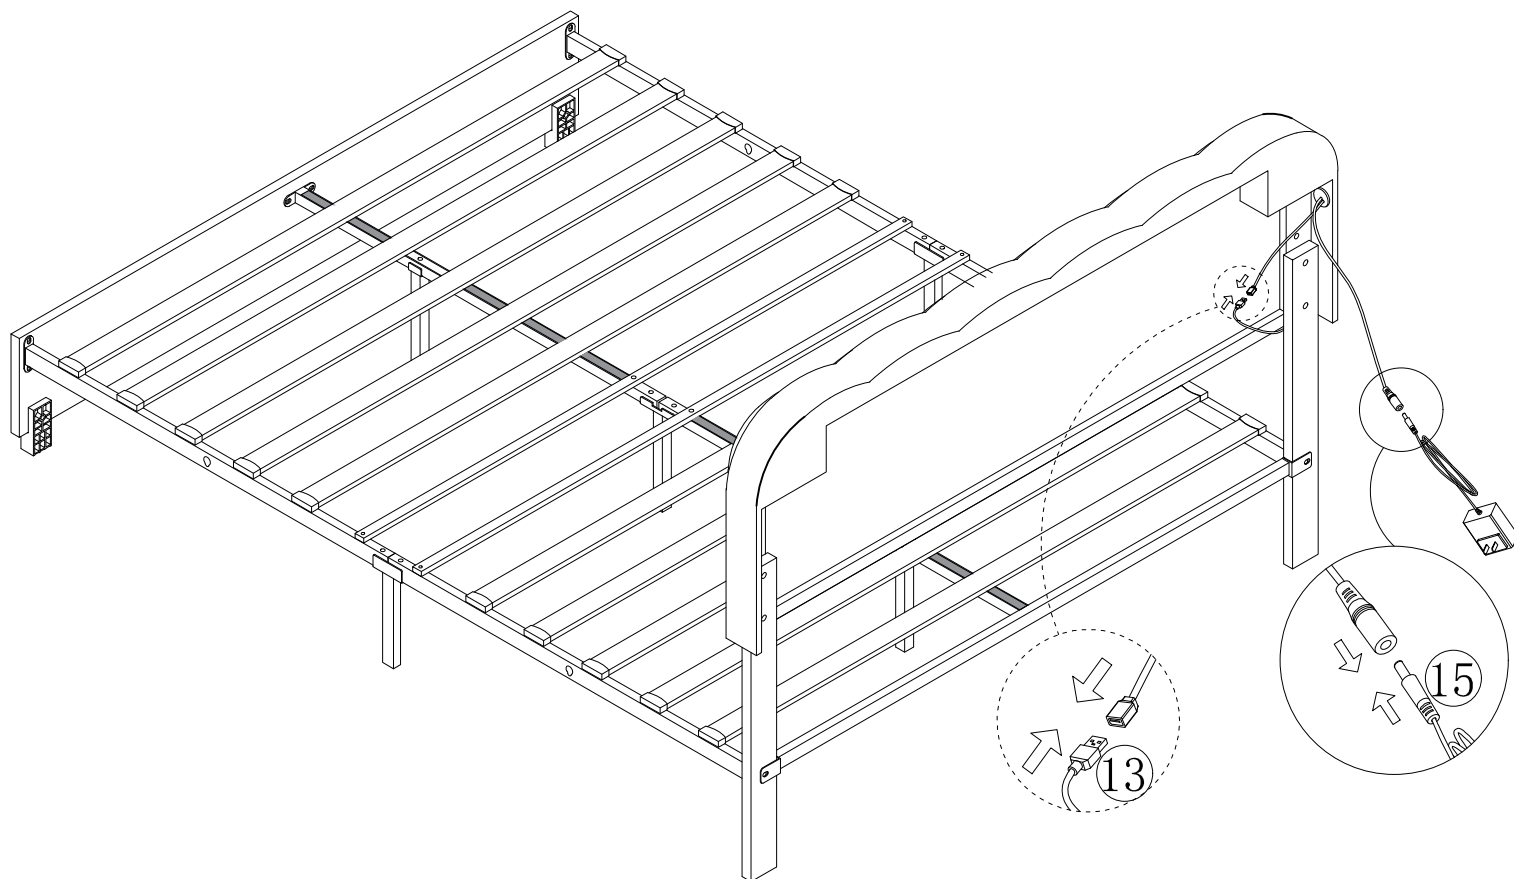

Step13

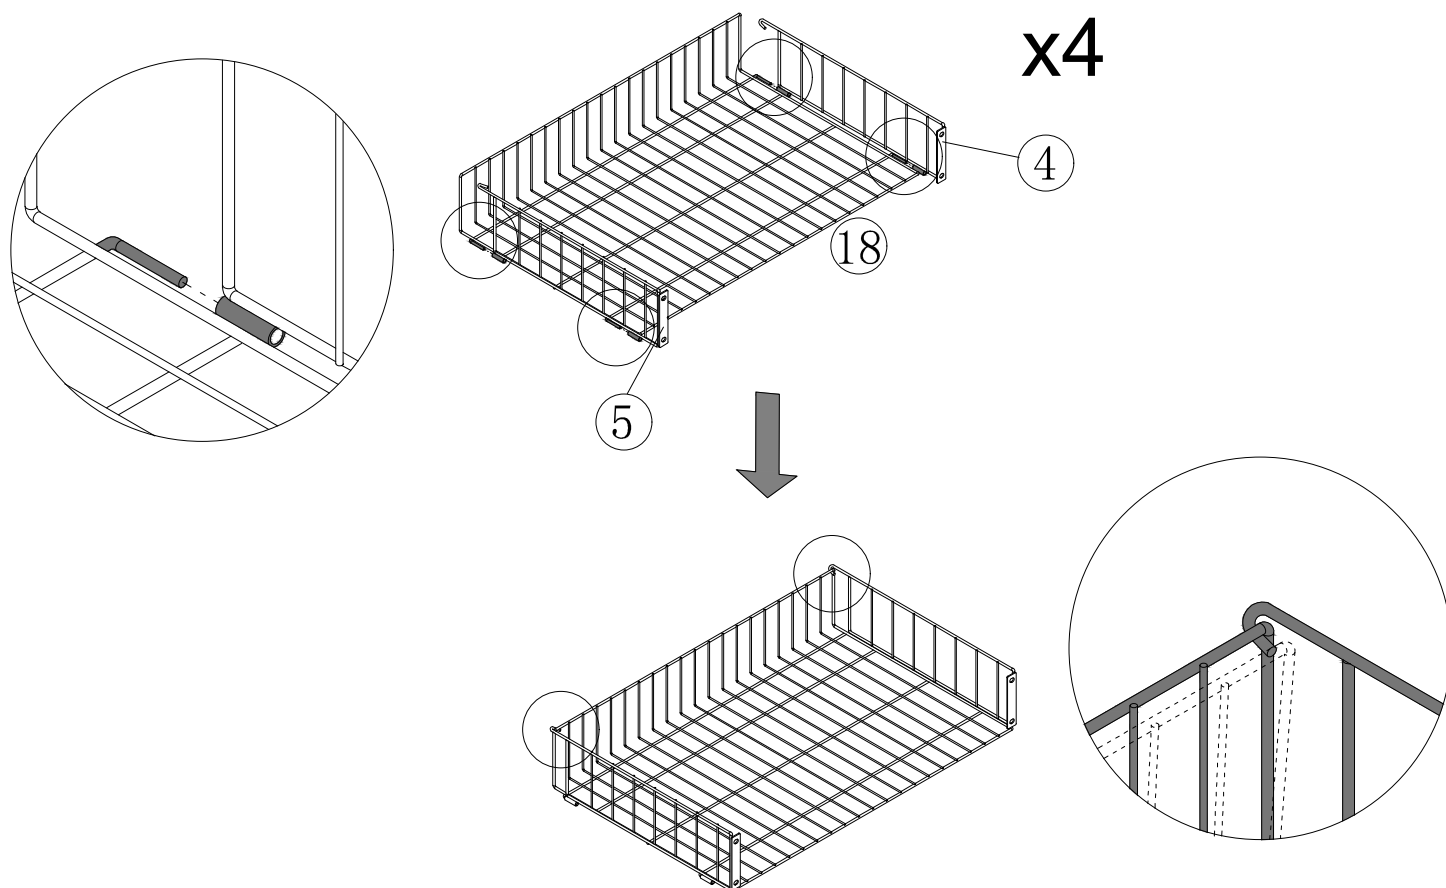

Step14

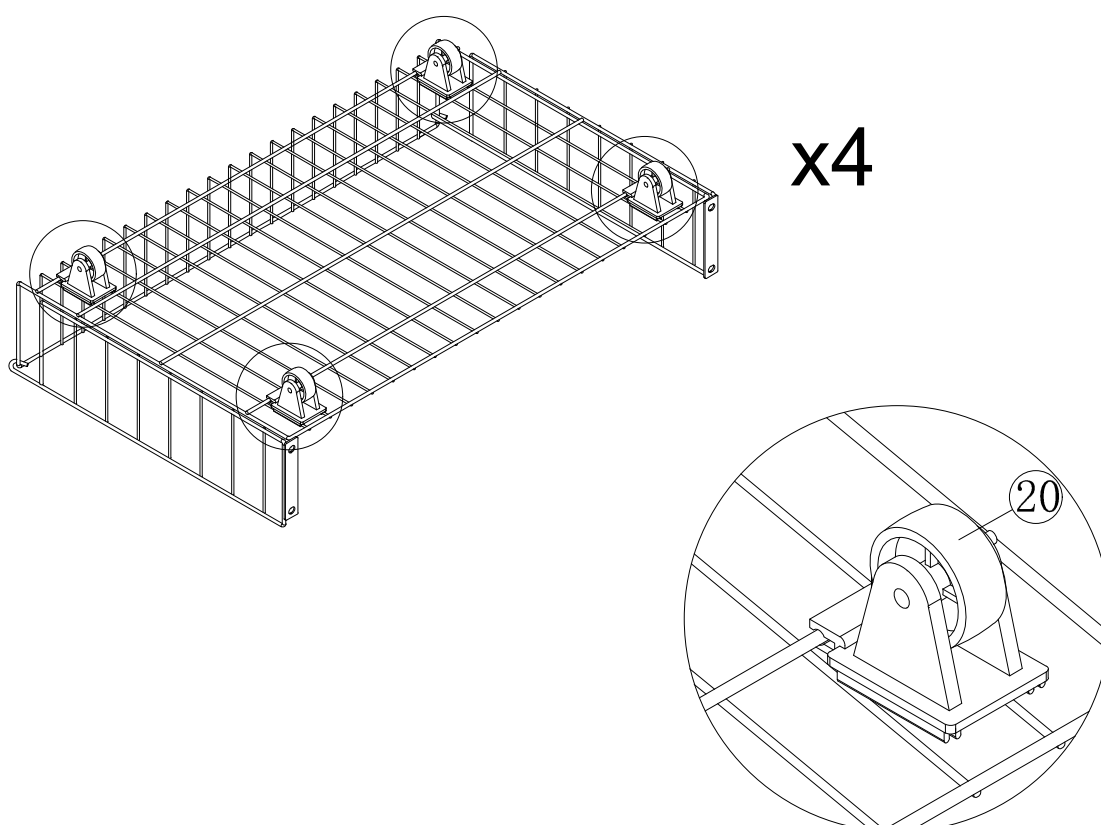



Step15

F



M6x12mm

16pcs

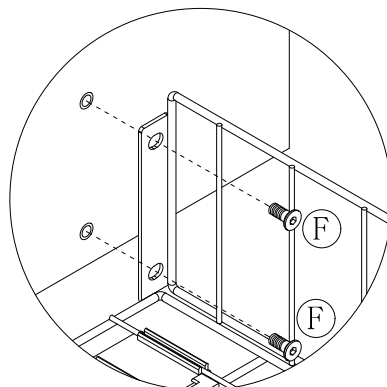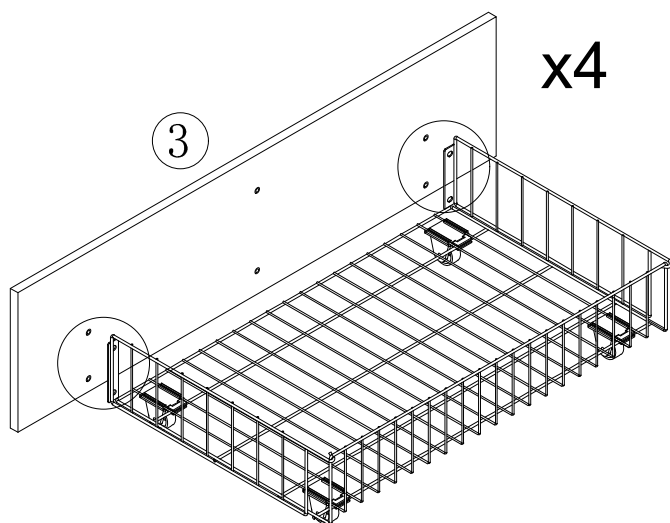

Step16

F



M6x12mm




4pcs

G




M8x18mm


4pcs

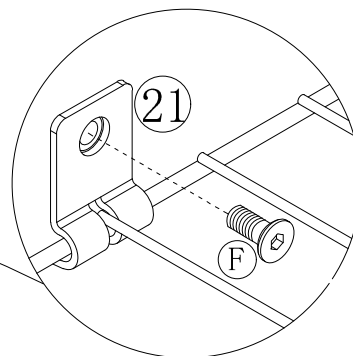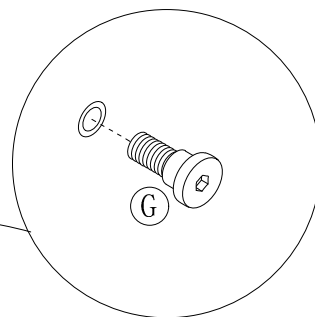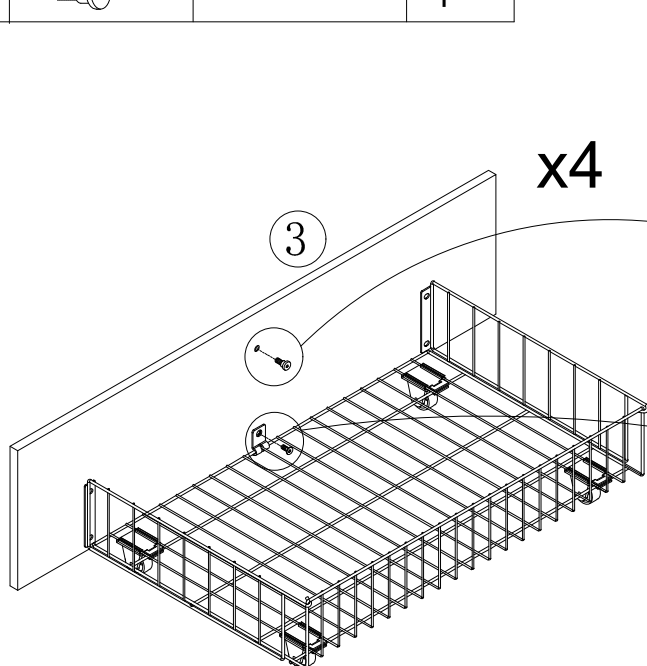

Step17

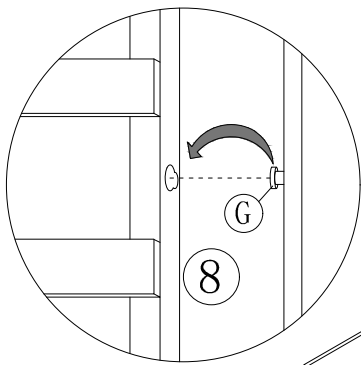

Please hang component (G) in the hole of component (8).

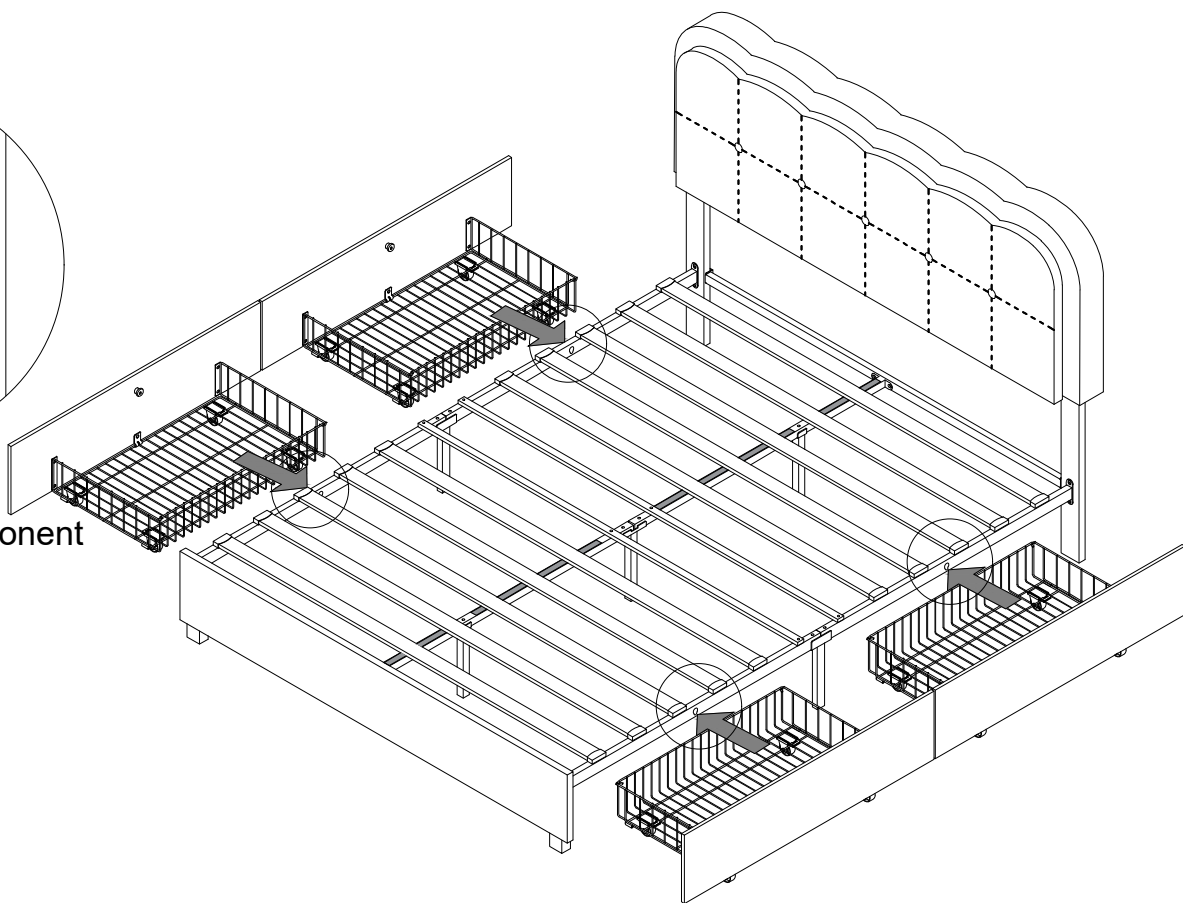

Step18

