

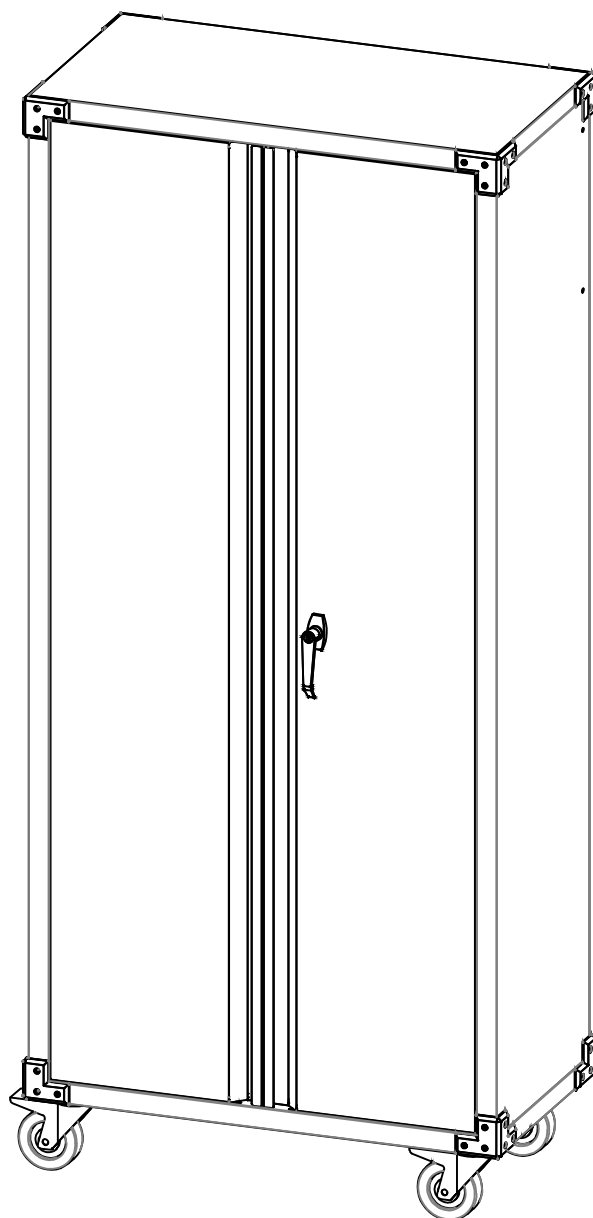
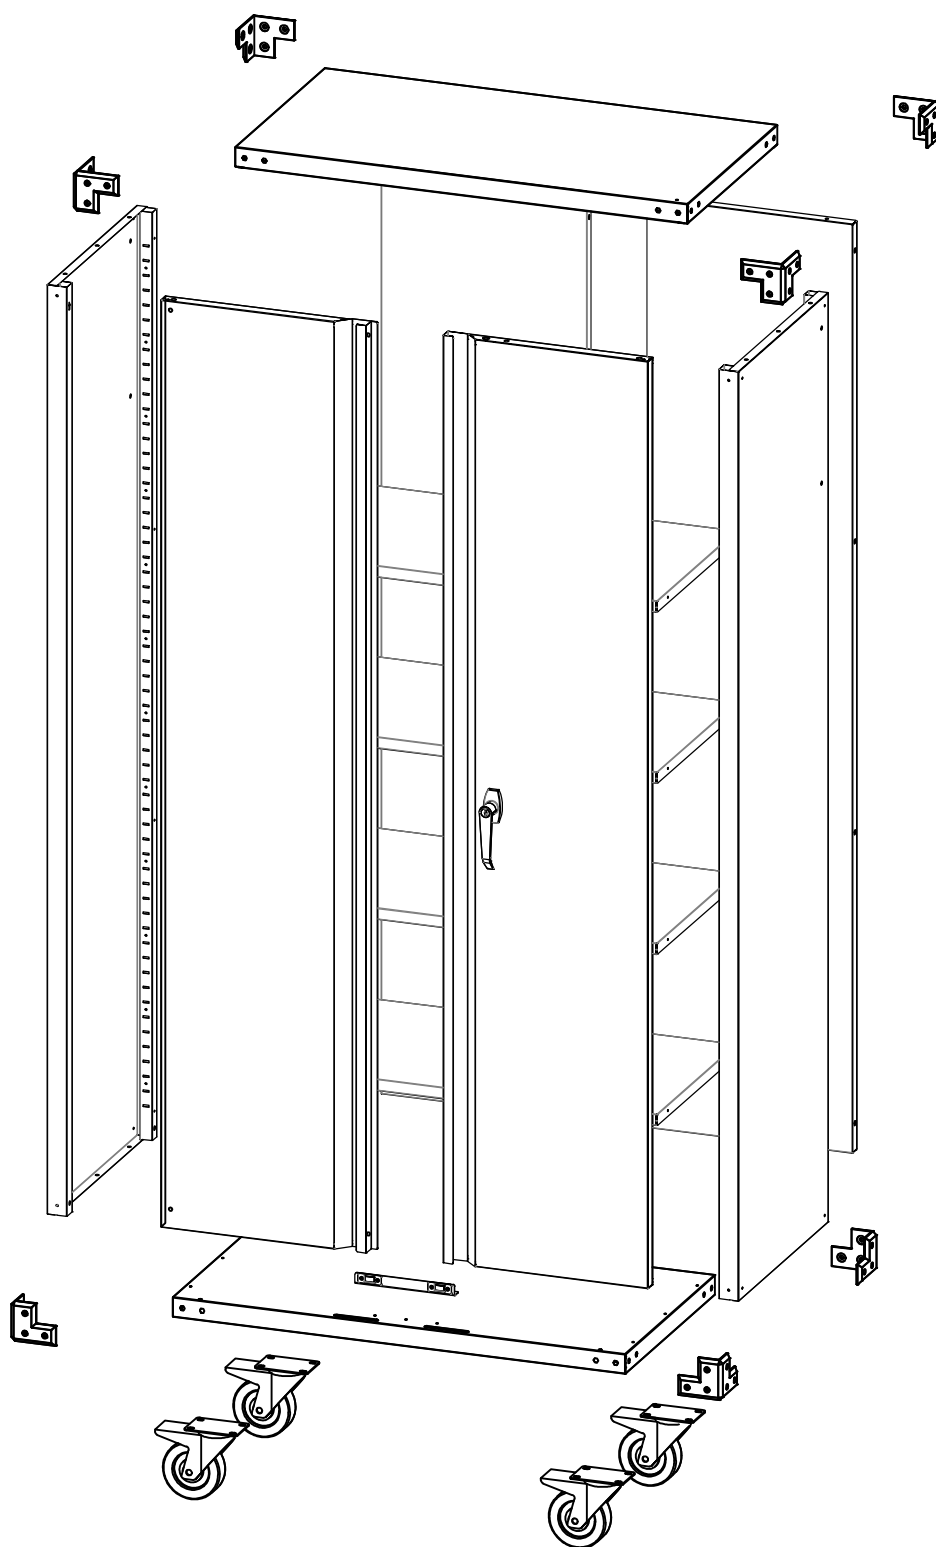

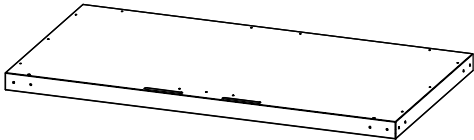
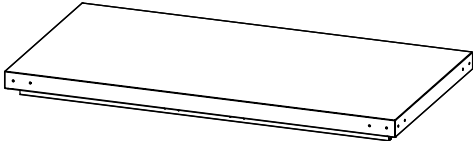
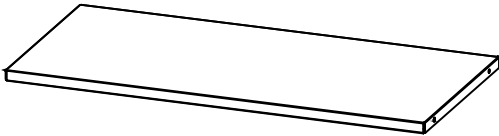


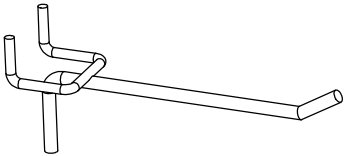
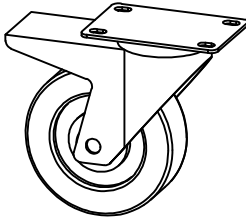
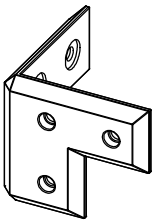










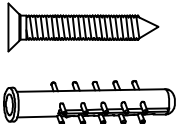


A Left side panel	1PC	B Right side panel	1PC
			
C Bottom panel	1PC	D Top panel	1PC
			
E Back panel	2PCS	G Shelf	4PCS
			

H	Right door	1PC	I	Left door	1PC
					
J	Hook	4PCS	K	Castor	4PCS
					
L	Corner protector	8PCS	M		1PC
					
N		4PCS	O	Anti-tipping strap	2PCS
					

P Shelf clasp		16PCS	Q ₂ Handle lock		1PC
					
R		50PCS	S		20PCS
					
T		31PCS	U Door pivot		2PCS
M4*10					
V Expansion screw		2PCS	W Shim		4PCS
					
Including 2 spare lock rod sleeves (Already pre-installed)			X Lock rod		2PCS
					


Step 1

S




16PCS

Install the castors (K) on the bottom panel (C) with screws S

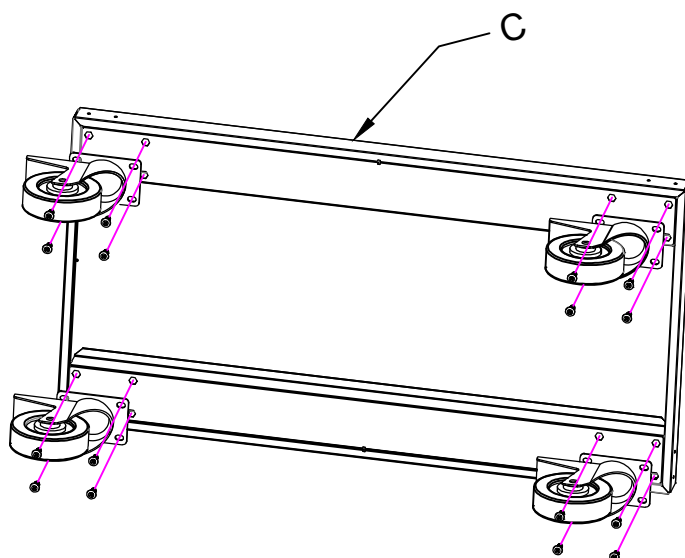

K*4

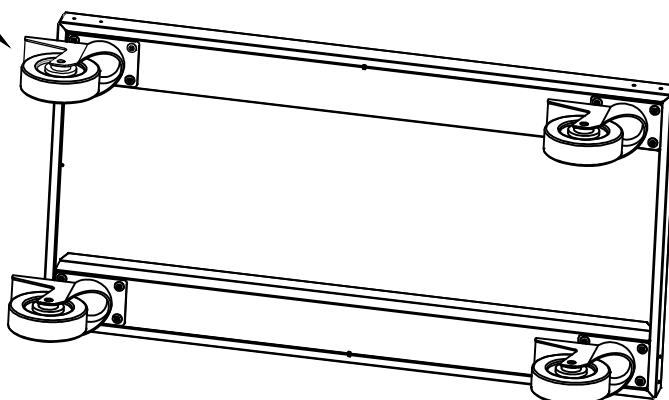



Step 2

R



32PCS

Install the corner protectors (L) on the bottom panel (C) and top panel (D) with screws R

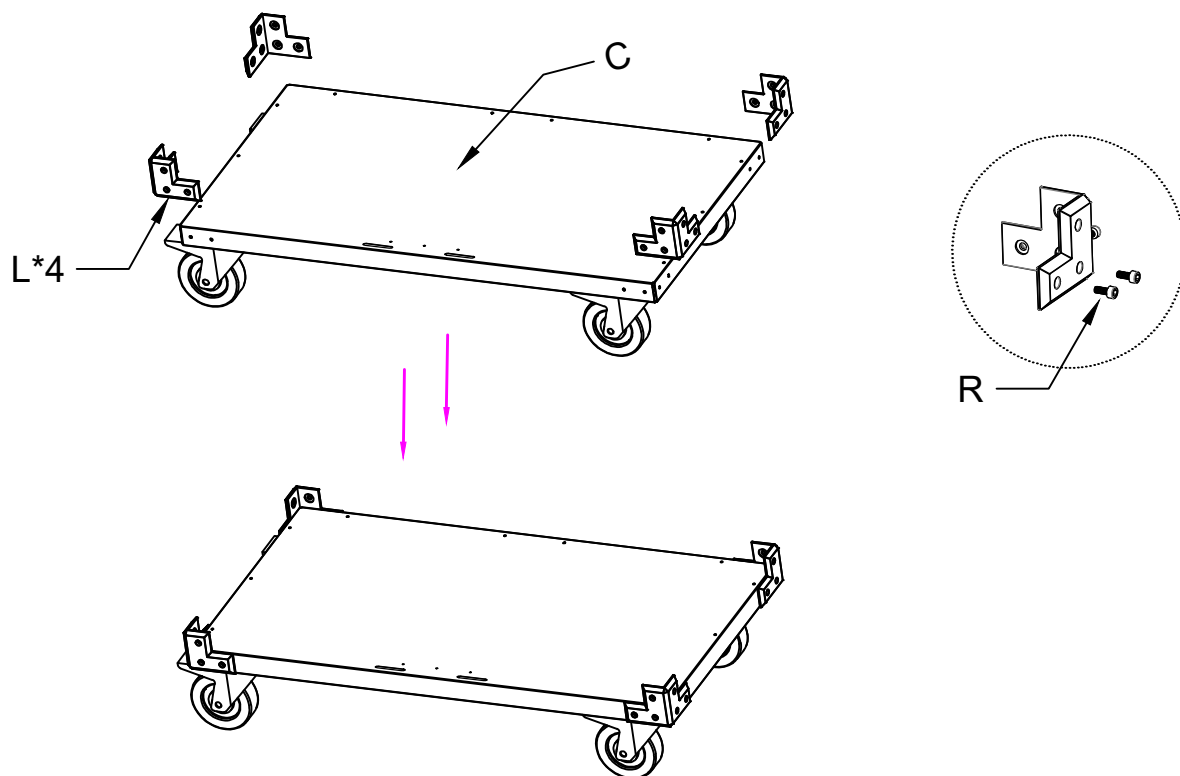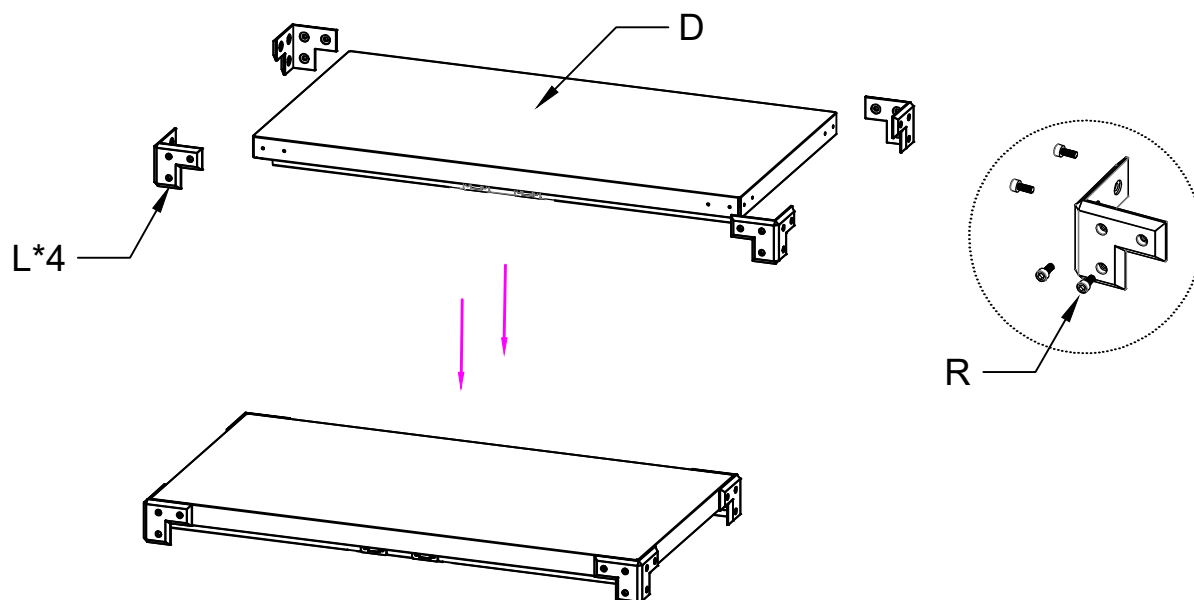

Step 3

R






8PCS

T



6PCS


Connect the side panels (A and B) to the bottom panel (C) with screws T, then fix the corner protectors with screws R

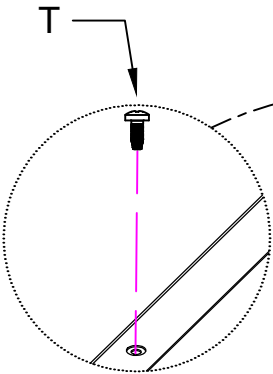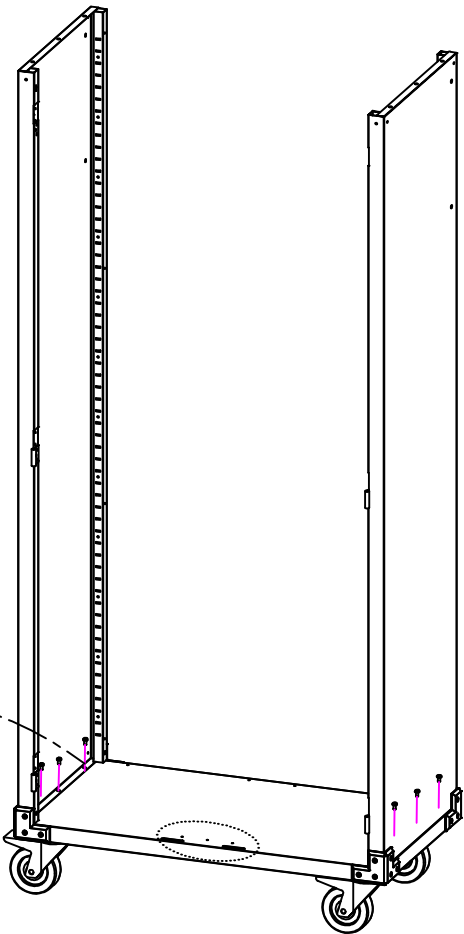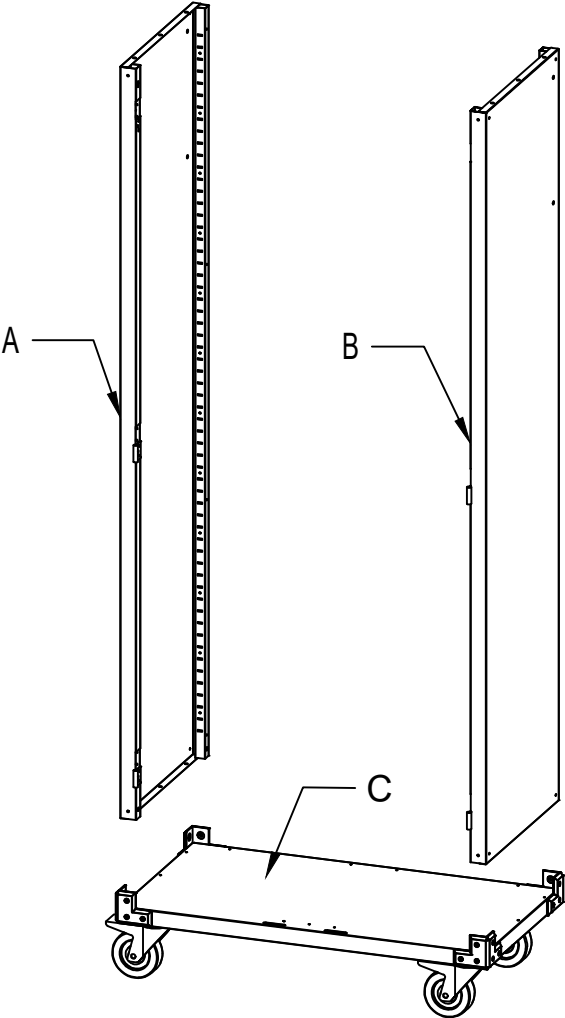


This is the front of the bottom panel

Step 4

Connect the side panels (A and B) to the top panel (D) with screws T, then fix the corner protectors with screws R

R	 	8PCS
T	 	6PCS

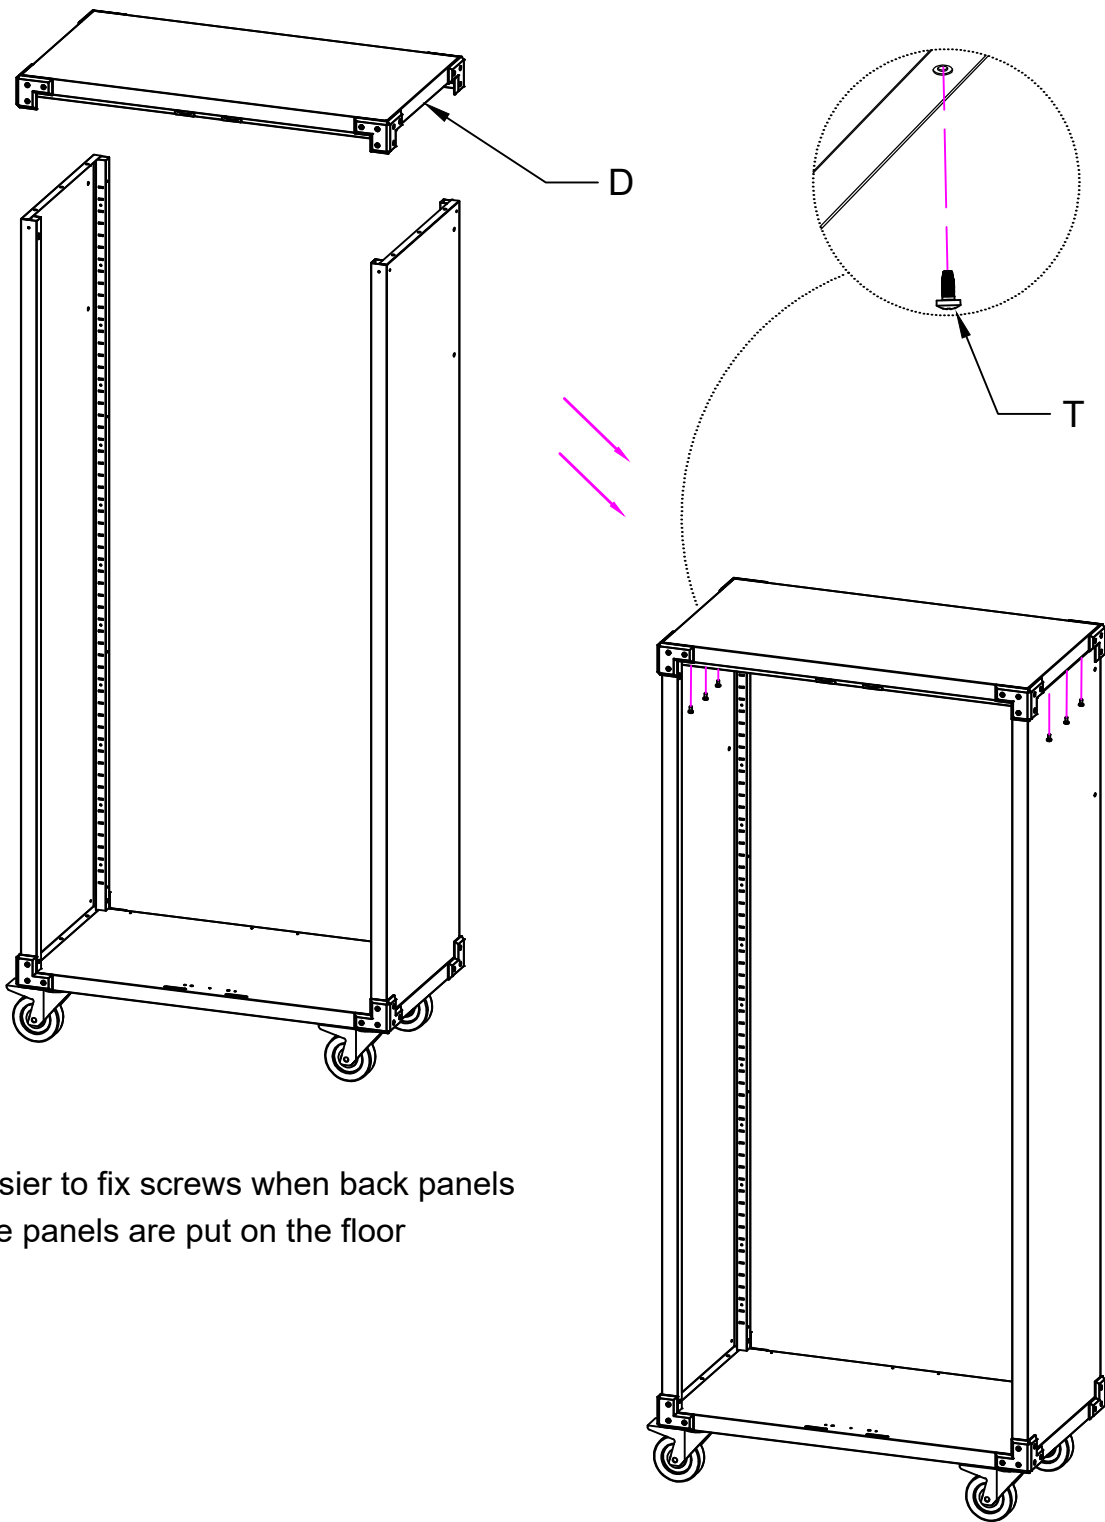

It's easier to fix screws when back panels or side panels are put on the floor




Step 5

T



3PCS

Install the magnet (M) on the bottom panel (C) with screws T

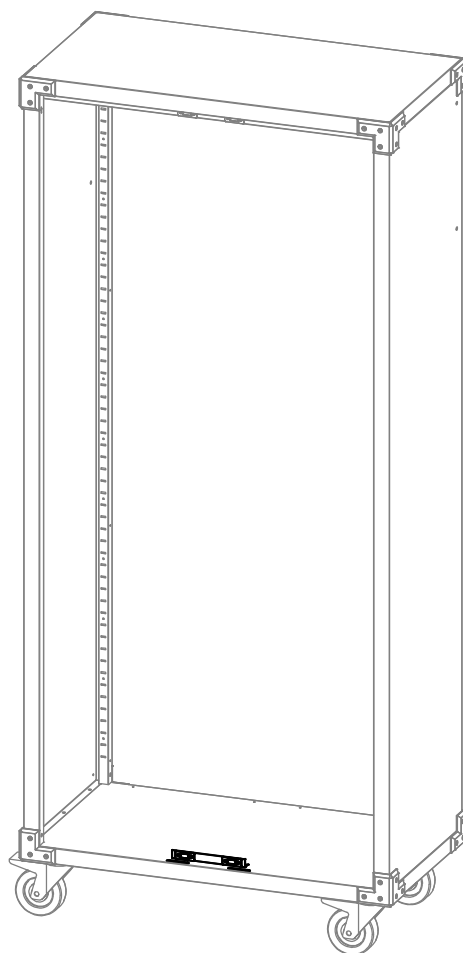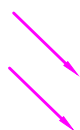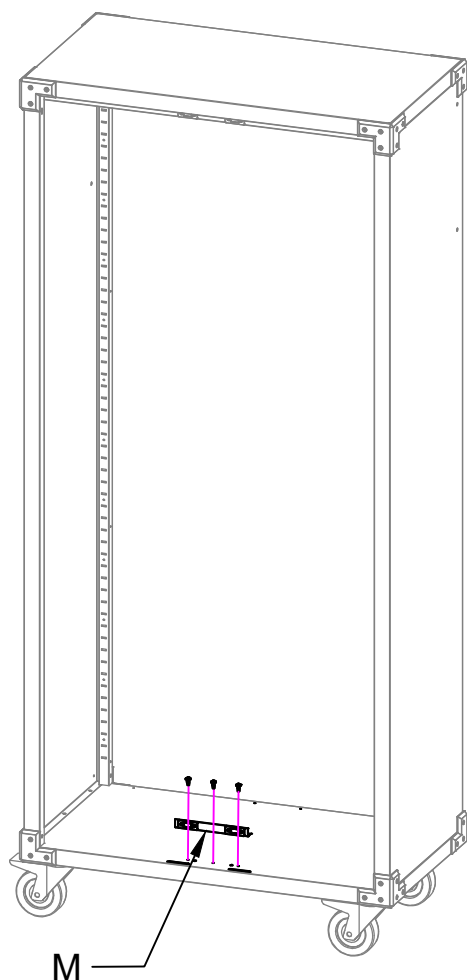


Step 6

T




16PCS


Install the back panels (E) to the side panels with screws T

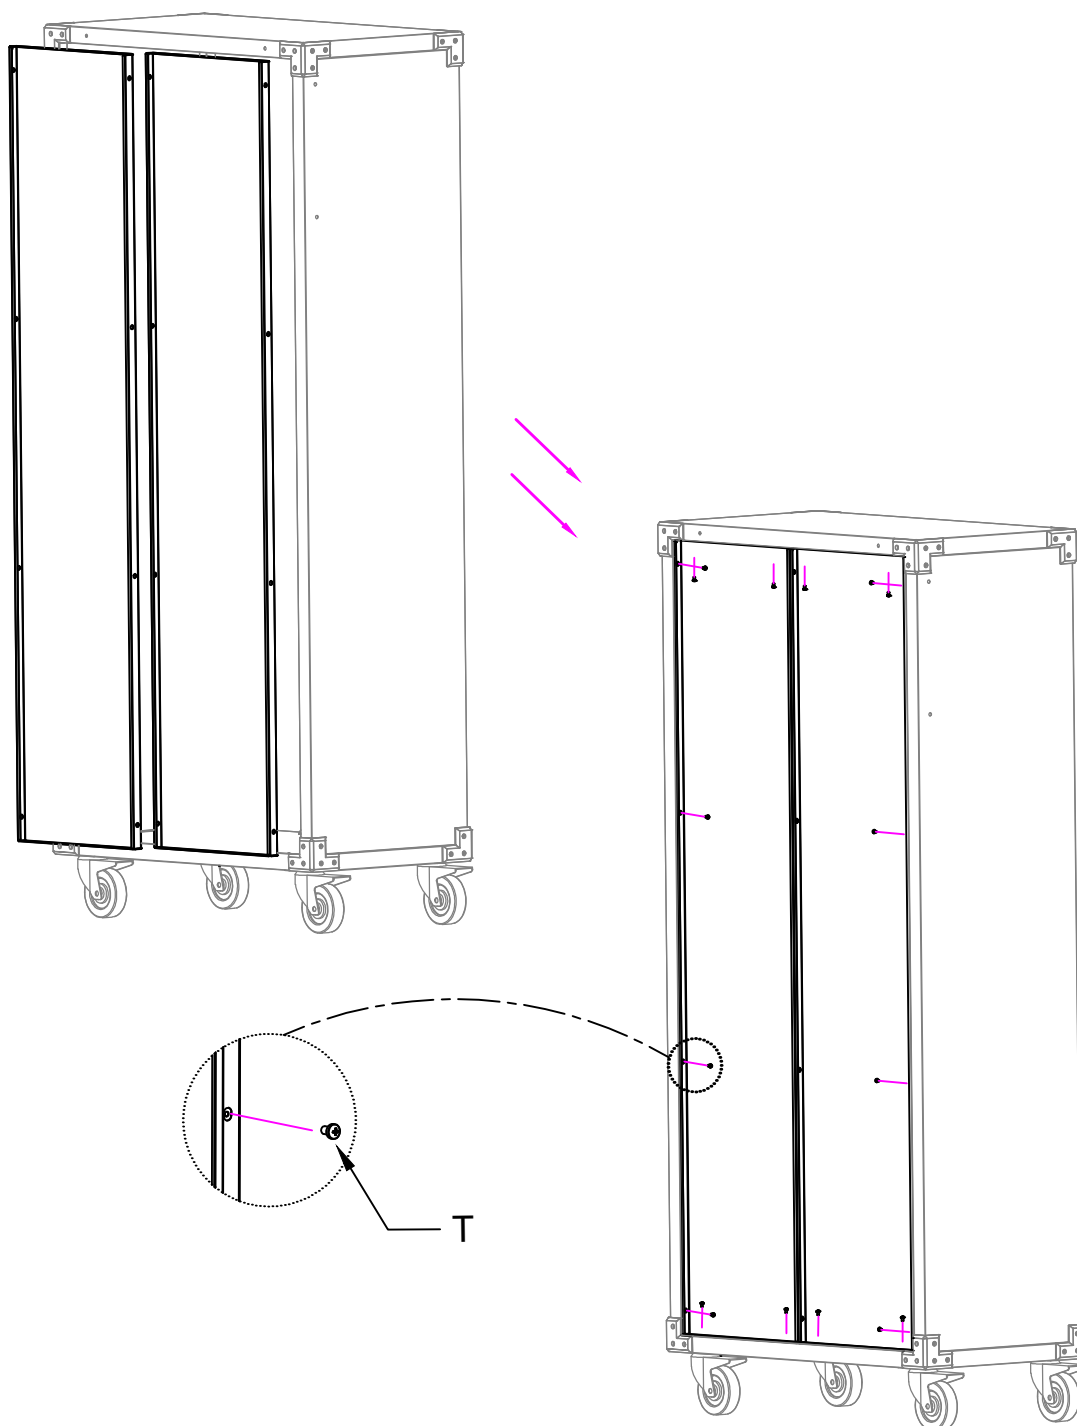

Step 7

Connect the back panels (E) with screws with S and N

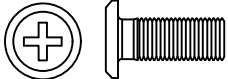S		4PCS
N		4PCS

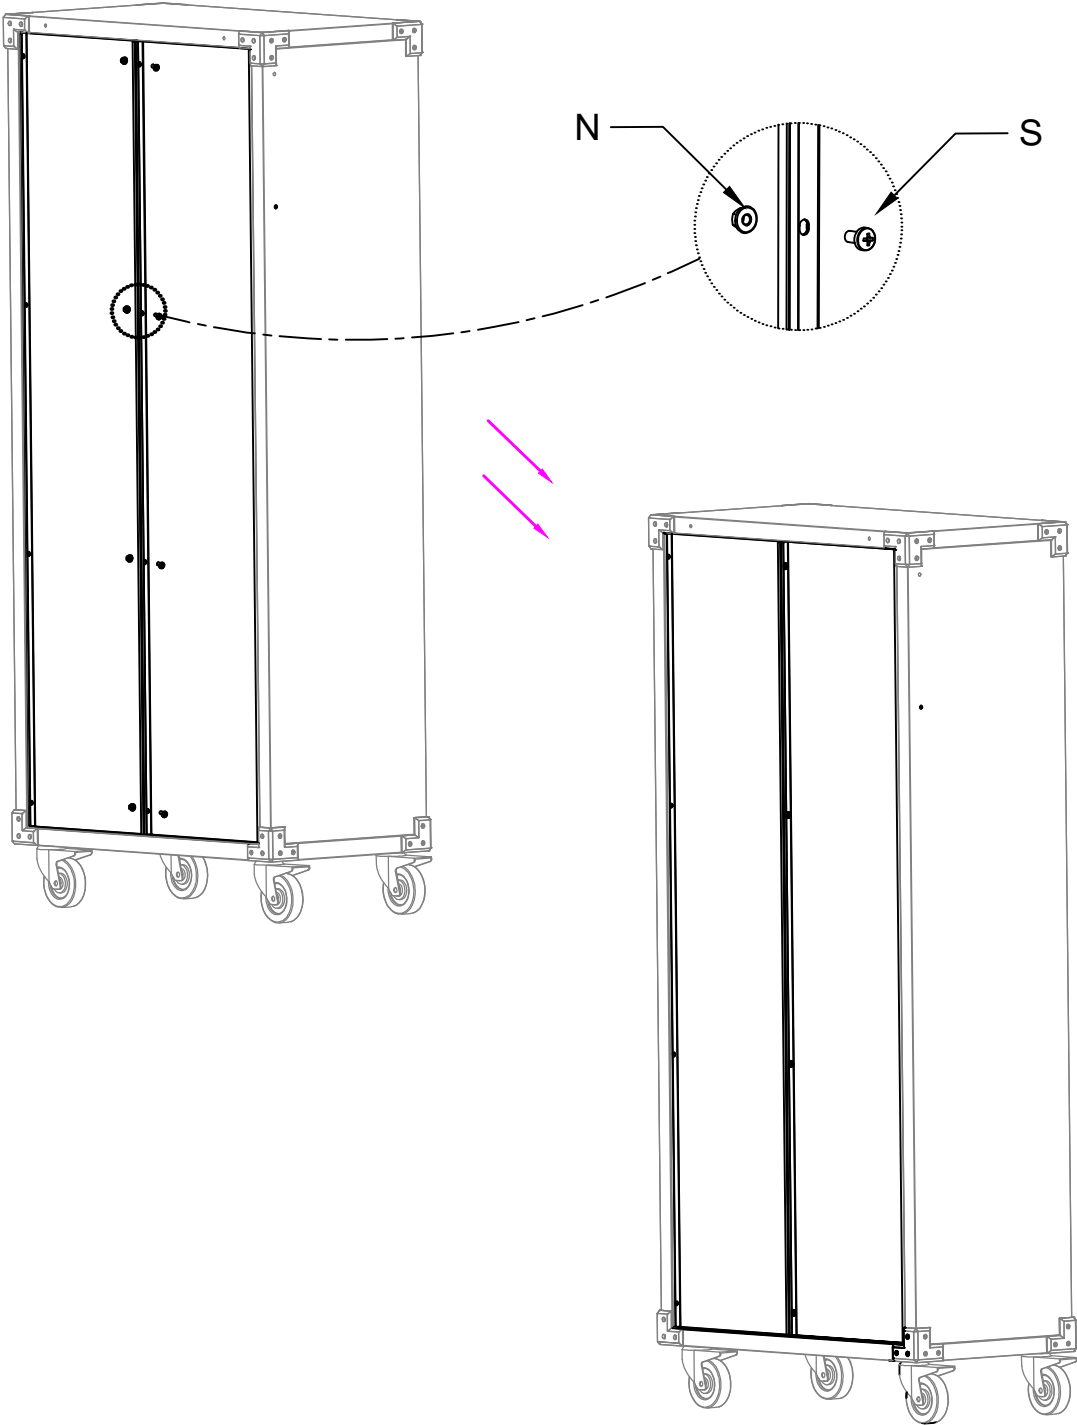


Step 8

P



16PCS

Hang shelf clasps (P) and put the shelves (G) on them

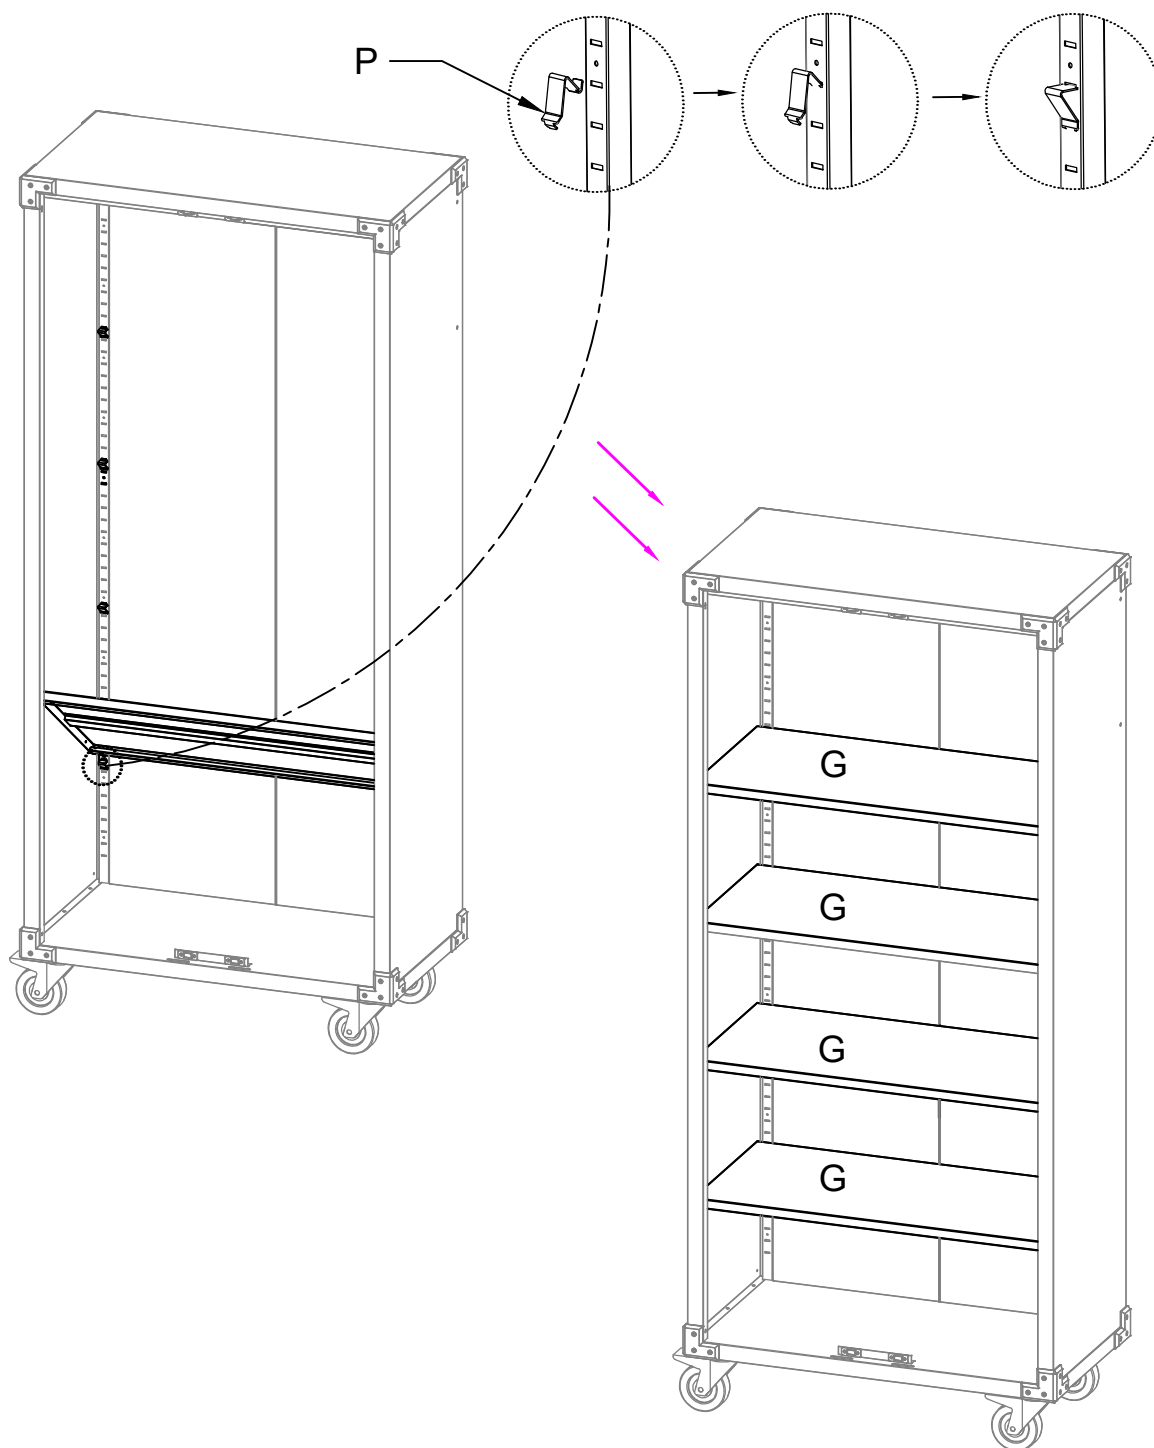

Step 9


Install lock handle (Q₂) to right door (H) and install lock rods (X)

Q₂

1PC

X

2PCS

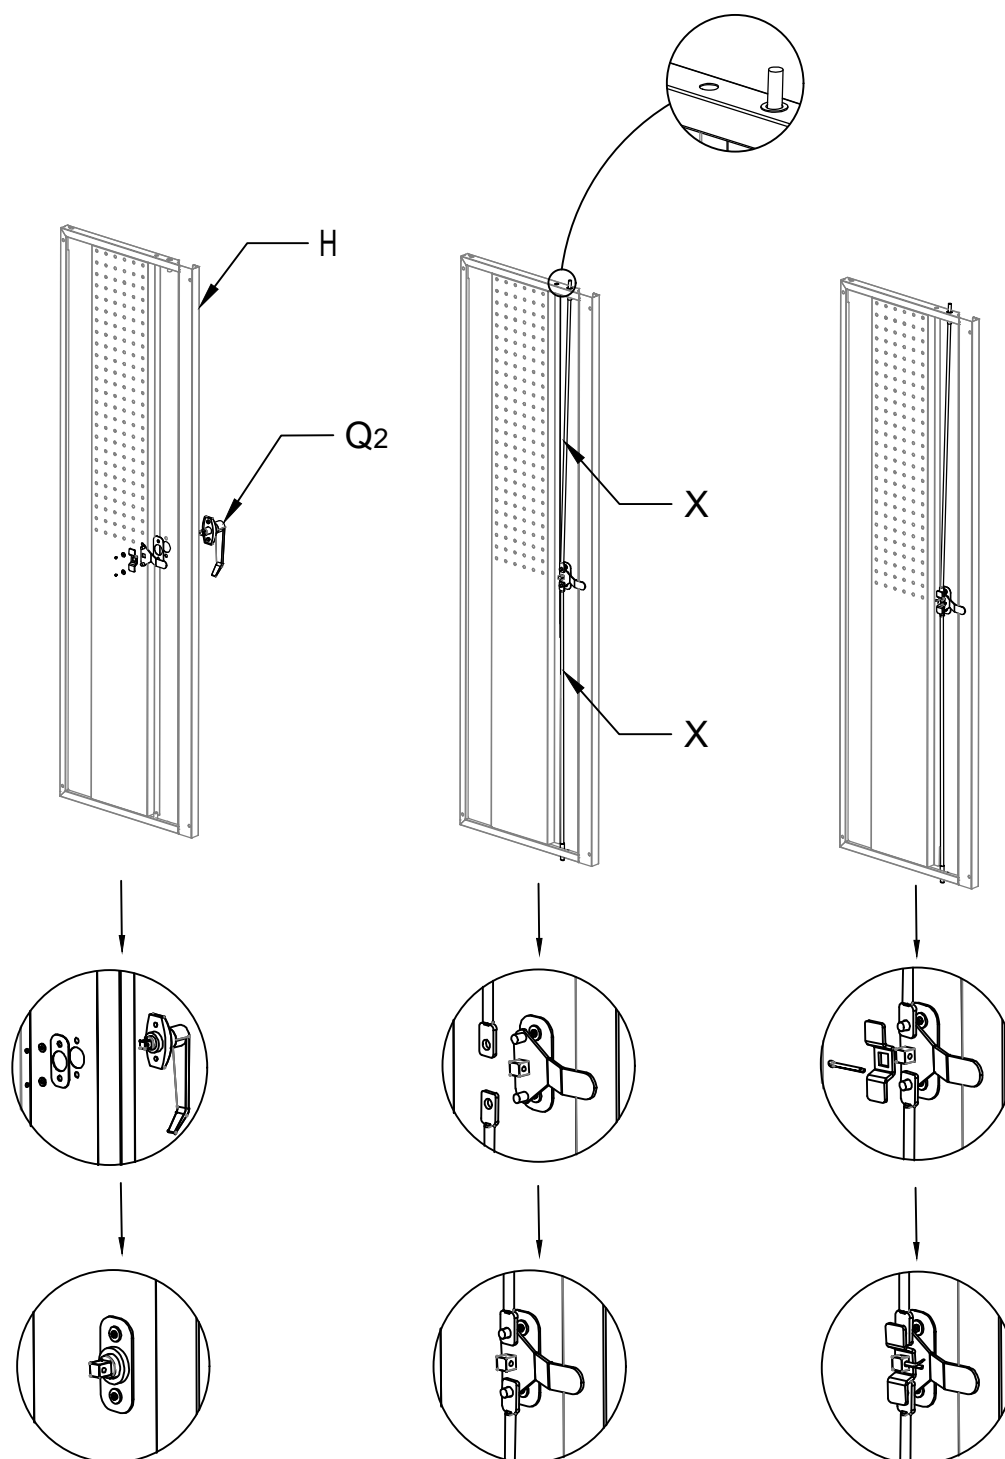

Step 10

U



2PCS

W




4PCS


Put door pivots (U) and shims (W) into the hole of each bottom corner, then insert the doors (H) and (I)

Attach the hooks (J)

J

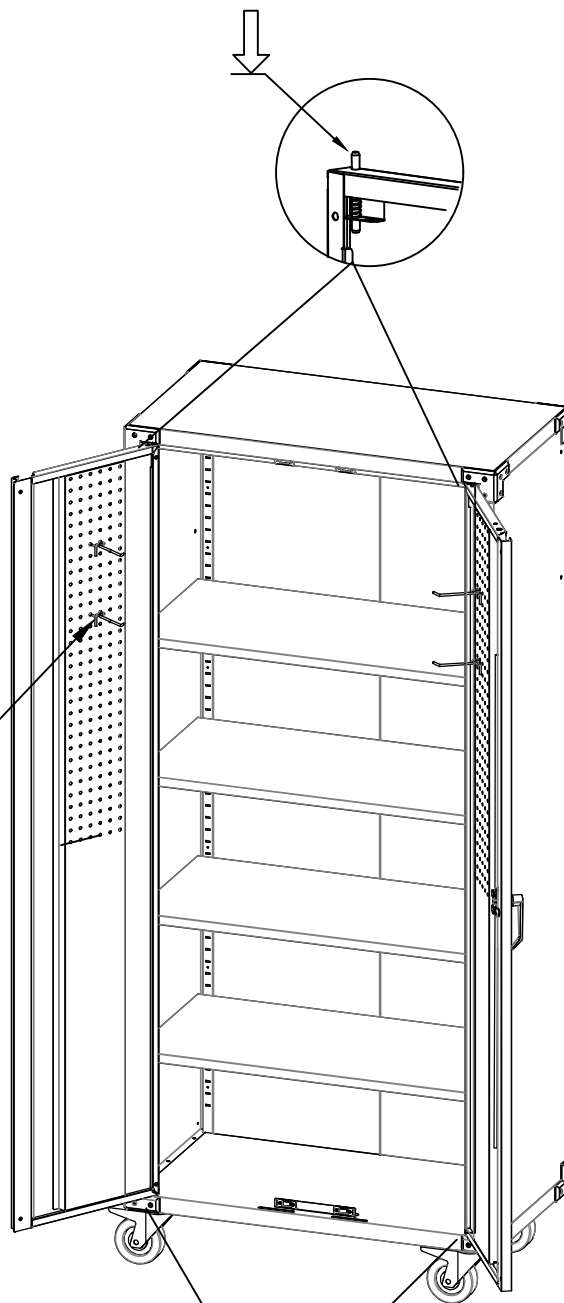


Shims are used to ensure the door work well, you can use 0 or 1 or 2 of them

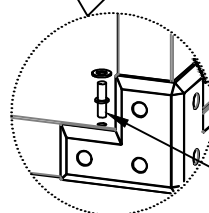

U W


Step 11

R

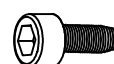

2PCS

Install anti-tipping straps (O) on the back of the cabinet with screws R

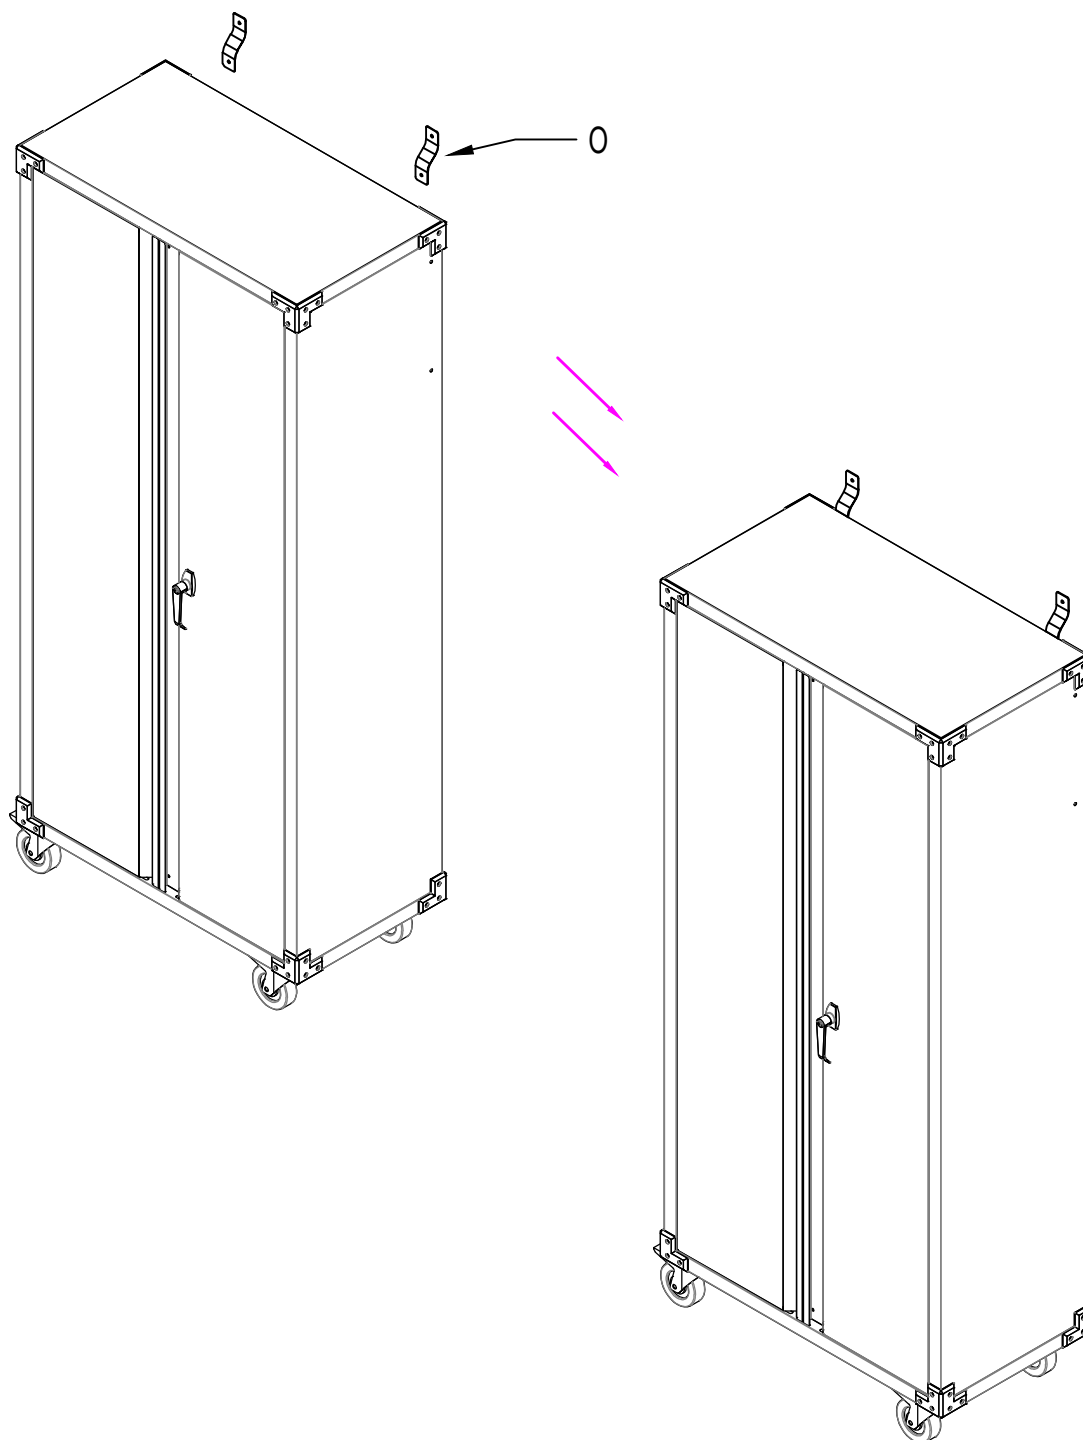


Step 12


V



2PCS

Fix the cabinet to the wall with expansion screws (V)

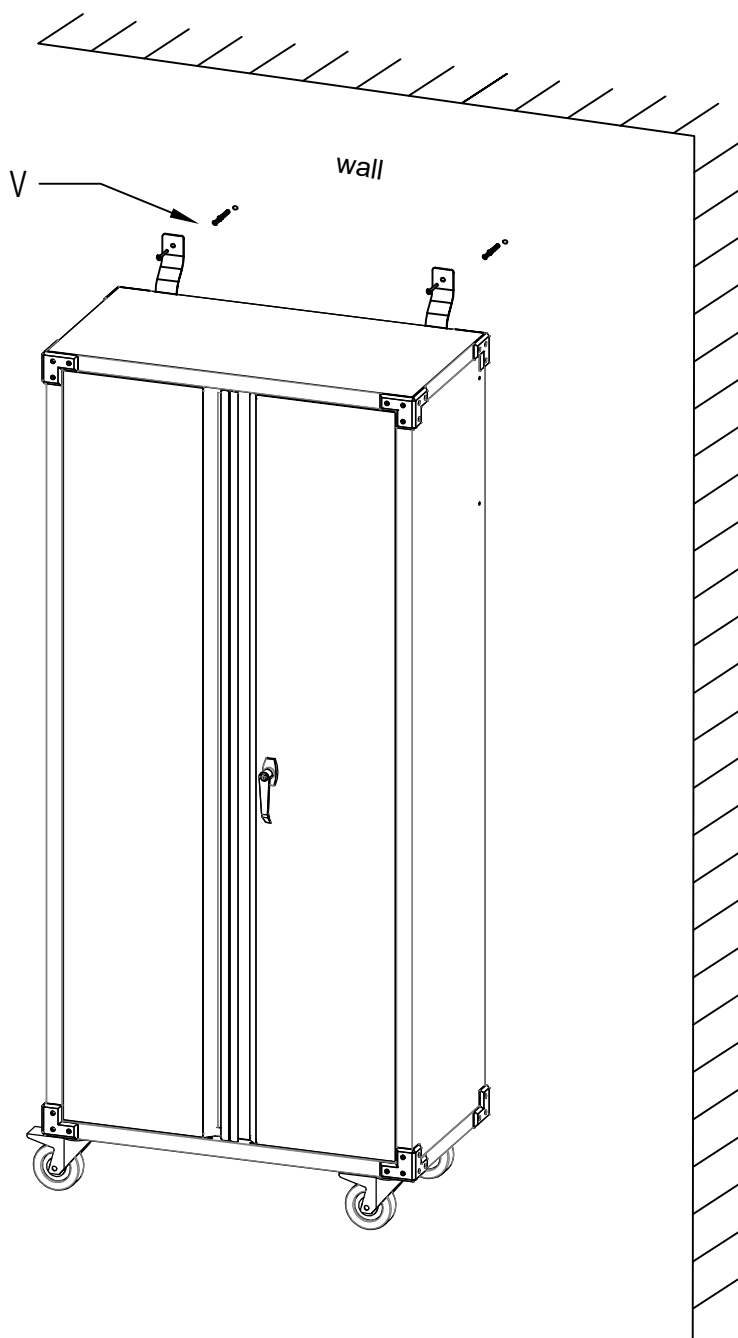

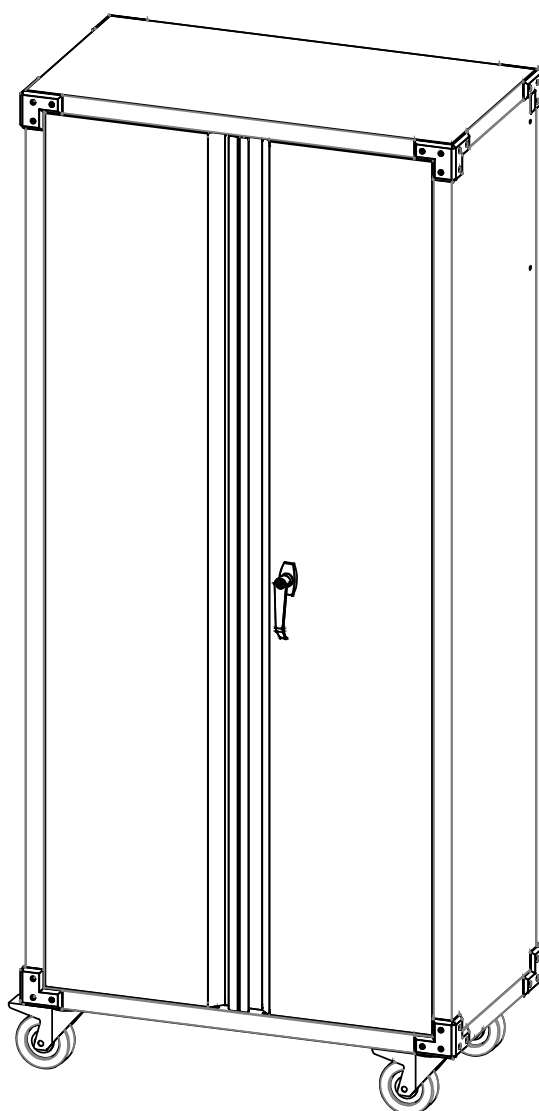

Installation Guide video