



21.6*28CM



Recliner Cover Installation Instructions

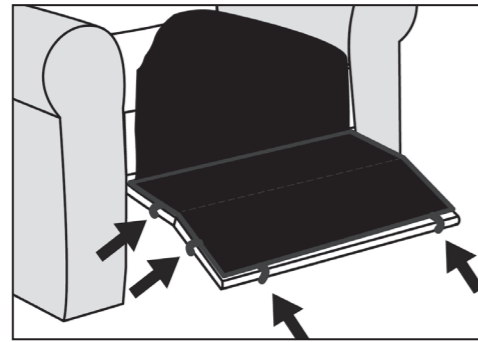


STEP 1: Raise the Foot of the recliner. Note: "FOOT" placement label on the foot area of the cover. Use the elastic to secure the foot of the cover to the raised recliner foot.

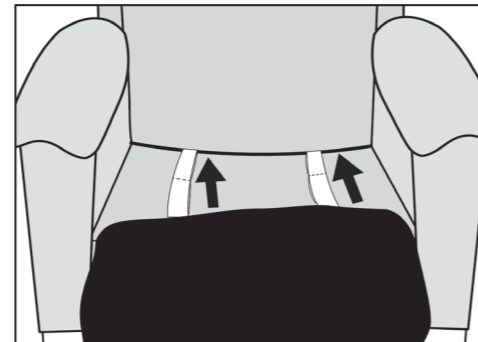

STEP 2: Locate two elastic straps on the under side of the recliner cover. Insert the straps through the area behind the seat cushion/in front of the recliner back.


STEP 3: Having pulled the elastic through, use the elastic loops to secure cover as shown. The 15" elastic has three loop sizes, select the loop that best fits your recliner. Attach the loop to the feet of your recliner as shown depending on the style of your recliner. There are two styles -Non La-Z-Boy and La-Z-Boy

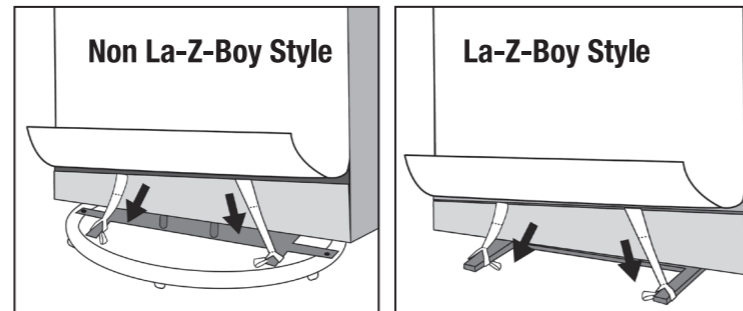


STEP 4: Flatten and smooth the seat area of the cover.

STEP 5: Attach the back of the recliner cover using the upper attached elastic straps. Select the buttons and button holes that work best for your size recliner.

There are two elastic straps on each side of the flap with two buttons on each strap. Note the "BUTTON HOLE" placement label guide on the back flap and there here are four button holes on each side for a custom fit

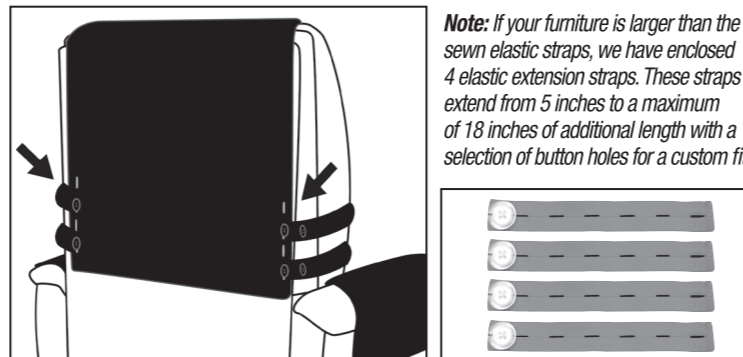



STEP 6:
a) Separate the No-Slip Arm Flap from the larger arm cover flap.
b) Fold the No-Slip Arm Flap in half, into a V-shape as shown.
c) Insert the No-Slip Arm Flap down into the space between the recliner arm and the seat cushion. Be sure to press it down all the way in as this secures the arm flap into place.

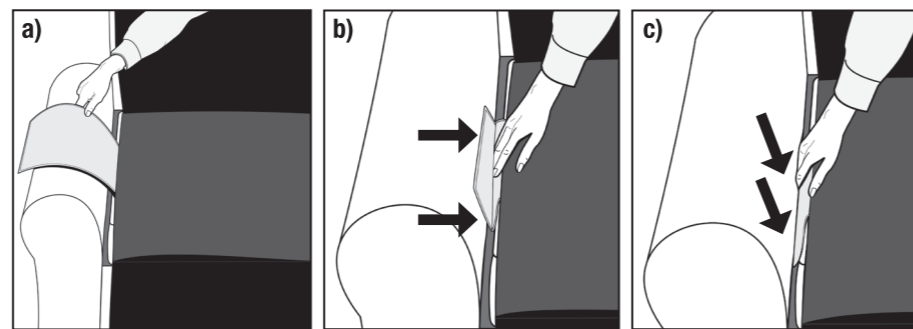



La-Z-Boy Style

Non La-Z-Boy Style



FRONT

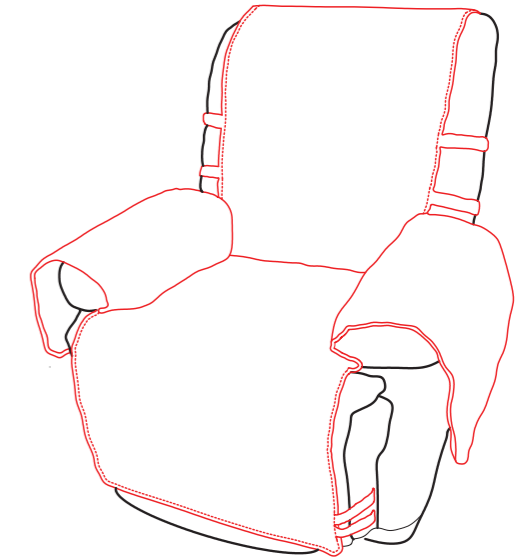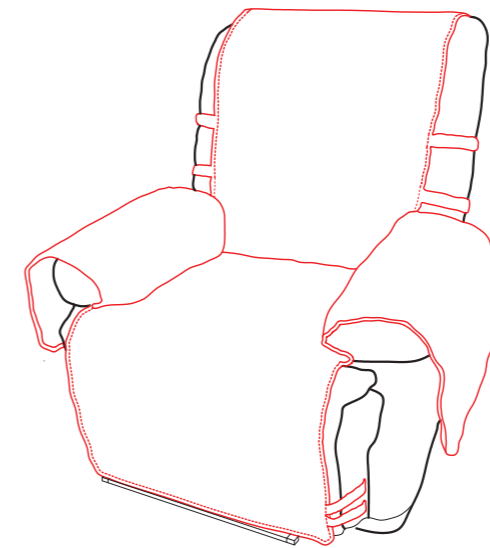

SIDE

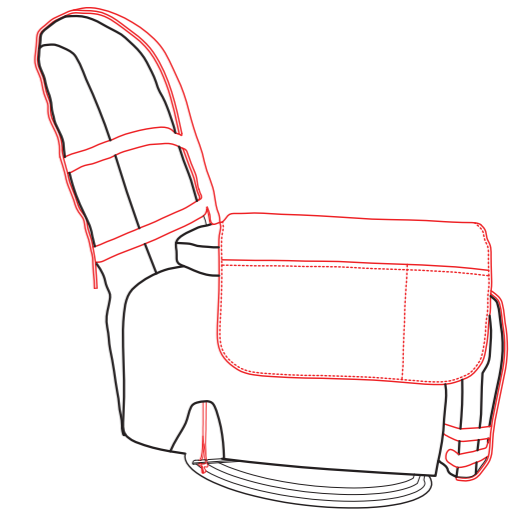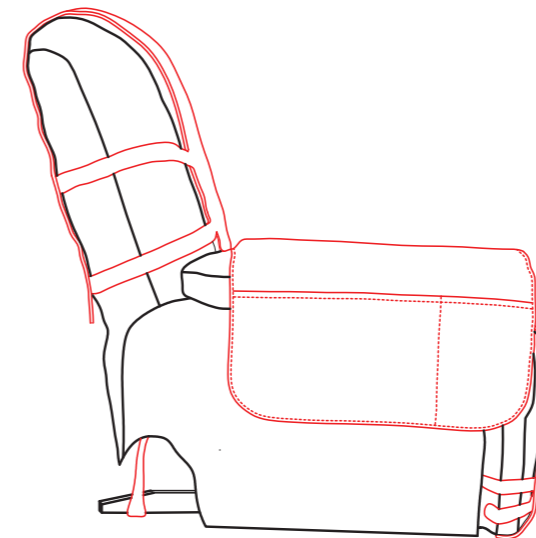

BACK

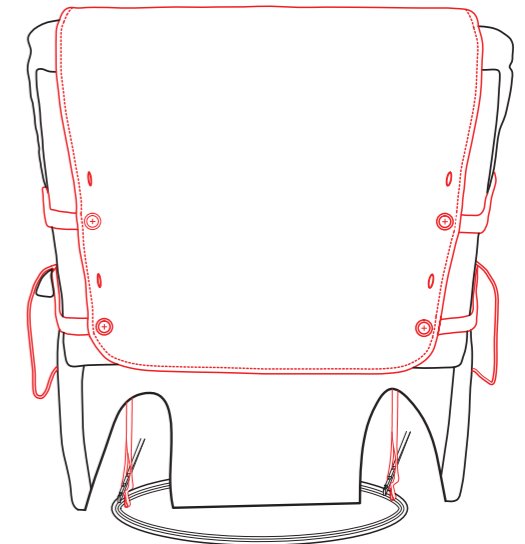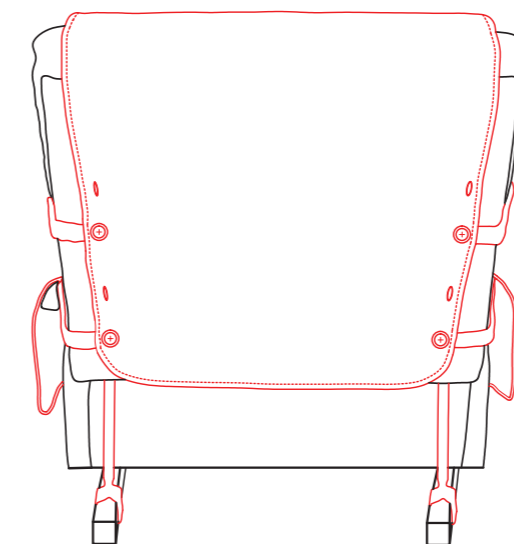

QUESTIONS?
 Email us at: contact@lchomeinc.com



QUESTIONS?
 Email us at: contact@lchomeinc.com