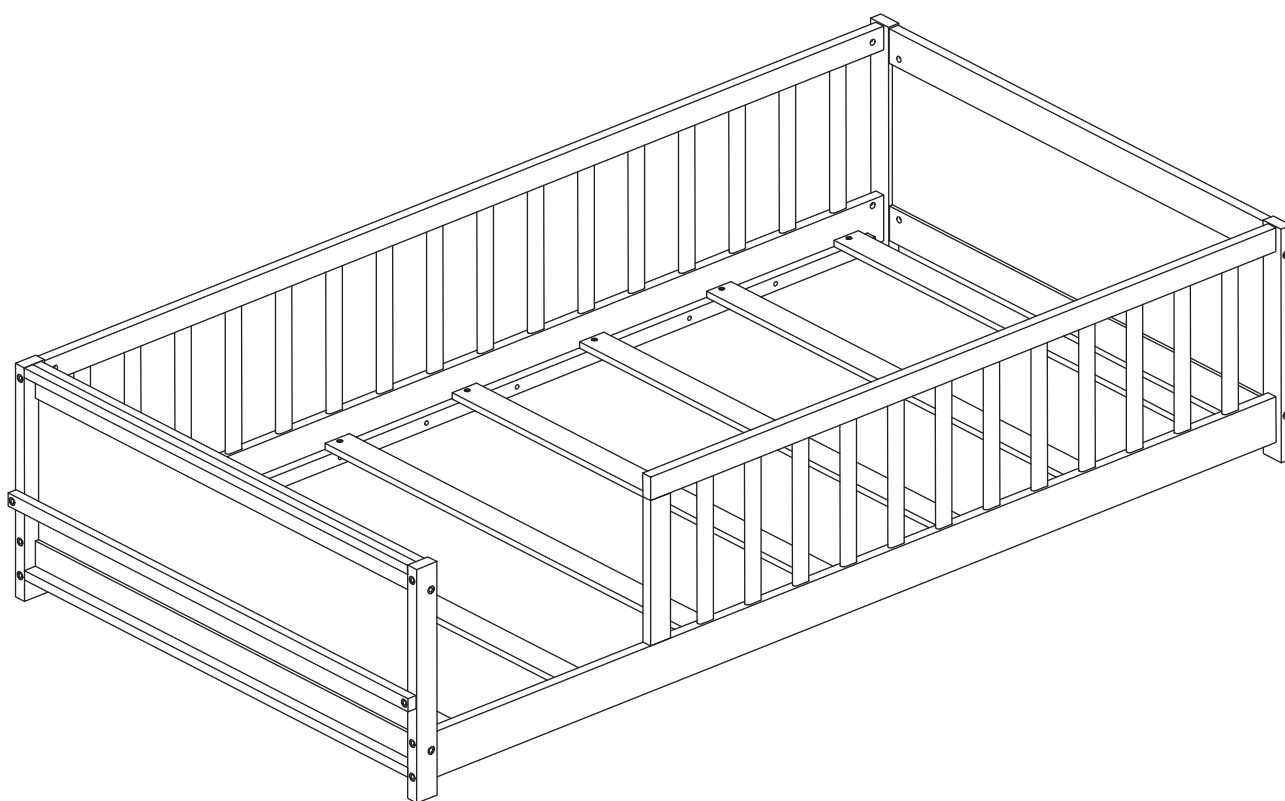
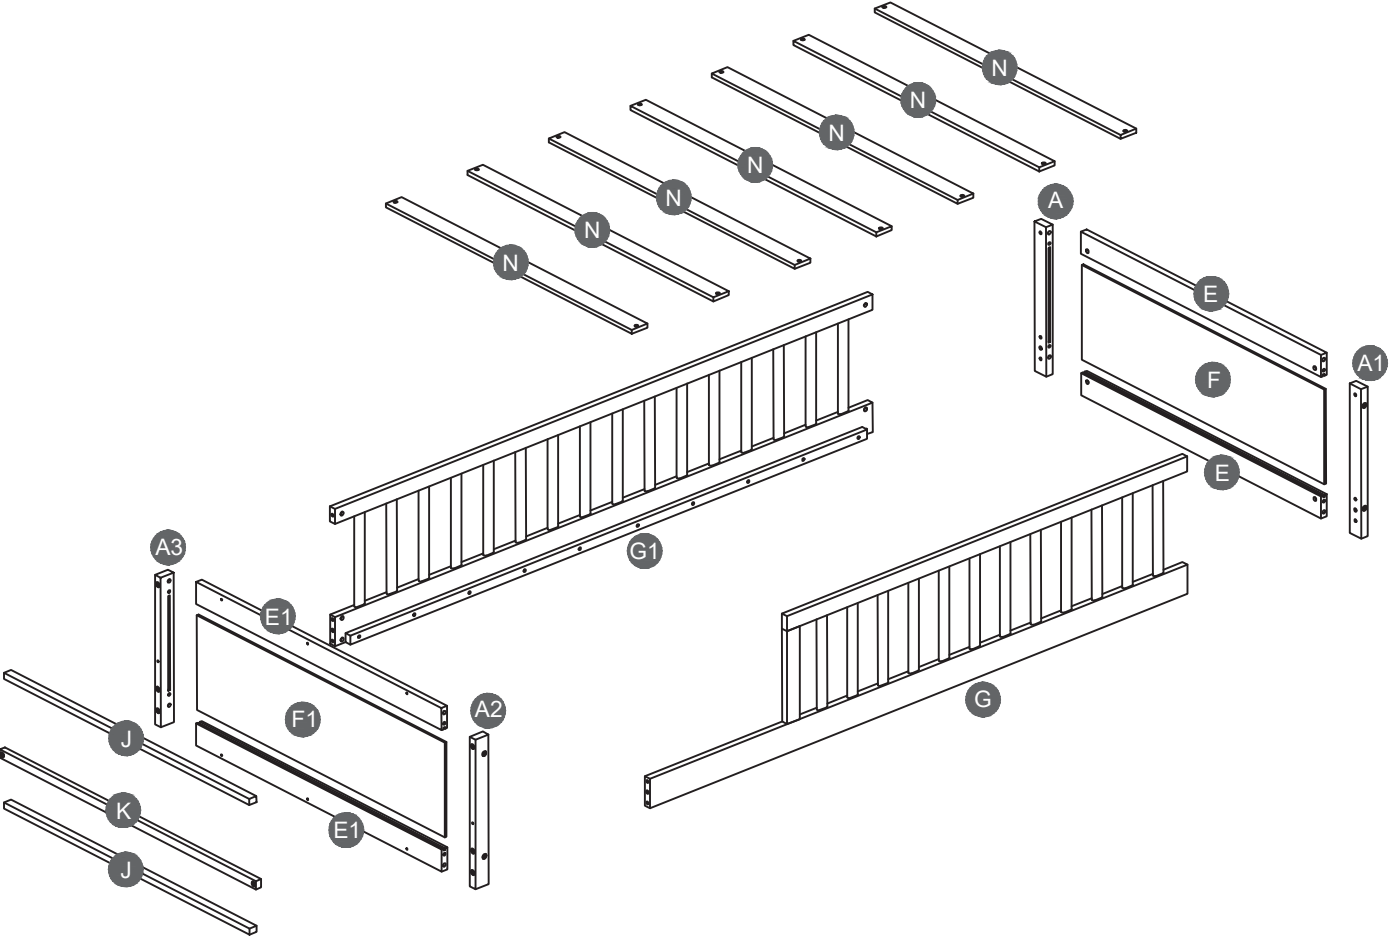


ASSEMBLY INSTRUCTIONS








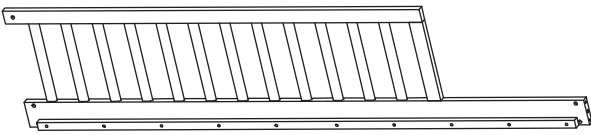
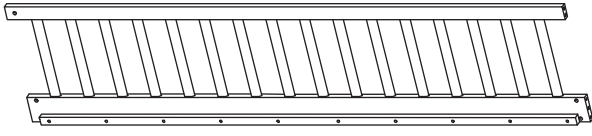

TWIN FLOOR BED WITH BOOK SHELF (NO DOOR)





Detail View




Part List

A2  Leg - 1pc	A3  Leg - 1pc
A1  Leg - 1pc	A  Leg - 1pc
E1  Fb. Panel (Top & Bottom) - 2pcs	E  Hb. Panel (Top & Bottom) - 2pcs
F1  Fb. Mid. Panel (Long) - 1pc	F  Fb. Mid. Panel (Short) - 1pc
J  Fb. Support Bar (Top & Bottom) - 2pcs	K  Fb. Support Bar (Mid.) - 1pc
G  Side Rail Front - 1pc	G1  Side Rail Back - 1pc
N  Bed Slats - 7pcs	

Hardware List


1  M6 x 80mm JCBC (9pcs)	2  M6 x 15mm Barrel Nut (19pcs)	3  M10 x 40mm Wood Dowel (12pcs)
4  Sticker Cap (2pcs)	5  M6 x 65mm JCBC (10pcs)	6  20 x 20 x 233mm Wood Block (1pc)
7  M4 x 25mm CSK Screw (14pcs)	8  M6 x 30mm JCBC-W (6pcs)	9  M6 x 30mm JCBC (2pcs)
10  M4 Allen Key (1pc)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

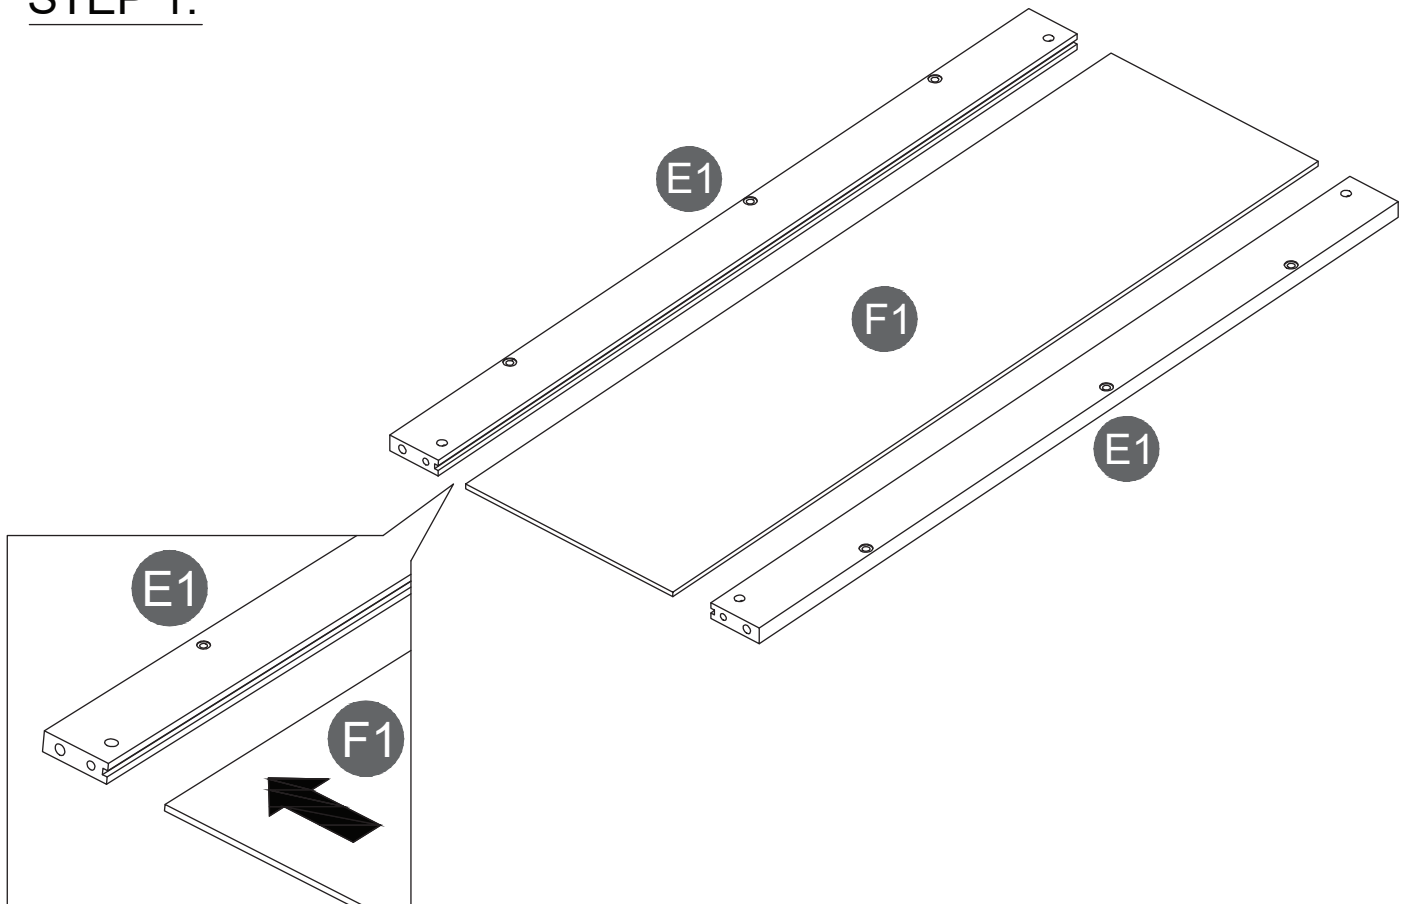STEP 1:




STEP 2:


2	3	5	8
4PCS	4PCS	4PCS	6PCS

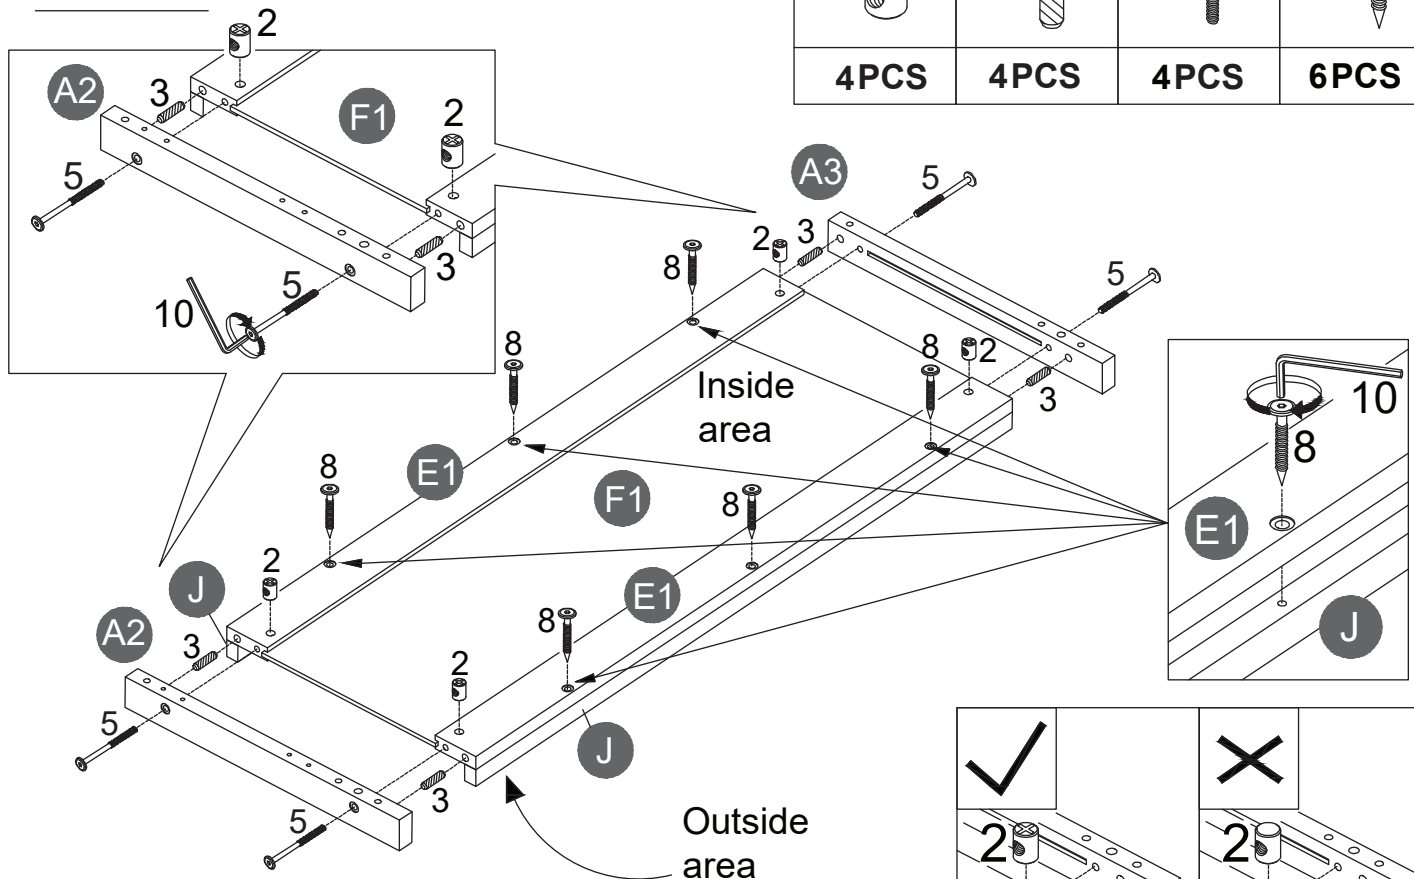

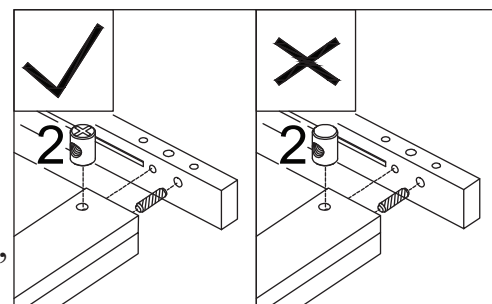
Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened



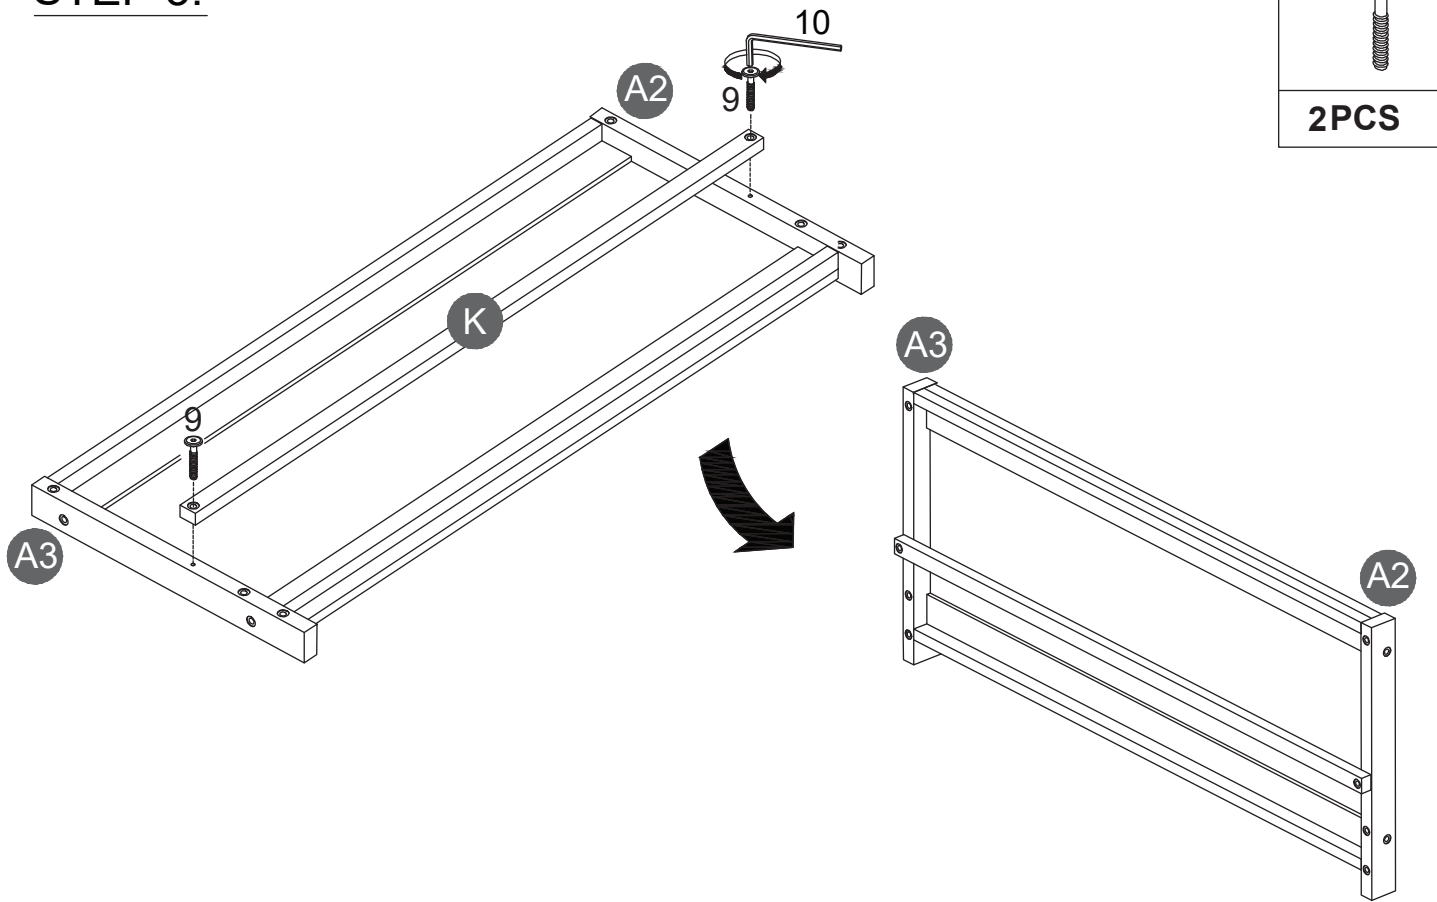
STEP 3:



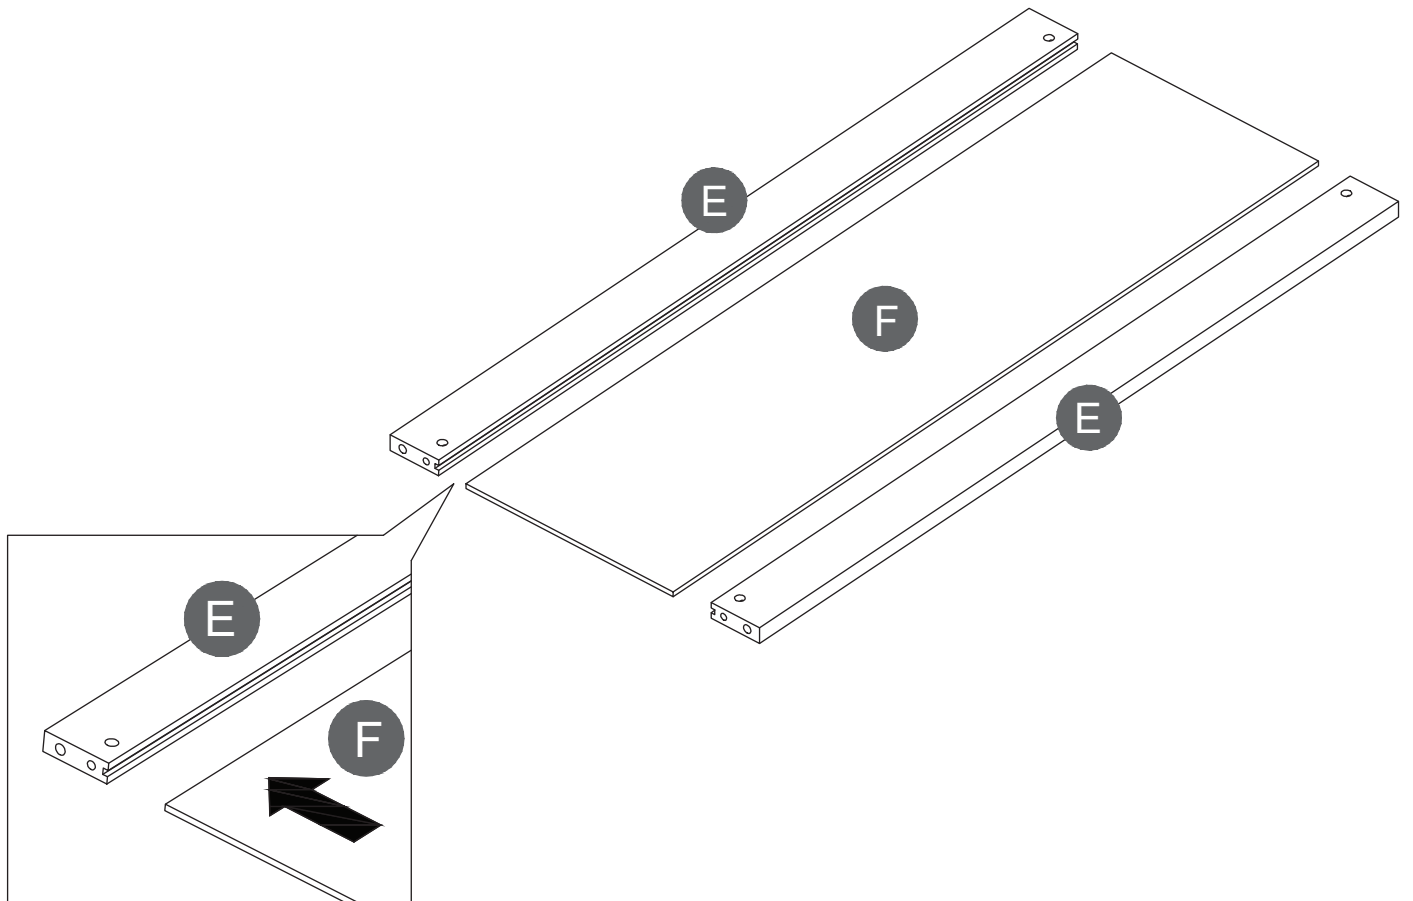
STEP 4:




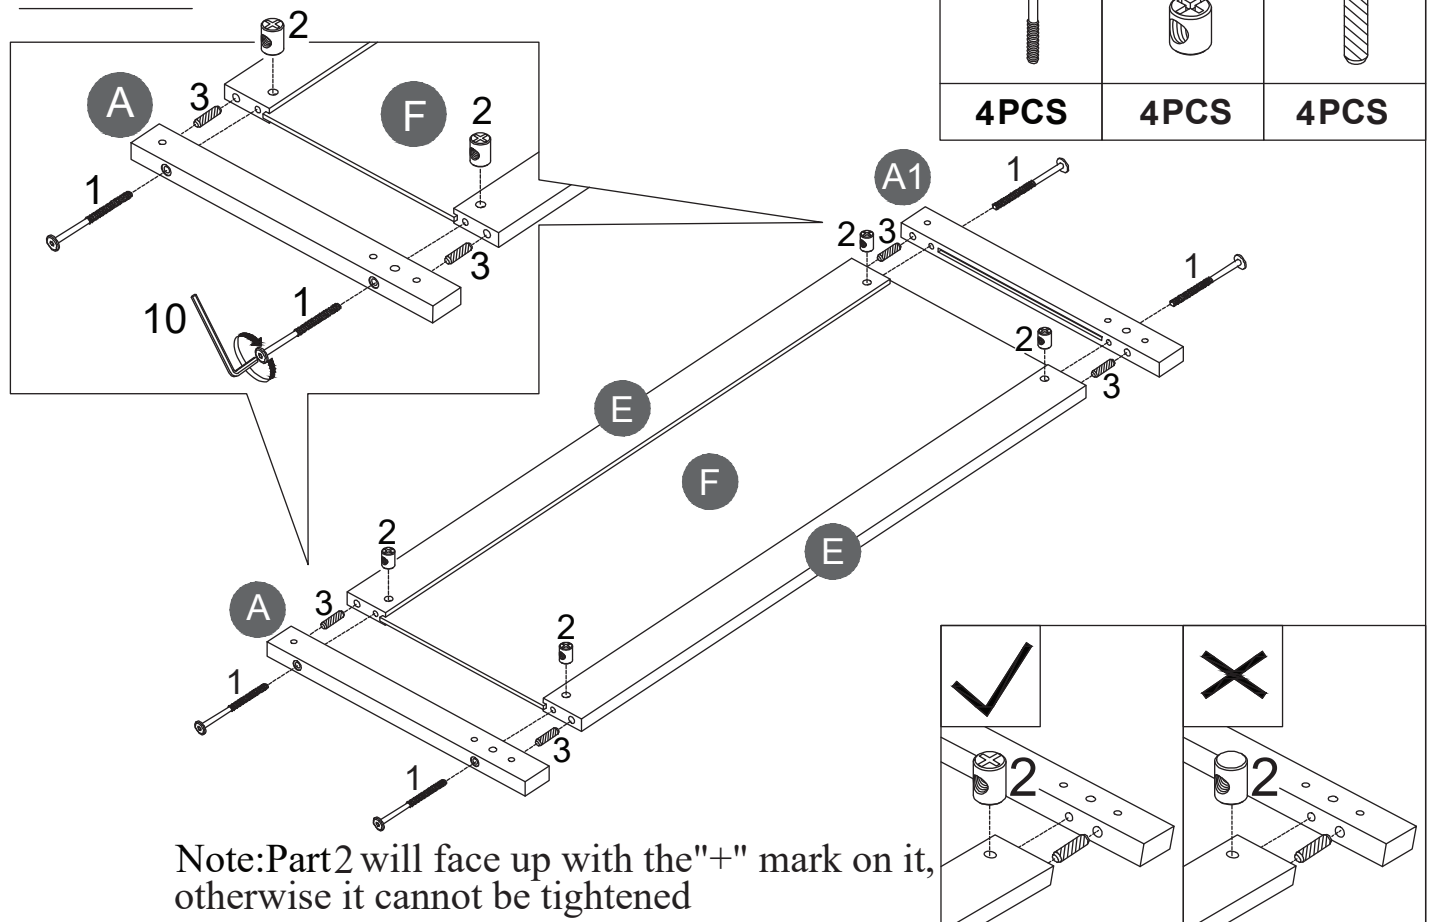STEP 5:





STEP 6:

1		2		3		4		5	
5PCS		11PCS		4PCS		2PCS		6PCS	


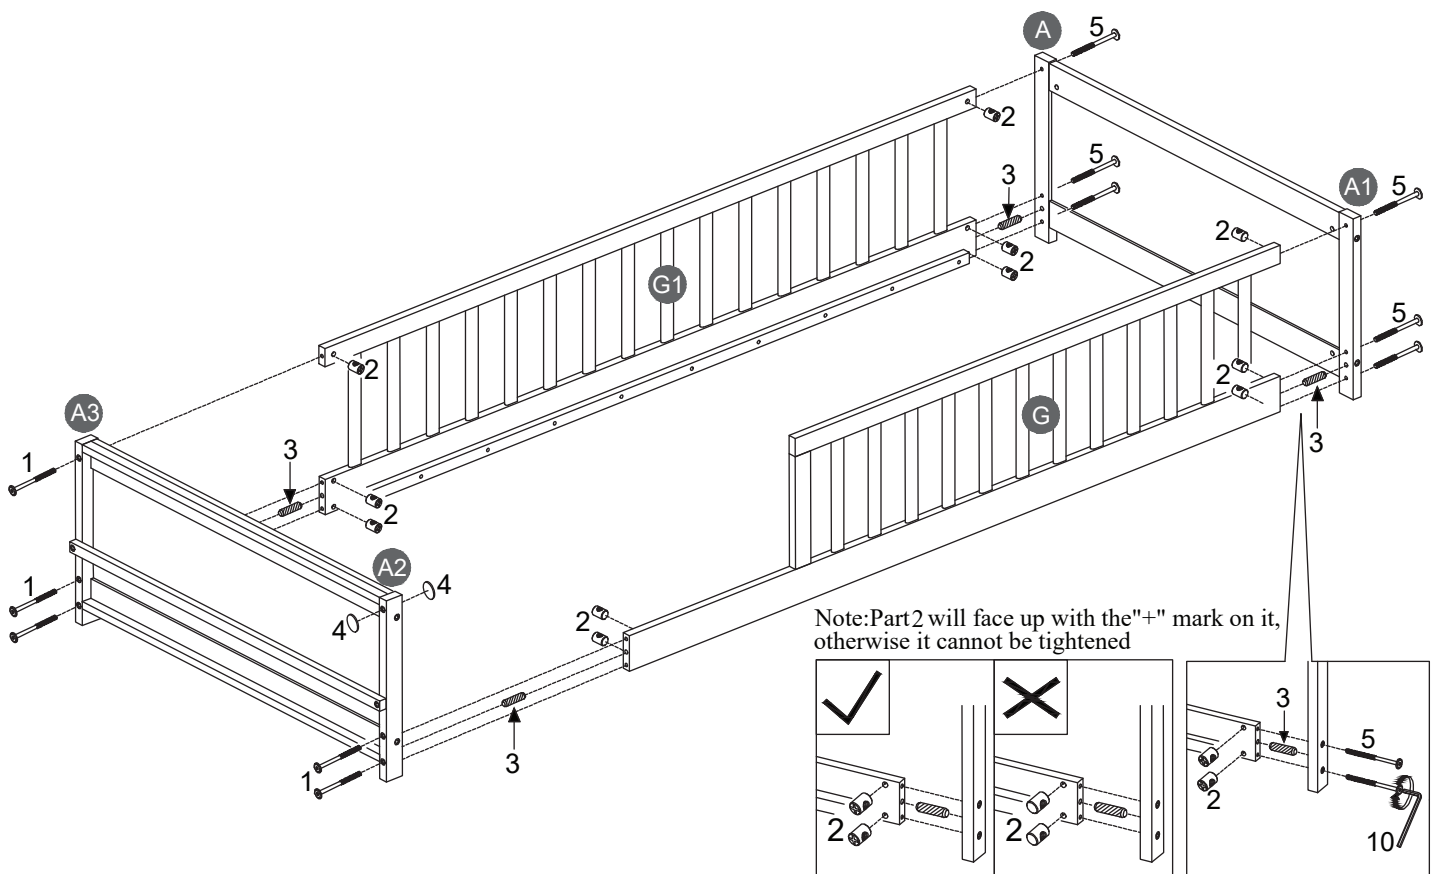


STEP 7:

6	7
	
1PCS	14PCS

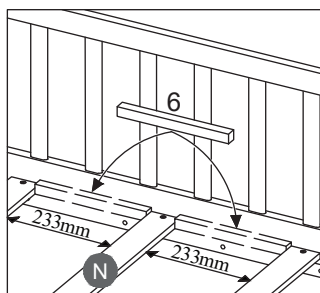

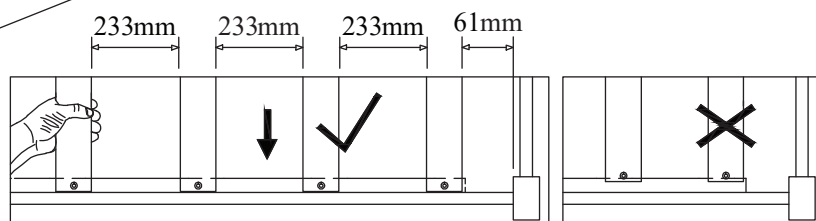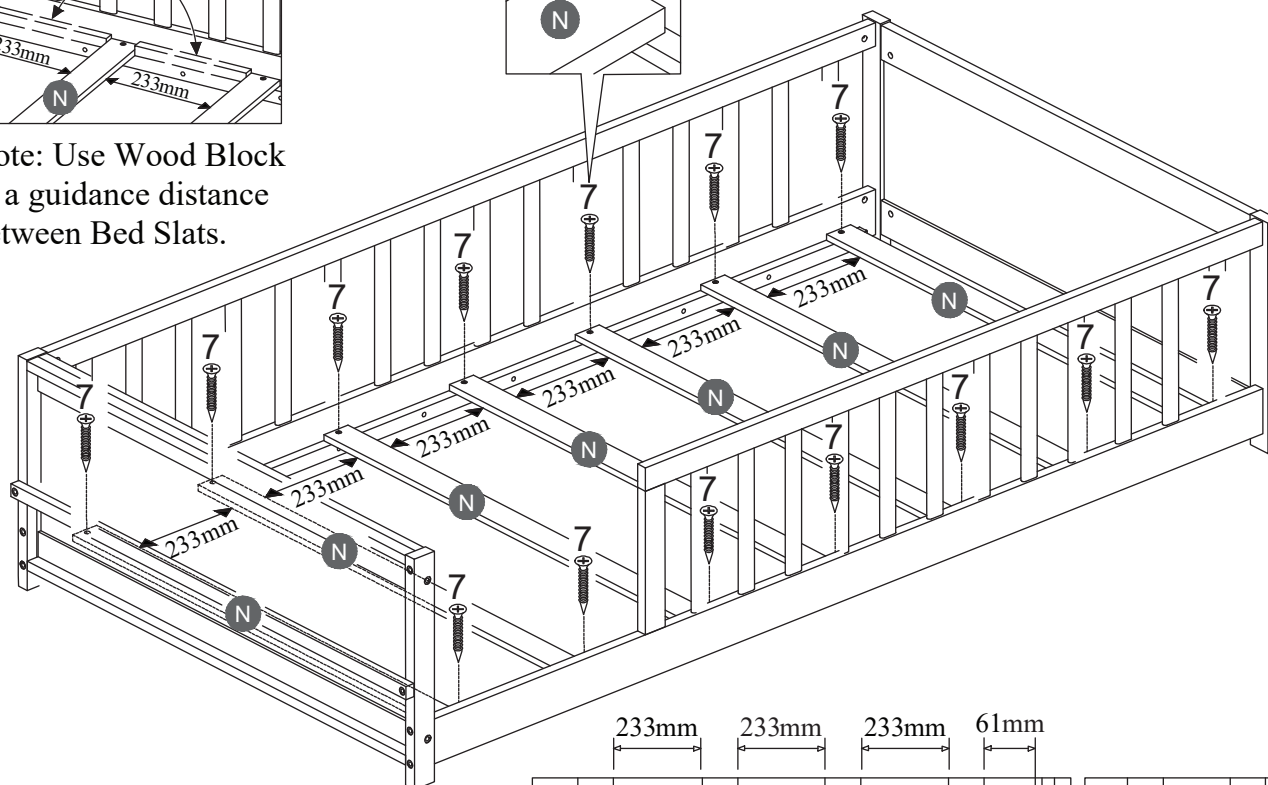Note: Use Wood Block as a guidance distance between Bed Slats.



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

