







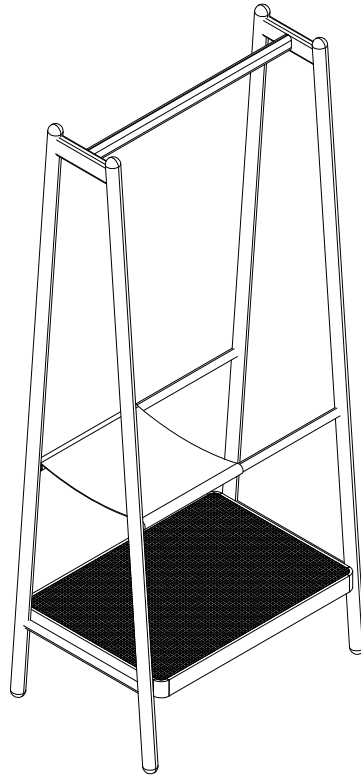


# Assembly instructions

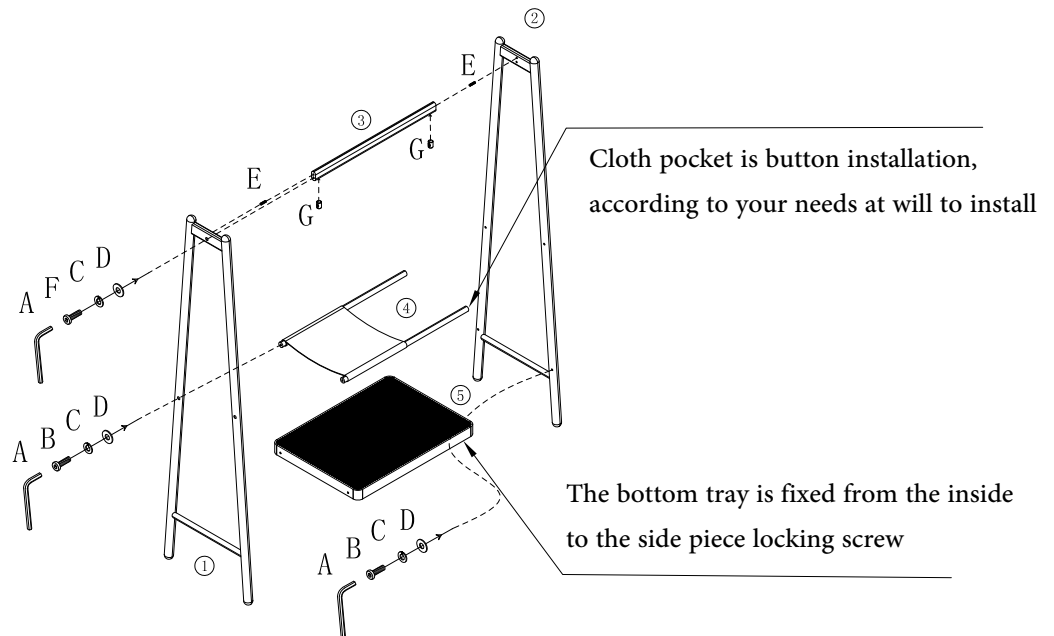

Assemble the side pieces and the upper horizontal fabric pocket and the bottom frame in order according to the corresponding holes.



						
A: Hexagonal wrench 4#=1	B: Screw M6*30=8	C: Lock washer Φ6*12=10	D: Flat washer Φ6*16=10	E: Wooden tenon 8*30=2	F: Screw M6*60=2	G: Cross hole nut M6*15=2