


ASSEMBLY INSTRUCTION

NOOK CORNER UNIT

CORNER BENCH

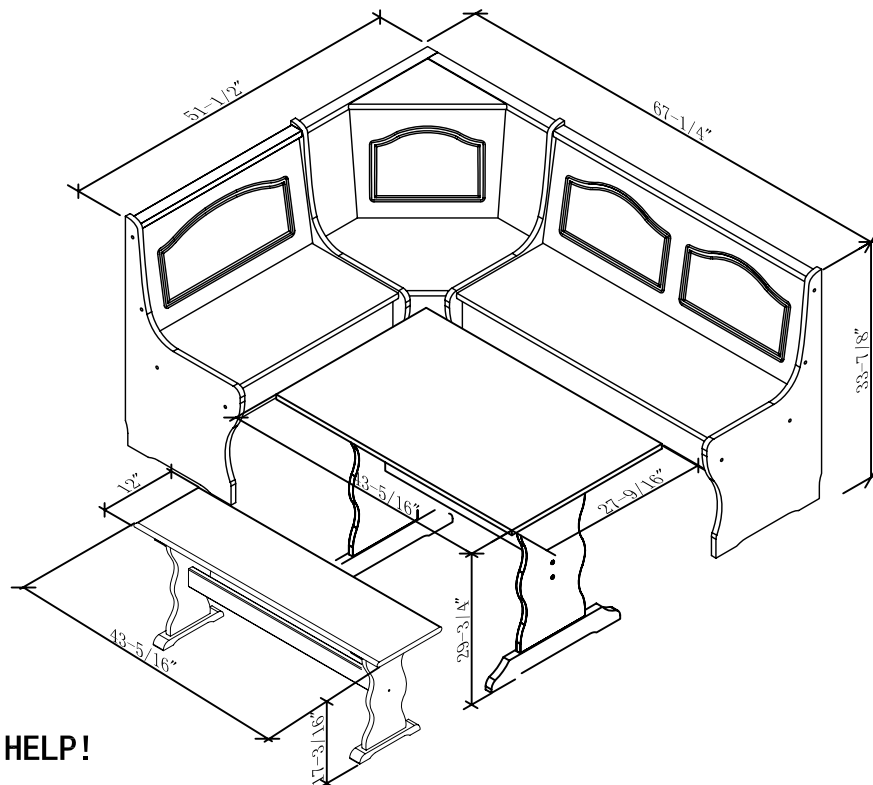


WE ARE HERE TO HELP!

ASSEMBLY INSTRUCTION

NOOK CORNER UNIT

CORNER BENCH





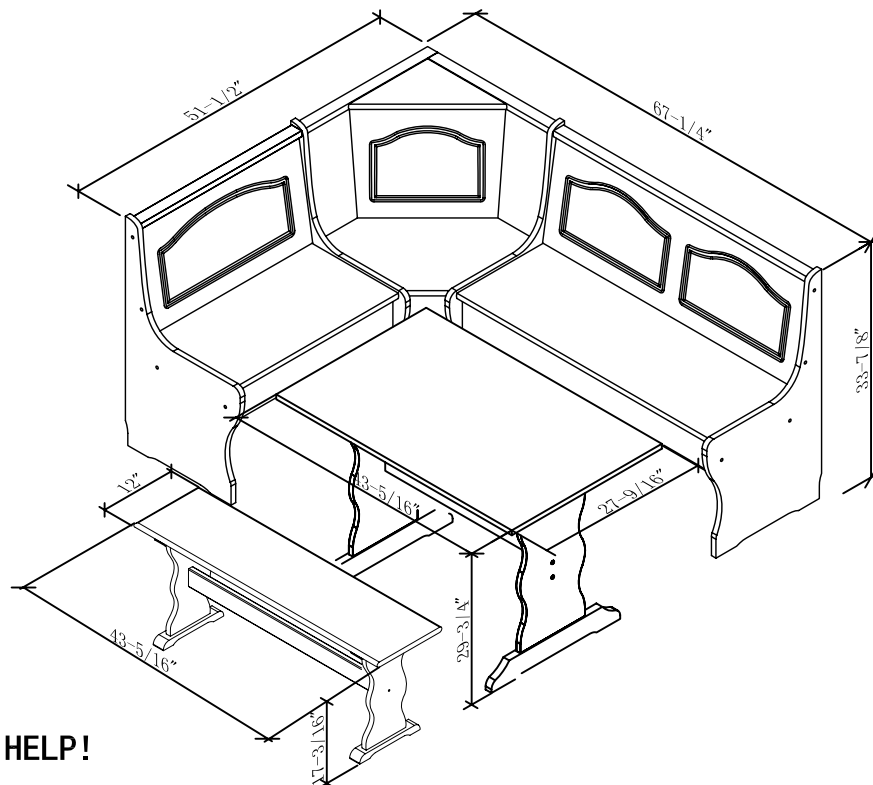



WE ARE HERE TO HELP!

HARDWARE PACKAGE COUNT (CORNER BENCH)

OPEN HARDWARE PACKAGE ON A FLAT SURFACE COVERED WITH NEWSPAPER. COUNT EACH PIECE OF HARDWARE TO MATCH THE QUANTITY NUMBER IN THE HARDWARE IDENTIFICATION COLUMN. CALL CUSTOMER SERVICE IF ANY PARTS ARE MISSING. FOLLOW THE LETTER IDENTIFICATION WHEN READING THE ASSEMBLY DRAWING " ① " THROUGH " ⑥ "

HARDWARE IDENTIFICATION

①		WOOD DOWEL 1-3/16"LONG 8X30mm	36
②		SCREW 1-3/8"LONG 5X35mm	4
③		PLASTIC PIN	4
④		SCREW 1"LONG 5X25mm	49
⑤		SCREW 2"LONG 5X50mm	16
⑥		WOOD HOLE COVER	8


SELECT THE LAYOUT OF THE BENCH

THIS ITEM IS REVERSIBLE AND CAN BE INSTALLED EITHER WITH THE LARGE BENCH AT YOUR LEFT HAND SIDE (LEFT SIDE INSTALLATION) OR WITH THE LARGE BENCH AT YOUR RIGHT HAND SIDE (RIGHT SIDE INSTALLATION).


THIS INSTRUCTION IS MADE FOR RIGHT HAND INSTALLATION.

IF YOU SELECT THE LEFT HAND INSTALLATION THEN YOU HAVE TO SWITCH ALL THE PARTS LOCATED AT RIGHT PART (I, K, L, M AND D) TO LEFT PART AND THE PARTS LOCATED AT LEFT PART (B, D, E, G AND P) TO RIGHT PART.

ATTENTION: OUTSIDE LEGS F AND H PLUS CENTRAL PIECES (A, C, J, N, Q AND R) REMAIN UNCHANGED.

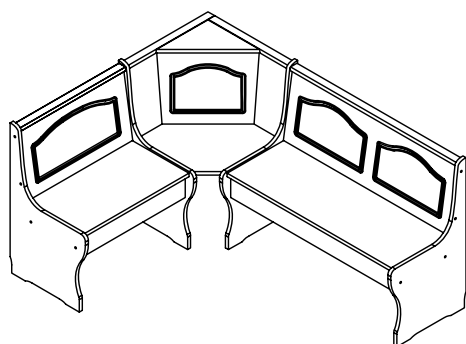

RIGHT SIDE INSTALLATION

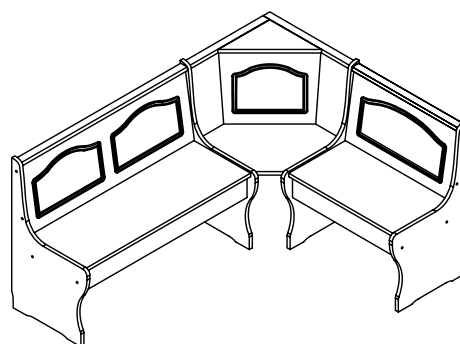


LEFT SIDE INSTALLATION

NOTE: BEFORE STARTING THE ASSEMBLY PROCESS, ALL PARTS SHOULD BE SEPARATED ACCORDING TO THE ITEM THEY BELONG TO. FOR BETTER IDENTIFICATION OF ALL PARTS, PLEASE USE PART IDENTIFICATION LIST BELOW FOR THE CORNER BENCH, THE PART IDENTIFICATION LIST ON PAGE J FOR THE TABLE AND THE PART IDENTIFICATION LIST ON PAGE M FOR THE BENCH (SIMPLE).

PARTS IDENTIFICATION

A_MIDDLE LEGS (RIGHT AND LEFT) X2
 B_SINGLE BENCH FRONT AND BACK RAILS X2
 C_CENTER BACK PANEL
 D_SINGLE BENCH STORAGE BOTTOM
 E_SINGLE BENCH BACK REST
 F_LEFT OUTSIDE LEG
 G_SINGLE BENCH SEAT COVER
 H_RIGHT OUTSIDE LEG
 I_DOUBLE BENCH FRONT AND BACK RAILS X2
 J_CORNER TOP PANEL

K_DOUBLE BENCH STORAGE BOTTOM
 L_DOUBLE BENCH BACK REST
 M_DOUBLE BENCH SEAT COVER
 N_CORNER SHELF
 O_TOP RAIL FOR DOUBLE BACK REST
 P_TOP RAIL FOR SINGLE BACK REST
 Q_RIGHT CORNER BACK PANEL
 R_LEFT CORNER BACK PANEL
 S_RAIL X4
 T_STRETCHER X5

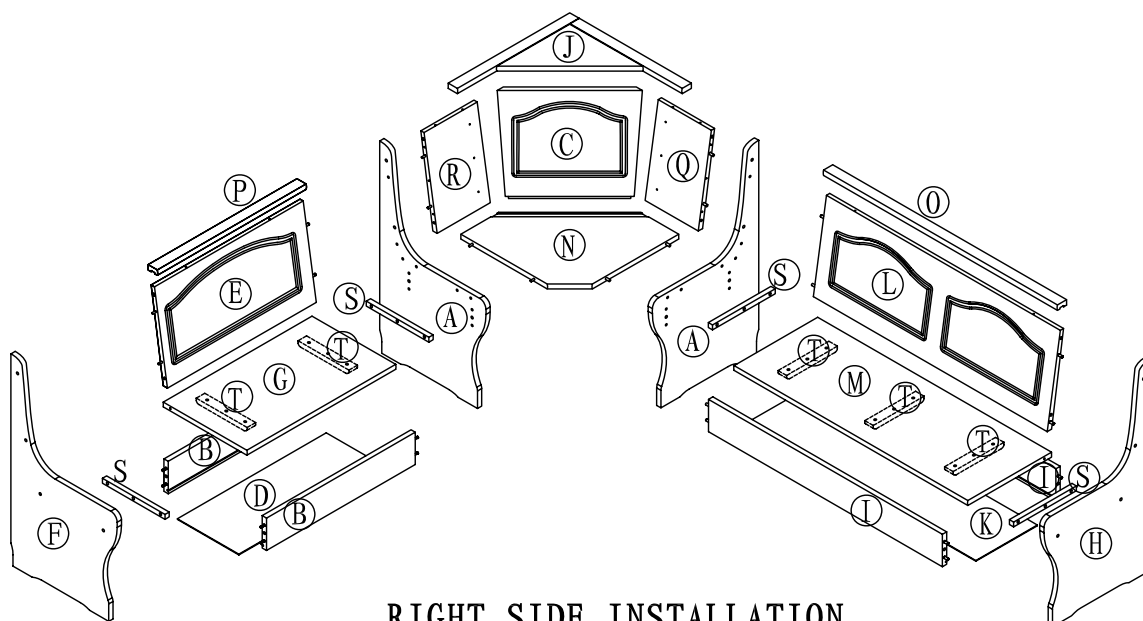

RIGHT SIDE INSTALLATION

STEP 1)

1.1 INSERT (32) WOOD DOWELS ① INTO HOLES LOCATED ON EDGES OF THE PART (I, B, E, L, Q, R, N); (4) PLASTIC PIN ③ INTO HOLES LOCATED ON EDGES OF THE PART (G, M); (27) SCREW ④ INTO HOLES LOCATED ON EDGES OF THE PARTS (A, F, H, M, G). AS SHOWN IN FIGURE 1:

- DOUBLE BENCH FRONT AND BACK RAILS #I
- SINGLE BENCH FRONT AND BACK RAILS #B
- SINGLE BENCH BACK REST #E
- DOUBLE BENCH BACK REST #L
- RIGHT CORNER BACK PANEL #Q
- LEFT CORNER BACK PANEL #R
- DOUBLE BENCH SEAT COVER #M
- CORNER SHELF #N
- SINGLE BENCH SEAT COVER #G
- MIDDLE LEGS (RIGHT AND LEFT) #A
- LEFT OUTSIDE LEG #F
- RIGHT OUTSIDE LEG #H
- RAIL #S
- STRETCHER #T

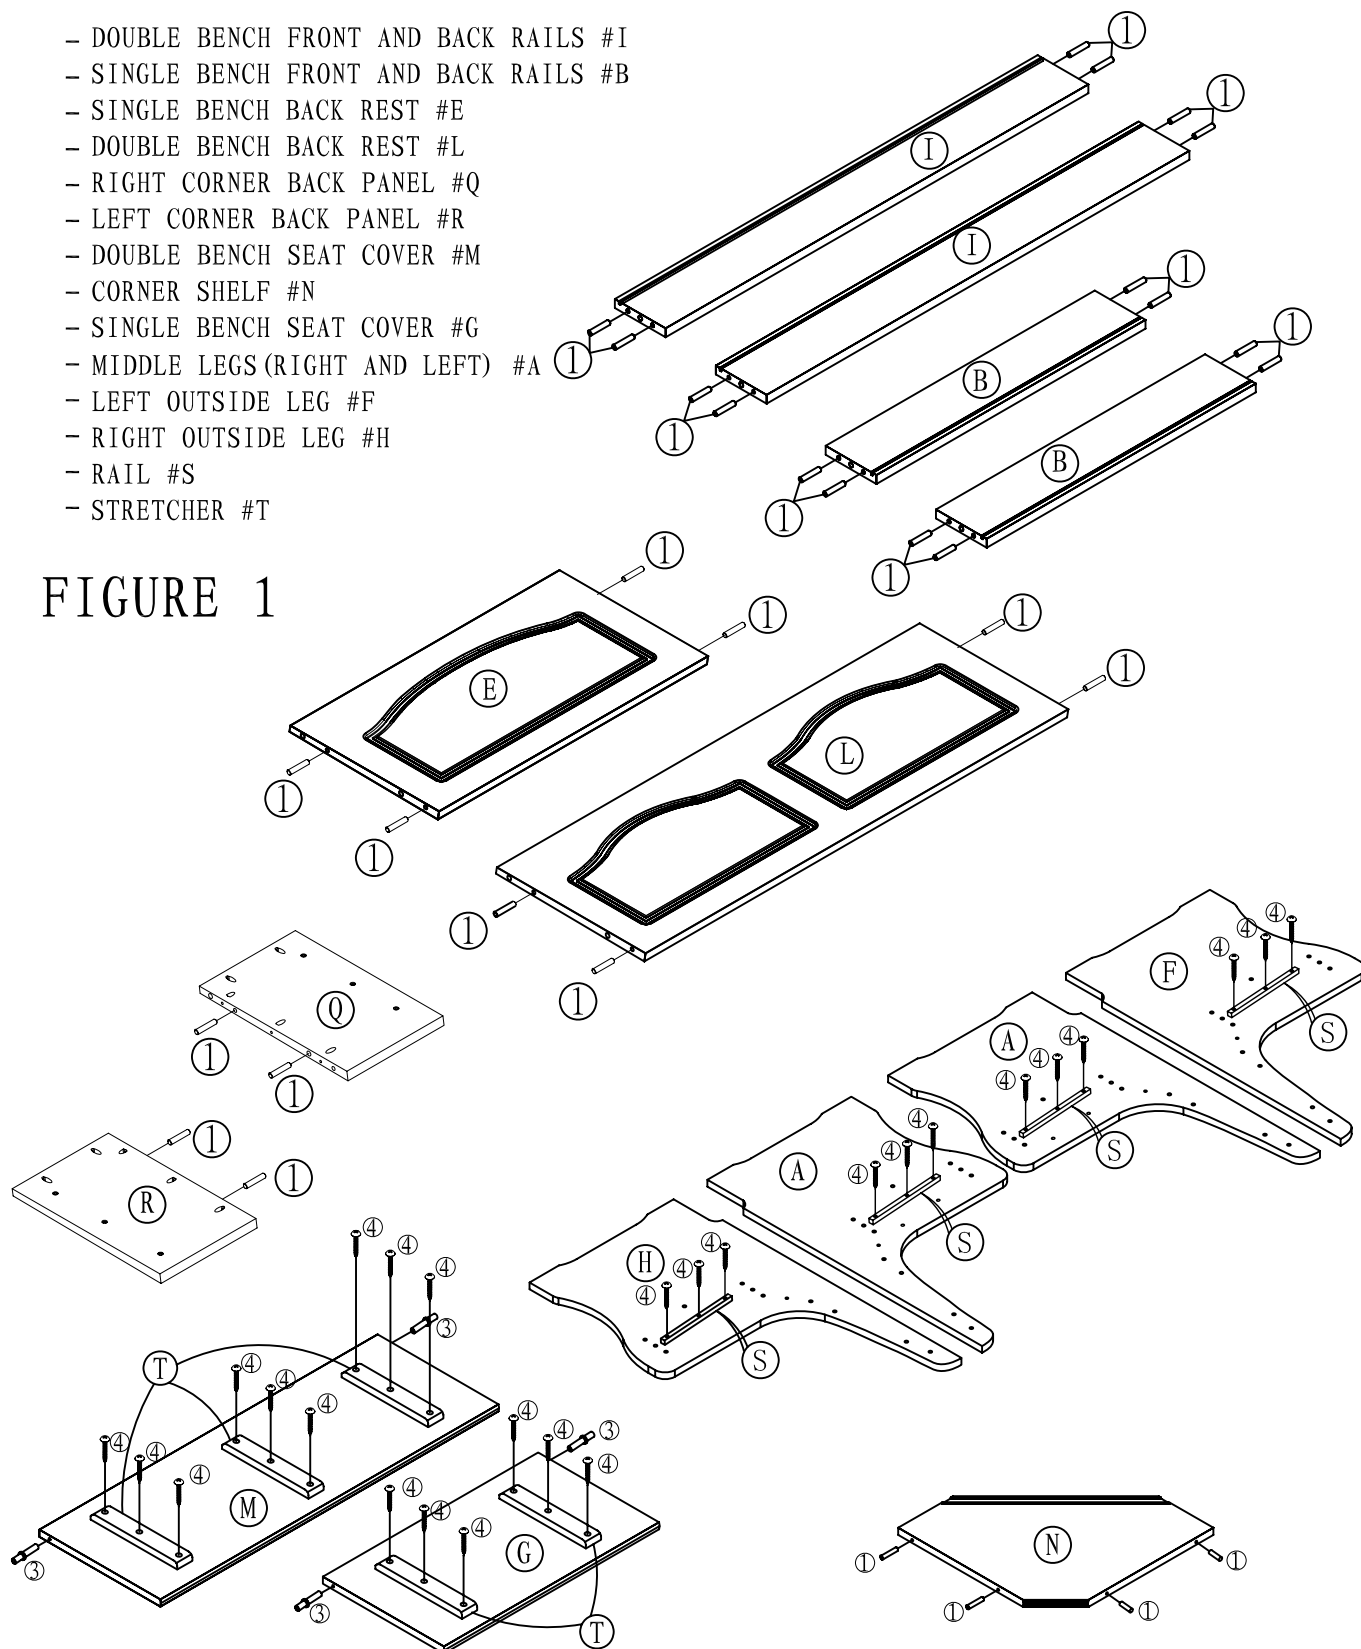


FIGURE 1

STEP 2)

- 2.1 PLACE MIDDLE LEG #A USING (02) SCREWS ⑤ ON FLOOR. ATTACH SINGLE BENCH FRONT AND BACK RAILS #B (2X) TO MIDDLE LEG #A, INSERT (02) WOOD DOWEL ① INTO HOLES LOCATED ON THE MIDDLE LEG #A, AS SHOWN IN FIGURE 2.1
- 2.2 INSERT SINGLE BENCH STORAGE BOTTOM #D THROUGH GROOVE LOCATED ON SINGLE BENCH FRONT AND BACK RAILS #B, AS SHOWN IN FIGURE 2.2
- 2.3 WITH MIDDLE LEG #A PLACED ON FLOOR ATTACH SINGLE BENCH BACK REST #E TO MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USE (02) SCREWS ⑤ AND A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO SECURE, AS SHOWN IN FIGURE 2.3
- 2.4 REMEMBER THAT LEG #A IS NOT SECURED IN ITS PLACE YET SO HOLDING IT TIGHT TO PARTS #E, #B AND #D, INSERT THE SINGLE BENCH SEAT COVER #G THROUGH GROOVE LOCATED ON SINGLE BENCH BACK RAIL #B AND SINGLE BENCH BACK REST #E, THEN ATTACH LEG #F TO PIECES PREVIOUSLY ATTACHED ON MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USE (04) SCREWS (E) AND ① PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO SECURE, AS SHOWN IN FIGURE 2.4

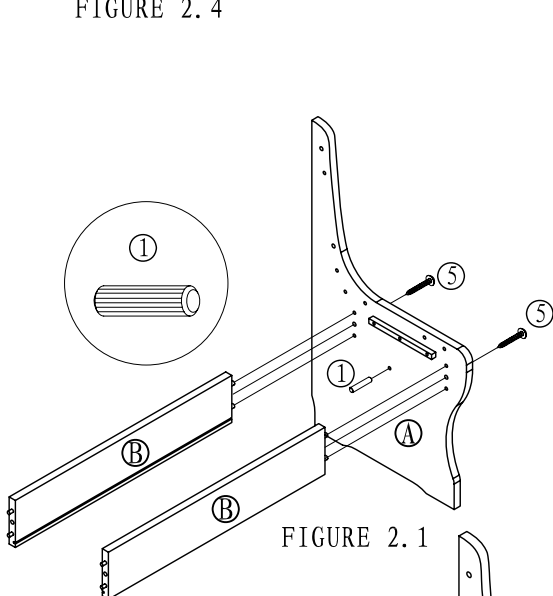


FIGURE 2.1

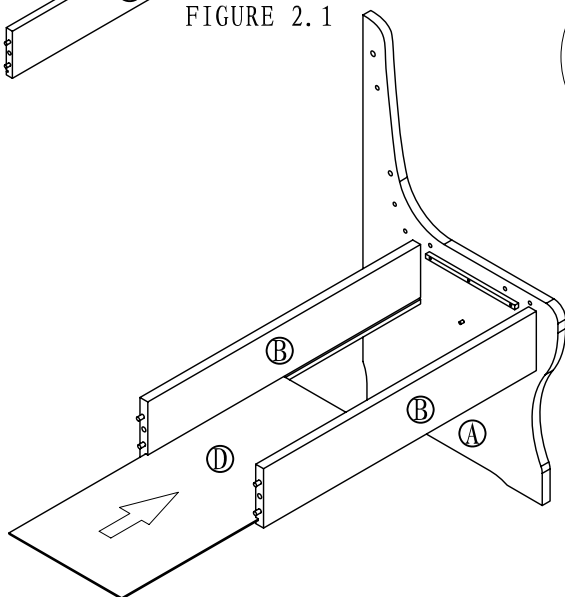


FIGURE 2.2

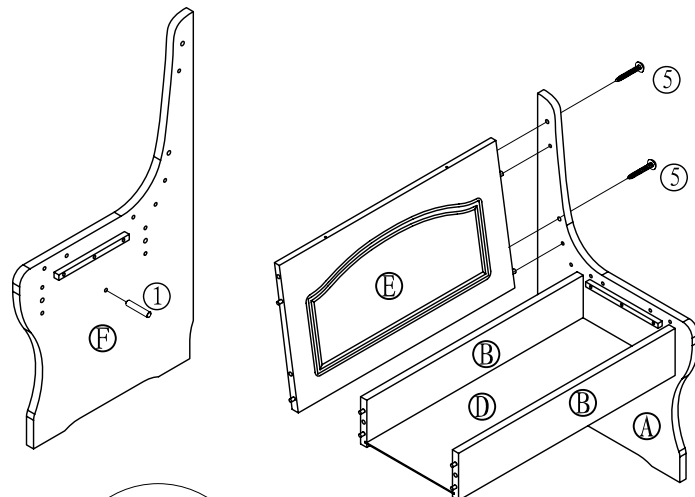


FIGURE 2.3

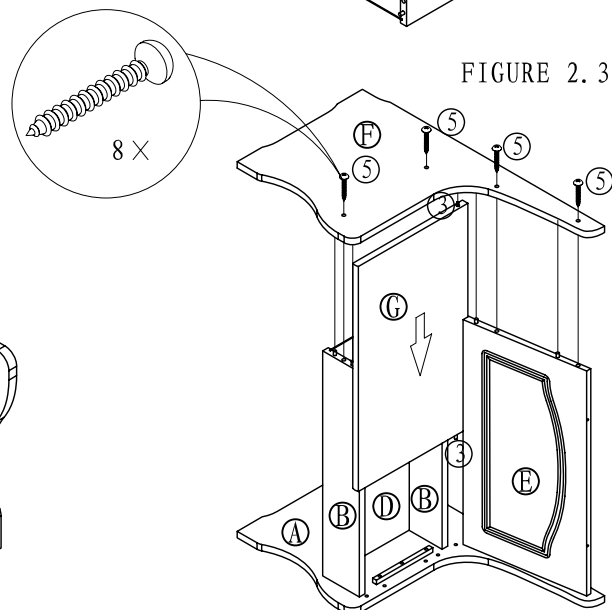


FIGURE 2.4

FIGURE 2

STEP 3)

- 3.1 PLACE MIDDLE LEG #A ON FLOOR. ATTACH DOUBLE BENCH FRONT AND BACK RAILS #I TO MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USING (02) SCREWS ⑤ AND ① PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO SECURE, INSERT (02) WOOD DOWELS ① INTO HOLES LOCATED ON THE MIDDLE LEG RIGHT #A. AS SHOWN IN FIGURE 3.1
- 3.2 INSERT DOUBLE BENCH STORGE BOTTOM #K THROUGH GROOVE LOCATED ON DOUBLE BENCH FRONT AND BACK RAILS #I, AS SHOWN IN FIGURE 3.2
- 3.3 WITH MIDDLE LEG #A PLACED ON FLOOR. ATTACH DOUBLE BENCH BACK REST #L TO MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USING (02) SCREWS ⑤ AND ① PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), AS SHOWN IN FIGURE 3.3
- 3.4 REMEMBER THAT LEG #A IS NOT SECURED IN ITS PLACE YET SO HOLDING IT TIGHT TO PARTS #L, #I AND #K, INSERT THE DOUBLE BENCH SEAT COVER #M THROUGH GROOVE LOCATED ON DOUBLE BENCH BACK RAIL #I AND DOUBLE BENCH BACK REST #L, THEN ATTACH LEG #H TO PIECES PREVIOUSLY ATTACHED ON MIDDLE LEG #A. USING PRE-DRILLED HOLES AS GUIDE, USING (04) SCREWS ⑤ AND ① PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), AS SHOWN IN FIGURE 3.4

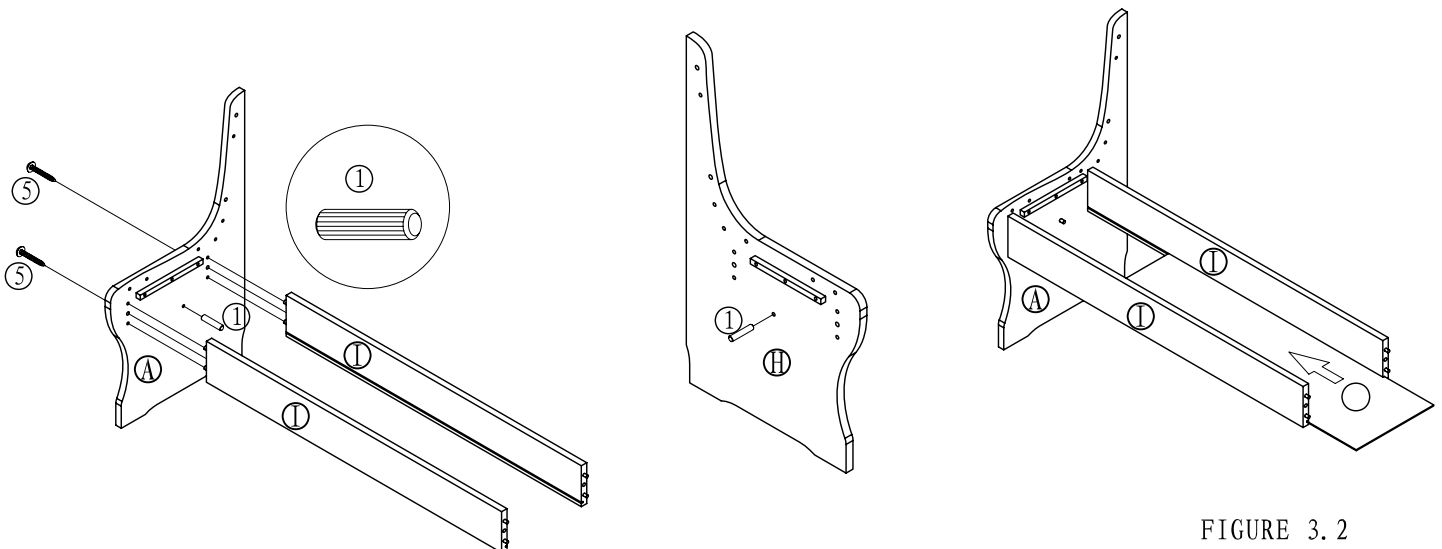


FIGURE 3.1

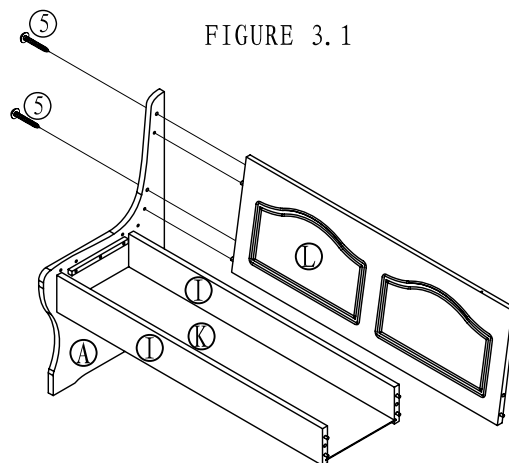


FIGURE 3.3

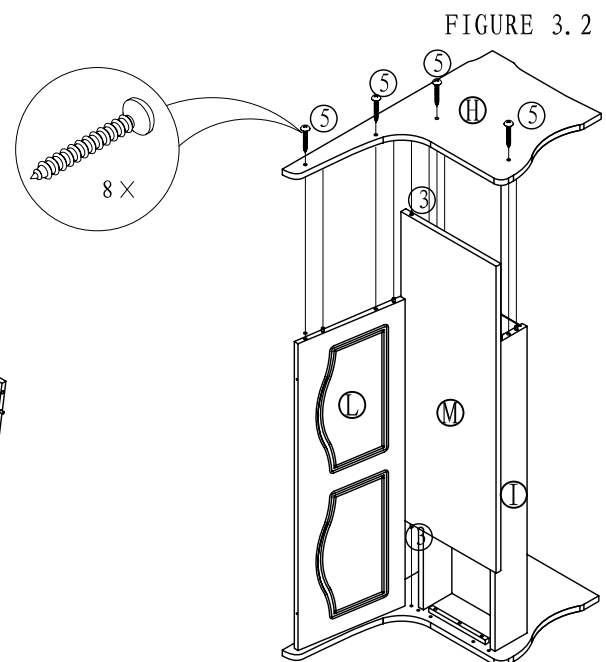


FIGURE 3.4

FIGURE 3

STEP 4)

- 1) ATTACH CORNER SHELF #N TO MIDDLE LEGS #A(RIGHT AND LEFT), INSERTING WOODEN DOWELS LOCATED ON CORNER SHELF EDGE INTO HOLES LOCATED ON SIDE OF MIDDLE LEGS. SECURE WITH (04) SCREWS ② USING ① PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED). AS SHOWN IN FIGURE 4.
- 2) INSERT (08) WOOD HOLE COVERS ⑥ INTO HOLES LOCATED ON LEFT AND RIGHT OUTSIDE LEGS #F AND #H. AS SHOWN IN FIGURE 4.

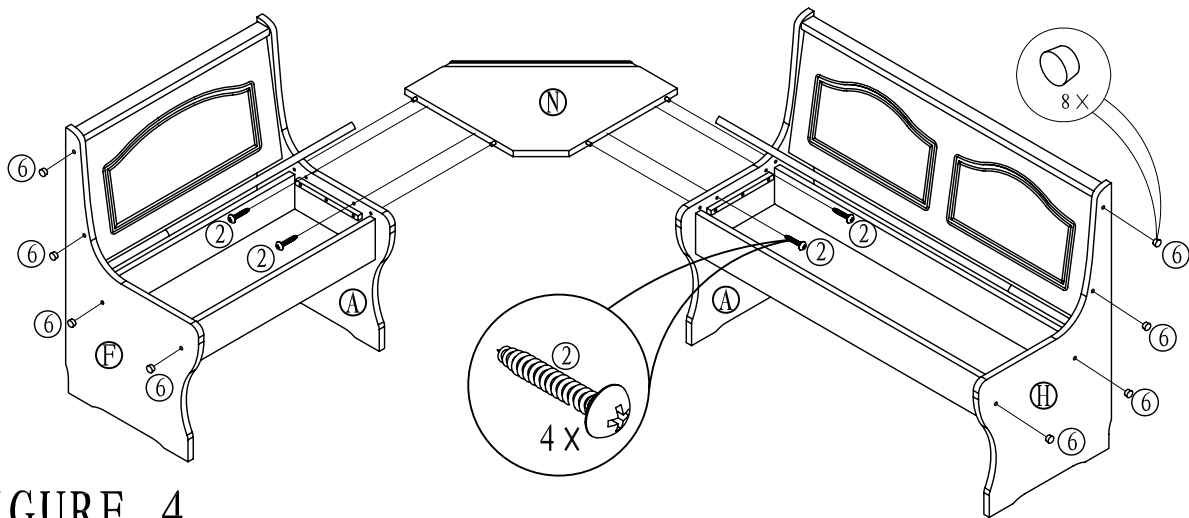


FIGURE 4

STEP 5)

- 1) ATTACH LEFT CORNER BACK PANELS #R AND RIGHT CORNER BACK PANEL #Q TO SIDE OF MIDDLE LEGS #A(RIGHT AND LEFT).
- 2) SECURE USING (06) SCREWS ④ AND PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED), AS SHOWN IN FIGURE 5.

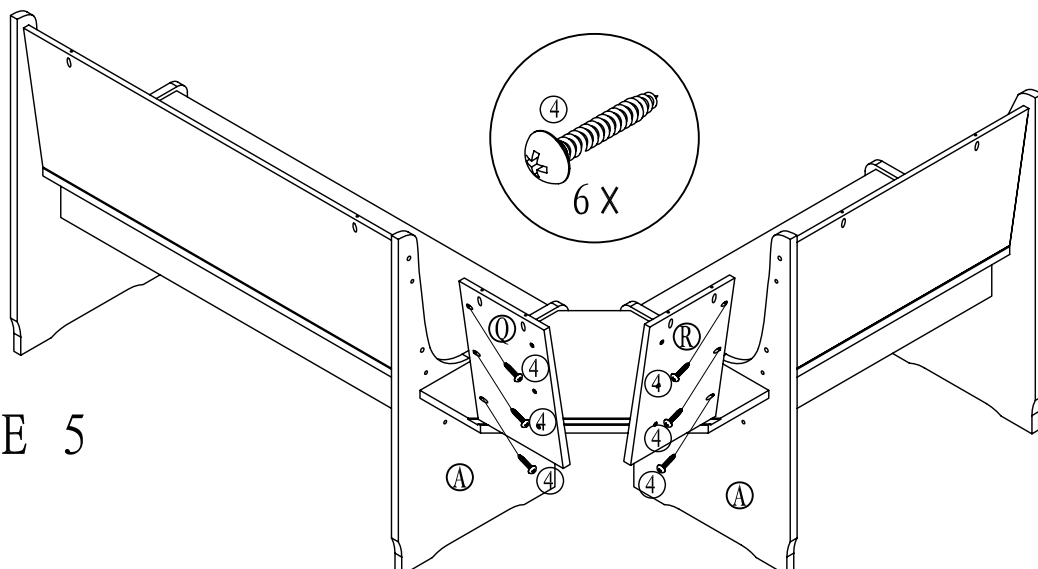


FIGURE 5

STEP 6)

CONNECT CENTER BACK PANEL #C WITH CORNER BACK PANEL #Q AND #R. INSERTING (06) SCREWS ④ THROUGH HOLES LOCATED UNDERNEATH OF CORNER BACK PANEL #Q AND #R REACHING THE CENTER BACK PANELS #C. THEN INSERTING (02) SCREW ④ THROUGH THE PILOT HOLE YOU WILL FIND UNDERNEATH OF CORNER TOP PANEL #N INTO THE CORNER BACK PANEL #Q AND #R, AS SHOWN IN FIGURE 6.

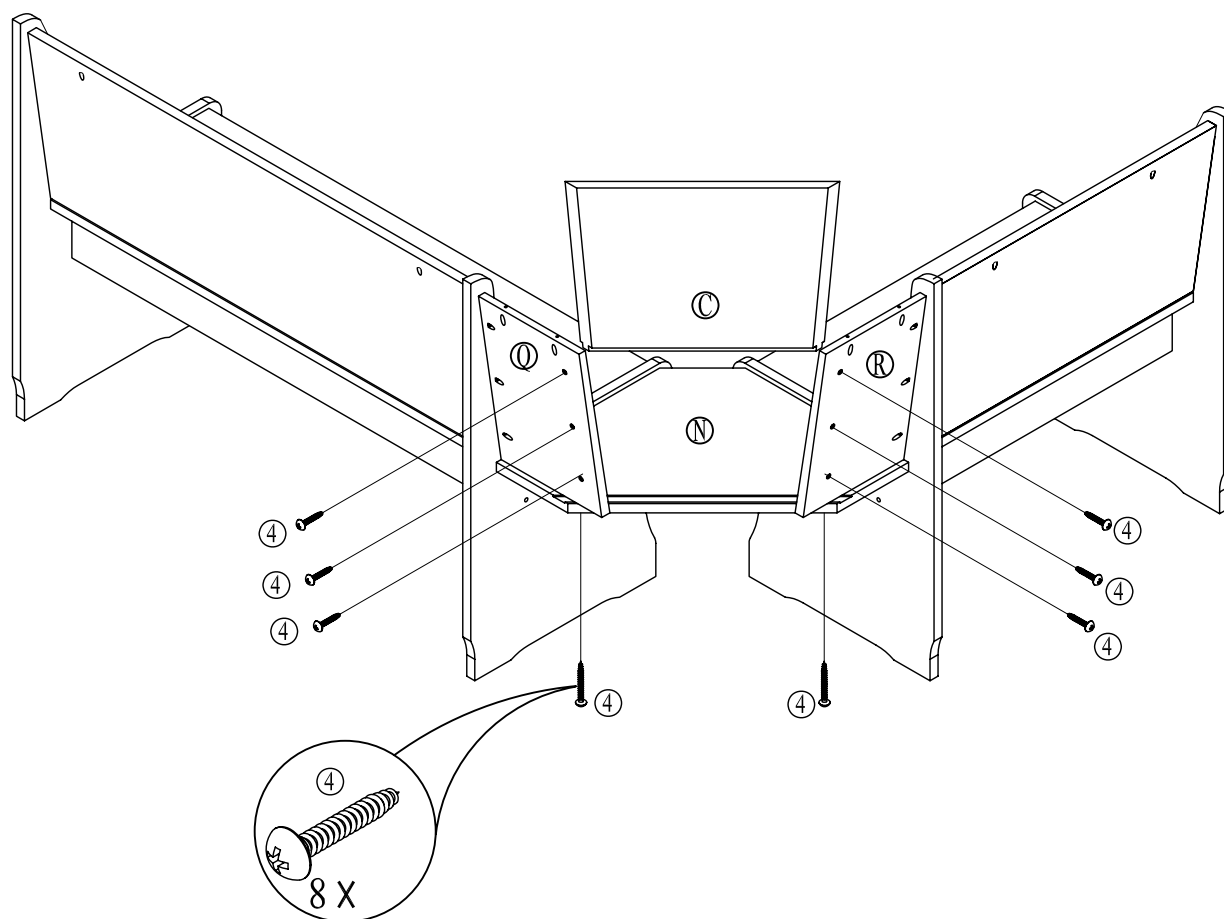


FIGURE 6

STEP 7)

- 1) ATTACH TOP CORNER TOP PANEL #J TO CENTER BACK PANEL #C AND TO LEFT AND RIGHT CORNER BACK PANEL #Q AND #R USING (04) SCREWS ④ AND PHILLIP HEAD SCREWDRIVER (NOT PROVIDED). AS SHOWN IN FIGURE 7.
- 2) ATTACH TOP RAIL FOR SINGLE BACK REST #P TO UPPER EDGE OF SINGLE BENCH BACK REST #E, AND ATTACH TOP RAIL FOR DOUBLE BACK REST #D TO UPPER EDGE OF DOUBLE BACK REST #L USING PRE-DRILLED LOCATED ON BACK OF PANELS #E AND #L AS GUIDE, WITH (04) SCREWS ④ USING PHILLIPS HEAD SCREWDRIVER (NOT PROVIDE), AS SHOWN IN FIGURE 7.


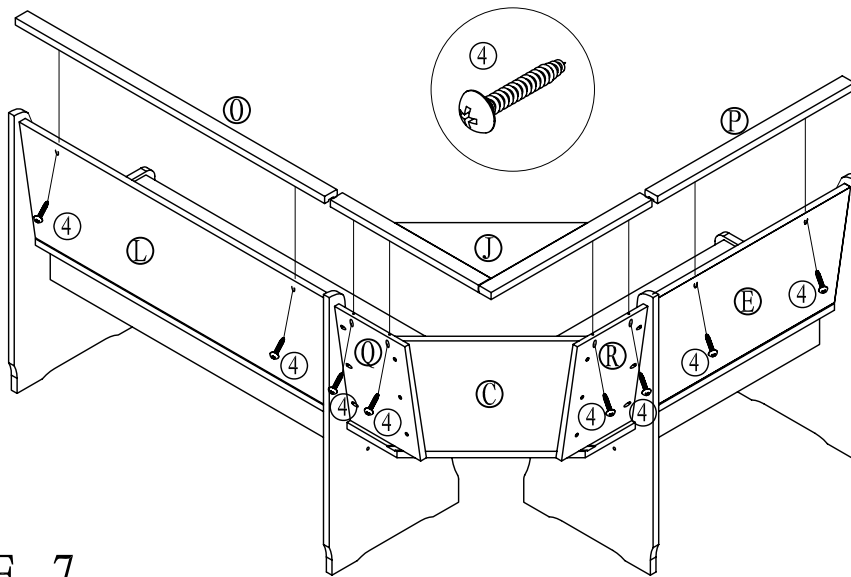


FIGURE 7

USING HELP PLACE THE CORNER BENCH IN ITS FINAL POSITION IN WHICH IT WILL BE USED.

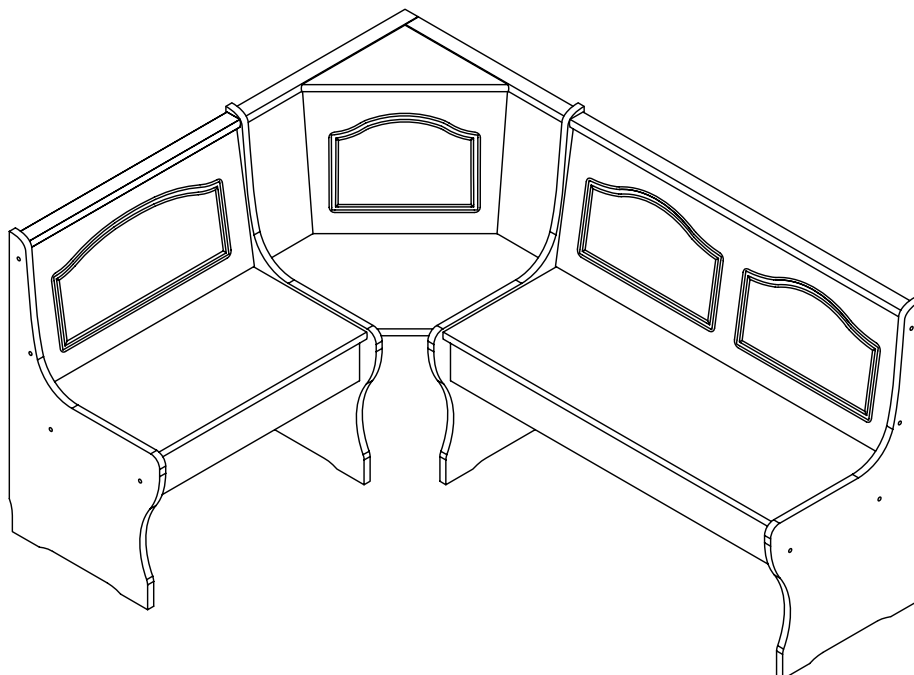

PERIDIOCALLY CHECK ALL CONNECTIONS FOR TIGHTNESS
AND FURTHER SECURE IF NEEDED

LIMITED WARRANTY

WHAT IS COVERED

WHAT IS NOT COVERED

HOW TO OBTAIN SERVICE