

6' Garden Bridge

(Unassembled Kit)

Tools Required:

- You will need a #2 Philips or Robertson driver
- For your convenience we use Recex rust resistant zinc plated hardware.


NOTE: It's recommended a 2nd person assists with this assembly

Package Contents:

- (A) Sides... 2
- (B) Foot Planks... 13


Hardware:

- 1-3/4" Screw... 52

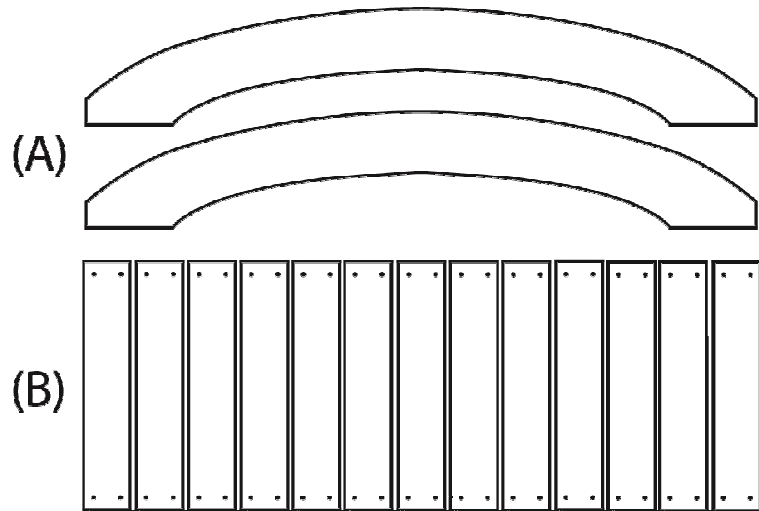

STEP 1. Align Sides

- Use a foot plank (B) to make sides parallel at 35 inches apart (outside edge to outside edge).
- Attach a foot plank to both ends and one in the center using 1-3/4-inch screws.

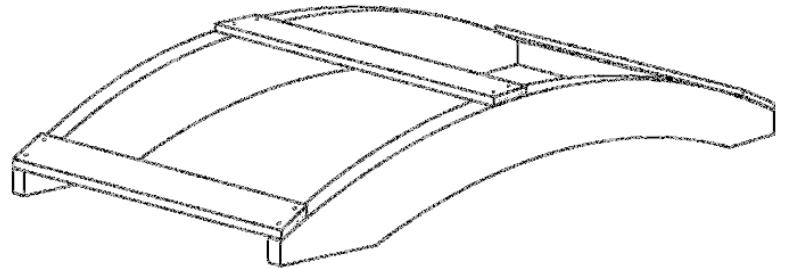

STEP 2. Attach Foot Planks

- Layout remaining foot planks across sides.
- Create uniform spacing between each plank and attach using 1-3/4-inch screws.
- Your new bridge is ready for use.

