


ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH DESK, DRAWERS AND SHELVES

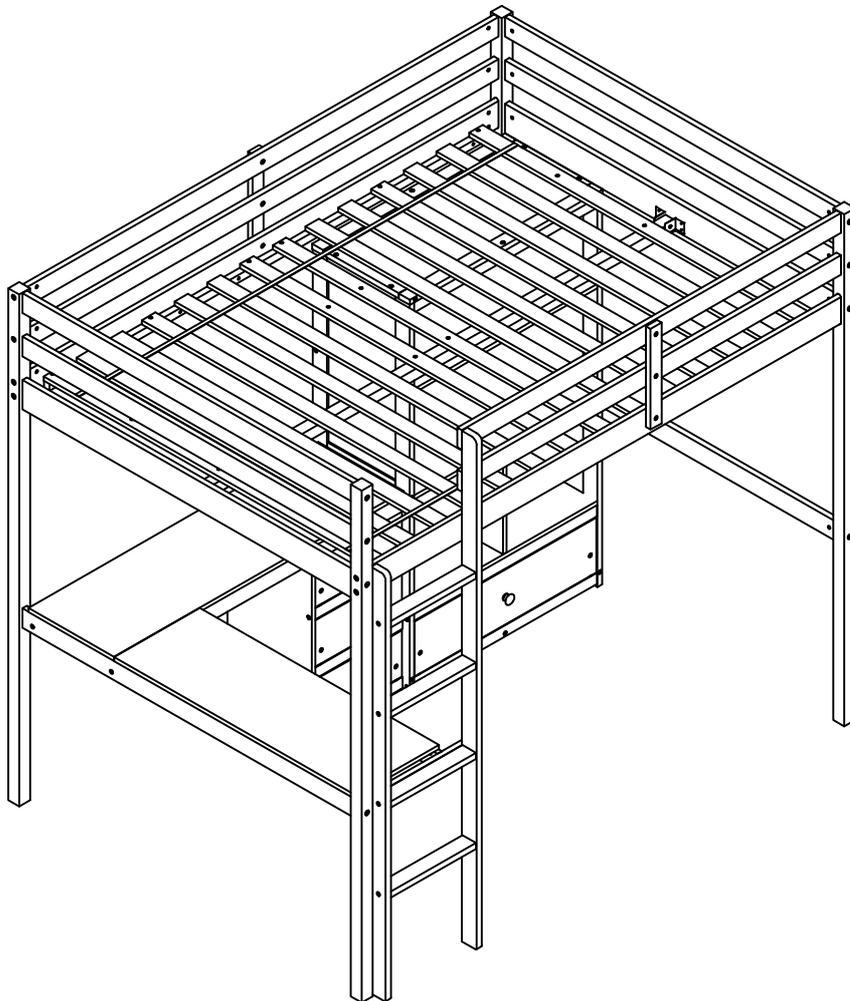

SA11835



SAFETY WARNING




1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk:

Up bed (Bunk bed and tribed included)

Bed type	Length	Width	Thickness
Twin Standard	74"-75"	54 1/2"	6" max



2. Replacement parts, including additional guardrails, maybe obtained from any of our dealers of GigaCloud Technology , USA /18961 ARENTH AVENUE,CITY OF INDUSTRY, CA, 91748
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

Detail View

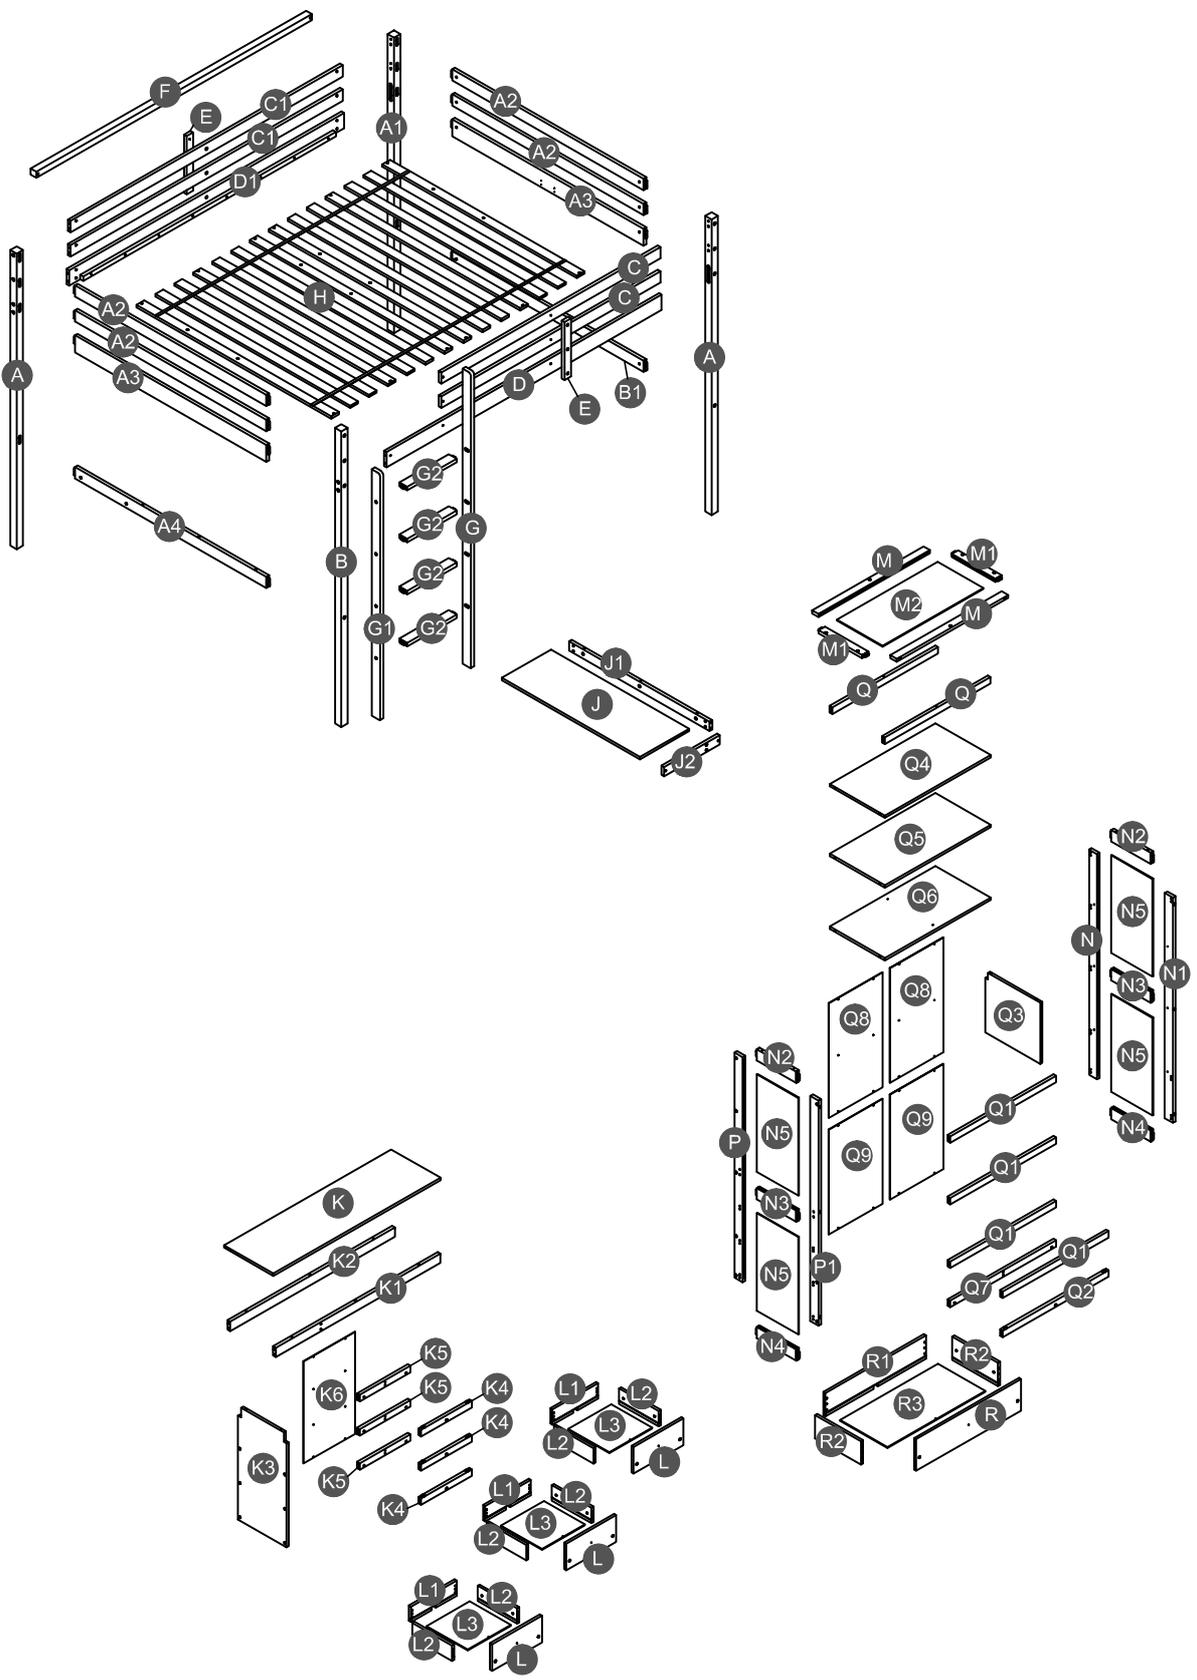






Part List

SA11835 (1-2)







<p>A</p>  <p>Leg (Left back/right front) - 2pcs</p>	<p>A1</p>  <p>Leg (Right Back) - 1pc</p>	<p>B</p>  <p>Leg (Left Front) - 1pc</p>
<p>C1</p>  <p>Long guard rail (Back) - 2pcs</p>	<p>D</p>  <p>Side rail (Front) - 1pc</p>	<p>D1</p>  <p>Side rail (Back) - 1pc</p>
<p>F</p>  <p>Support slat - 1pc</p>	<p>G</p>  <p>Right side ladder - 1pc</p>	<p>G1</p>  <p>Left side ladder - 1pc</p>
<p>H</p>  <p>Slat - 14pcs</p>	<p>L</p>  <p>Front drawer panel - 3pcs</p>	<p>L1</p>  <p>Back drawer panel - 3pcs</p>
<p>L2</p>  <p>Side drawer panel - 6pcs</p>	<p>L3</p>  <p>Drawer bottom - 3pcs</p>	<p>M</p>  <p>Horizontal bar (Top frame)-2pcs</p>
<p>M1</p>  <p>Vertical bar (Top frame) - 2pcs</p>	<p>N</p>  <p>Back vertical bar (Right side frame) - 1pc</p>	<p>N1</p>  <p>Front vertical bar (Right side frame) - 1pc</p>
<p>N2</p>  <p>Upper horizontal bar (Side frame) - 2pcs</p>	<p>N3</p>  <p>Middle horizontal bar (Side frame)-2pcs</p>	<p>N4</p>  <p>Lower horizontal bar (Side frame)-2pcs</p>
<p>N5</p>  <p>Side panel (Side frame) - 4pcs</p>	<p>P</p>  <p>Back vertical bar (Left side frame) - 1pc</p>	<p>P1</p>  <p>Front vertical bar (Left side frame) - 1pc</p>
<p>R</p>  <p>Front drawer panel - 1pc</p>	<p>R1</p>  <p>Back drawer panel- 1pc</p>	<p>R2</p>  <p>Side drawer panel - 2pcs</p>

Part List

SA11835 (2-2) + Hardware inside



A2  Upper horizontal bar HB - 4pcs	A3  Middle horizontal bar HB - 2pcs	A4  Lower horizontal bar HB - 1pc
B1  Lower horizontal bar HB - 1pc	C  Short guard rail (Front) - 2pcs	E  Vertical guard rail - 2pcs
G2  Step ladder - 4pcs	J  Top panel (Front) - 1pc	J1  Lower horizontal bar (Front)-1pc
J2  Short horizontal bar (Front)- 1pc	K  Top panel (Back)- 1pc	K1  Upper horizontal bar (Front) - 1pc
K2  Upper horizontal bar (Back) - 1pc	K3  Side panel - 1pc	K4  Lower horizontal bar (Front) - 3pcs
K5  Lower horizontal bar (Back) - 3pcs	K6  Back panel - 1pc	M2  Top panel (Top frame) - 1pc
Q  Upper horizontal bar -2pcs	Q1  Middle horizontal bar - 4pcs	Q2  Lower horizontal bar (Front)- 1pc
Q3  Divider panel - 1pc	Q4  Upper shelf - 1pc	Q5  Middle shelf - 1pc
Q6  Lower shelf - 1pc	Q7  Lower horizontal bar (Back)- 1pc	Q8  Back panel (upper)- 2pcs
Q9  Back panel (Lower)- 2pcs	R3  Drawer bottom - 1pc	

Hardware List SA11835 (2-2)

<p>1</p>  <p>Ø10*40mm</p> <p>Wood dowel (6pcs)</p>	<p>2</p>  <p>Ø8*30mm</p> <p>Wood dowel (60pcs)</p>	<p>3</p>  <p>(Ø15)1/4"*100mm</p> <p>Hex-Head bolts (14pcs)</p>
<p>4</p>  <p>(Ø15)1/4"*80mm</p> <p>Hex-Head bolts (17pcs)</p>	<p>5</p>  <p>(Ø12)1/4"*60mm</p> <p>Hex-Head bolts (67pcs)</p>	<p>6</p>  <p>(Ø12)1/4"*40mm</p> <p>Hex-Head bolts (8pcs)</p>
<p>7</p>  <p>(Ø12)1/4"*30mm</p> <p>Hex-Head bolts (6pcs)</p>	<p>8</p>  <p>1/4"*15 (9.5mm)</p> <p>Horizontal-Hole bolts(98pcs)</p>	<p>9</p>  <p>(Ø13)1/4"*14mm</p> <p>Connect bolt (2pcs)</p>
<p>10</p>  <p>(Ø12)1/4"*65mm</p> <p>Hex-Head bolts (16pcs)</p>	<p>11</p>  <p>(Ø12)1/4"*40mm</p> <p>Hex-Head bolts (6pcs)</p>	<p>12</p>  <p>(1/4")4.5*58mm</p> <p>Allen key (2pcs)</p>
<p>13</p>  <p>Ø38*31mm</p> <p>Pine Knob (4pcs)</p>	<p>14</p>  <p>3/16"*25mm</p> <p>Ph zinc(Knob) (4pcs)</p>	<p>15</p>  <p>Ø4*30mm</p> <p>Wood screws (16pcs)</p>
<p>16</p>  <p>116*40*27mm</p> <p>Metal bracket (2pcs)</p>	<p>17</p>  <p>50*24*24*2mm</p> <p>Metal bracket (1pc)</p>	<p>18</p>  <p>340*30mm</p> <p>Upper slider drawer (1pc)</p>
<p>19</p>  <p>365*58*28 mm</p> <p>Lower slider drawer (1pc)</p>	<p>20</p>  <p>295*30mm</p> <p>Upper slider drawer (3pcs)</p>	<p>21</p>  <p>313*58*28 mm</p> <p>Lower slider drawer (3pcs)</p>
<p>22</p>  <p>Ø3.5*15mm</p> <p>Wood screws (24pcs)</p>	<p>23</p>  <p>Ø3.5*15mm</p> <p>Wood screws (28pcs)</p>	<p>24</p>  <p>Ø7"*35mm</p> <p>Cam lock (30pcs)</p>
<p>25</p>  <p>Ø14*9mm</p> <p>Cam lock (30pcs)</p>	<div style="border: 1px solid black; padding: 10px; margin-bottom: 10px;"> <p style="text-align: center;">ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)</p>  </div> <div style="text-align: center;">  <p style="font-size: small;">PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !</p> </div>	


STEP 1:

4		8	
8PCS		8PCS	

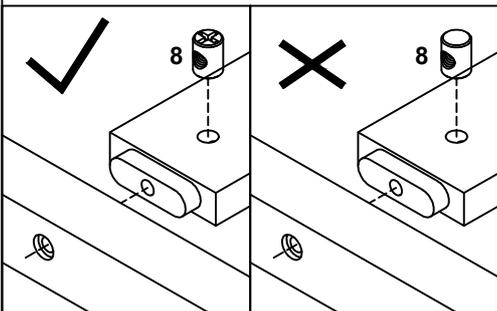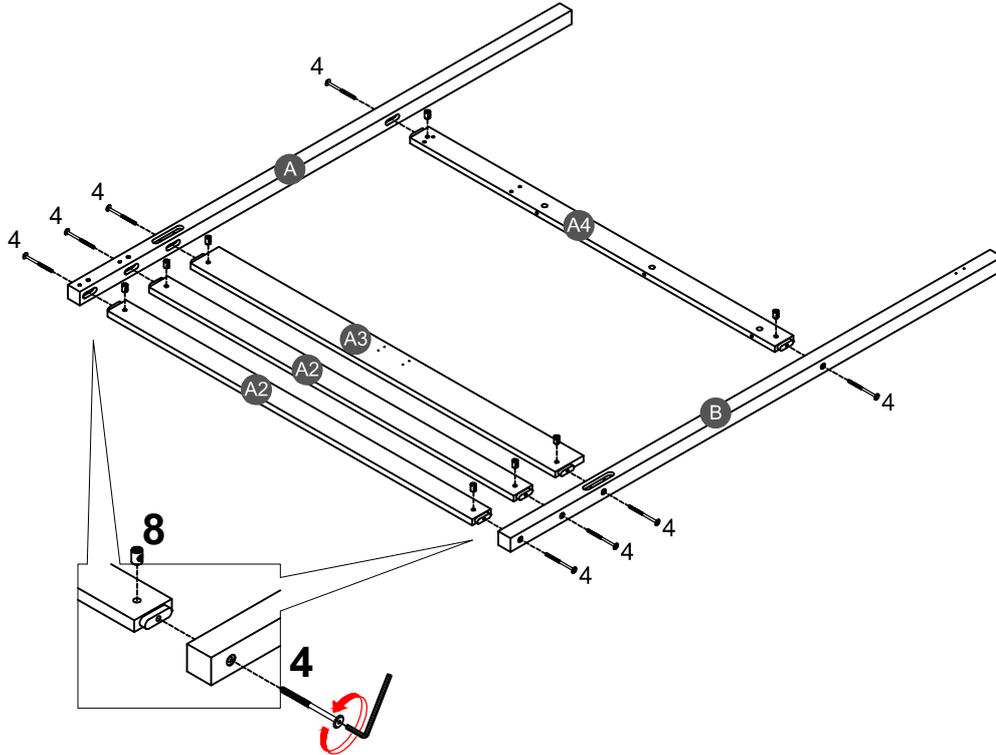


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

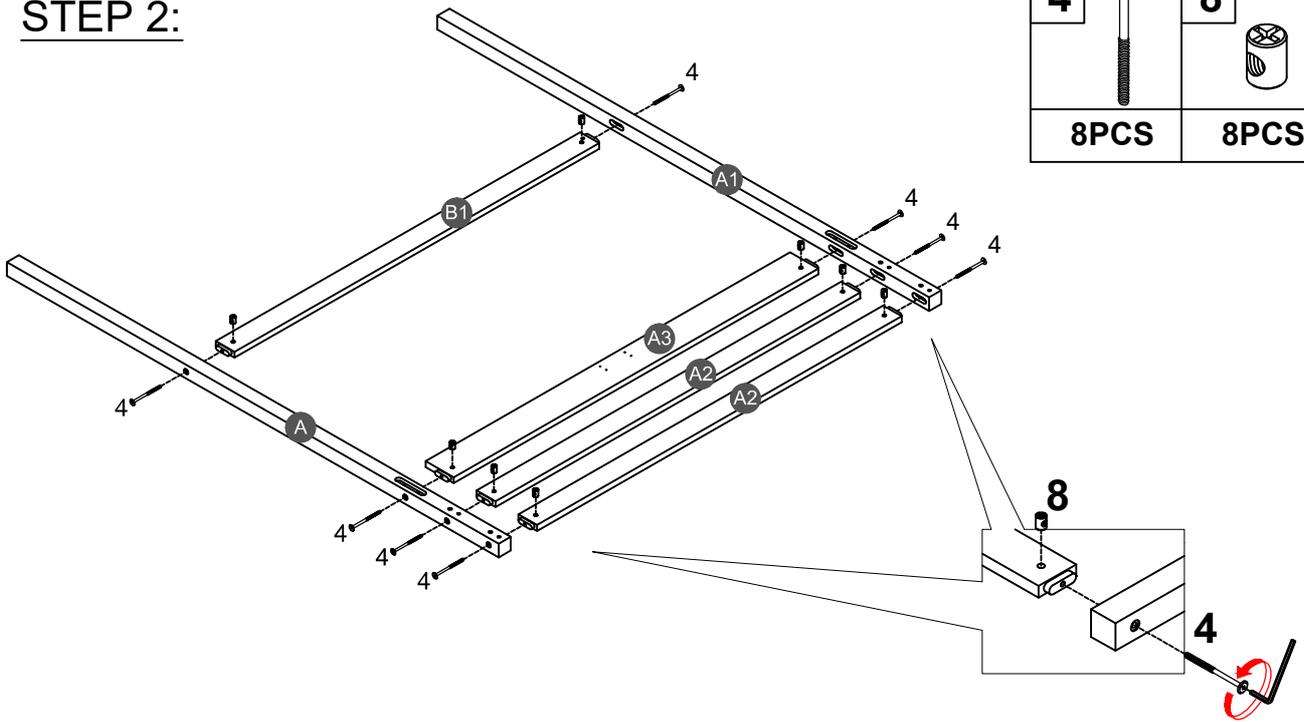


4		8	
8PCS		8PCS	

STEP 3:

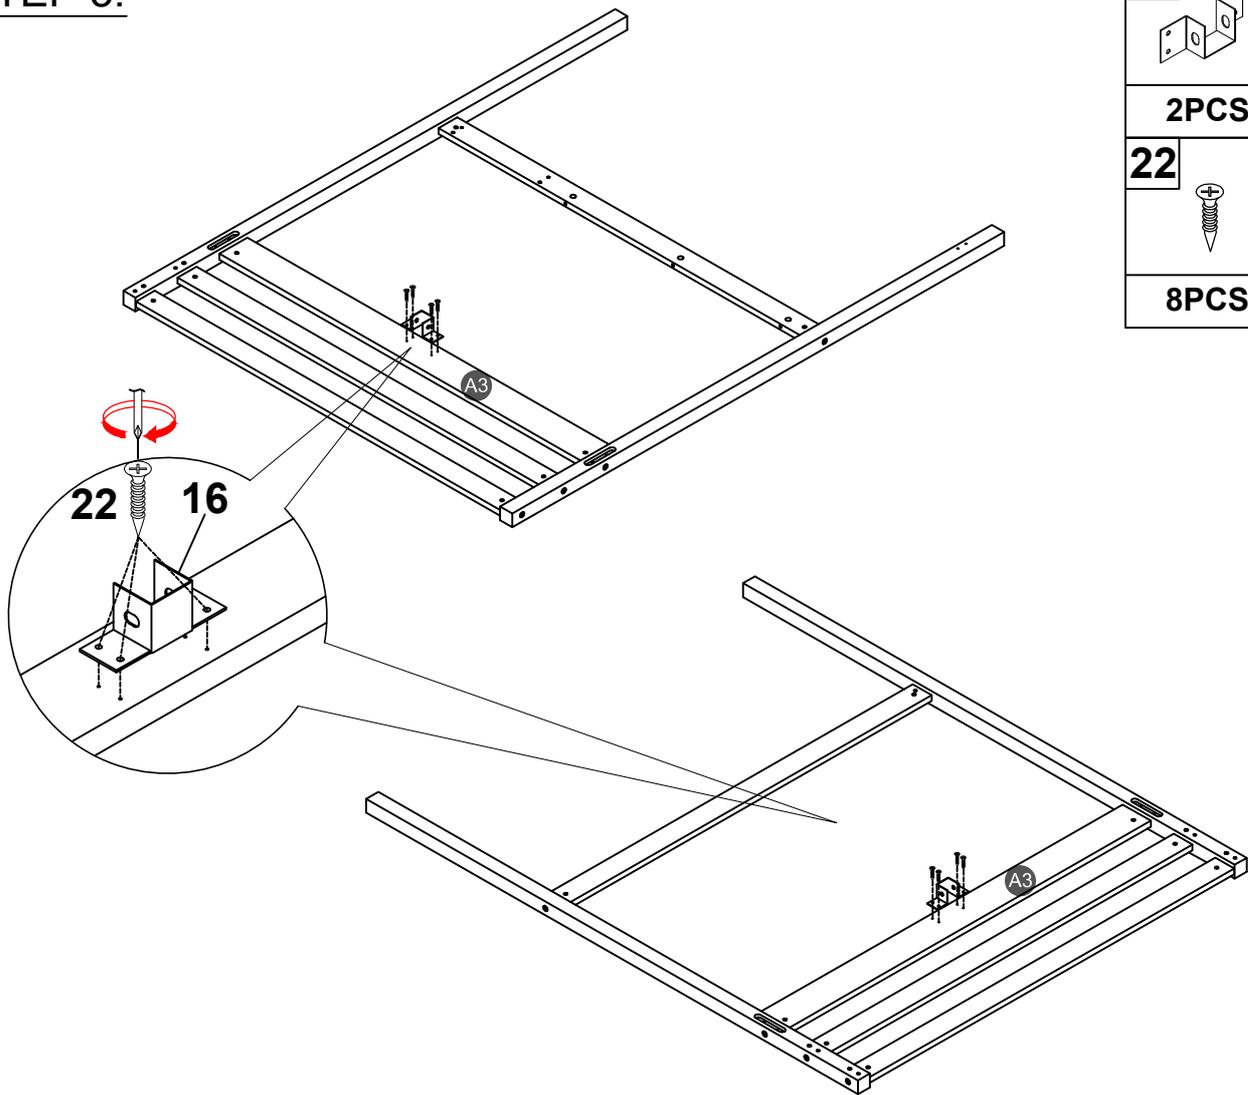


16	
2PCS	
22	
8PCS	

STEP 4:

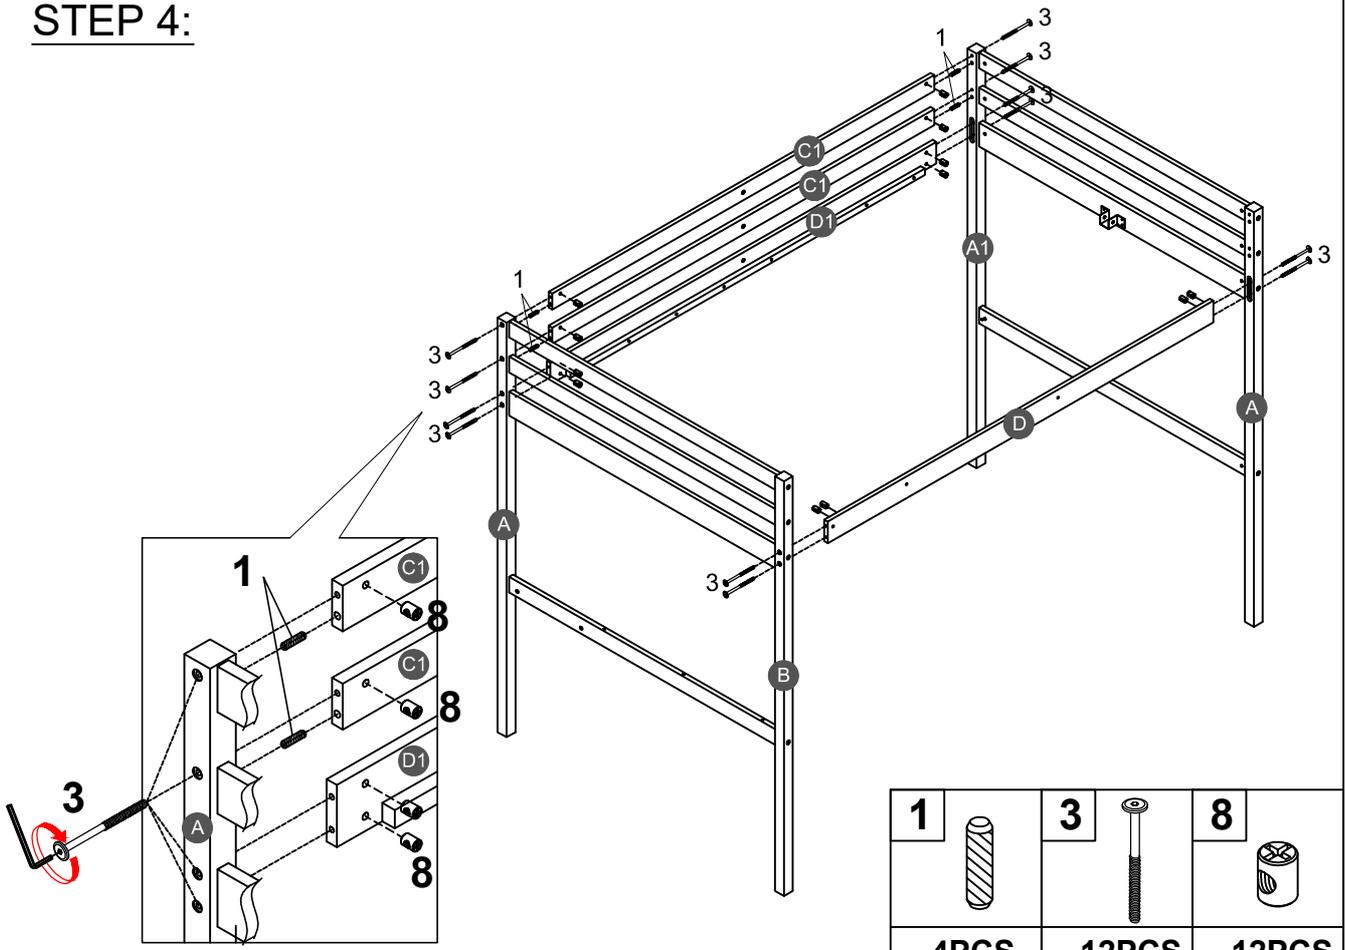


1		3		8	
	4PCS		12PCS		12PCS

STEP 5:

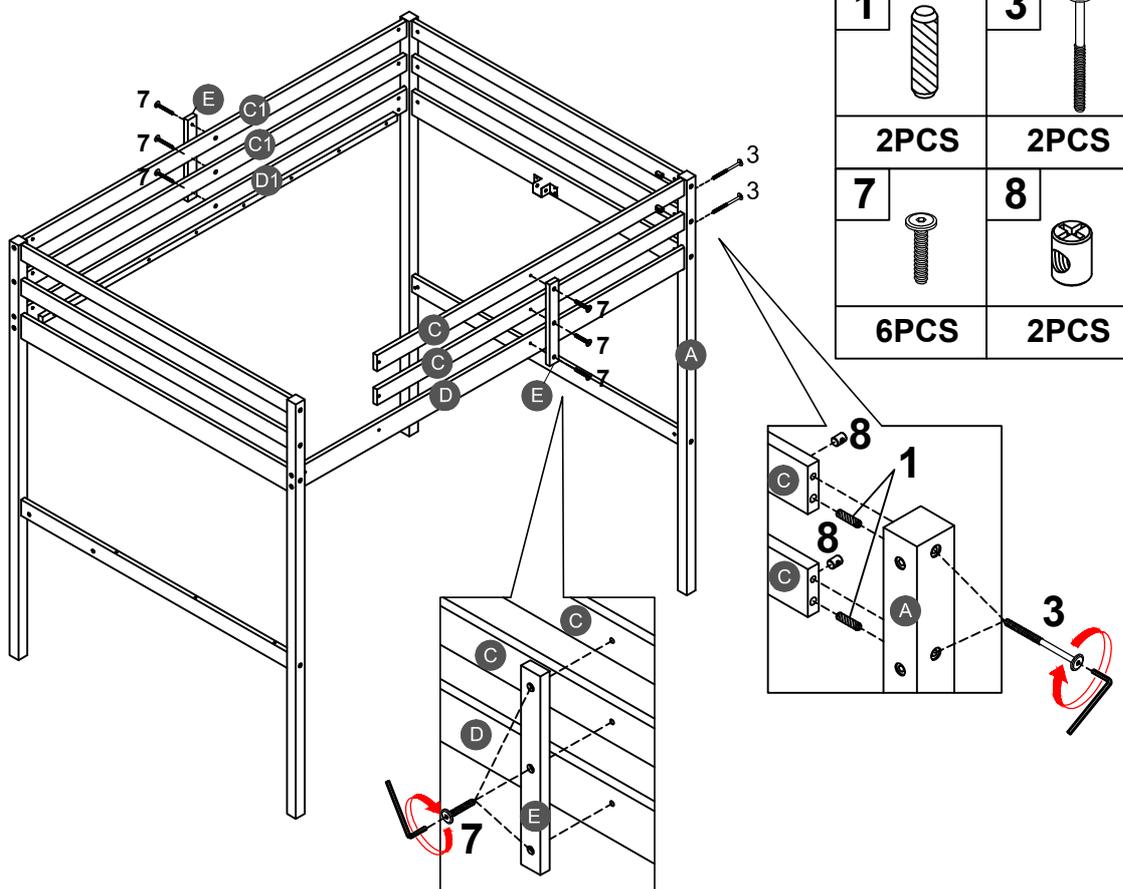


1		3	
	2PCS		2PCS
7		8	
	6PCS		2PCS

STEP 6:

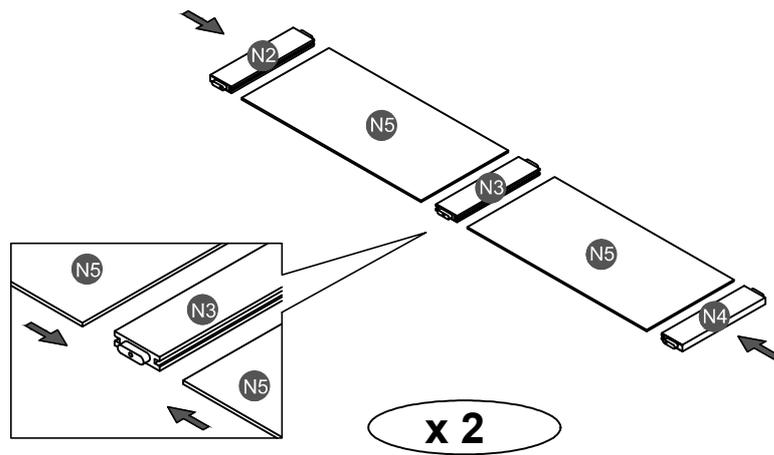

STEP 7:

10	
12PCS	

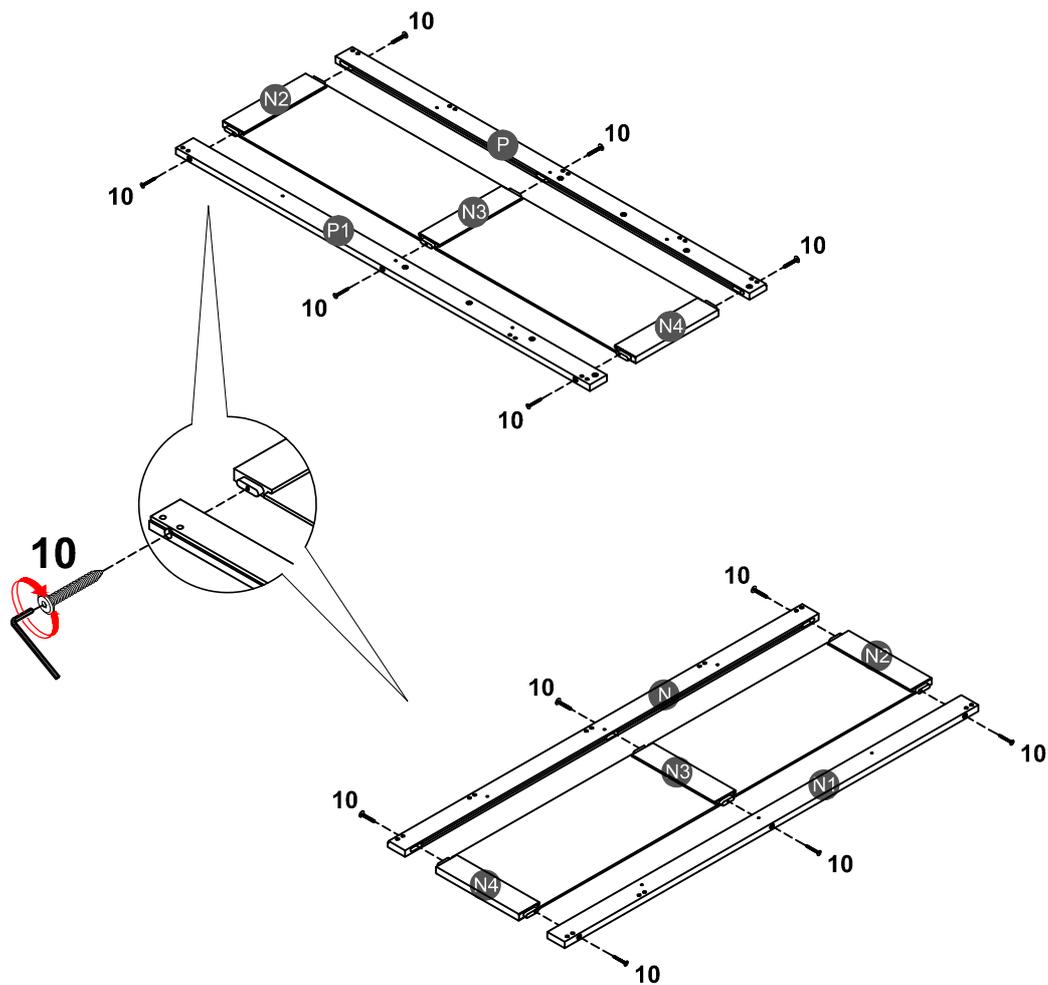


STEP 8:

24




16PCS

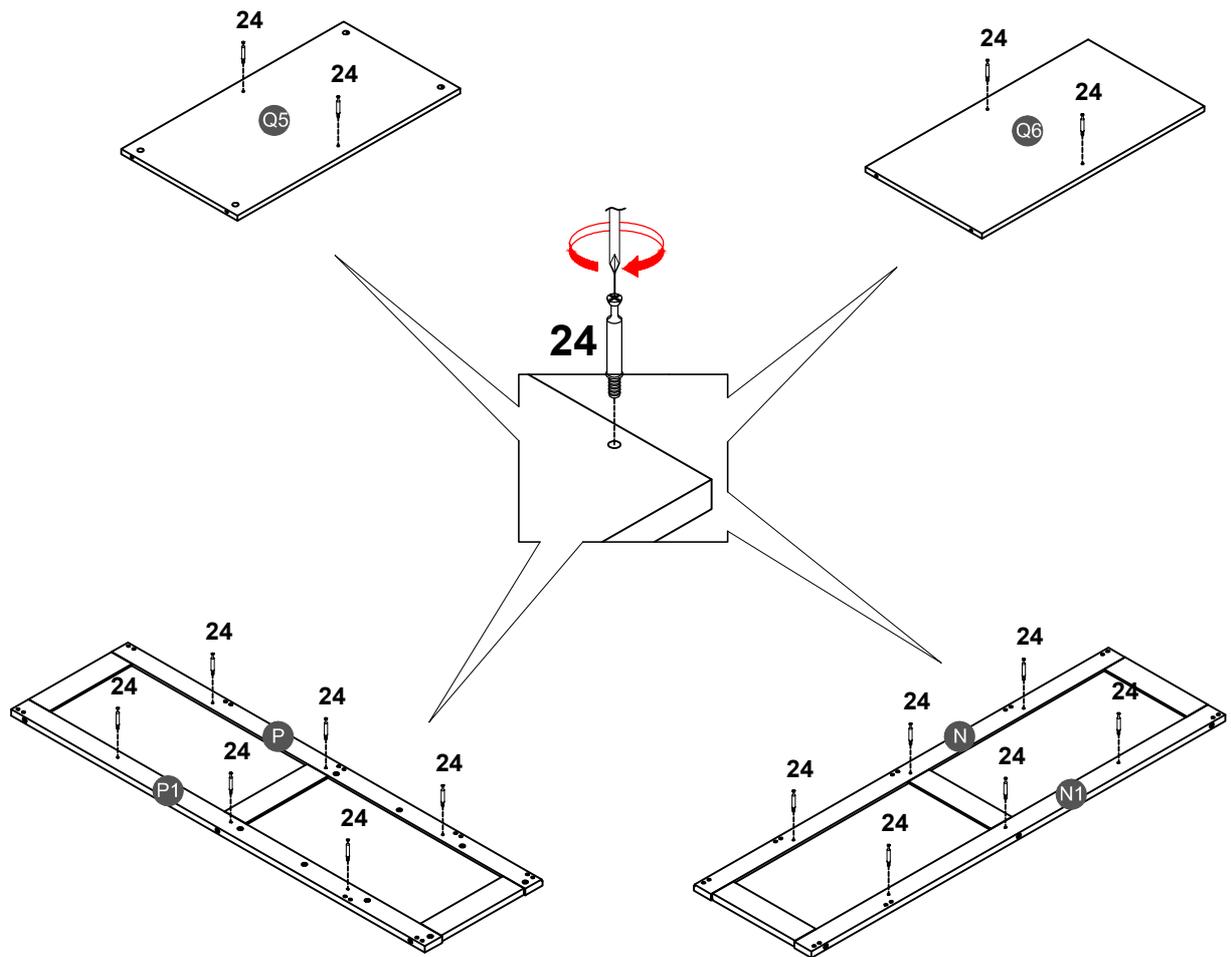


STEP 9:

25

4PCS

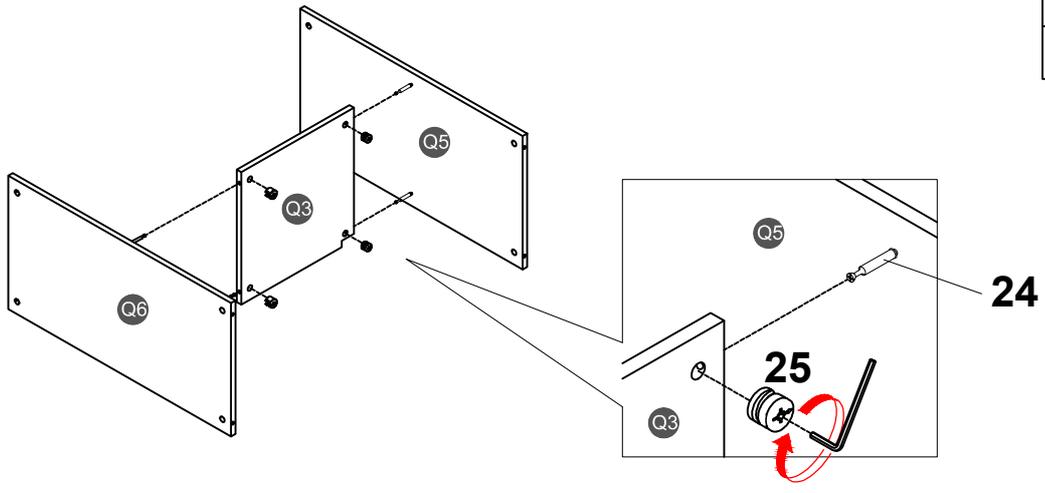


Note: Place hardware #25 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #25 into the hole of hardware #24 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)

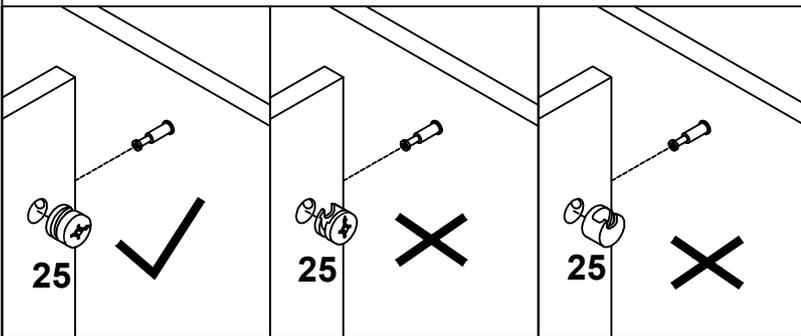


STEP 10:

5		8		21	
6PCS		6PCS		3PCS	

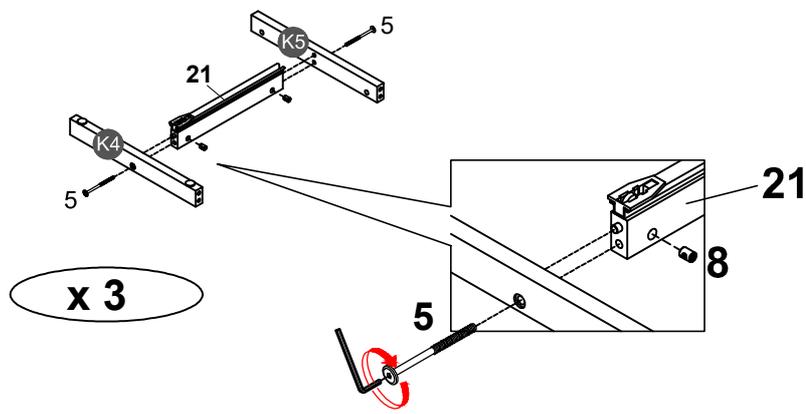


STEP 11:

2		5		8	
12PCS		14PCS		14PCS	

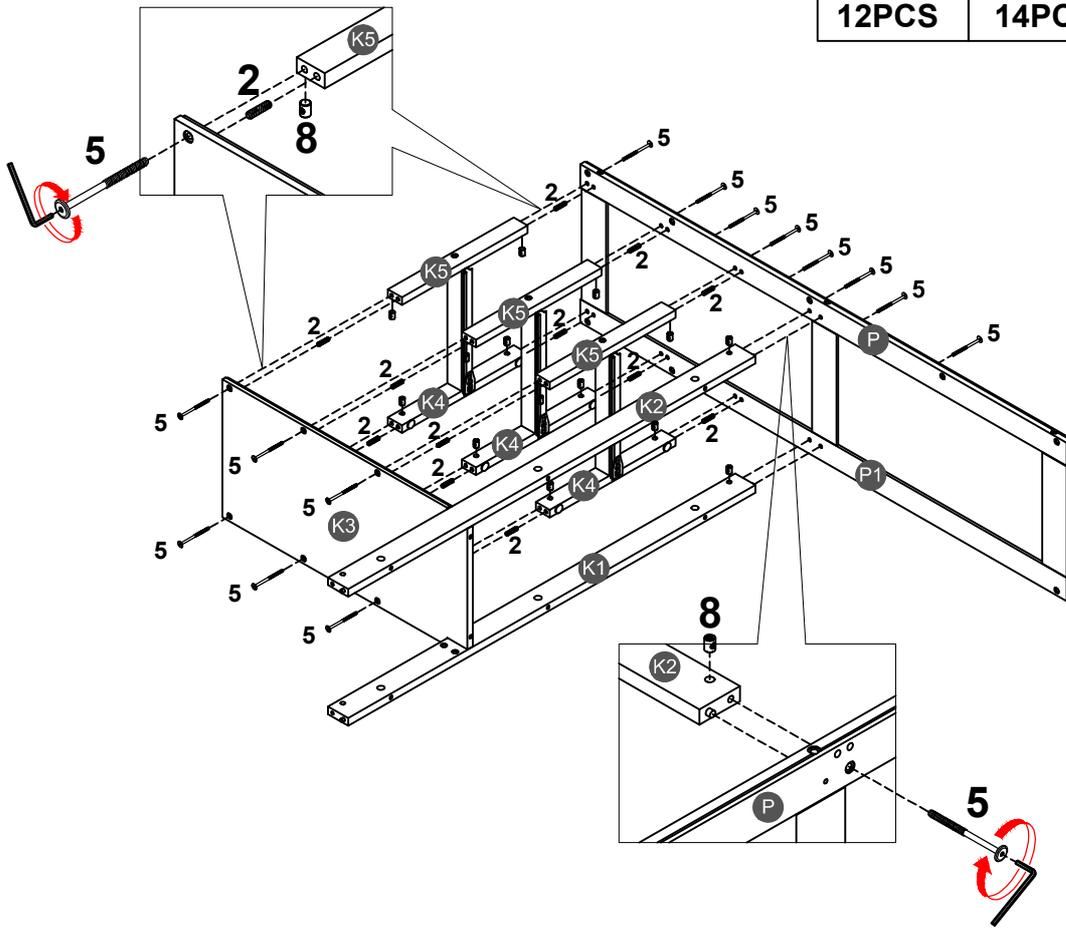


STEP 12:

5		8		19	
2PCS		2PCS		1PC	

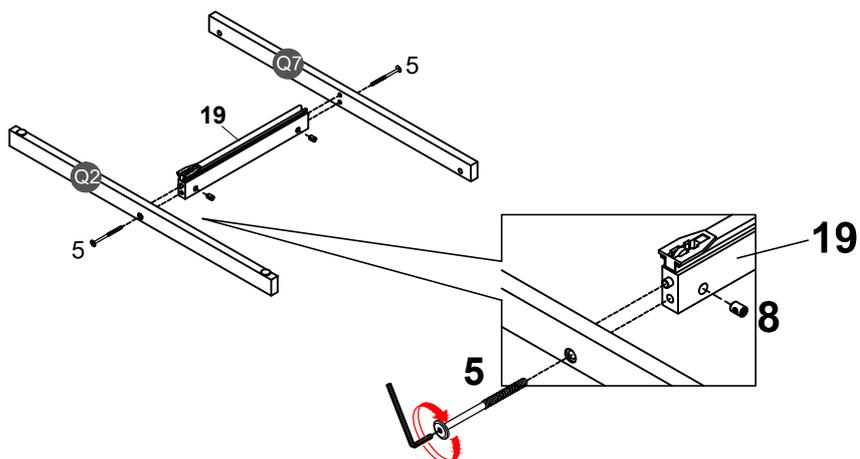


STEP 13:


2		5		8		25	
16PCS		15PCS		15PCS		12PCS	

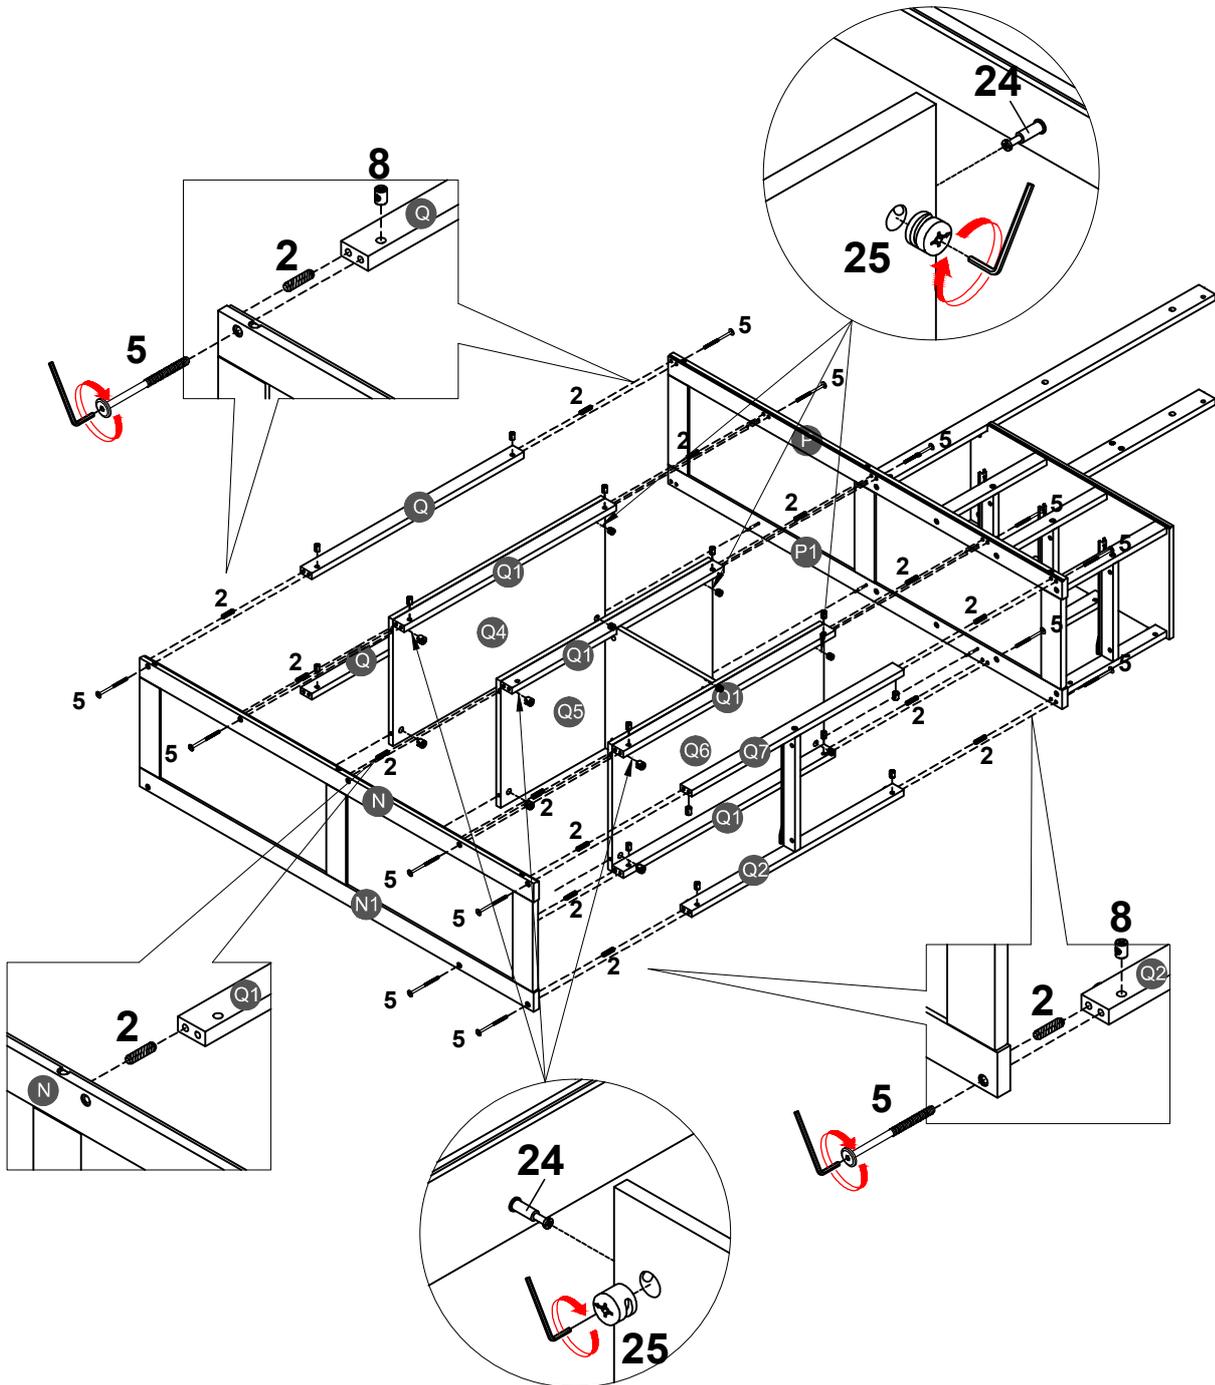


Note: Place hardware #25 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #25 into the hole of hardware #24 and tighten it clockwise with a hand screwdriver.
(Please do NOT use an electric screwdriver.)

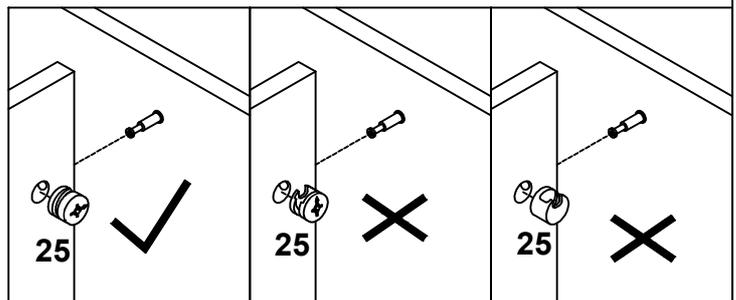

STEP 14:

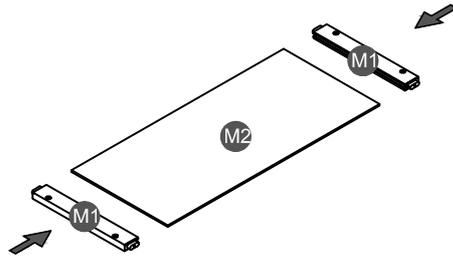

STEP 15:

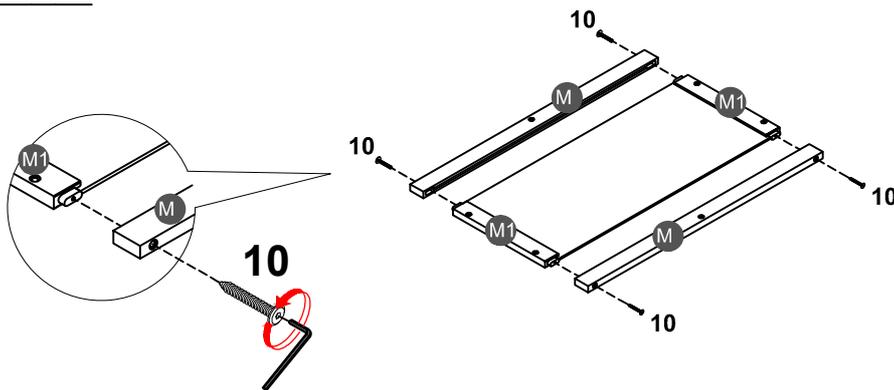


10



4PCS

STEP 16:

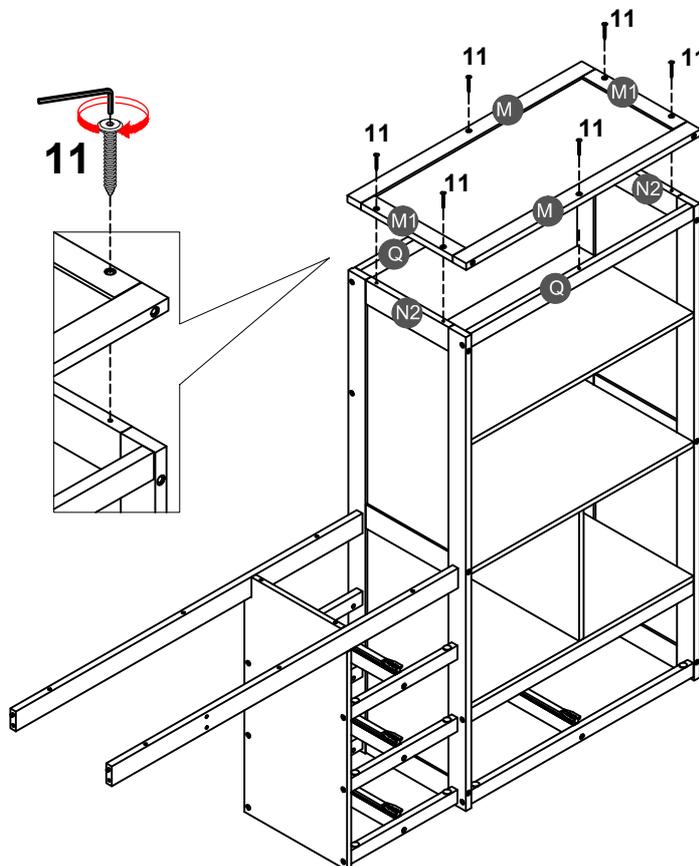


11




6PCS


STEP 17:

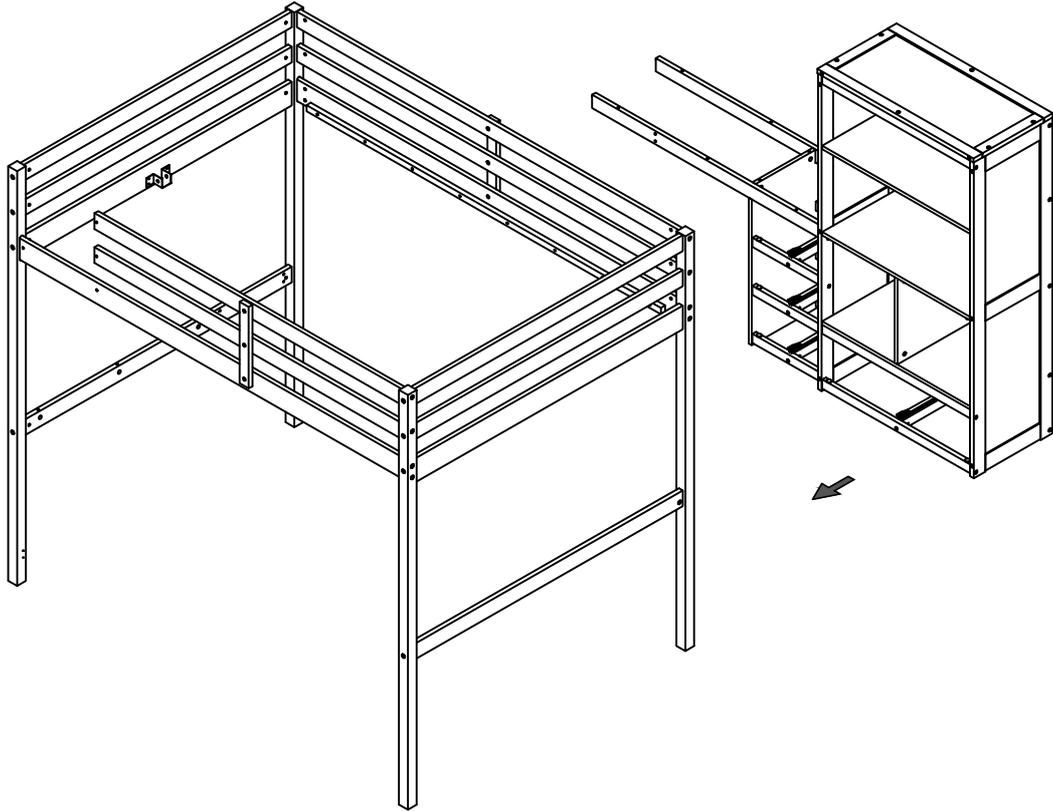


STEP 18:

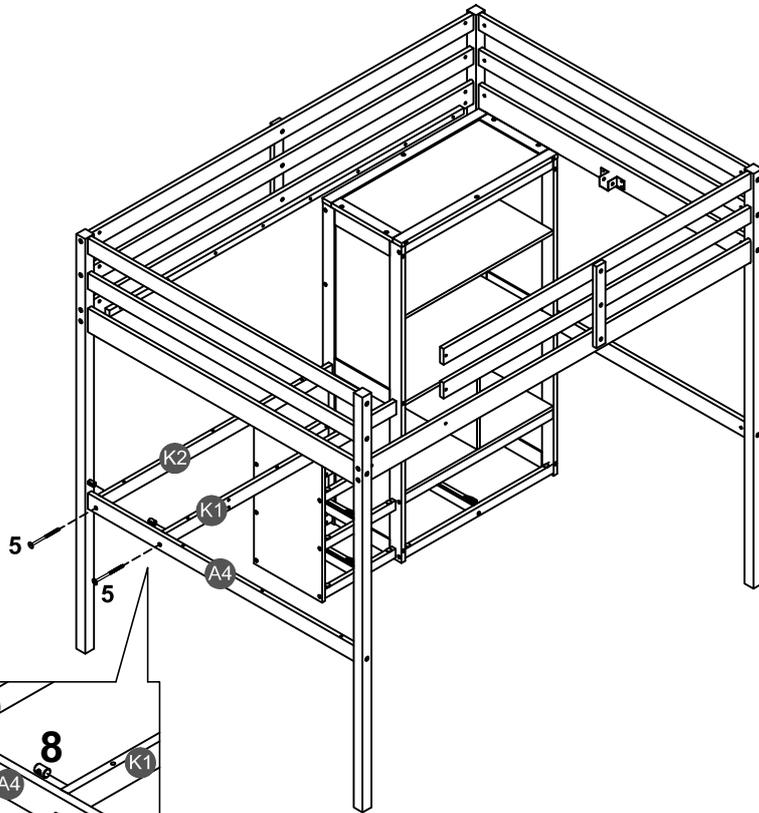

5		8	
2PCS		2PCS	

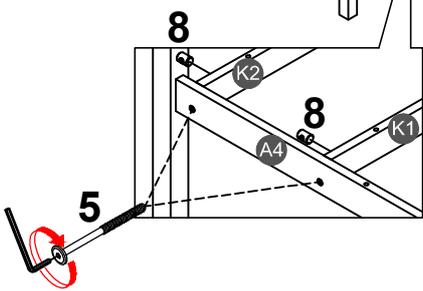


STEP 19:

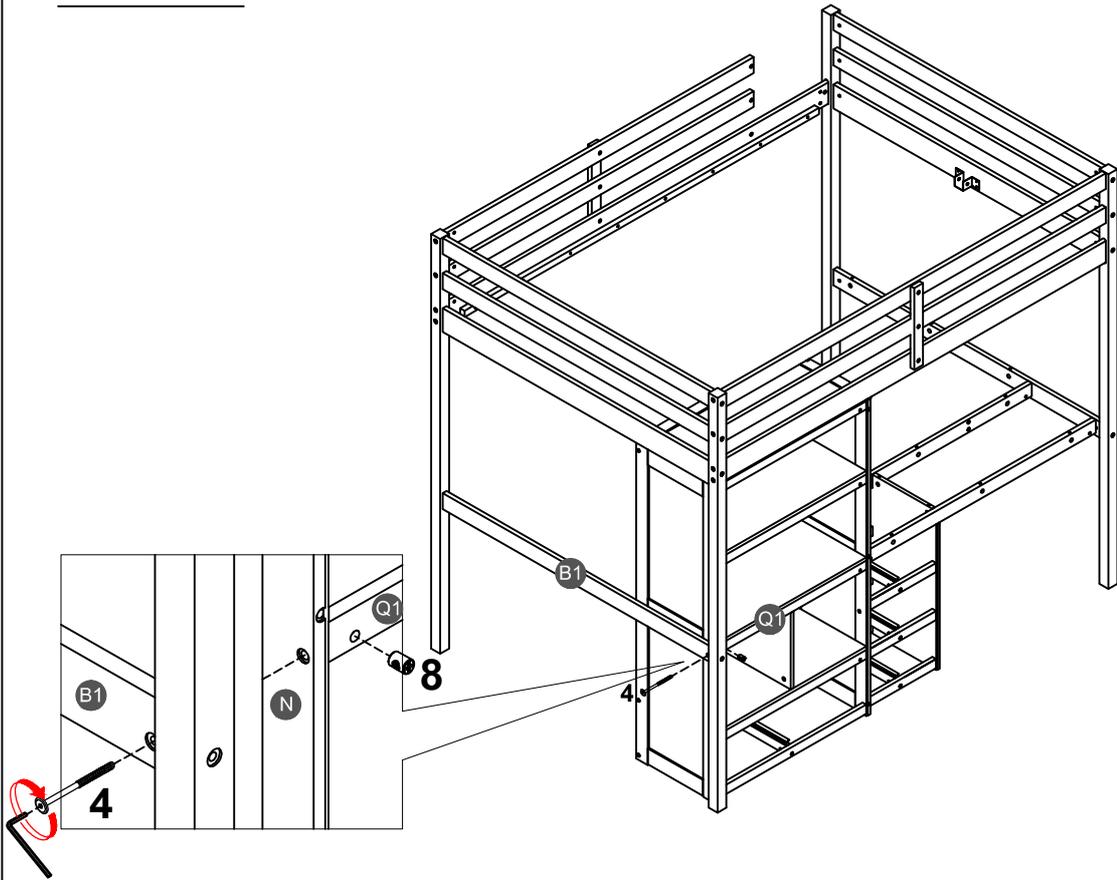


4	
	1PC
8	
	1PC

STEP 20:

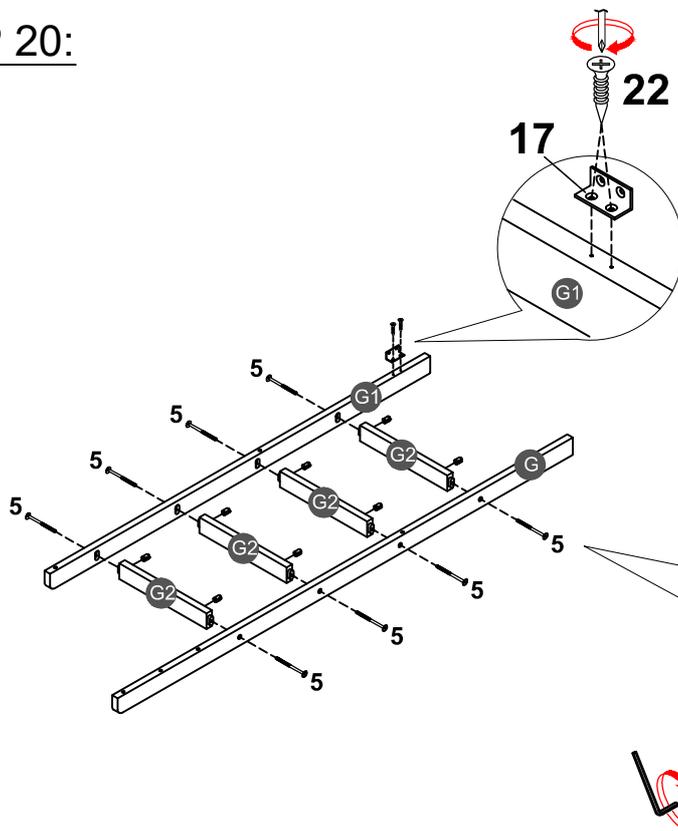


5		8	
	8PCS		8PCS
17		22	
	1PC		2PCS

STEP 21:

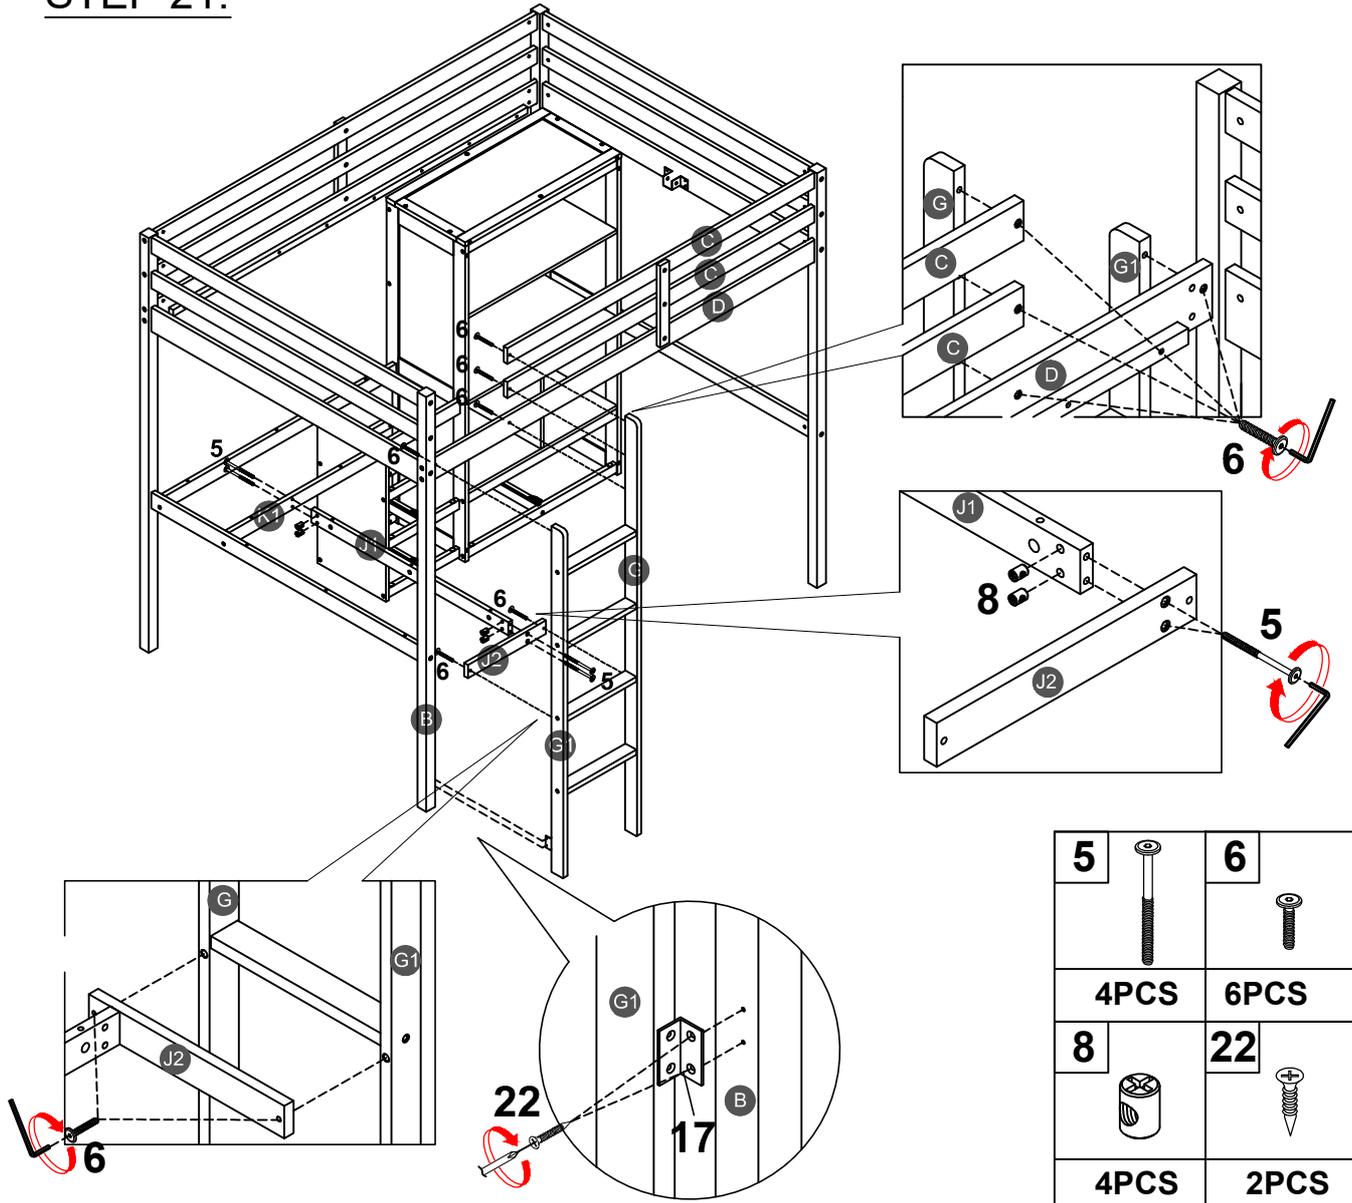


5		6	
	4PCS		6PCS
8		22	
	4PCS		2PCS

STEP 22:

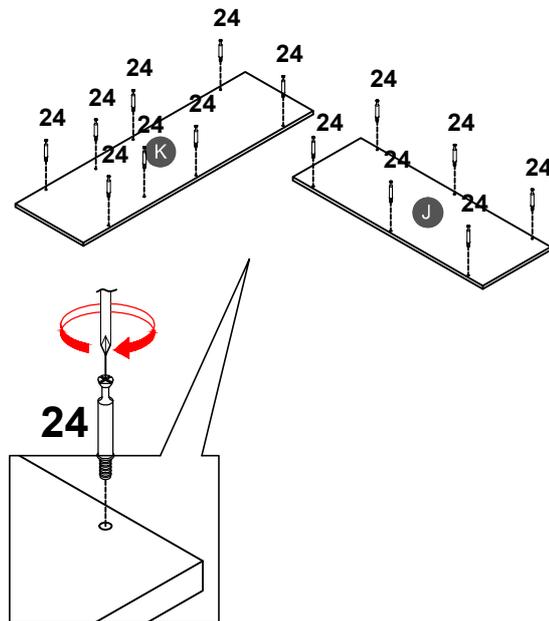

24	
	14PCS

STEP 23:

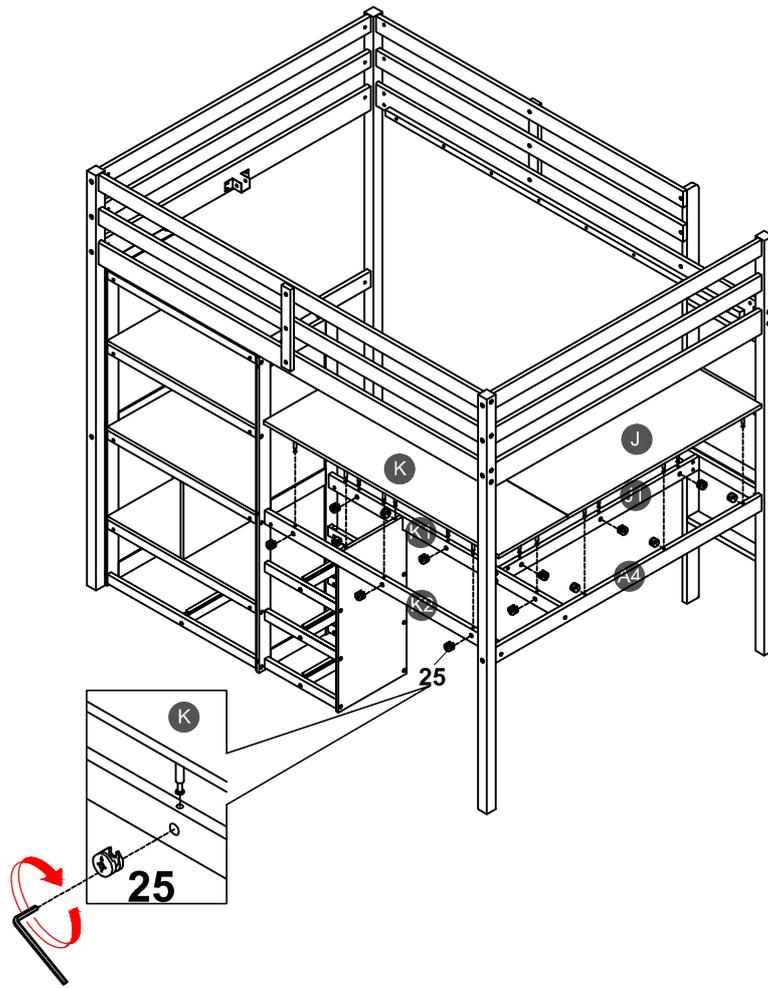


25



14PCS

STEP 24:

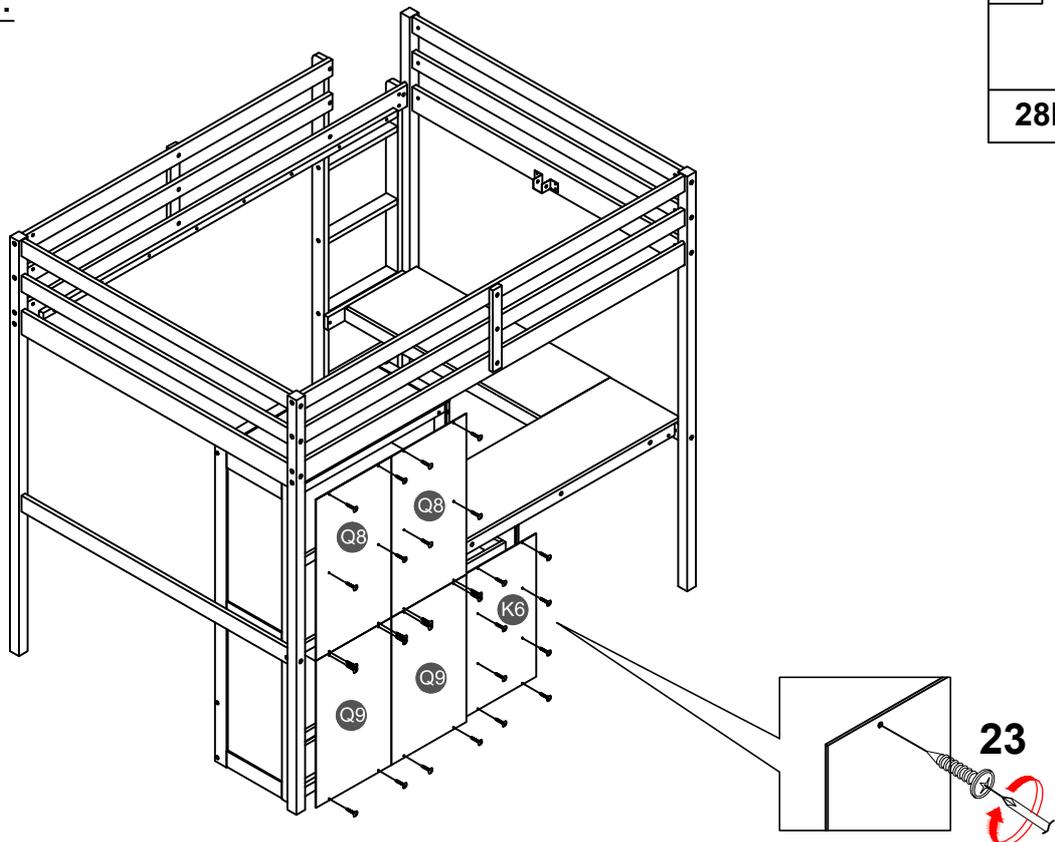


23




28PCS

STEP 25:

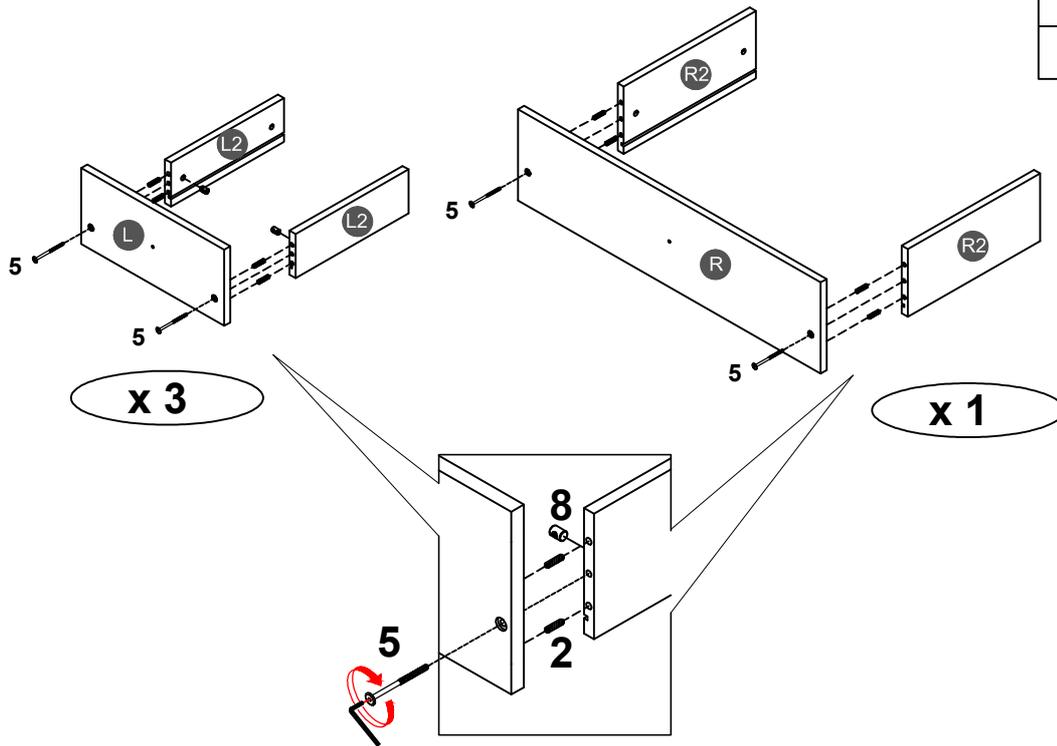


2		5	
16PCS		8PCS	
		8	
		8PCS	

STEP 26:

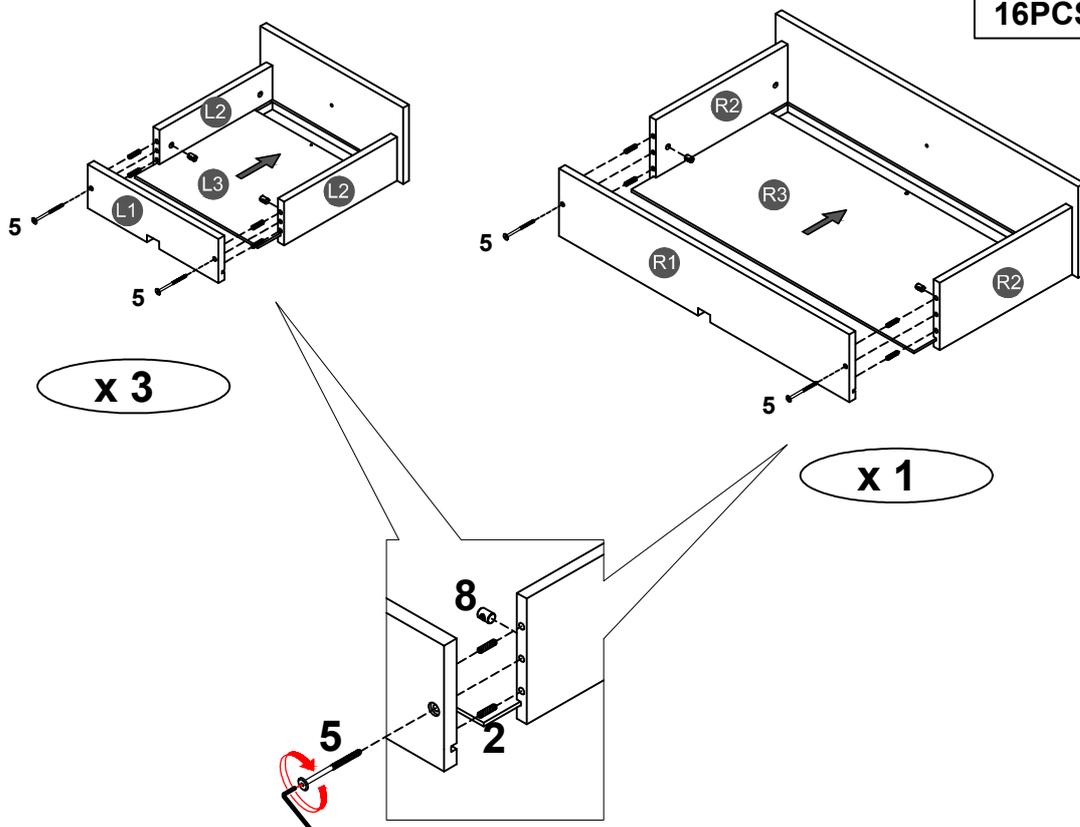


2		5	
16PCS		8PCS	
		8	
		8PCS	


STEP 27:

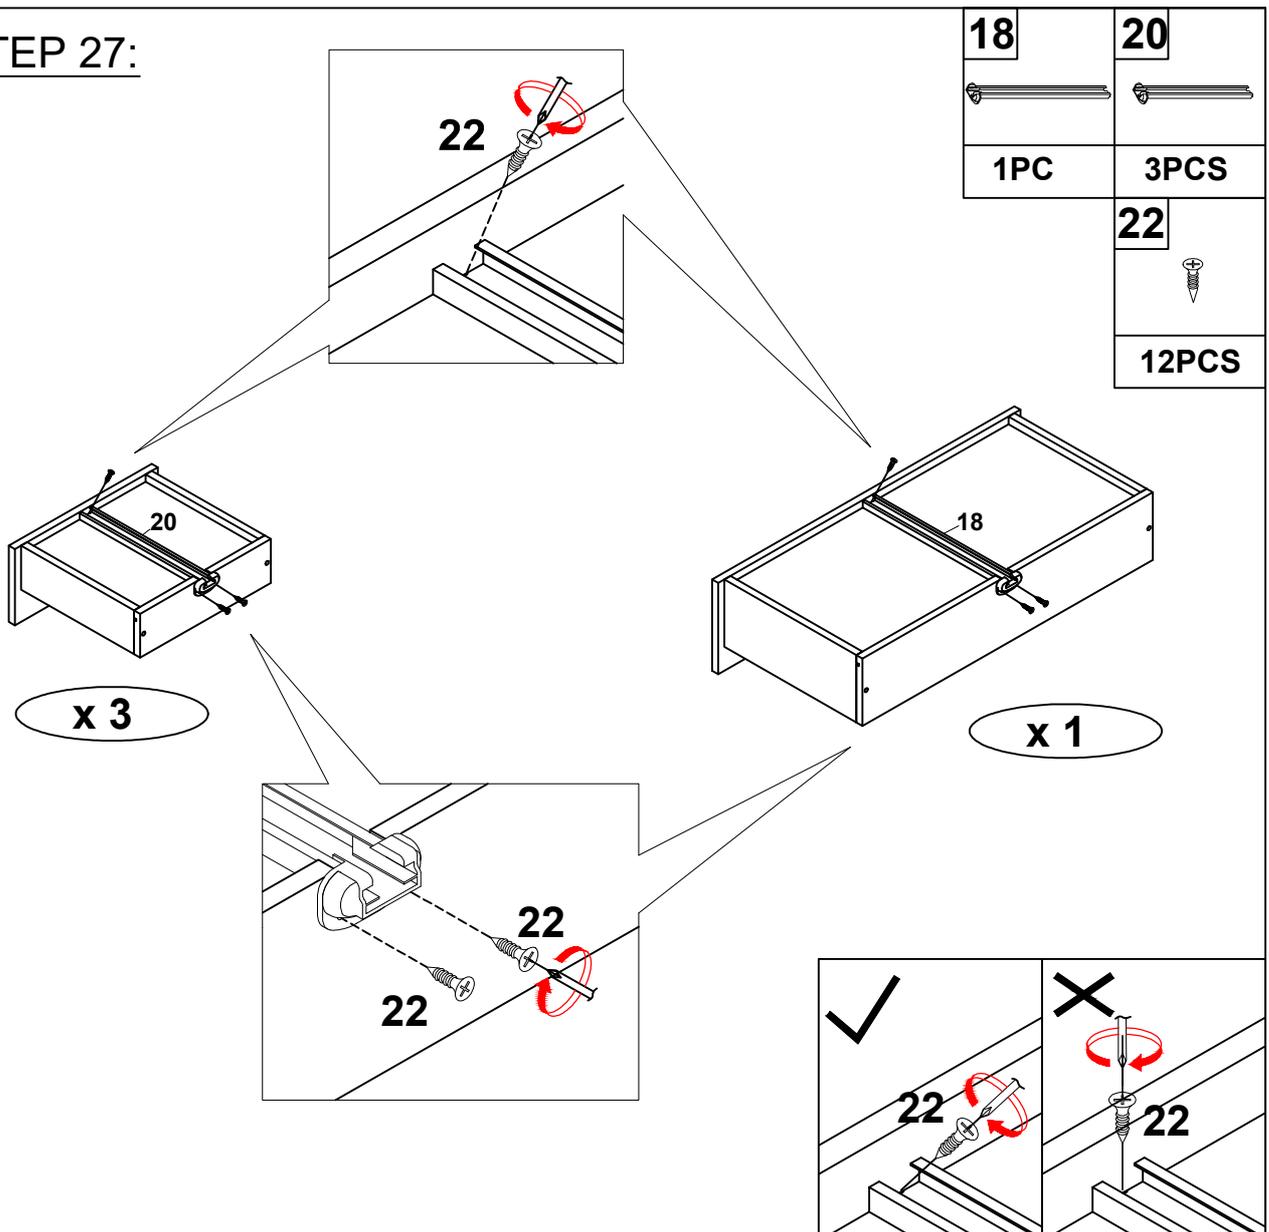


STEP 28:

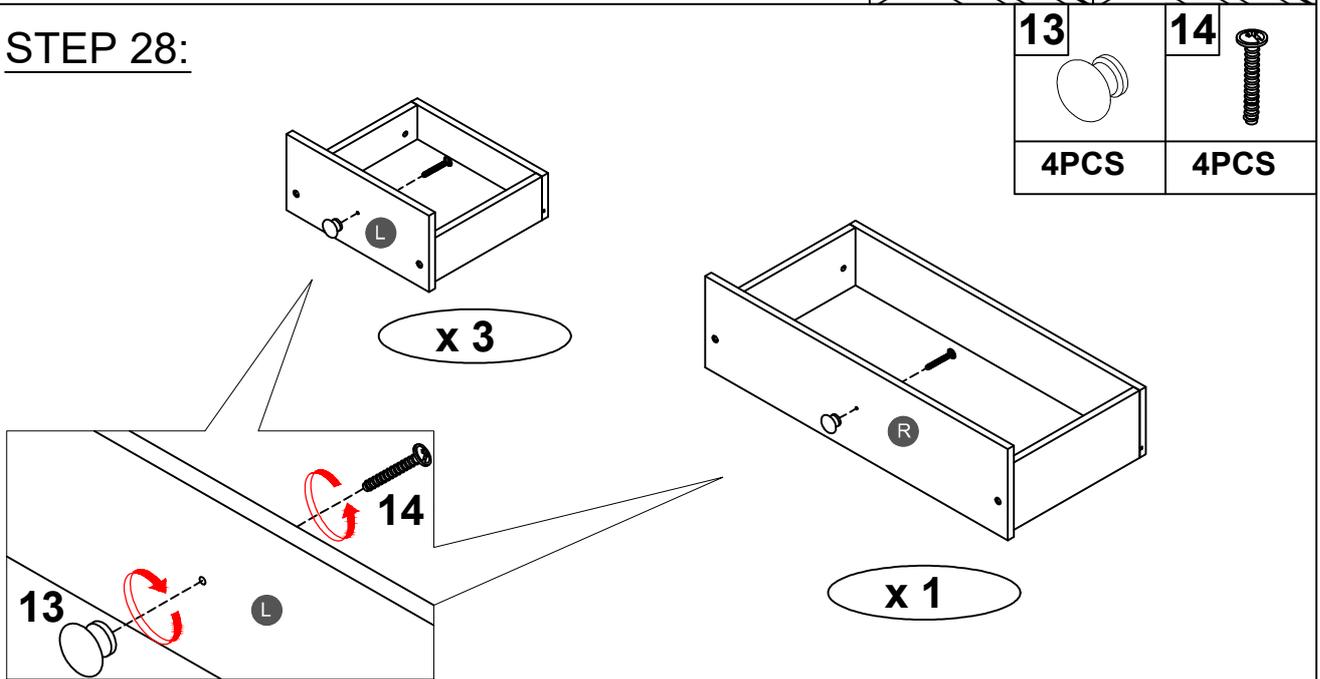

STEP 29:

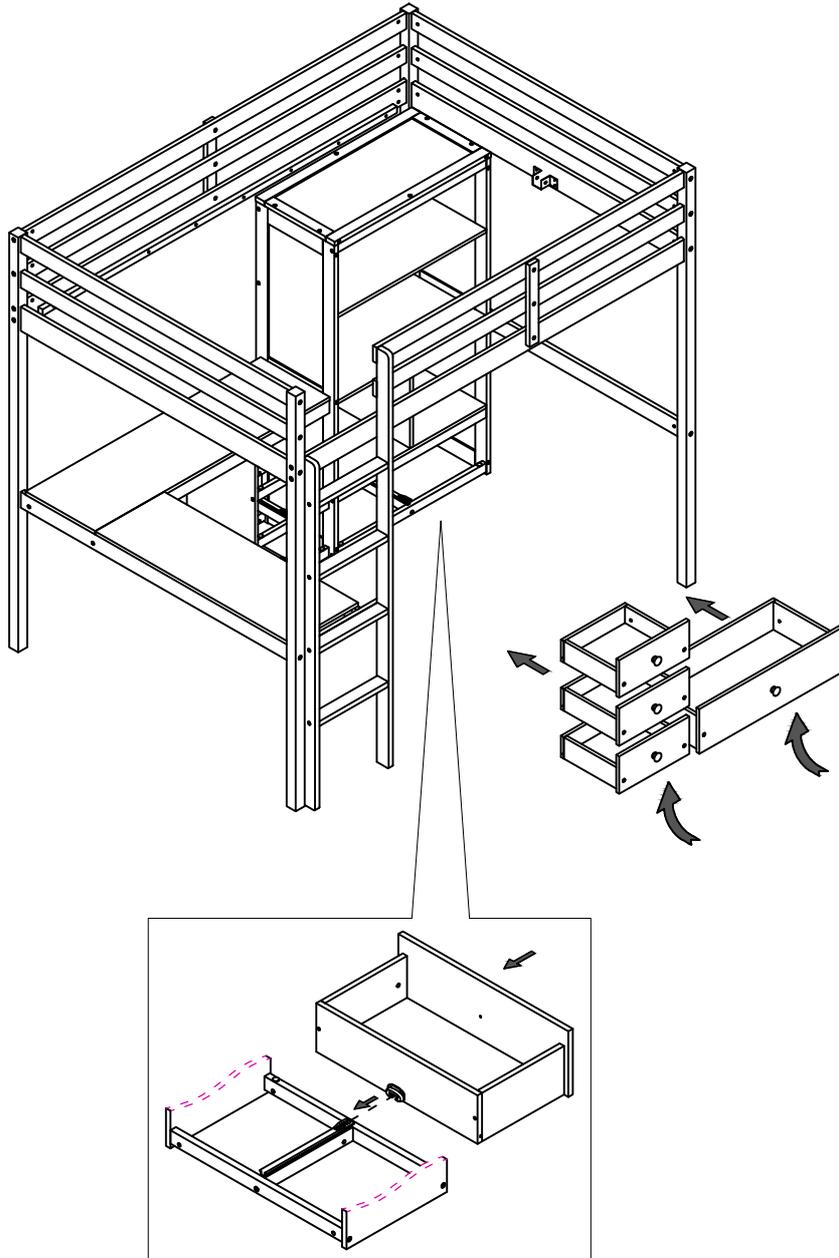


Align the slide rail at the bottom of the drawer and ensure it is secure, then push the drawer in firmly to make the slide rails smoothly on the track.

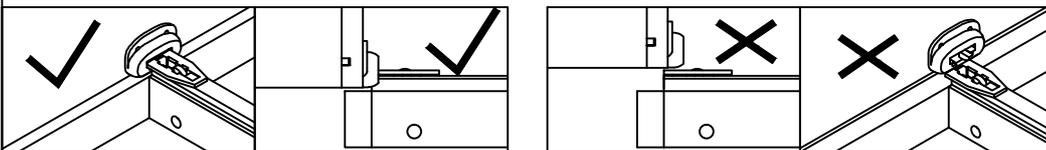




STEP 30:

6	9
	
2PCS	2PCS

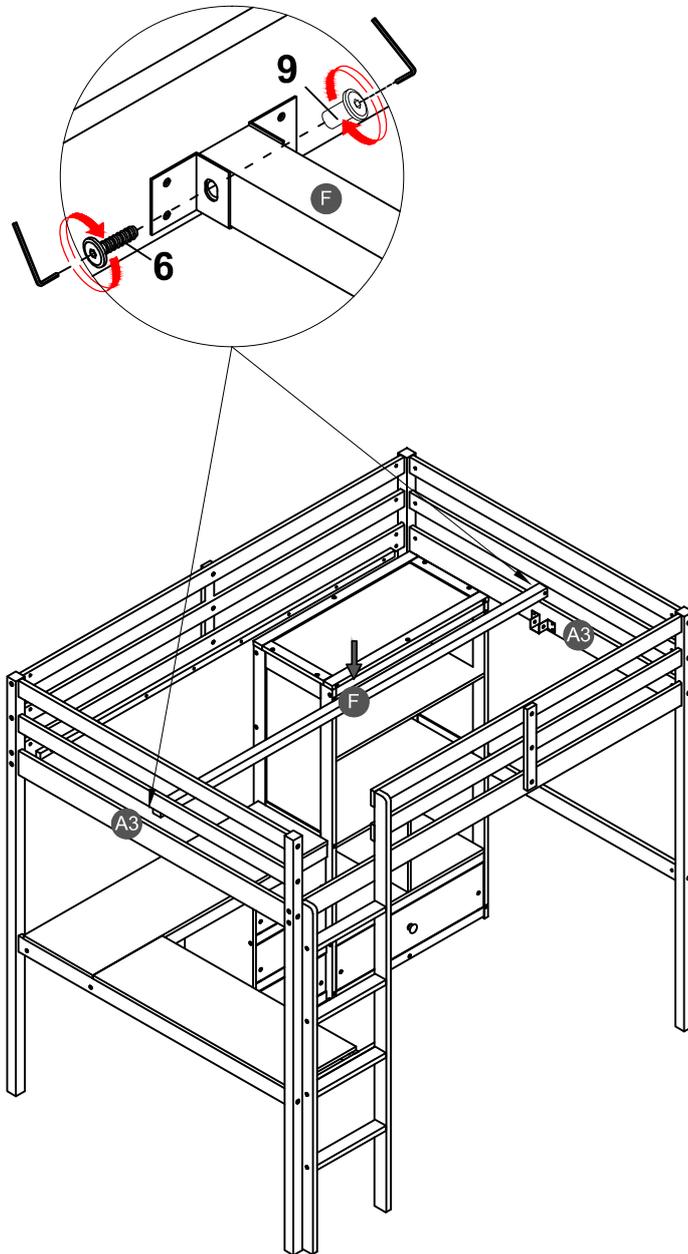

STEP 31:

15	
16PCS	

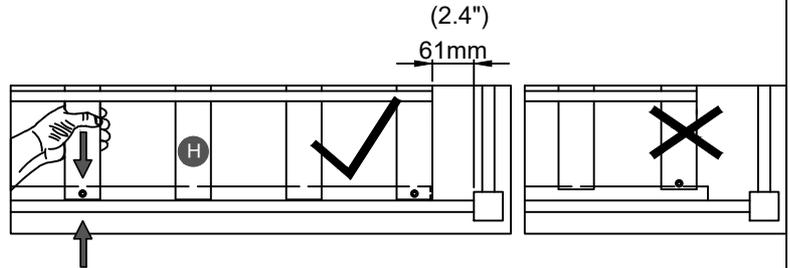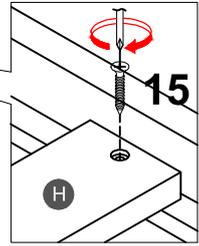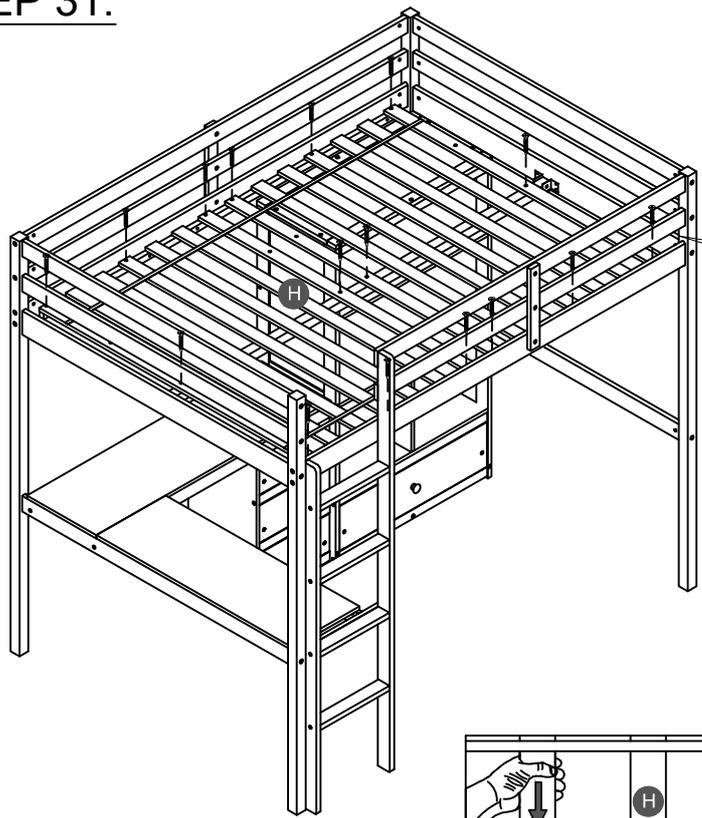

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

