





Dressing Table

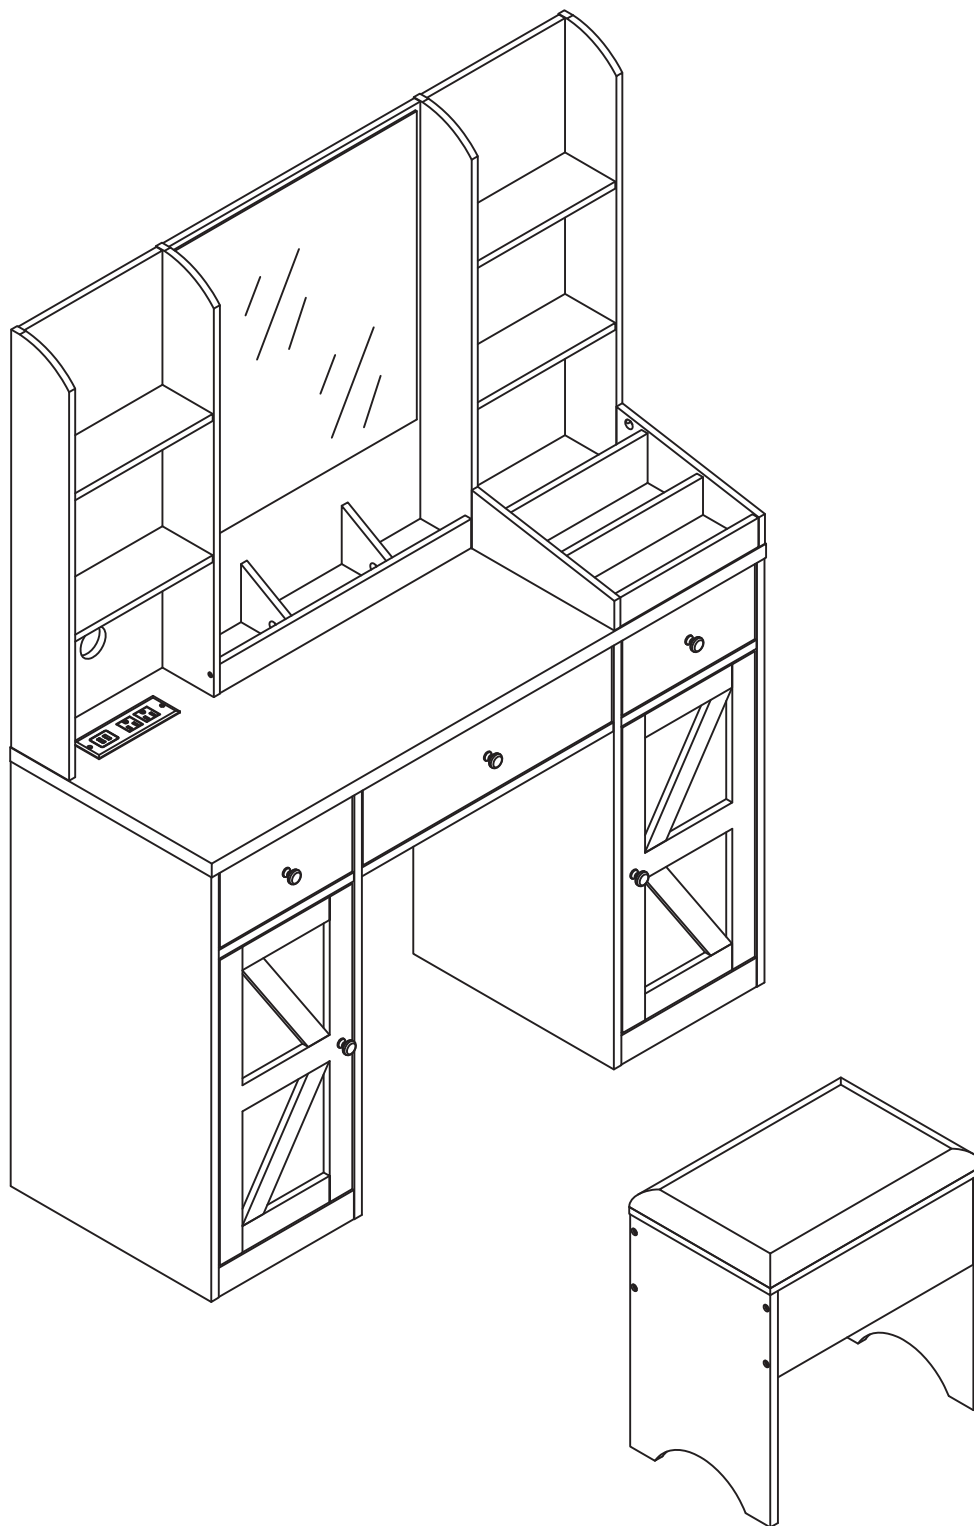

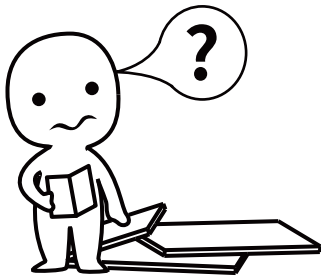


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

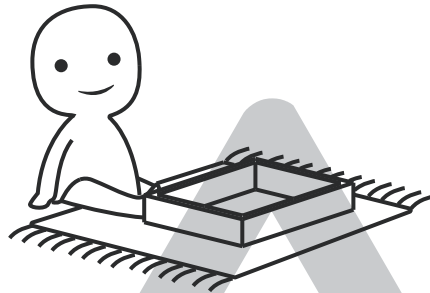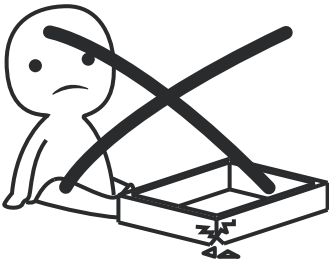




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

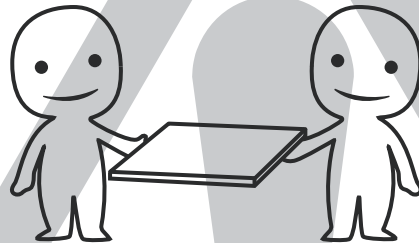

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

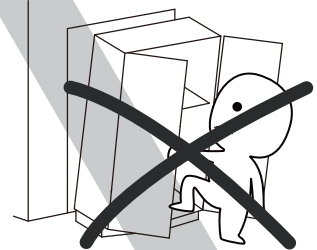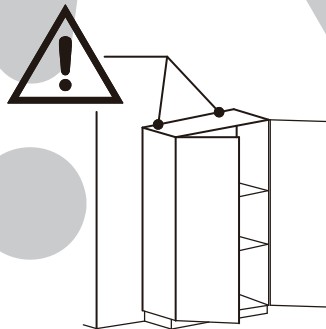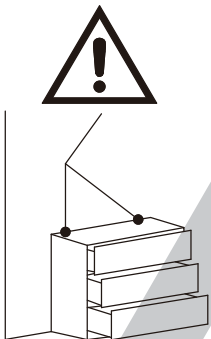

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Board Identification

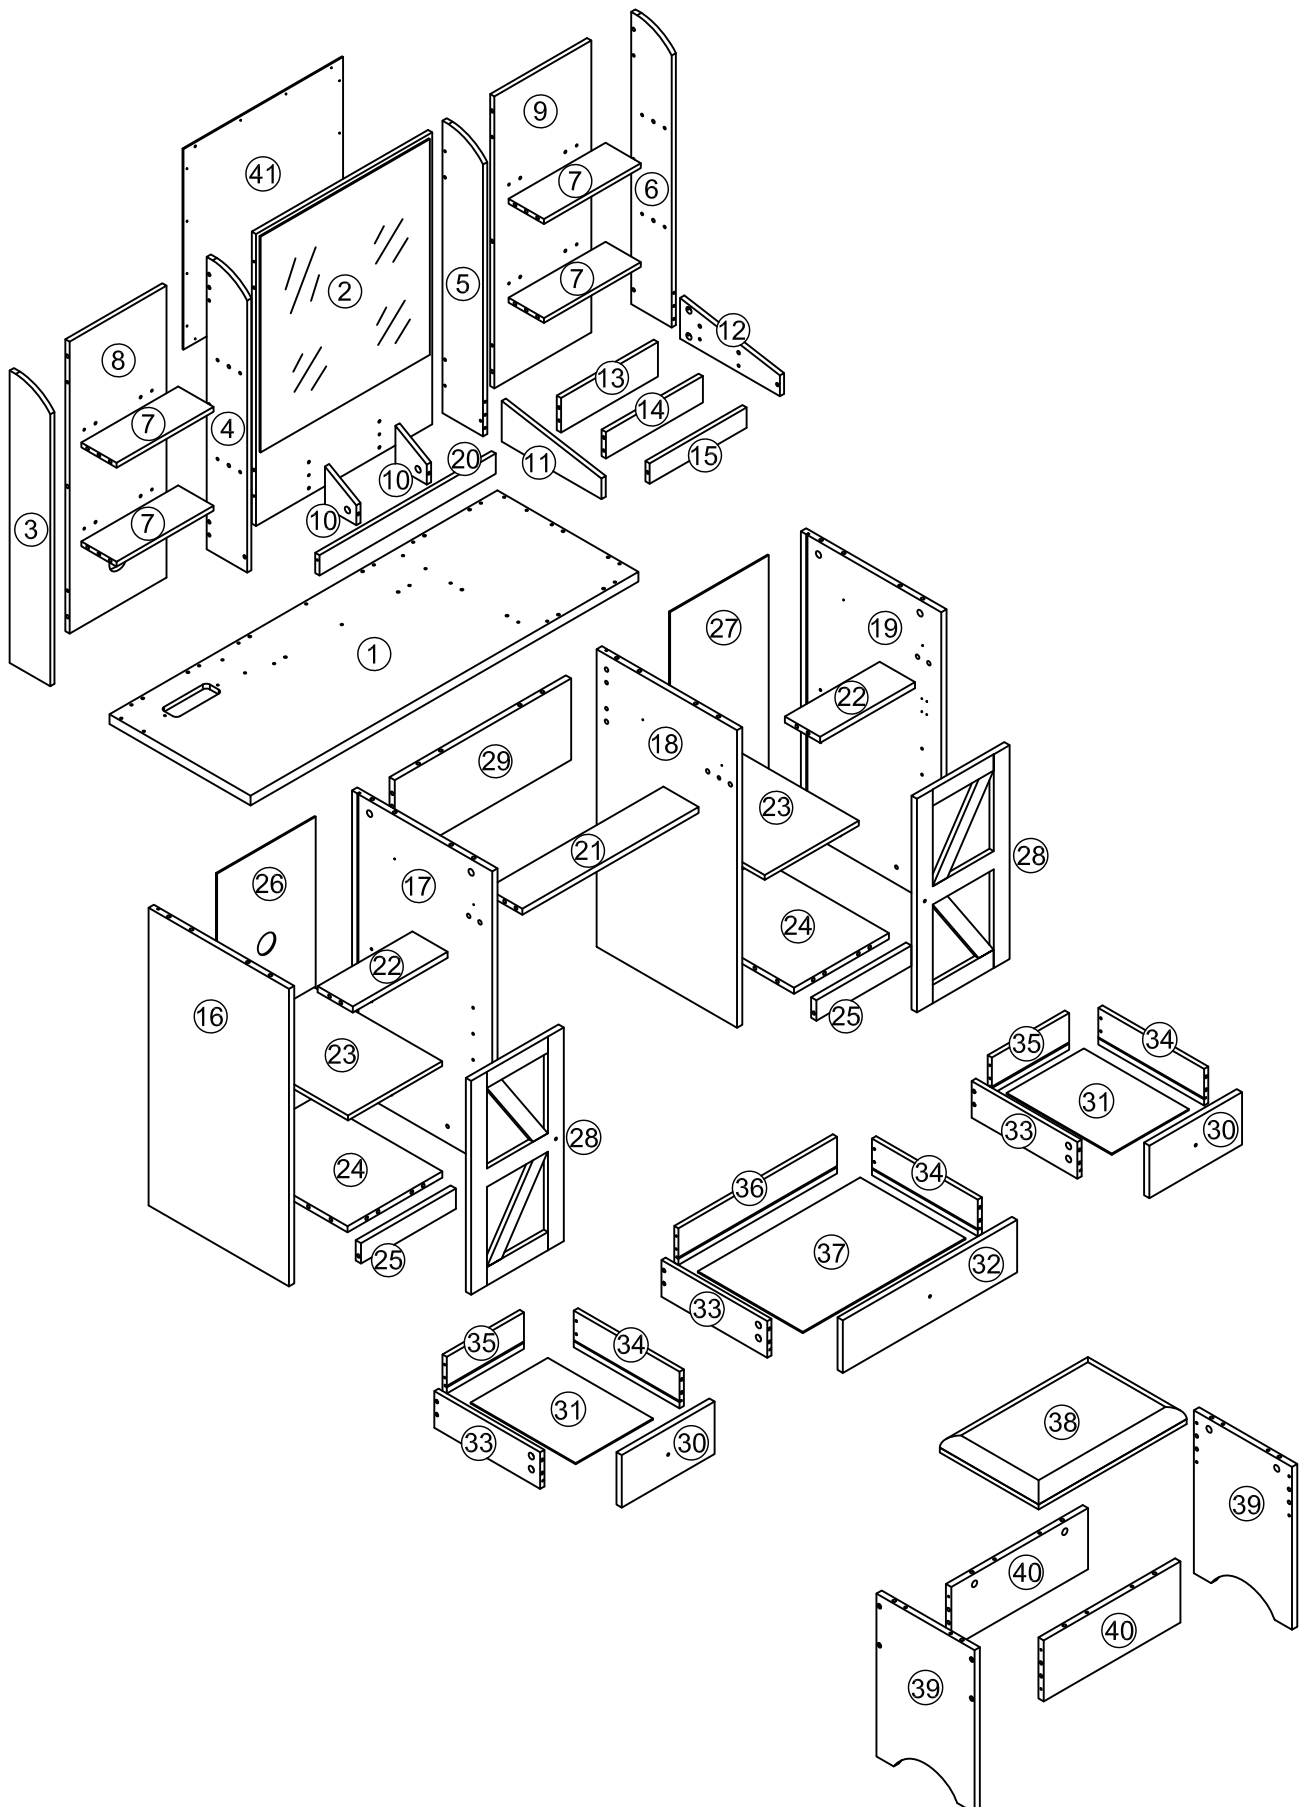


PARTS LIST

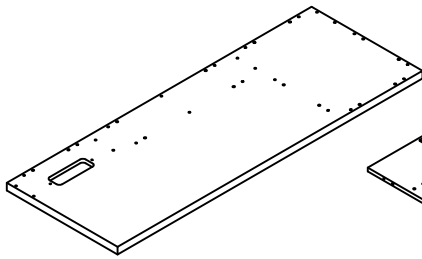


①

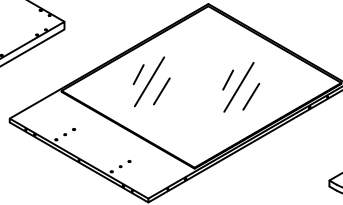


②

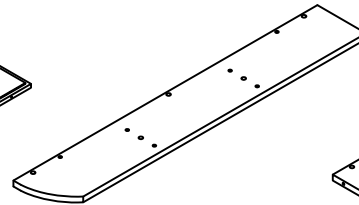


③

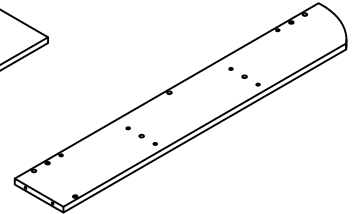


④

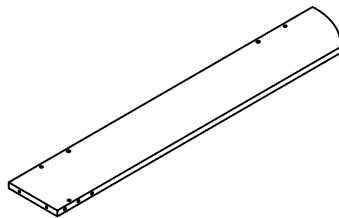


⑤

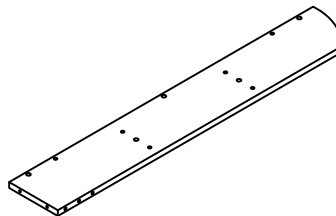


⑥

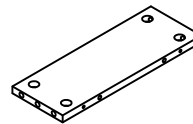


⑦ X4

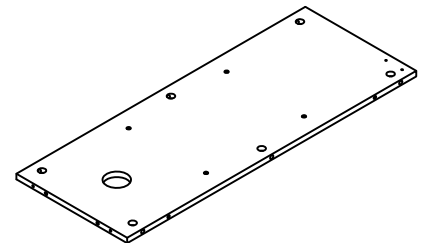


⑧

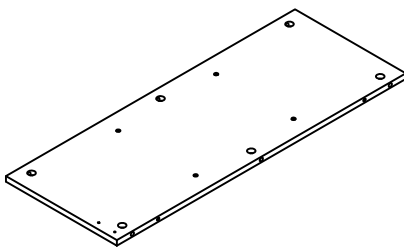


⑨




⑩ X2

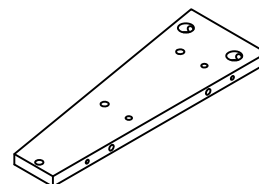


⑪

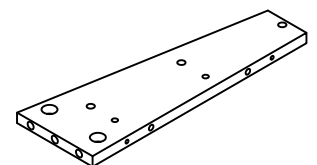


⑫

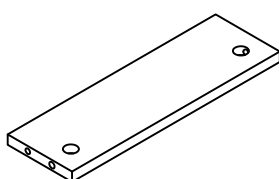


⑬

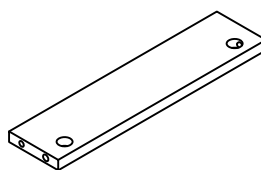

⑭

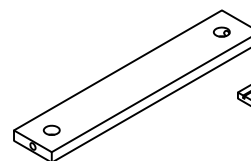


⑮

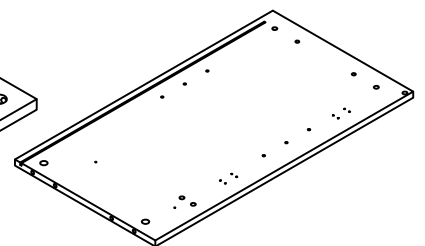


⑯


PARTS LIST

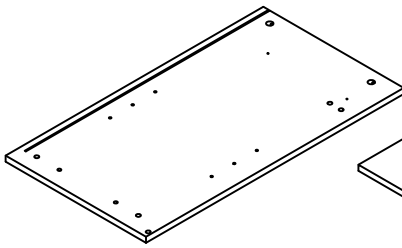


①⑦

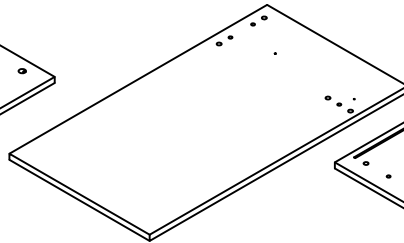


①⑧

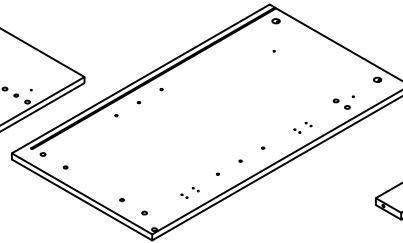


①⑨

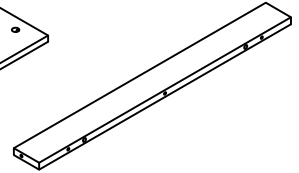


②⑦

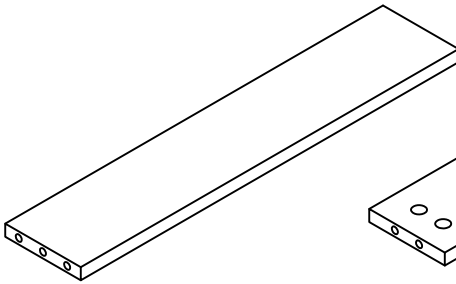


②①

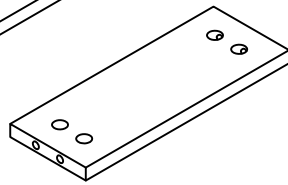


②② X2

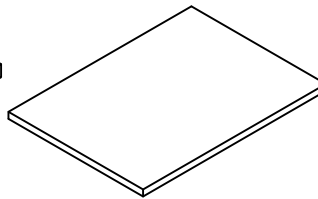


②③ X2

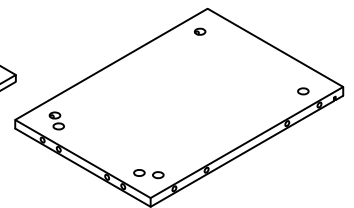


②④ X2

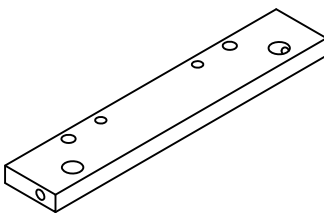


②⑤ X2

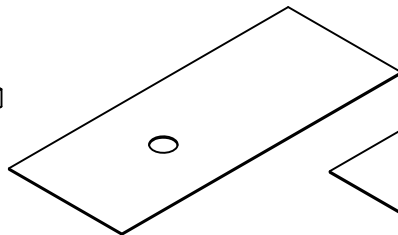


②⑥

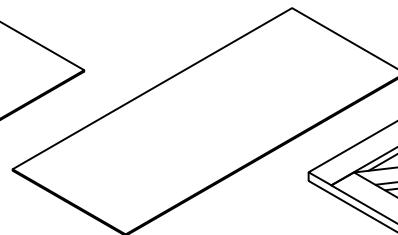


②⑦

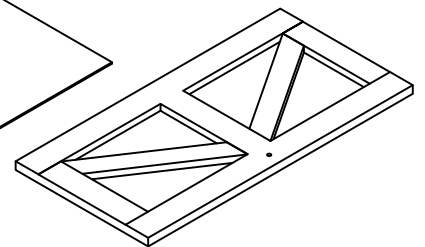


②⑧ X2

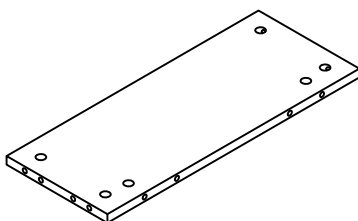


②⑨

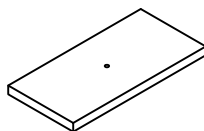

③⑦ X2

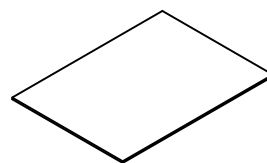


③① X2

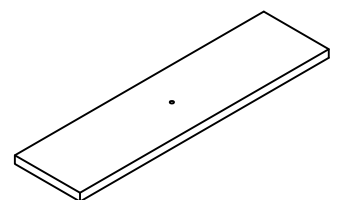


③②


PARTS LIST

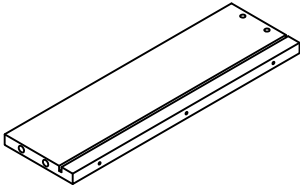


③③ X2

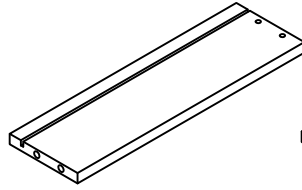


③④ X2

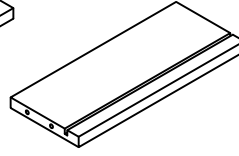


③⑤ X2

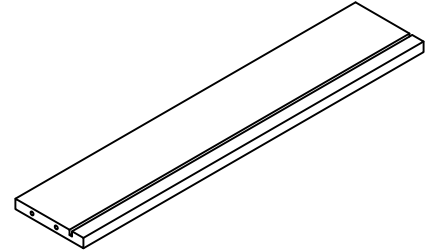


③⑥

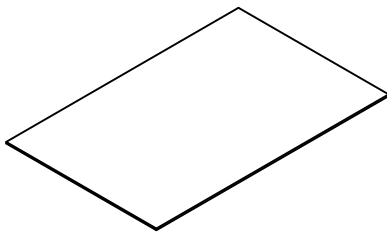


③⑦

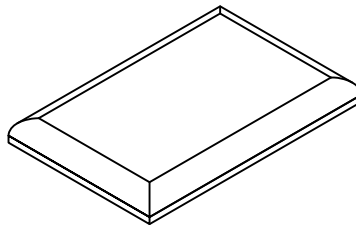


③⑧

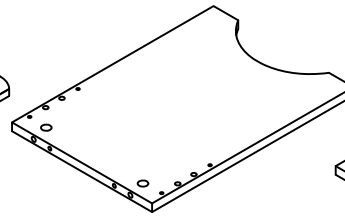


③⑨ X2

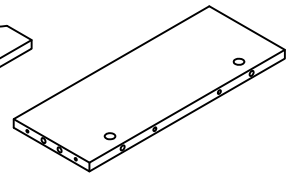



④① X2

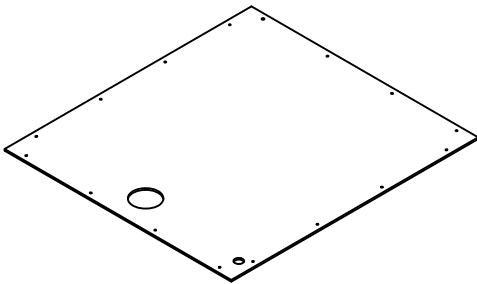

④②

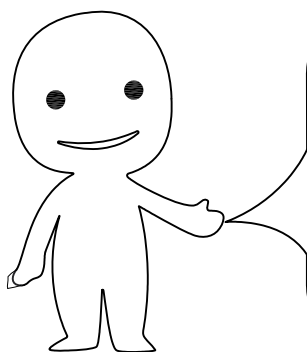

Please prepare the following tools

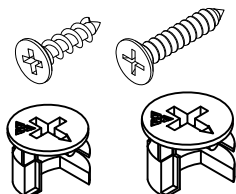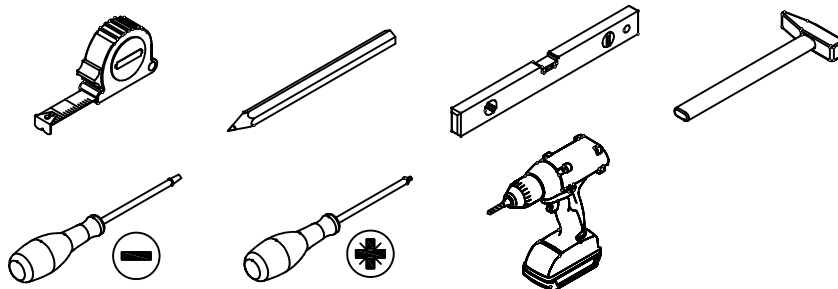


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 102



ϕ 15 x 9.5 mm

B x 54



ϕ 7 x 40 mm

C x 48



ϕ 7 x 40 mm

D x 68




ϕ 6 x 30 mm

E x 28




ϕ 8 x 40 mm

F x 8




ϕ 6 x 45 mm

G x 72




ϕ 3.5 x 14 mm

H x 5




M4 x 18 mm

I x 8

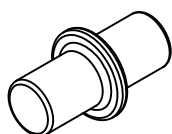


ϕ 5 x 17 mm

J x 1

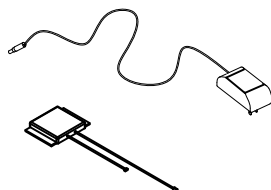


K x 52

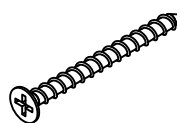


ϕ 4.2 x 35 mm


L x 4

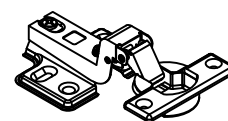


M x 3

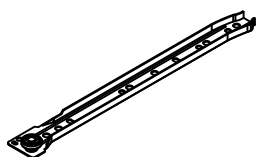


N x 3

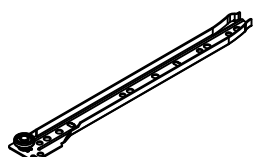


O x 3


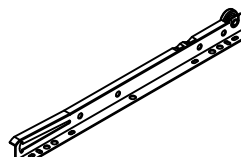


P x 3

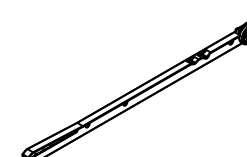

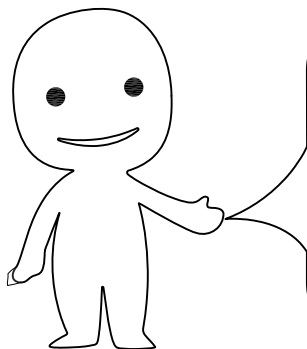


Please prepare the following tools

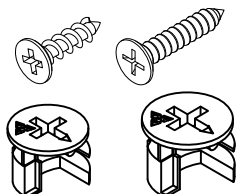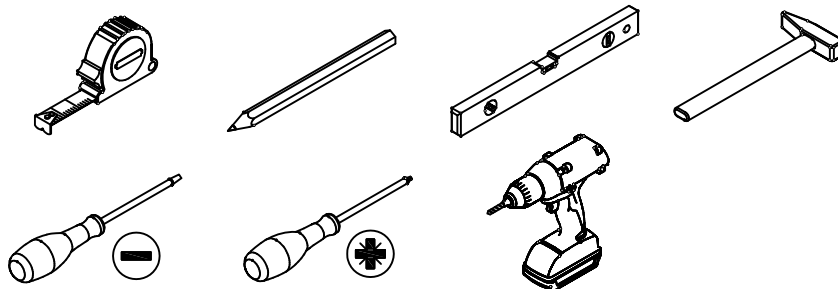


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Q x 12




R x 1

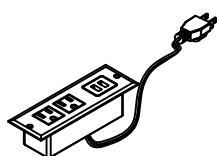


S x 5




T x 4



U x 2

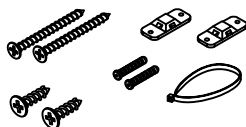


V x 16






φ 3 x 12 mm

1

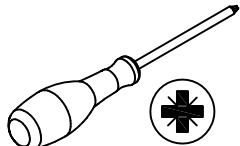C x 8  φ 6 x 28 mm	D x 16  φ 6 x 30 mm	
---	--	---



- Insert wood dowels (D) into panel (39) & (40).
- Screw the cam bolt (C) into the panel (38).

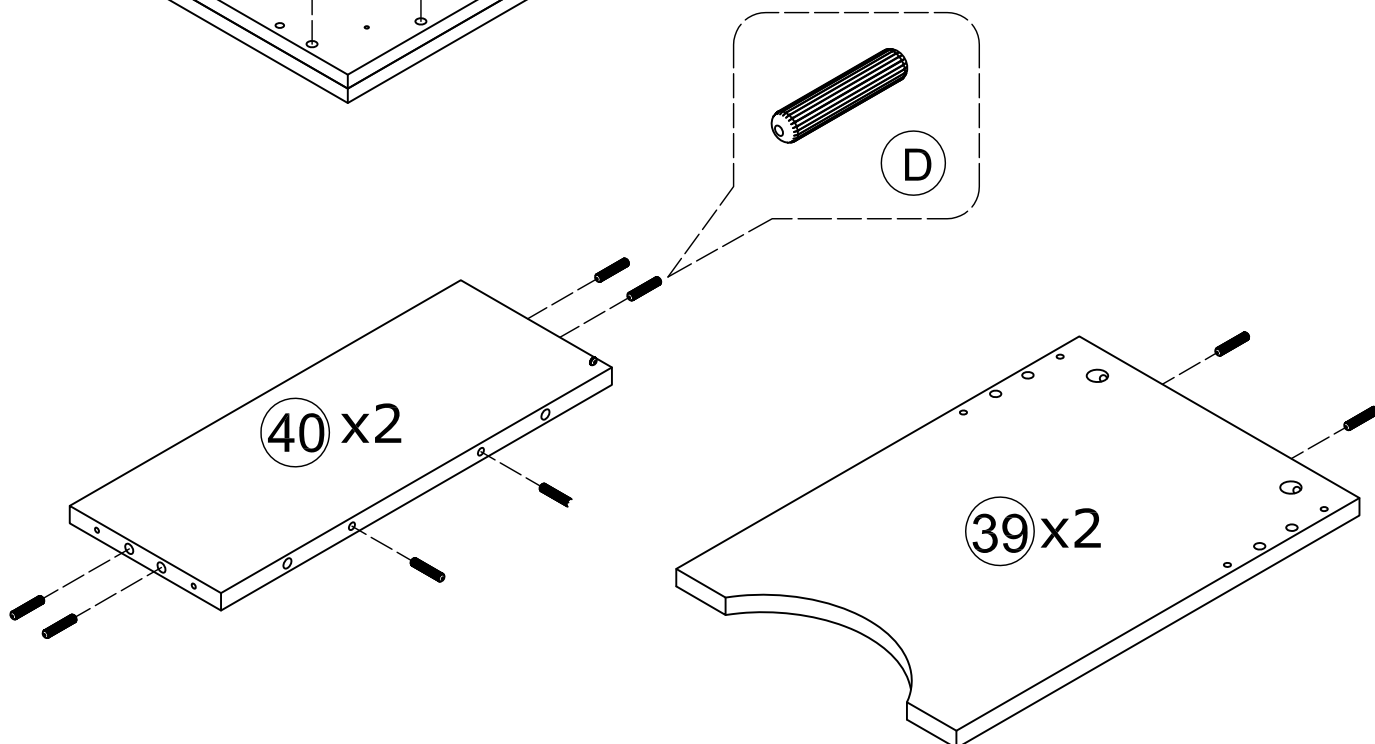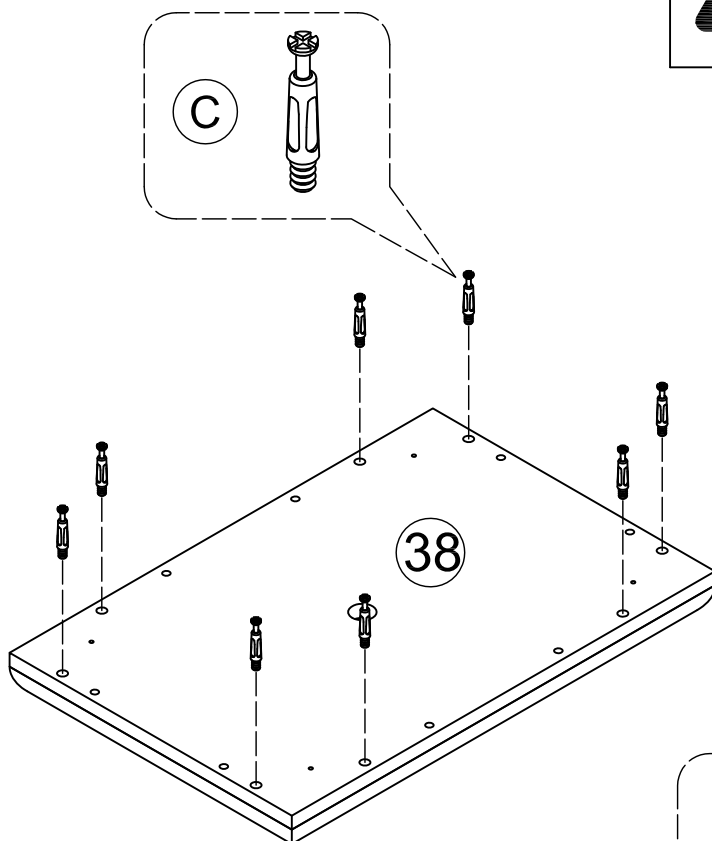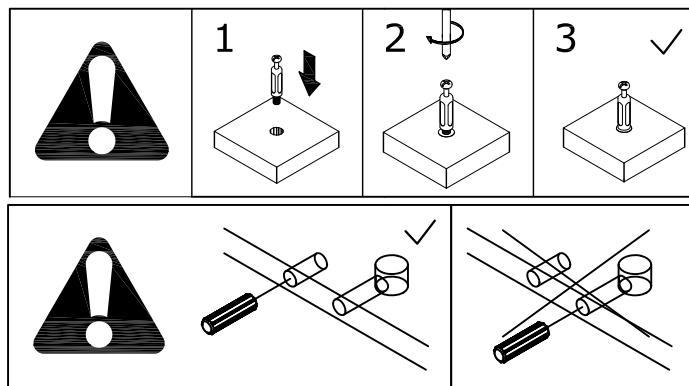

2




- Attach panel (39) to (40) with screws (F).
- Attach panel (39) & (40) to (38) and lock with cam (A).

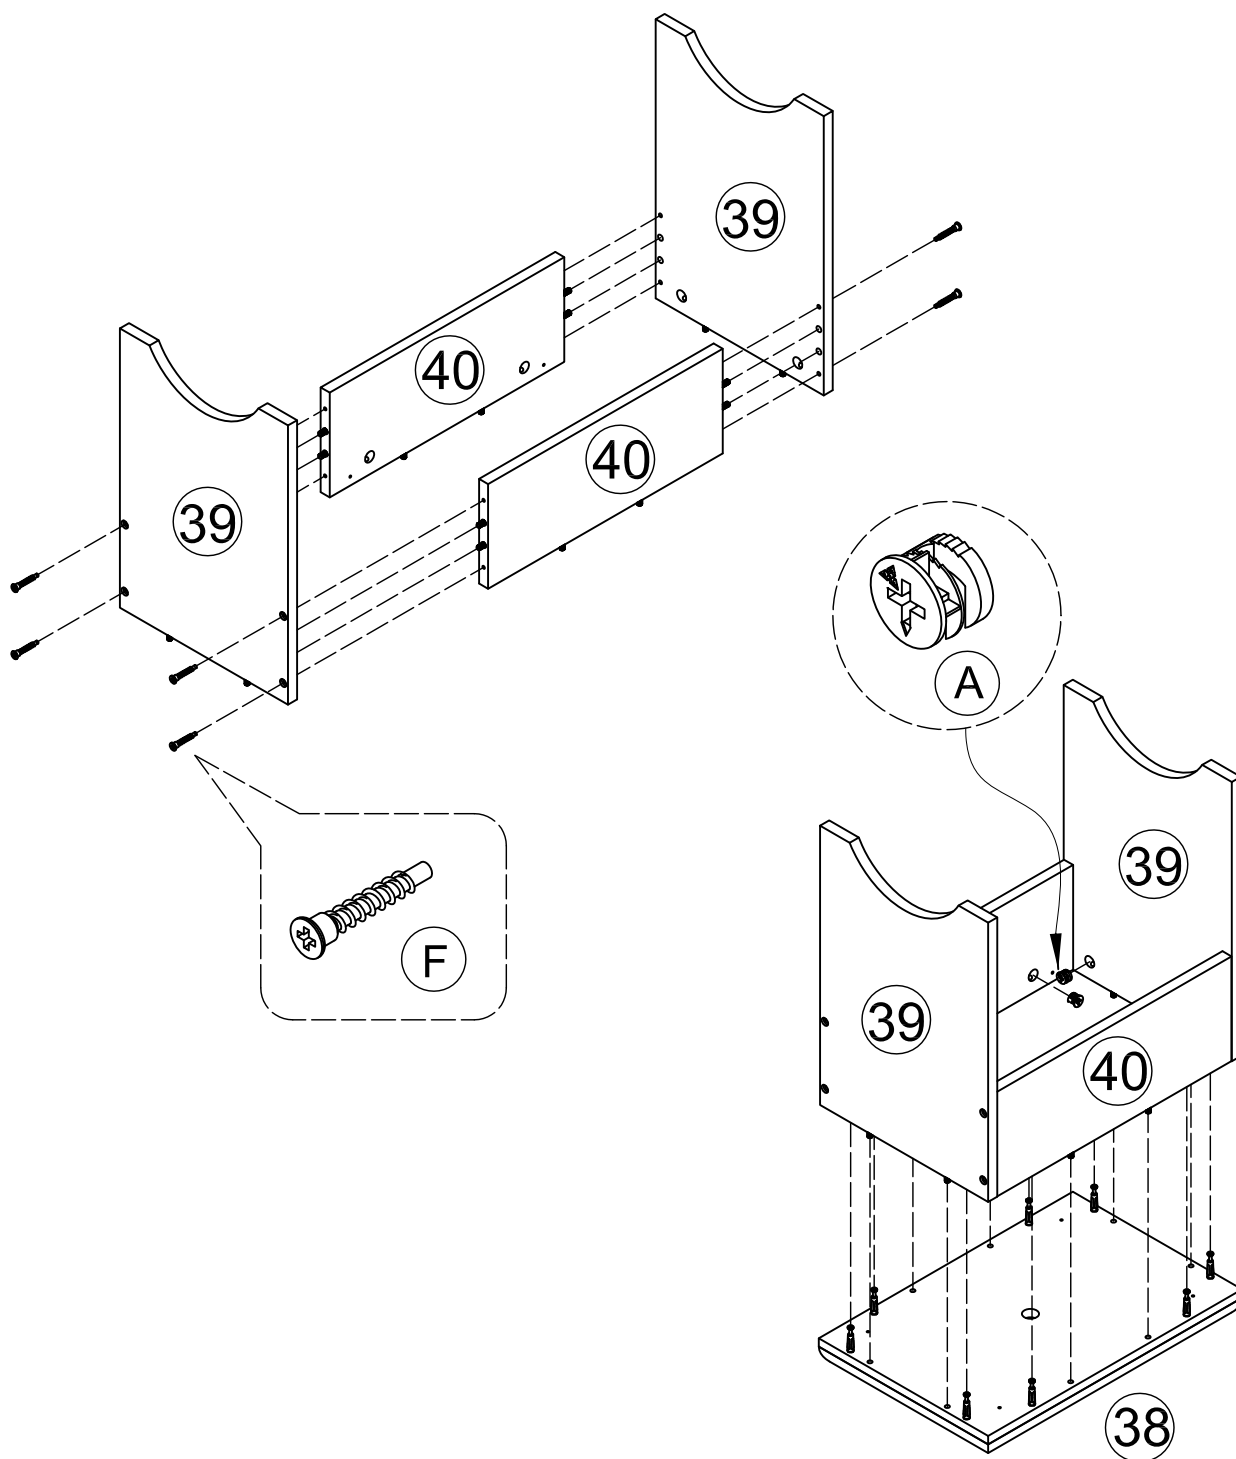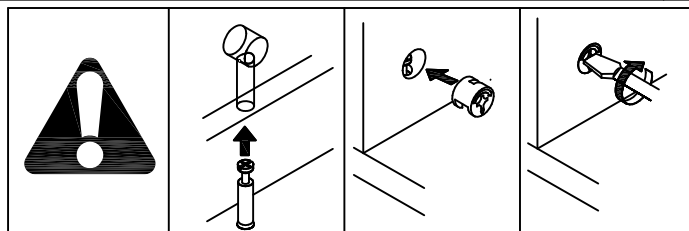

3




- Fix the corner code (T) on the panel (38) & (40) with the screw (G).

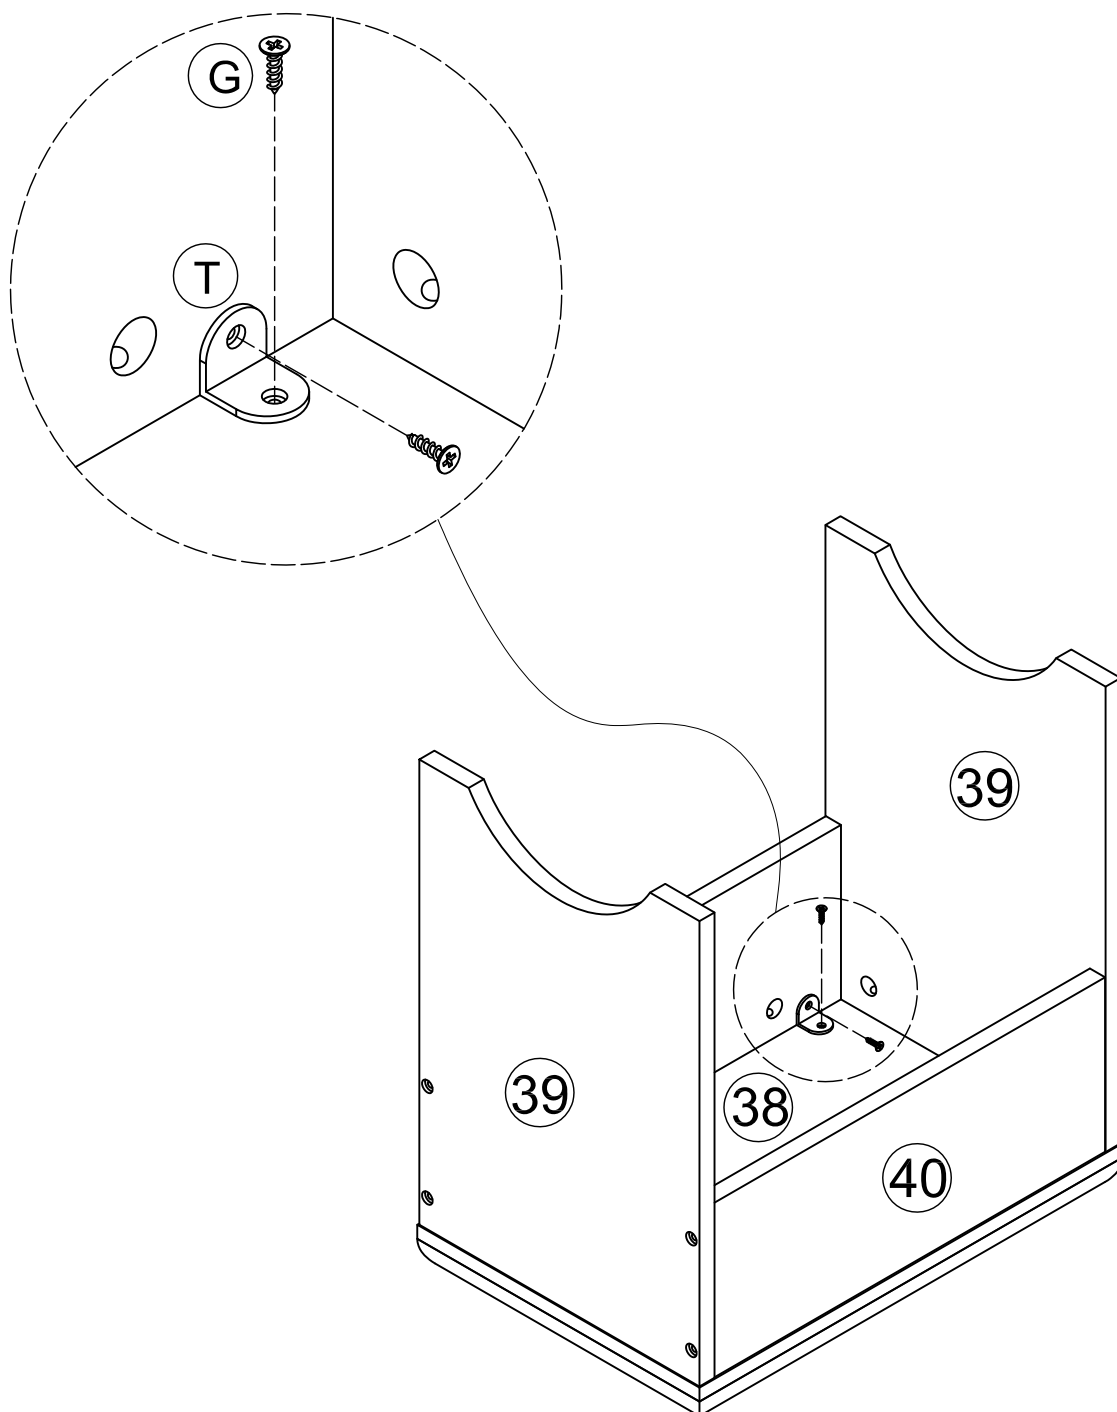


4








D x 26




φ 6 x 30 mm

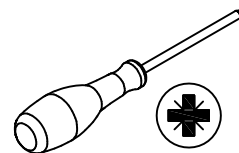



- Insert wood dowels (D) into panel (7) & (10) & (13) & (14) & (15).

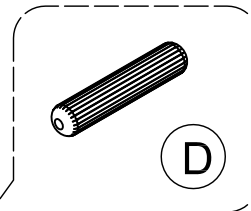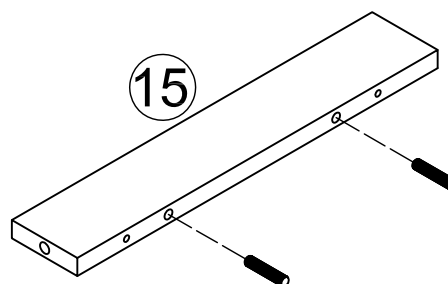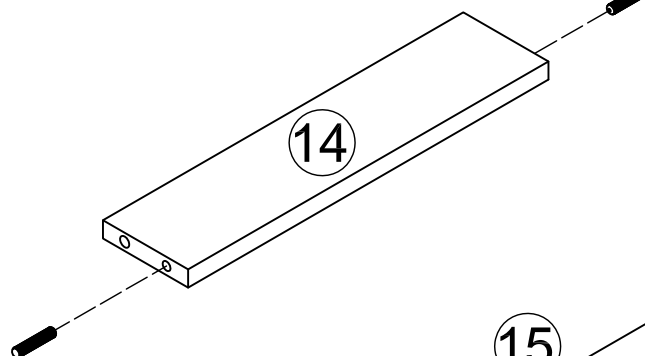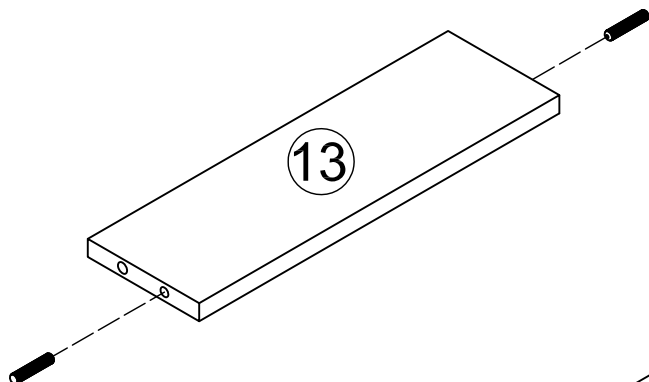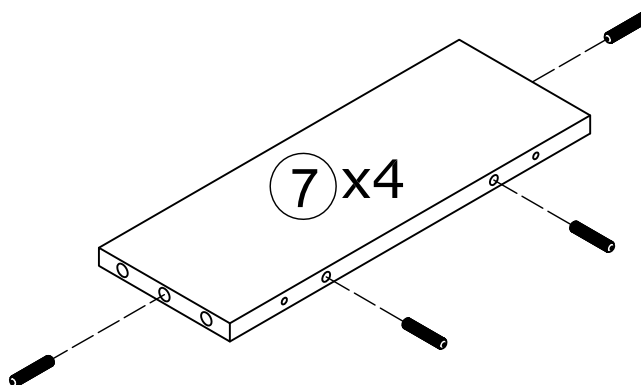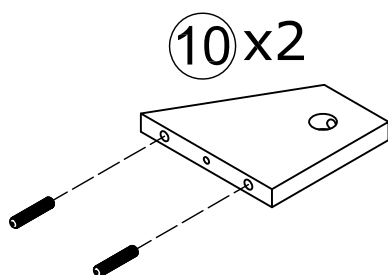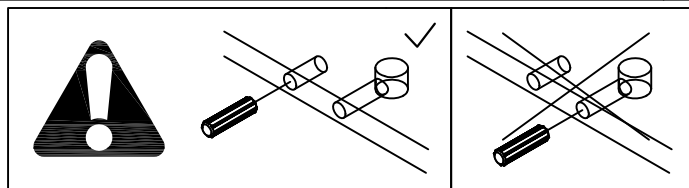

5

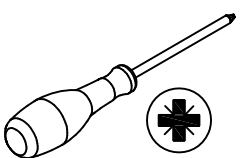
C x 8  φ 6 x 28 mm	D x 8  φ 6 x 30 mm	
---	---	---

- Insert wood dowels (D) into panel (11) & (12) & (20).
- Screw the cam bolt (C) into the panel (11) & (12) & (20).

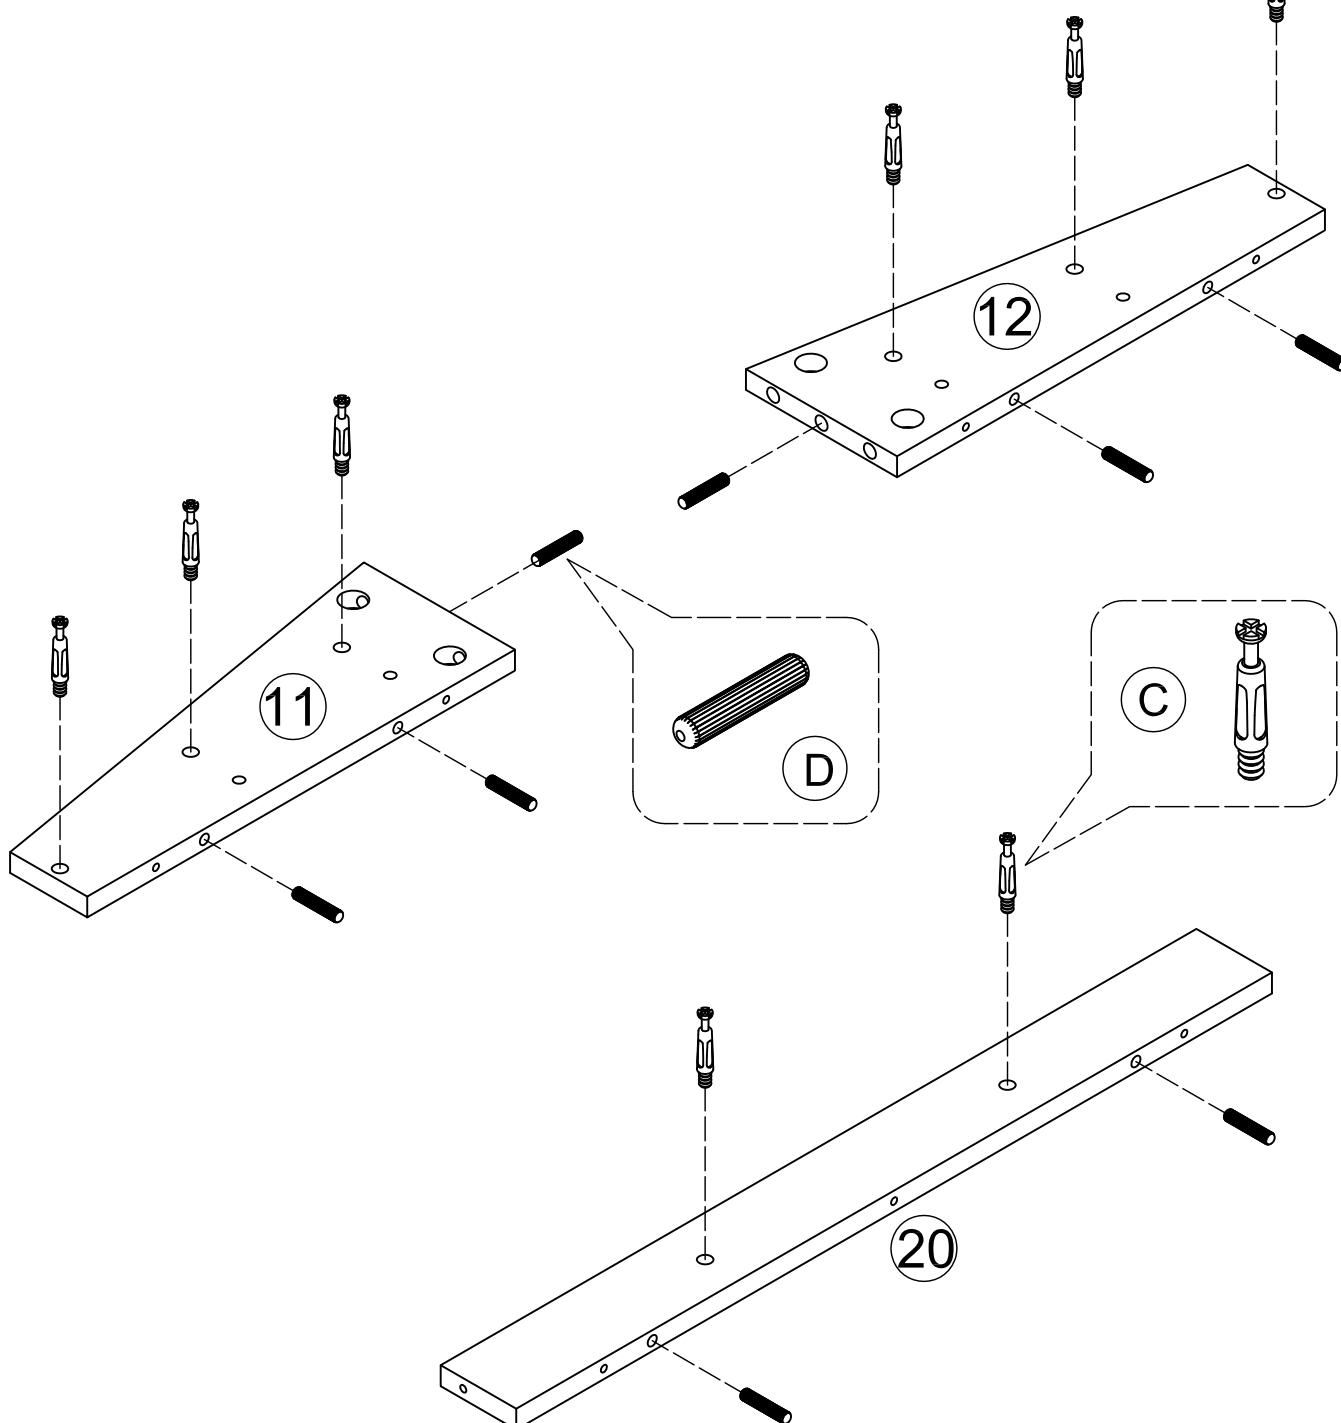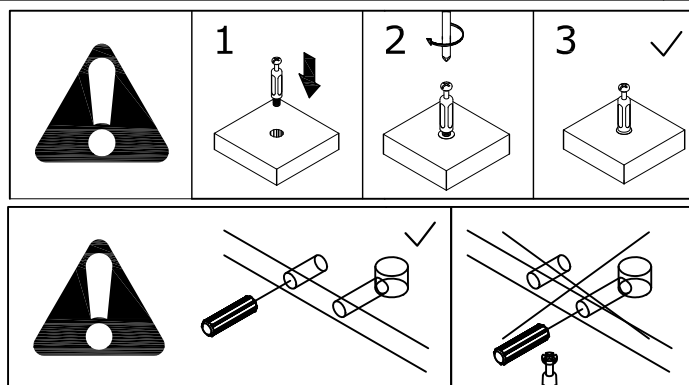


6



A x 6



φ 15 x 11 mm

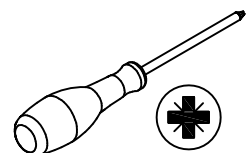

- Attach panel (11) & (12) to (13) & (14) & (15) and lock with cam (A).

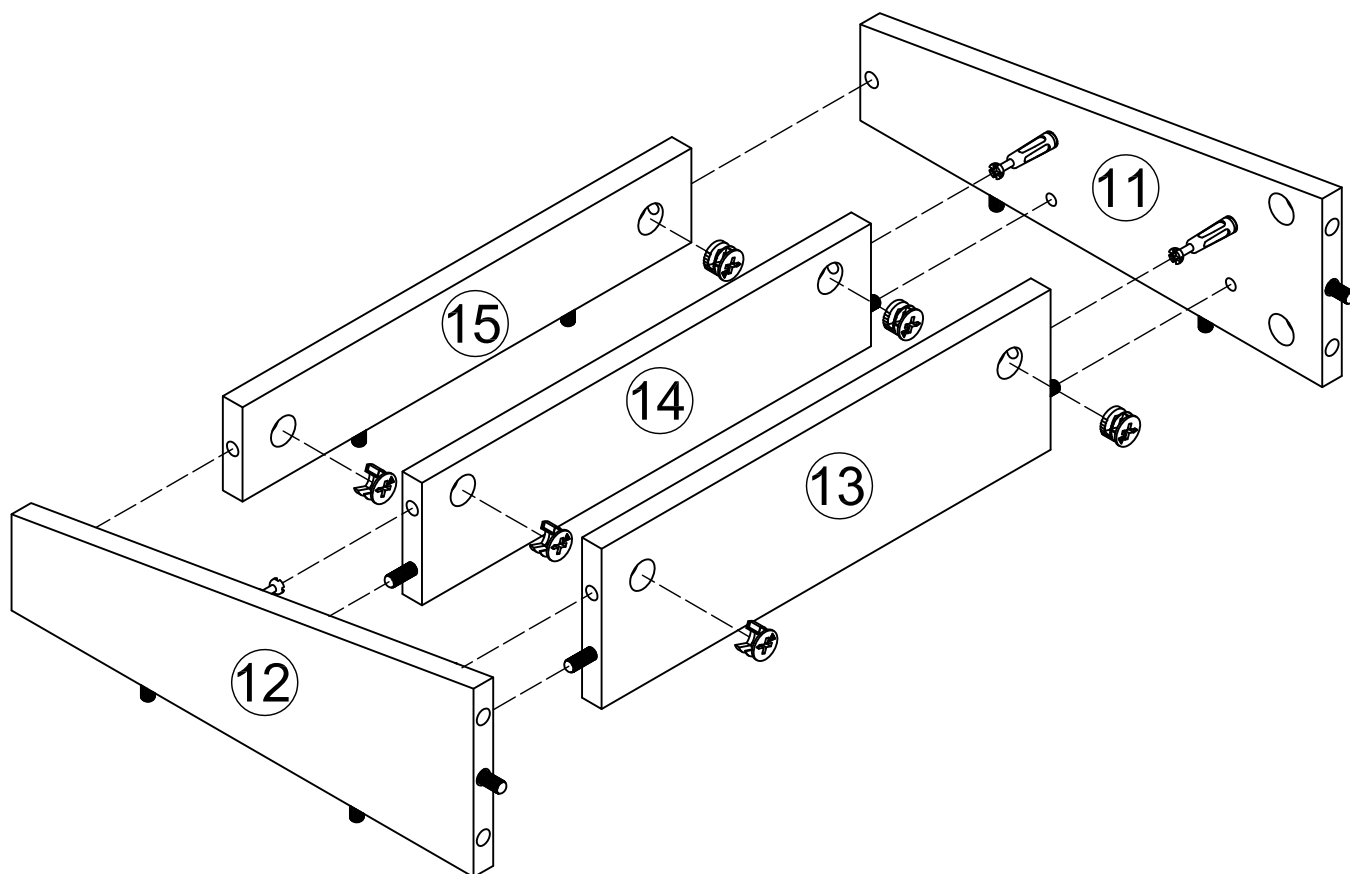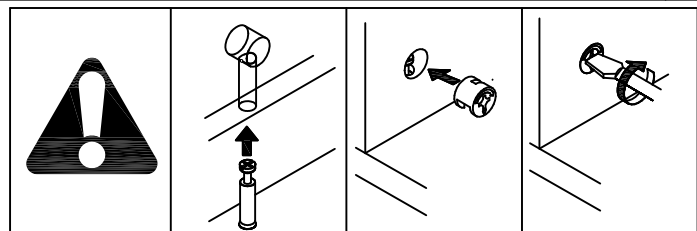


7






C x 28



φ 6 x 28 mm

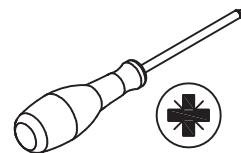


- Screw the cam bolt (C) into the panel (3) & (4) & (5) & (6).

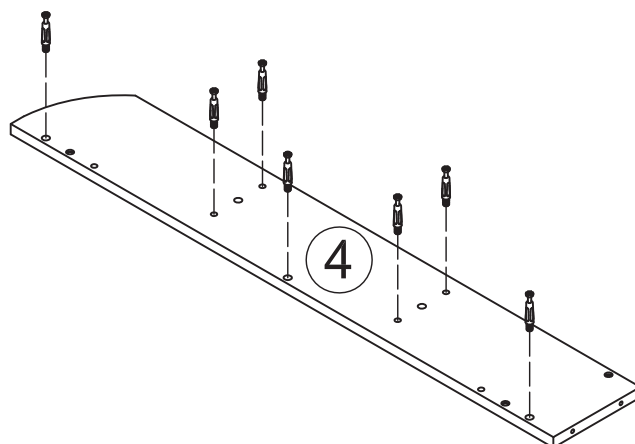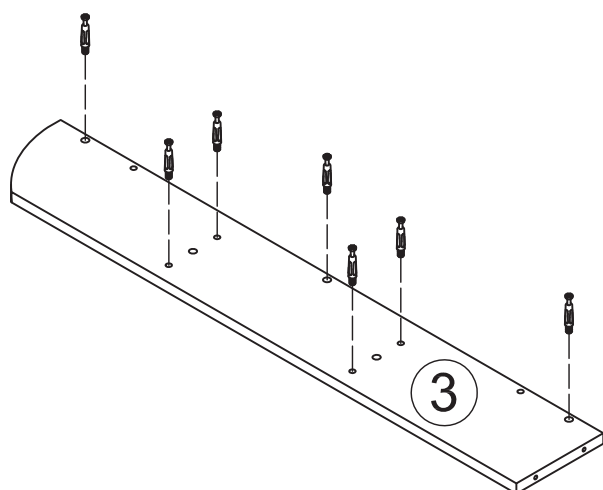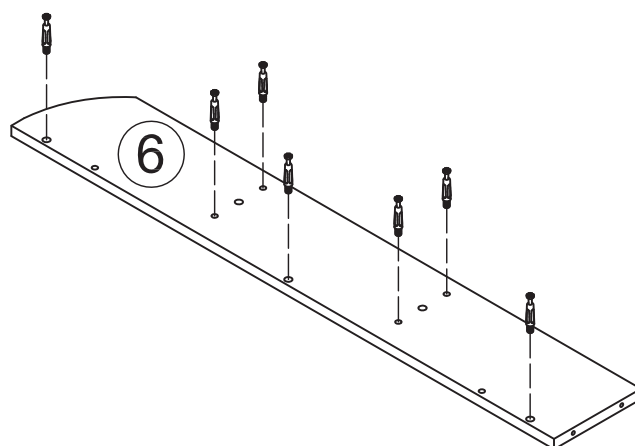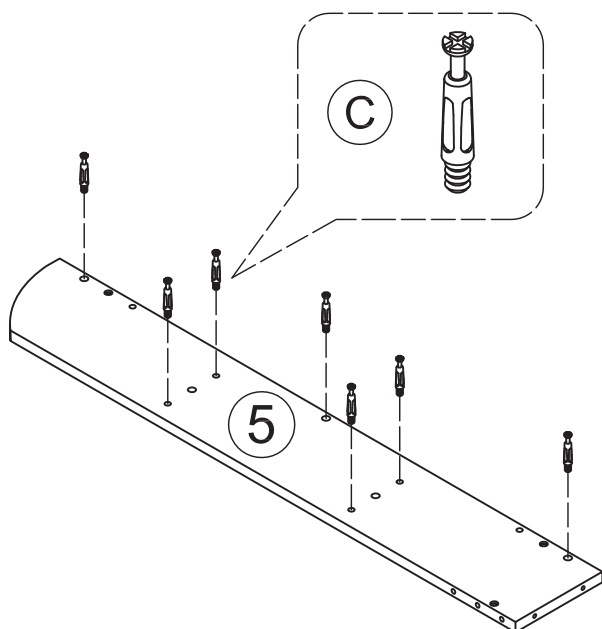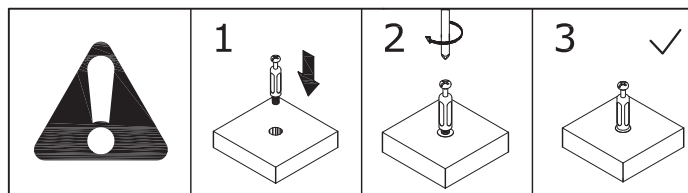


8




D x 18




φ 6 x 30 mm

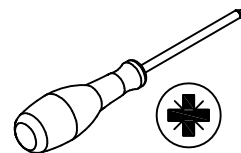



- Insert wood dowels (D) into panel (2) & (8) & (9).

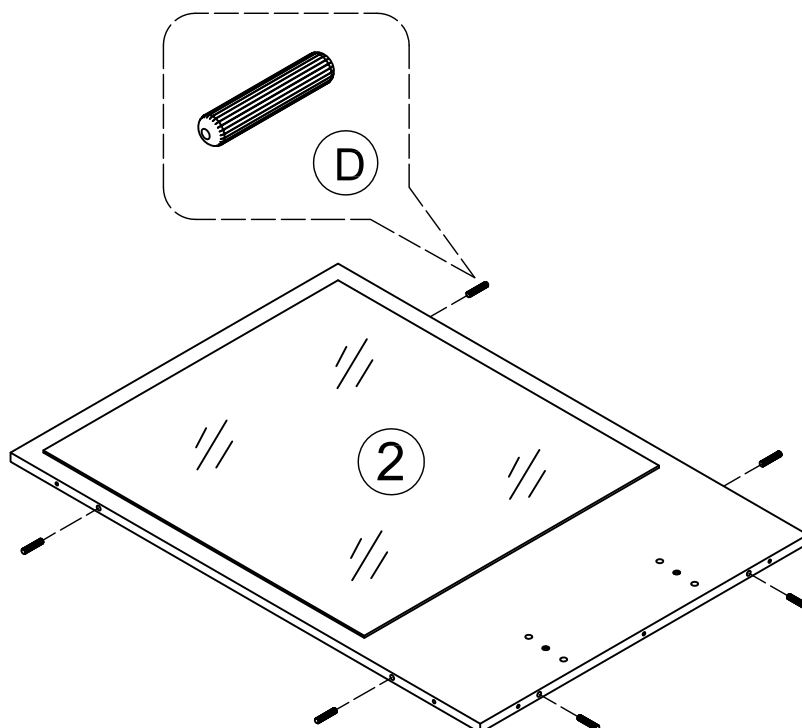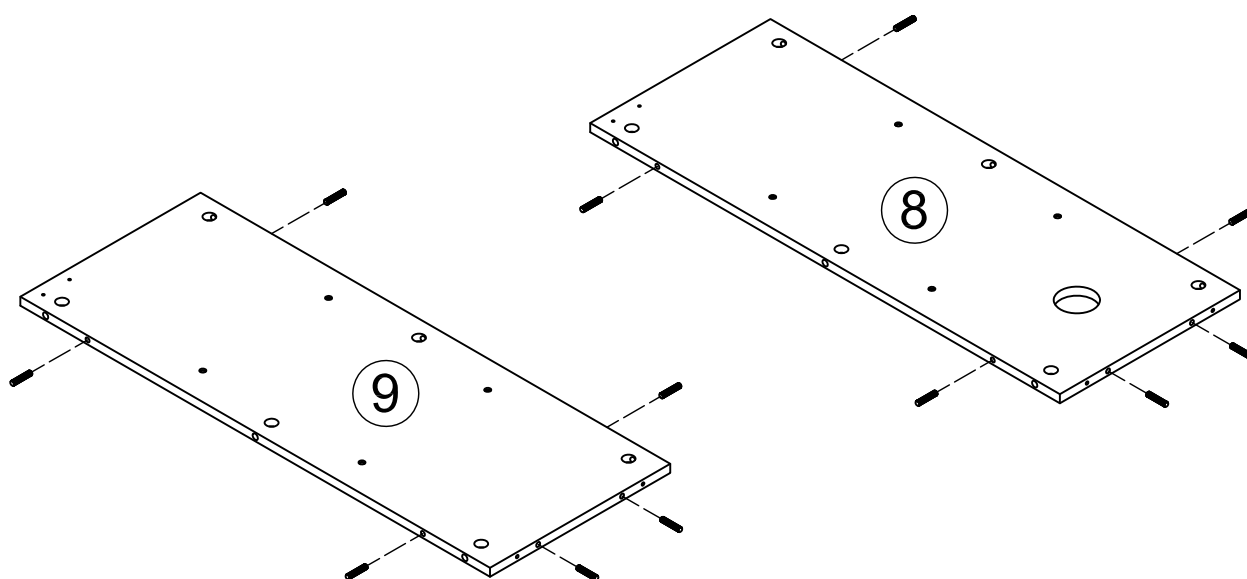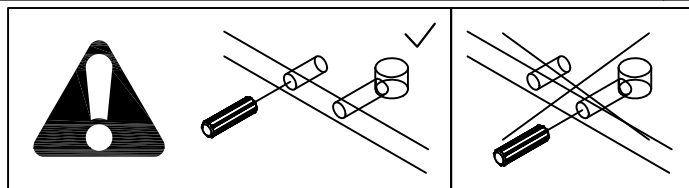


9

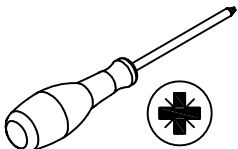A x 2  φ 15 x 11 mm	K x 2  φ 4.2 x 35 mm	
--	---	---

- Attach panel (10) to (2) with screws (K).
- Attach panel (20) to (10) and lock with cam (A).

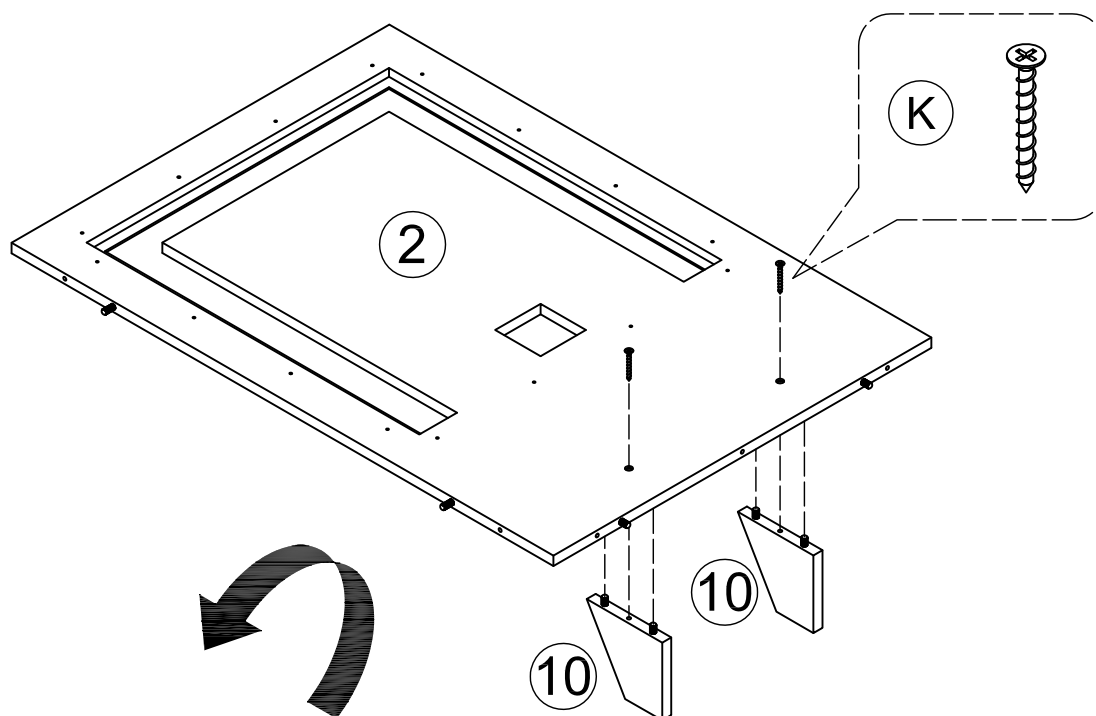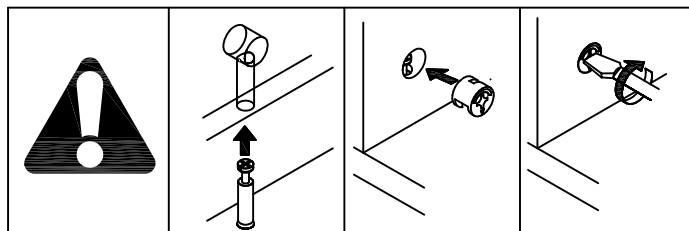

ROTATE 180°

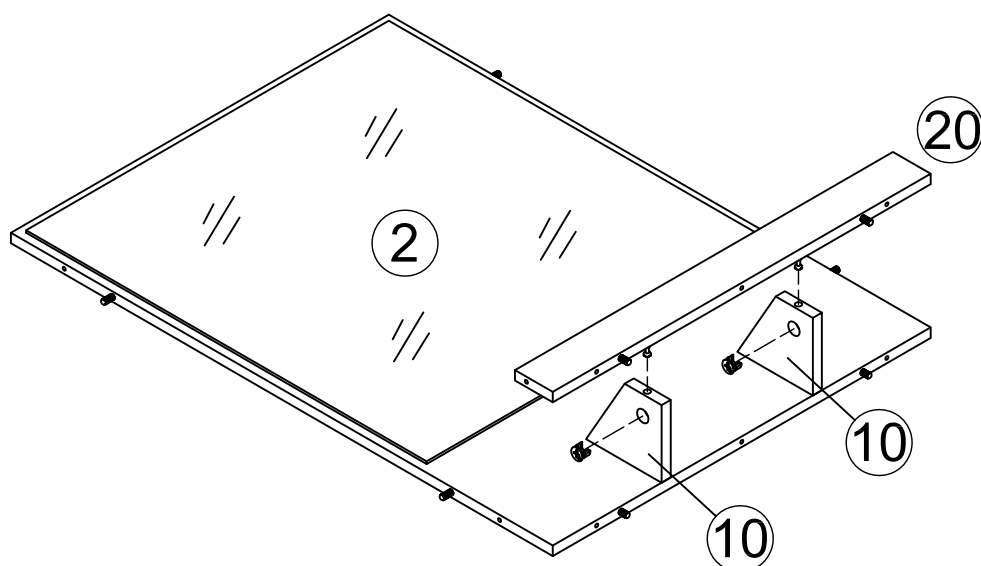


10


K x 8





φ 4.2 x 35 mm

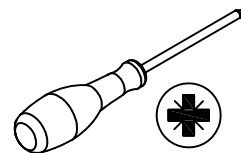




- Attach panel (9) to (7) with screws (K).
- Attach panel (8) to (7) with screws (K).

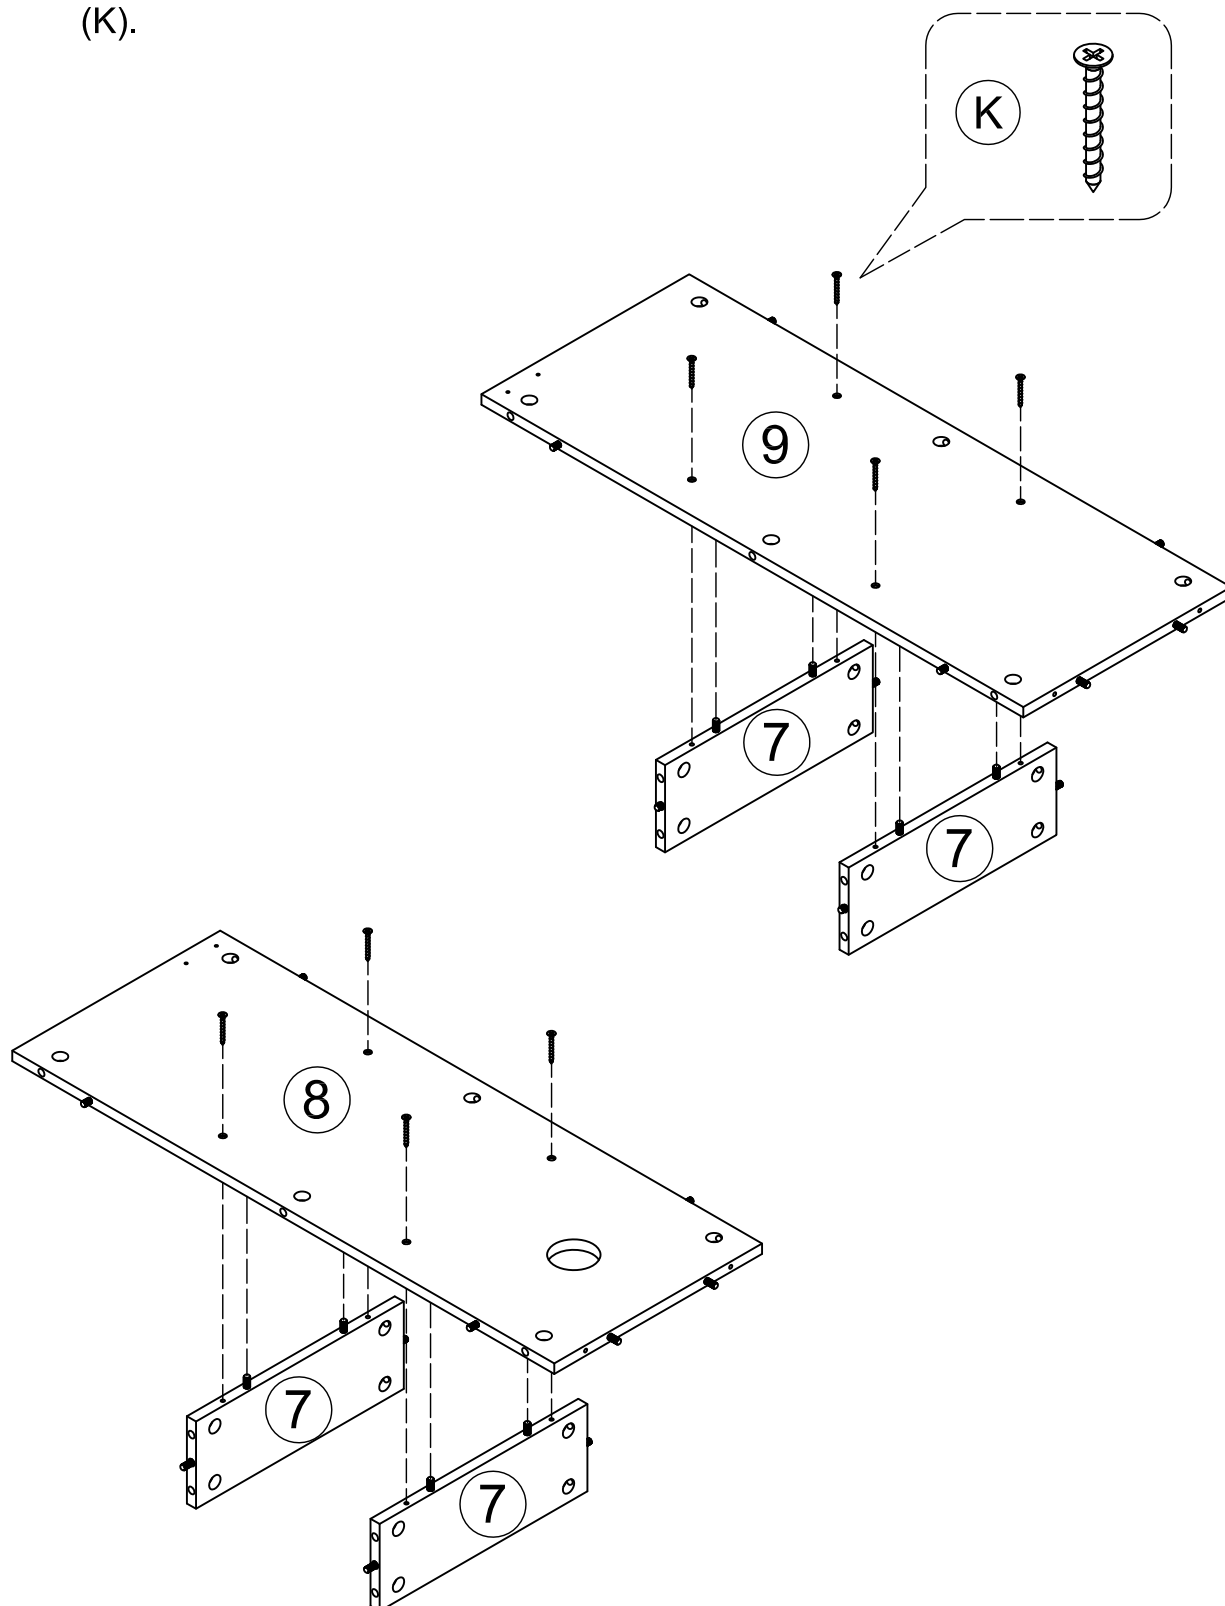



11

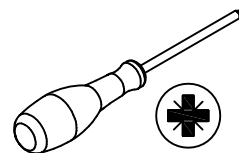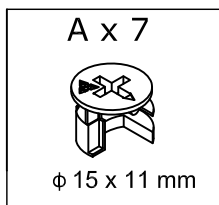

- Attach panel (3) to (8) and lock with cam (A).

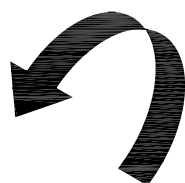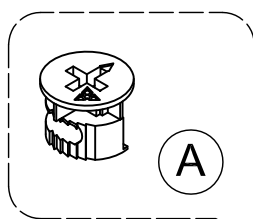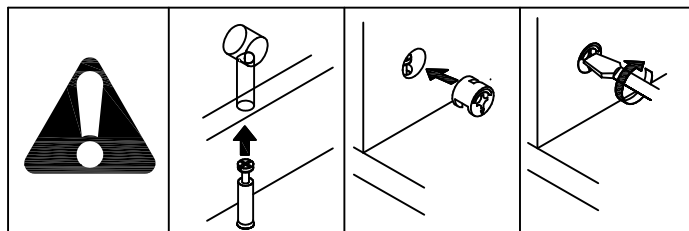

ROTATE 180°

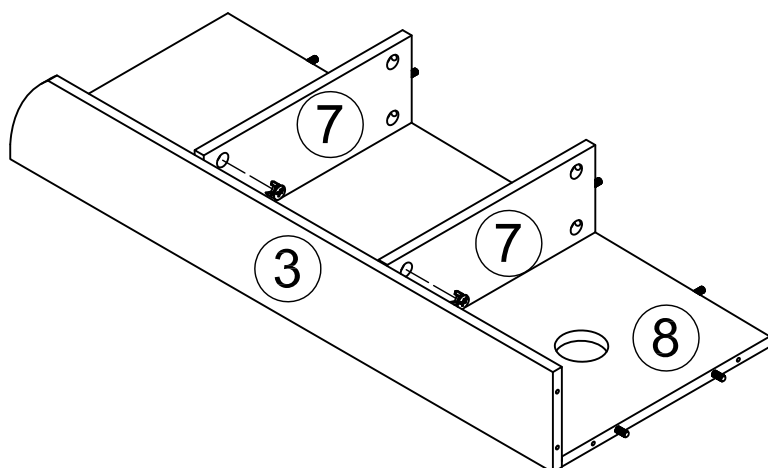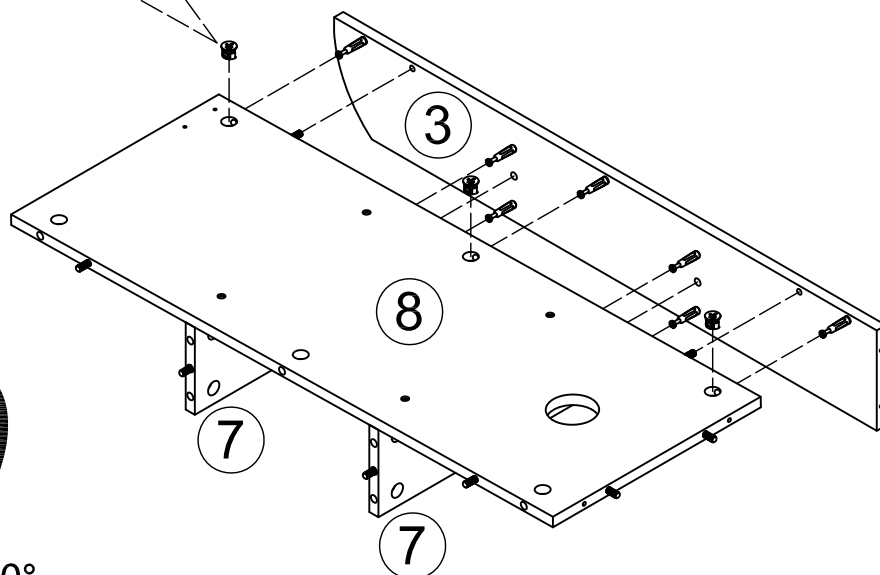


12






A x 7




φ 15 x 11 mm

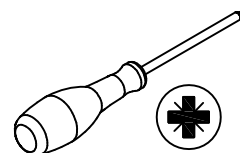

- Attach panel (6) to (9) and lock with cam (A).

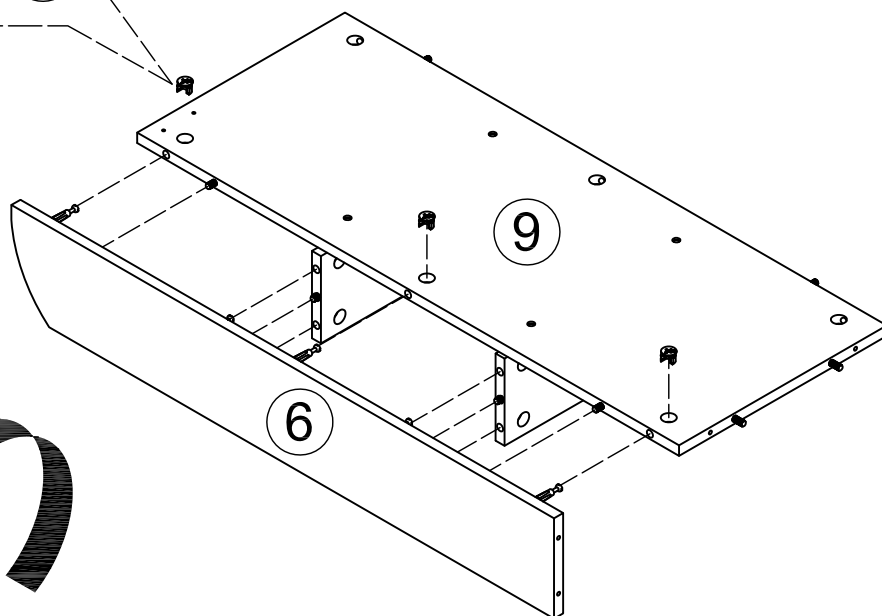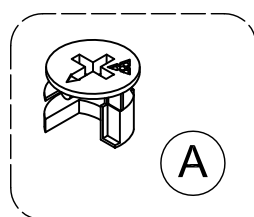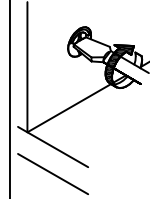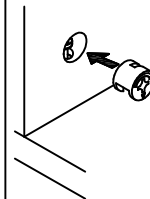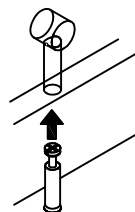

ROTATE 180°

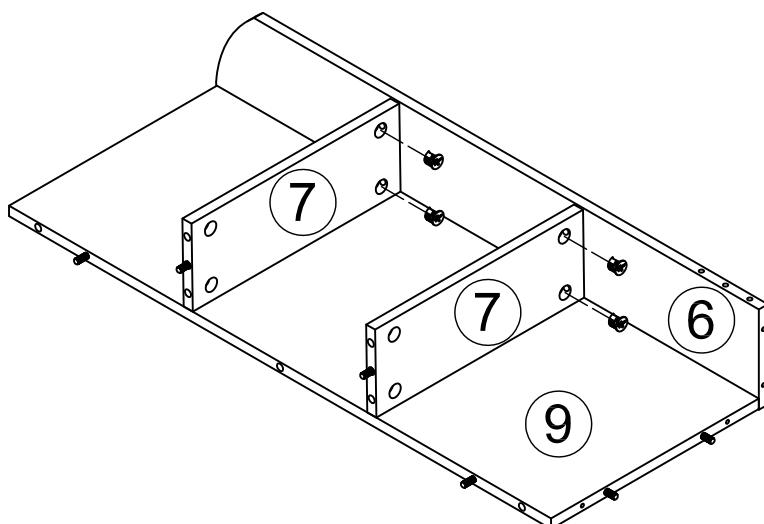


13





K x 6



φ 4.2 x 35 mm

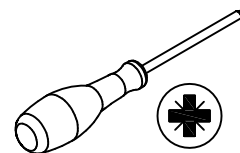

- Attach panel (4) & (5) to (2) & (20) with screws (K).

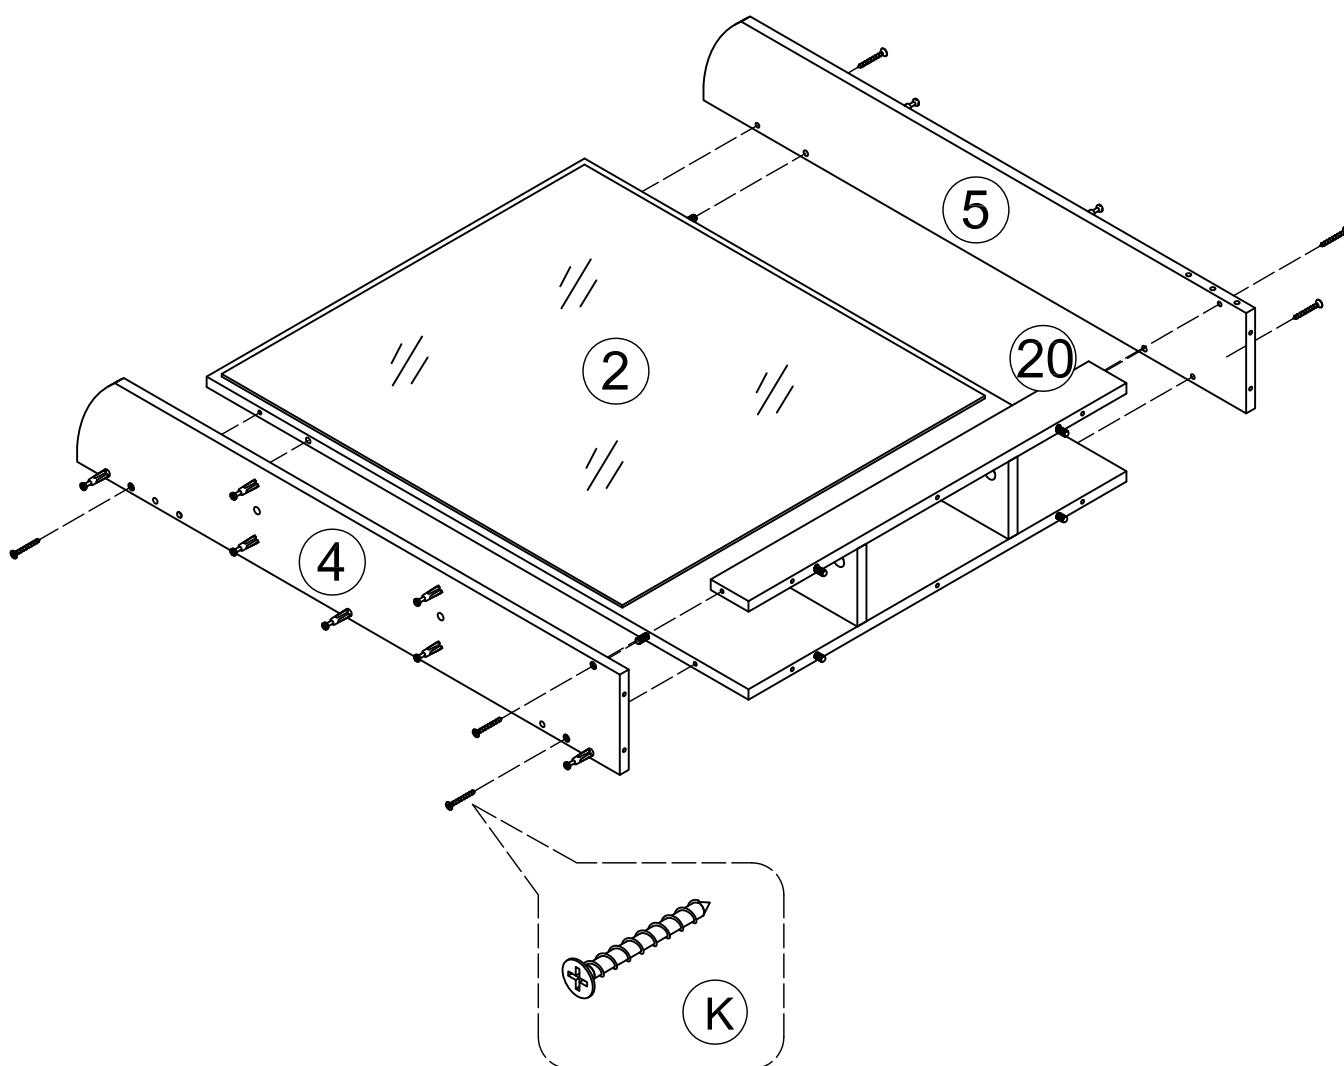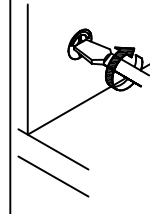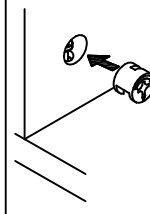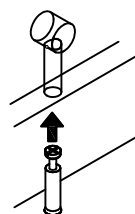


14





A x 14




φ 15 x 11 mm

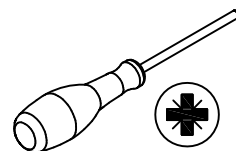


- Attach panel (7) & (8) to (4) and lock with cam (A).
- Attach panel (7) & (9) to (5) and lock with cam (A).

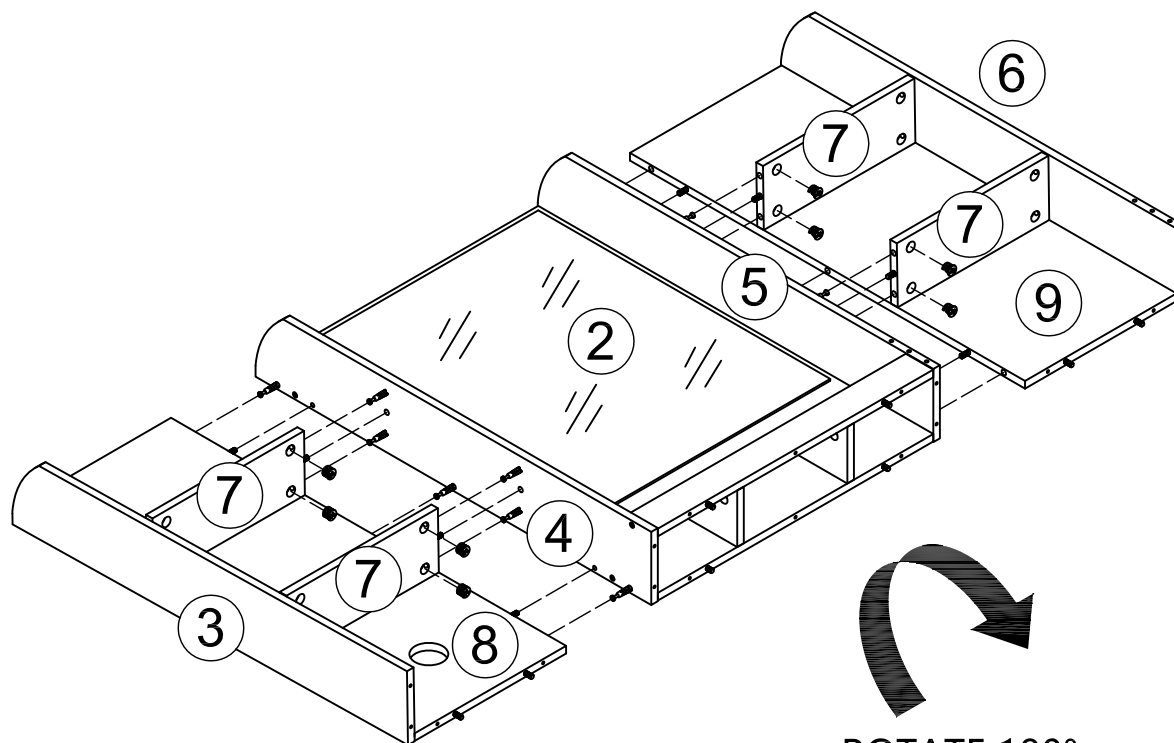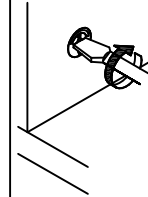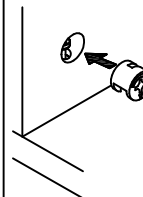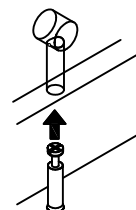

ROTATE 180°

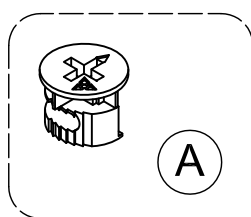

A

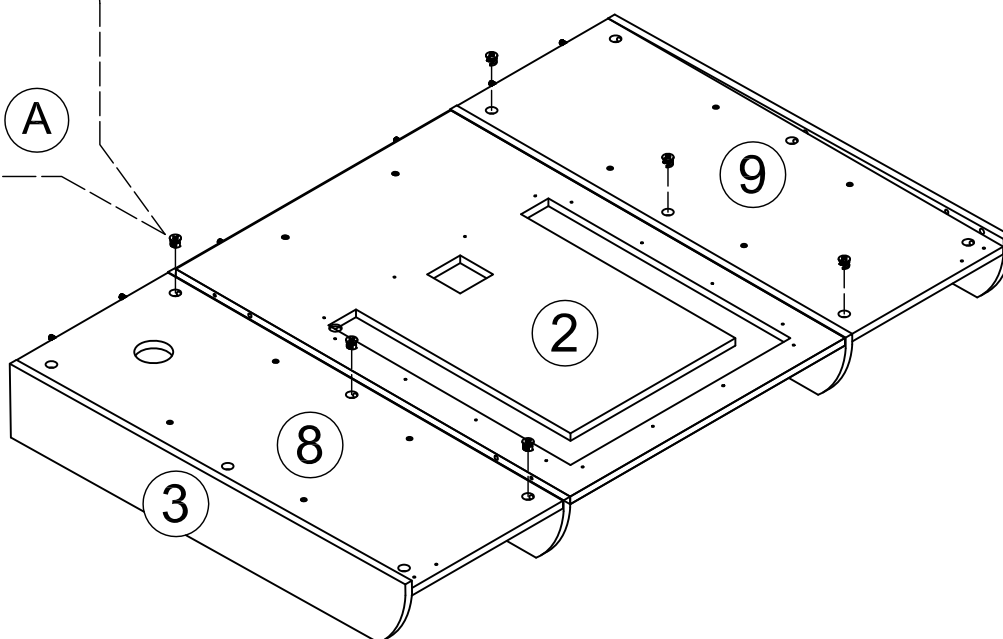

15

A x 4




φ 15 x 11 mm



C x 4



φ 6 x 28 mm

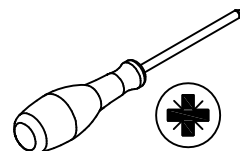

- Screw the cam bolt (C) into the panel (5) & (6).
- Attach panel (11) & (12) to (5) & (6) and lock with cam (A).

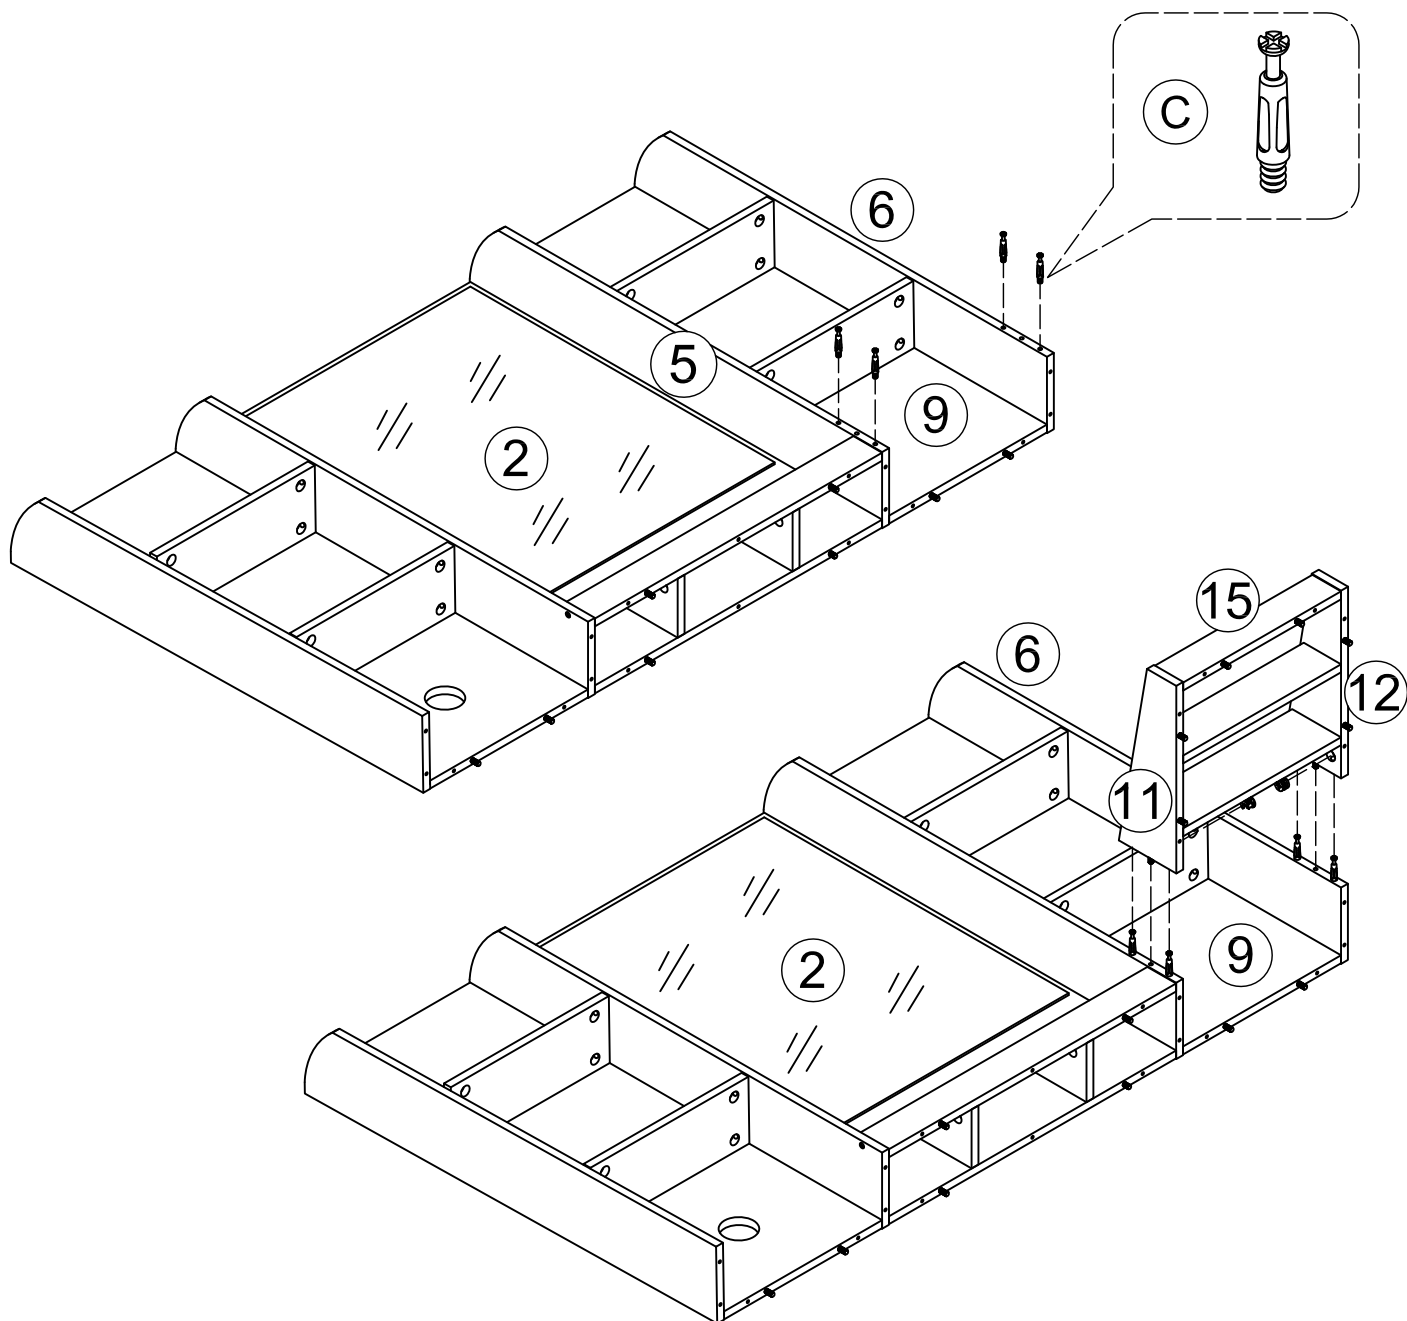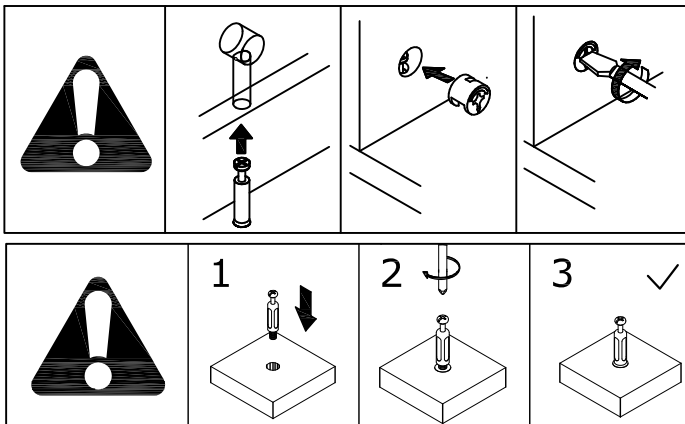


16


K x 24



φ 4.2 x 35 mm

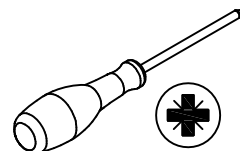


- Attach panel (1) to (3) & (4) & (5) & (6) & (8) & (9) & (11) & (12) & (13) & (14) & (15) & (20) with screws (K).

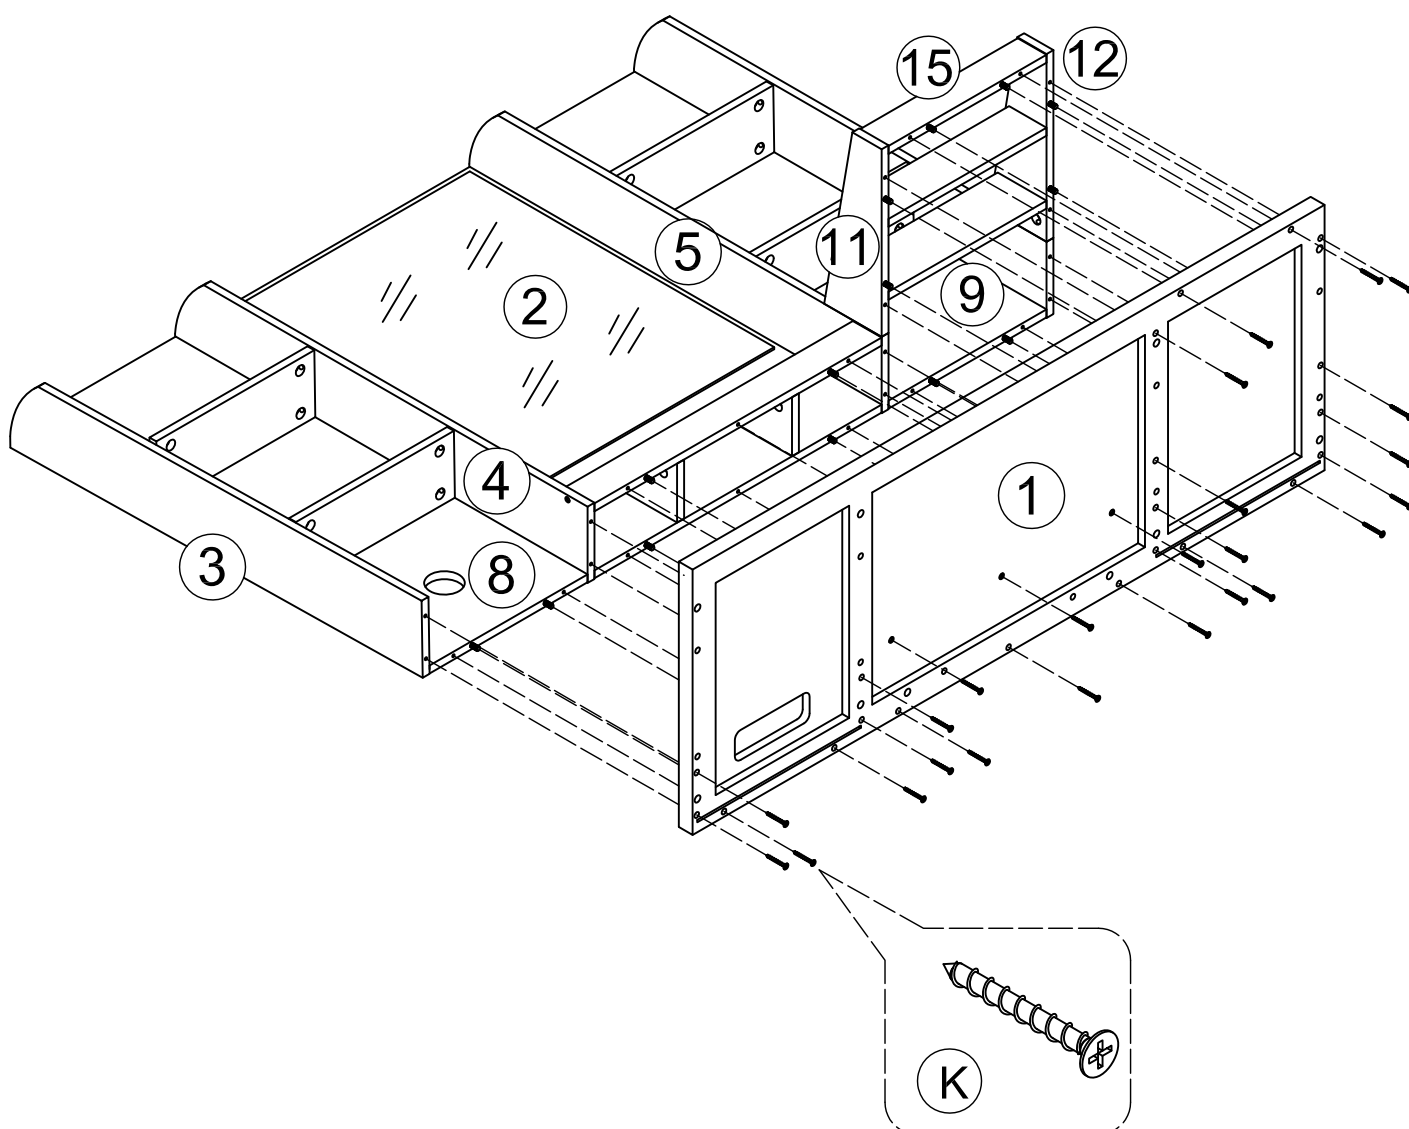


17





B x 10



φ 7 x 40 mm

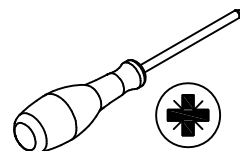


- Screw the cam bolt (B) into the panel (1).

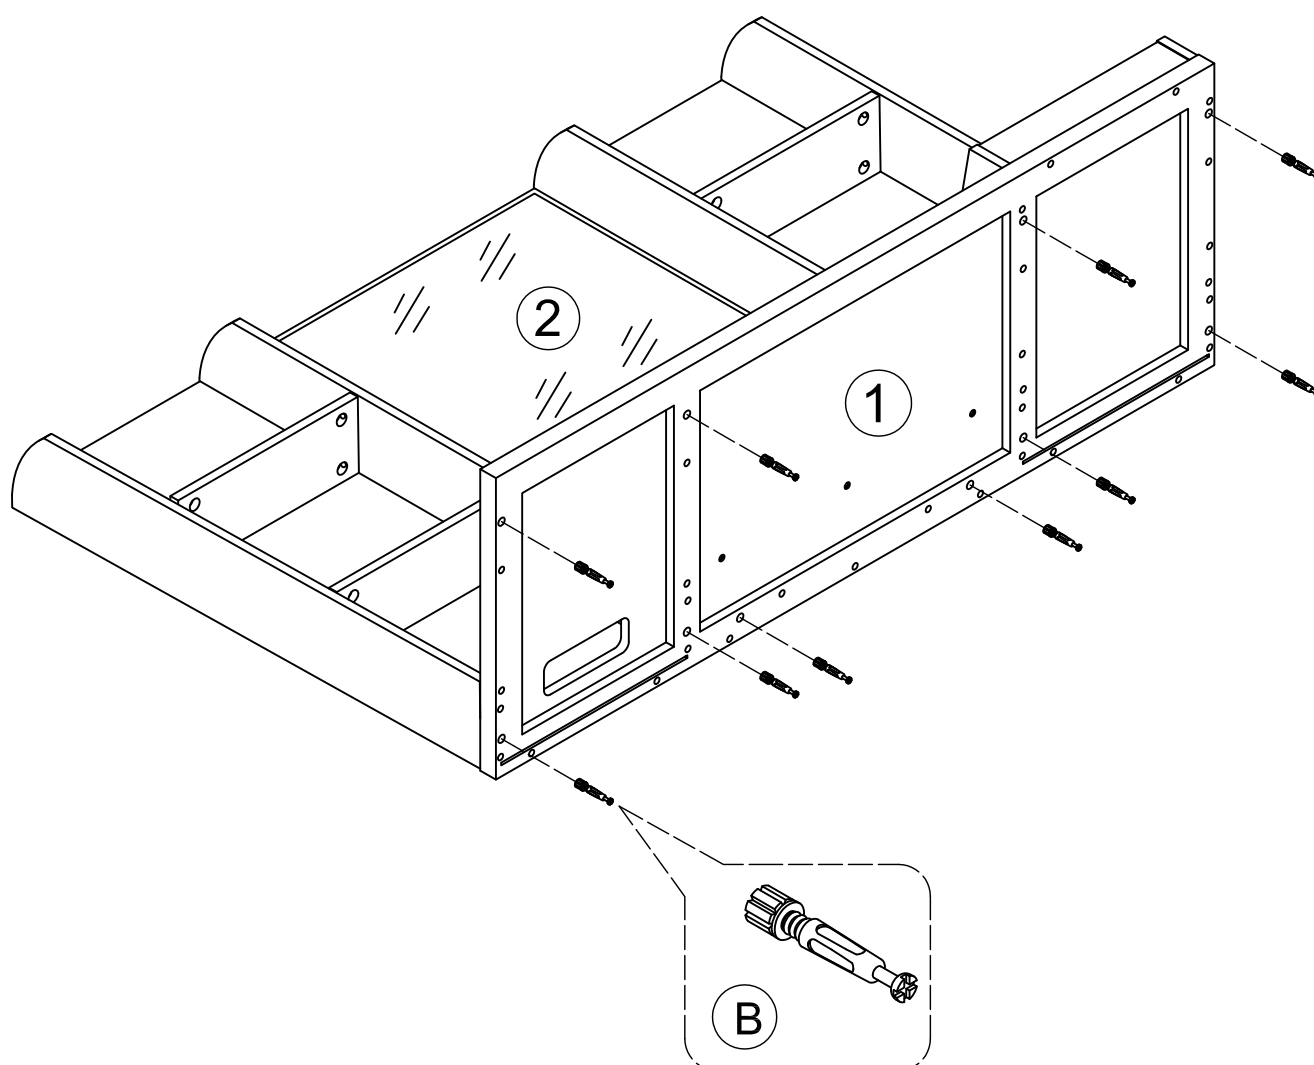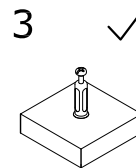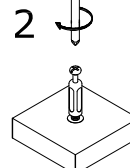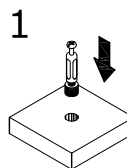


18





B x 12




φ 7 x 40 mm

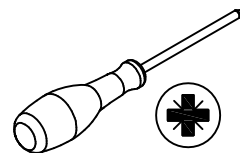

- Screw the cam bolt (B) into the panel (30) & (32) .

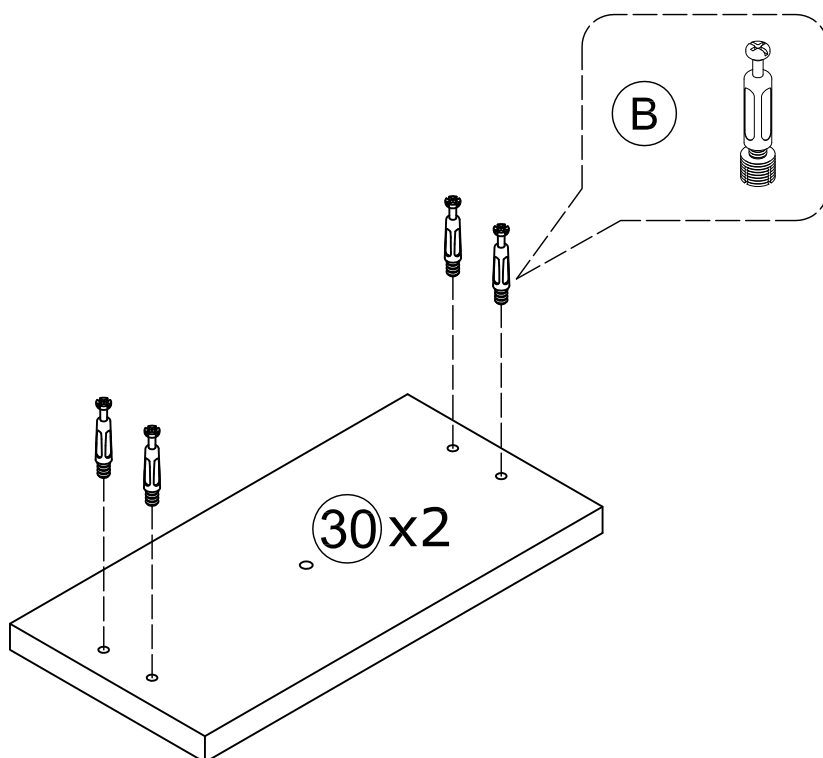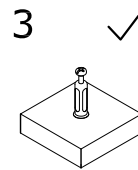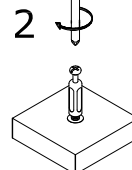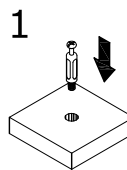

30x2

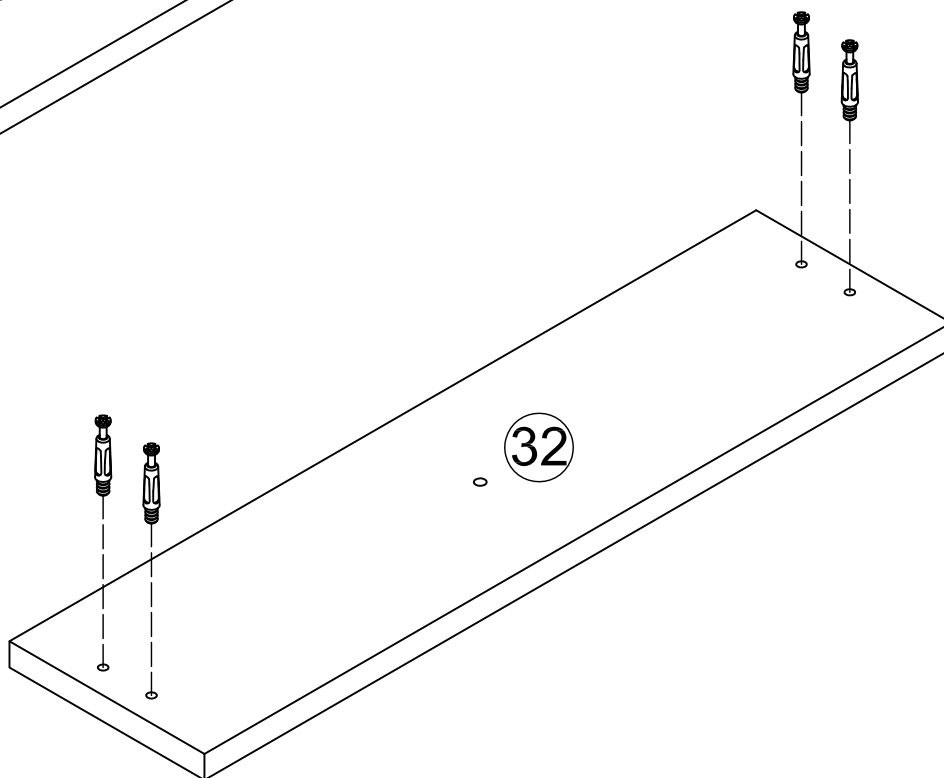


32

19


K x 12



φ 4.2 x 35 mm

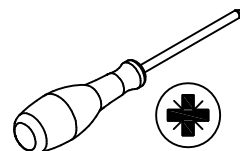



- Attach panel (33) & (34) to (35) & (36) with screws (K).

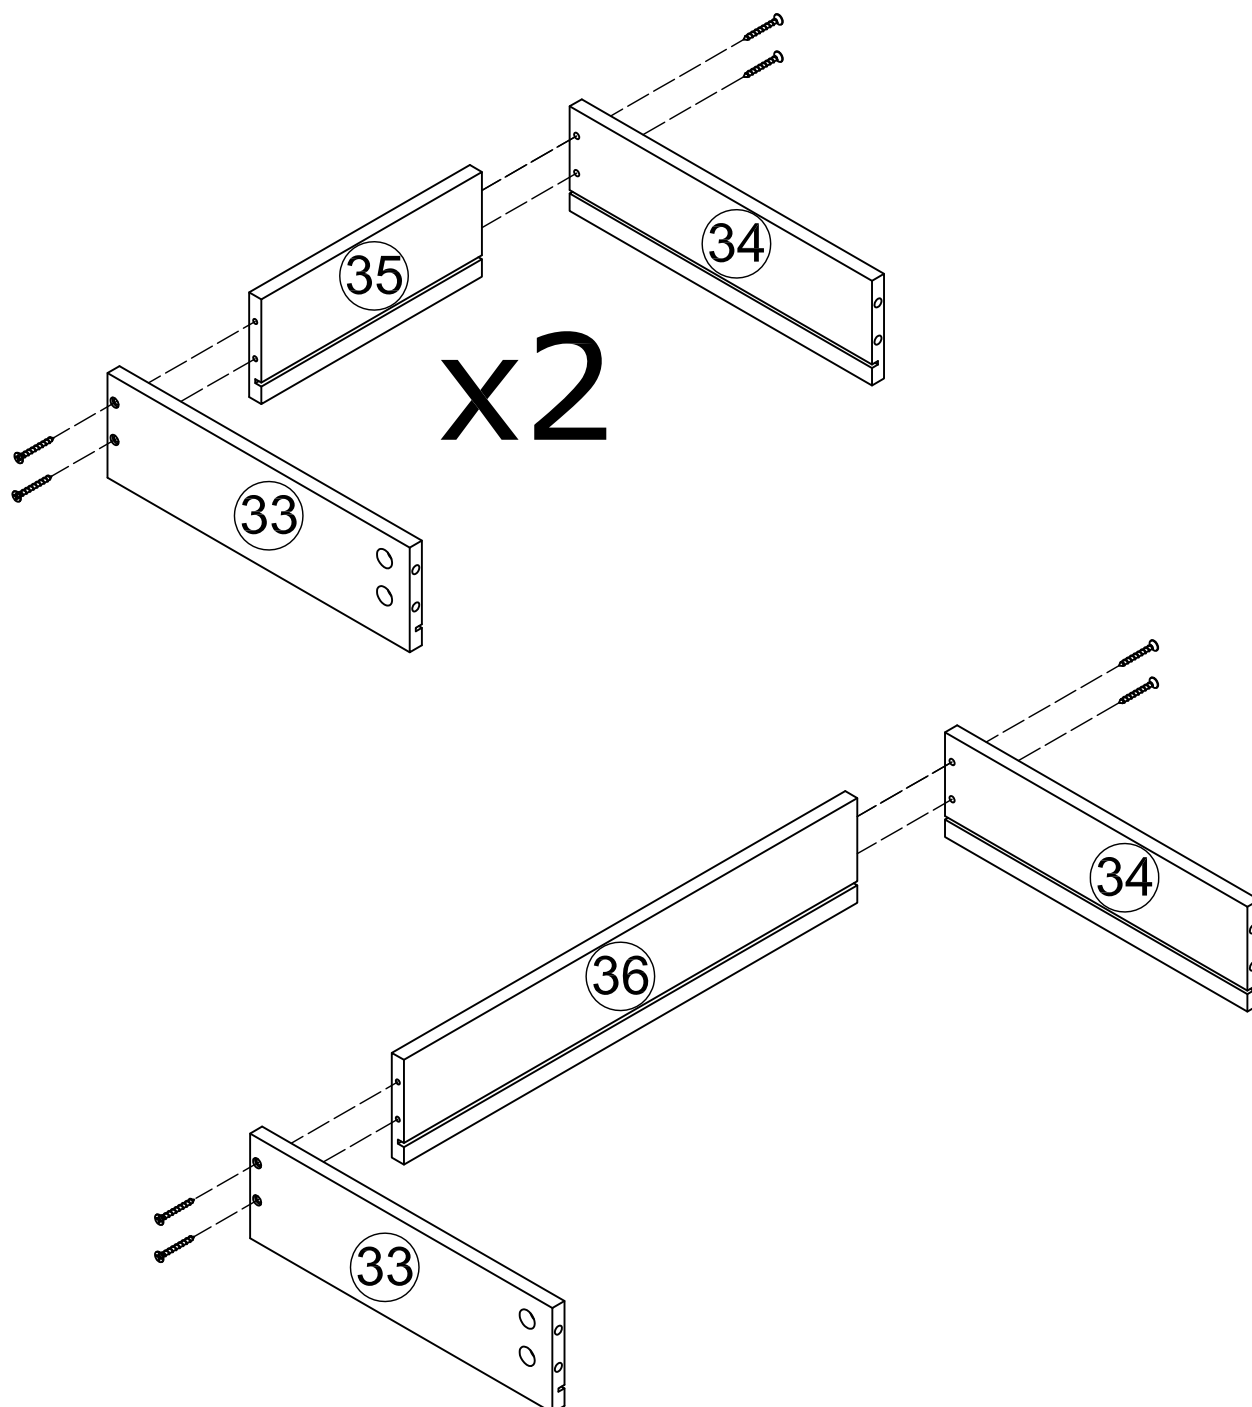


20

A x 4 φ 15 x 11 mm	H x 1 M4 x 18 mm	S x 1	
----------------------------------	--------------------------------	--------------	--




- Insert panel (37) into the grooves .
- Attach panel (32) to (33) & (34) and lock with cam (A).
- Install handle (S) to panel (32) with bolts (H).

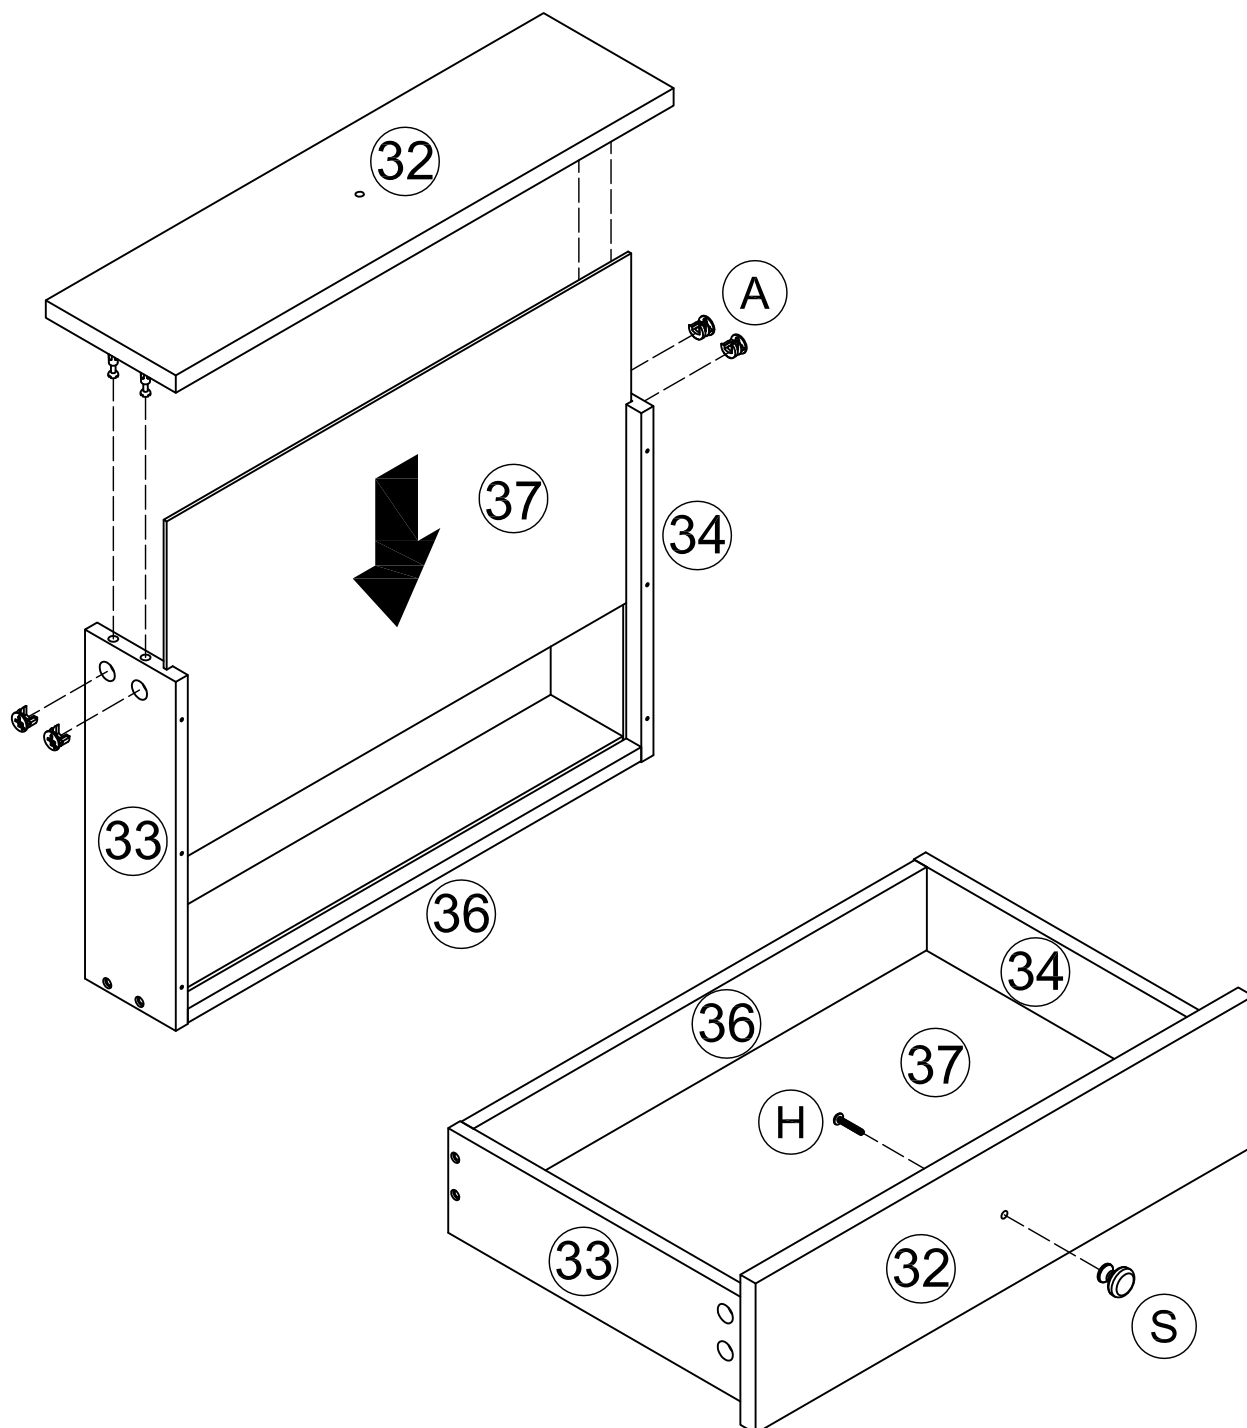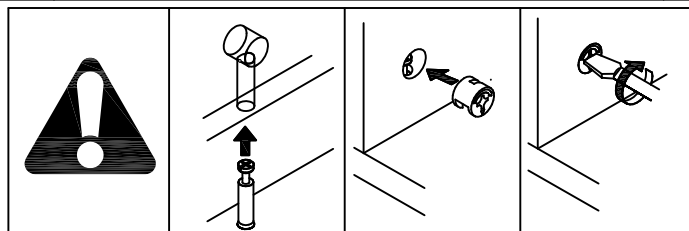


21

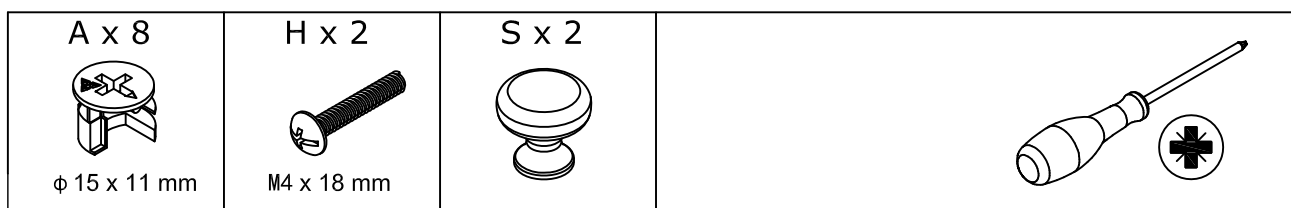


- Insert panel (31) into the grooves .
- Attach panel (30) to (33) & (34) and lock with cam (A).
- Install handle (S) to panel (30) with bolts (H).

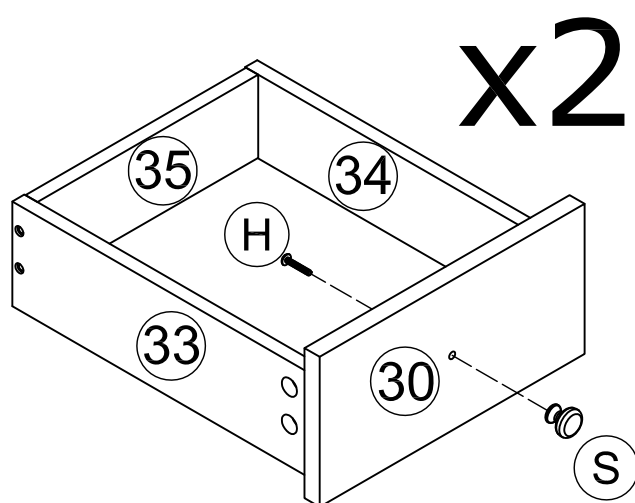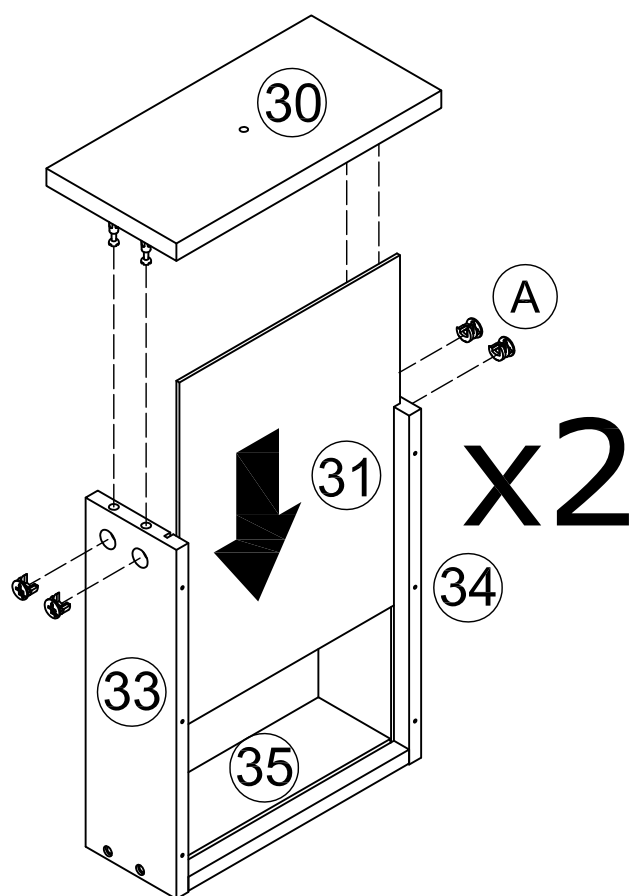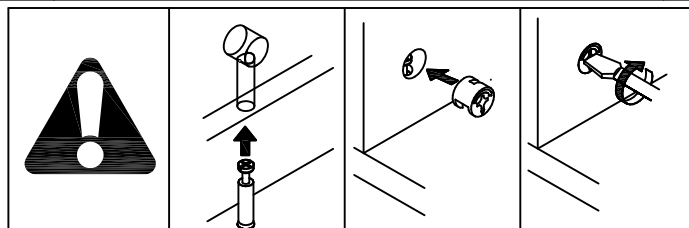




22

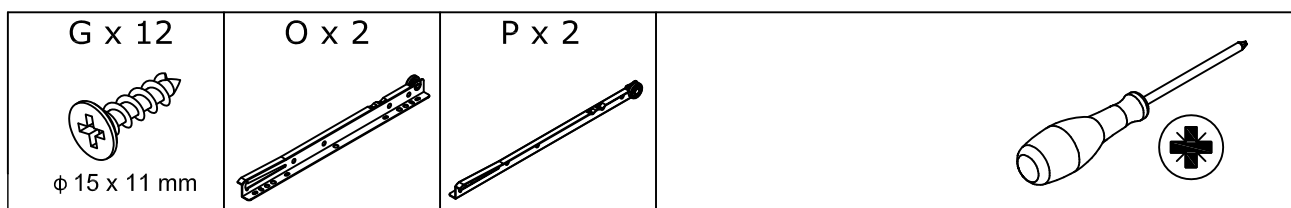





- Install drawer track (O) & (P) to panel (33) & (34) with screws (G).

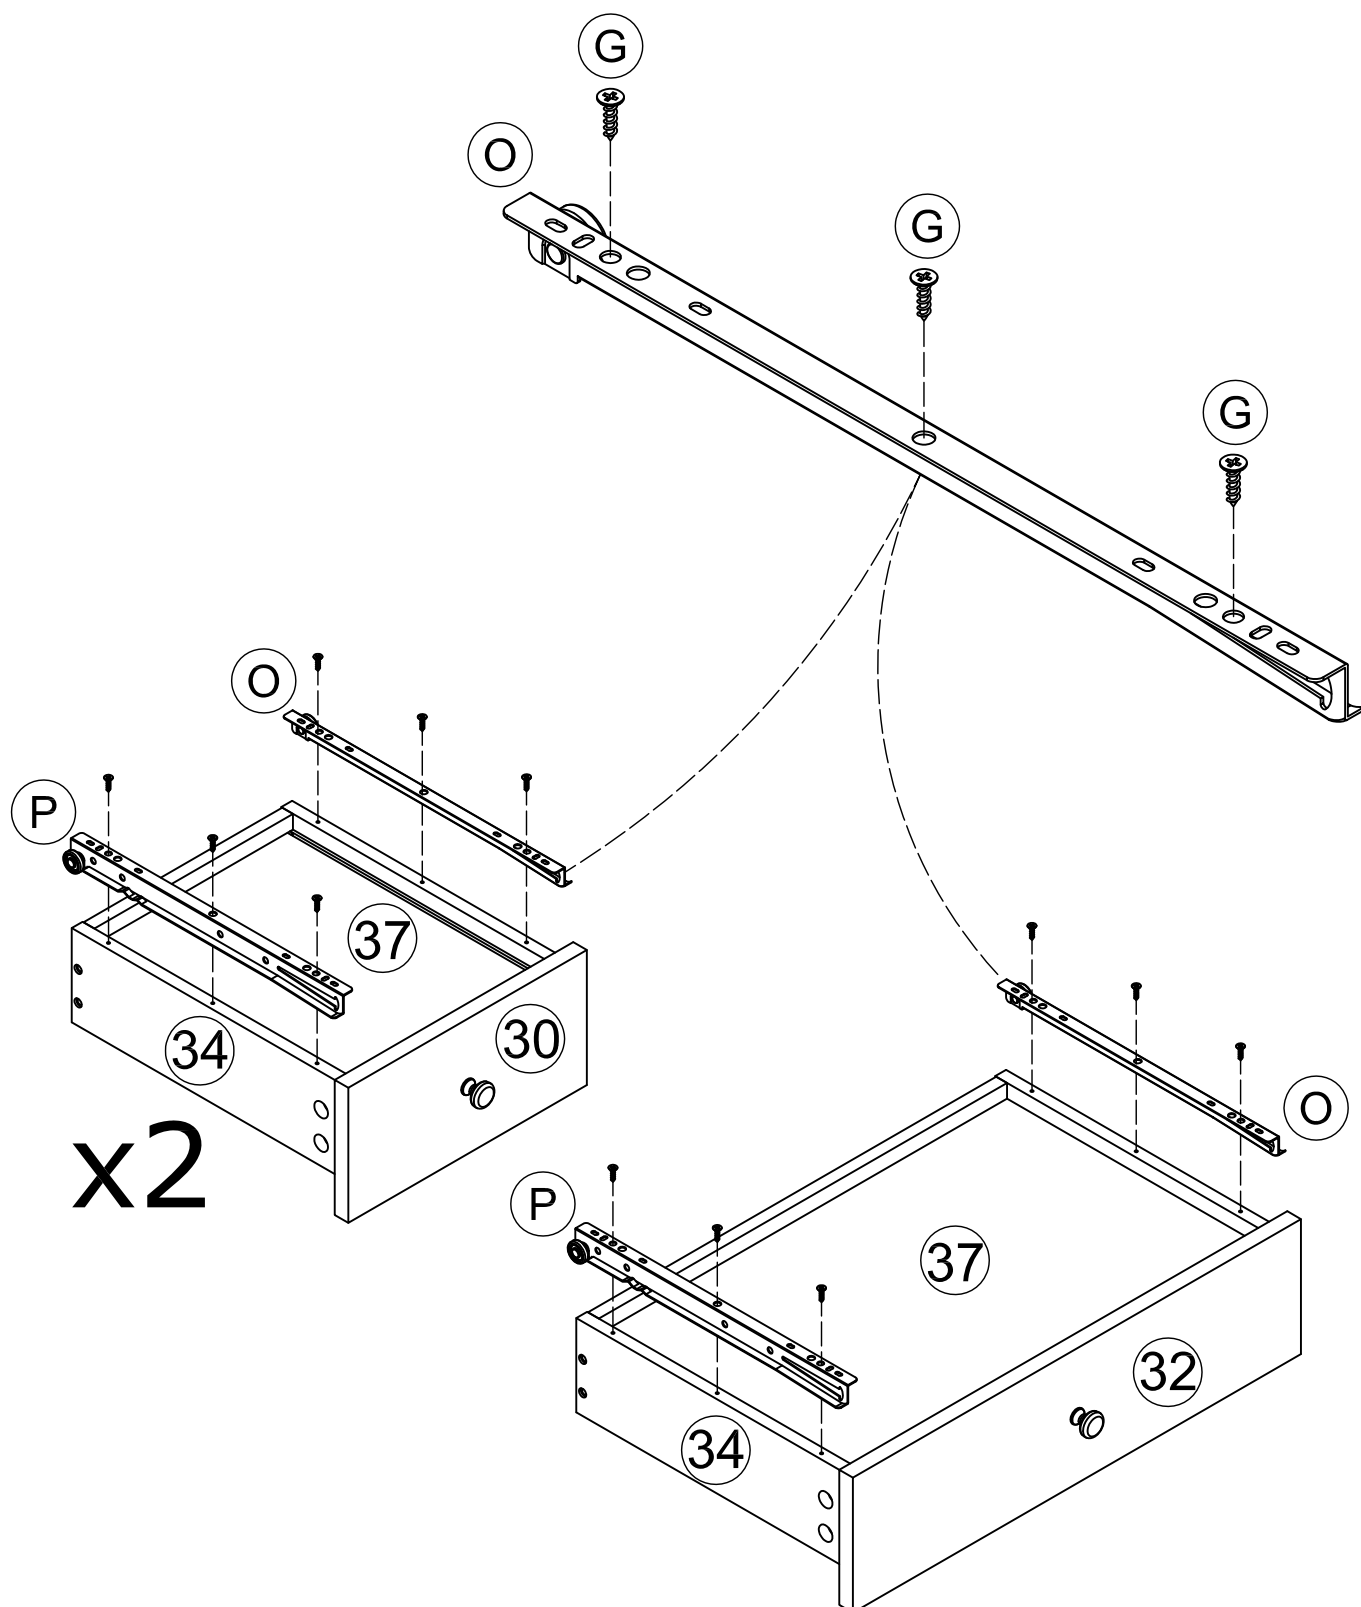




23

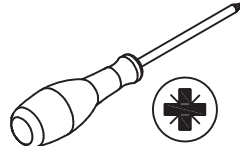B x 10  $\phi 7 \times 40 \text{ mm}$	E x 4  $\phi 8 \times 30 \text{ mm}$	G x 6  $\phi 15 \times 11 \text{ mm}$	M x 1 	N x 1 	
---	--	---	--	---	---






- Install drawer track (M) & (N) to panel (16) & (19) with screws (G).
- Insert wood dowels (E) into panel (16) & (19).
- Screw the cam bolt (B) into the panel (16) & (19).

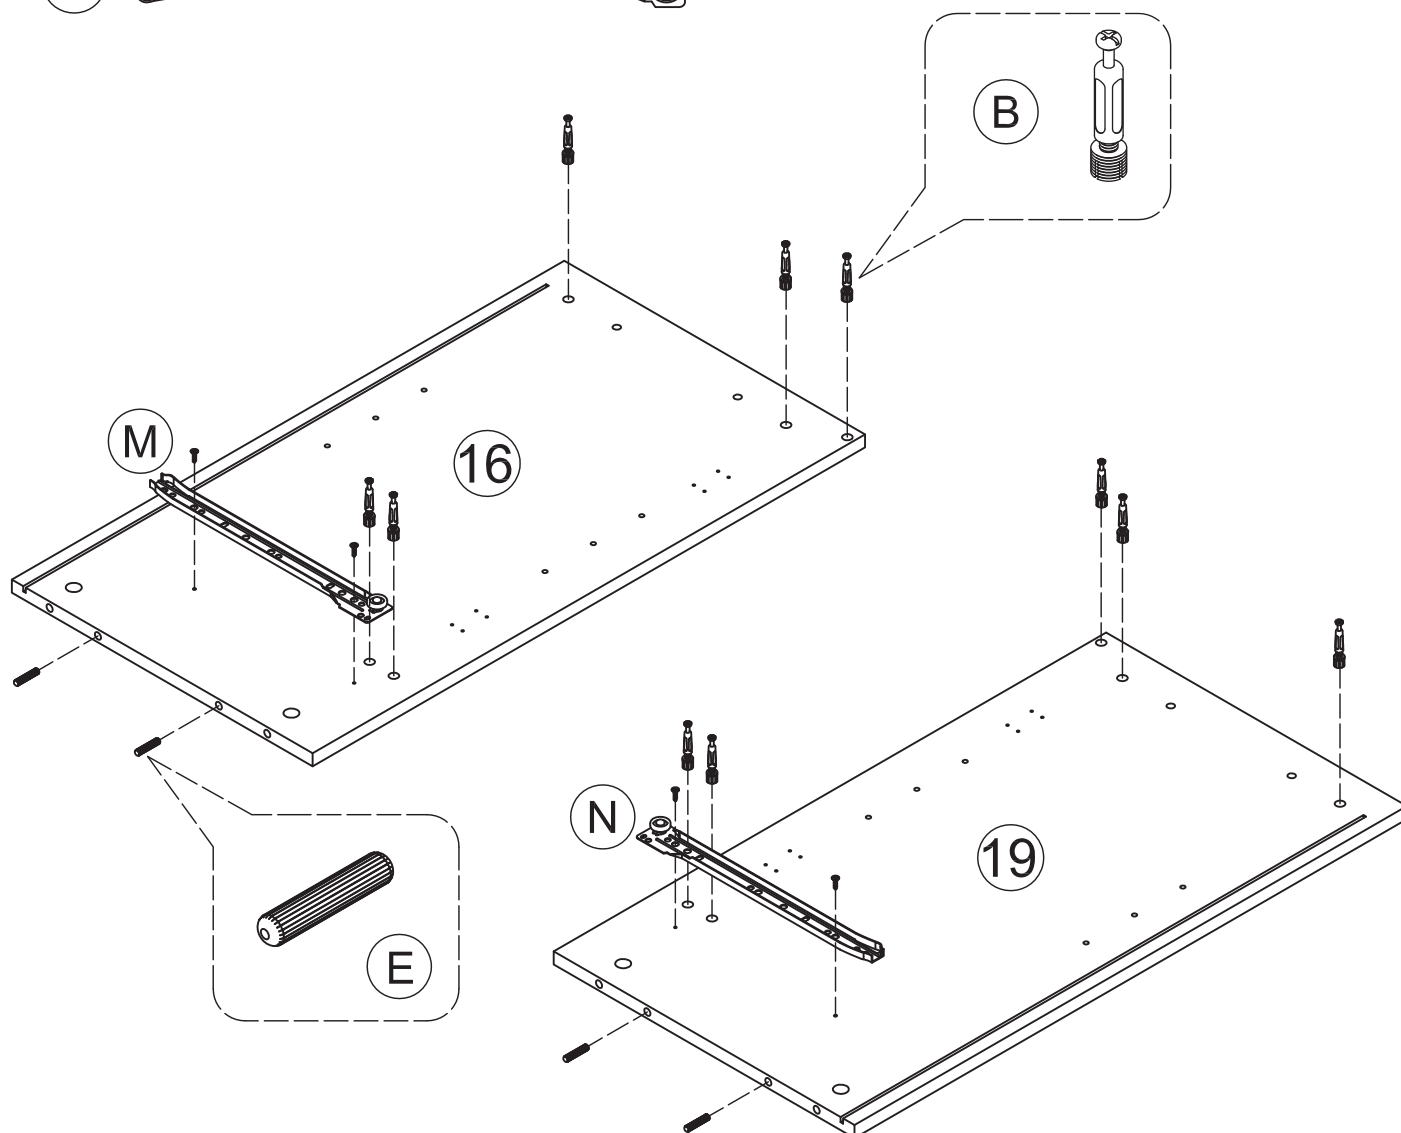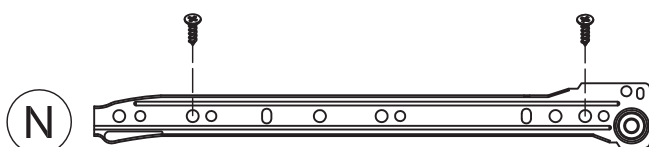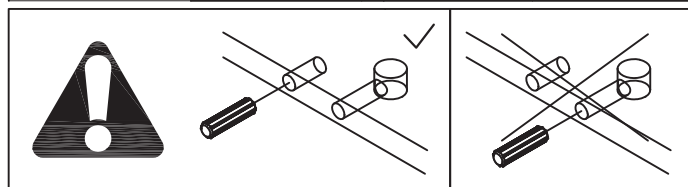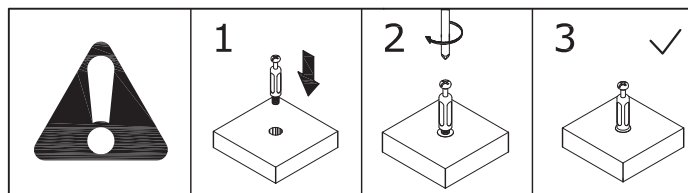




24

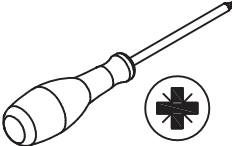B x 9  $\phi 7 \times 40 \text{ mm}$	E x 2  $\phi 8 \times 30 \text{ mm}$	G x 6  $\phi 15 \times 11 \text{ mm}$	M x 1 	N x 1 	
--	--	---	--	---	---






- Install drawer track (M) & (N) to panel (17) with screws (G).
- Insert wood dowels (E) into panel (17).
- Screw the cam bolt (B) into the panel (17).

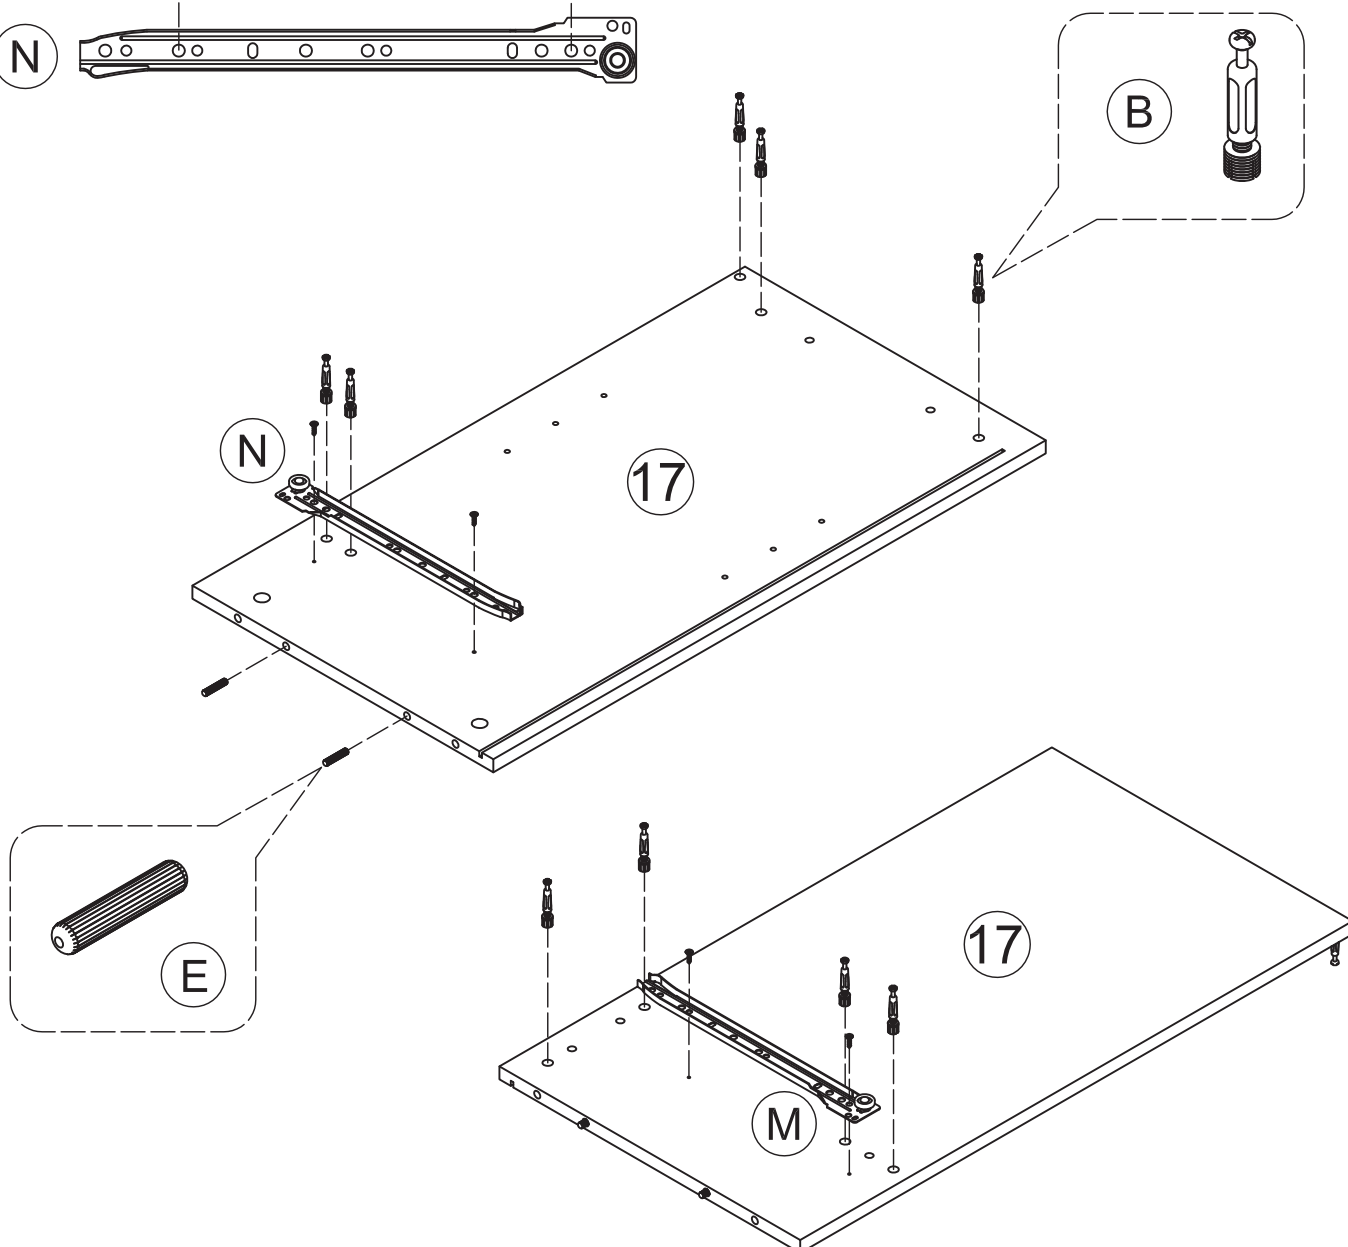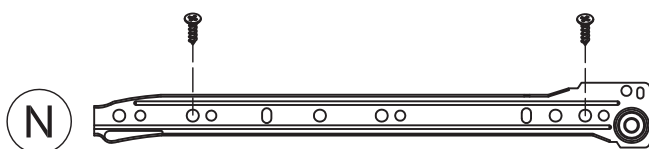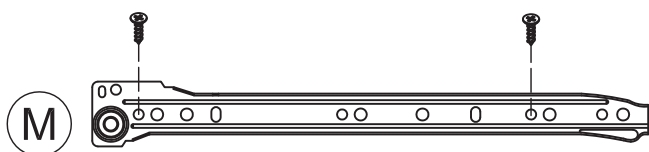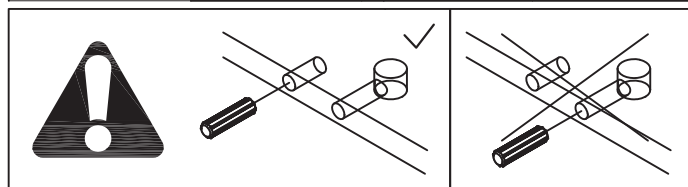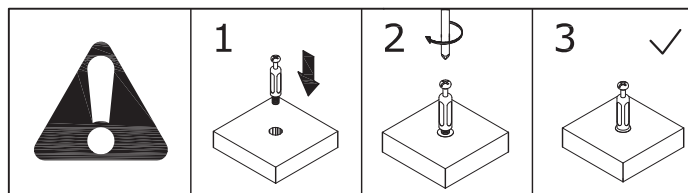

25

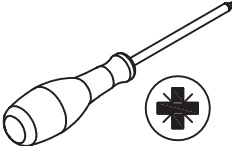B x 9  $\phi 7 \times 40 \text{ mm}$	E x 2  $\phi 8 \times 30 \text{ mm}$	G x 6  $\phi 15 \times 11 \text{ mm}$	M x 1 	N x 1 	
--	--	---	--	---	---

- Install drawer track (M) & (N) to panel (18) with screws (G).
- Insert wood dowels (E) into panel (18).
- Screw the cam bolt (B) into the panel (18).

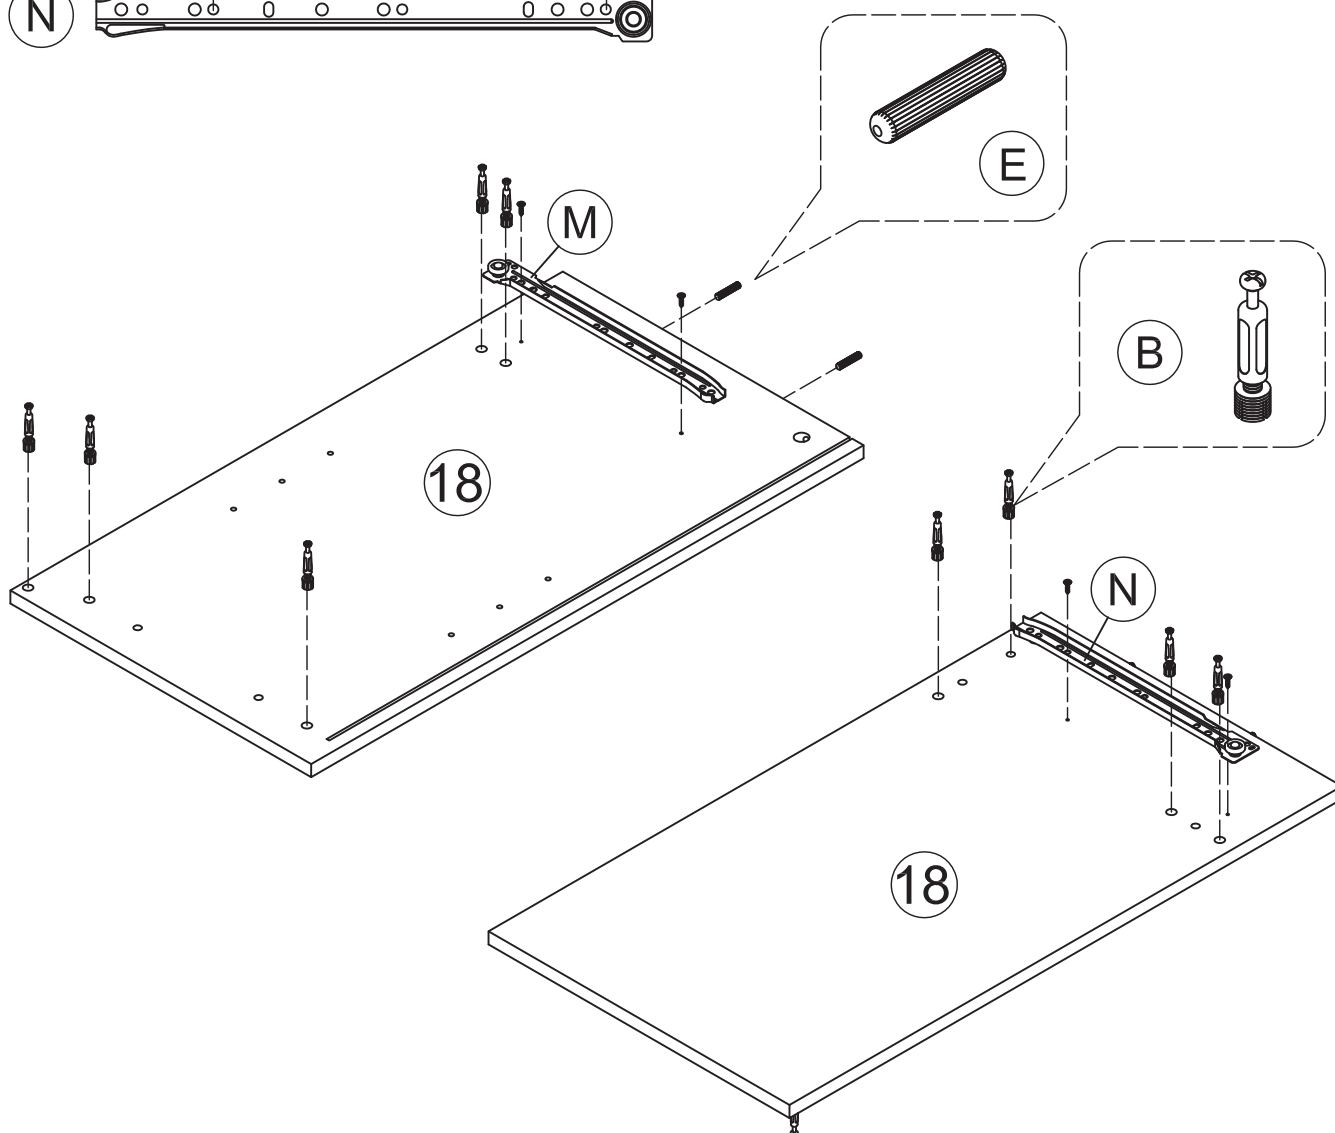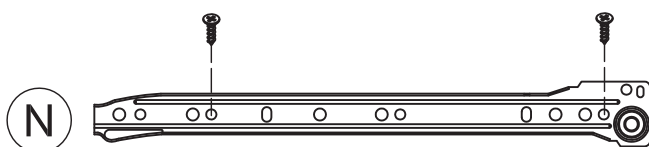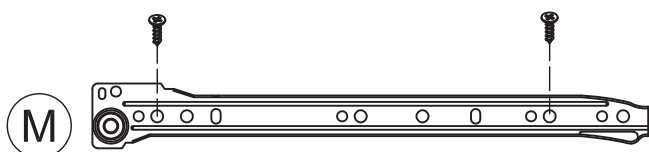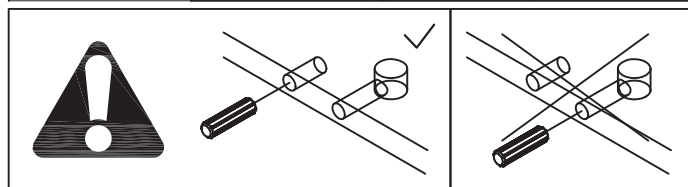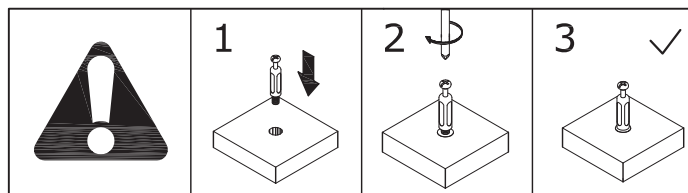


26

A x 4




φ 15 x 11 mm

B x 4




φ 7 x 40 mm





E x 12



φ 8 x 30 mm

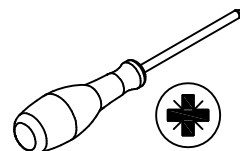

- Screw the cam bolt (B) into the panel (25) .
- Insert wood dowels (E) into panel (24) .
- Attach panel (25) to (24) and lock with cam (A).

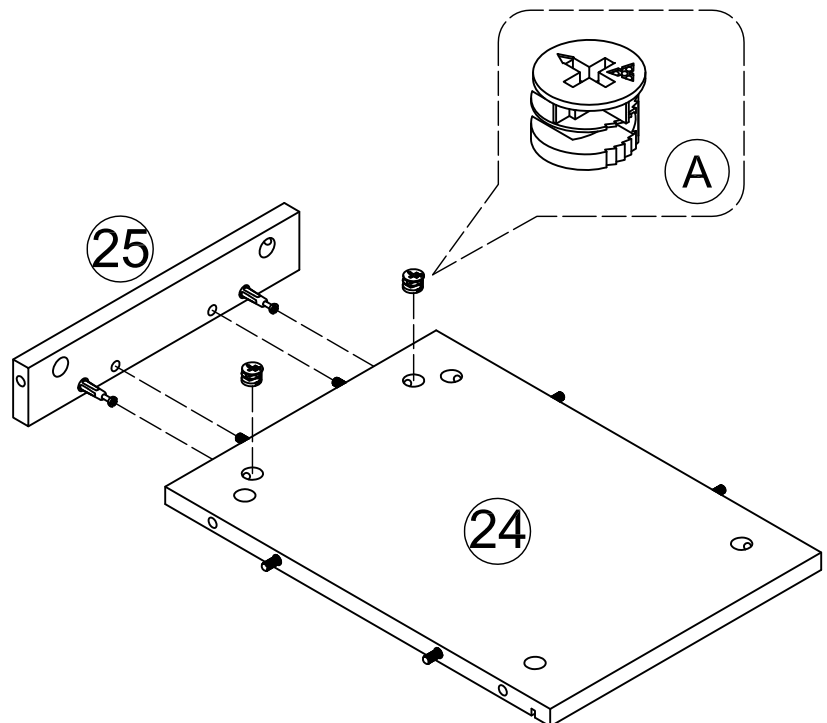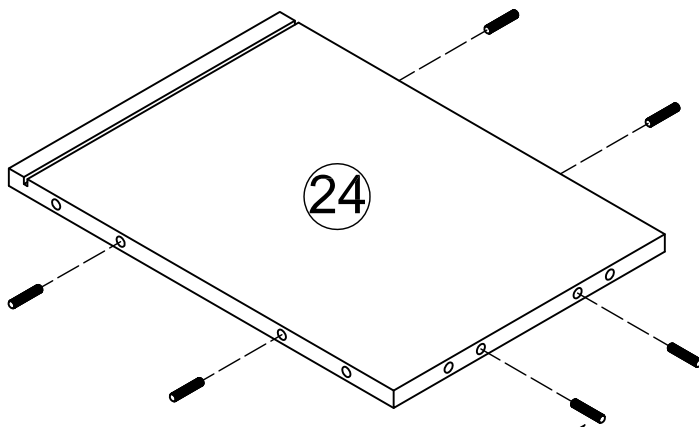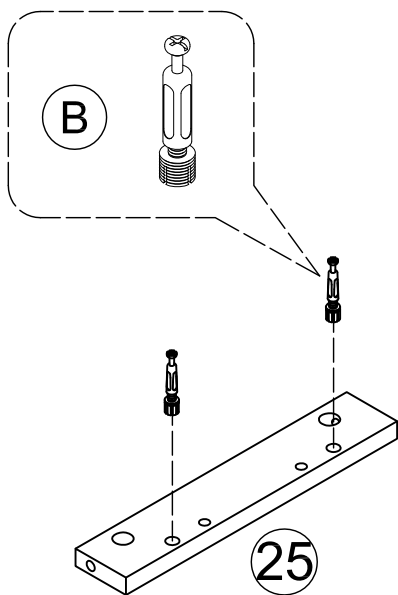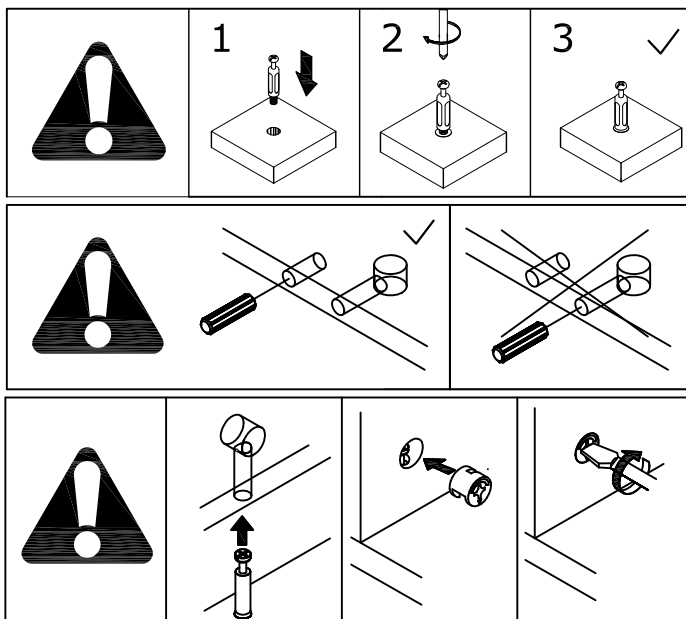


x2

27



A x 5



φ 15 x 11 mm

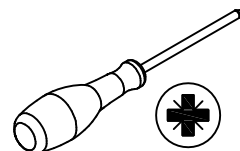


- Attach panel (22) & (24) & (25) to (16) and lock with cam (A).

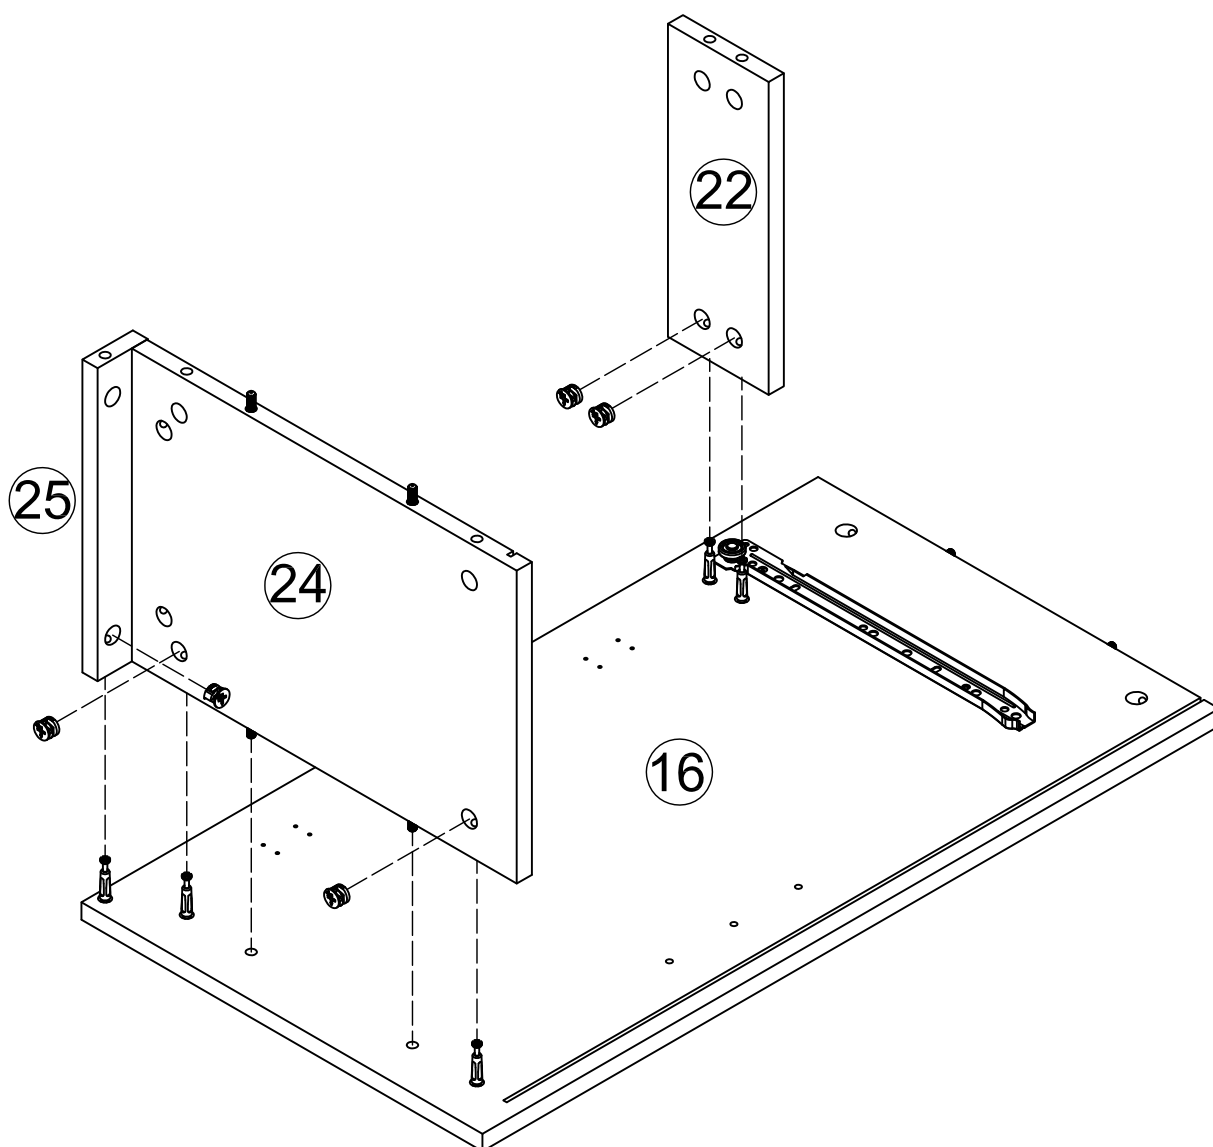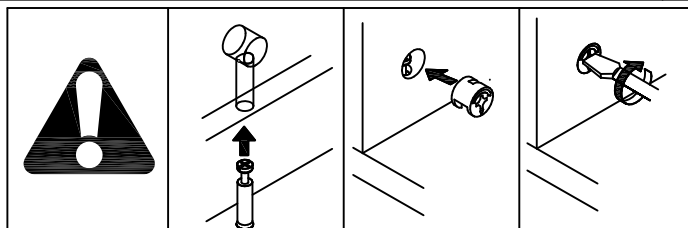


28



A x 5



φ 15 x 11 mm

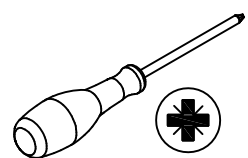

- Attach panel (17) to (22) & (24) & (25) and lock with cam (A).

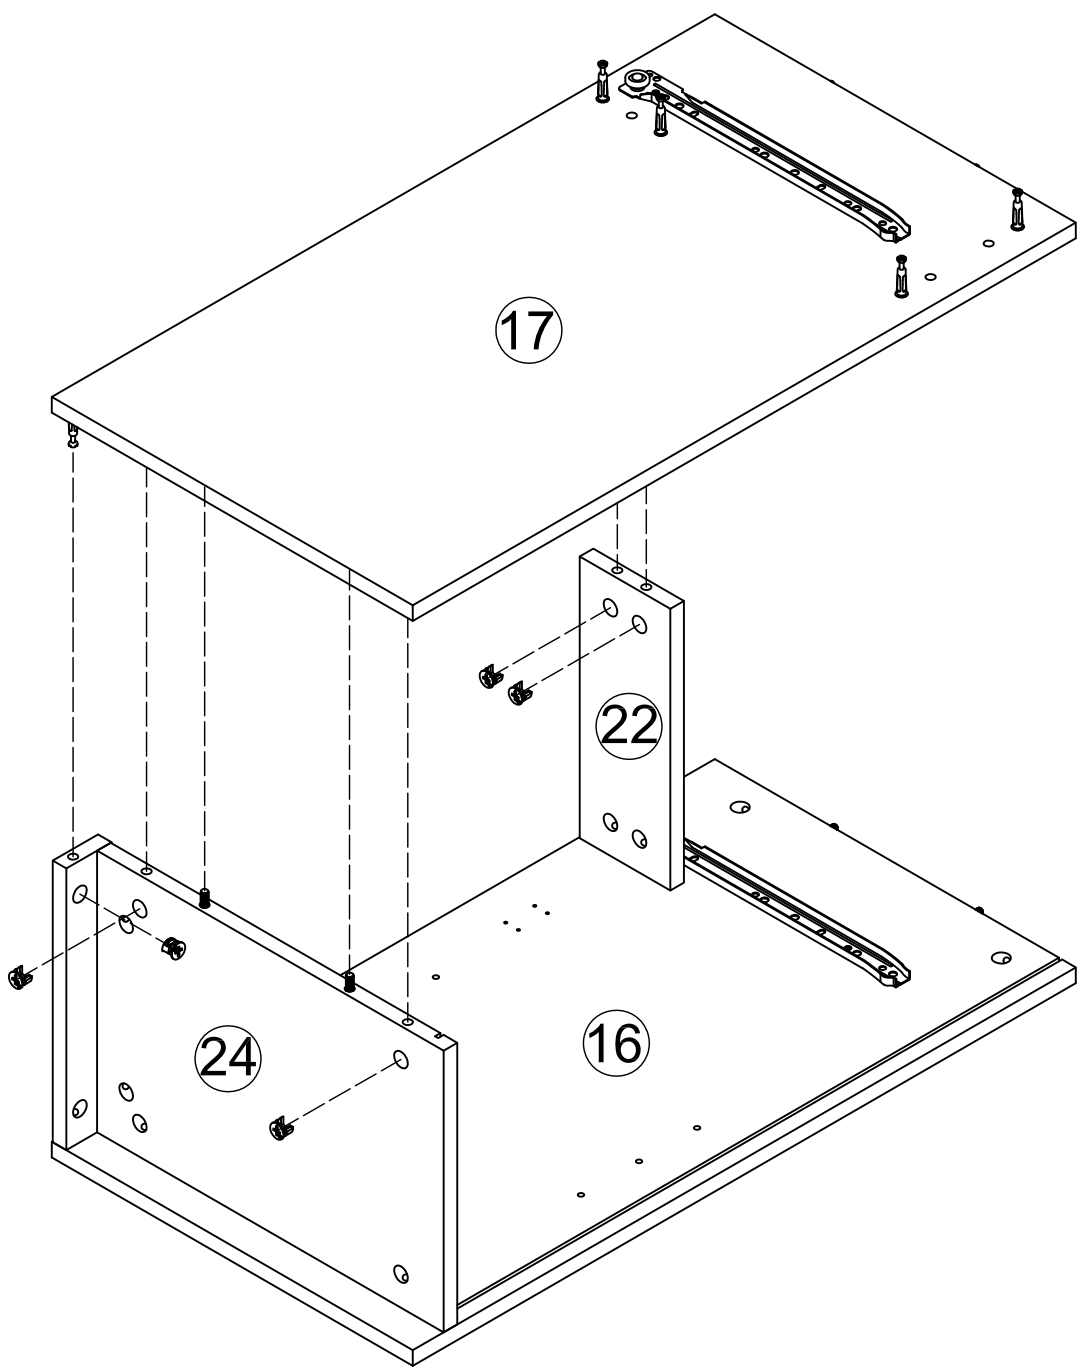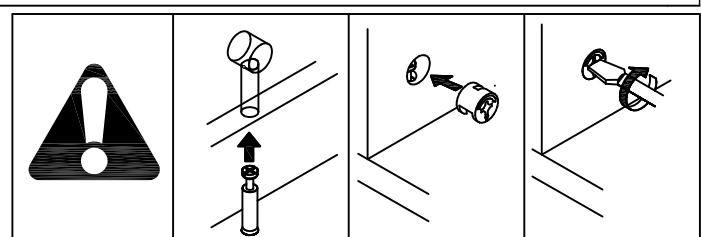


29



A x 5



φ 15 x 11 mm

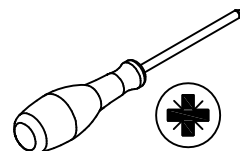

- Attach panel (22) & (24) & (25) to (19) and lock with cam (A).

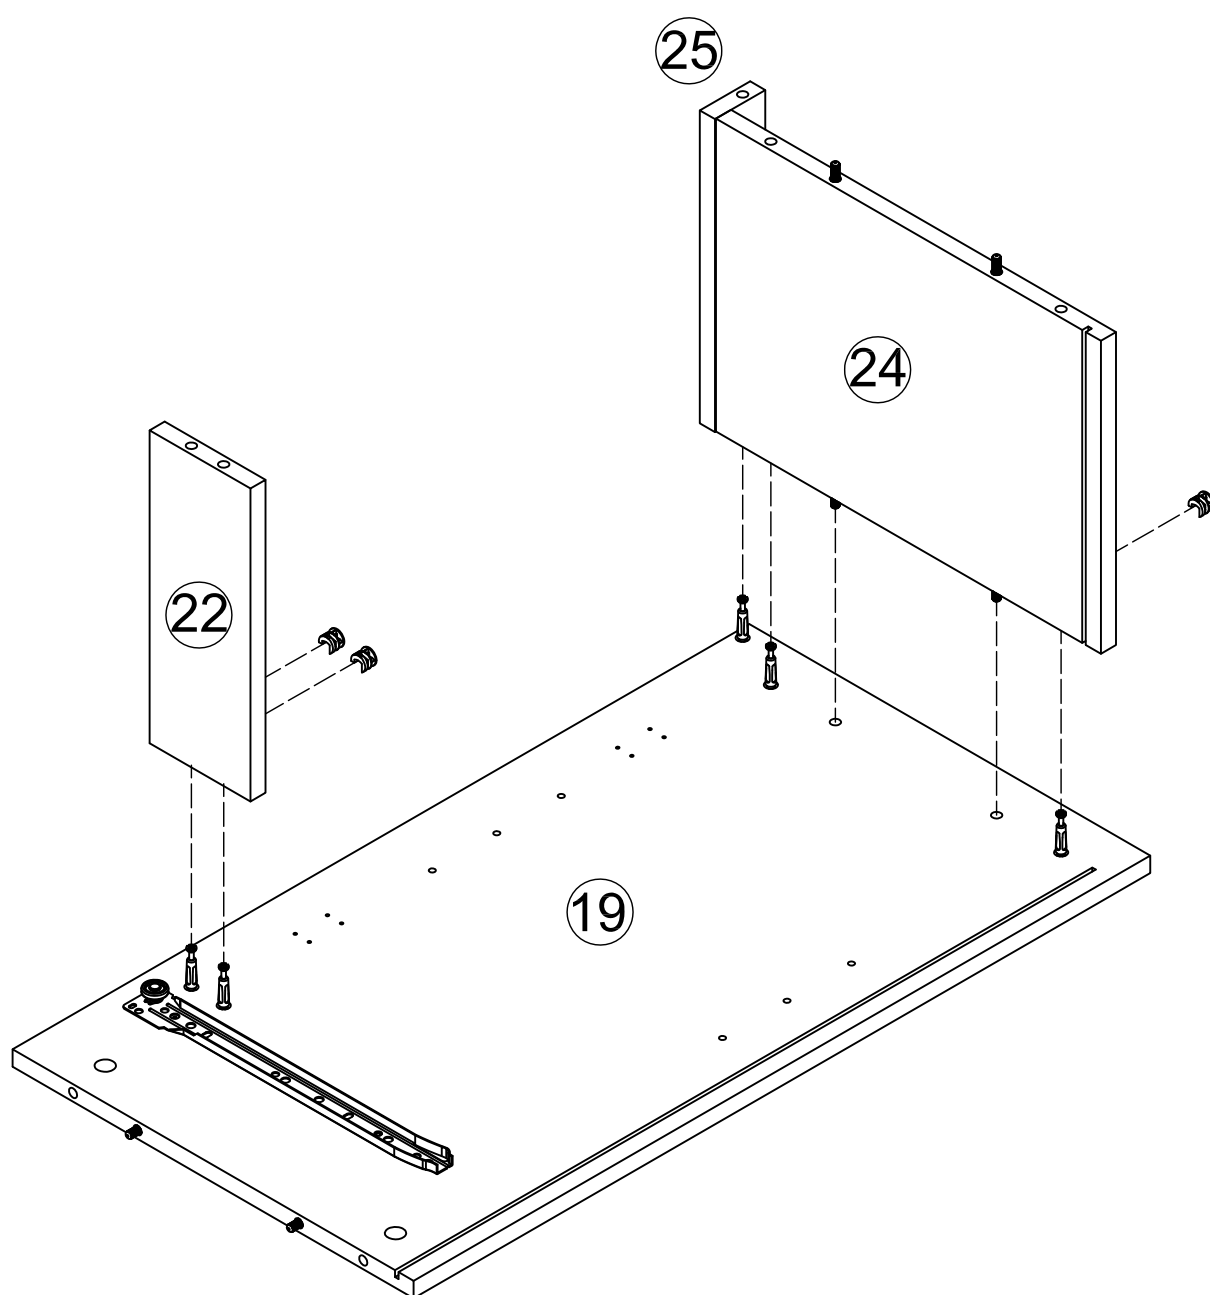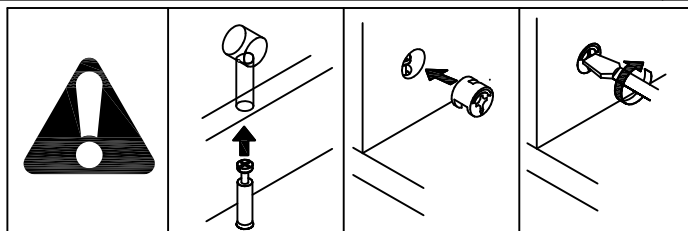


30



A x 5



φ 15 x 11 mm

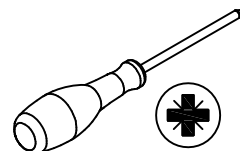


- Attach panel (18) to (22) & (24) & (25) and lock with cam (A).

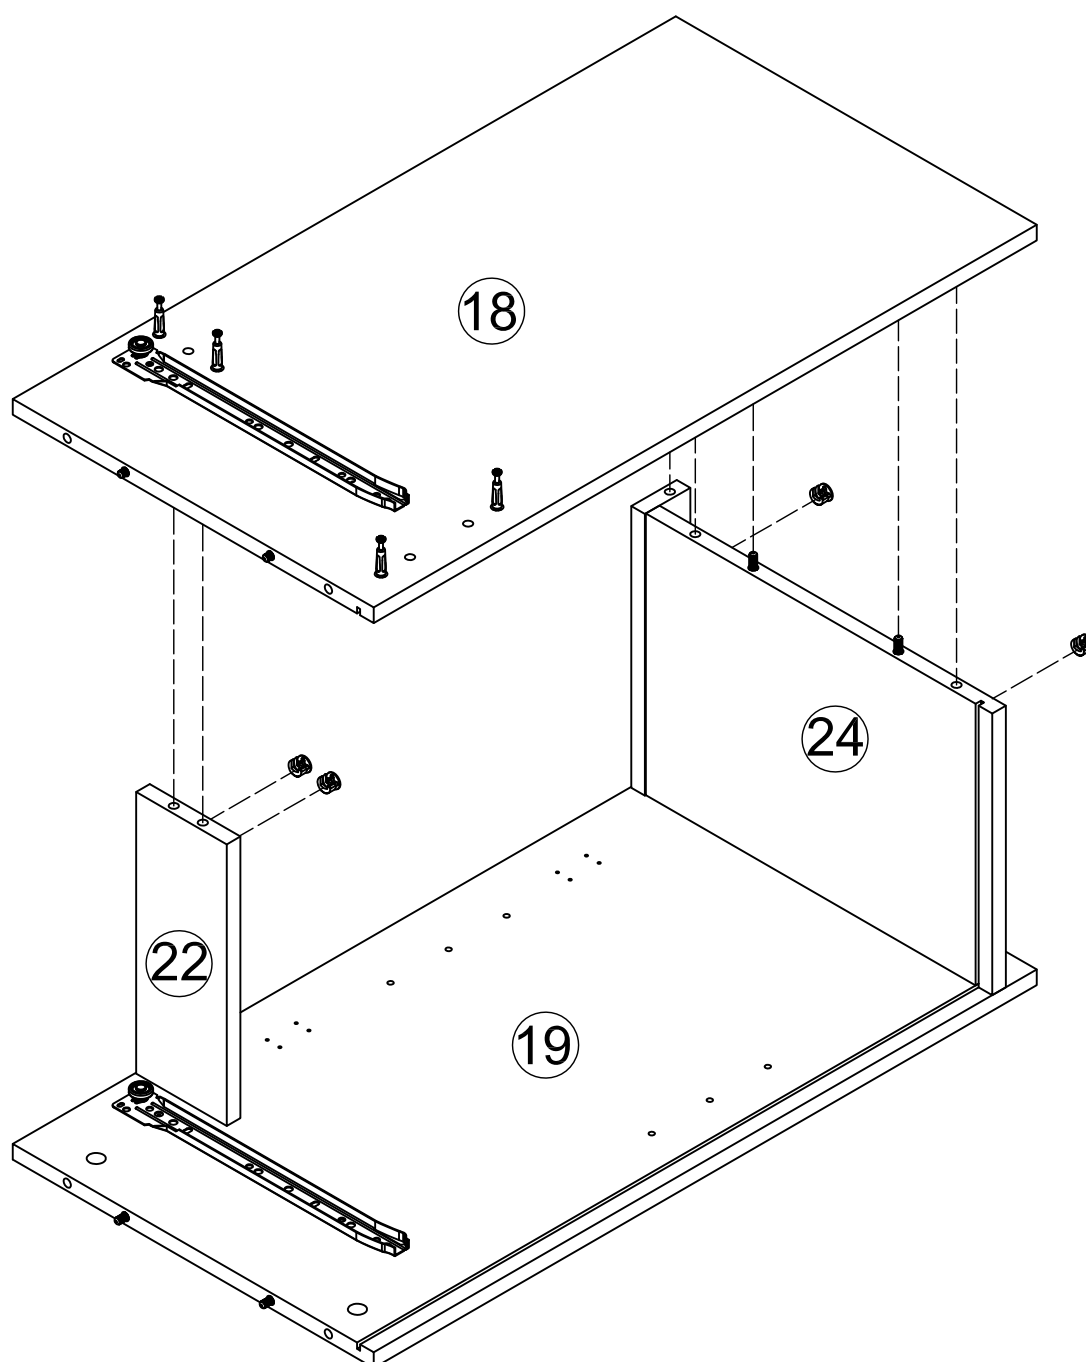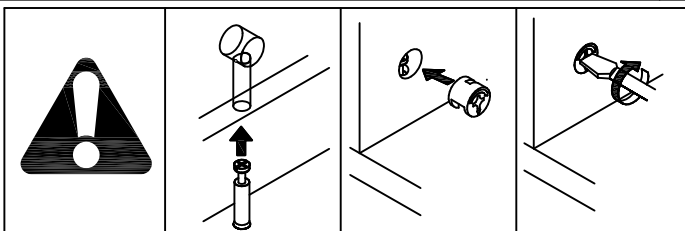


31




E x 8



φ 8 x 30 mm

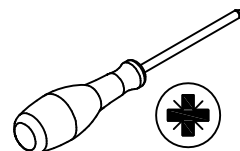

- Insert wood dowels (E) into panel (21) & (29).

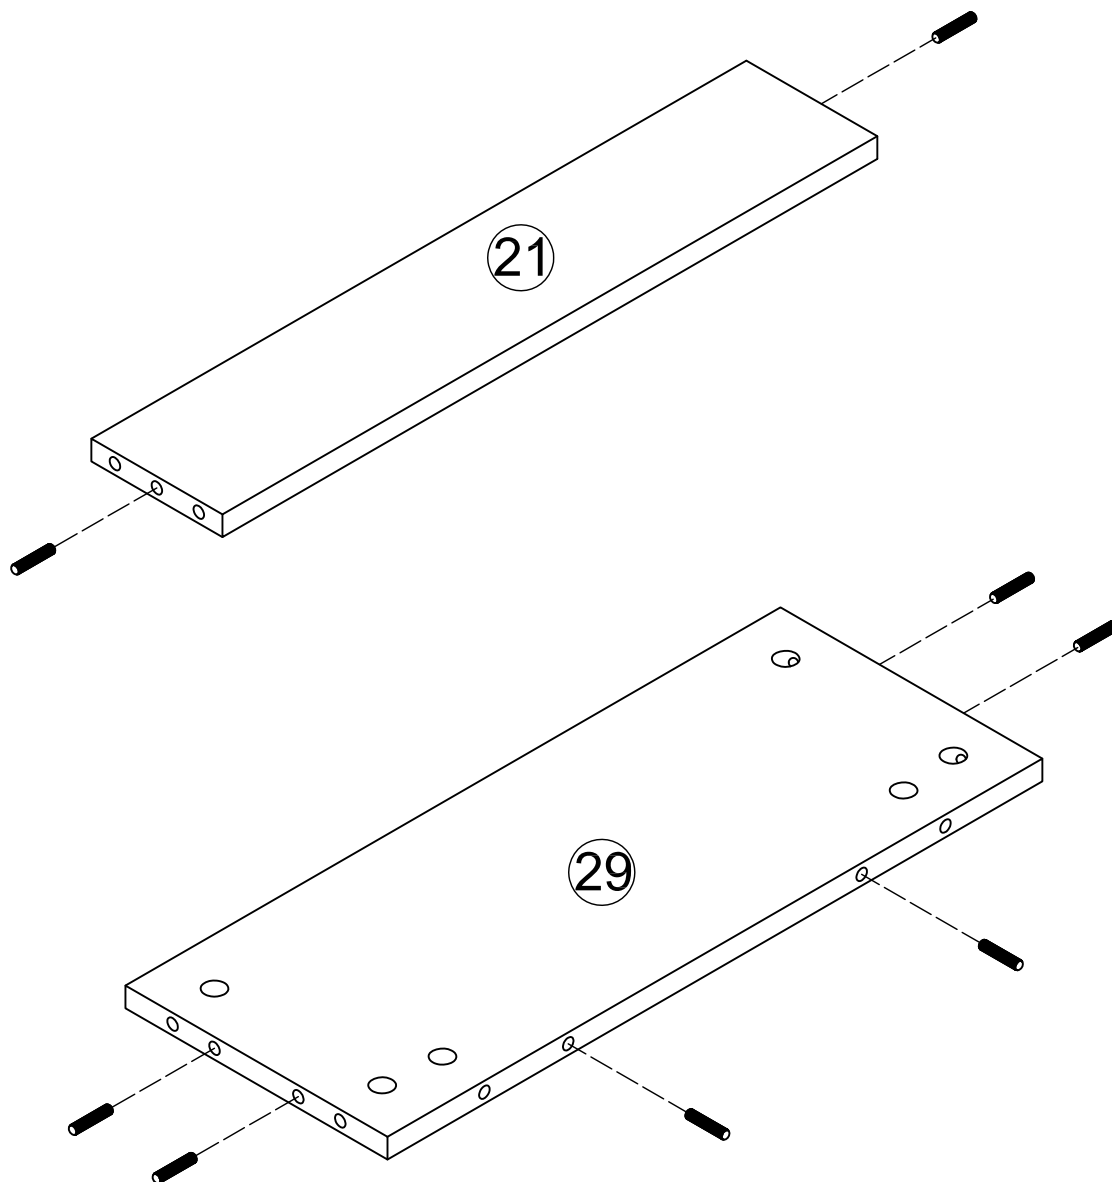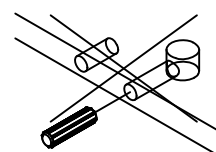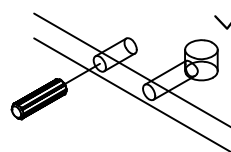


32



A x 8



φ 15 x 11 mm

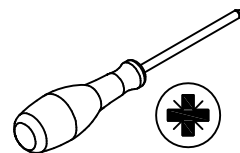

- Attach panel (17) & (18) to (21) & (29) and lock with cam (A).

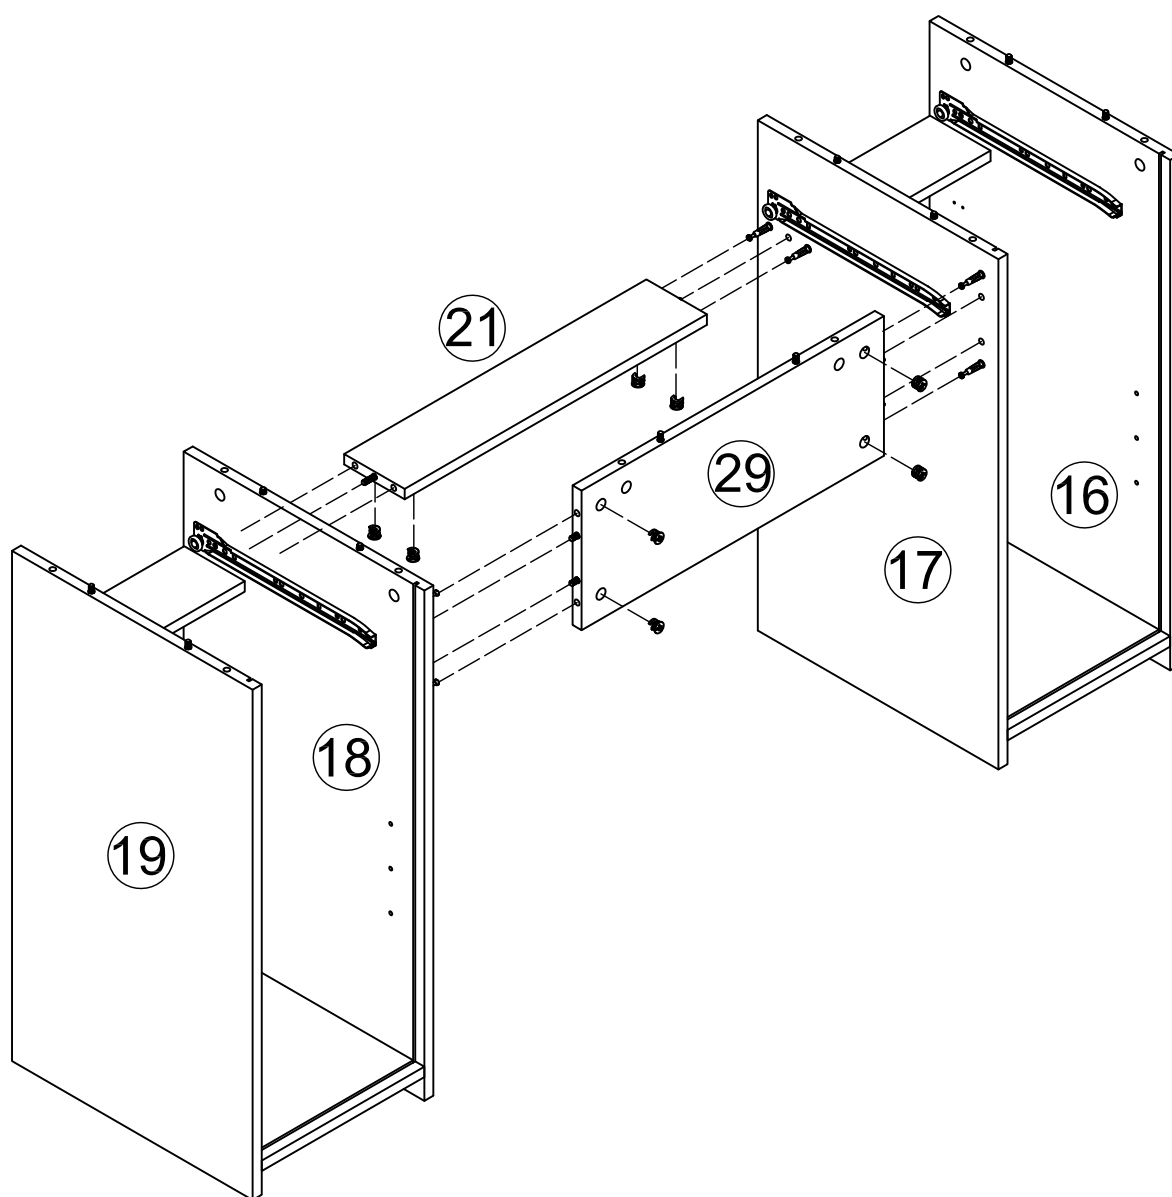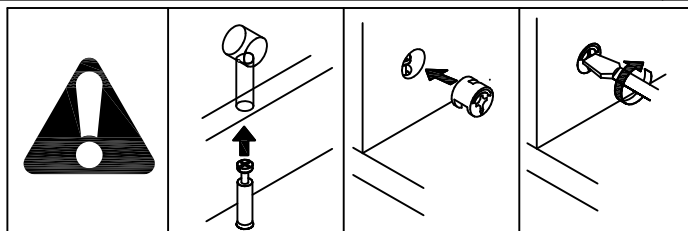


33



A x 10






φ 15 x 11 mm

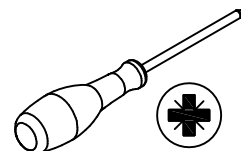


- Attach panel (1) to (16) & (17) & (18) & (19) & (21) & (29) and lock with cam (A).

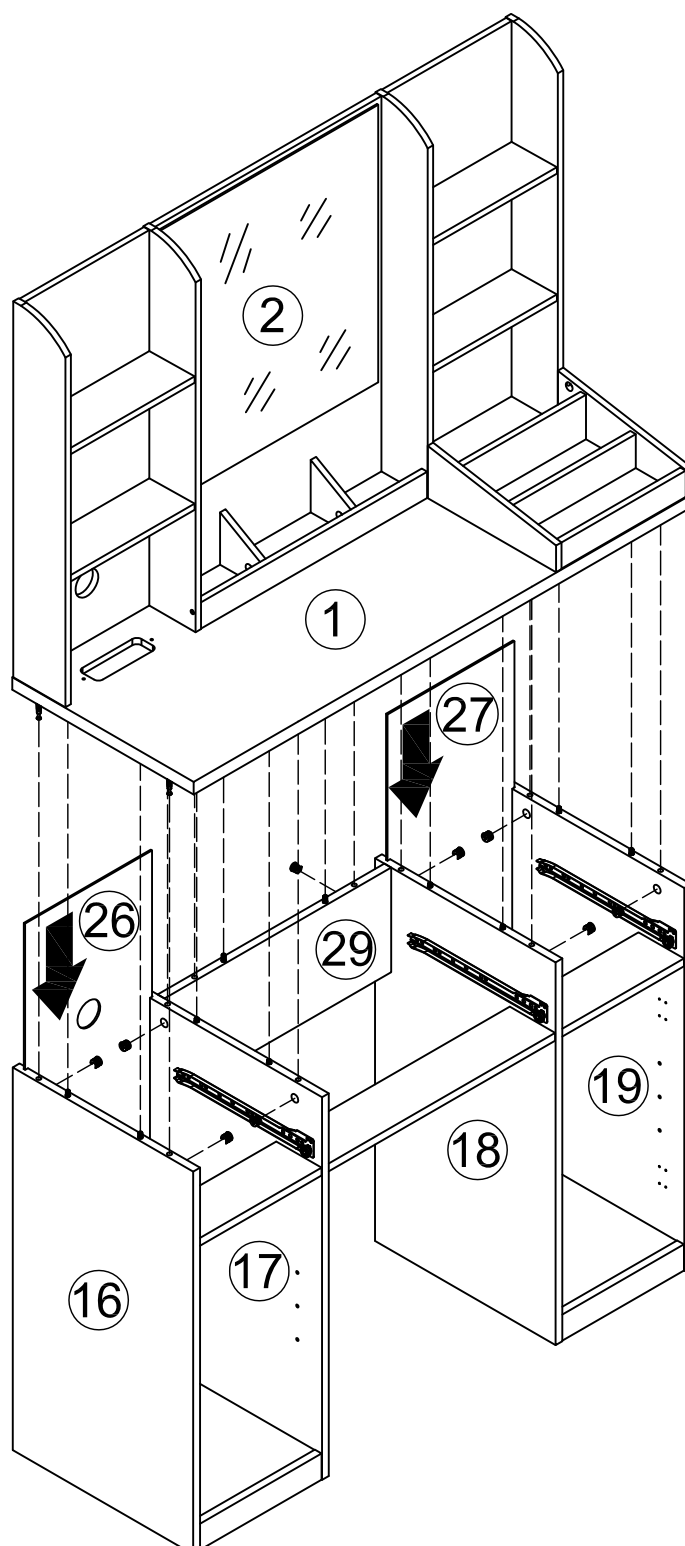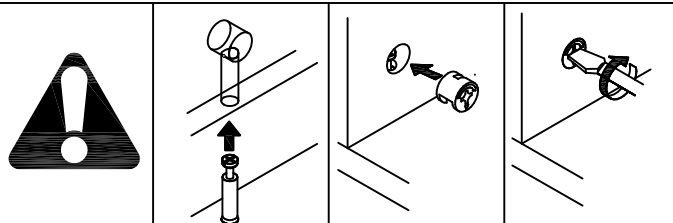

34

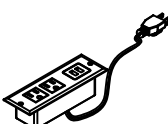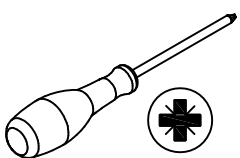
G x 2  φ 15 x 11 mm	R x 1 	 
--	--	---

- Attach socket (R) to panel (1) with screws (G).

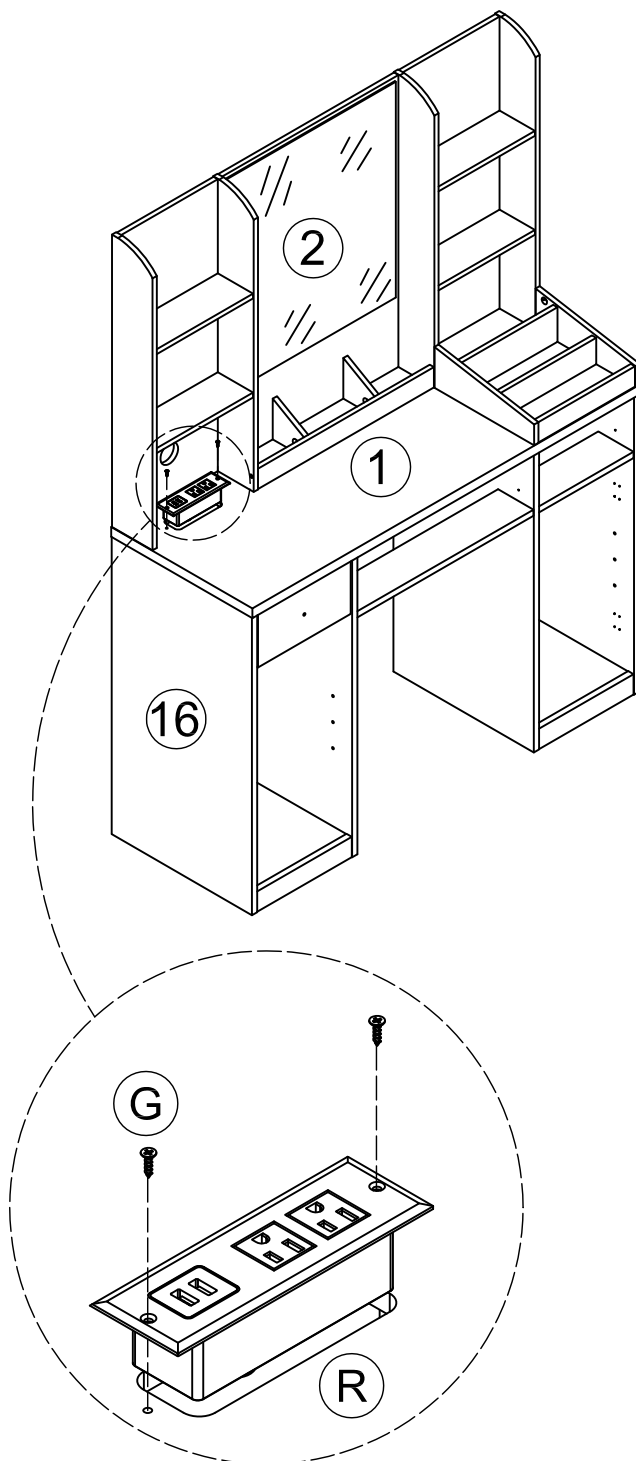



35

G x 12




φ 15 x 11 mm

Q x 1

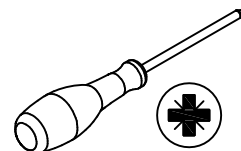


Insert buckle (Q) into back slots and fix with screw (G) as shown.

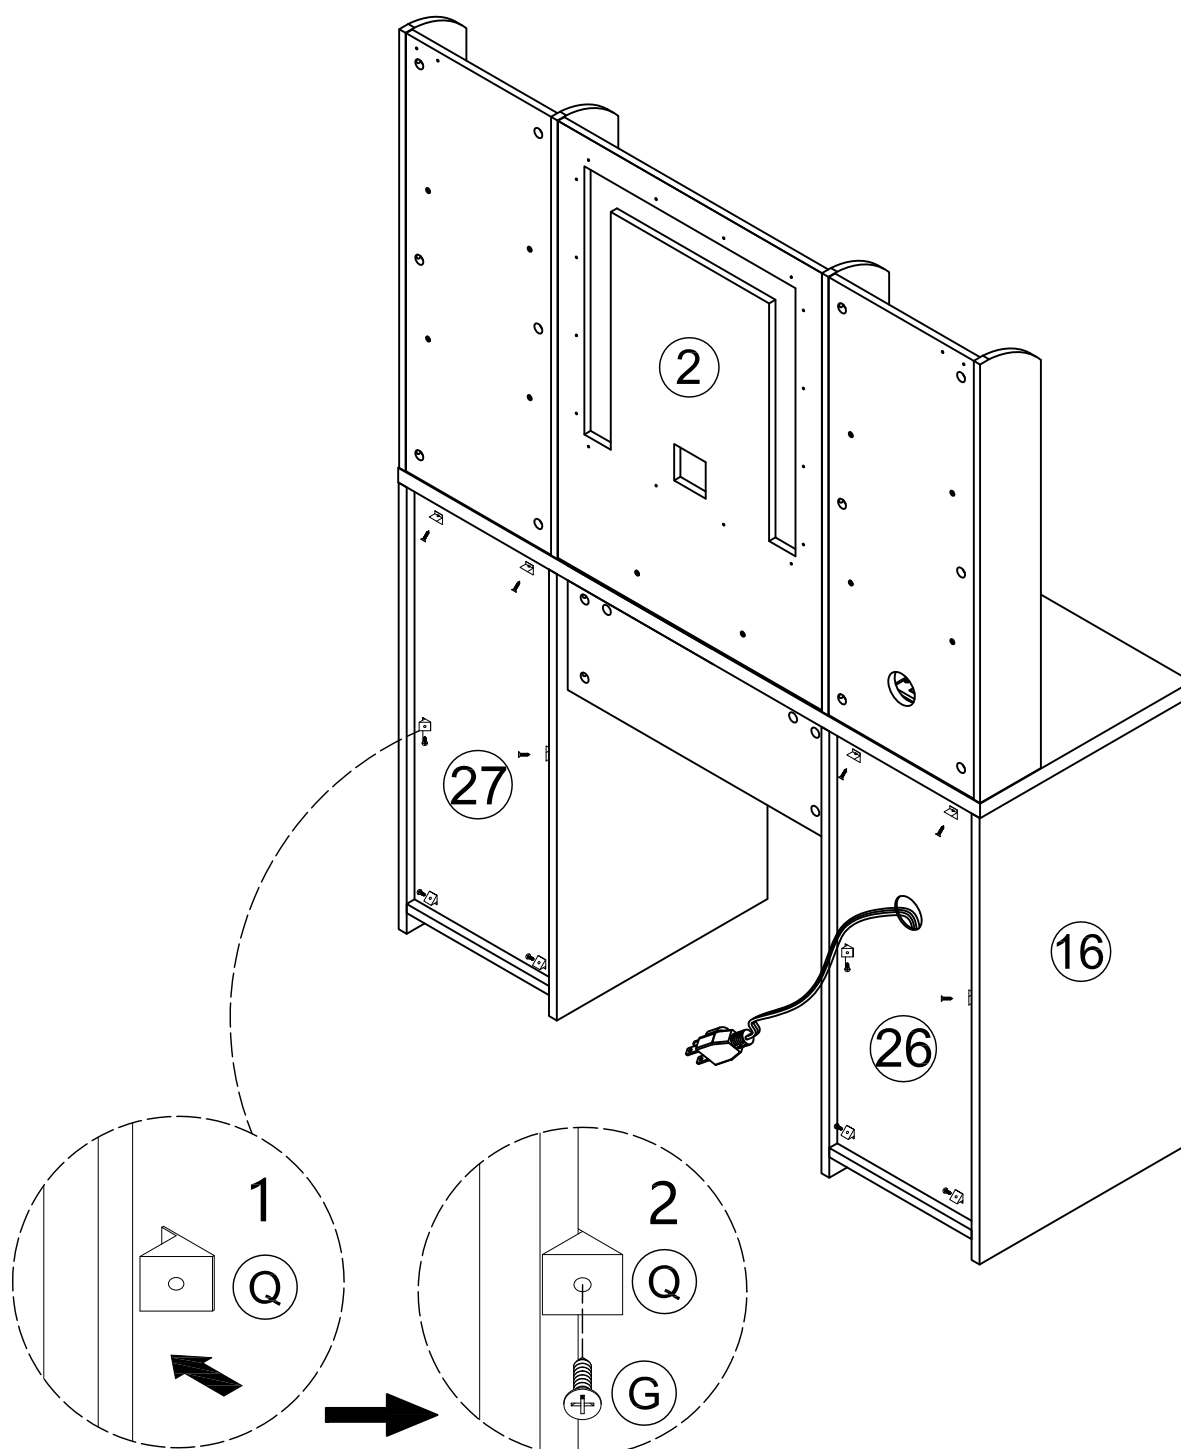



36

G x 8




φ 15 x 11 mm

L x 4

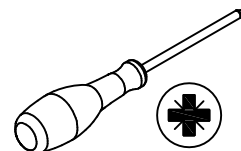


- Attach hinge (L) to panel (28) with screws (G).

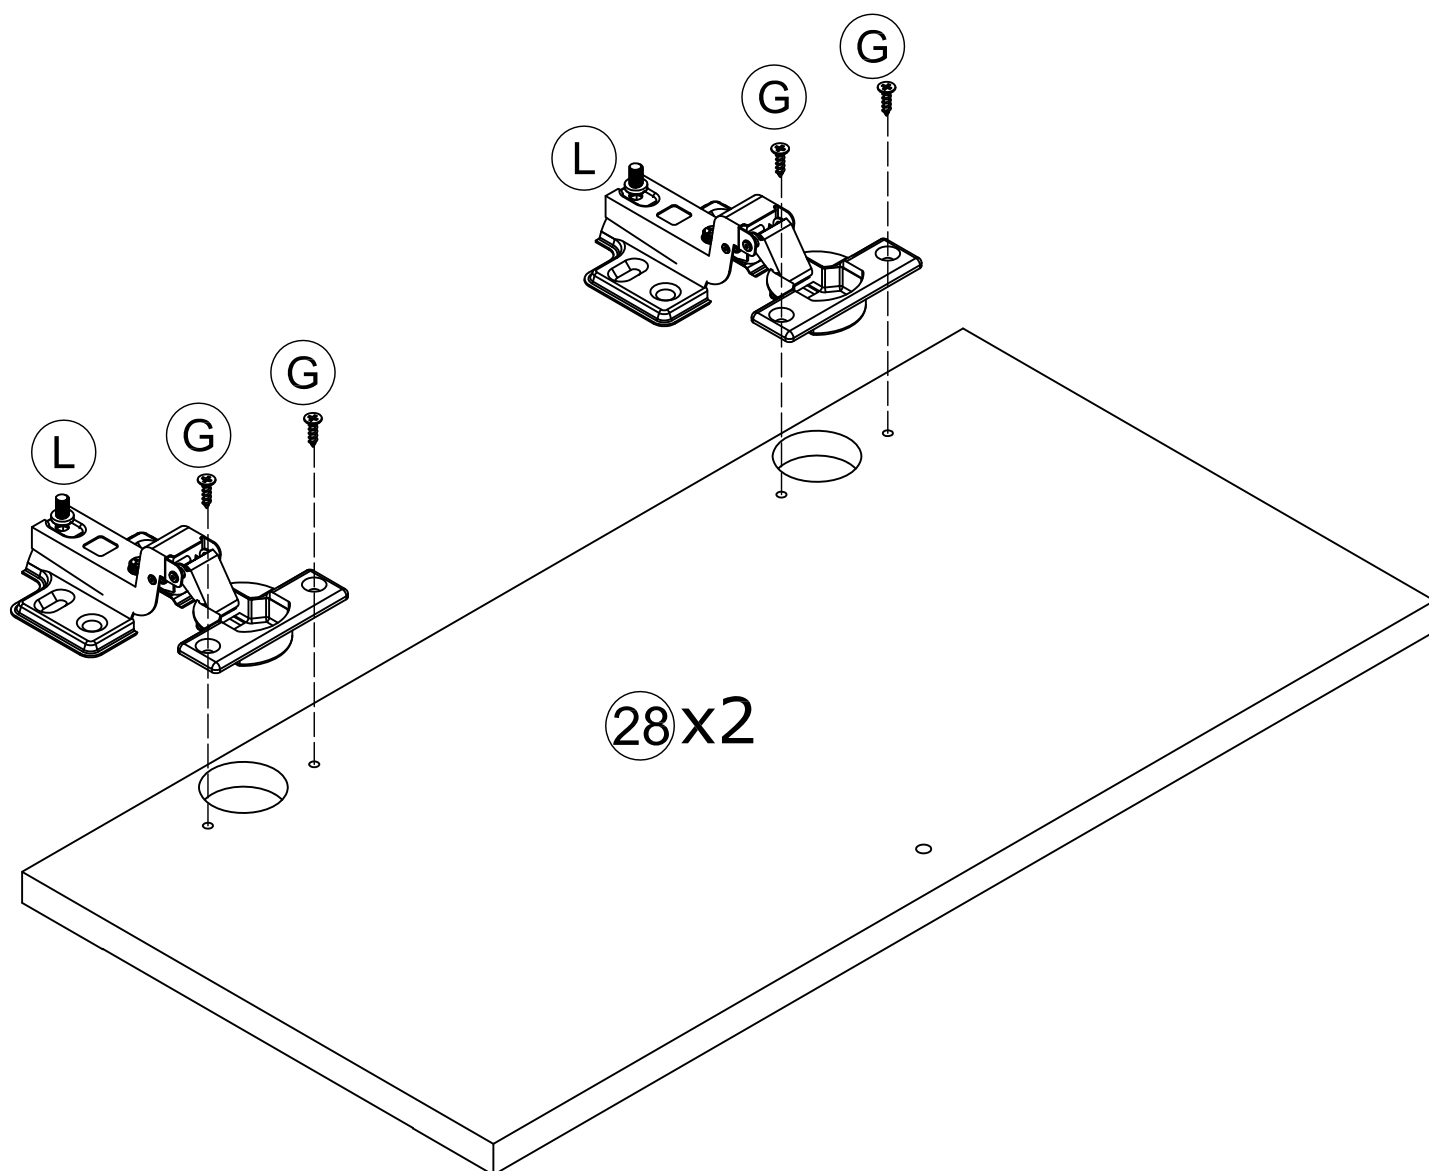


37



G x 16



φ 15 x 11 mm

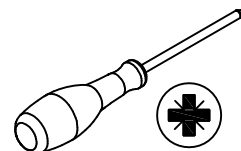


- Attach hinge (L) to panel (16) & (19) with screws (G).



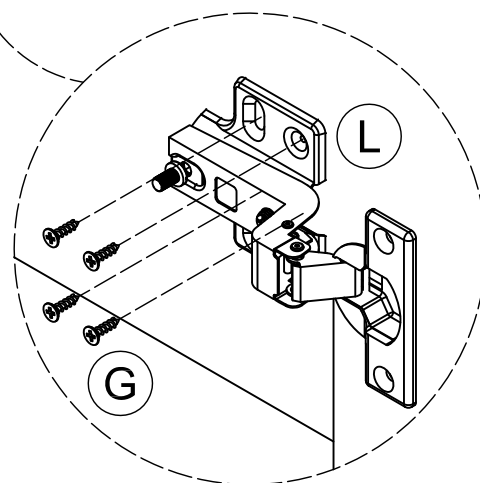
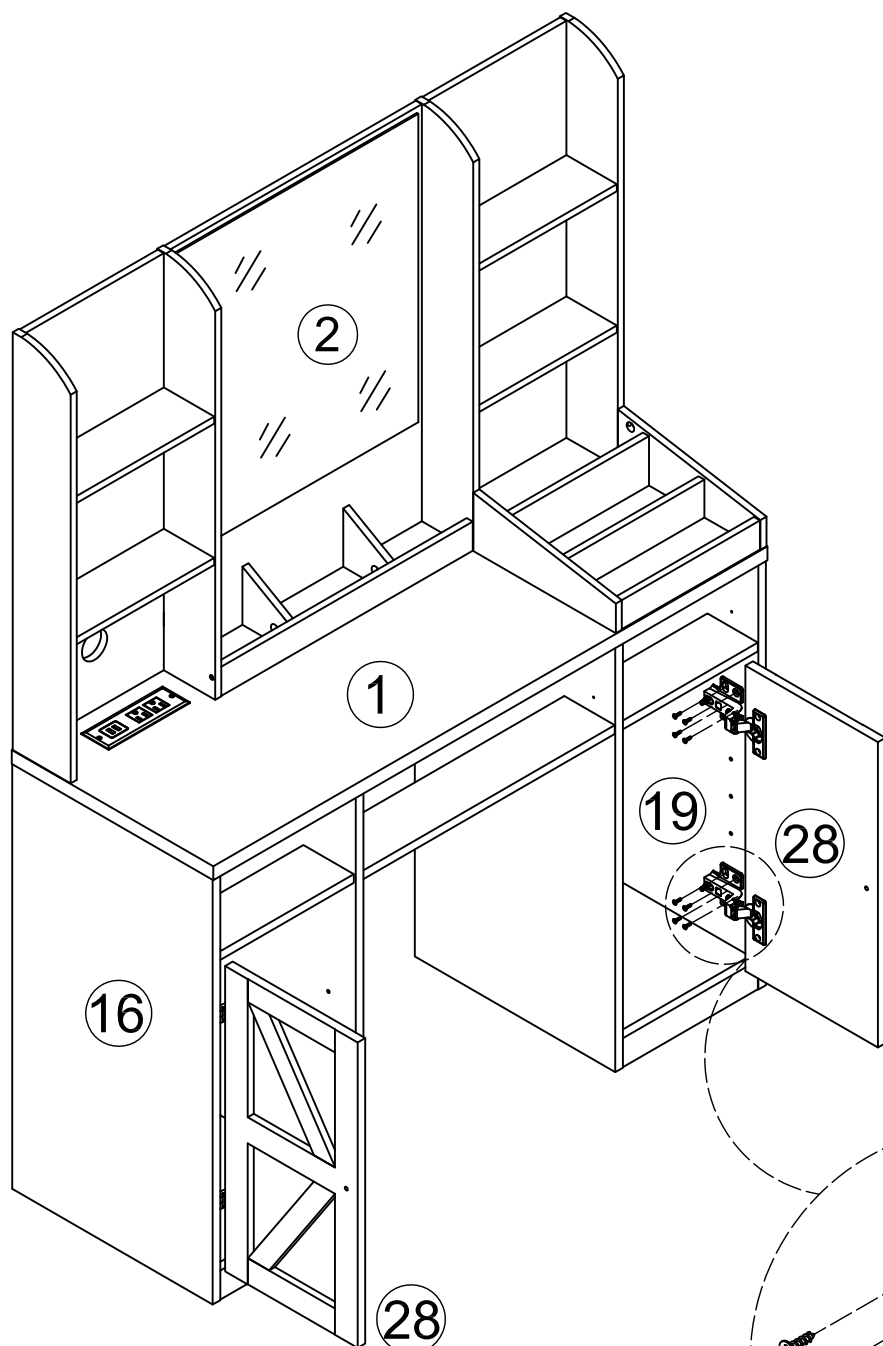


38





- Install handle (S) to panel (28) with bolts (H).

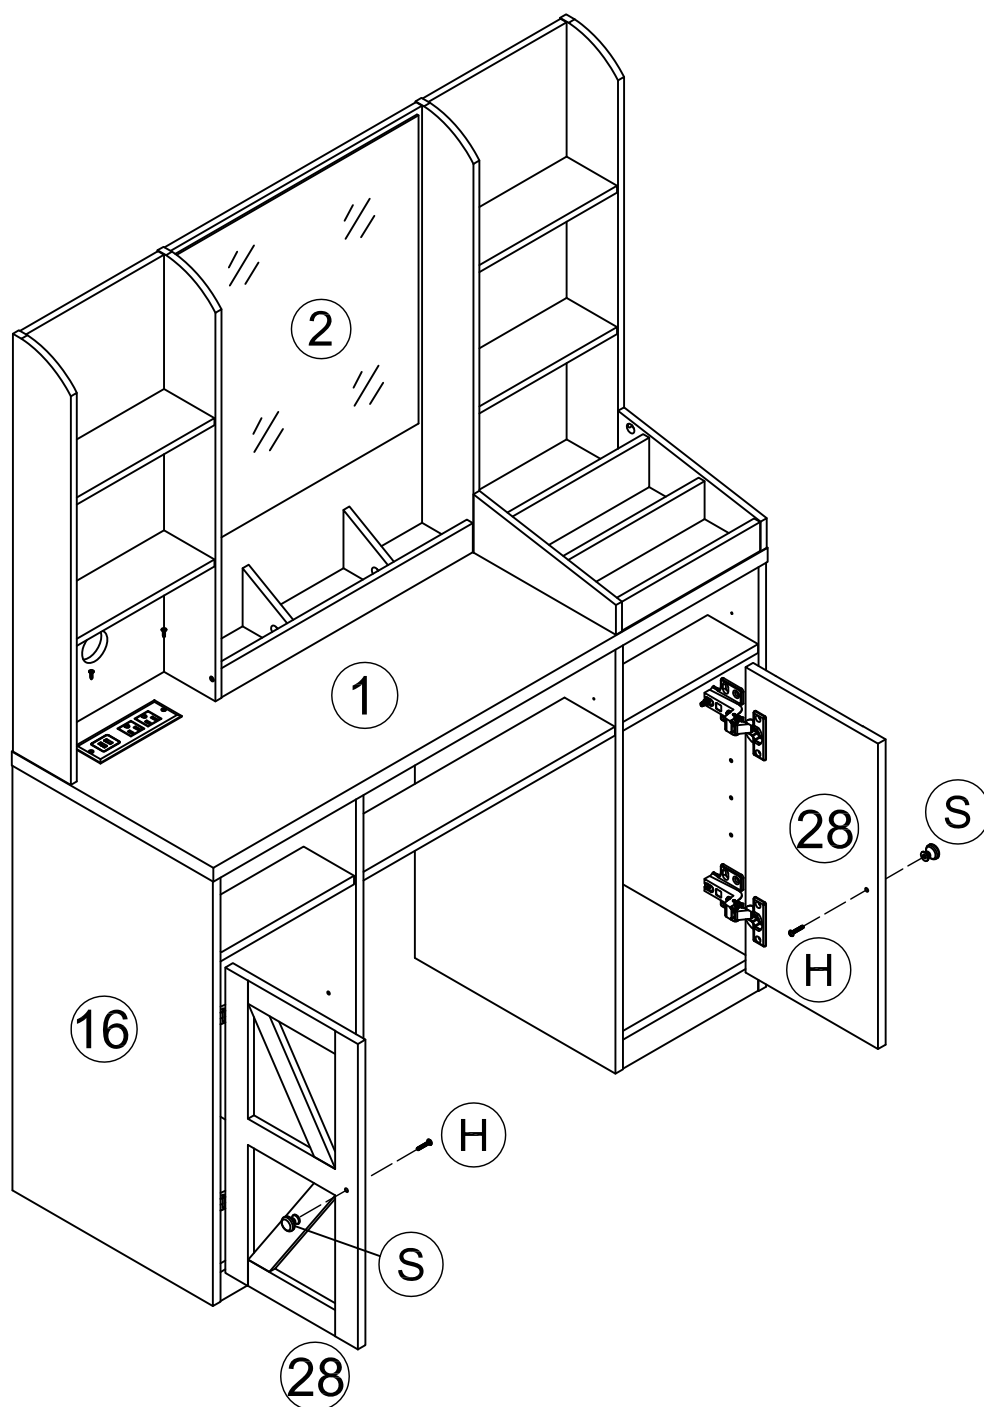

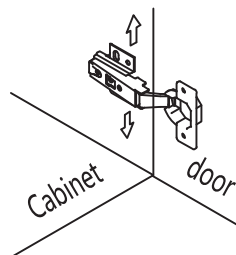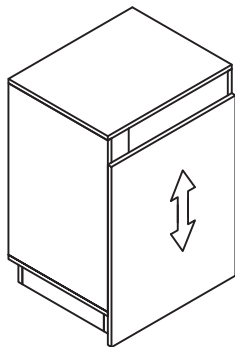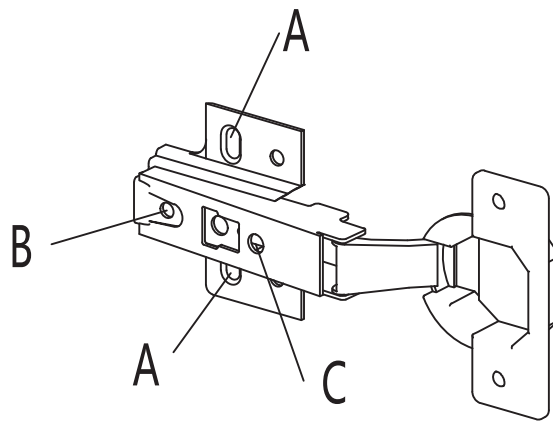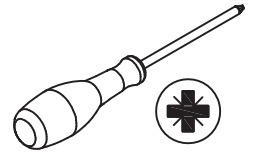



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

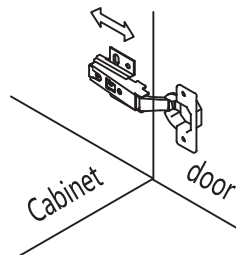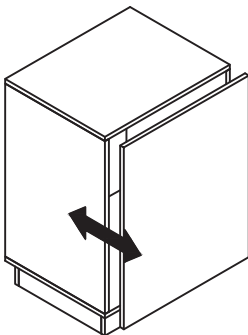

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

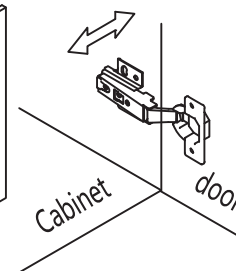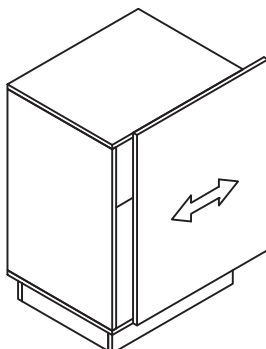


To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

40


I x 8




φ 5 x 17 mm

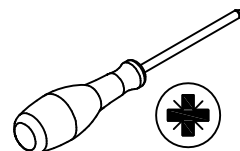


- Insert layer pin (I) into board (16) & (17) & (18) & (19).
- place shelf board (23) in as shown.

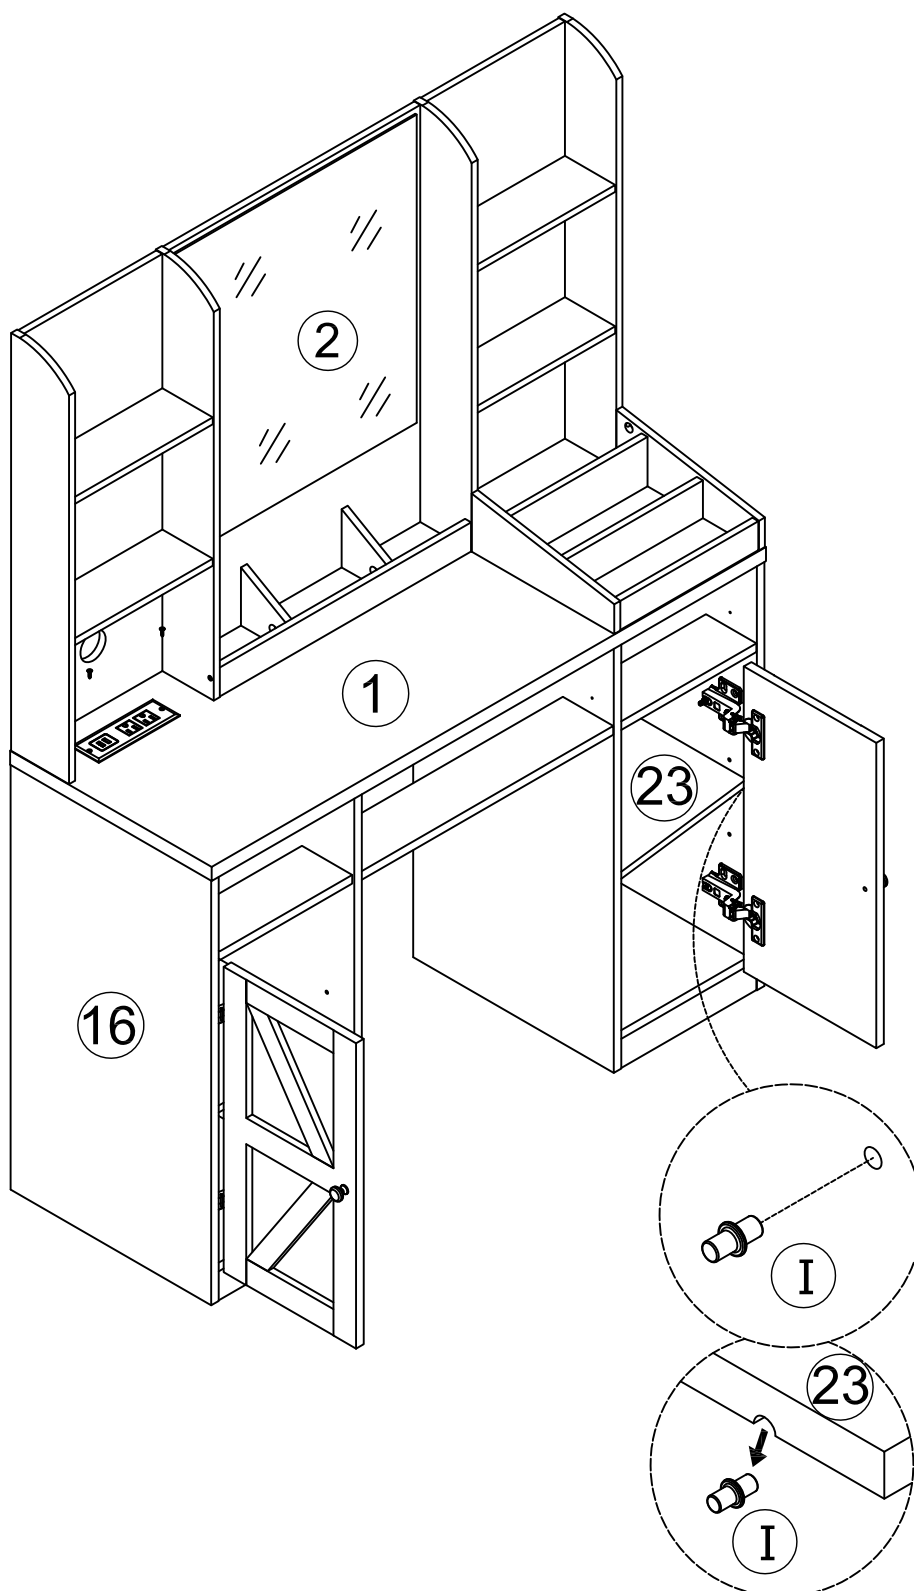

41

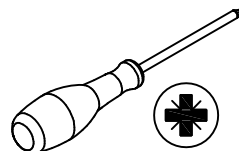


- Insert the drawers.

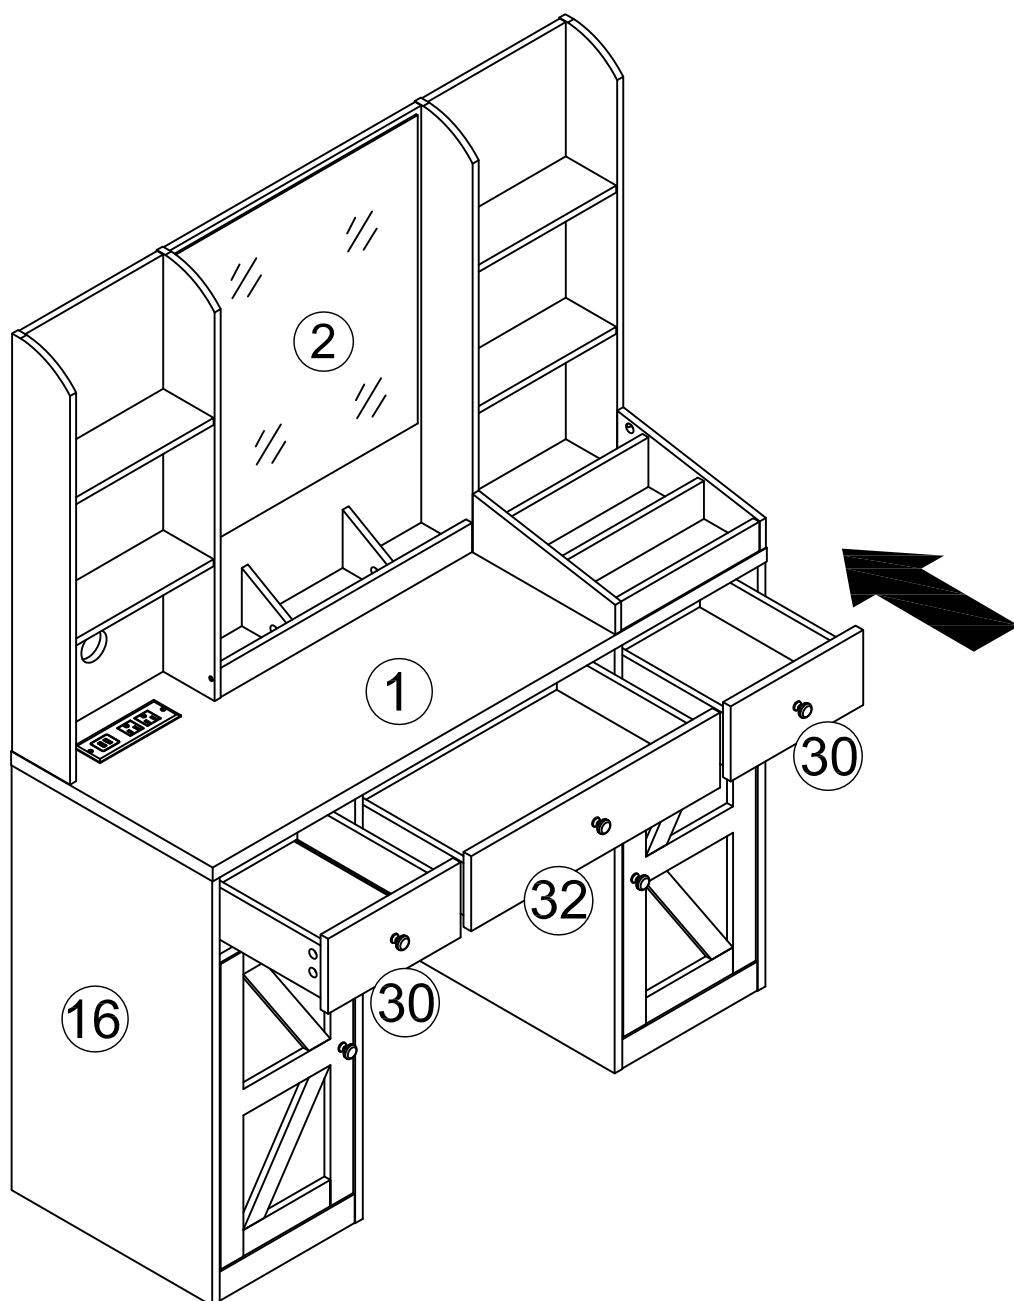

42


I x 8

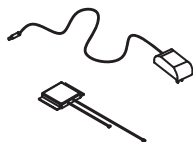






V x 16



φ 3 x 12 mm

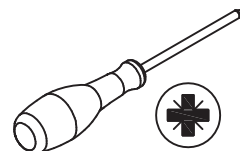

- Attach panel (41) to (2) with screws (V).
- Tear the tape from the lamp belt controller and stick it to the mirror.
- Connect the lamp belt power supply to the lamp belt controller .
- Connect the lamp with the touch controller interface .

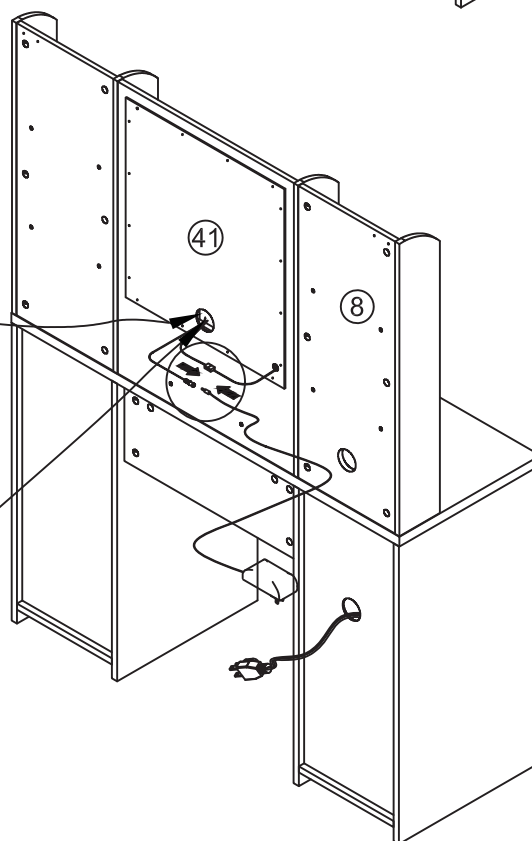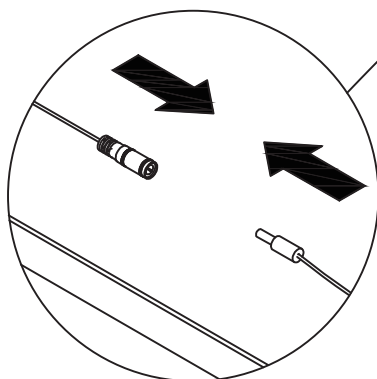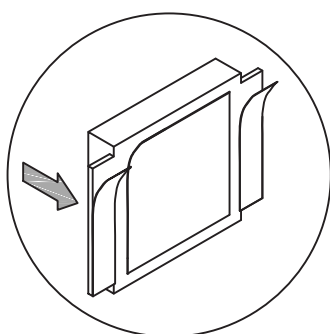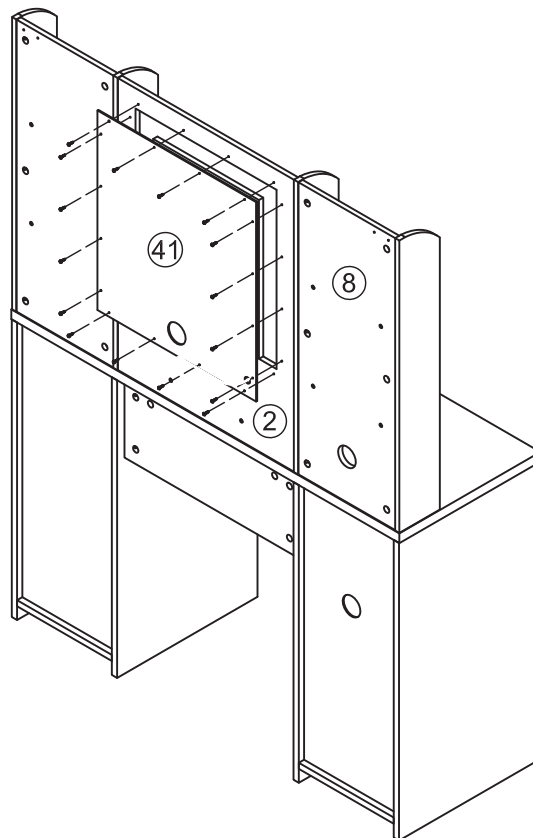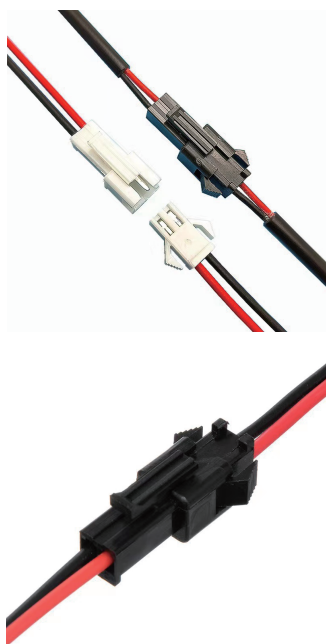

43

U x 2

