

DA0027

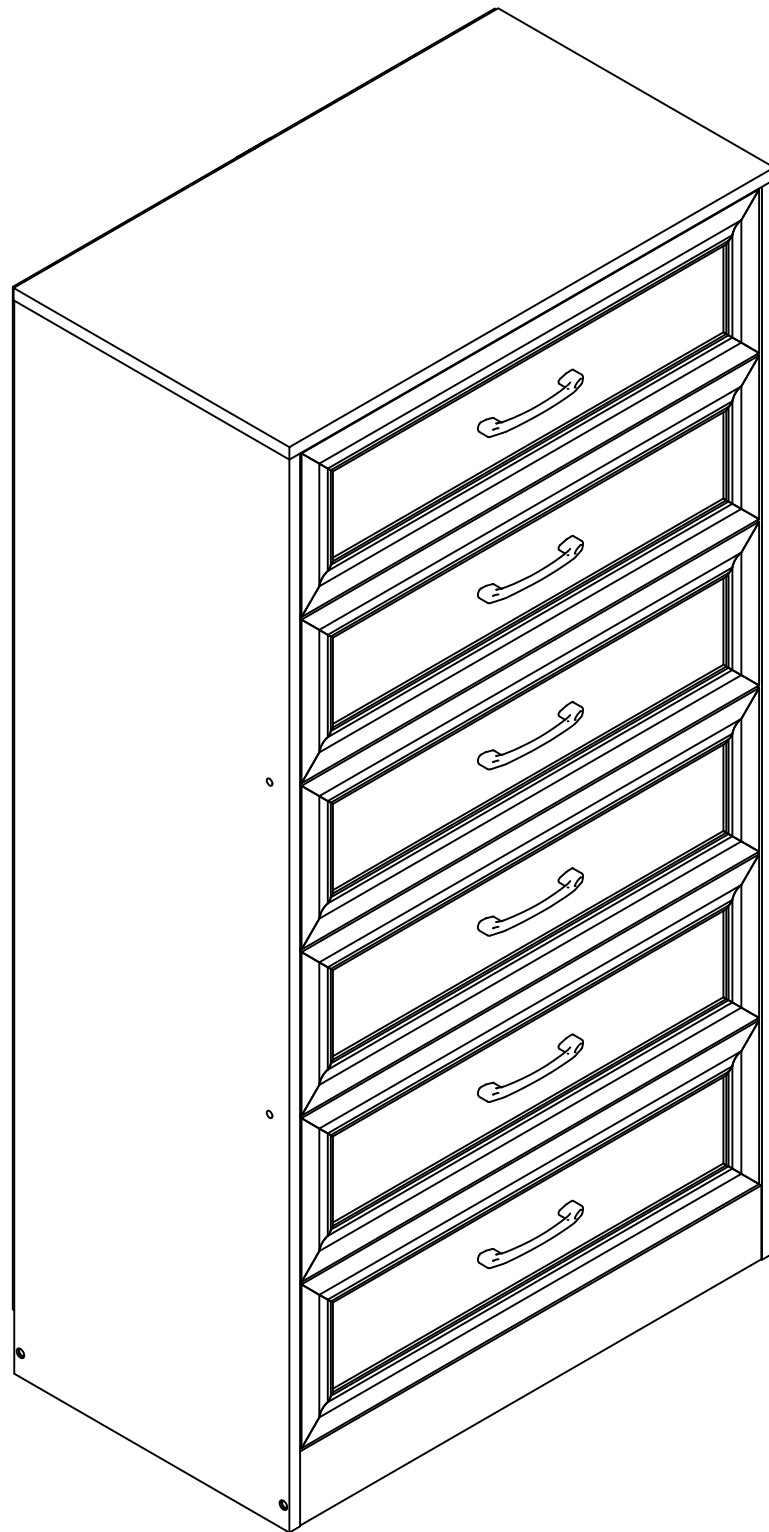


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start




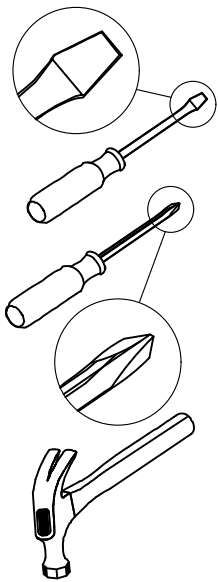


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

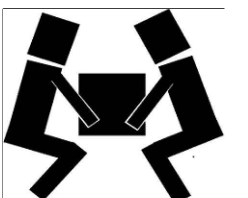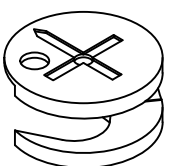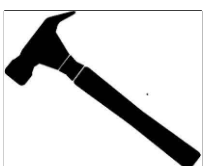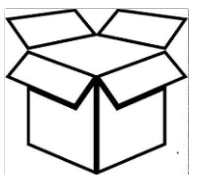


Board Identification


Not actual size

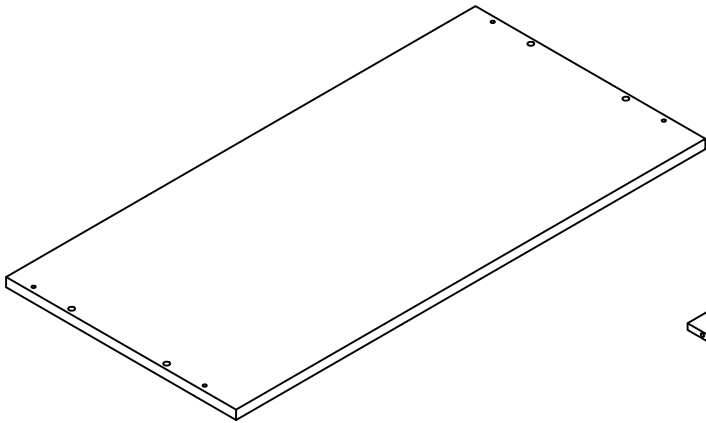


①
TOP
Qty:1

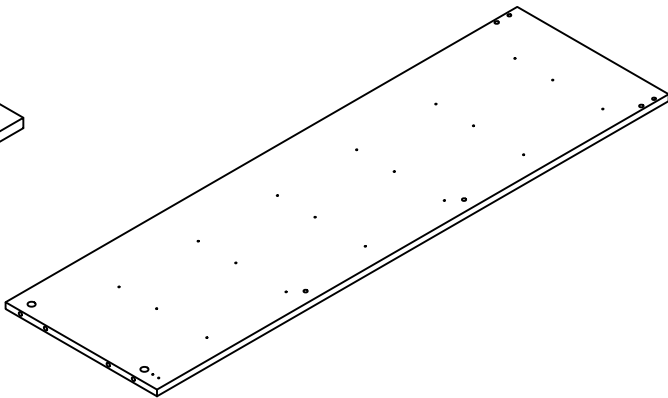


②
LEFT SIDE PANEL
Qty:1

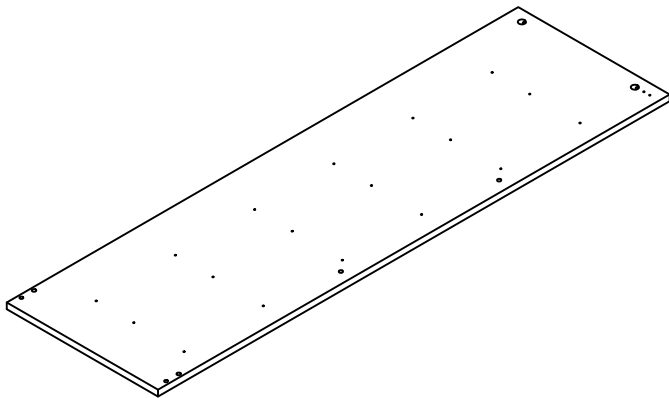


③
RIGHT SIDE PANEL
Qty:1

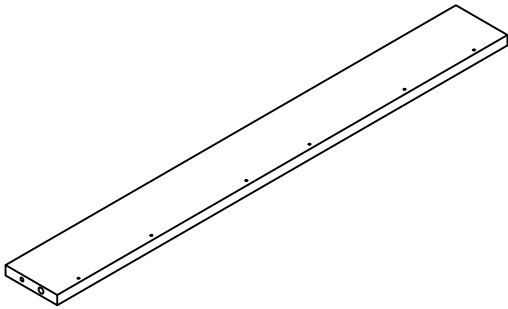


④
REAR PANEL
Qty:1

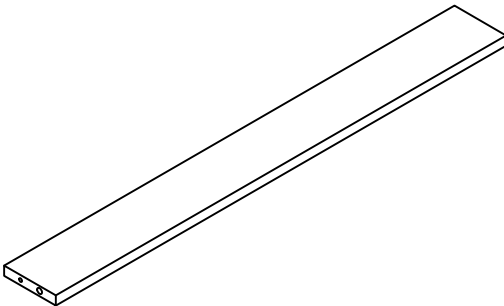


⑤
FRONT RAIL
Qty:1

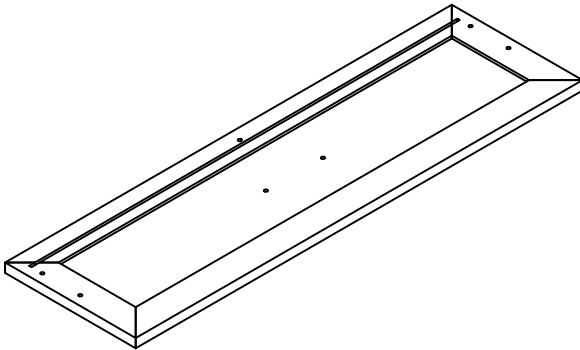


⑥
DRAWER FRONT
Qty:6

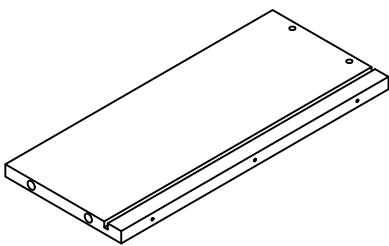

⑦
DRAWER LEFT SIDE
Qty:6

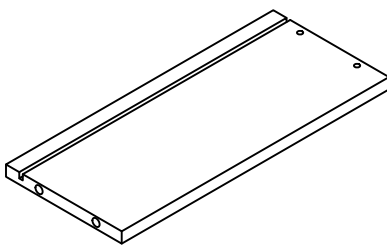


⑧
DRAWER RIGHT SIDE
Qty:6

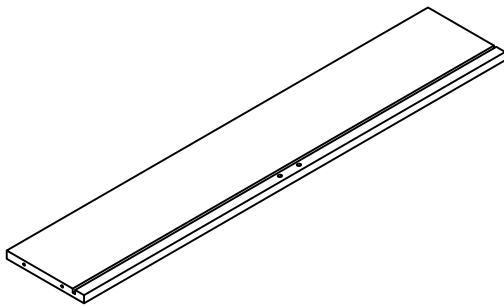

⑨
DRAWER BACK
Qty:6


Board Identification

Not actual size

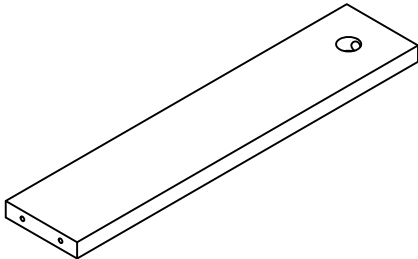


10

DRAWER SUPPORT RAIL
Qty:6

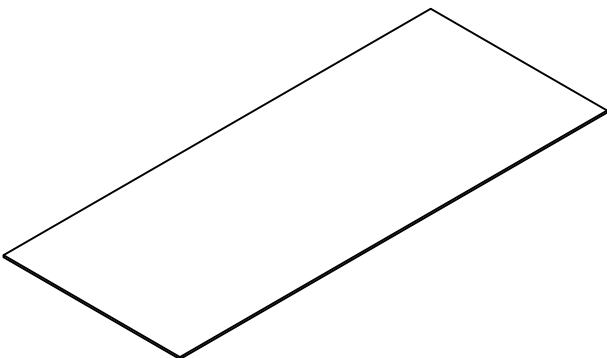


11

DRAWER BOTTOM
Qty:6

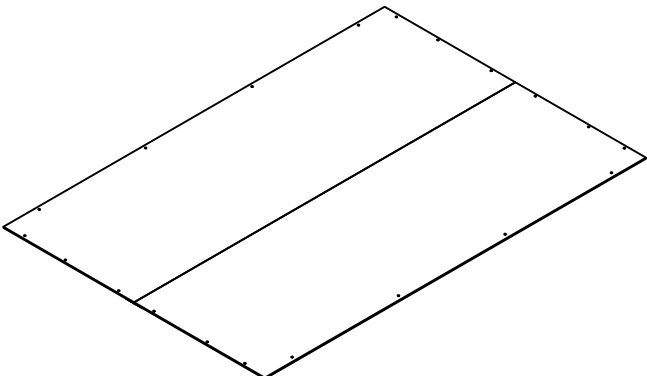


12

BACK PANEL
Qty:1

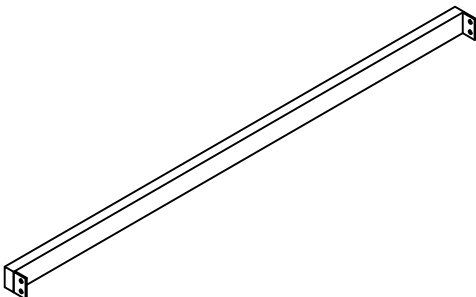

13

SQUARE TUBE
Qty:1

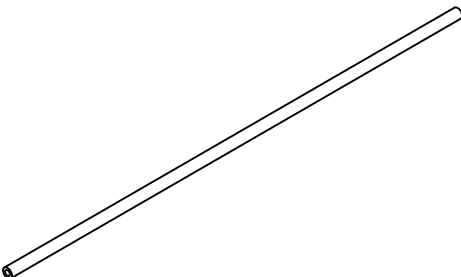

14

CIRCULAR TUBE
Qty:2

Part List



Ø6.5X35mm

(A)

X34

CAM BOLT
spare:2




Ø15X9.5mm

(B)

X34

CAM LOCK
spare:2




Ø8X30mm

(C)

X8

WOOD DOWEL
spare:1




Ø3.5X14mm

(D)

X76

SCREW
spare:2




Ø3X14mm

(E)

X18

SCREW
spare:2



Ø4X35mm

(F)

X36

SCREW
spare:2




M6*30mm

(G)

X4

SCREW




Ø6.3X50mm

(H)

X4


SCREW

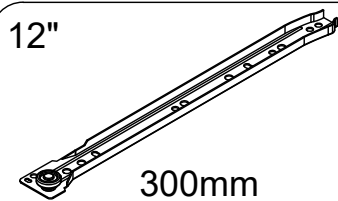

I-CL

X6


LEFT CABINET MEMBER

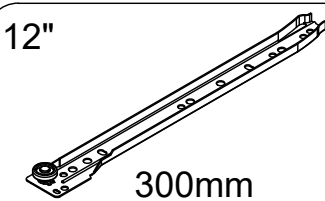

I-CR

X6


RIGHT CABINET MEMBER

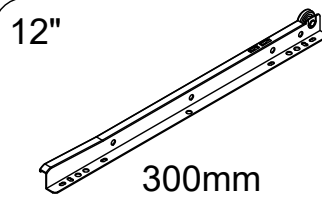

I-DL

X6


LEFT DRAWER RUNNER

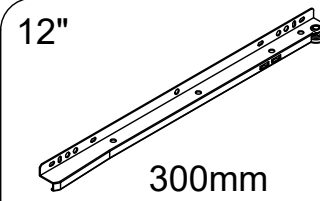

I-DR

X6

RIGHT DRAWER RUNNER

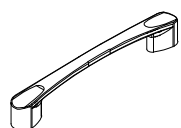

127X12X21mm

(J)

X6

HANDLE




Ø4X9mm

(K)

X12

SCREW




Ø4X65mm


(L)

X1


HEX KEY

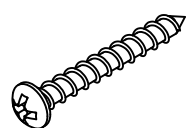


Ø4X40mm



Ø4X12mm



27X13X1mm



35X40X14mm



273mm

(M)

X2set


TIPPING RESTRAINT
HARDWARE KIT

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

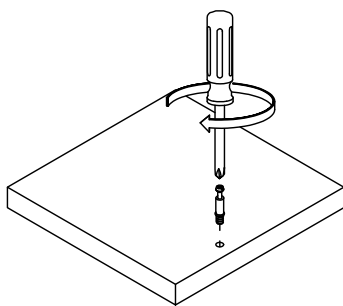

2

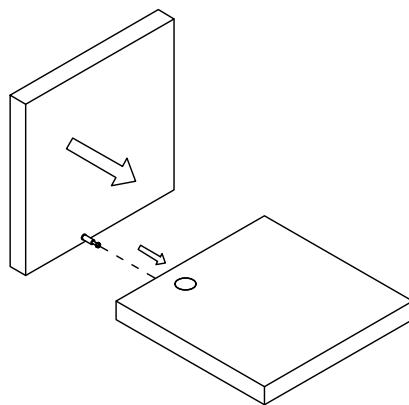


3

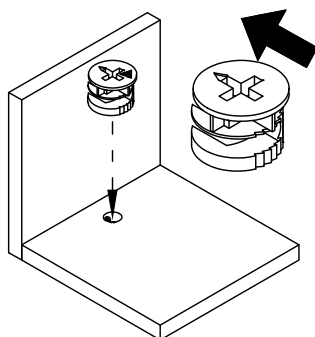



The opening must point toward the edge of the board

4








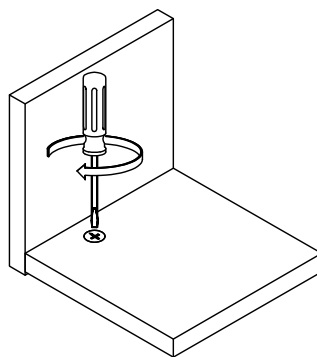


Board Identification



Not actual size

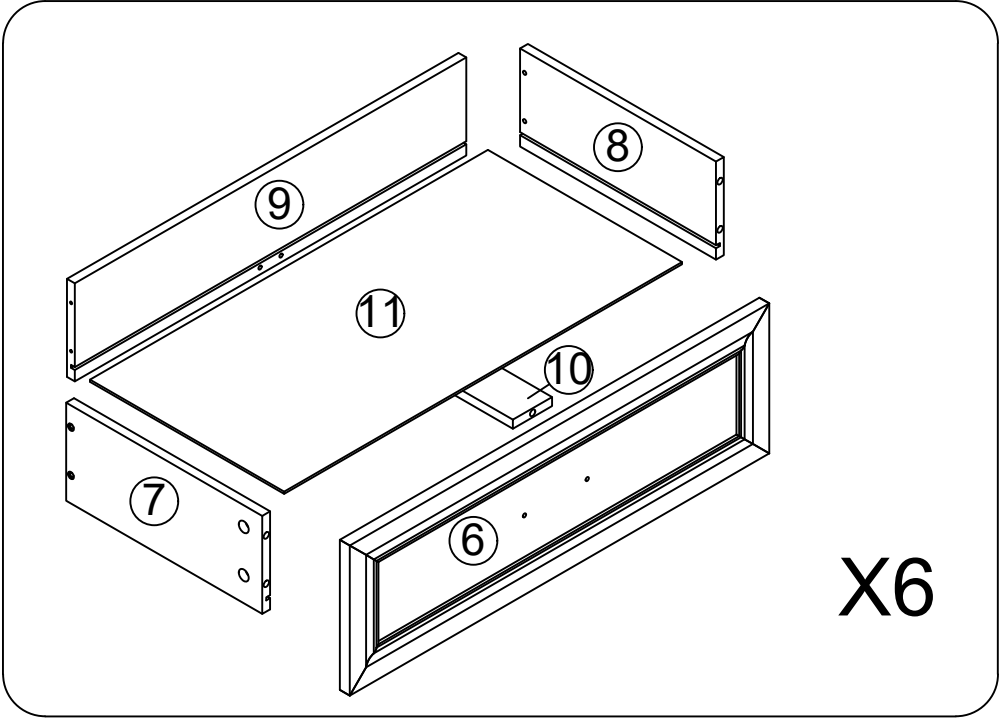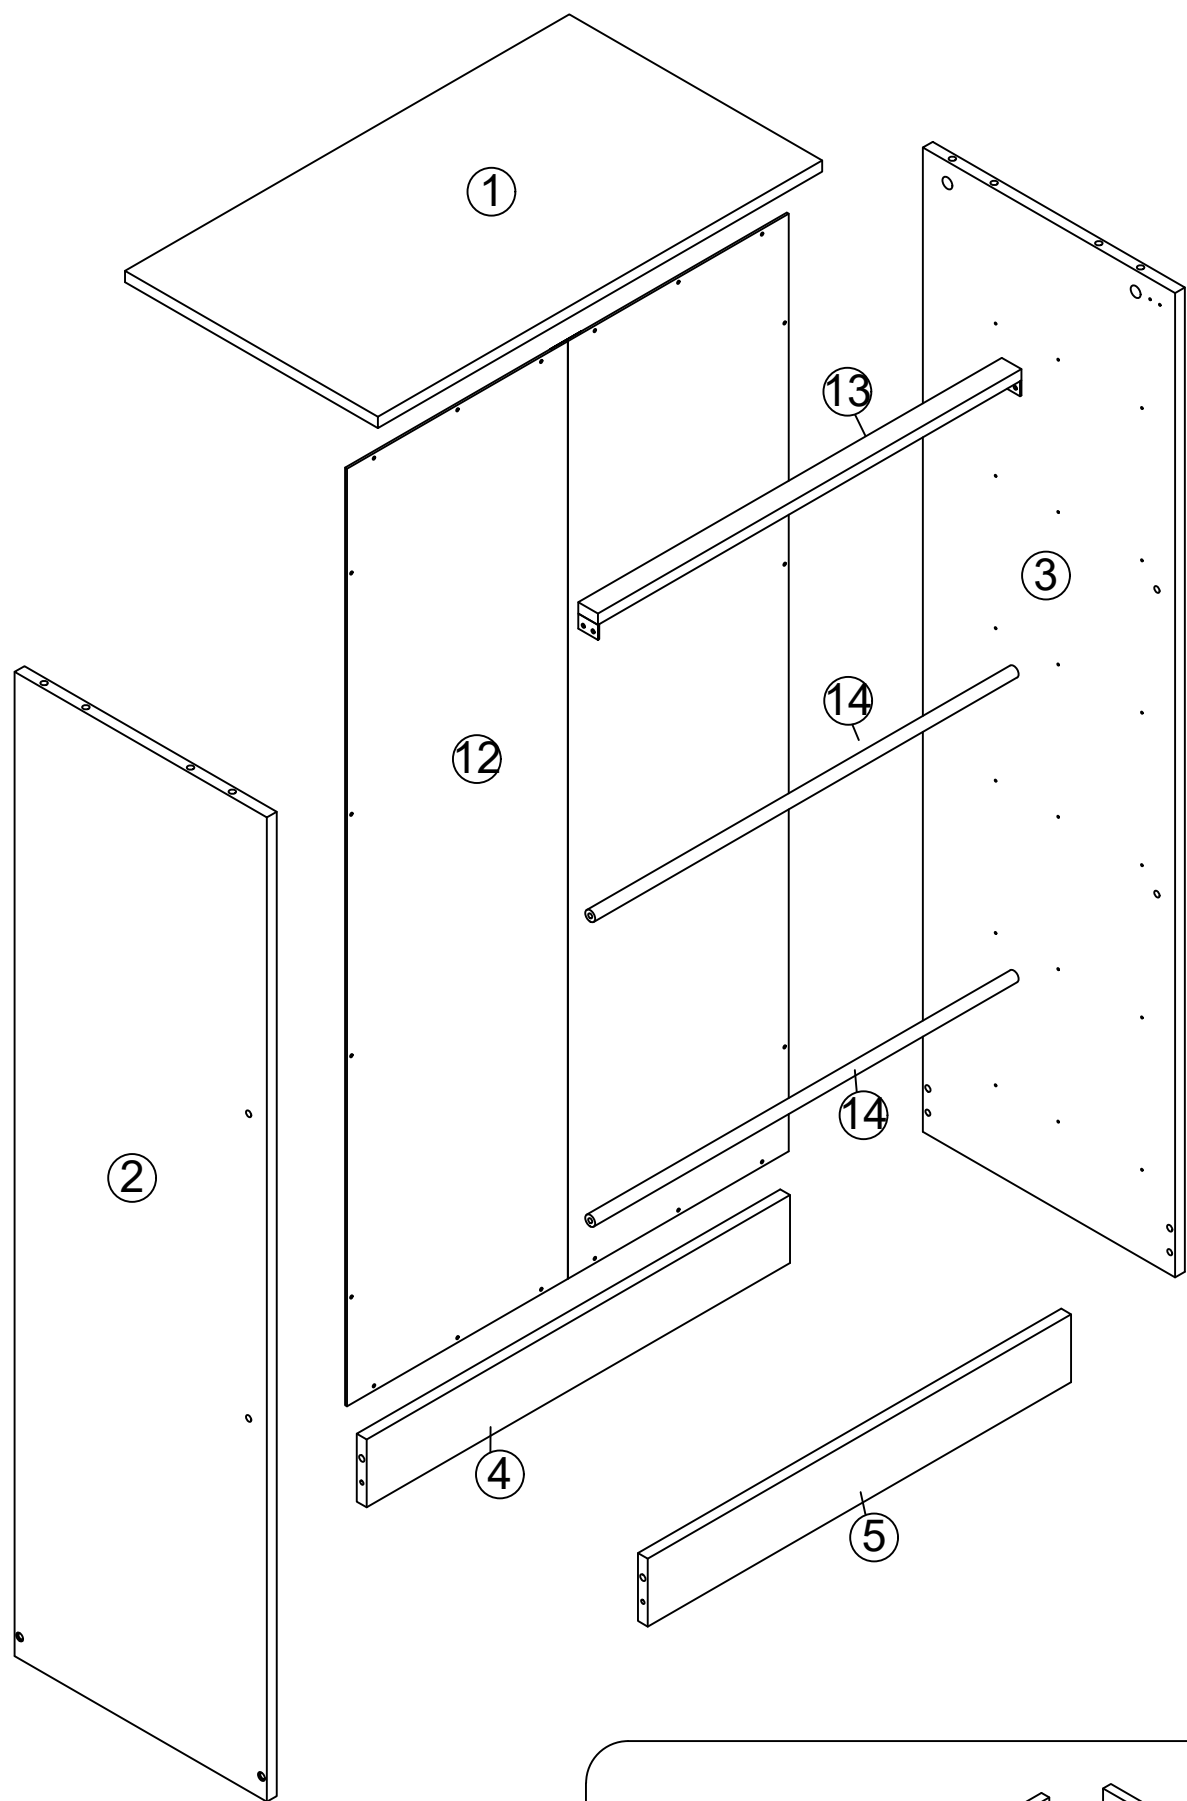




STEP1

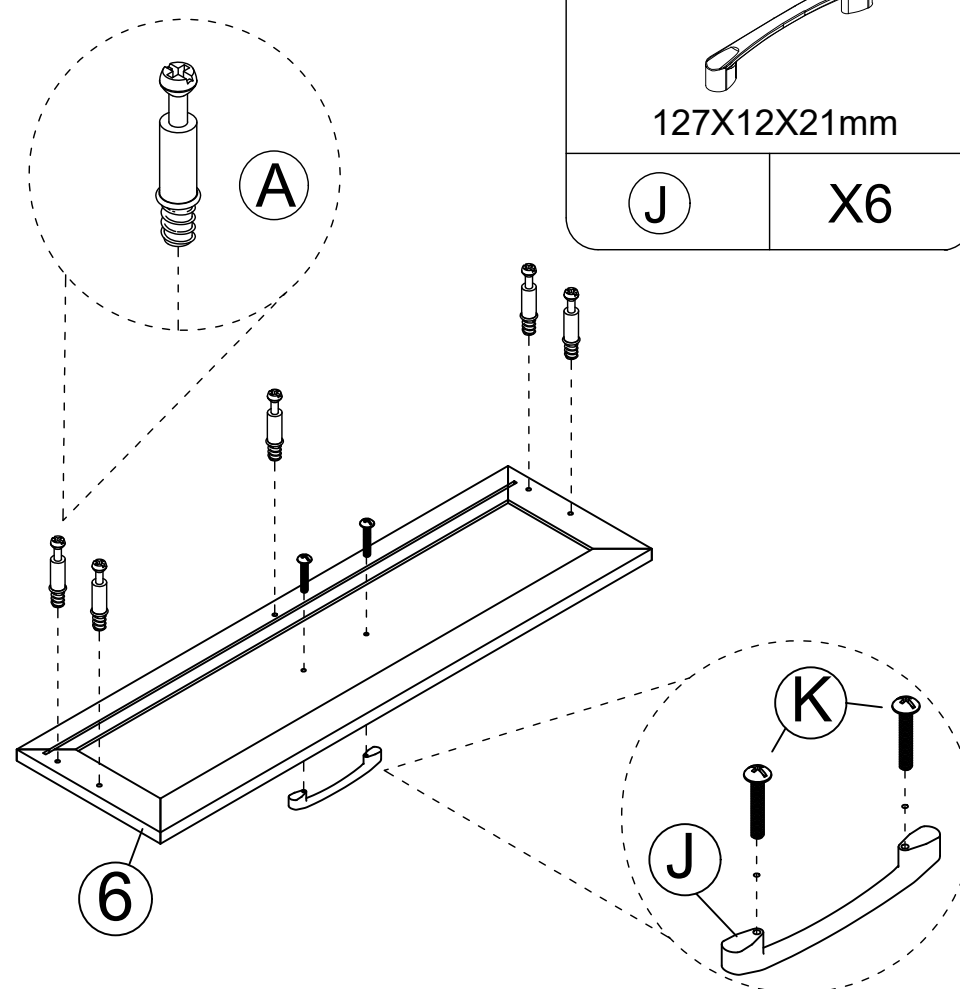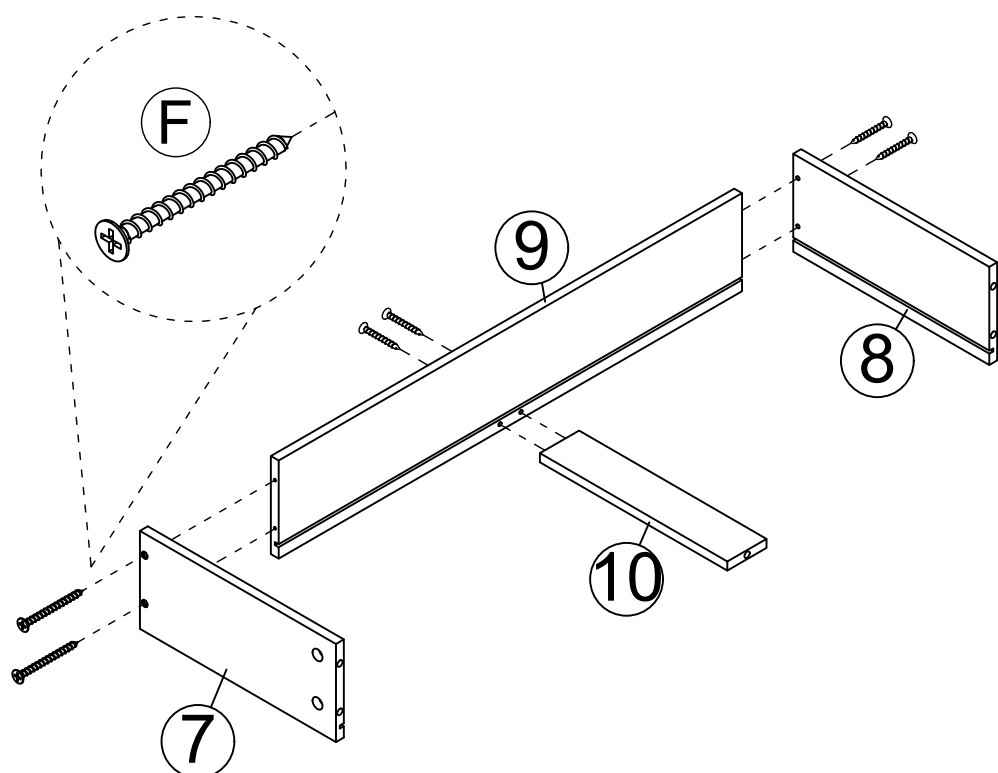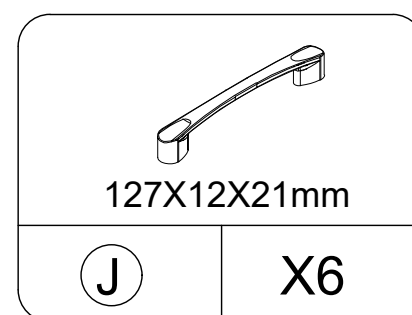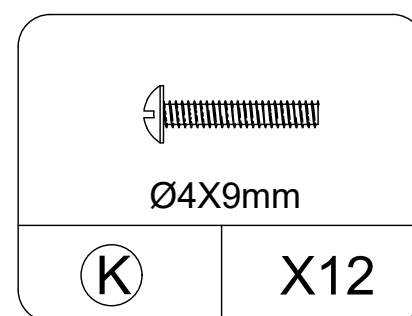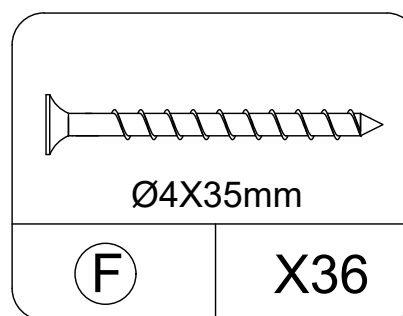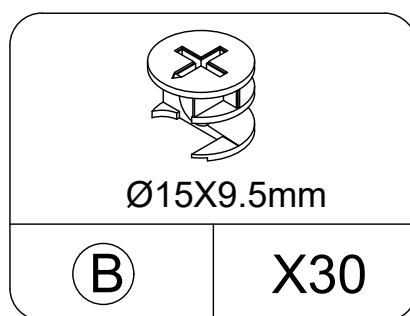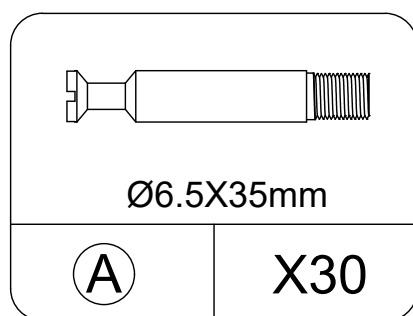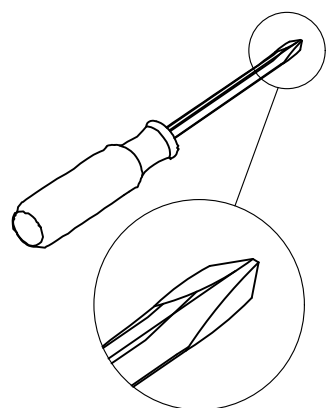

Step 1

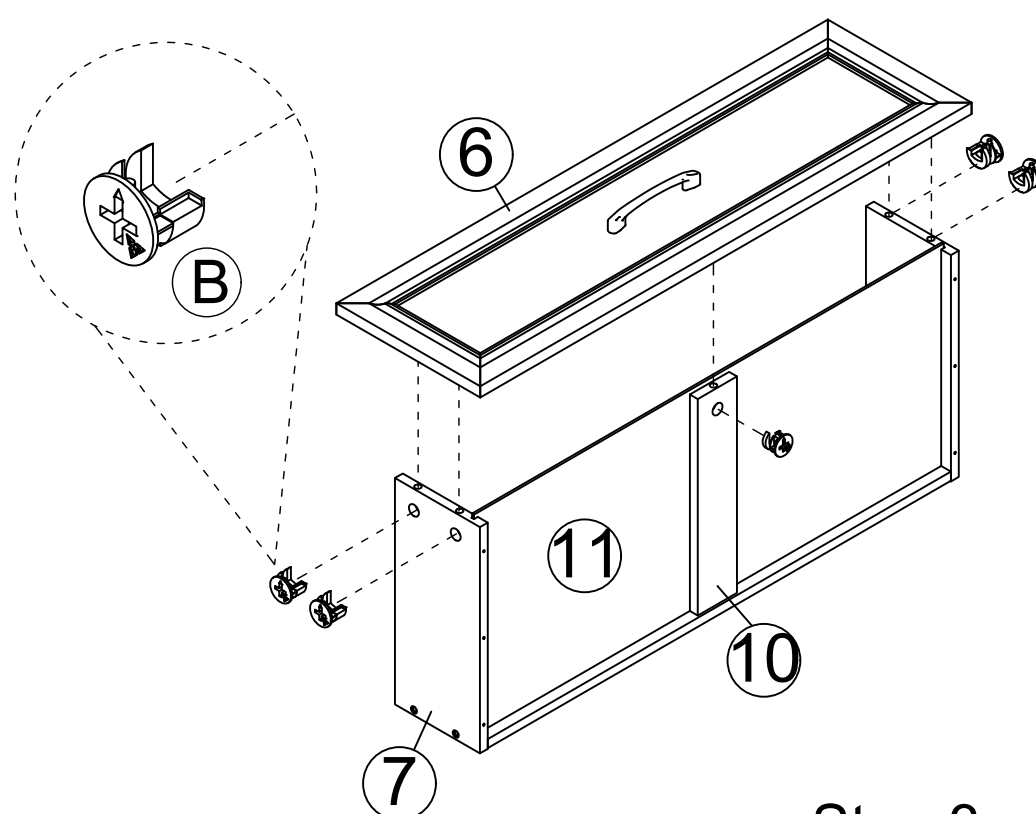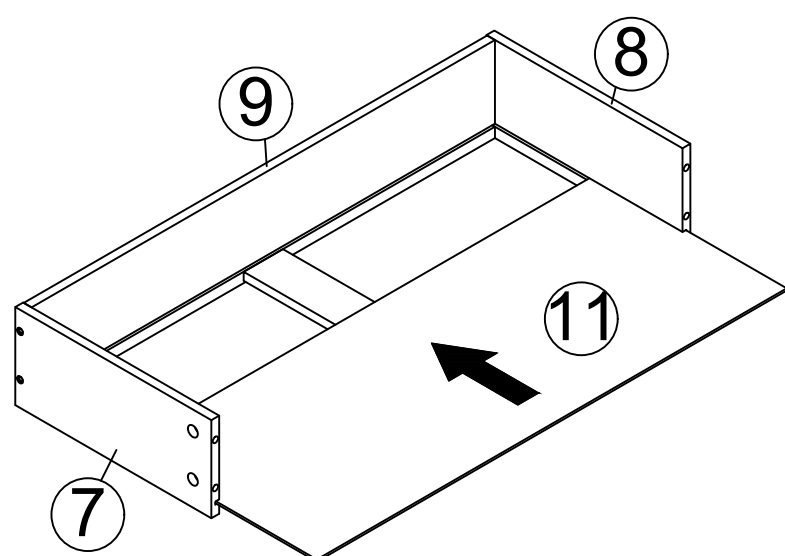

Step 3

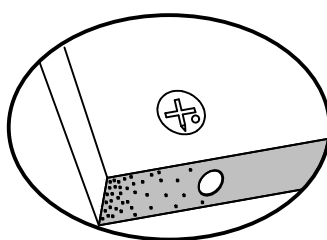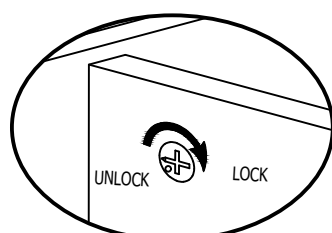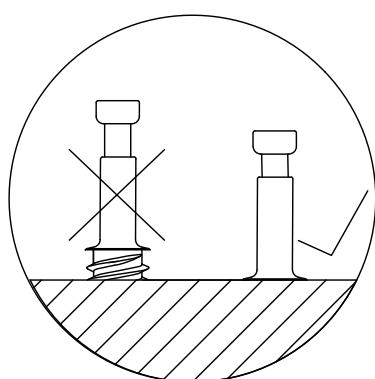



Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


X6


STEP2

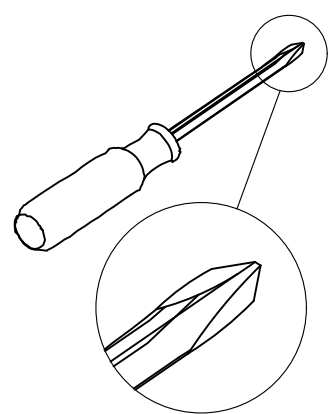

 Ø3.5X14mm	
D	X36

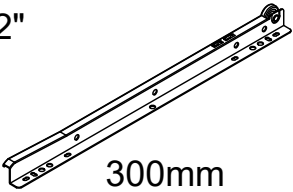
12"  300mm	
I-DL	X6

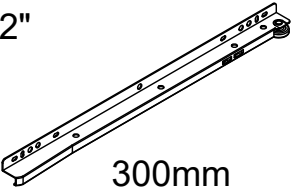
12"  300mm	
I-DR	X6

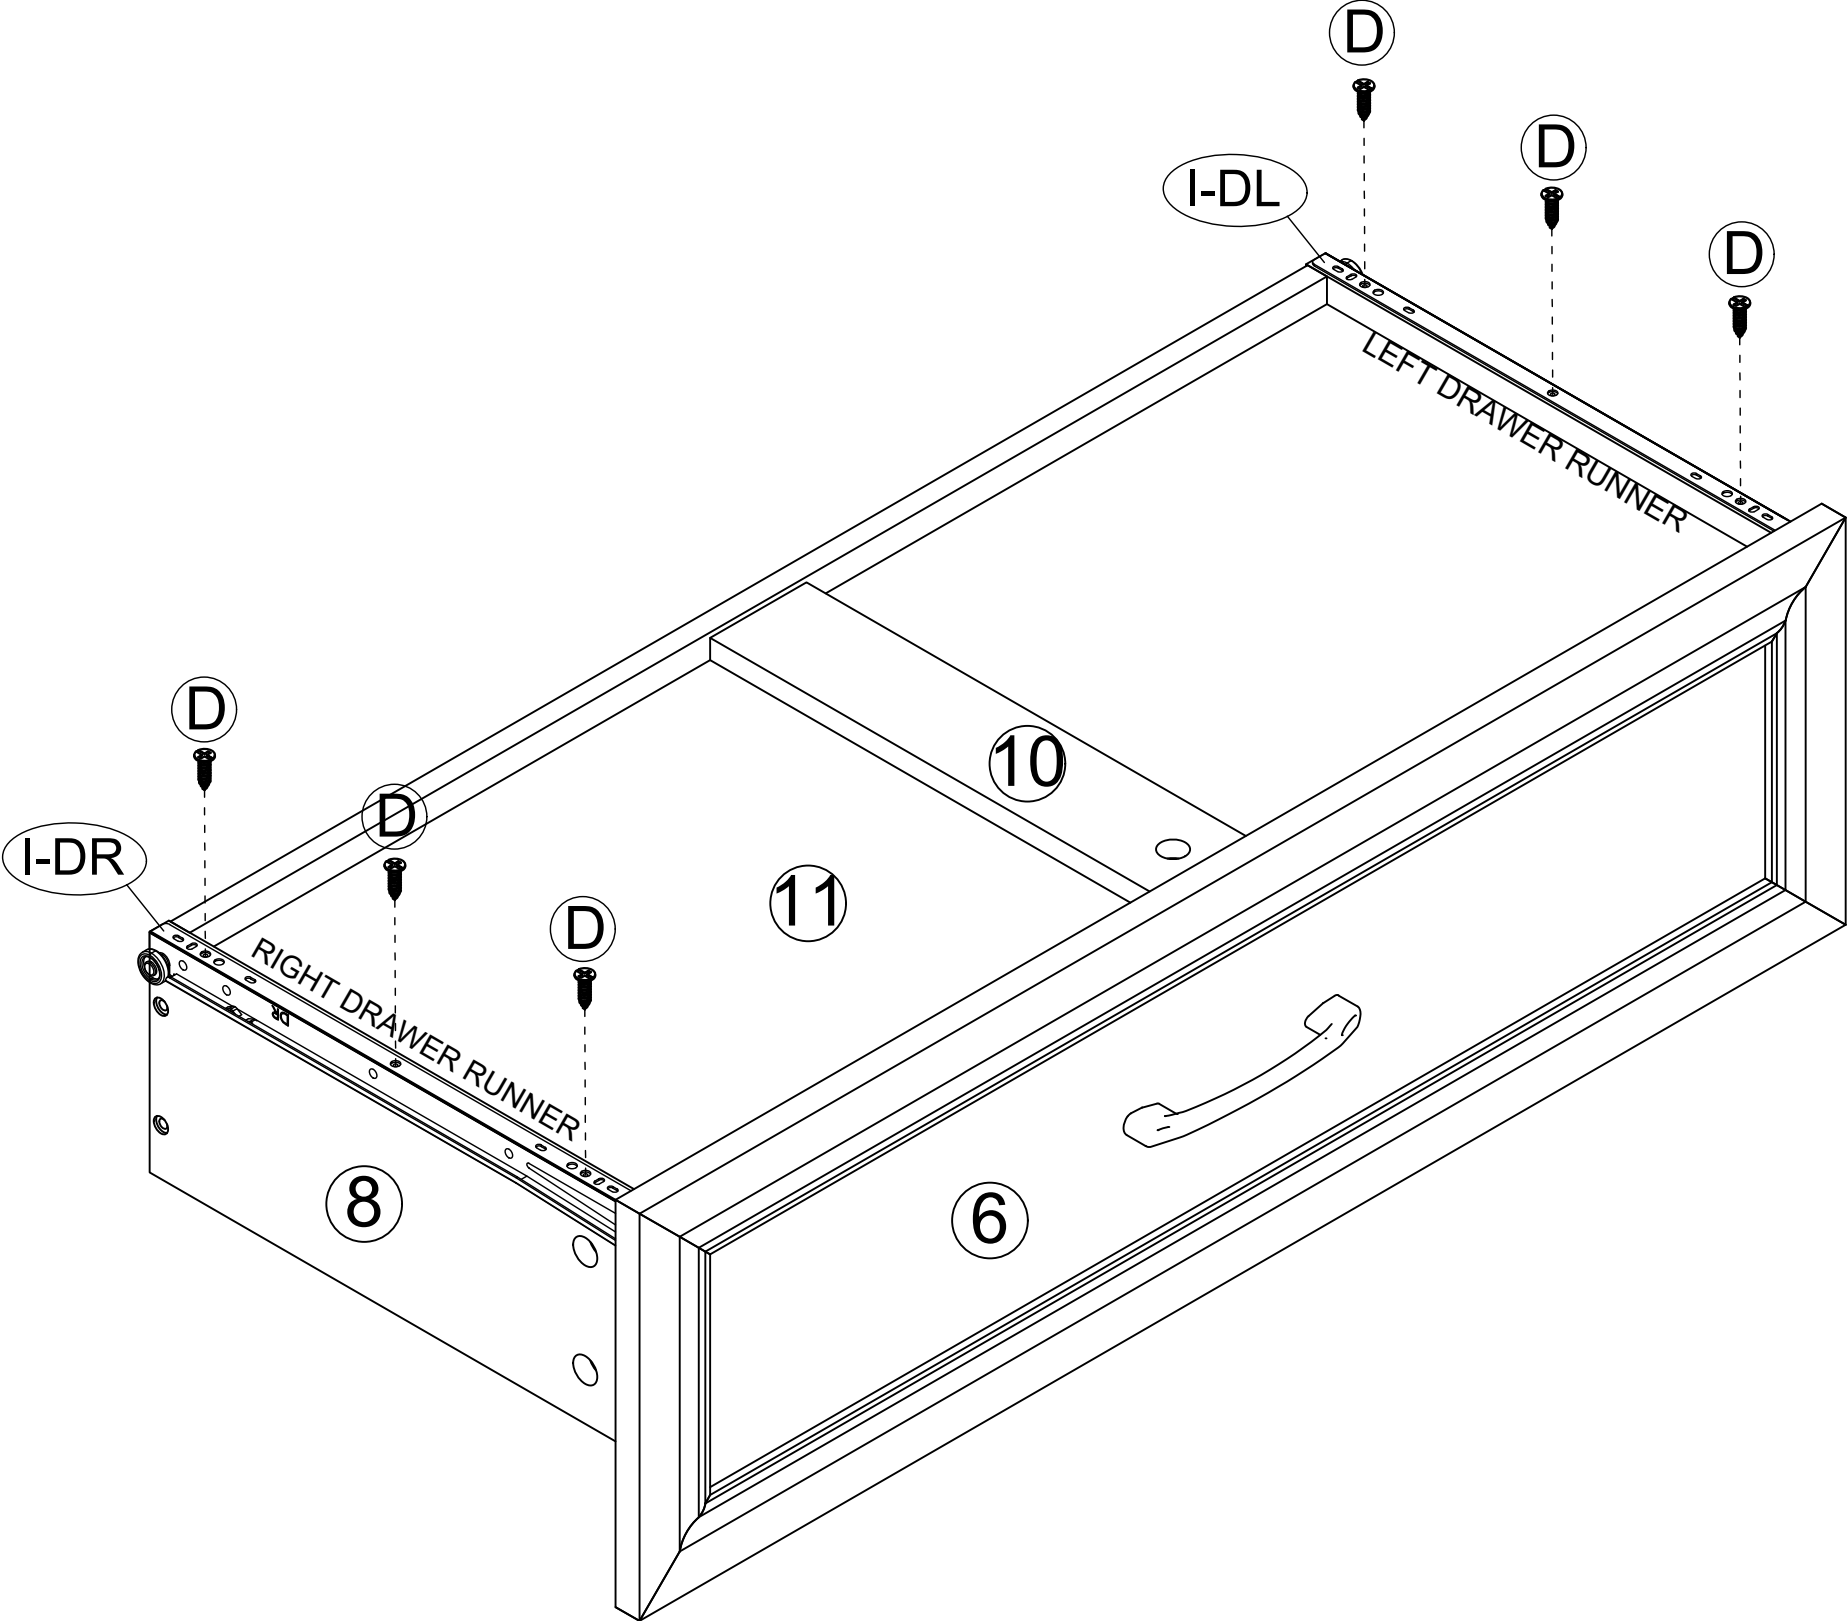



X6





STEP3

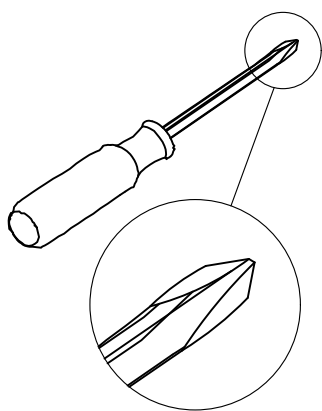

 Ø3.5X14mm	
D	X36

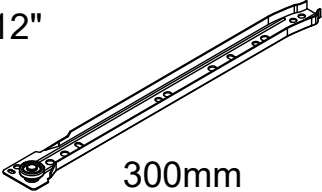12"  300mm	
I-CL	X6

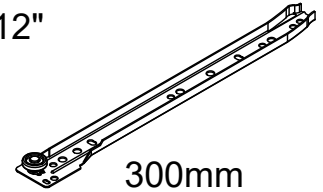12"  300mm	
I-CR	X6

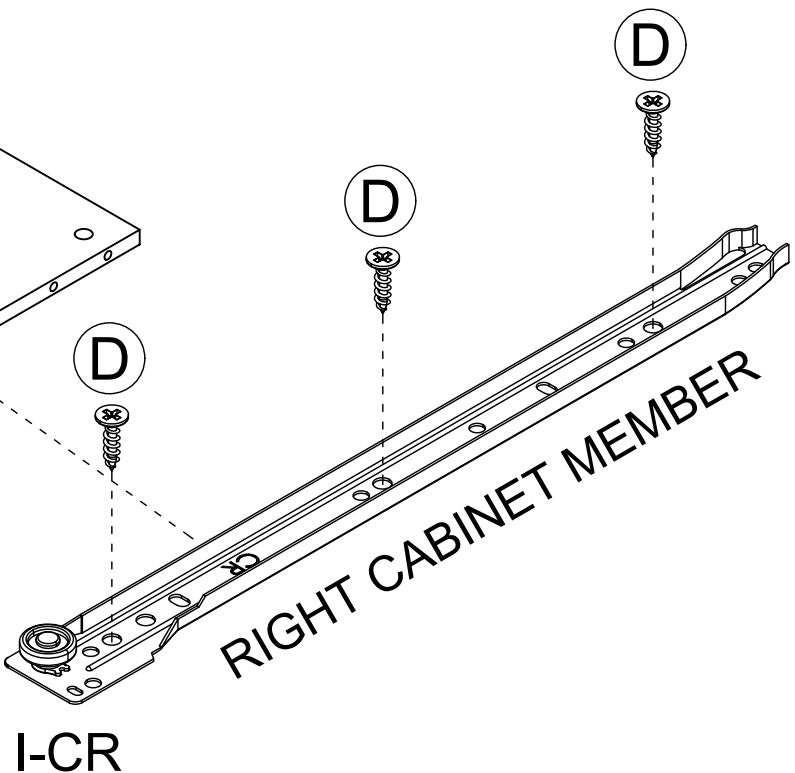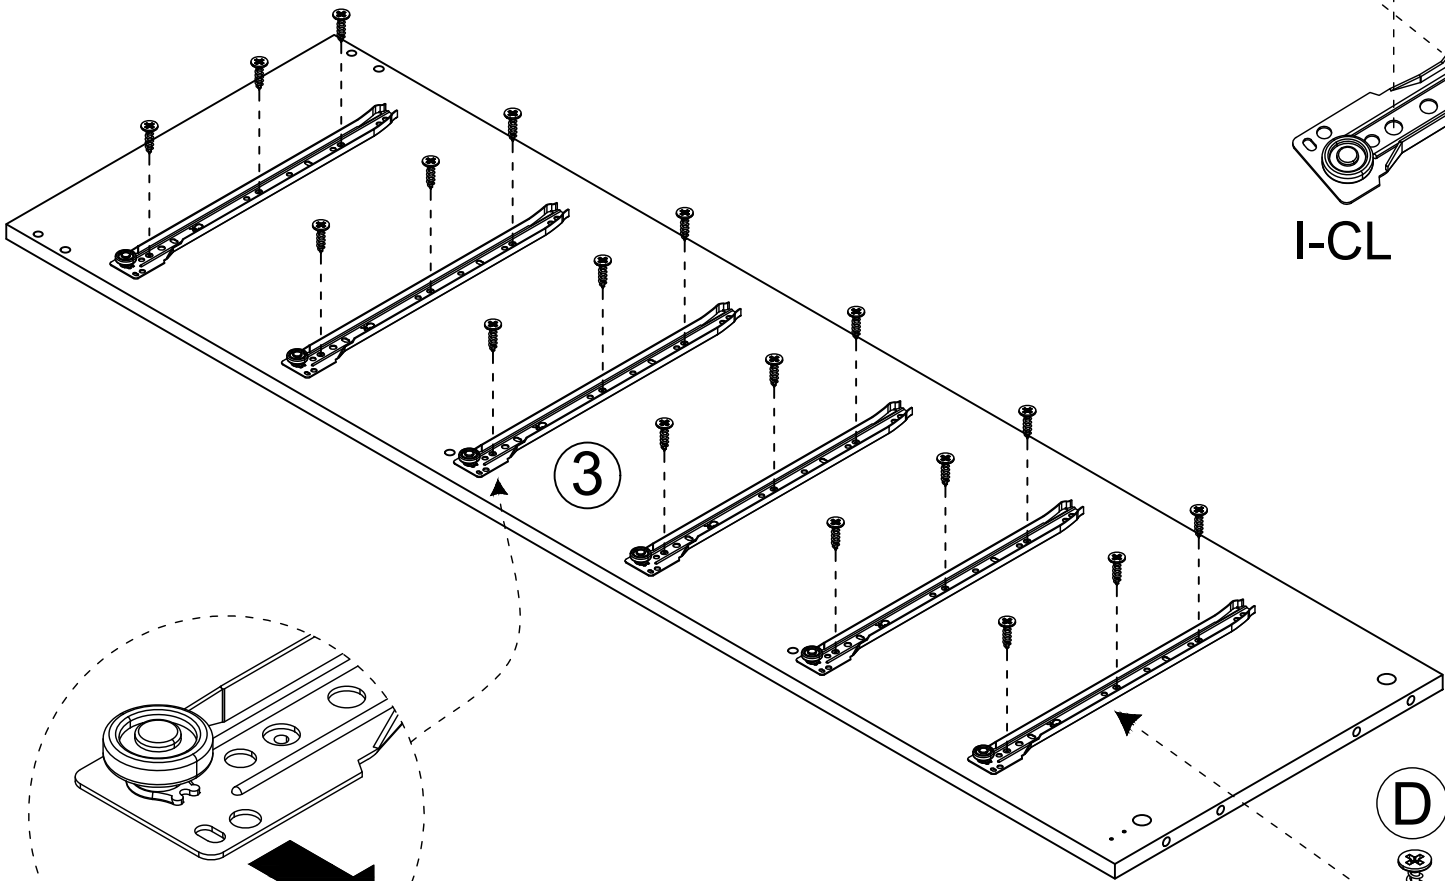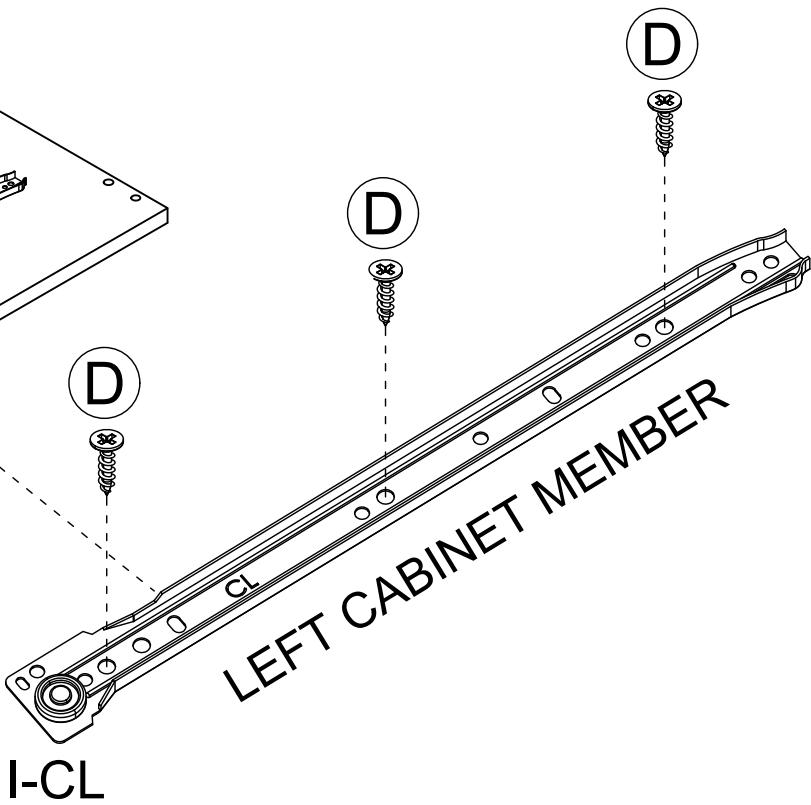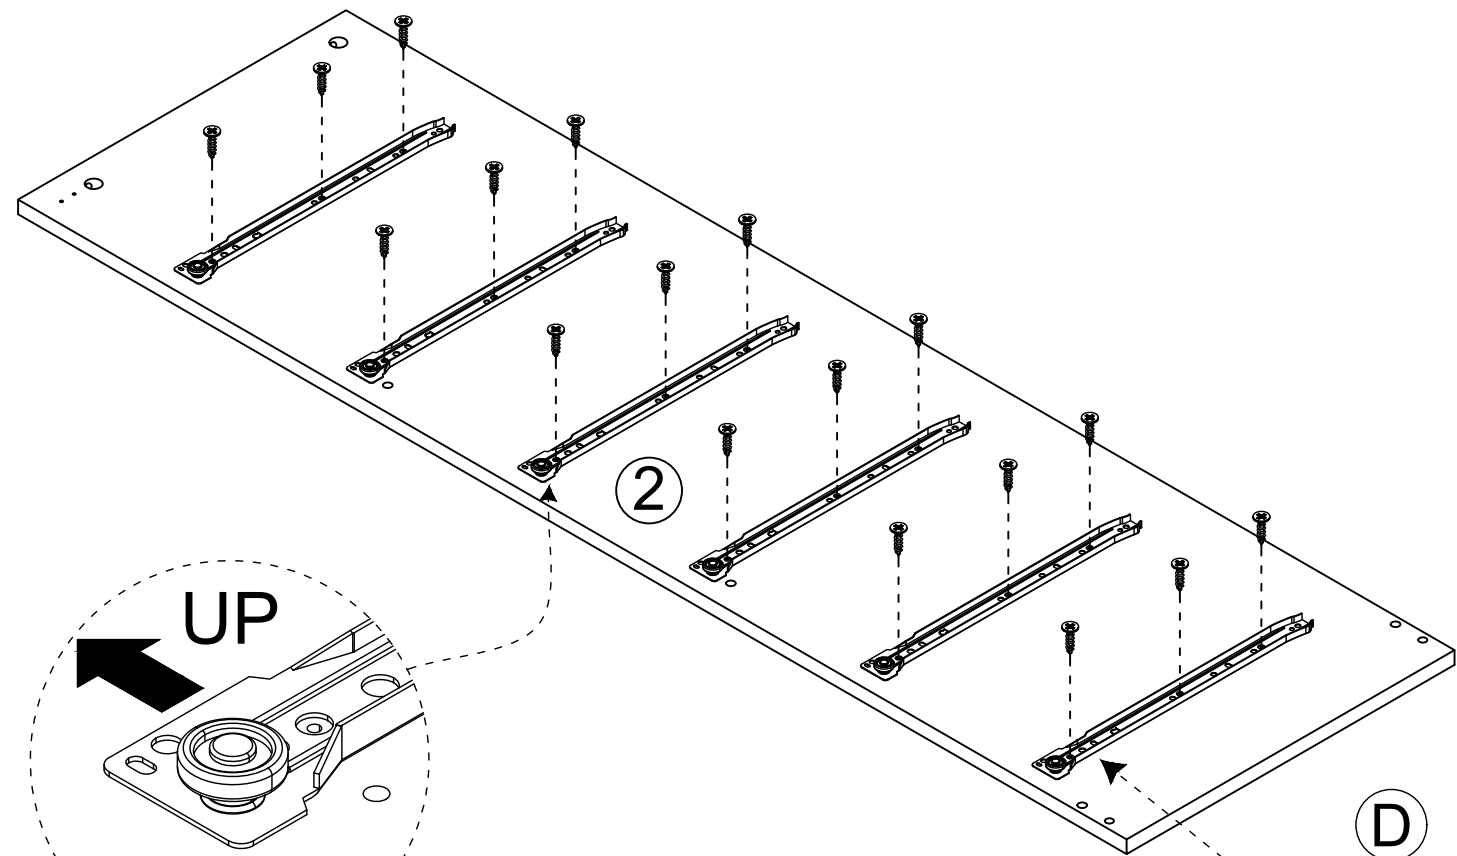


STEP4





Ø8X30mm

C	X8
---	----

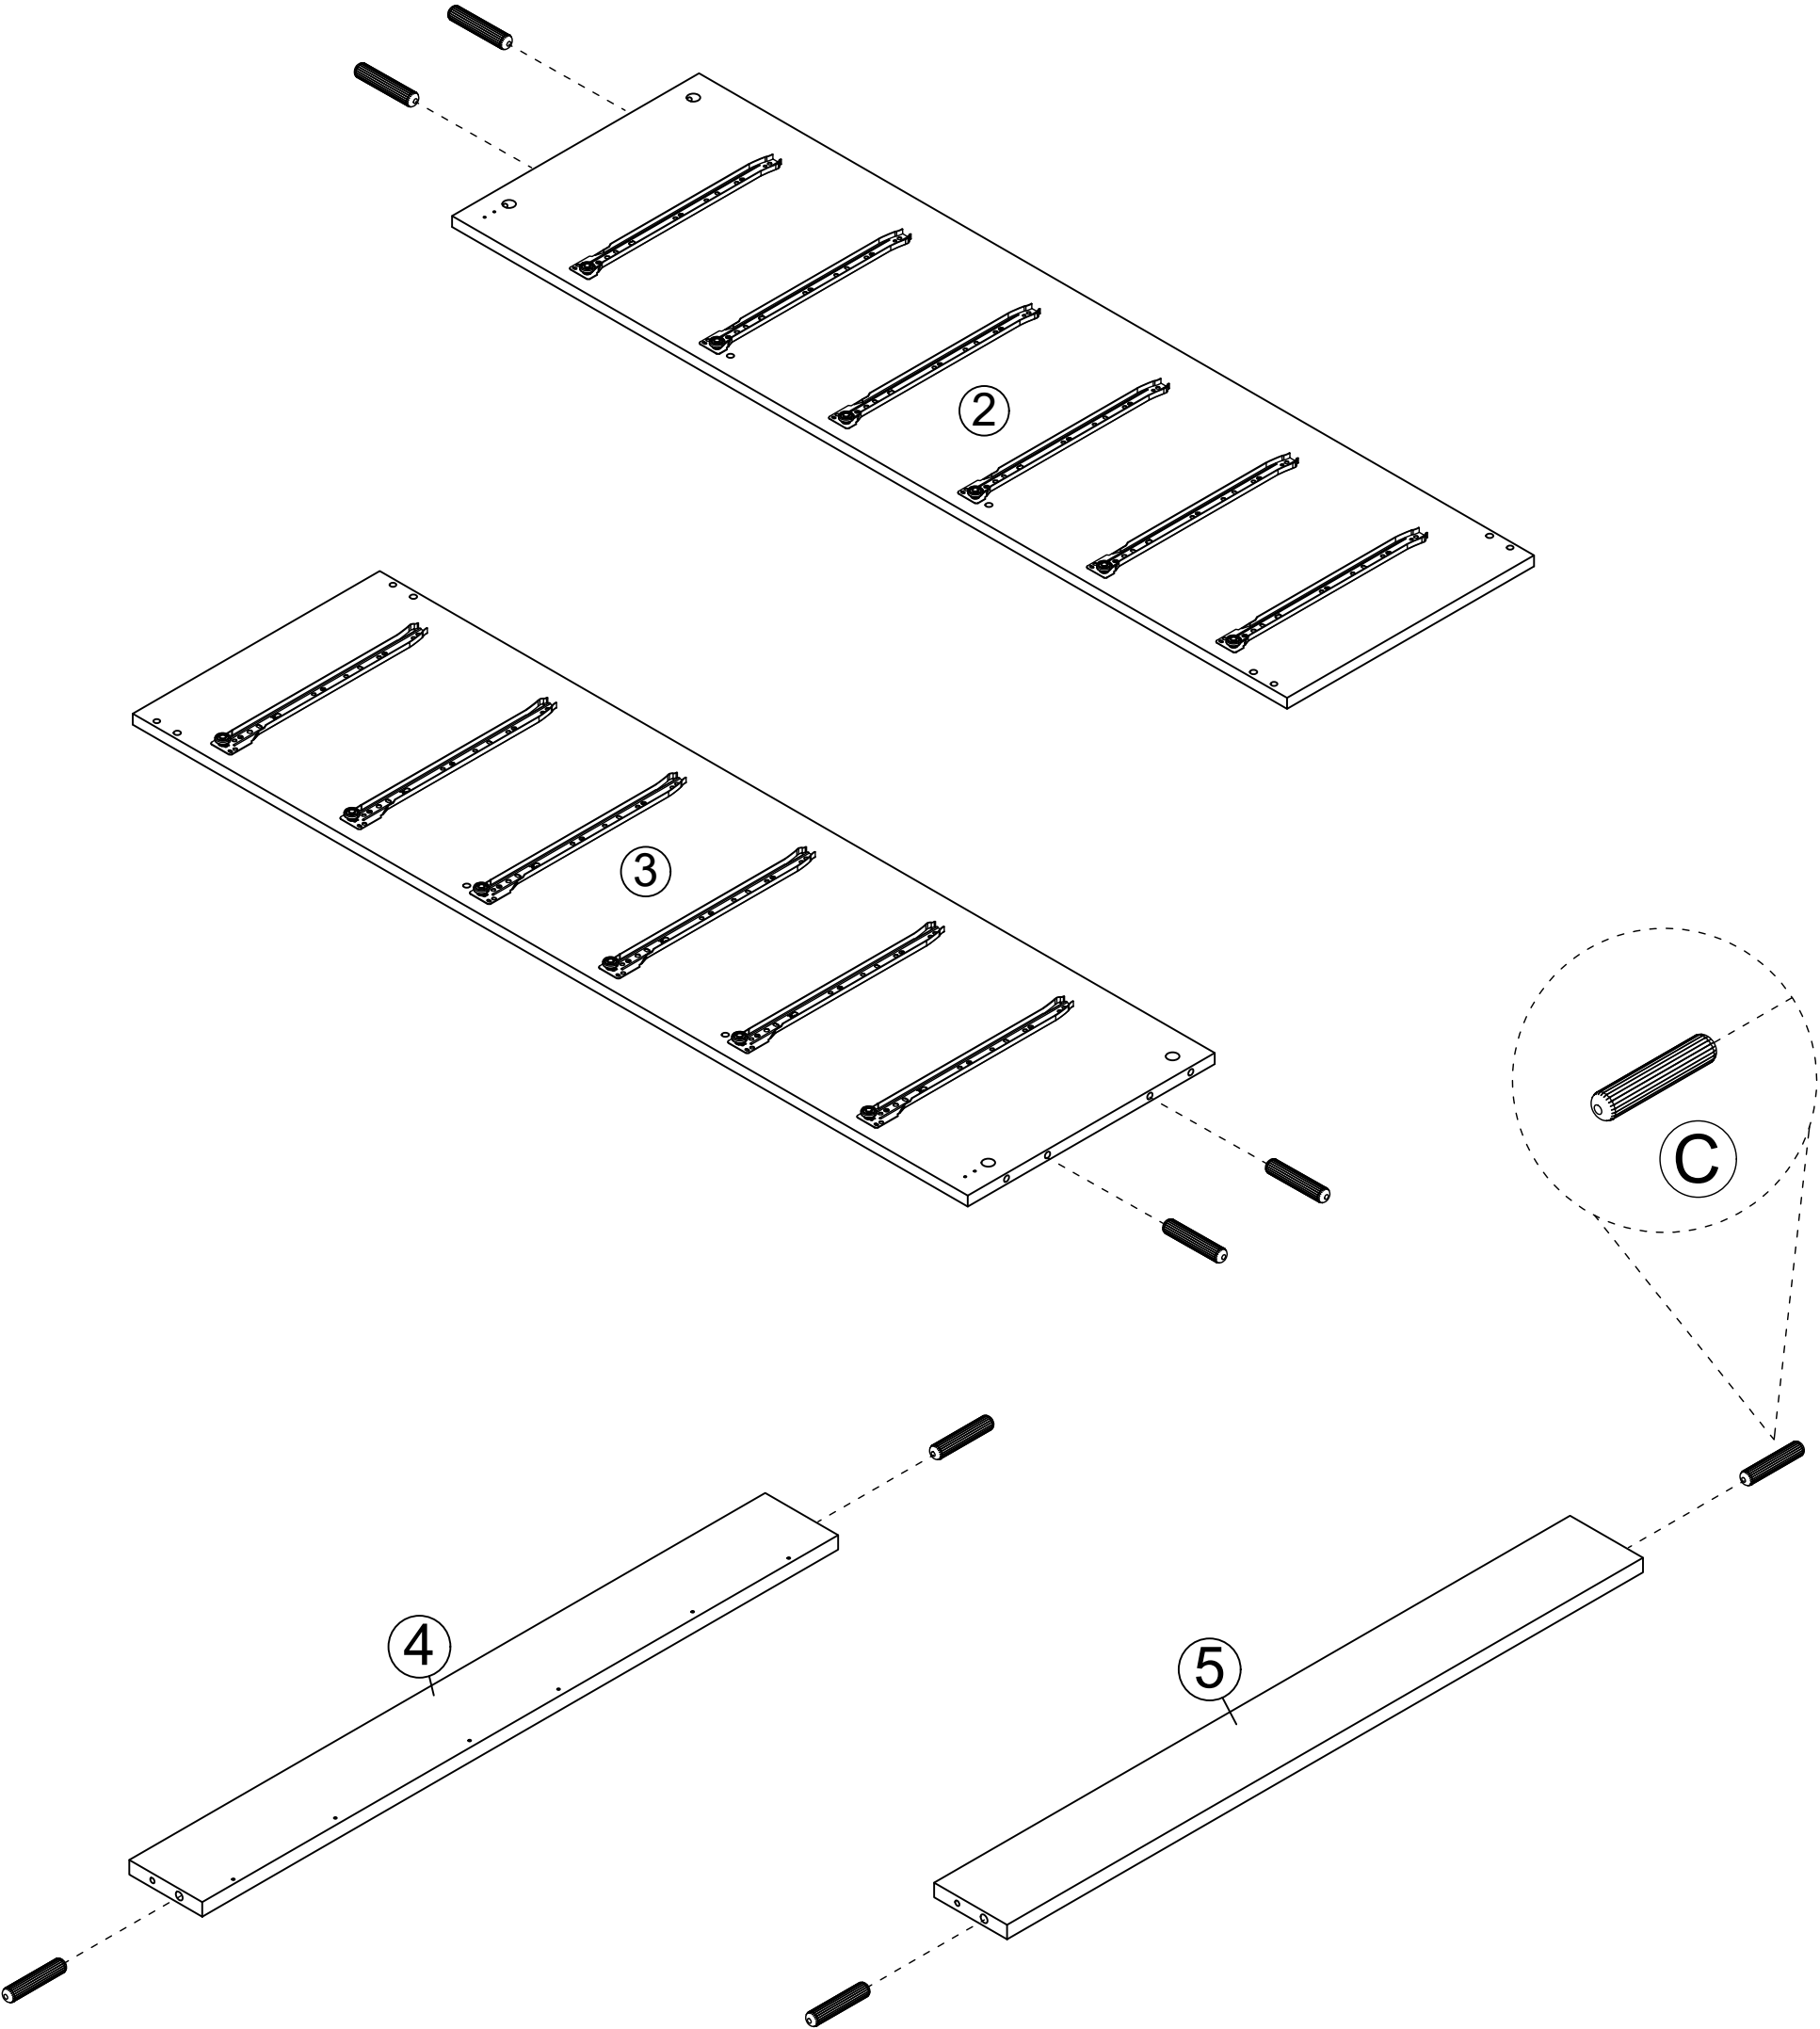


STEP5

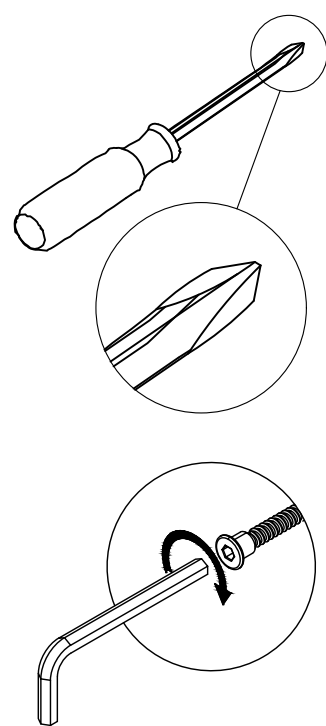


 Ø3.5X14mm	
D	X4


 M6*30mm	
G	X4


 Ø6.3X50mm	
H	X4

 Ø4X65mm	
L	X1


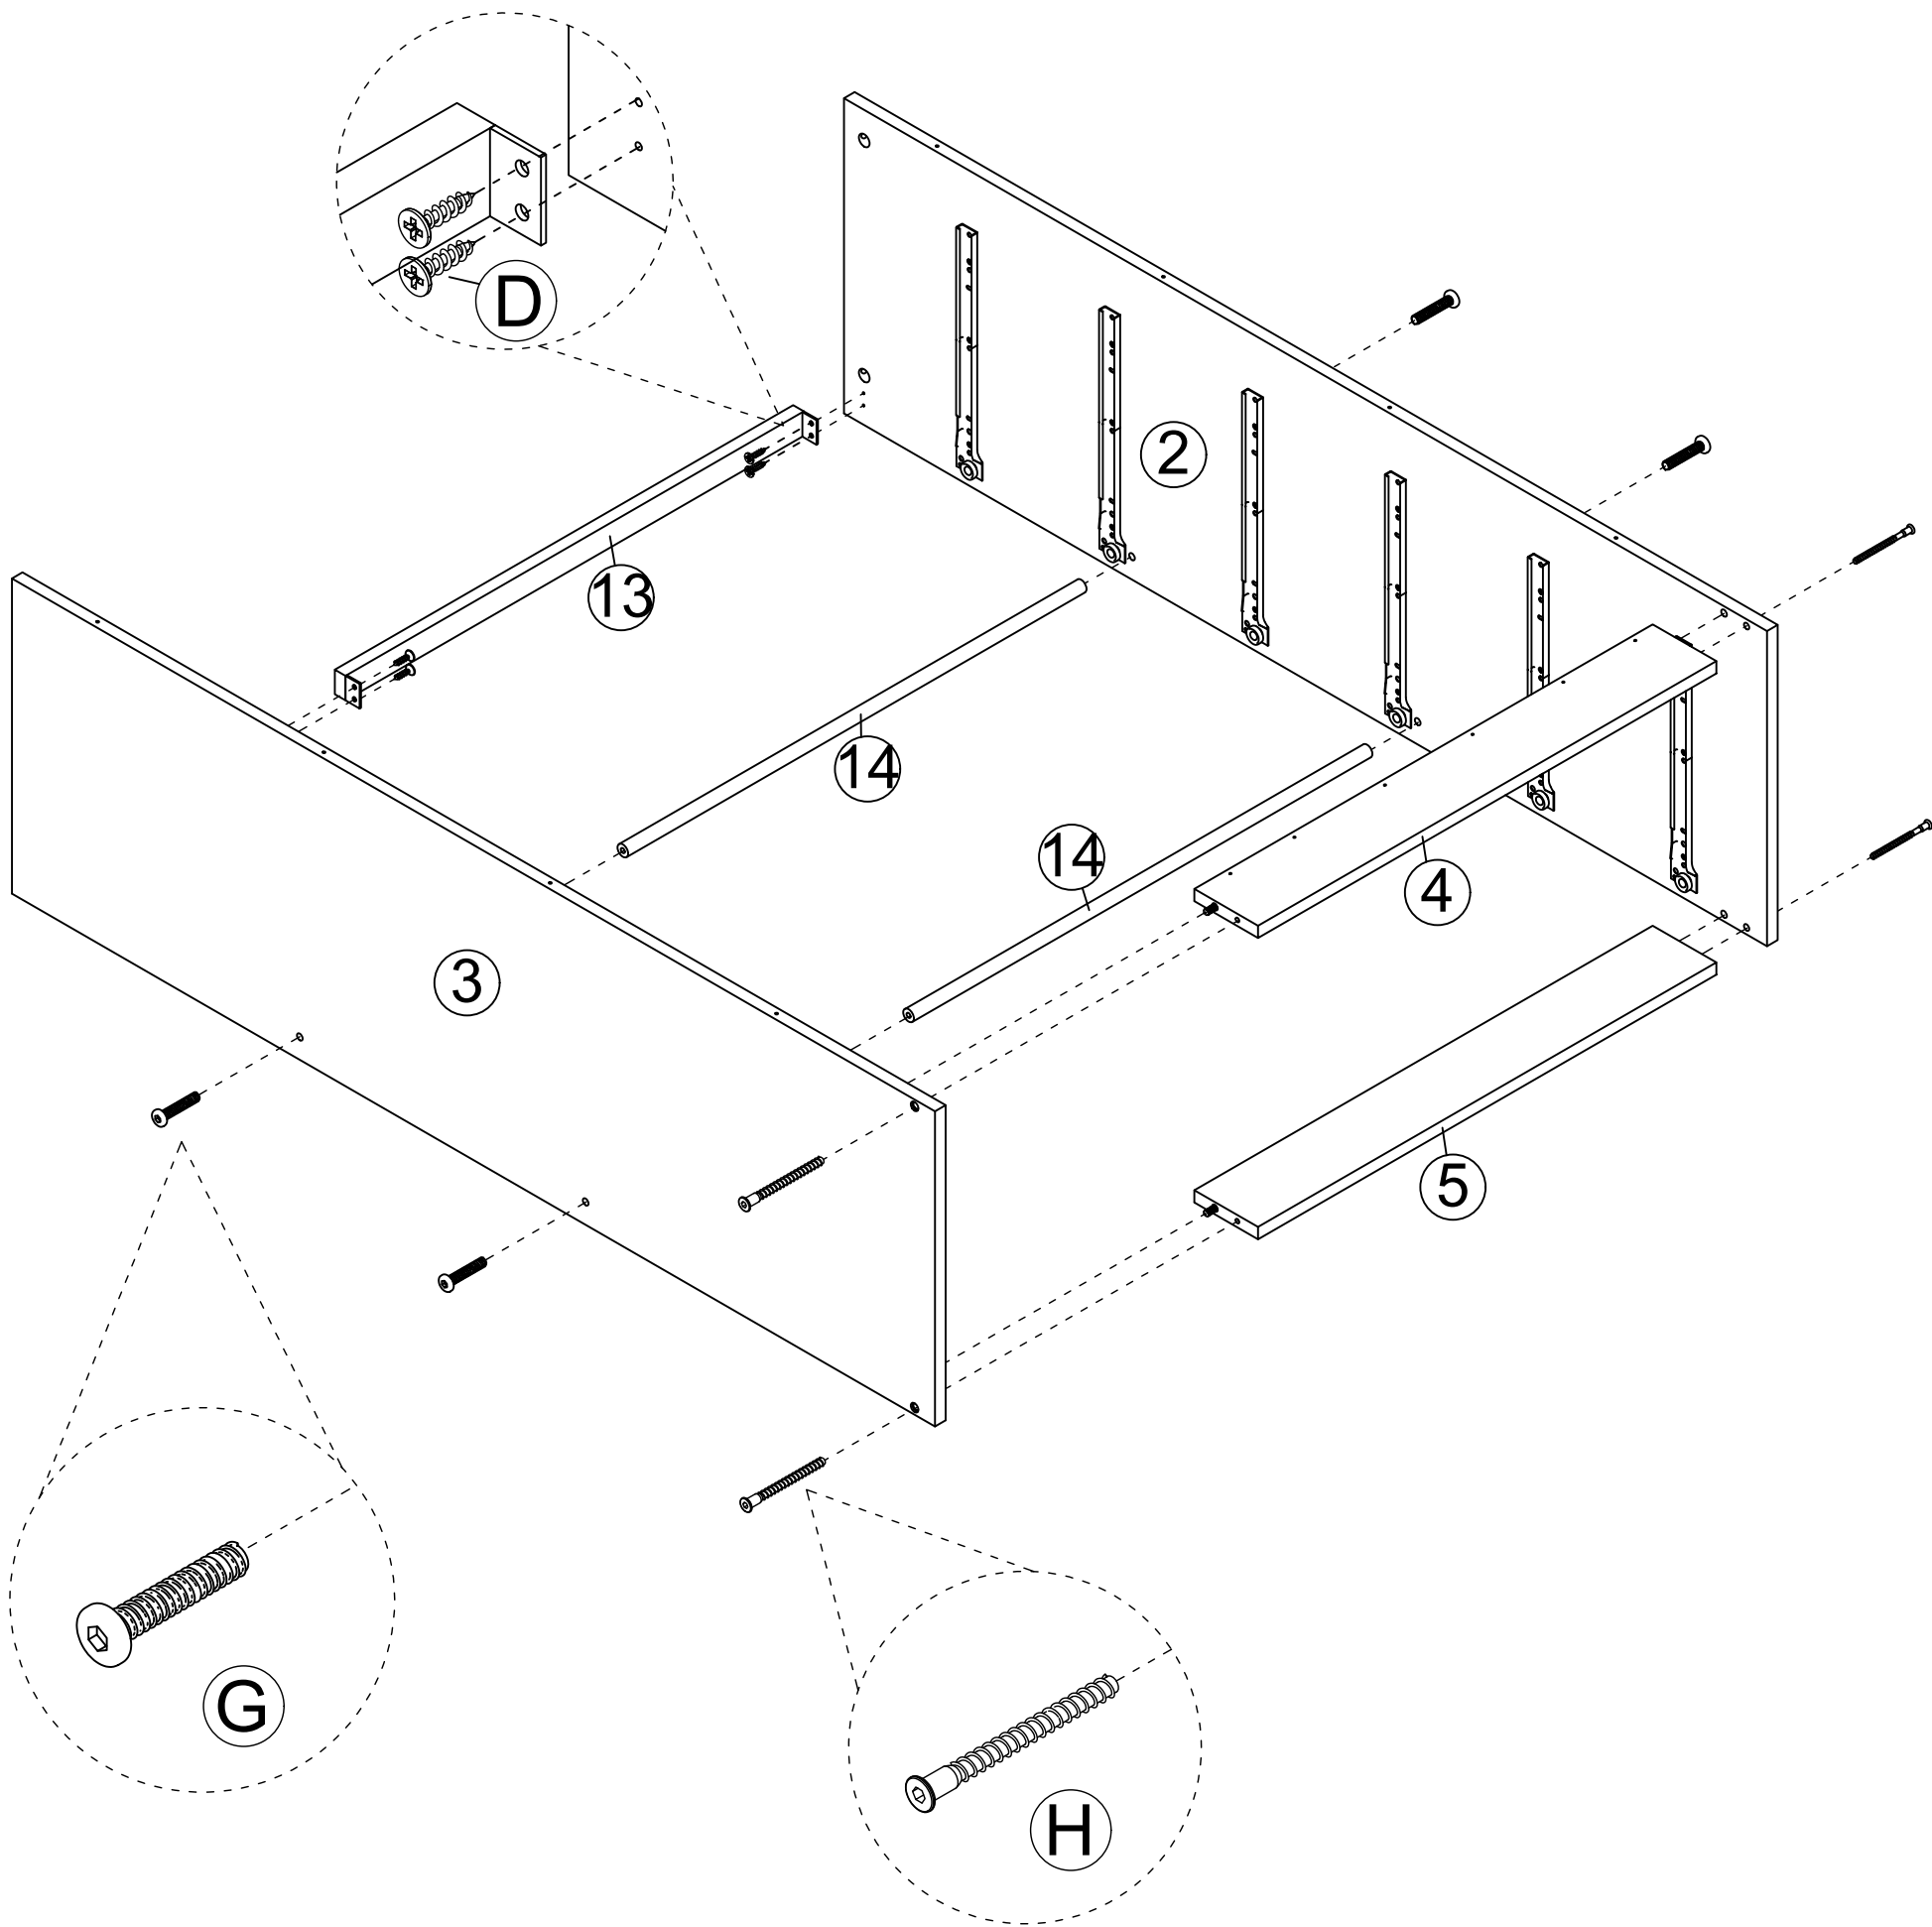


STEP6


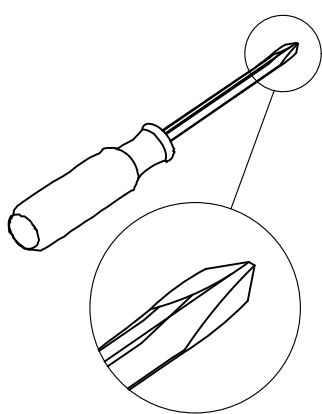


	
Ø6.5X35mm	
A	X4


	
Ø15X9.5mm	
B	X4

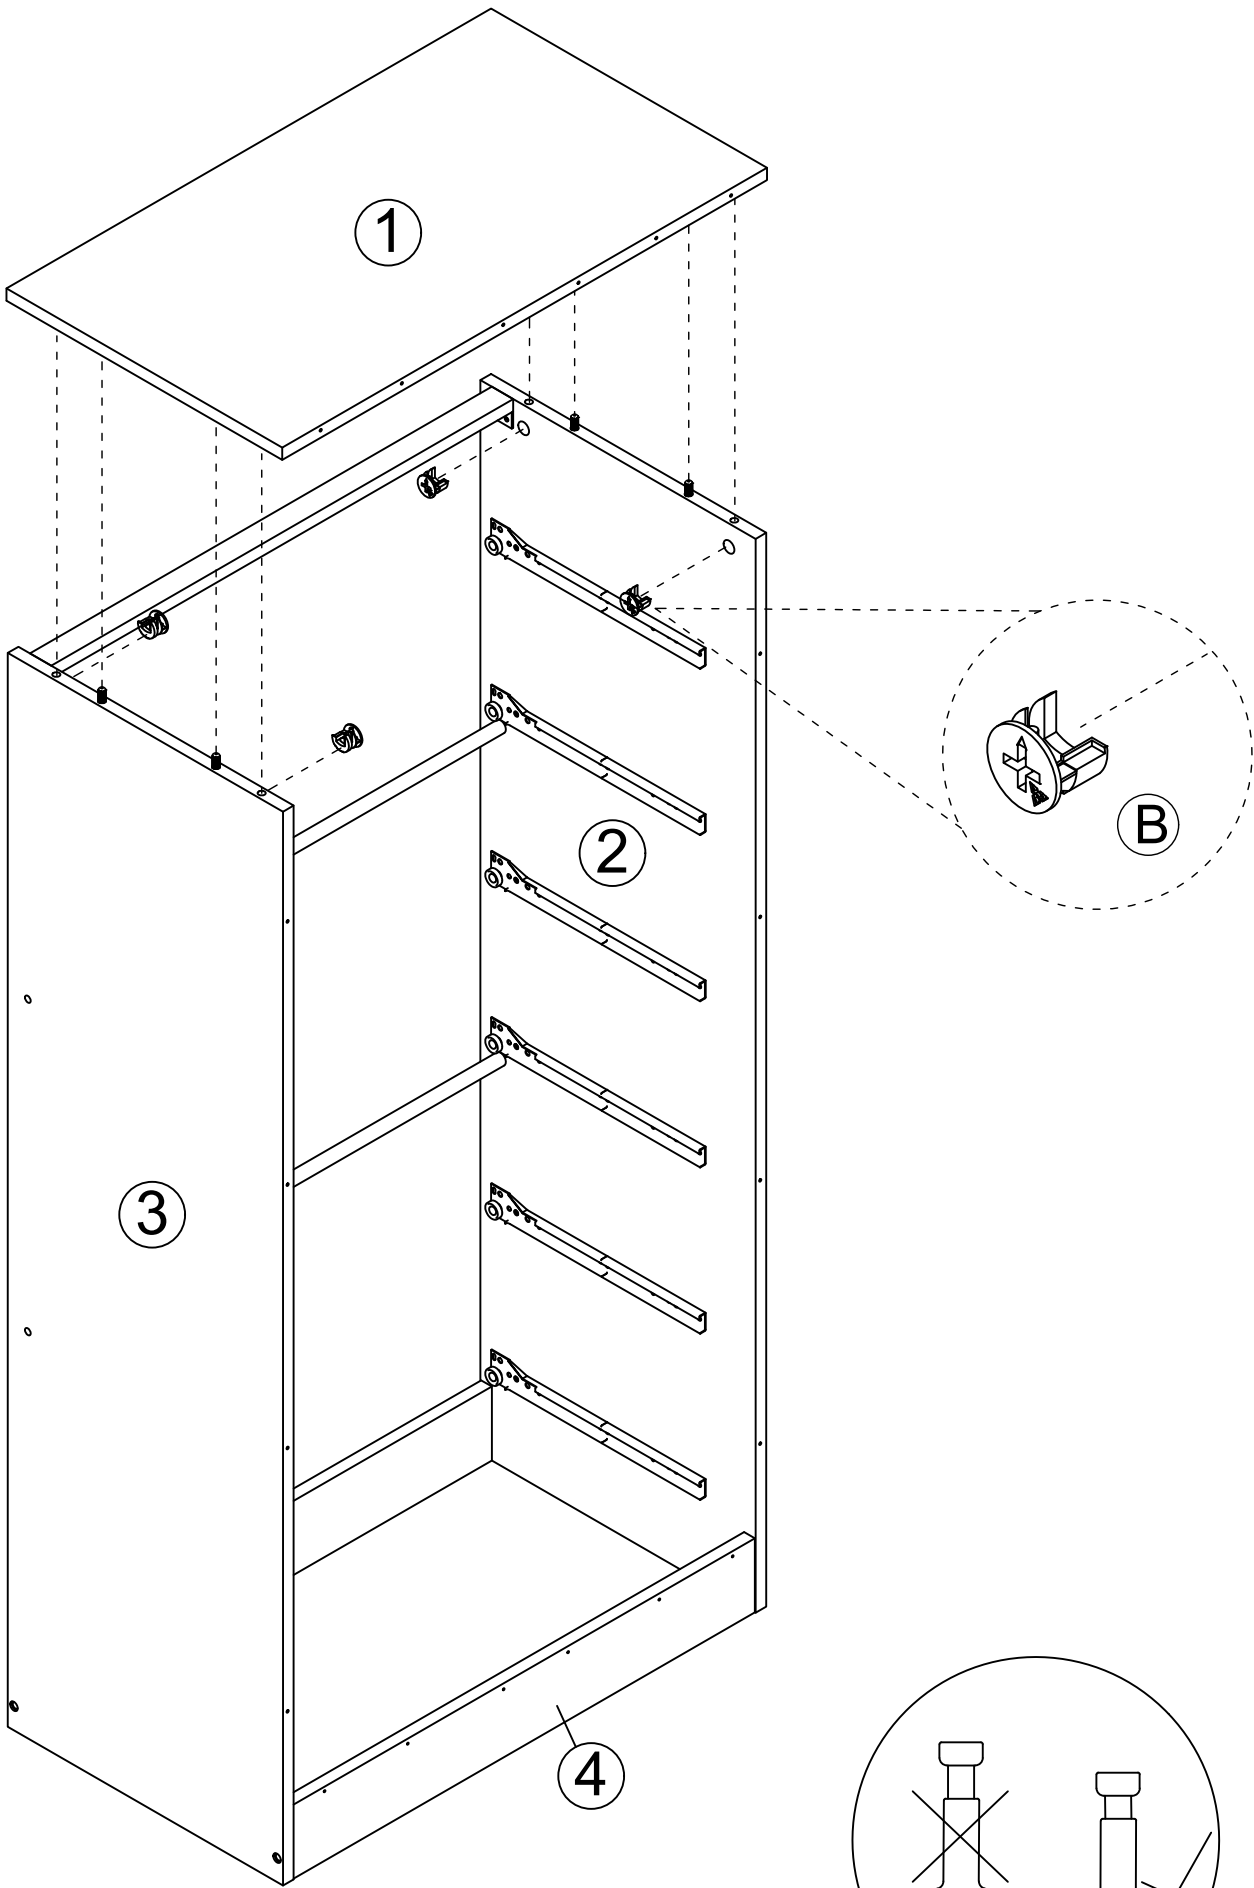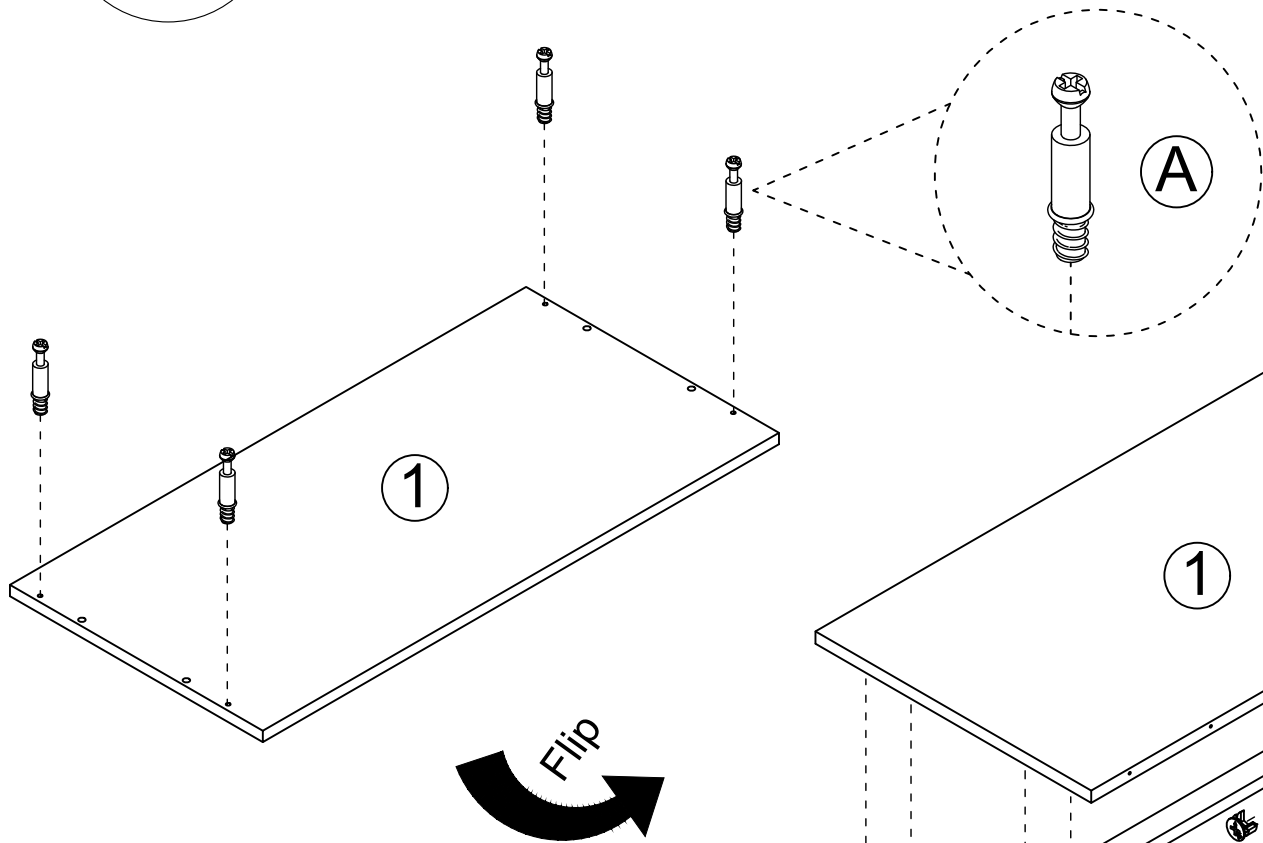


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

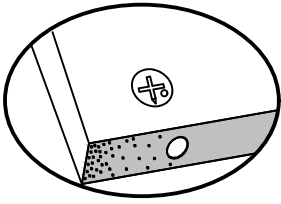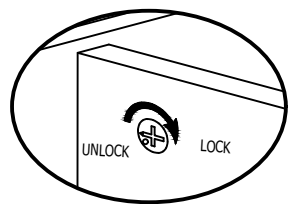



Proper orientation of CAM LOCK

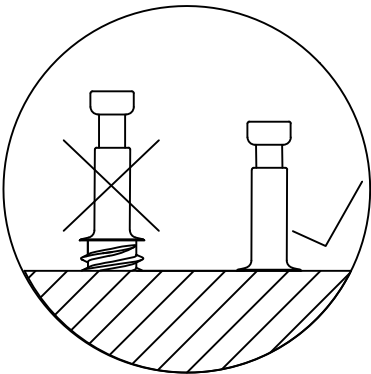


STEP7

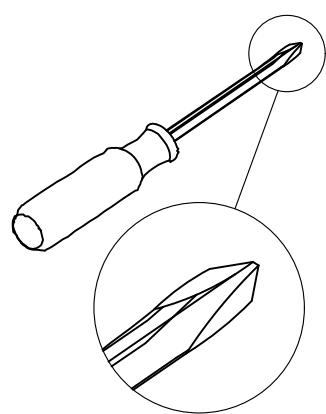


 Ø3X14mm	
(E)	X18

  4X12mm 27X13X1mm	
(M)	X2set


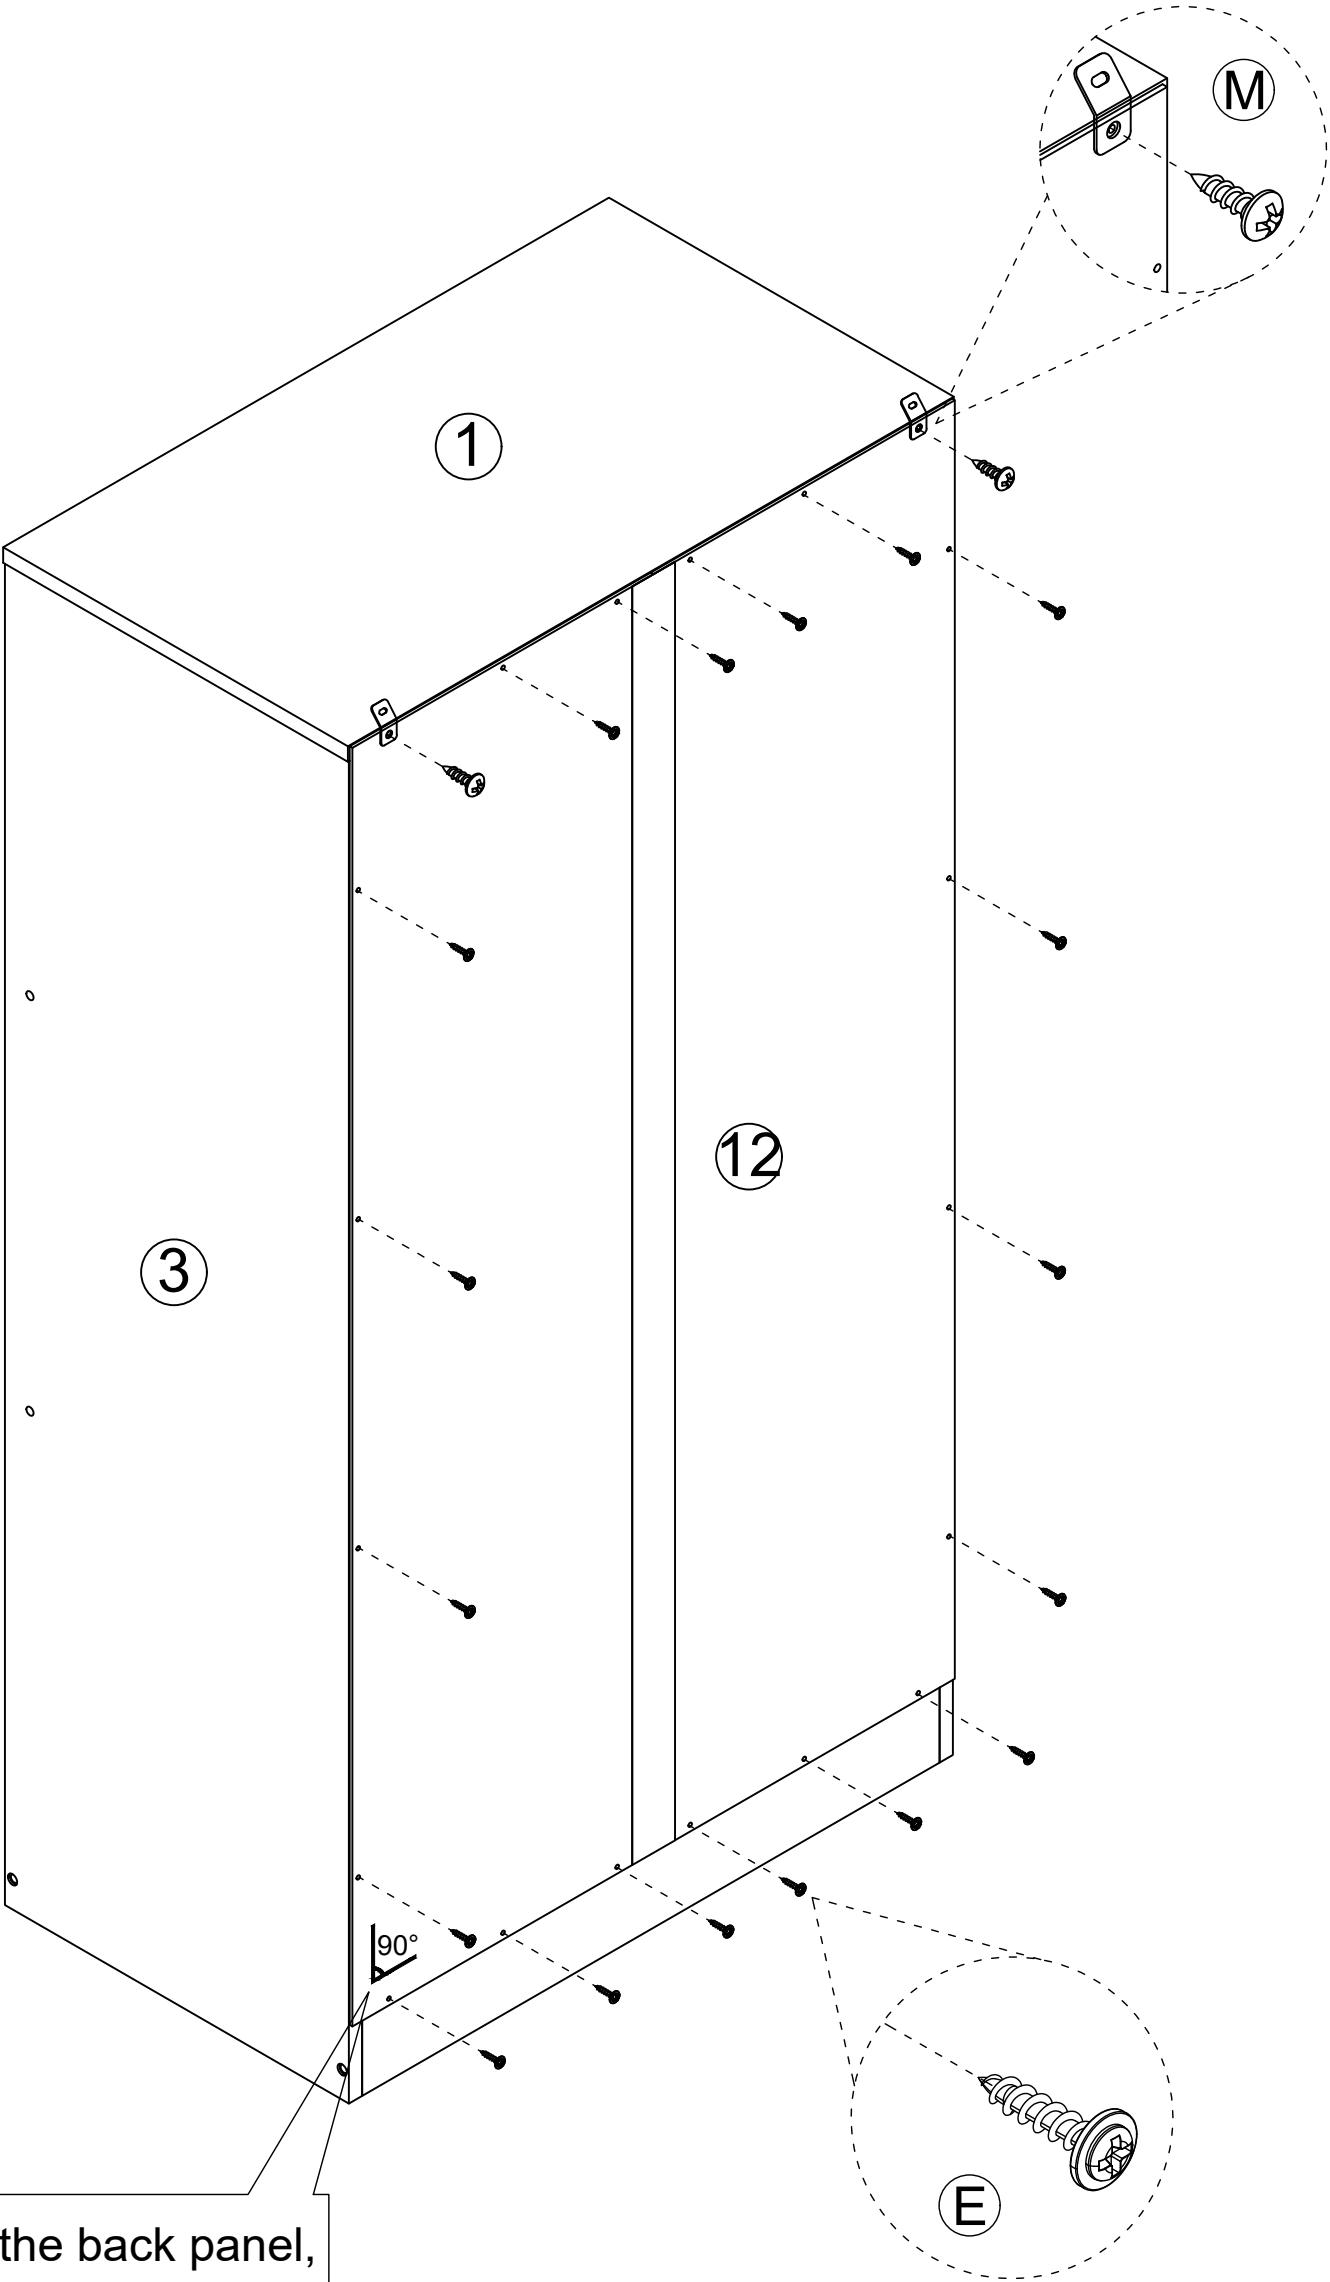


Before attaching the back panel,
be sure that the unit is at 90°.

STEP8

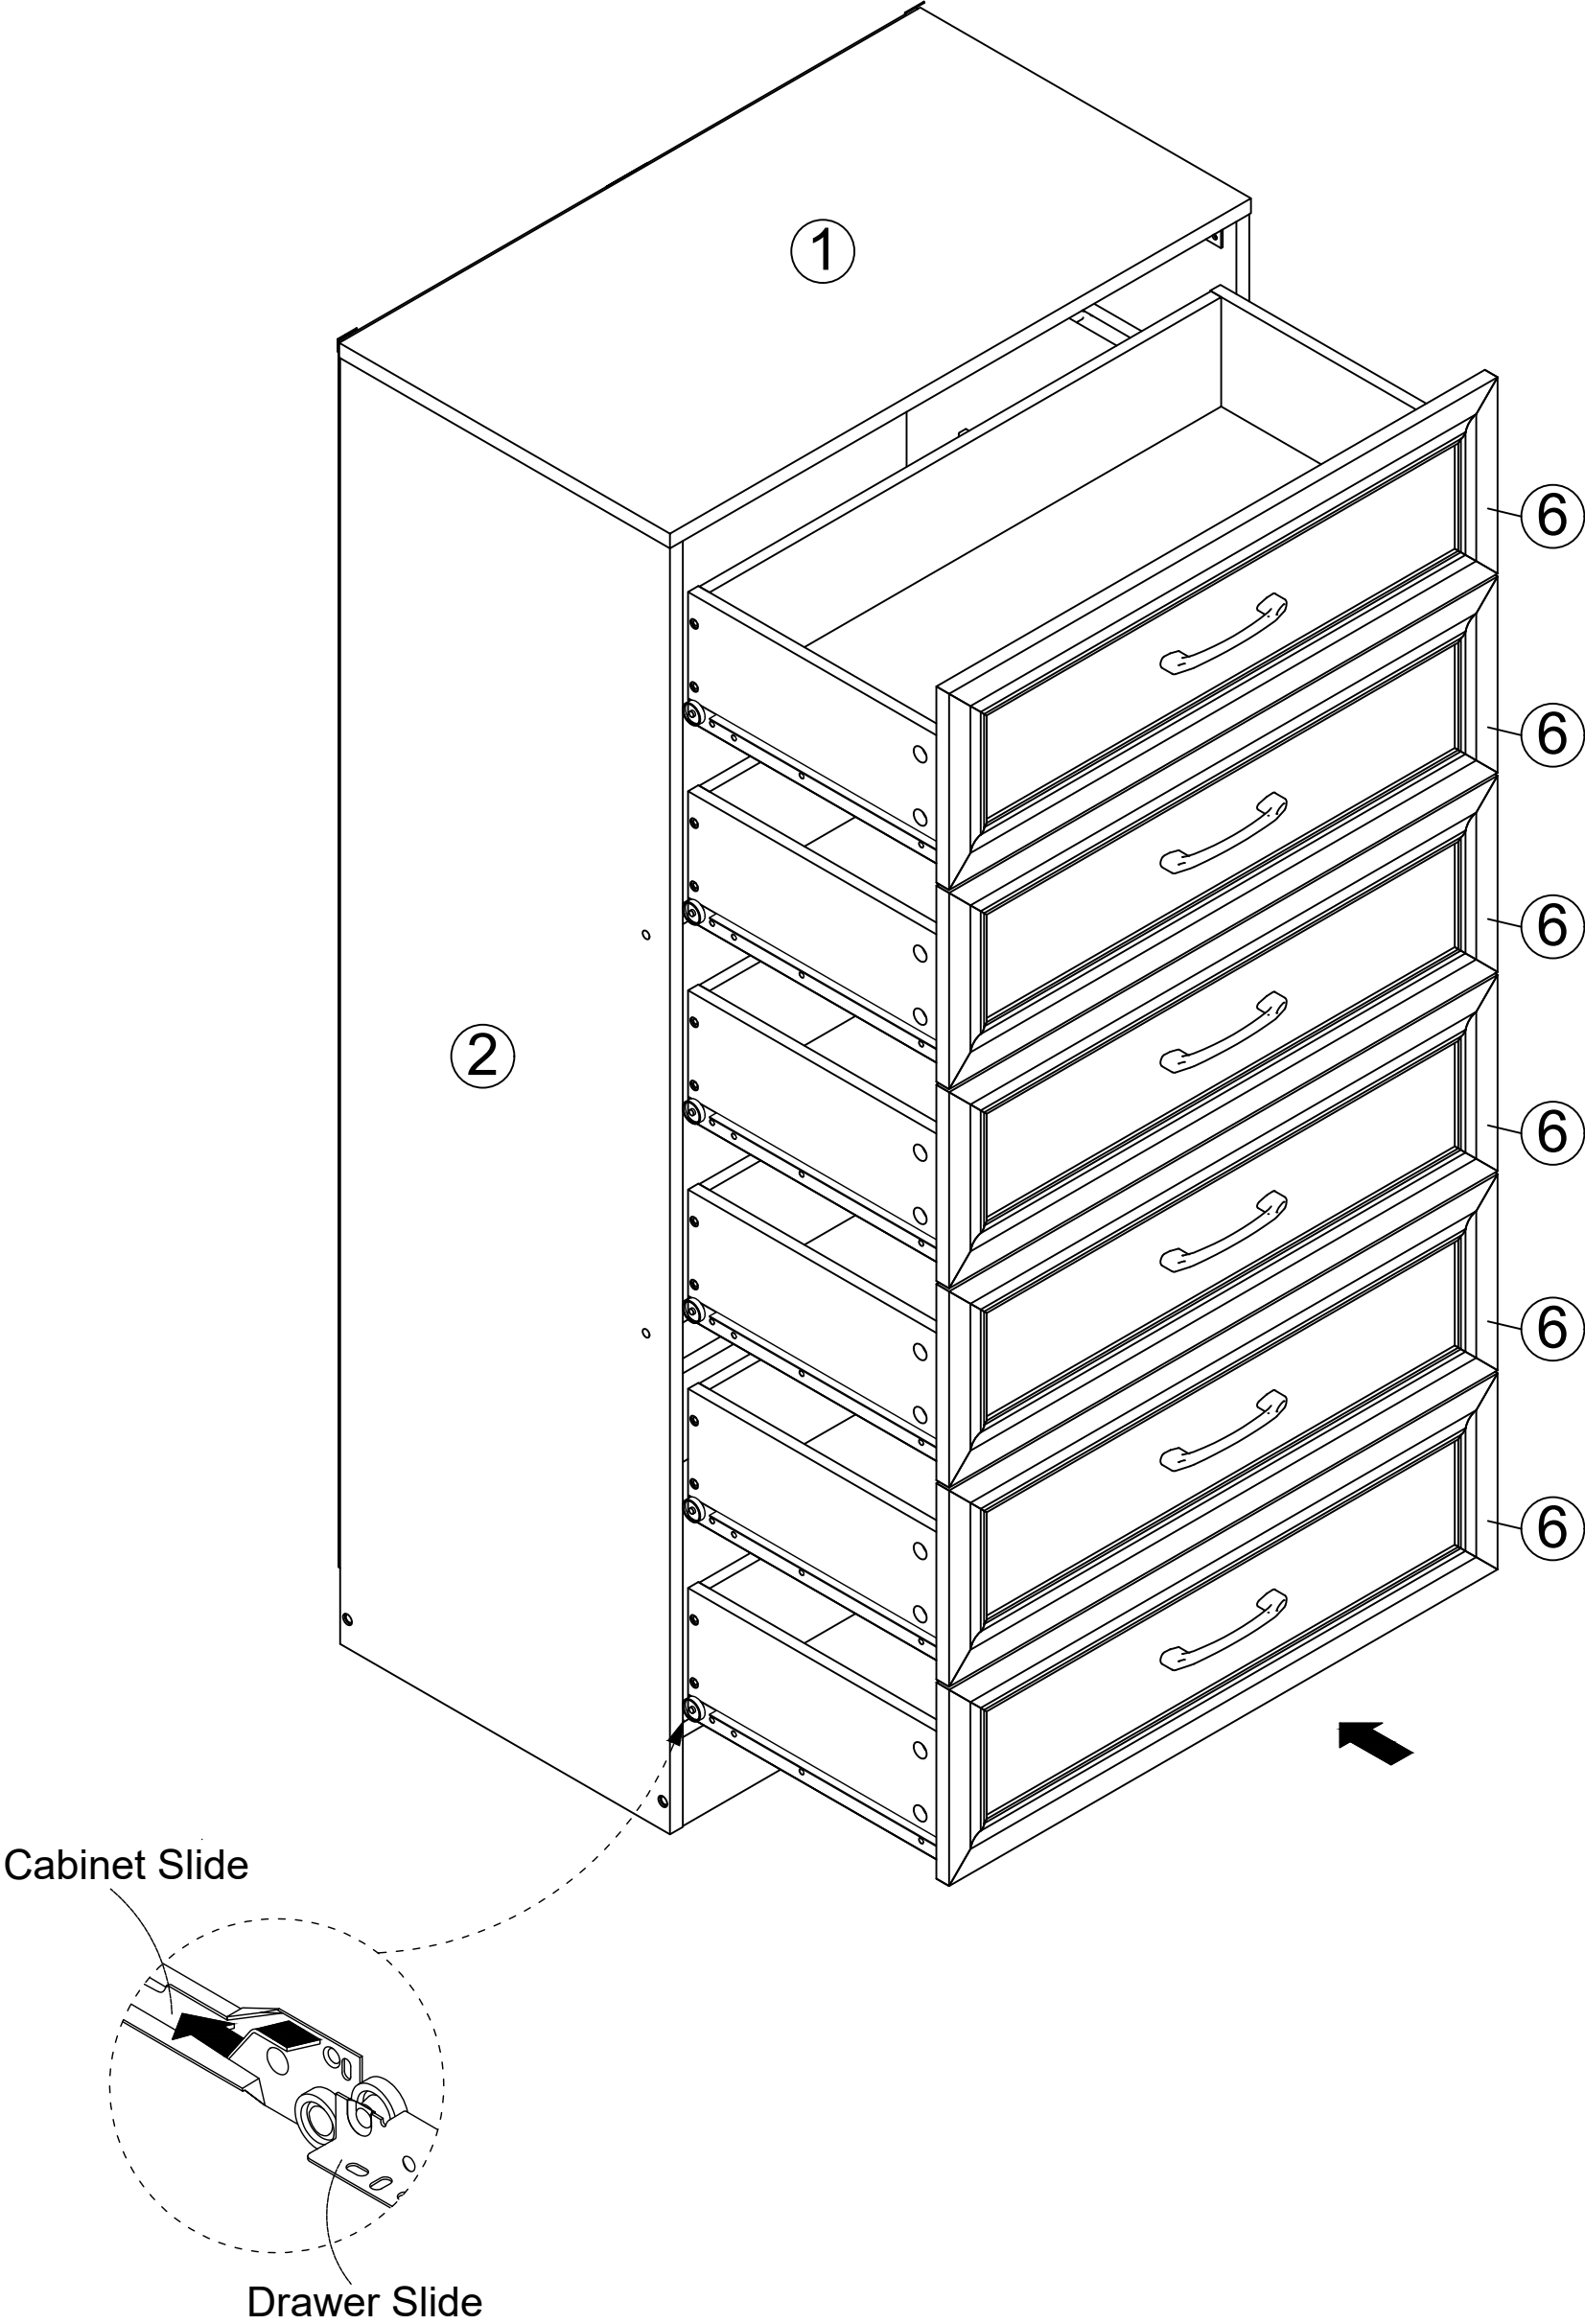


STEP9


			
4X40mm	27X13X1mm	35X40X14mm	273mm
(M)		X2set	

NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


Install the tipping restraint hard ware

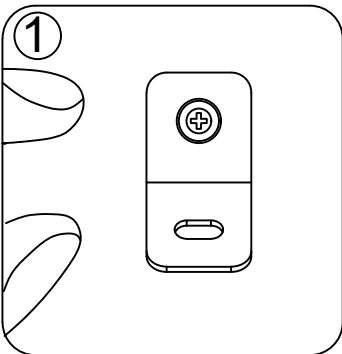


1.make mark on the wall

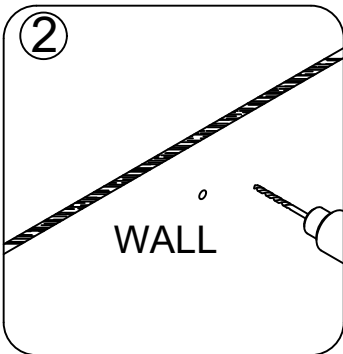


2.drill two Ø6 holes on the wall

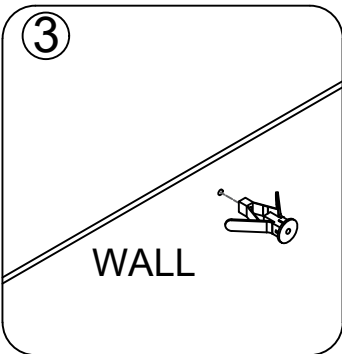

3.put two anchors in the holes

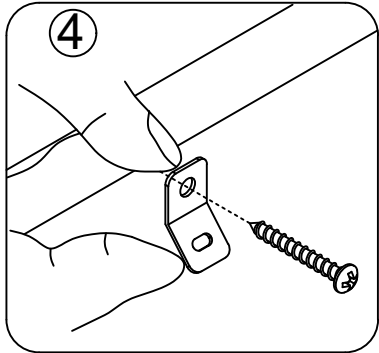

4.fix the device on the wall by the long screws

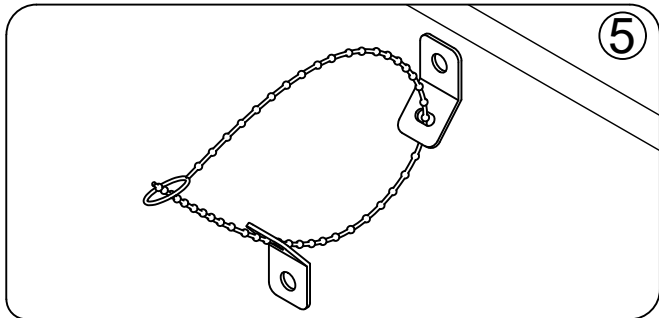

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

