
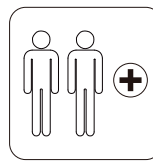
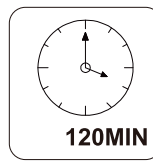
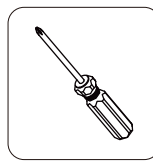
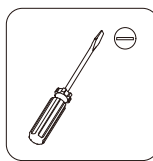


# HLG196

Version:1.0

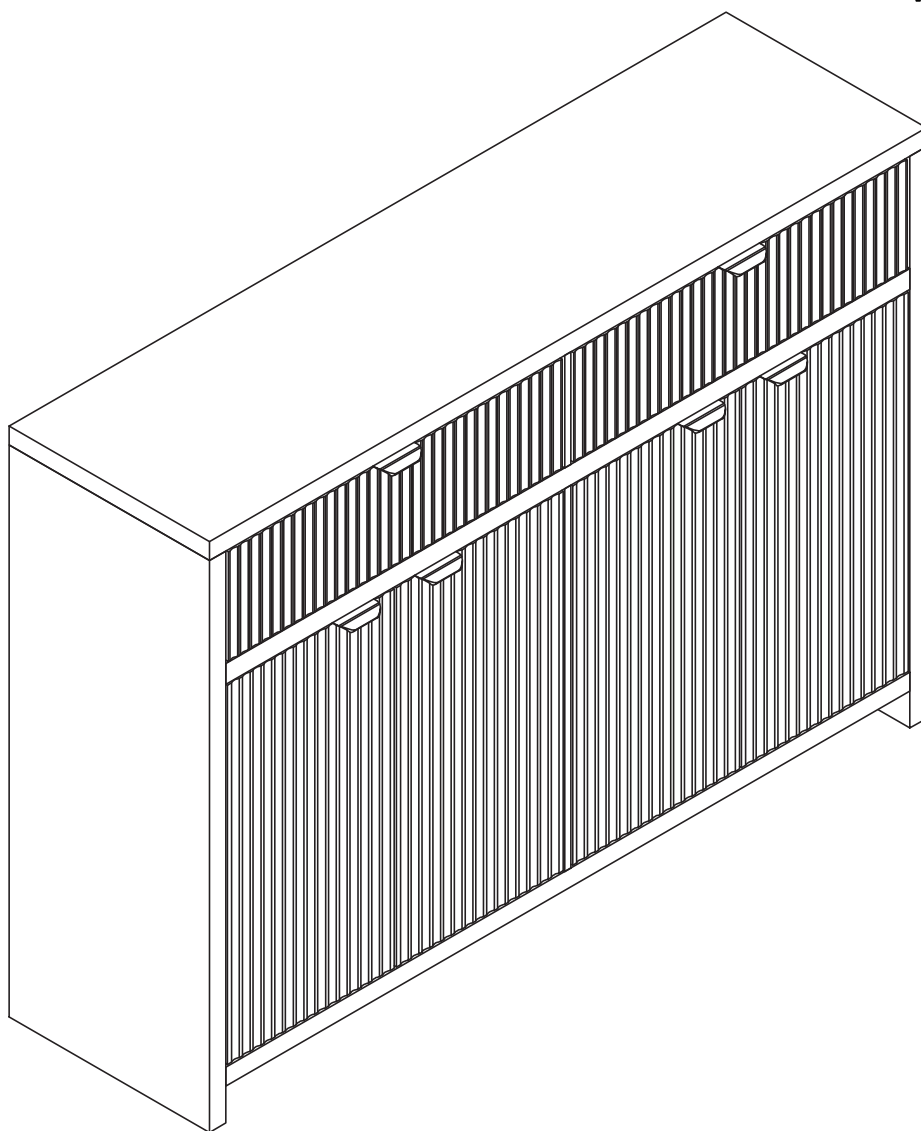

**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

. THANK YOU FOR PURCHASE! .

# FREE REPLACEMENT PARTS AVAILABLE!



*---NEED HELP WITH YOUR FURNITURE?---*

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason  
—we're here to help.  
For any damaged or missing components, we're happy to provide FREE replacement parts.



WhatsApp


**Email: support @anymaple.com**

---


## WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within  
12-24 HOURS to resolve your concerns quickly!

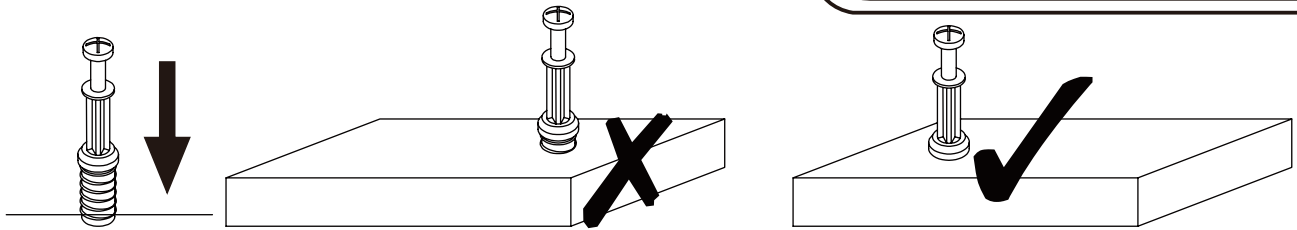


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

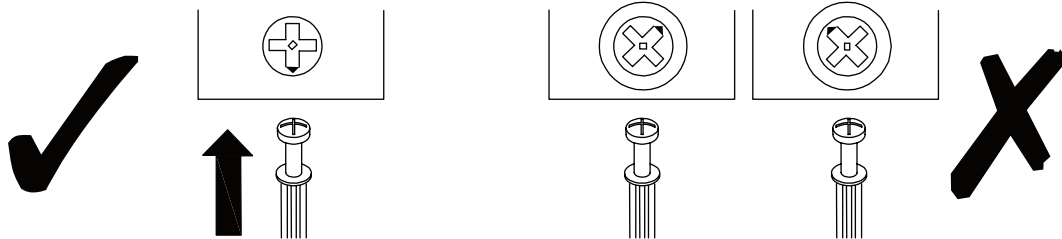






**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









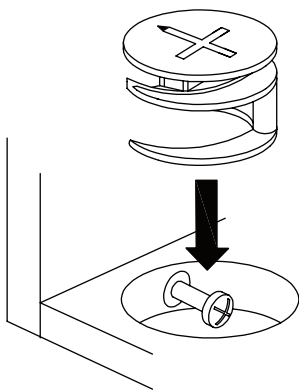





**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.


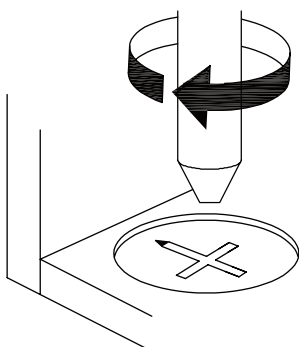














**EN\_Turn** cam lock clockwise to tighten.

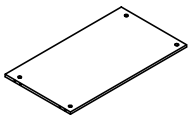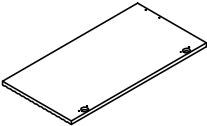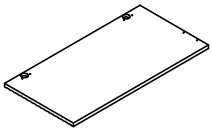
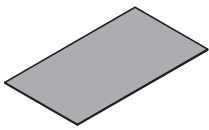
| Carton A |                                                                                     |     |       |
|----------|-------------------------------------------------------------------------------------|-----|-------|
| NO.      | PARTS                                                                               | QTY | SPARE |
| ⑥        |    | x2  |       |
| ⑦        |    | x1  |       |
| ⑮        |    | x2  |       |
| ⑯        |    | x2  |       |
| ⑰        |   | x2  |       |
| ⑳        |  | x2  |       |

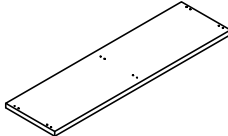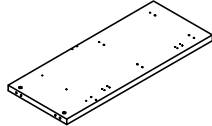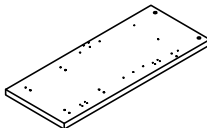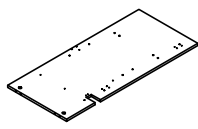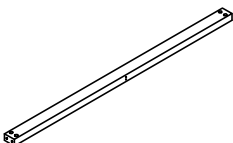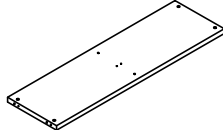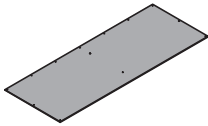
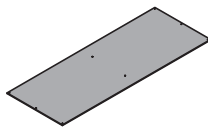
| Carton B |                                                                                       |     |       |
|----------|---------------------------------------------------------------------------------------|-----|-------|
| NO.      | PARTS                                                                                 | QTY | SPARE |
| ①        |     | x1  |       |
| ②        |     | x1  |       |
| ③        |     | x1  |       |
| ④        |     | x1  |       |
| ⑤        |    | x1  |       |
| ⑧        |   | x1  |       |
| ⑨        |  | x1  |       |
| ⑩        |   | x1  |       |
| ⑪        |  | x1  |       |
| ⑫        |   | x2  |       |
| ⑬        |   | x2  |       |
| ⑭        |   | x2  |       |



| Carton B |                                                                                                    |     |       |
|----------|----------------------------------------------------------------------------------------------------|-----|-------|
| NO.      | PARTS                                                                                              | QTY | SPARE |
| ⑮        |                   | x2  |       |
| ⑰        |                   | x2  |       |
| ⑳        |                   | x2  |       |
| ㉒        |                   | x2  |       |
|          | <br>Hardware Kit |     |       |

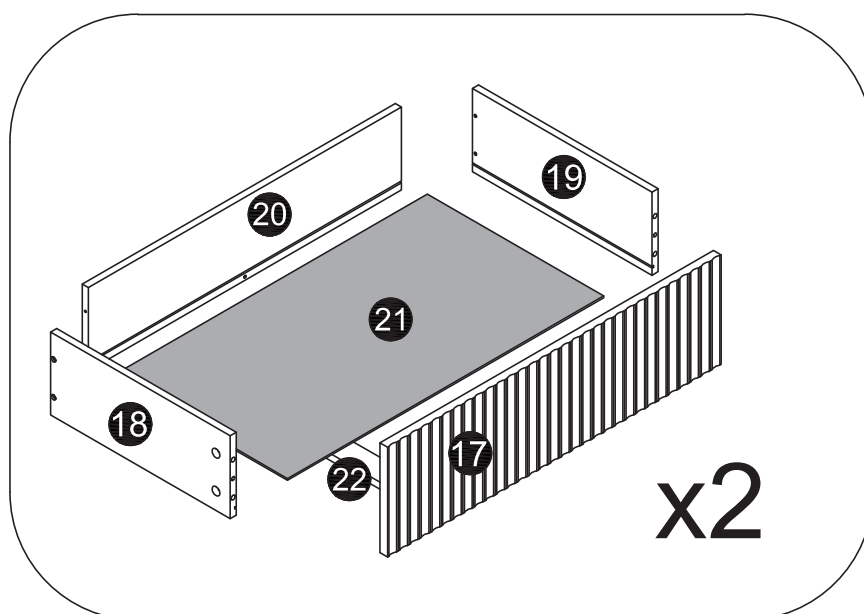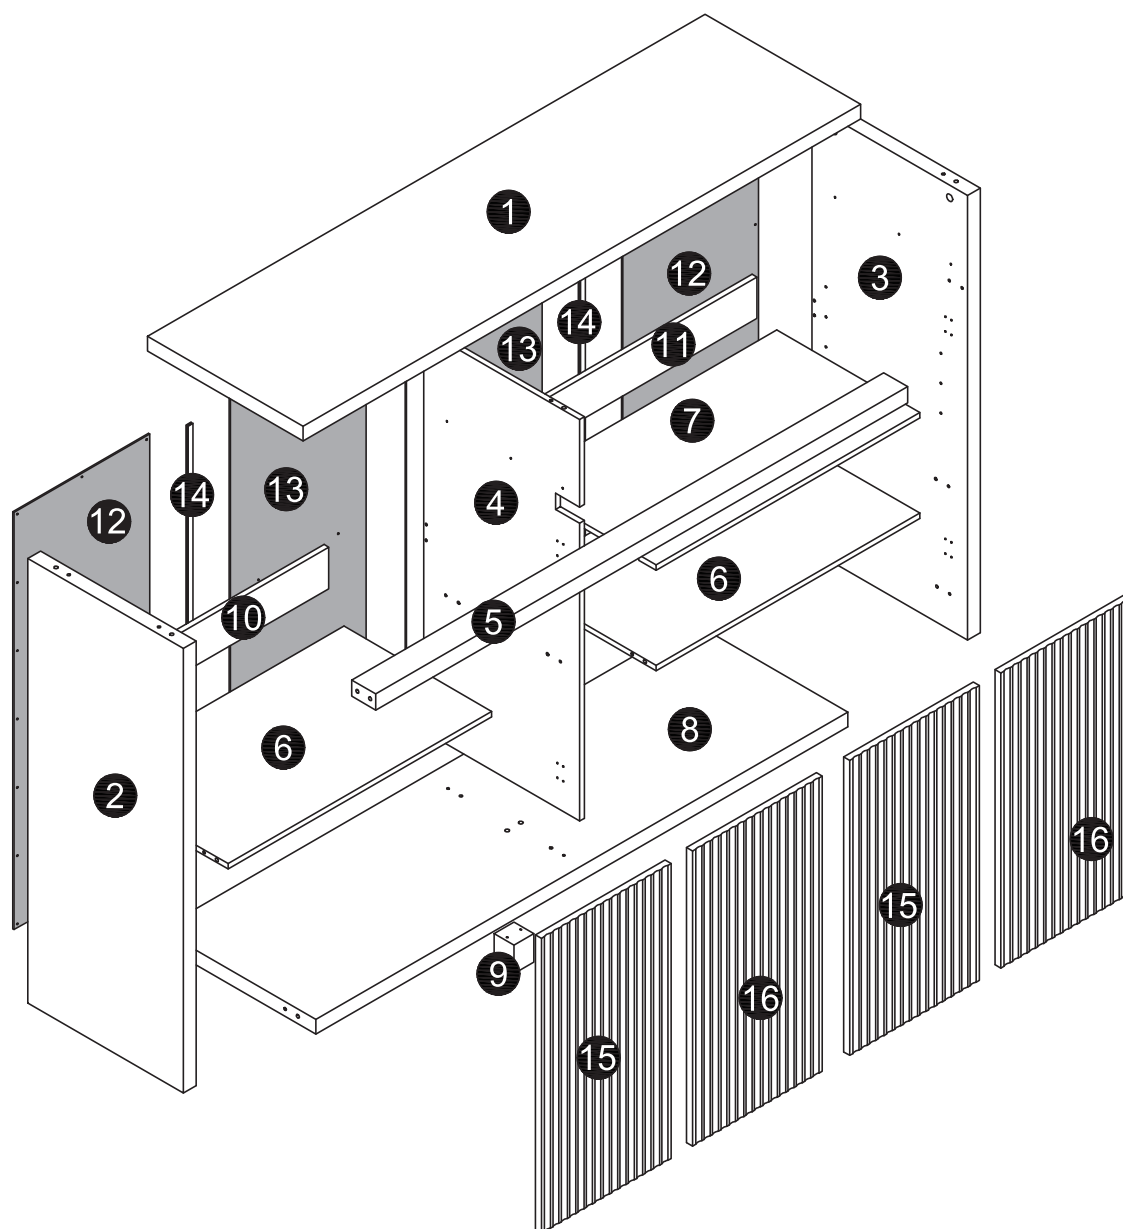

|                                                                                                                                 |                                                                                                                                  |                                                                                                                                 |                                                                                                                                 |                                                                                                                                     |                                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
|  <p><b>A</b> x39<br/>Ø6x35mm<br/>+3(spare)</p> |  <p><b>B</b> x39<br/>Ø15x10mm<br/>+3(spare)</p> |  <p><b>C</b> x26<br/>Ø6x30mm<br/>+2(spare)</p> |  <p><b>D</b> x12<br/>Ø4x35mm<br/>+1(spare)</p> |  <p><b>E</b> x88<br/>Ø3.5x12mm<br/>+8(spare)</p> |  <p><b>F</b> x6</p>                         |
|  <p><b>G</b> x4<br/>Ø4x50mm</p>                |  <p><b>H</b> x1</p>                             |  <p><b>I</b> x4</p>                            |  <p><b>J</b> x8</p>                            |  <p><b>K</b> x42<br/>+4(spare)</p>               |  <p><b>L</b> x2<br/>Ø15mm<br/>+1(spare)</p> |
|  <p><b>M</b> x2</p>                            |  <p><b>N</b> x2<br/>Ø4x14mm<br/>N-1</p>         |  <p>N-2</p>                                    |  <p><b>O</b> x1</p>                            |                                                                                                                                     |                                                                                                                                |
|  <p><b>CL</b> x2<br/>L350mm</p>                |  <p><b>CR</b> x2<br/>L350mm</p>                 |  <p><b>DL</b> x2<br/>L350mm</p>                |  <p><b>DR</b> x2<br/>L350mm</p>                |                                                                                                                                     |                                                                                                                                |

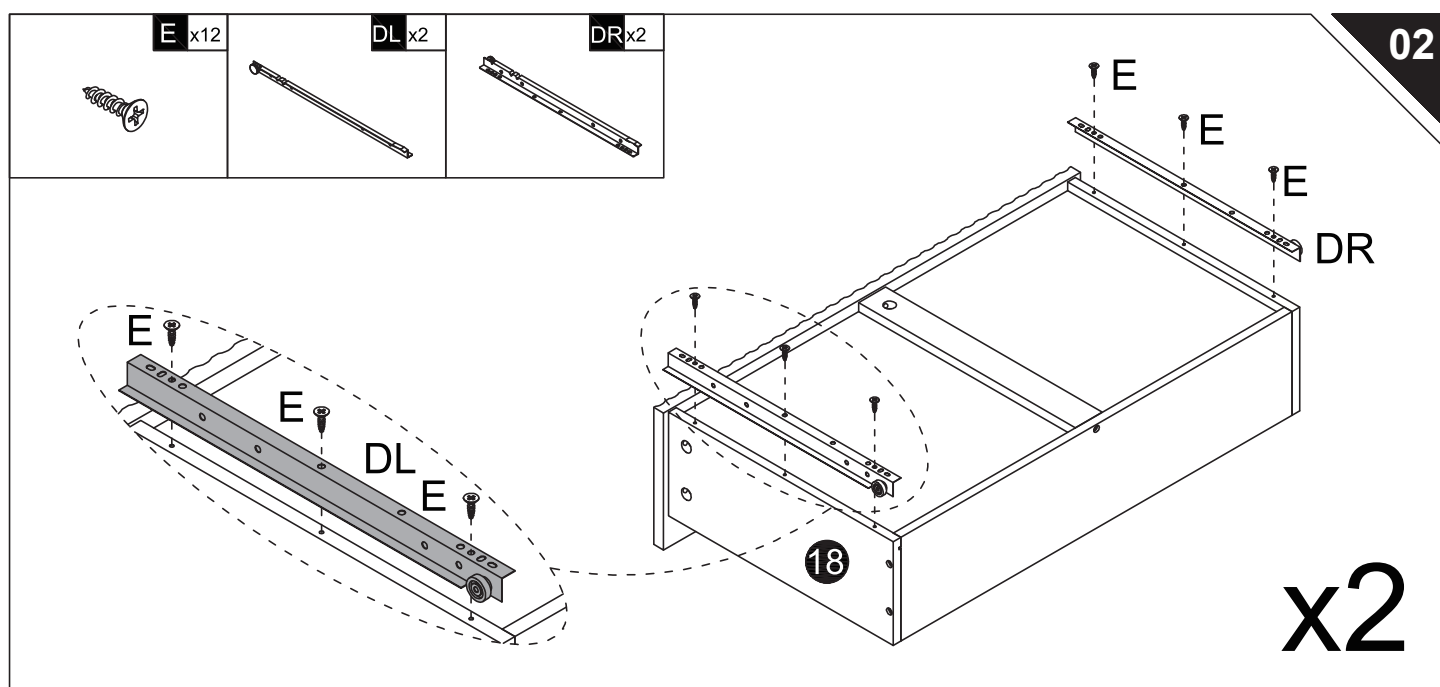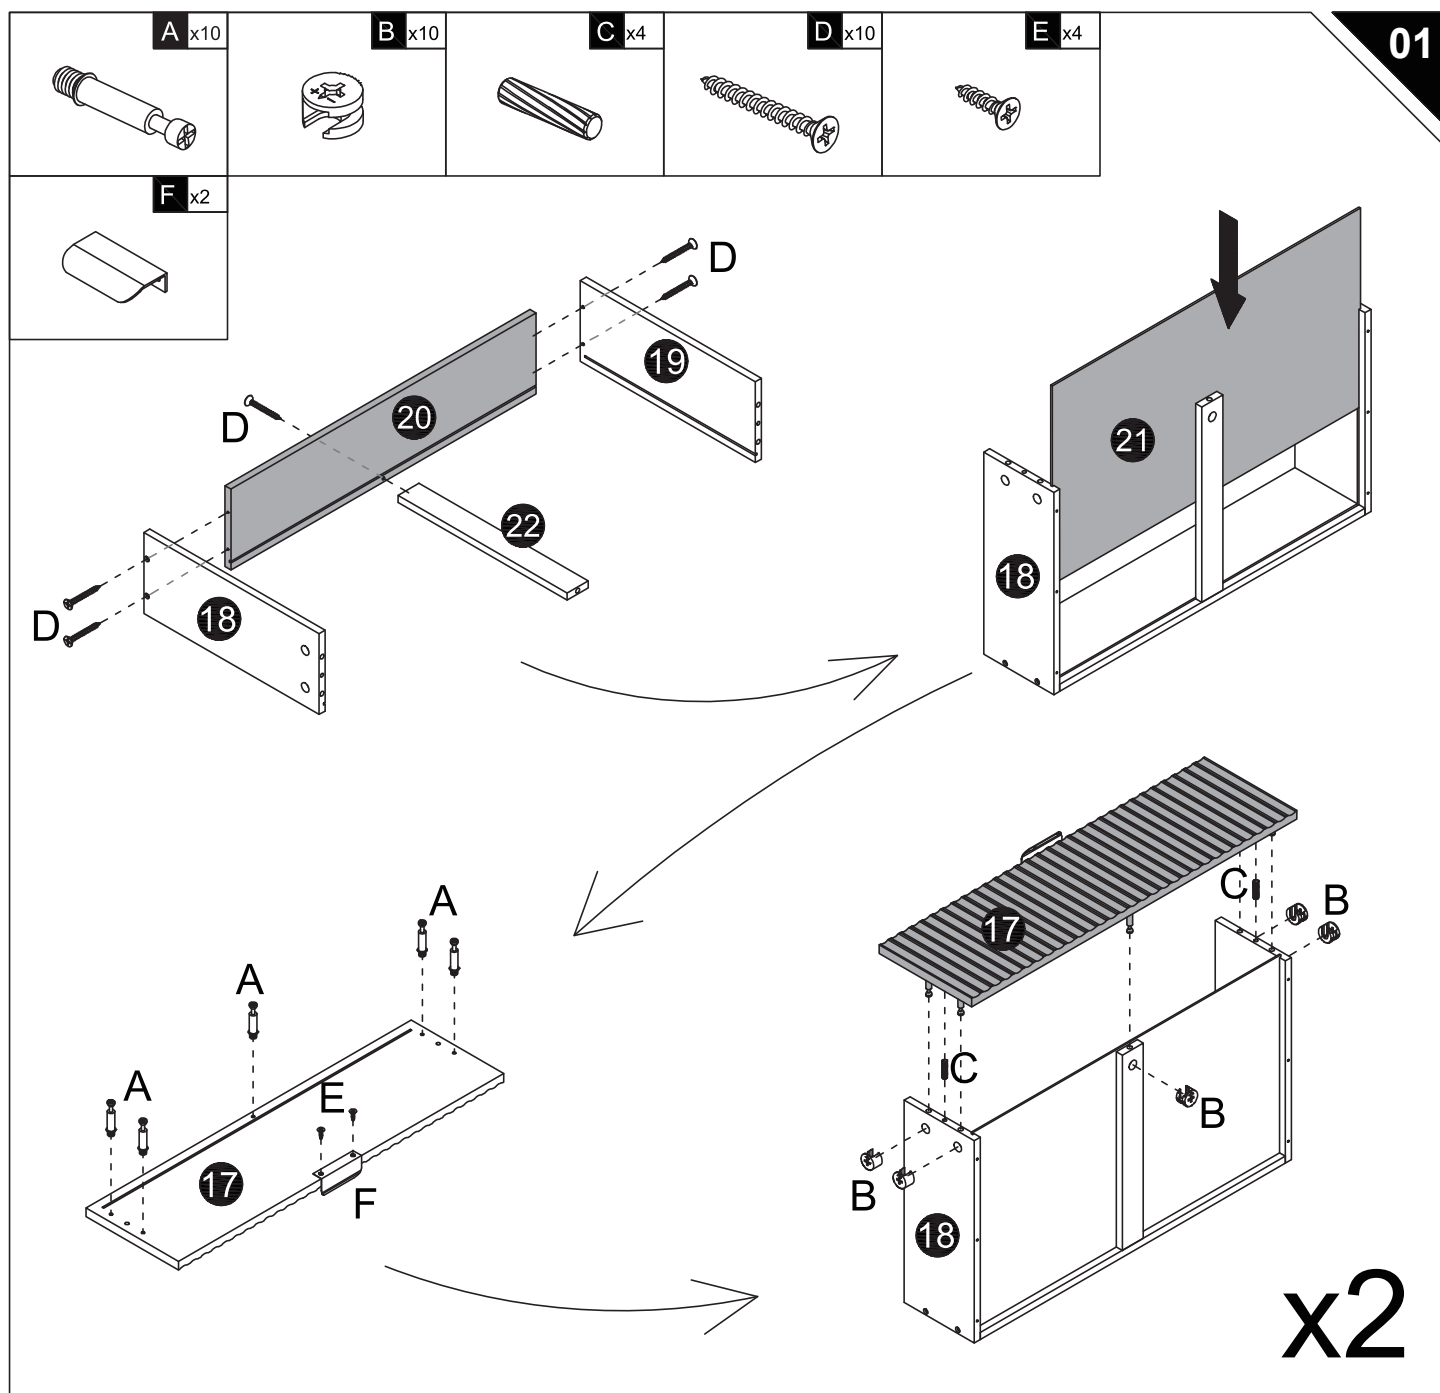

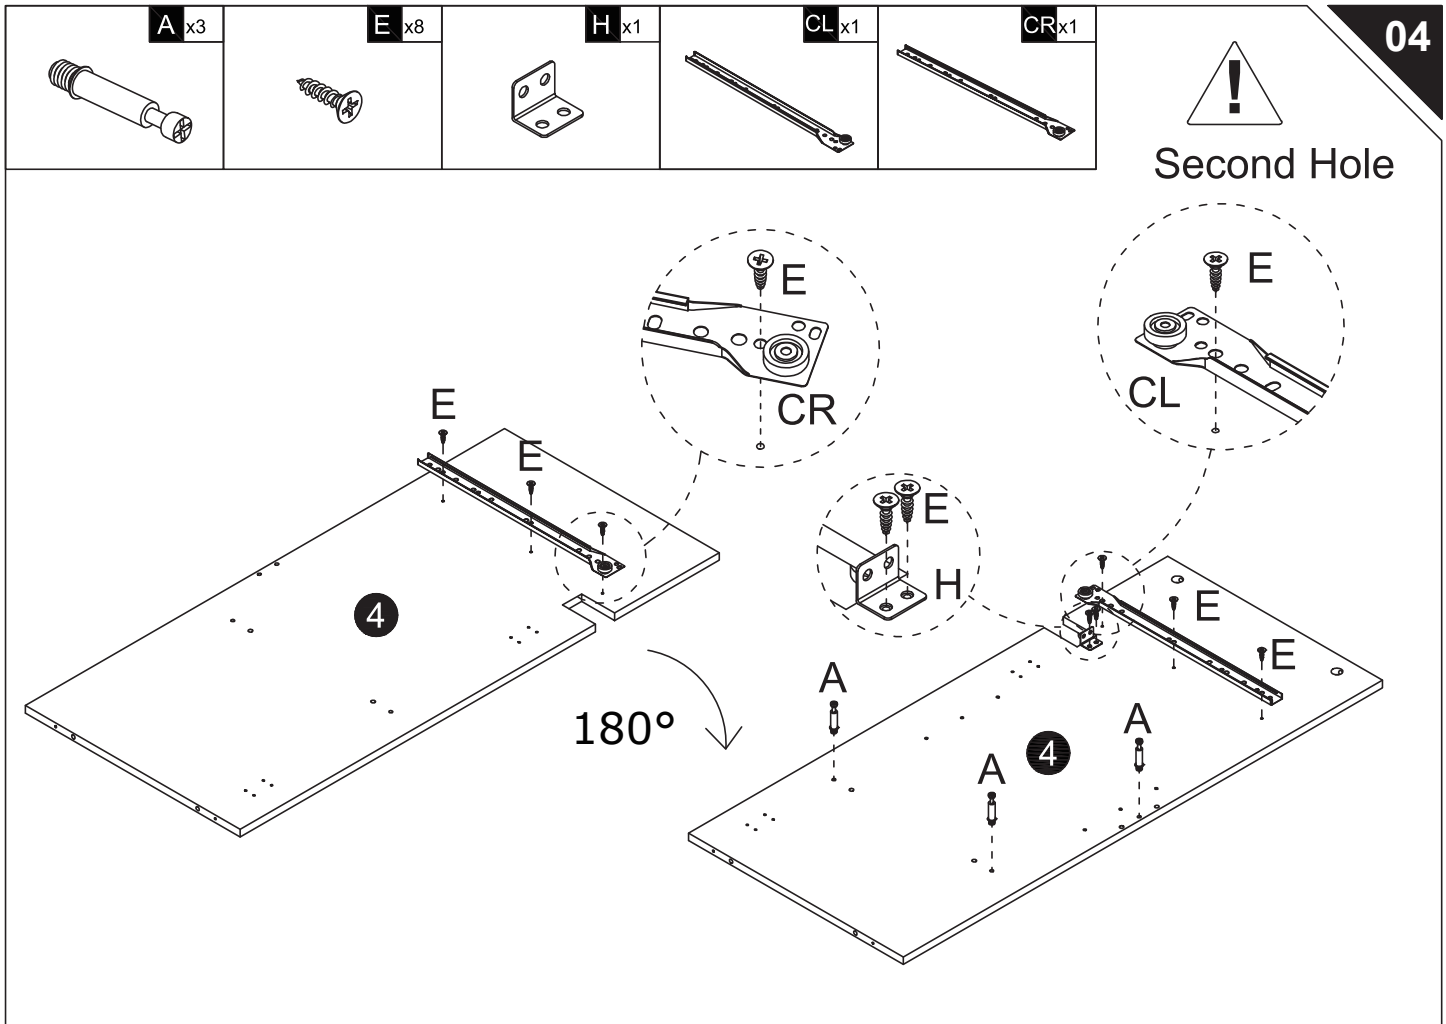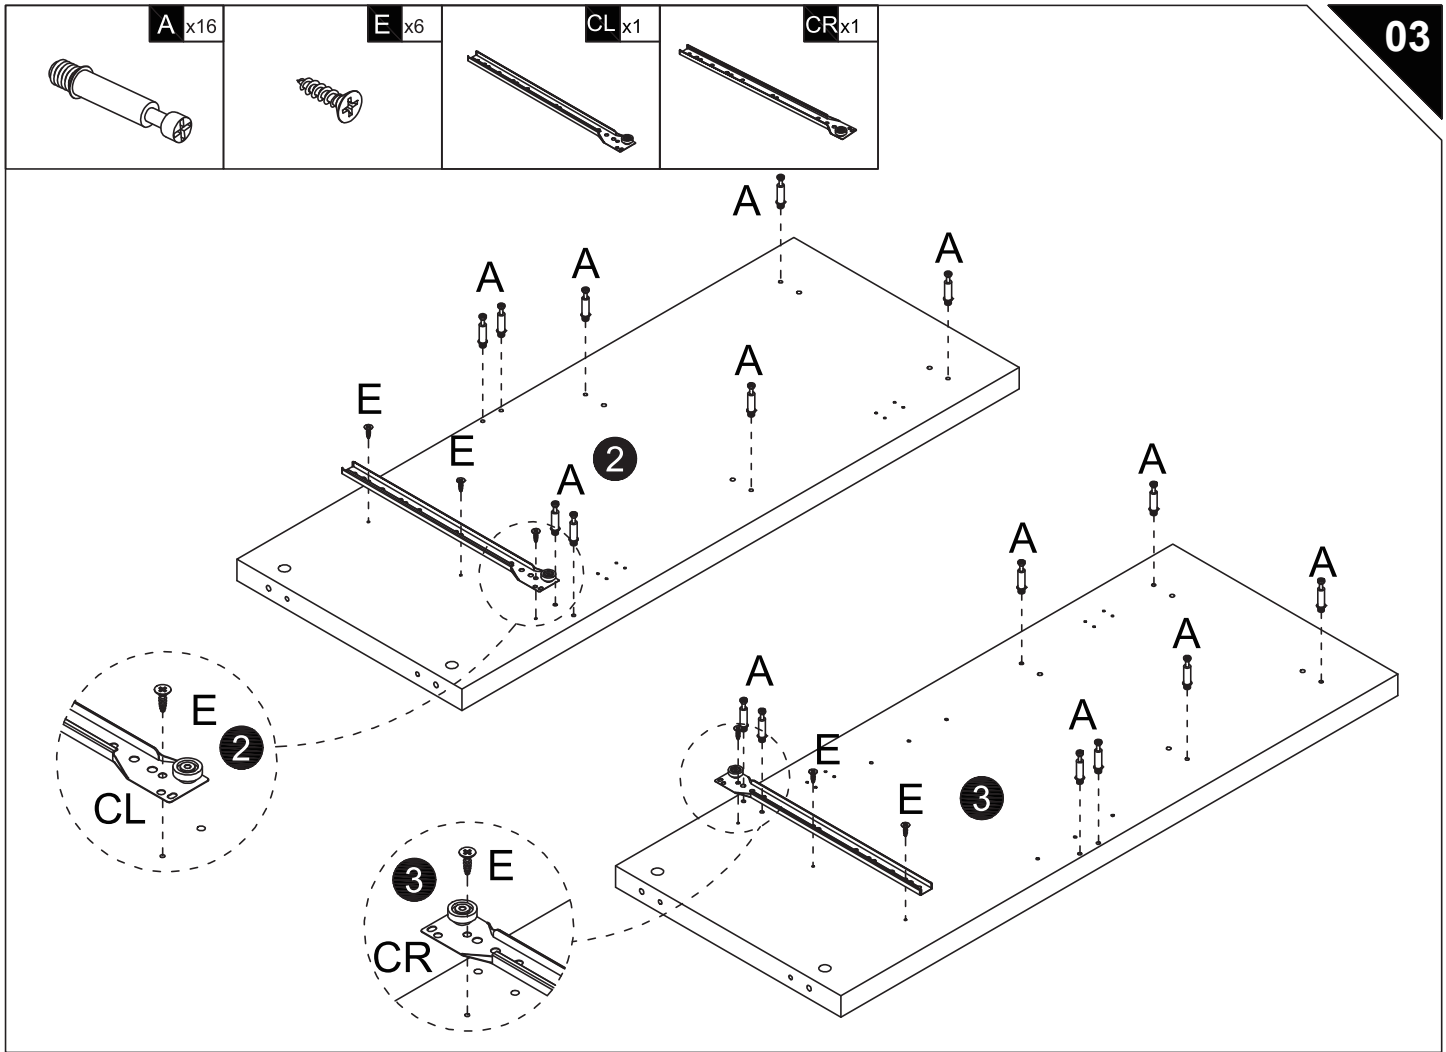


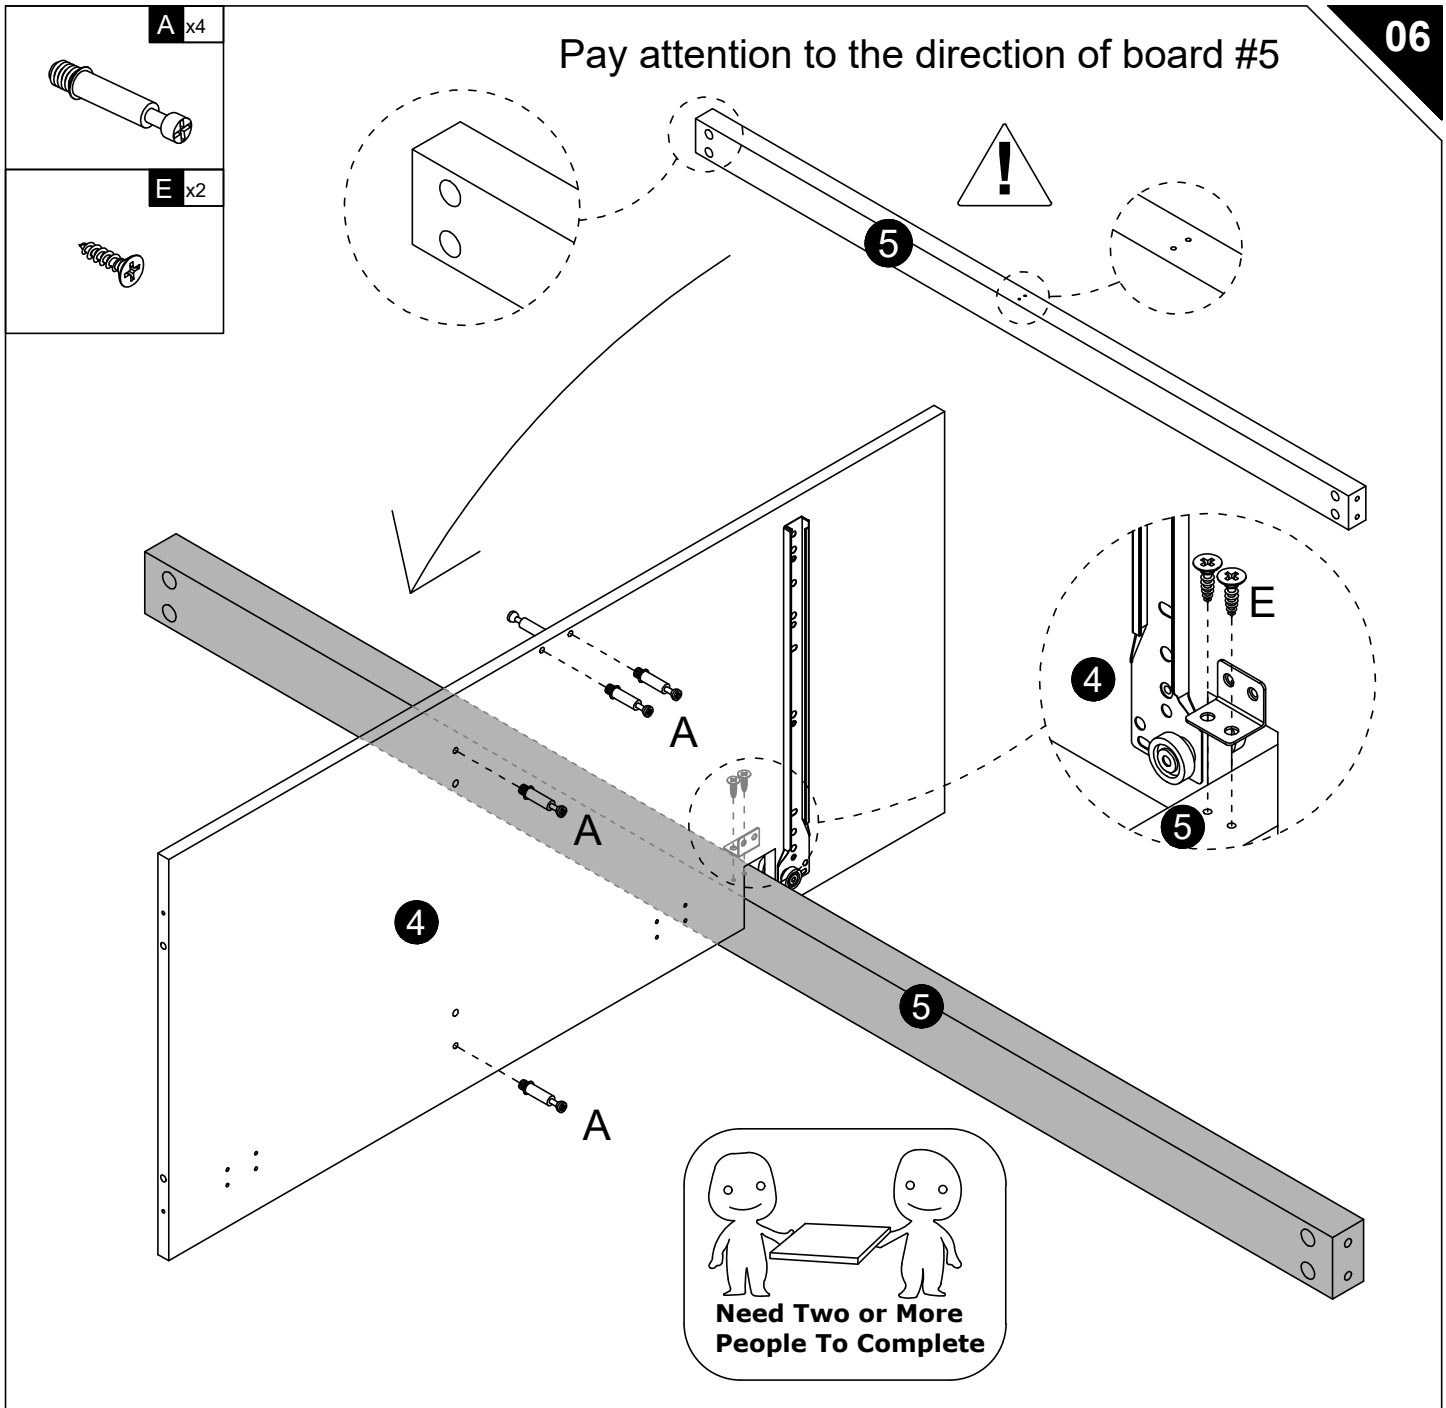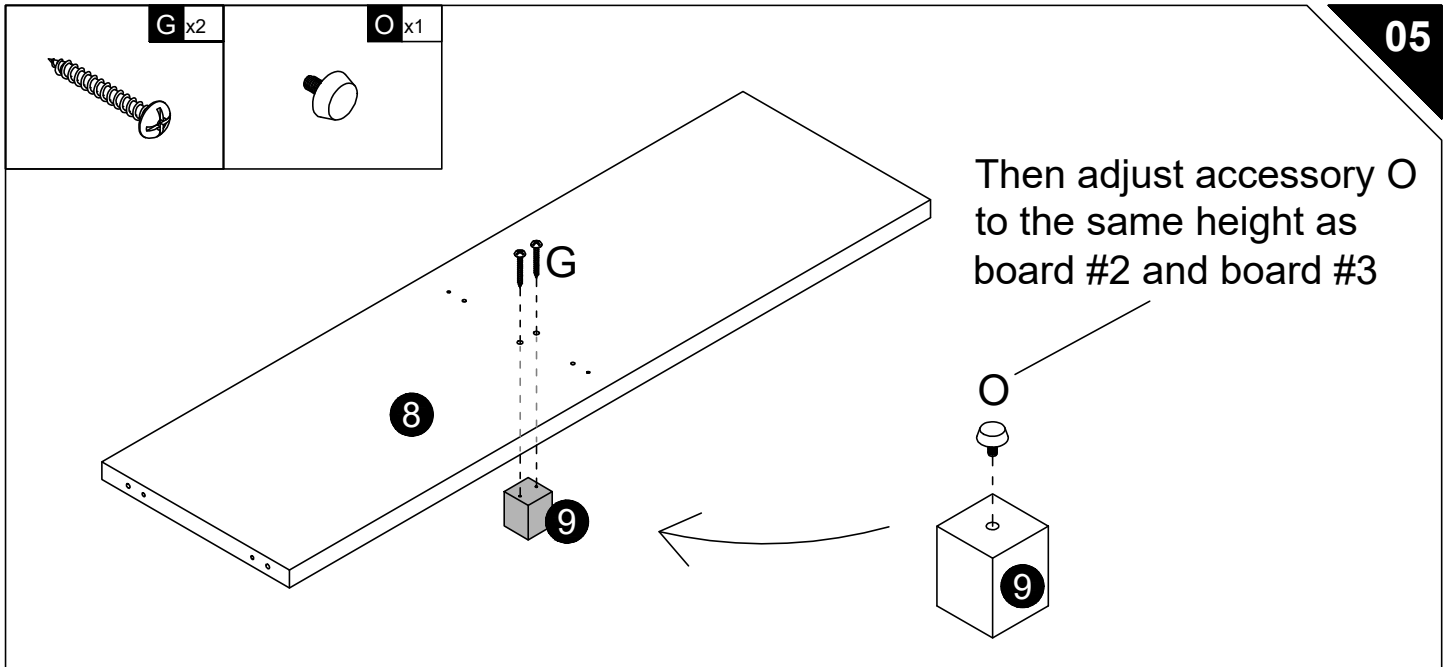

B x4





C x4

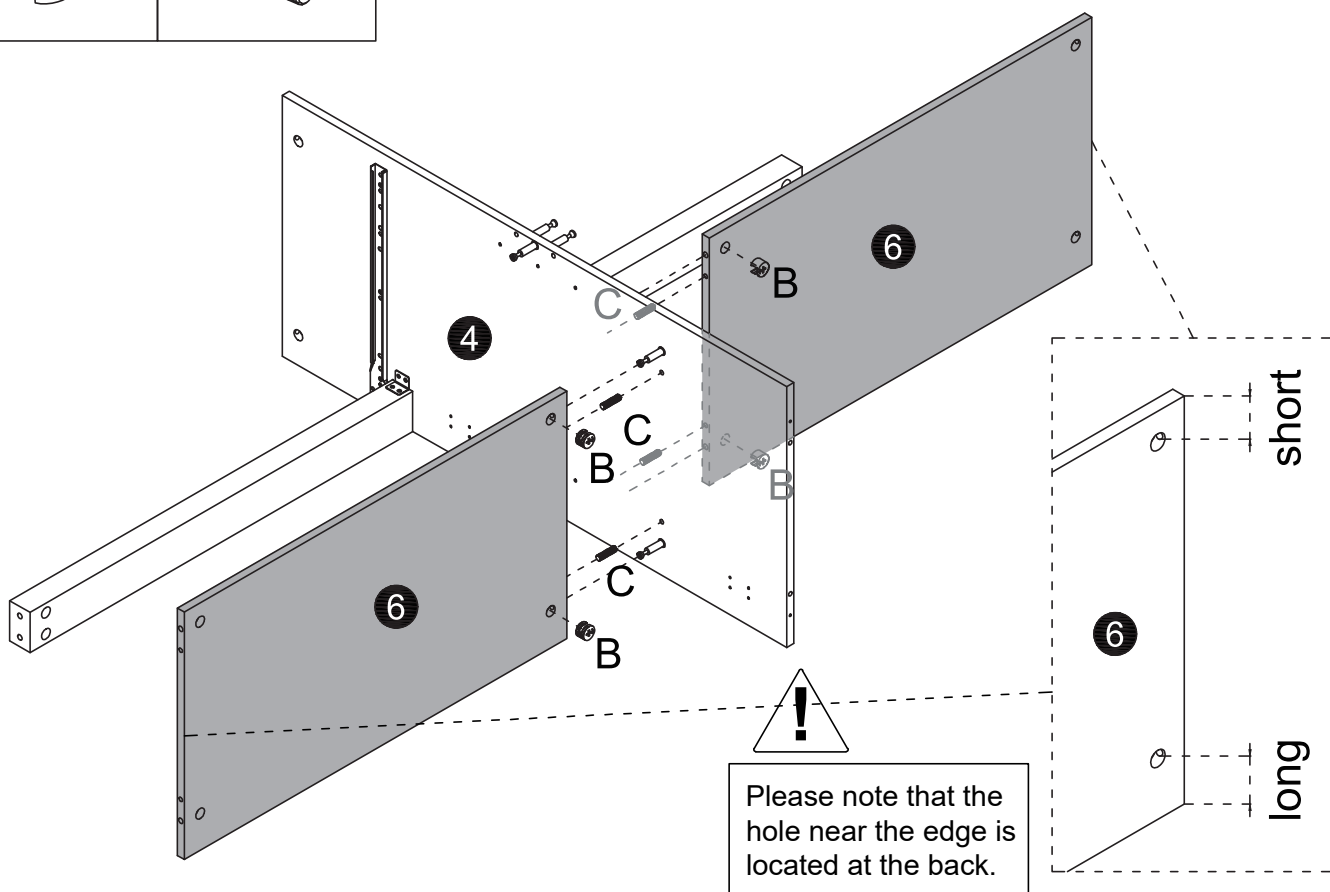

C x2




G x2

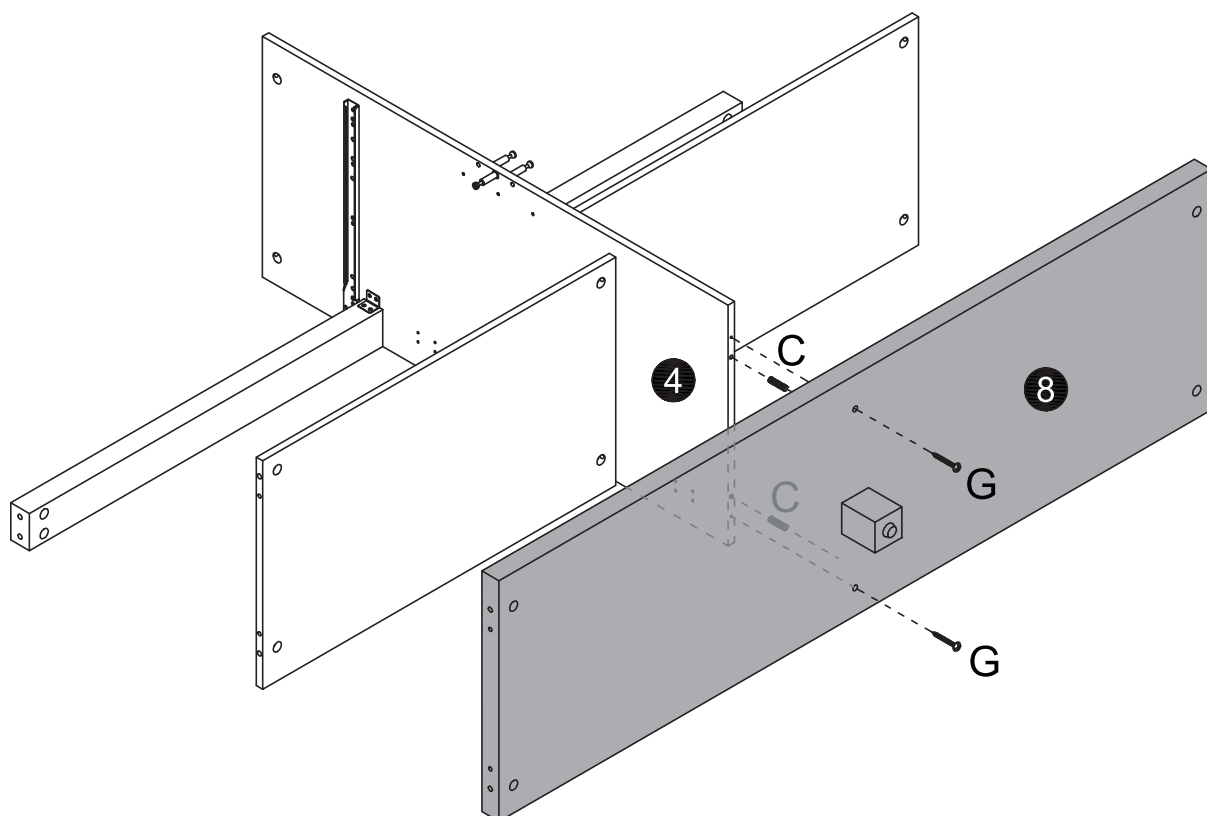

B x9

C x6


09

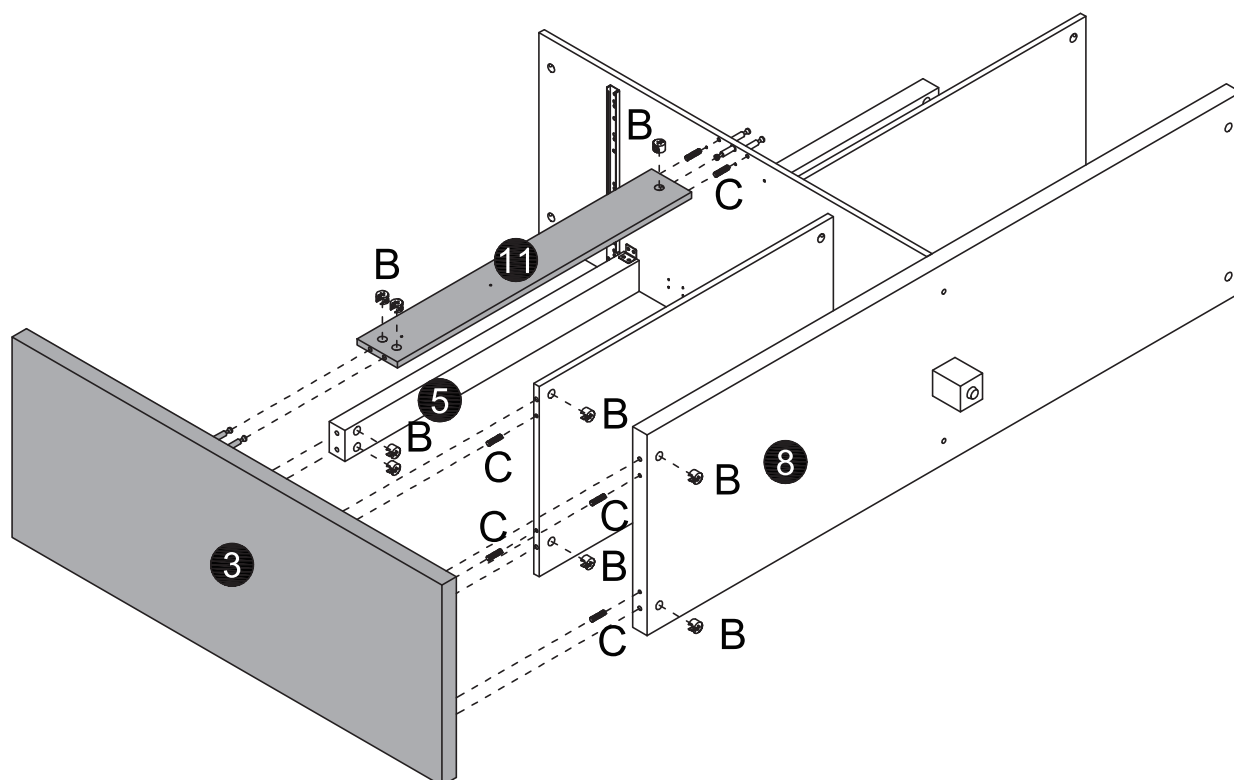


B x10

C x6


10

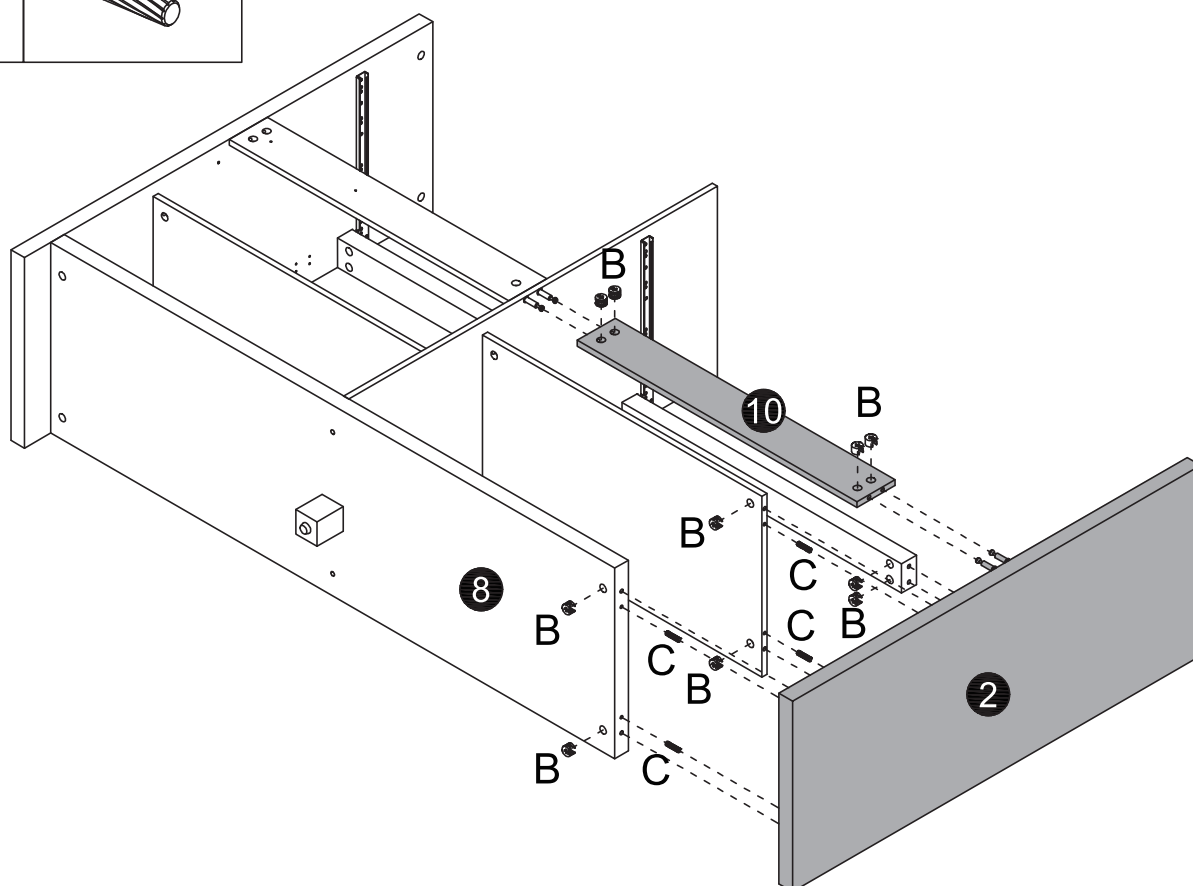

A x6



11

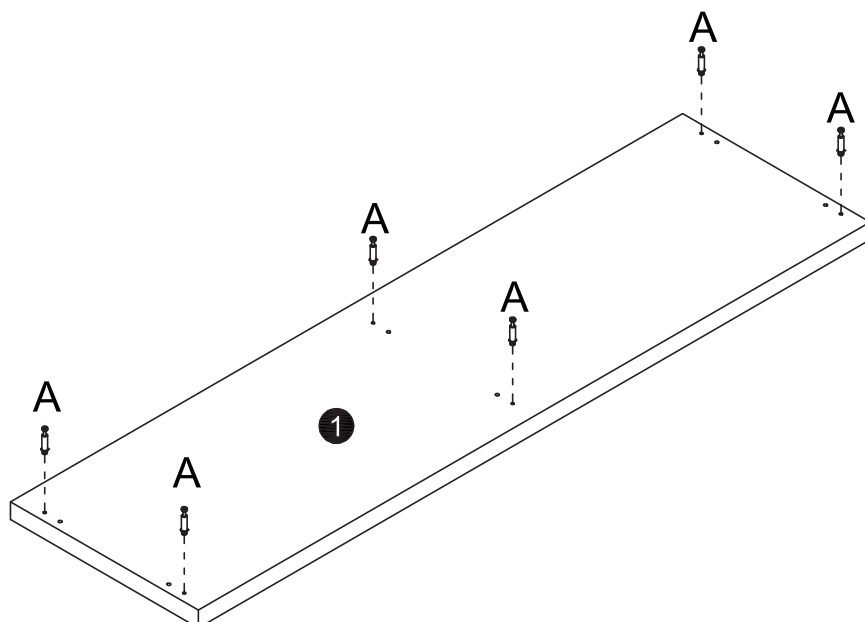


B x6



C x6



12


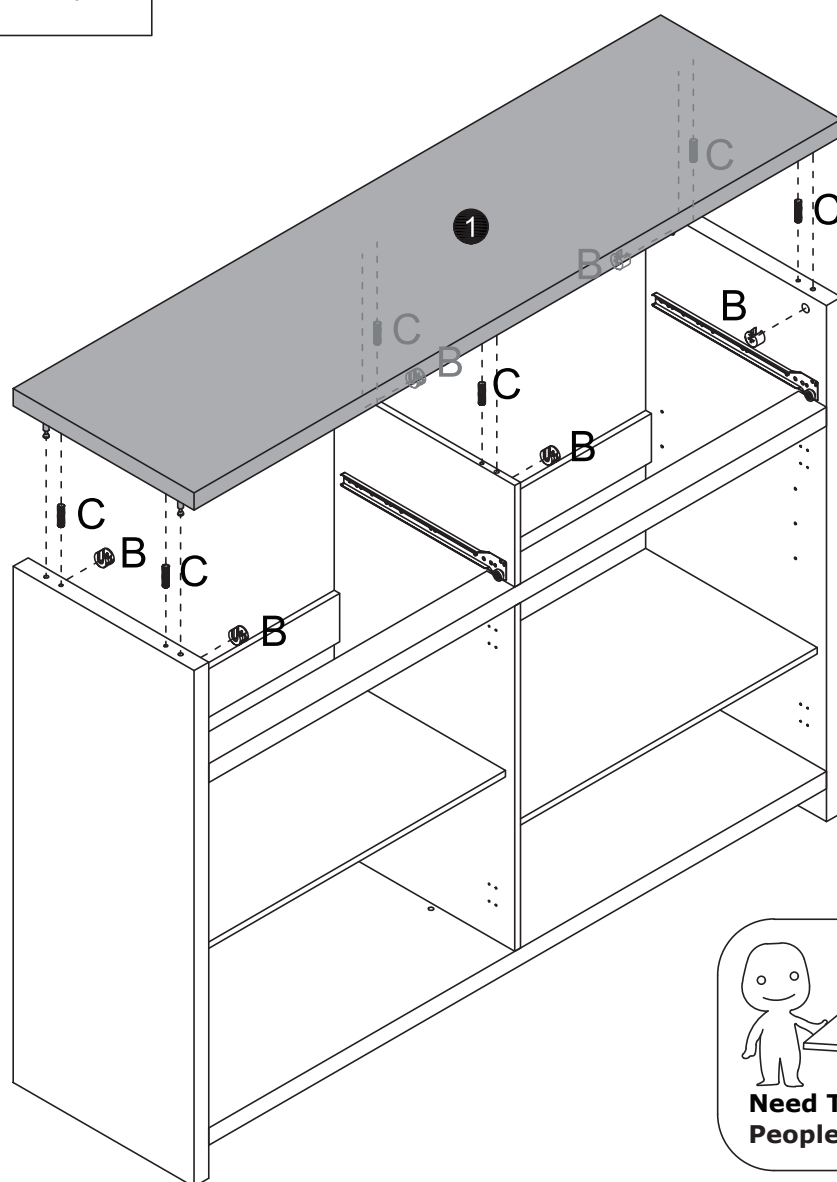


K x40




This is the hole for installing anti tipping straps.

First, fix the two holes in the middle. Then, arrange the rest neatly along the line formed by those two holes and finally lock them. That is to say, these two holes serve as positioning holes and should be fixed first.

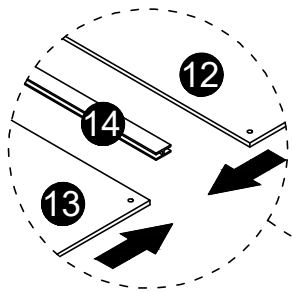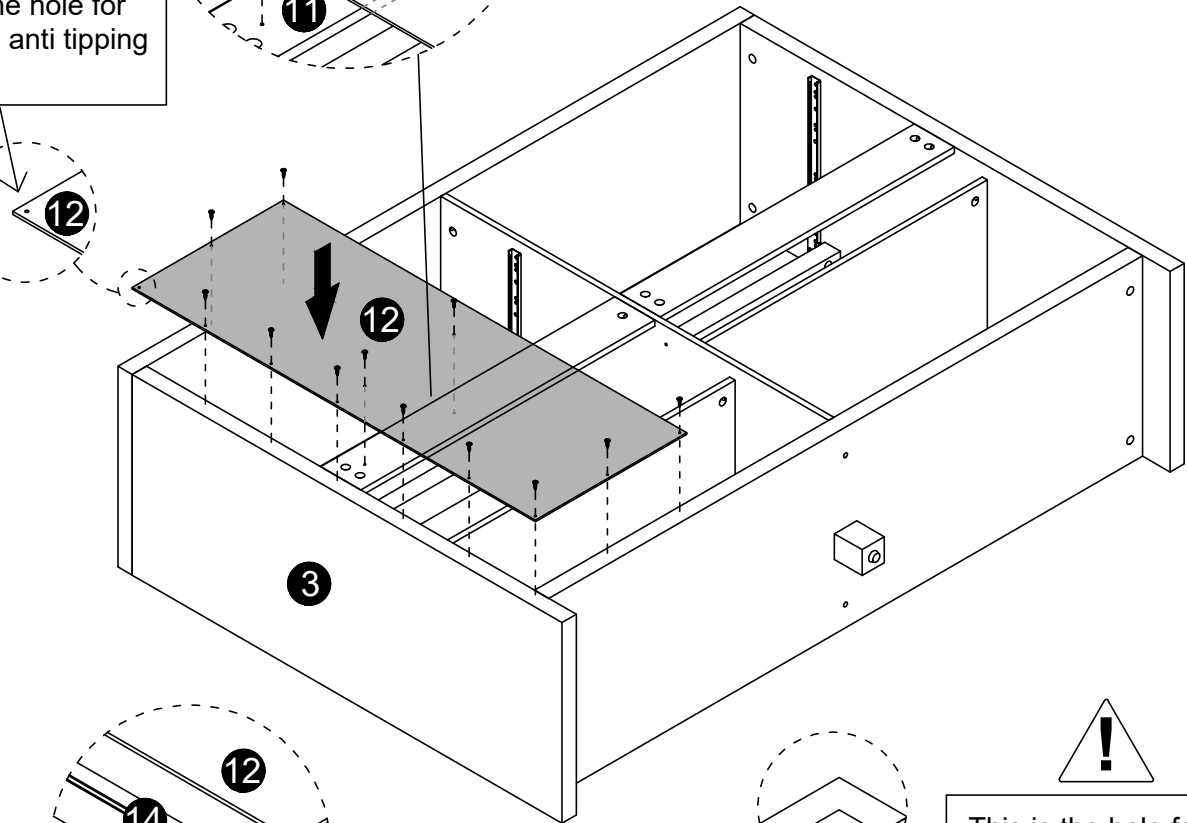


This is the hole for installing anti tipping straps.

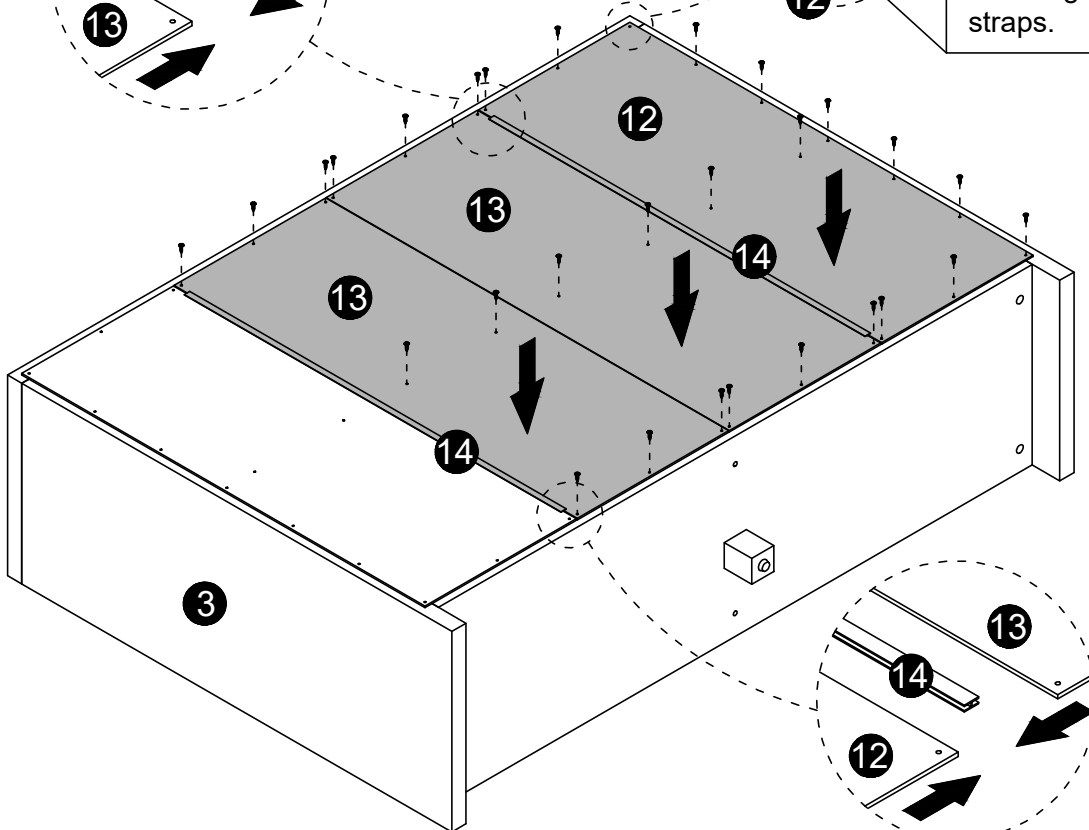

I x4



L x2

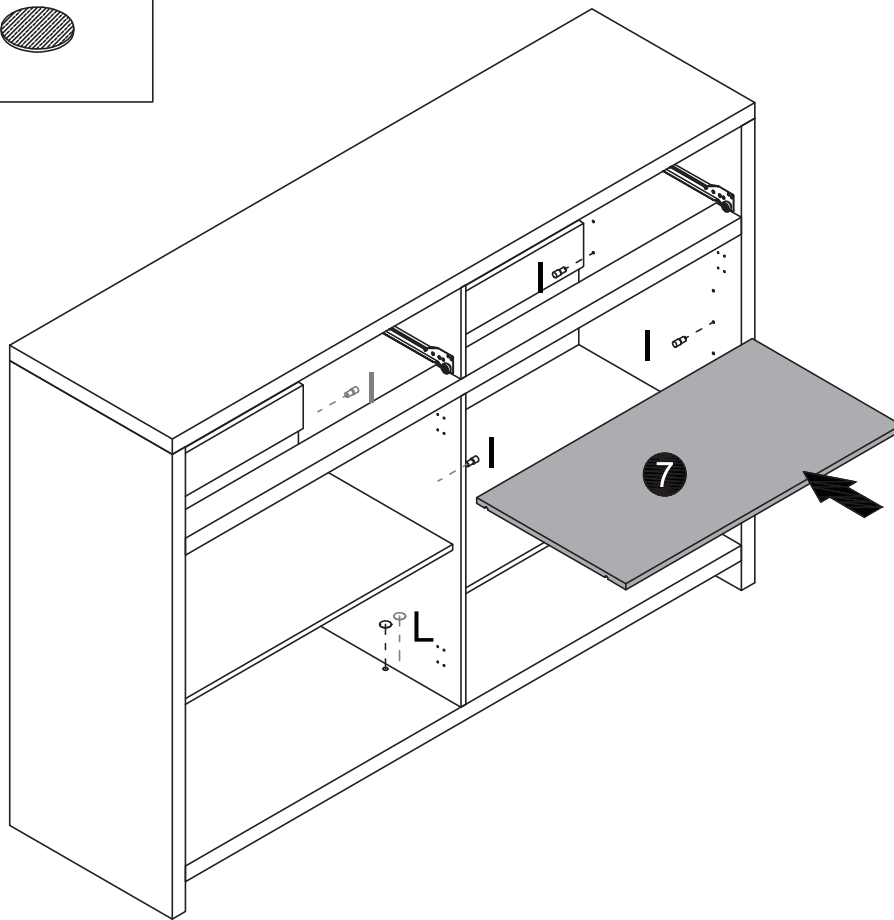

E x24

J x8


F x4

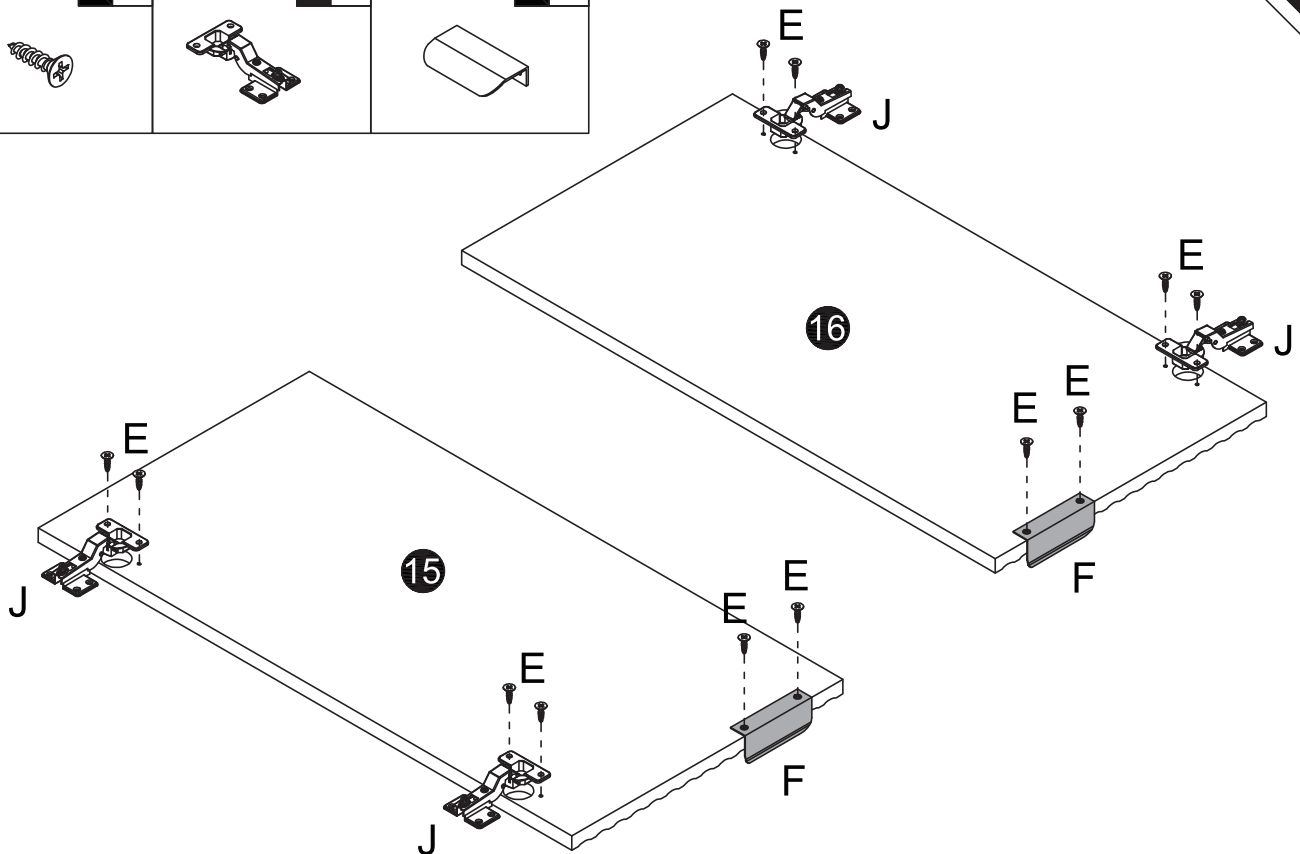

x2


E x16




16

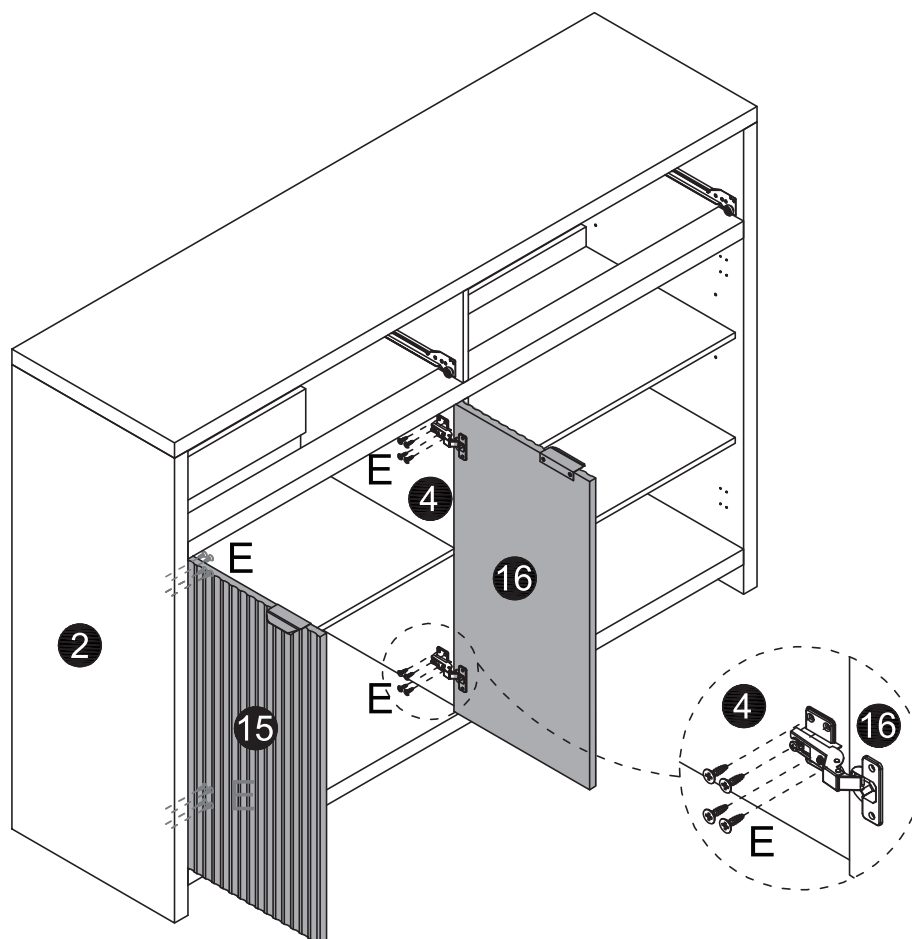

E x16


17

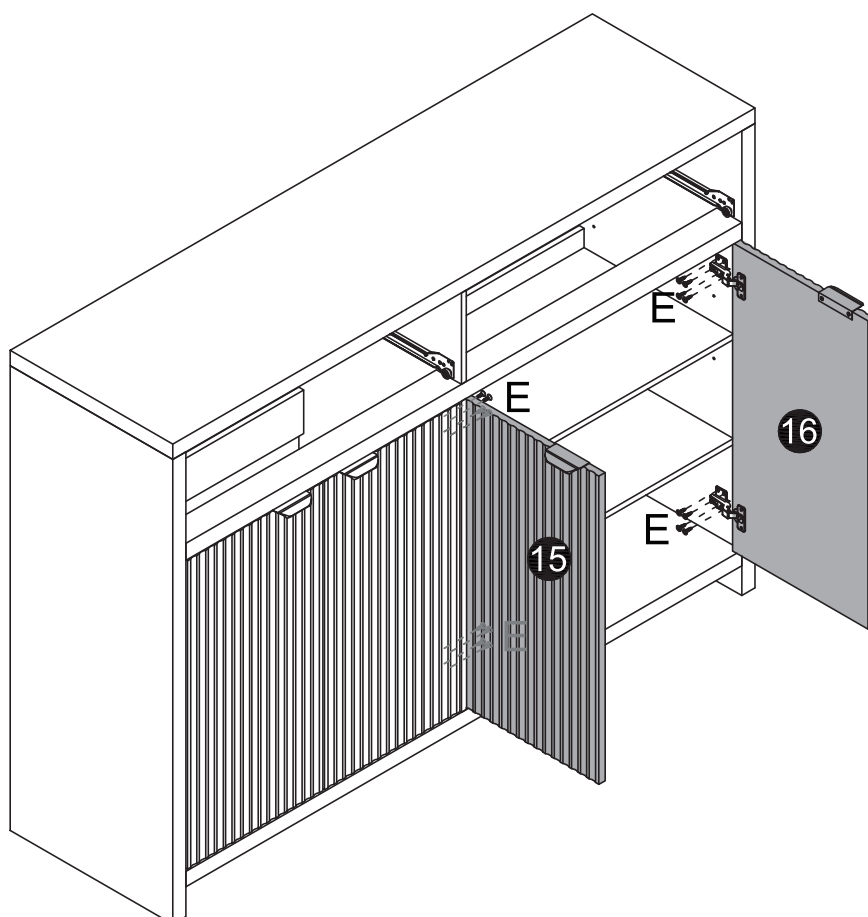

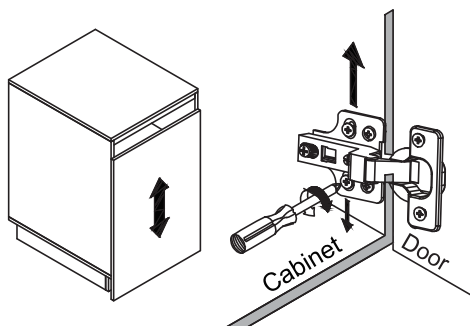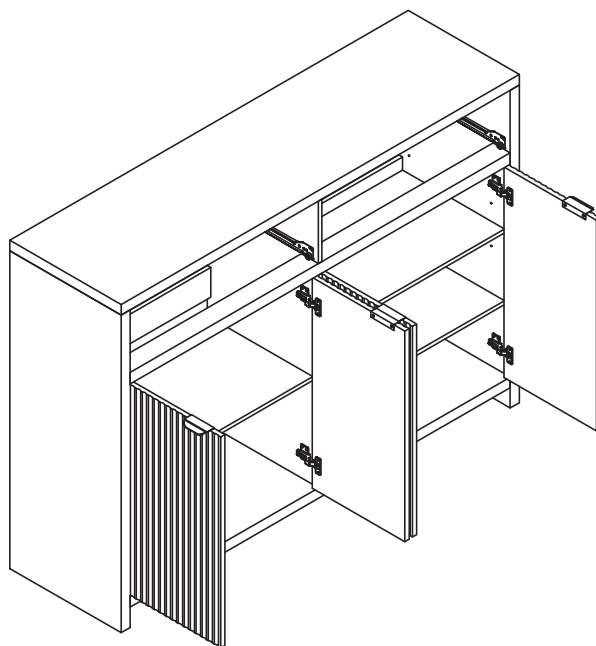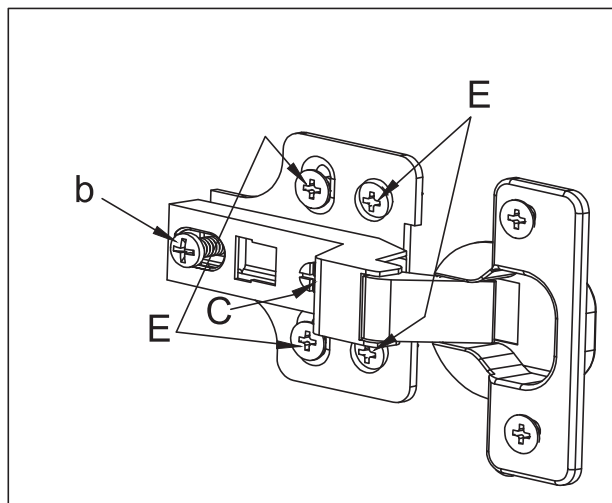


#### To adjust the vertical height.

Loosen the four screws "E" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

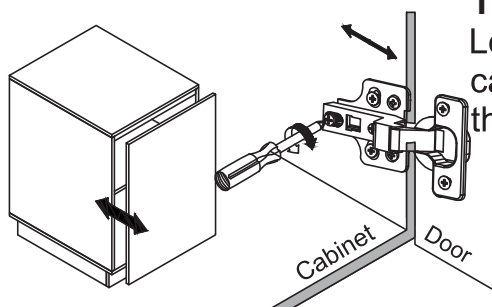



#### To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

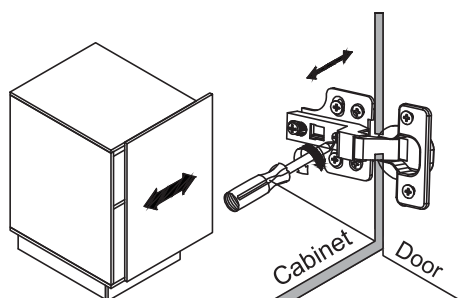


#### To adjust side ways.


Turning the screw "c" on BOTH hinges on each door.

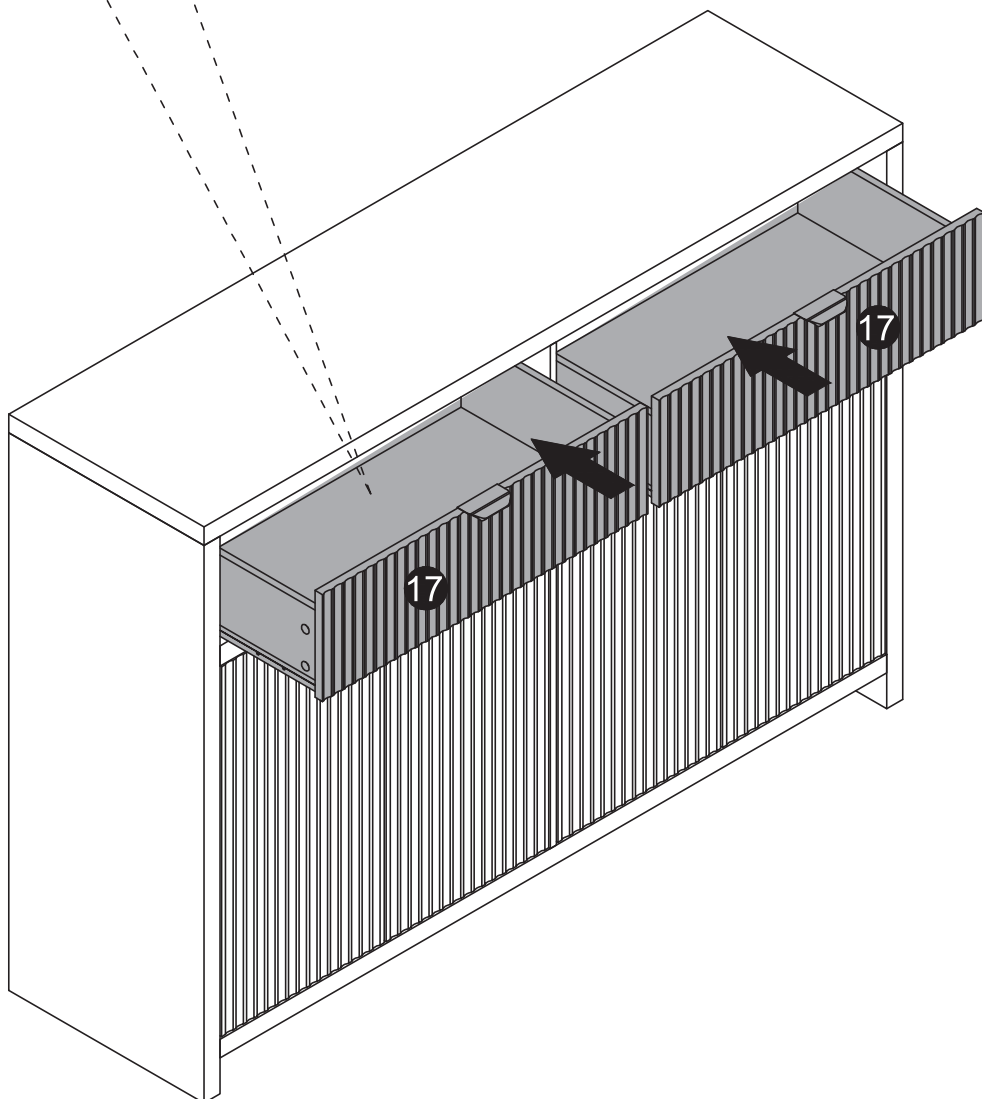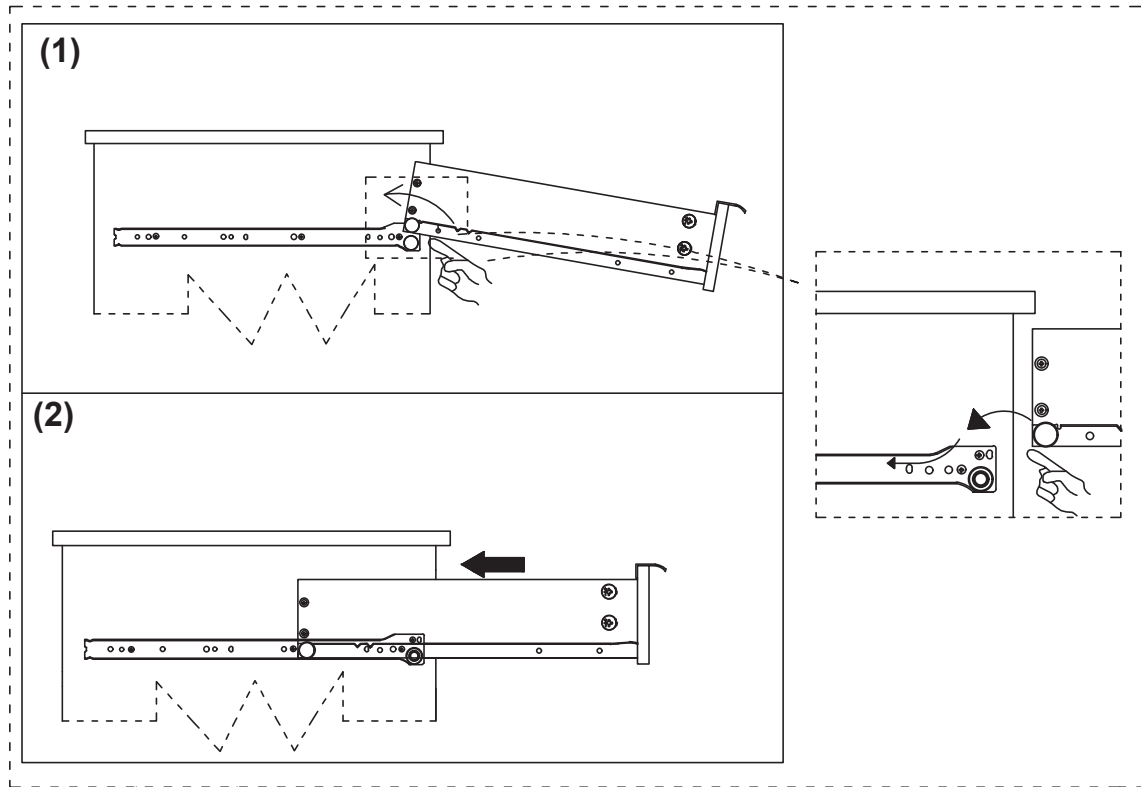

D x2



M x2




N x2




N-1

N-2

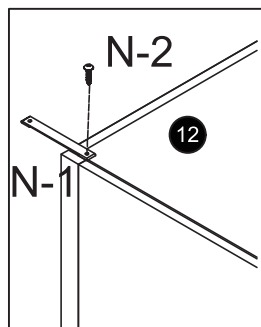


First fix the anti-rewind screw in the reserved hole of the product.

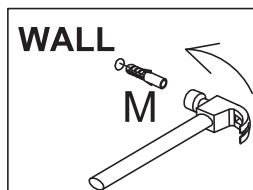


Then, put the expansion bolt into the hole

(4)x2

WALL

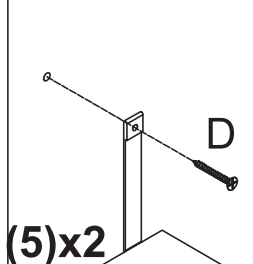


Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

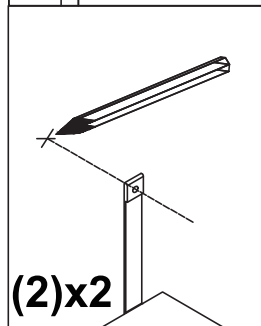

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

(2)x2

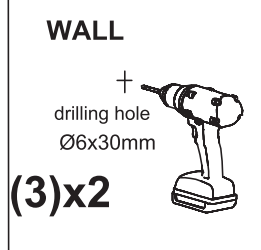

Then use a tape drill to make holes in the wall that are suitable for the product screws.

(3)x2

