



Outer walls of the rack (prior to assembly, mount the screws and gently push in wooden studs)

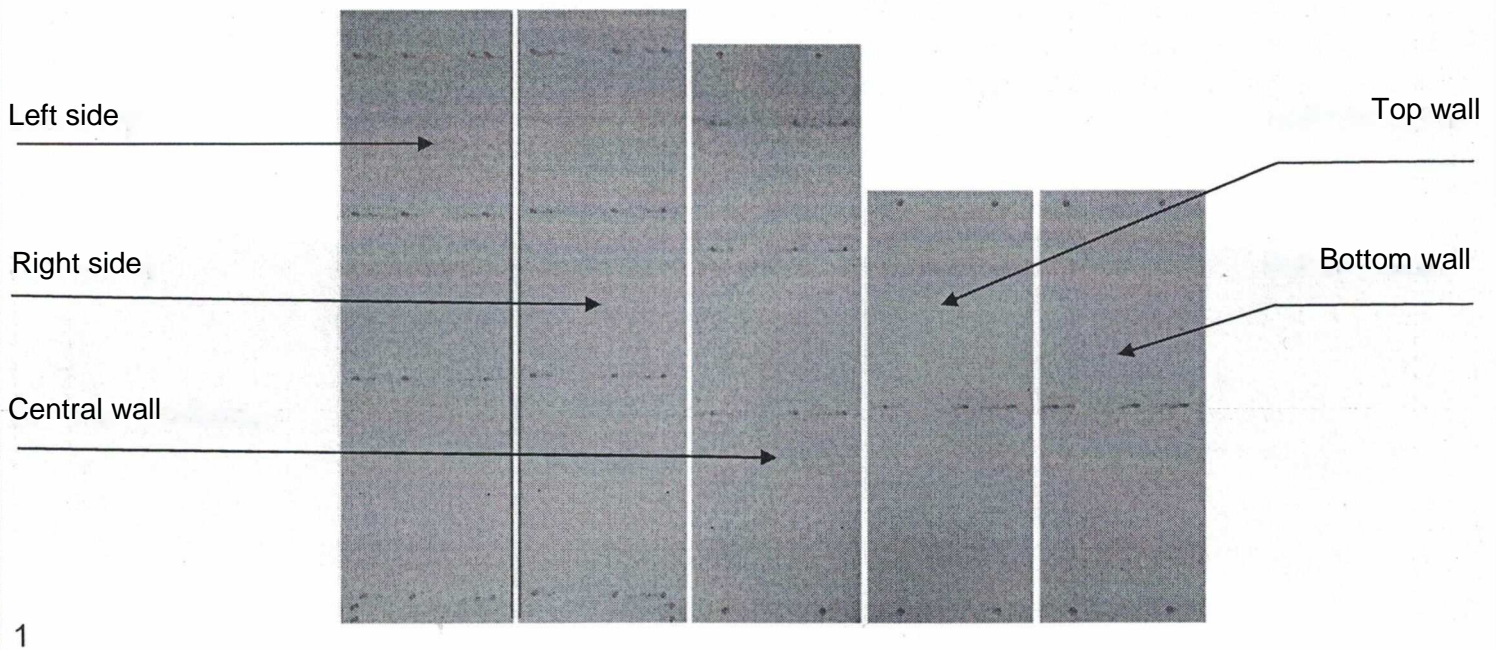


Lay the right side and tamp the bottom and top of the rack, and the shelves onto the previously installed studs. Put screw locks into the openings and turn right until resistance is felt.

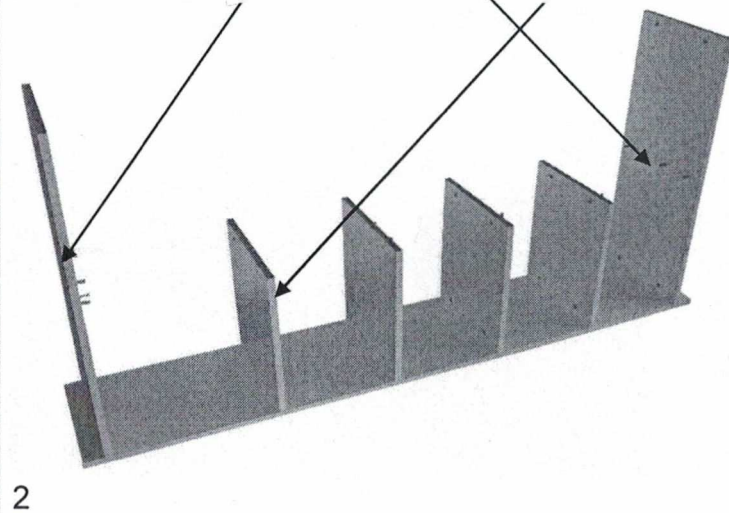


2

Tamp the central wall onto the shelves, press the top and bottom of the rack to the wall. Put screw locks into the central wall openings and turn right until resistance is felt.

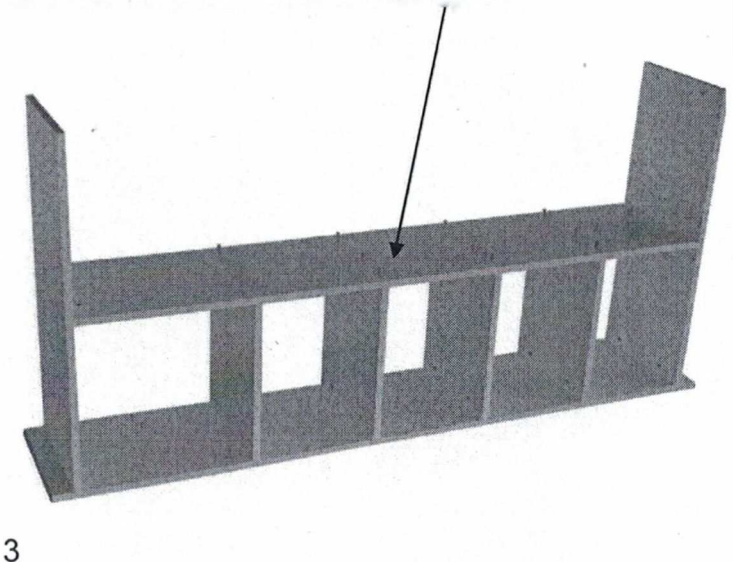


3

Tamp shelves onto the central wall. Mount a masking strip to the bottom wall. Mount the following to the top wall: top semi-round strip.

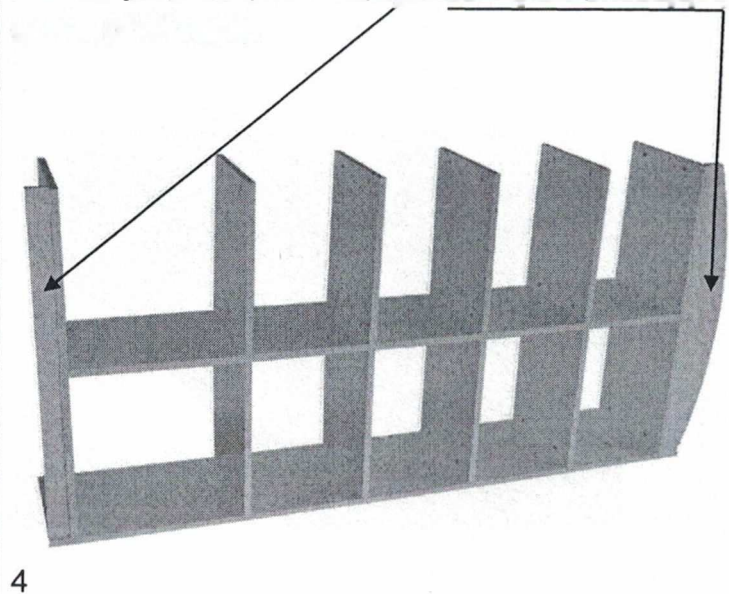

4


Tamp the left side onto the bottom strip, bottom wall, shelves, top wall and the semi-round top strip and tighten with eccentric screw locks.

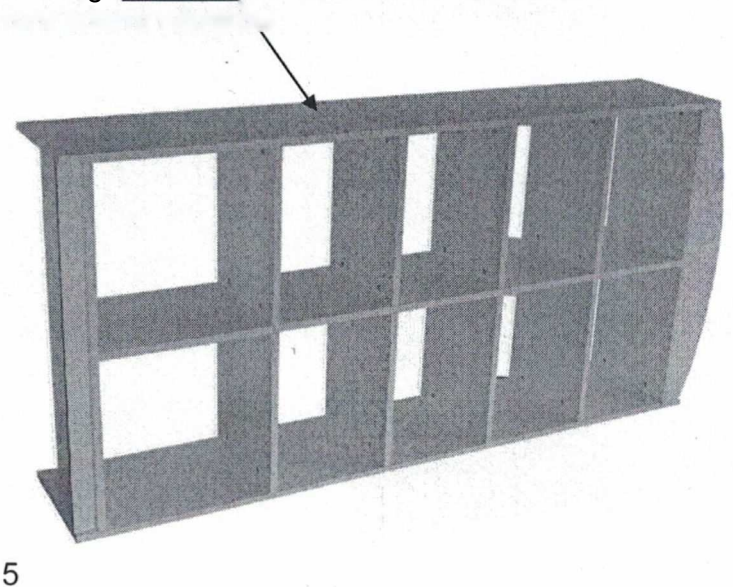

5




Turn the rack, align and nail a thin fibreboard to the upper half of the rack. Remember to have the non-varnished fibreboard side on the outside of the rack.

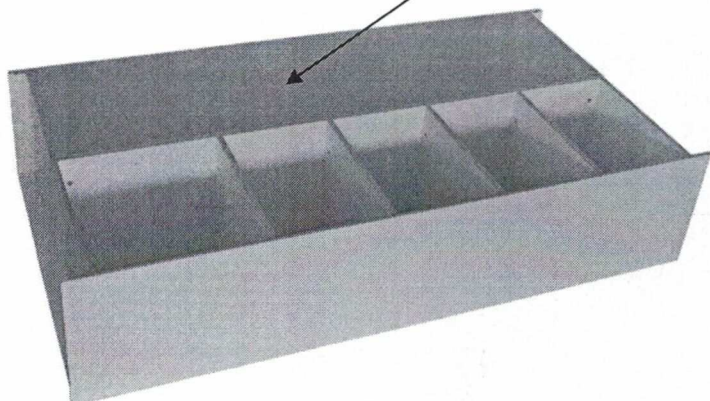


6

Align and nail the second half of the fibreboard.

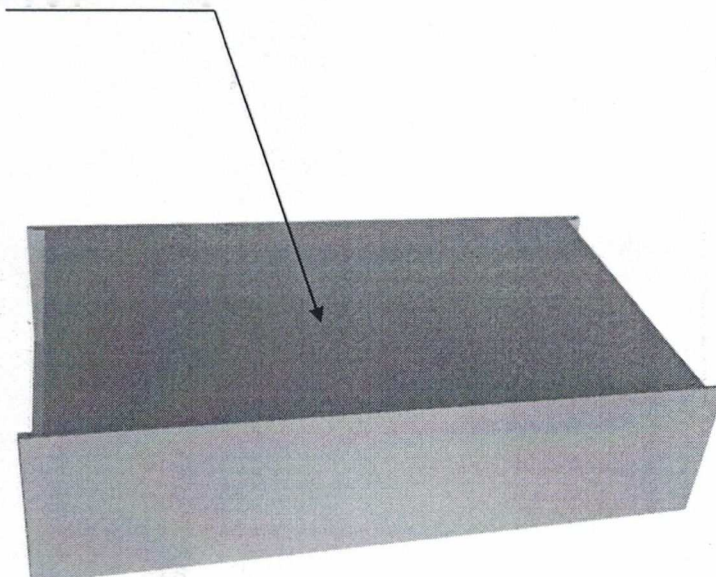

7


View of a correctly assembled rack.

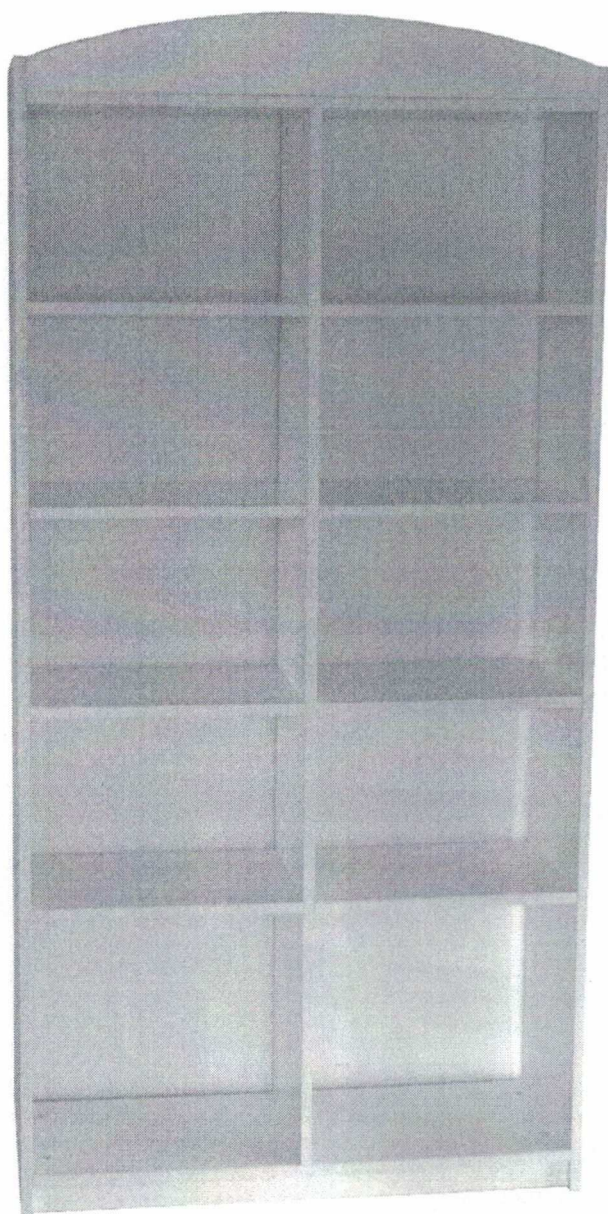

8


Fit the hinges onto the doors and tighten, and next, using the existing openings, tighten the doors to the side of the cabinet.

Screw the handles to the door using existing openings (applies only to the variant with doors).

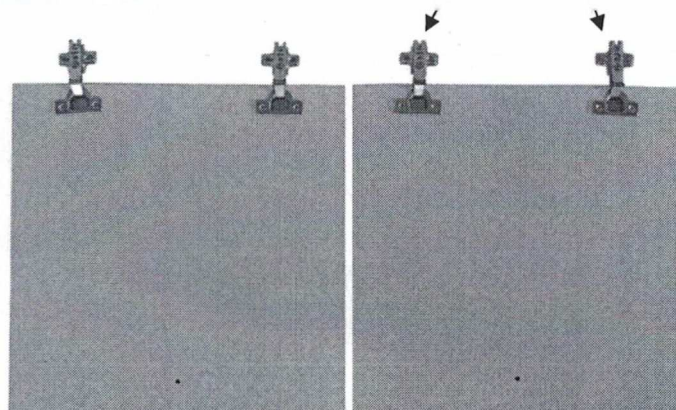

9

A ready rack should be fixed to the wall safely with an angle bar.

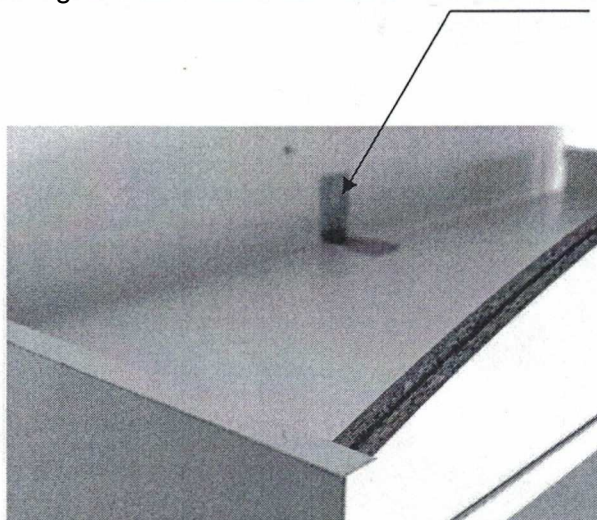

10